

STEP 3

Set the arbor upright. (Note: A step ladder may be needed for this step.) Take the rafters & put on top of the arbor headers. Make sure the rafters are on top of the X and beside the lines. (See photo 5.) Now put the 2½" screws into the predrilled holes in the rafters & fasten using a screw gun & square drive bit. (See photos 6 & 7.) (Note: 3' arbors have 5 rafters and 4' arbors have 6 rafters.)

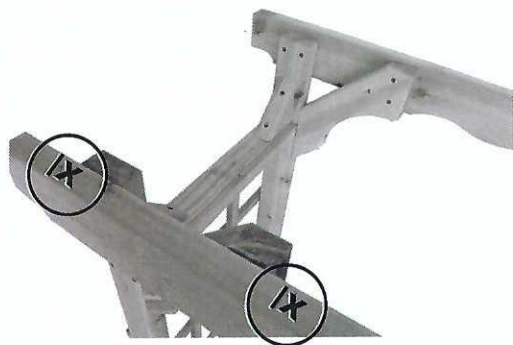


photo 5

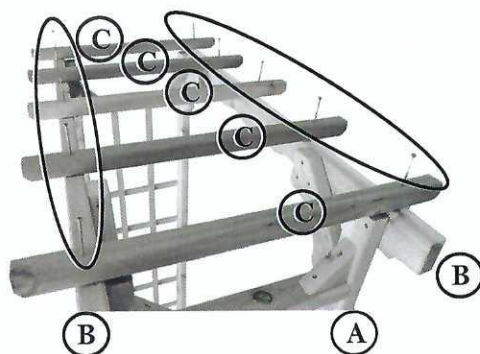


photo 6

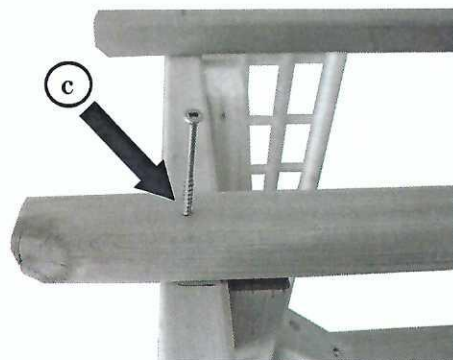


photo 7

STEP 4

Take the arbor to your desired location & pound the ground stakes in the ground using the hammer until about 6" is sticking out of the ground. (See photo 8.) Now move the arbor against the stake & fasten with the 2" lag screws using a 7/16" socket. (See photos 9 & 10.)

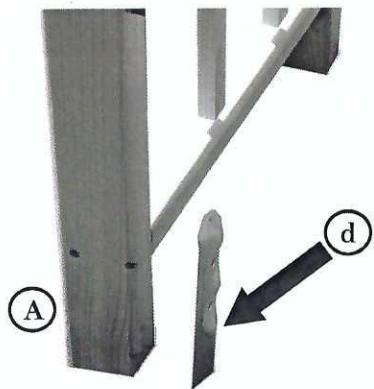


photo 8

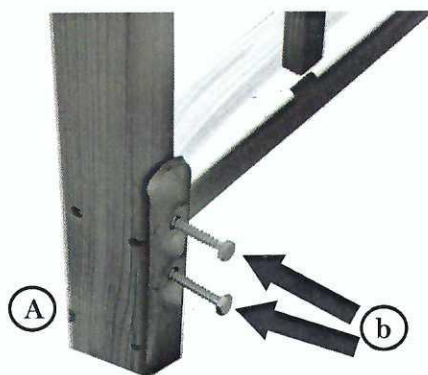


photo 9



photo 10