


Shoe Cabinet

Assembly Instructions - Please keep for future reference

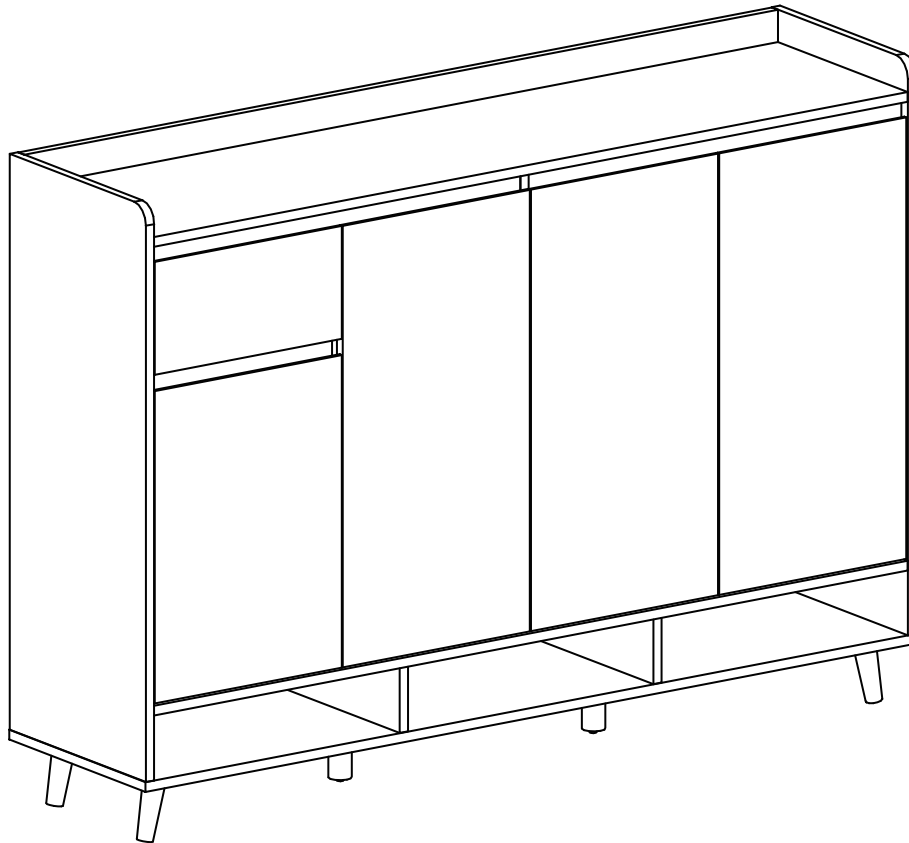

Dimensions

Width-55.12inch

Depth-13.78inch

Height-39.37inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

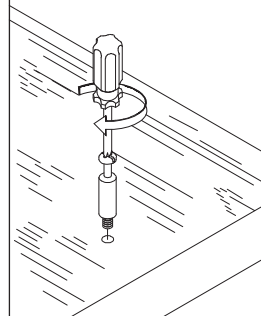

Step 2

Push the male camlock into the entry hole.

2

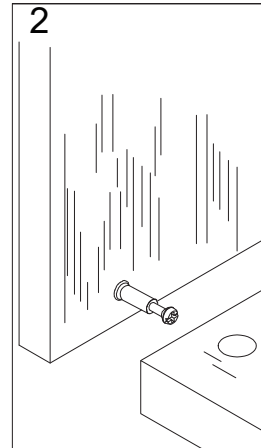


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

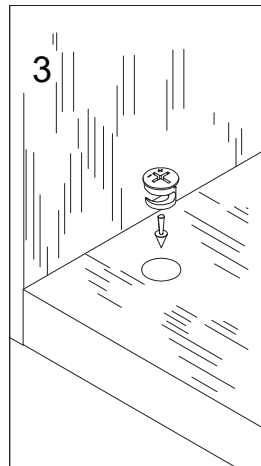


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

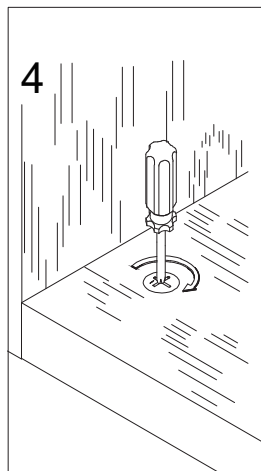

















Assembly Instructions

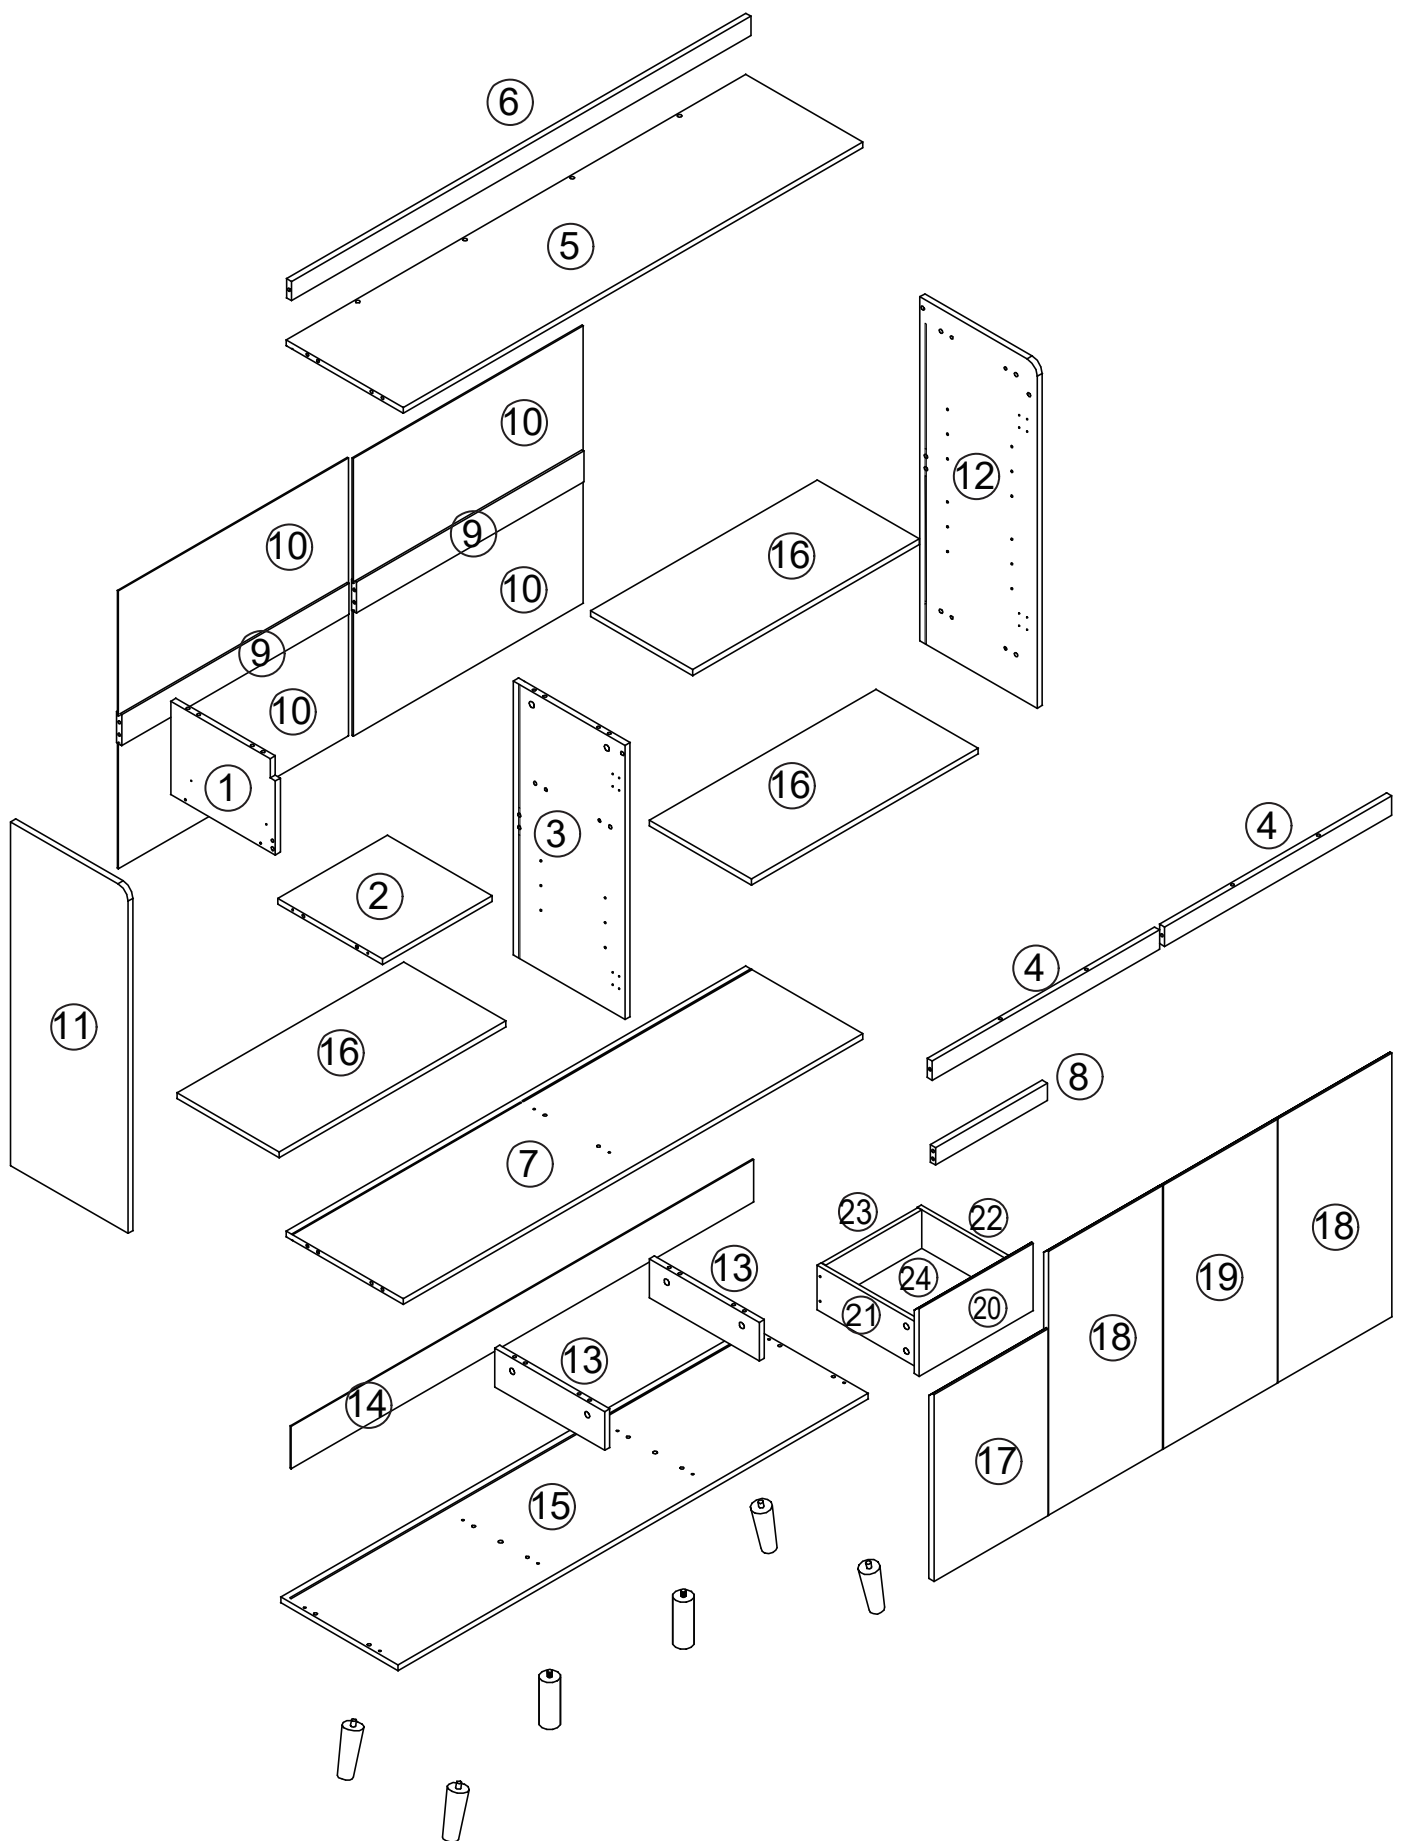

Assembly Instructions

There are 2 boxes of this product










BOX-1

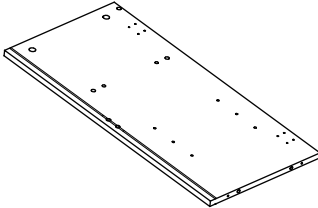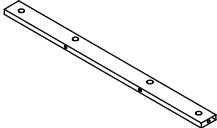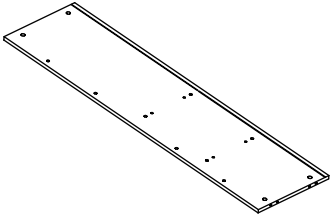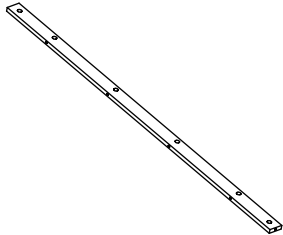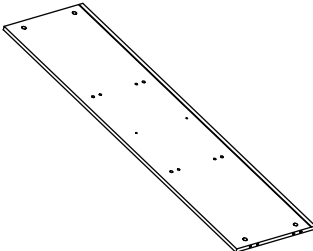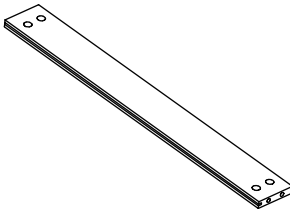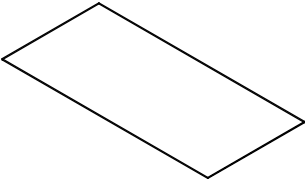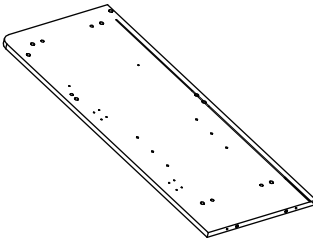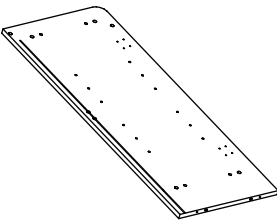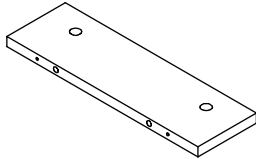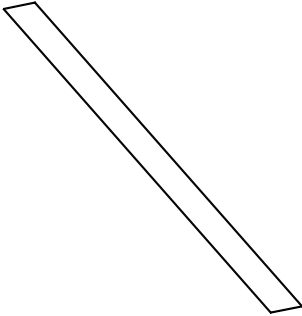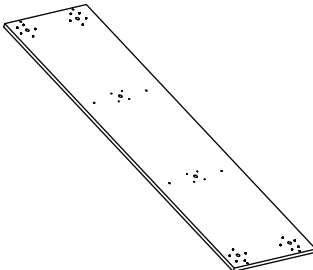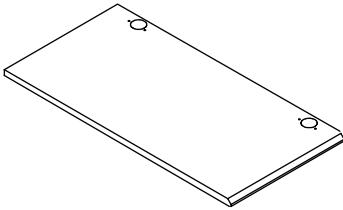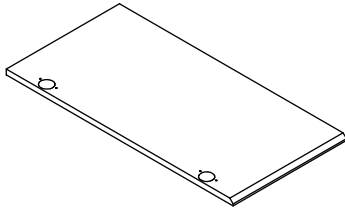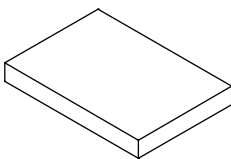 708x333x15mm	 677.5x50x15mm	 1370x349x15mm	 1370x50x15mm
③ x 1	④ x 2	⑤ x 1	⑥ x 1
 1370x349x15mm	 333.5x45x15mm	 677.5x80x15mm	 686.5x323x3mm
⑦ x 1	⑧ x 1	⑨ x 2	⑩ x 4
 888x350x15mm	 888x350x15mm	 100x328x15mm	 1379x109x3mm
⑪ x 1	⑫ x 1	⑬ x 2	⑭ x 1
 1402x350x15mm	 681x340x15mm	 681x340x15mm	
⑮ x 1	⑱ x 2	⑲ x 1	Hardware Pack X1

Assembly Instructions

There are 2 boxes of this product












BOX-2

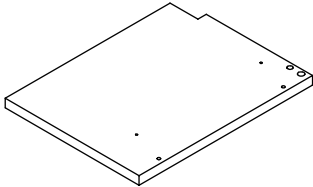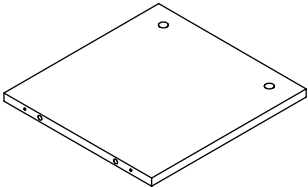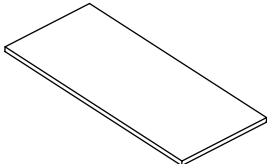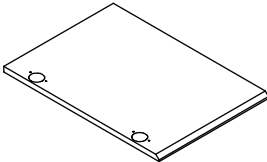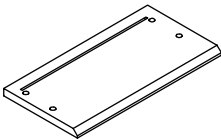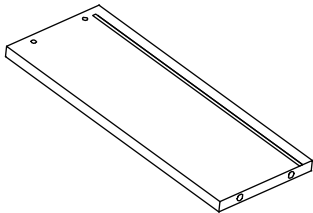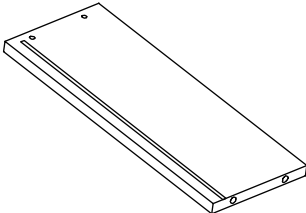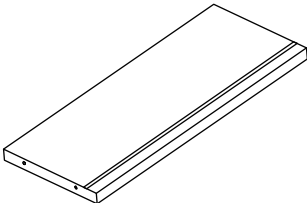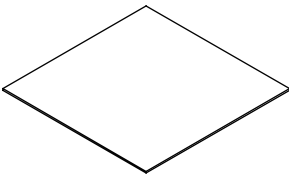 241x312x15mm ① x 1	 327x312x15mm ② x 1	 676x305x15mm ①⑥ x 3	 482x340x15mm ①⑦ x 1
 339x174x15mm ②① x 1	 300x115x15mm ②② x 1	 300x115x15mm ②③ x 1	 286.5x115x15mm ②④ x 1
 295.5x295.5x3mm ②⑤ x 1			


Components-Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

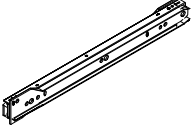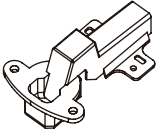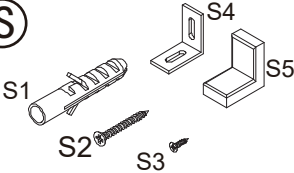(A)  Cam Bolt x 46+3	(B)  Cam Lock x 46+3	(C)  8*30mm Dowel x 32+2	(D)  3.5*40mm Screw x 4+1
(E)  5*40mm Screw x 12+1	(F)  300mm Drawer slide x 1	(G) Half Overlay Hinge  Hinge x 4	(H) Full Inset Hinge  Hinge x 4
(J)  Bulkhead Pins x 12+1	(K)  Back panel buckle x 22+2	(L)  3.5*14mm Screw x 84+3	(M)  Iron Sheet x 4
(N)  Mid Iron Sheet x 2	(P)  (35-25)*90mm Foot x 4	(Q)  35*87mm Midfoot x 2	(R)  Adjusting the feet x 2+1
(S)  Anti-dumping x 2	(T)  Screwdriver x 1		



1.

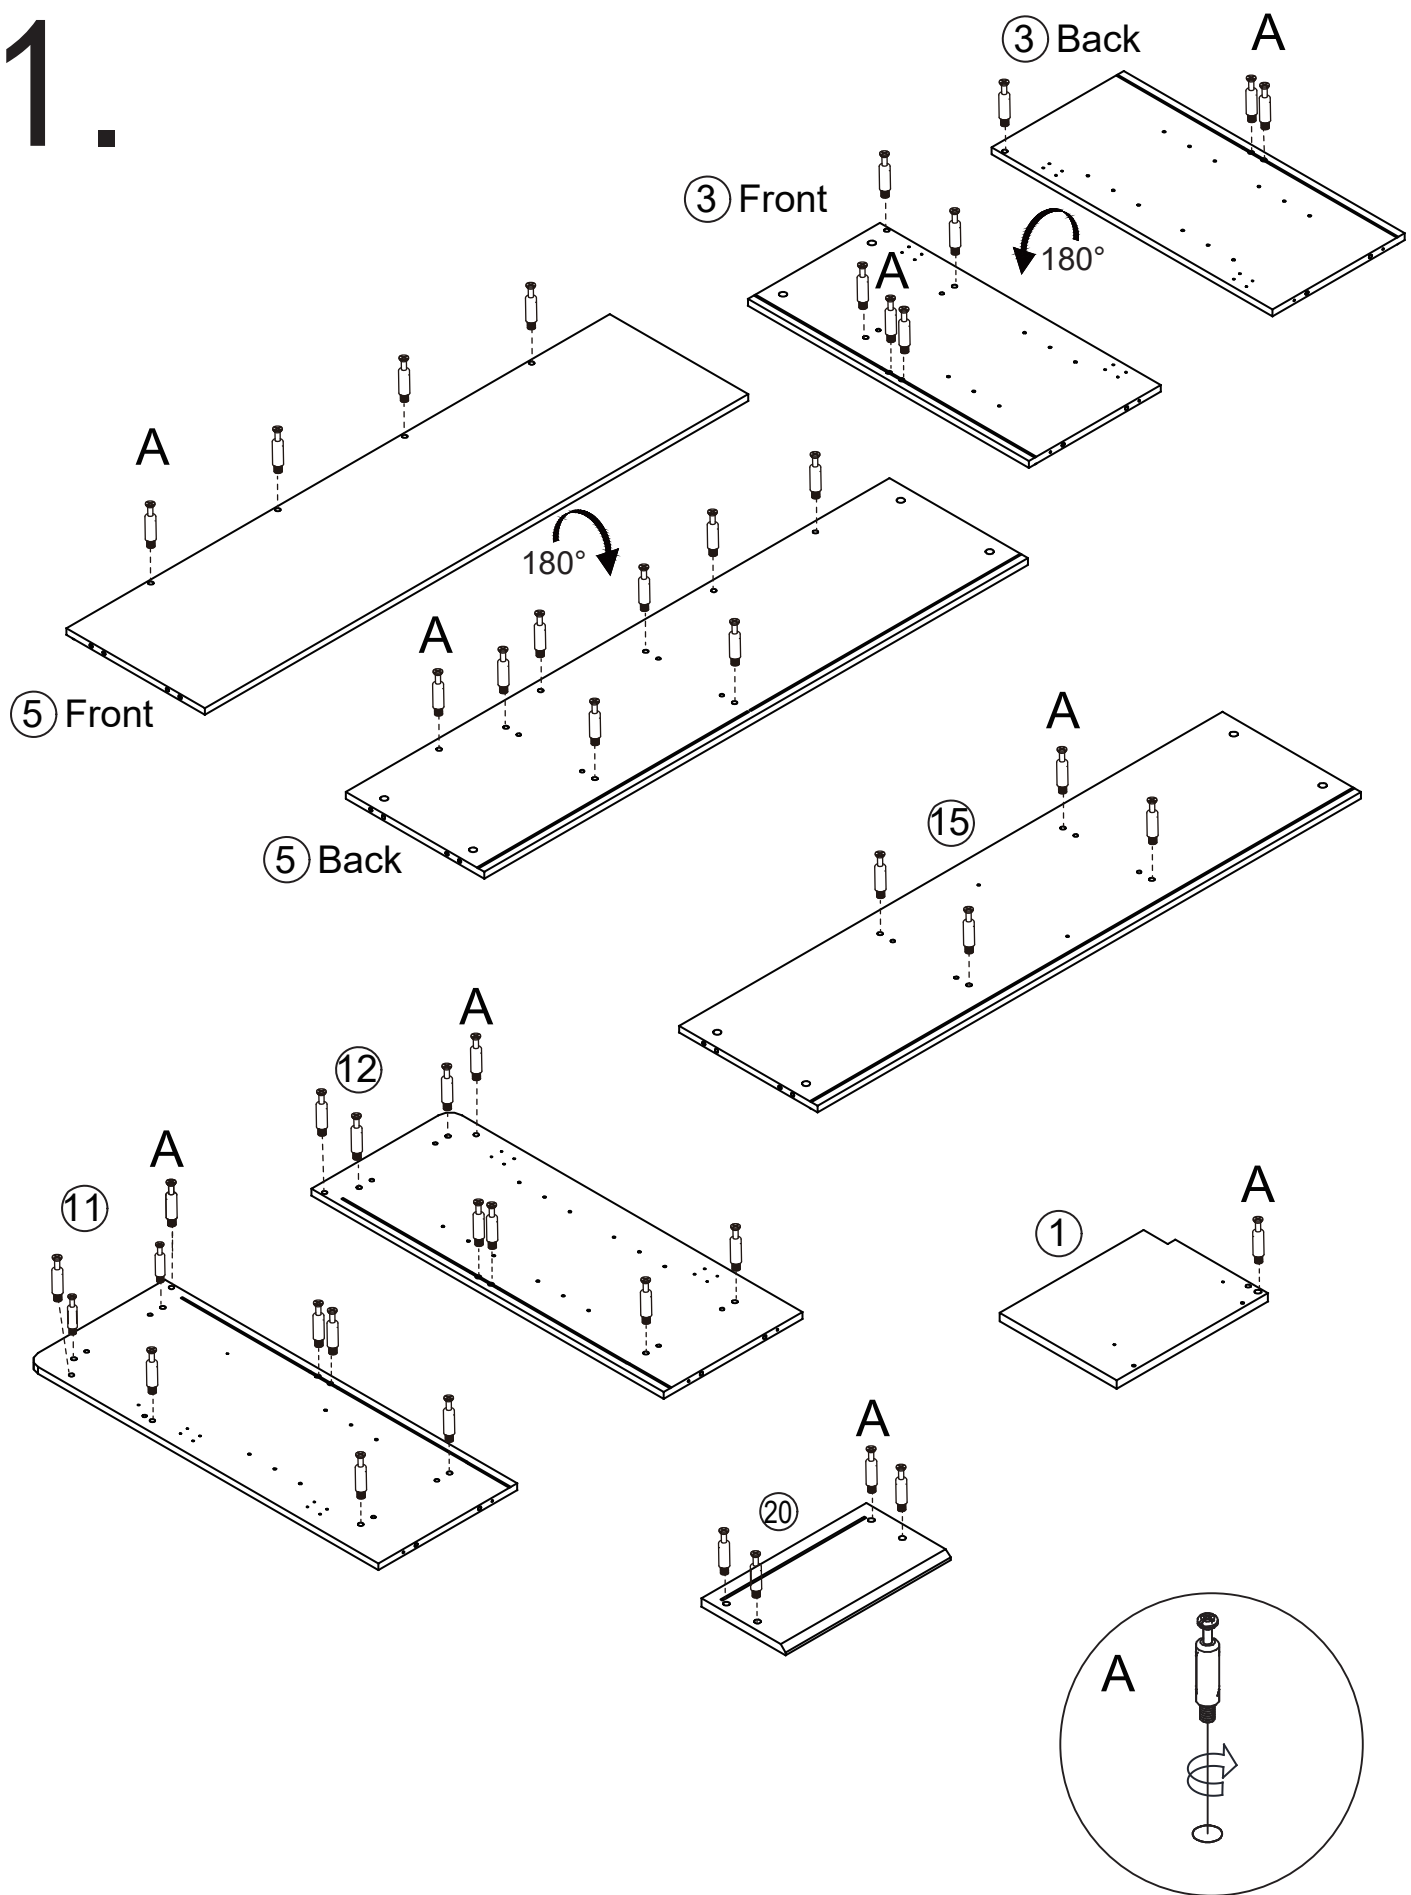



A*46




2.

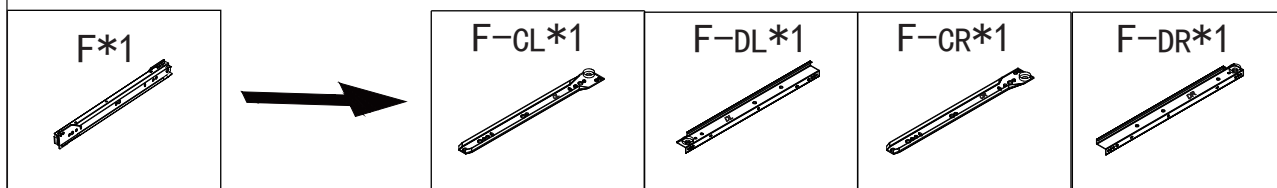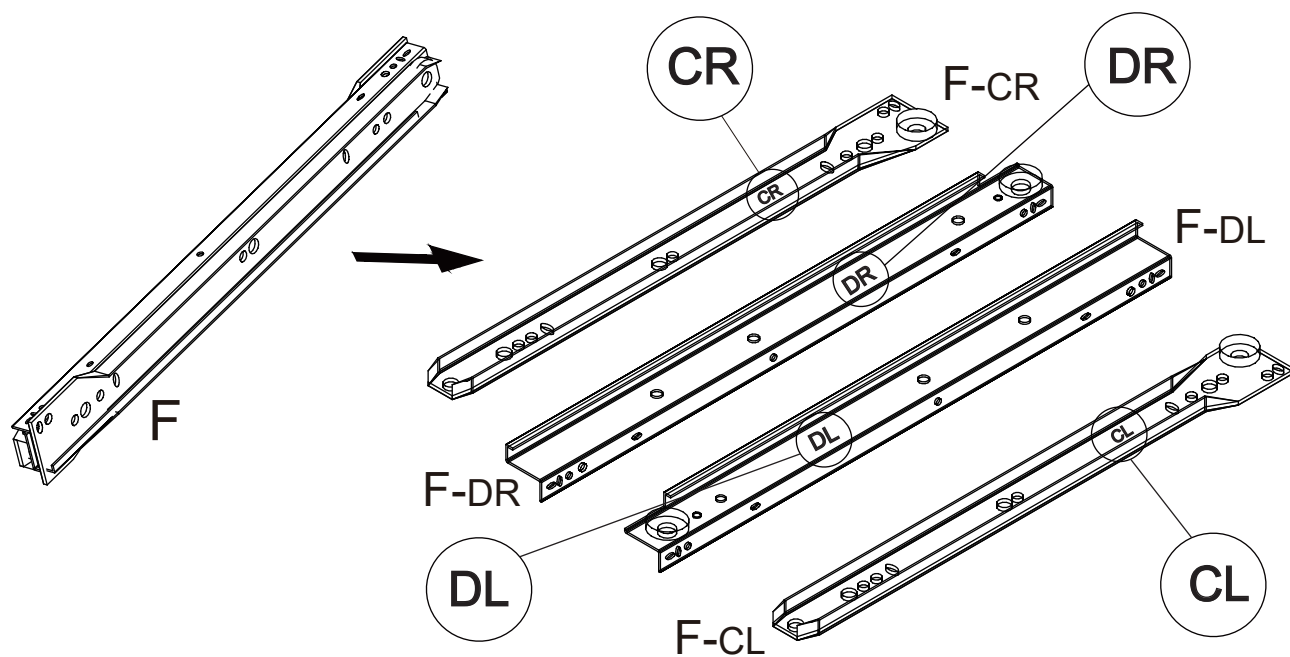

3.

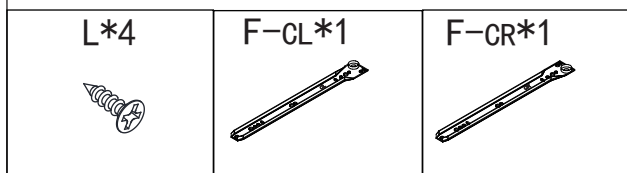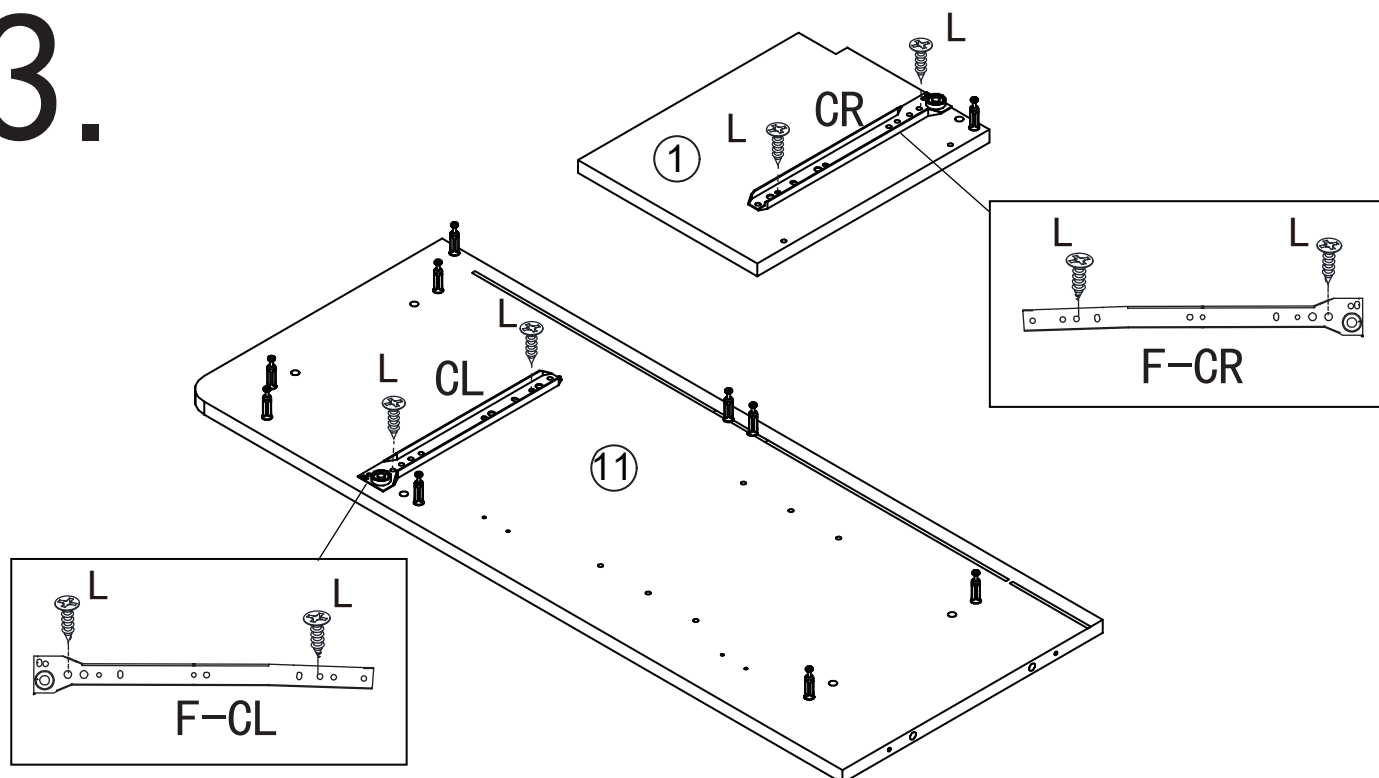

4.

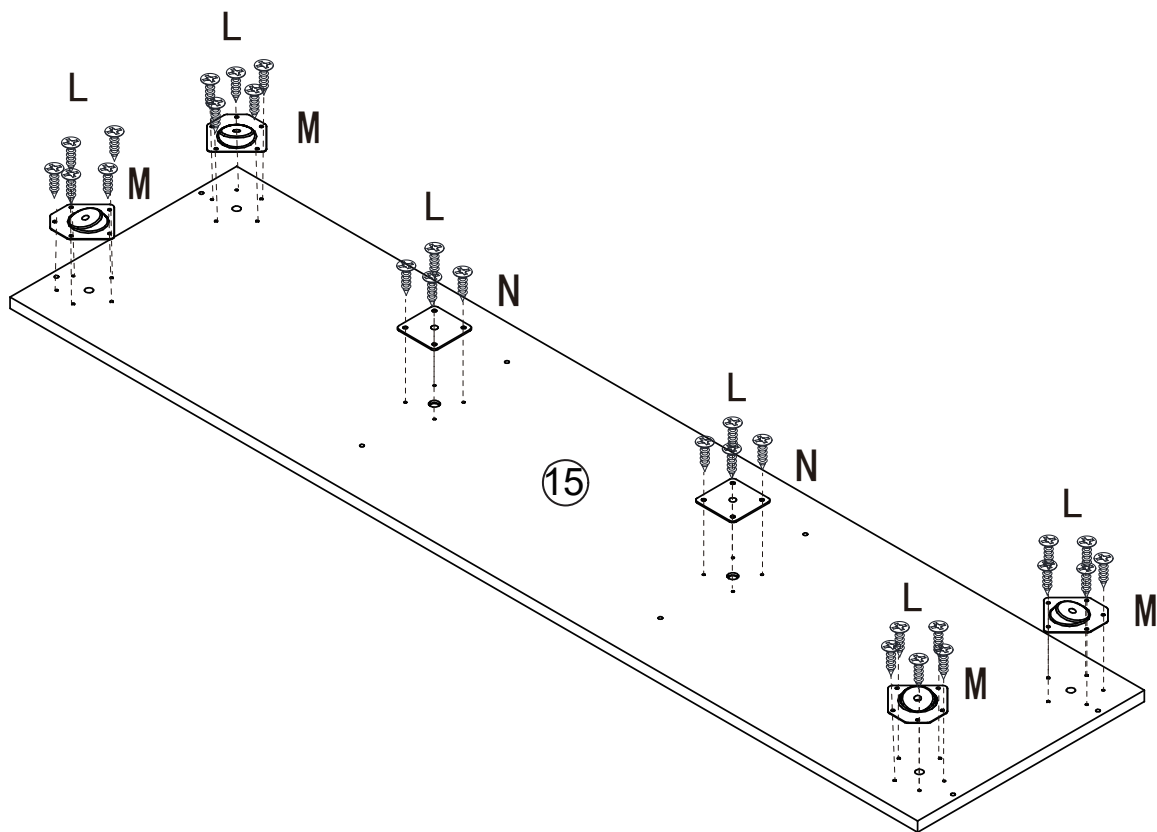

L*28




M*4



N*2




5.

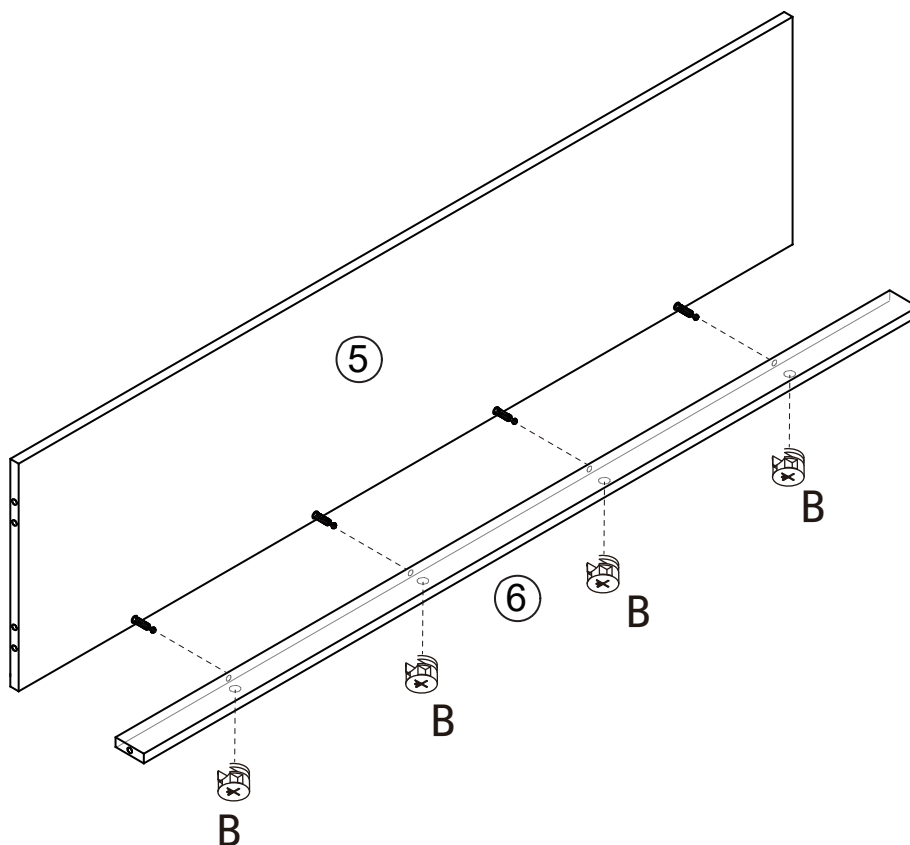

B*4



6.

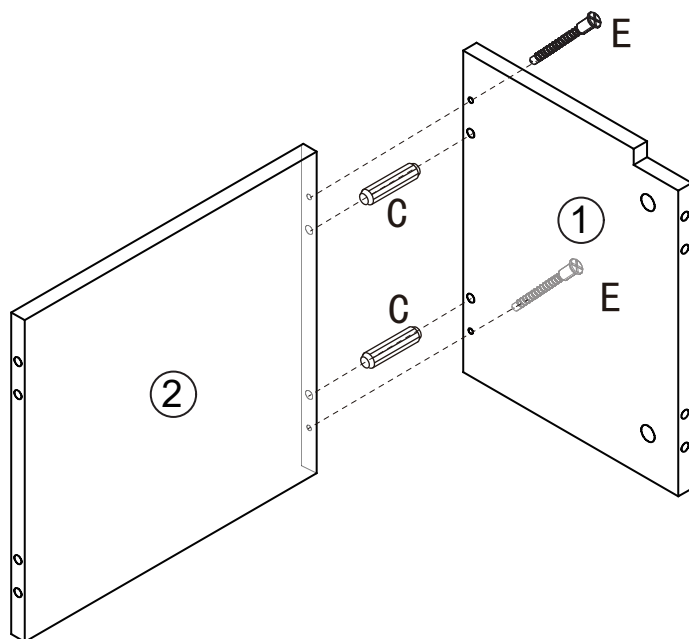


C*2



E*2



7.

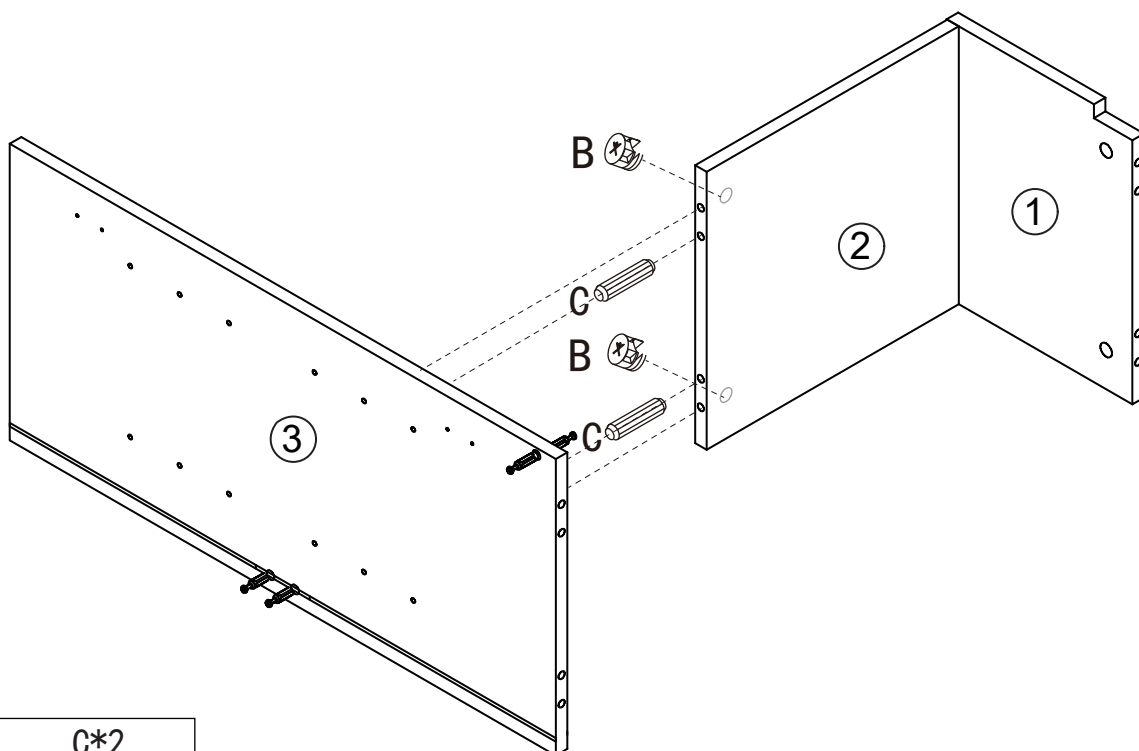


B*2



C*2





8.

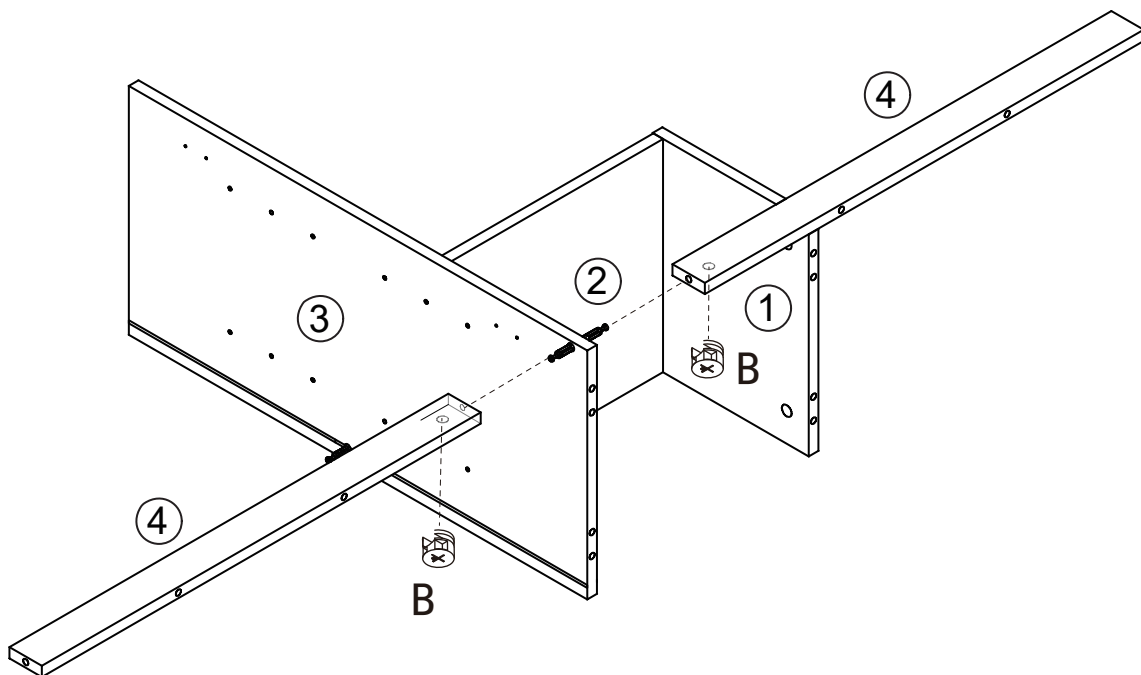

B*2



9.

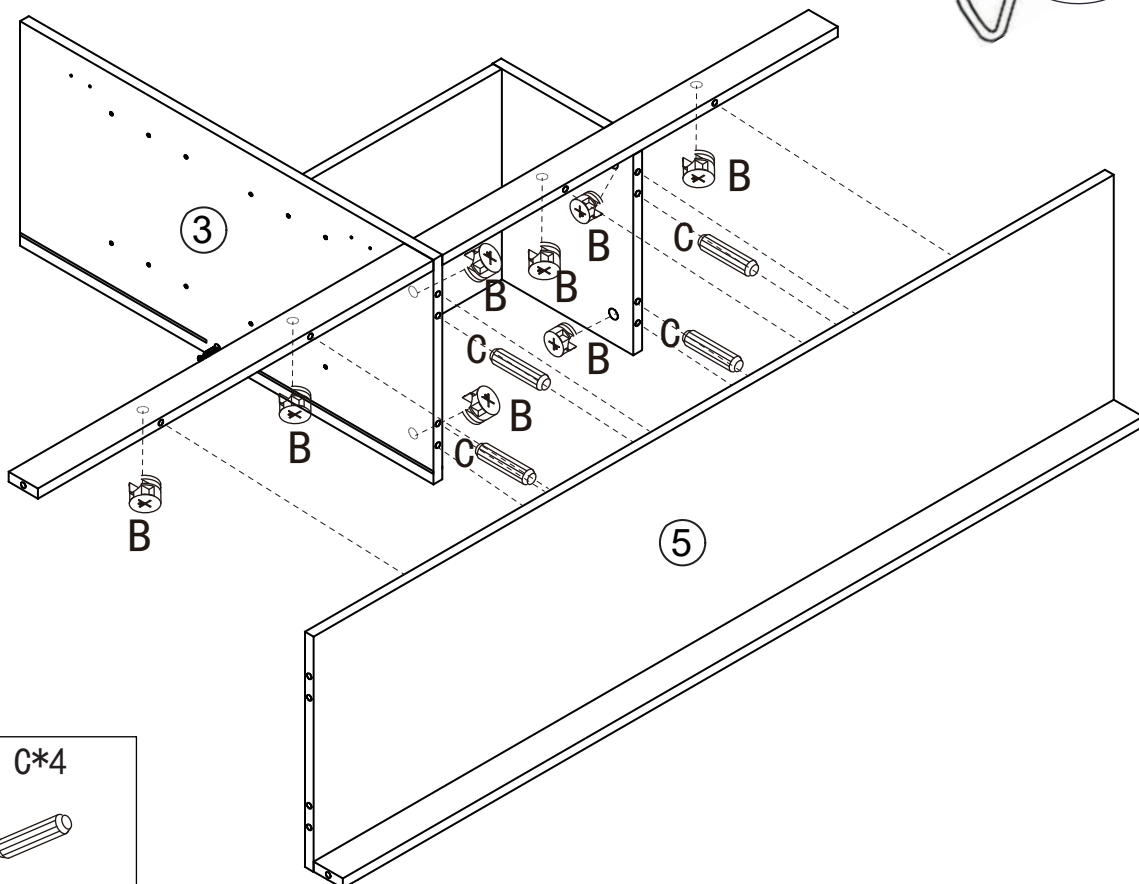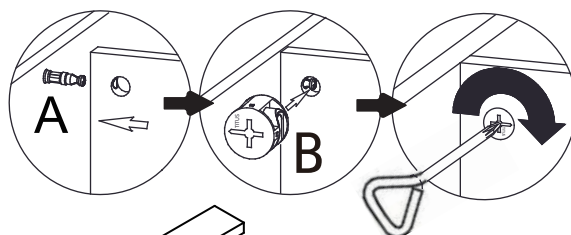


B*8

C*4



10.

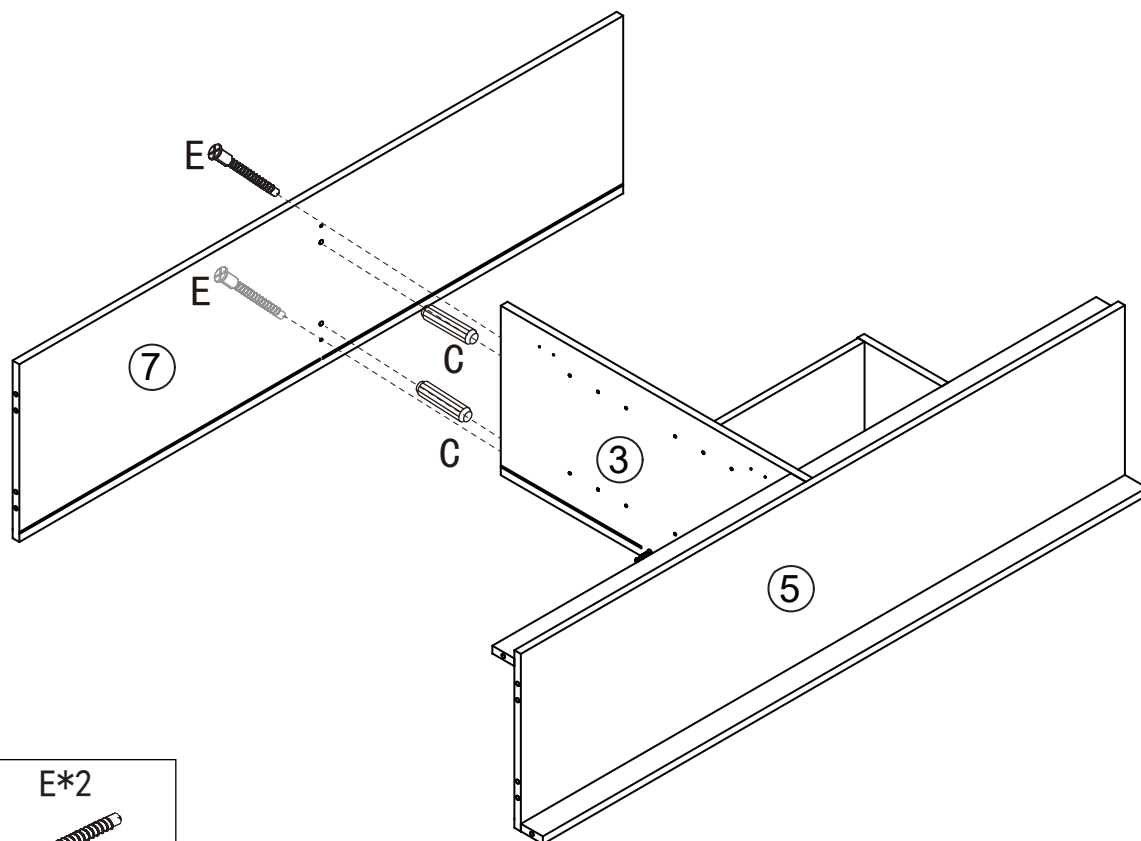

C*2




E*2




11.



Please flip carefully!

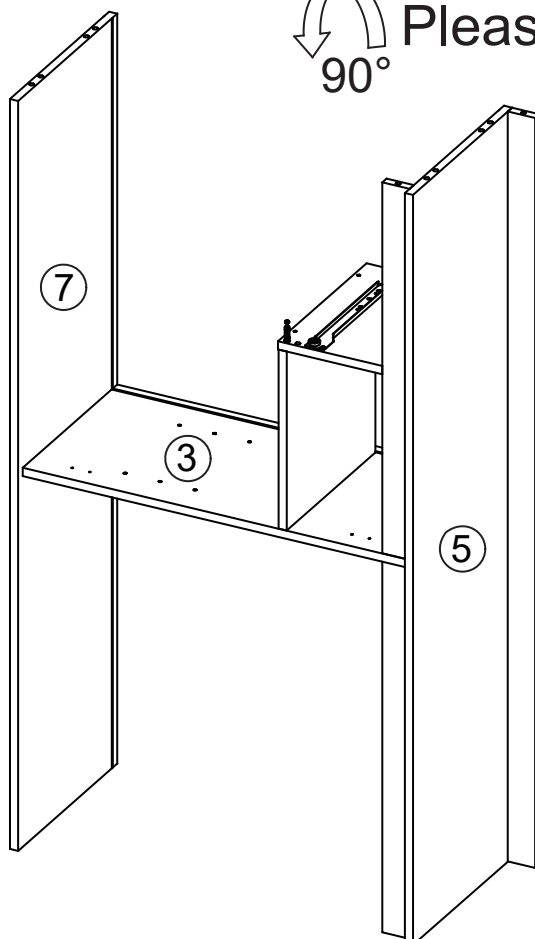

12.

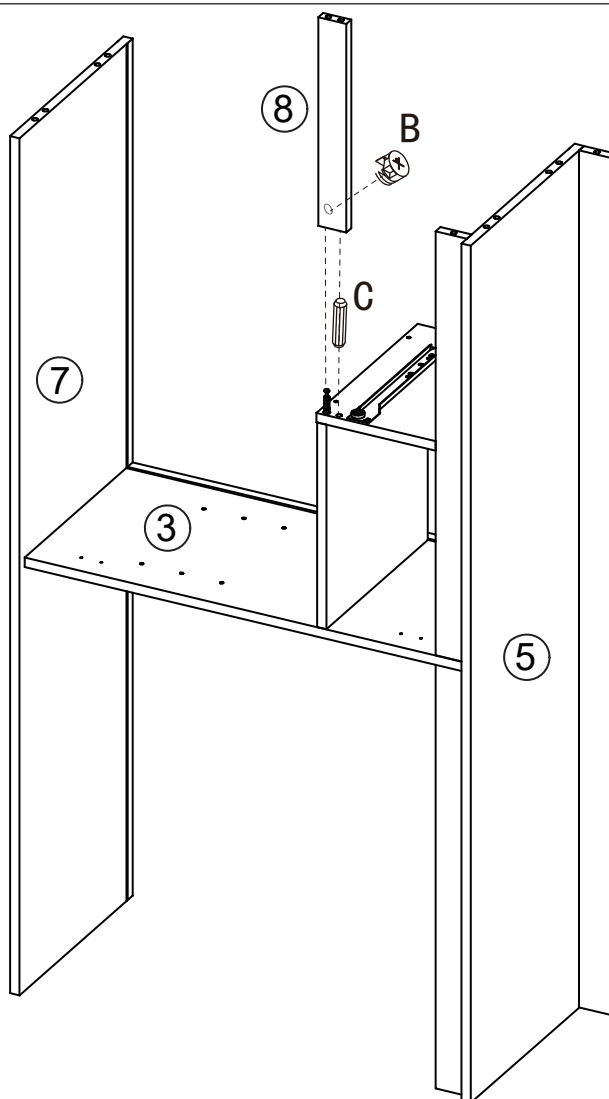


B*1



C*1




13.

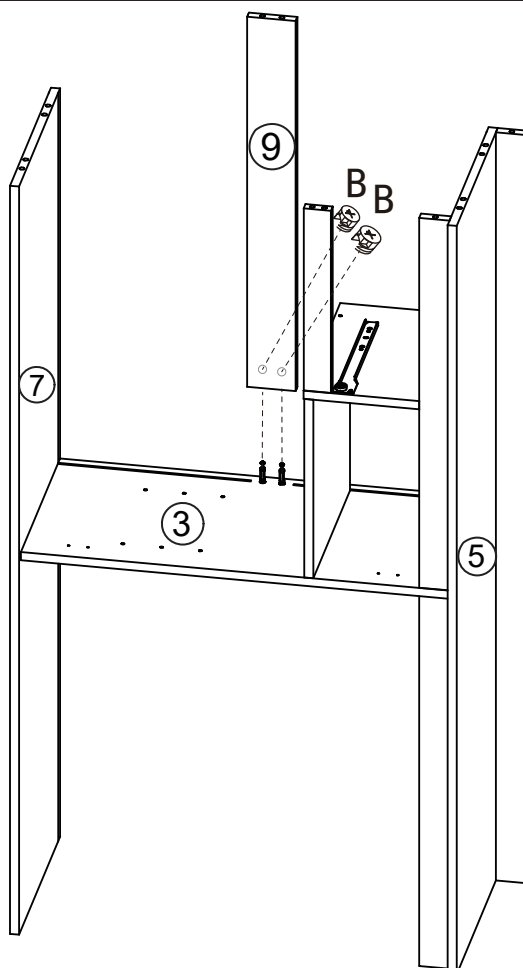



B*2



14.

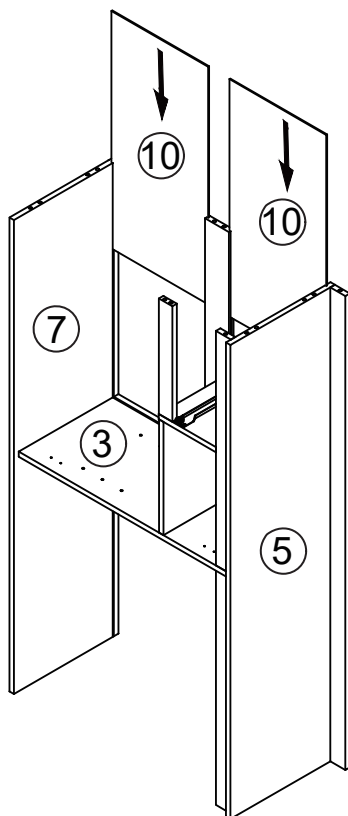

15.

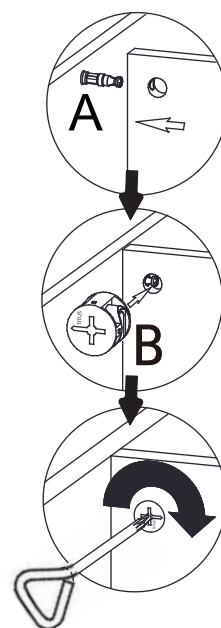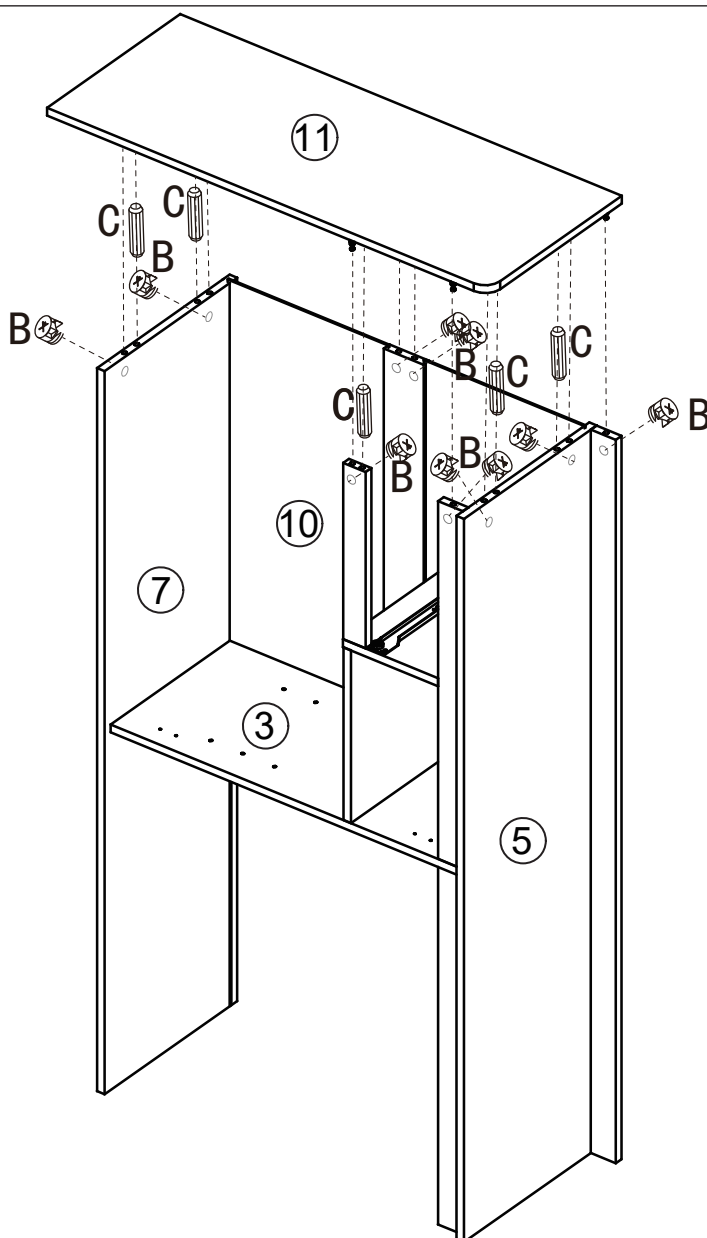

B*9




C*5




16.



Please flip carefully!

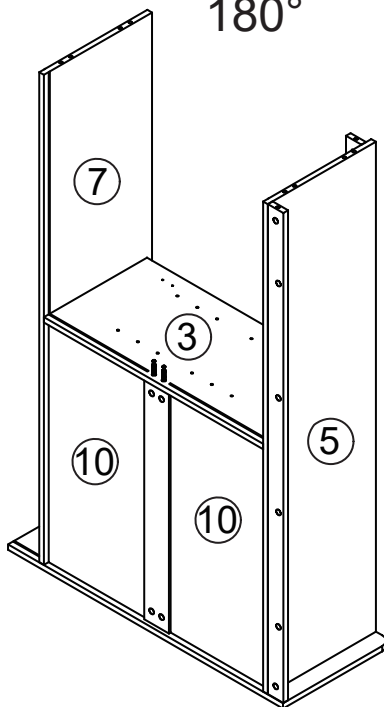


17.

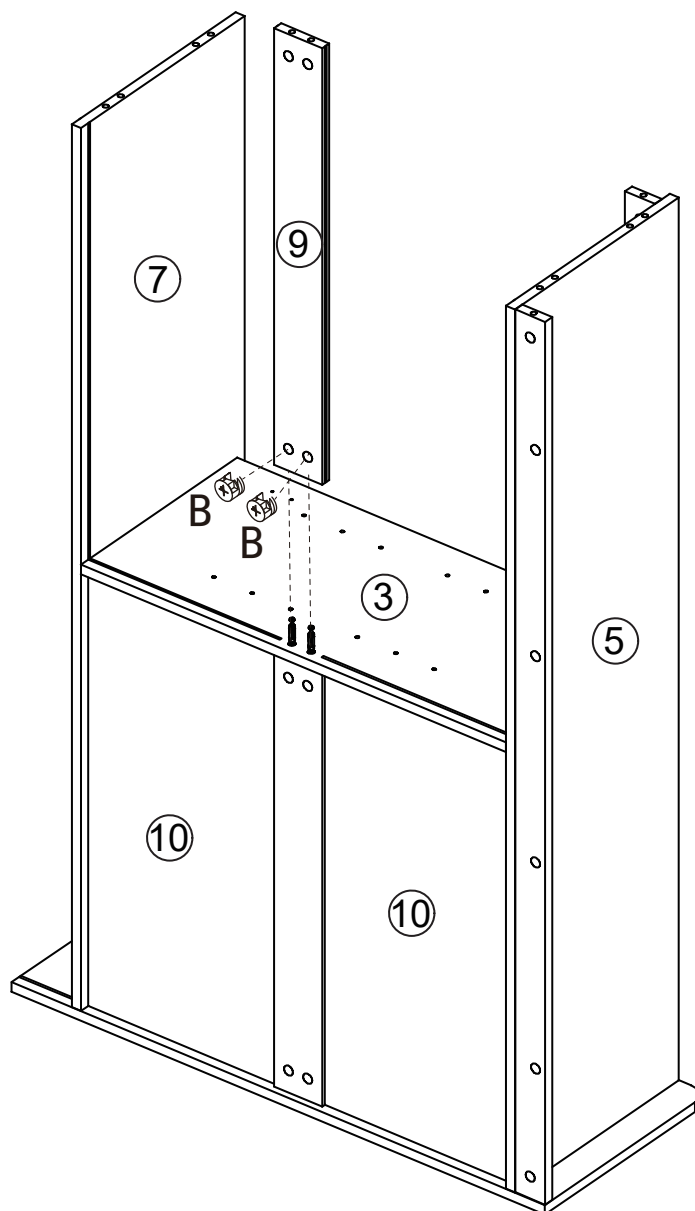


B*2



18.

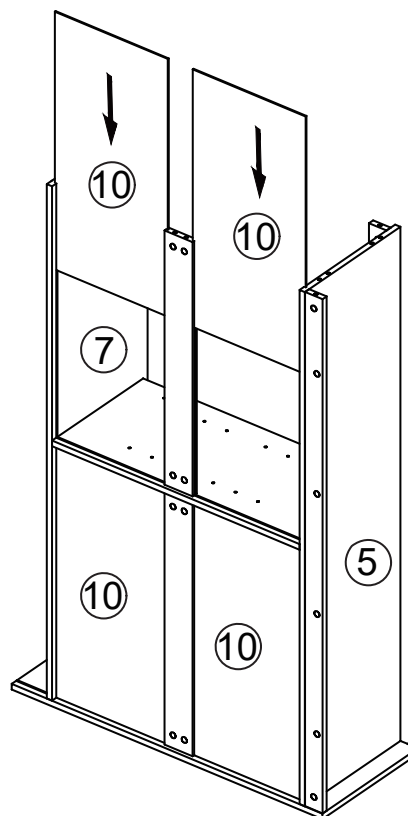

19.

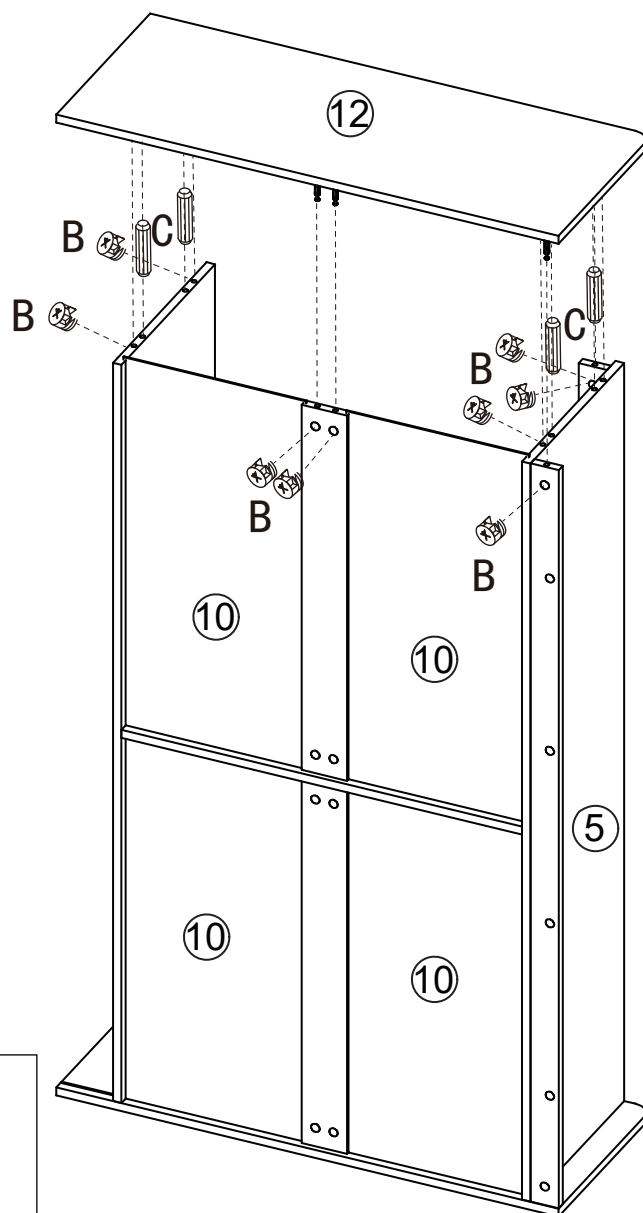


B*8

C*4



20.

Please flip carefully!

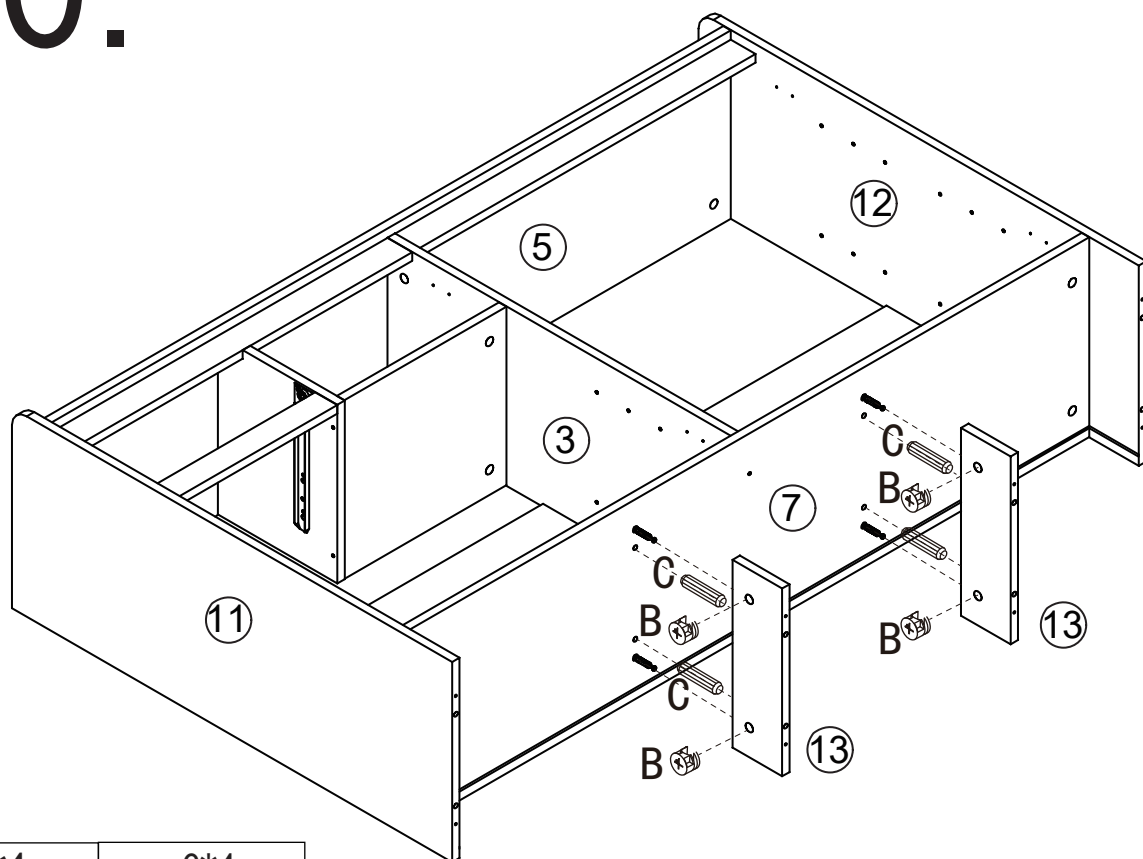


B*4




C*4



21.

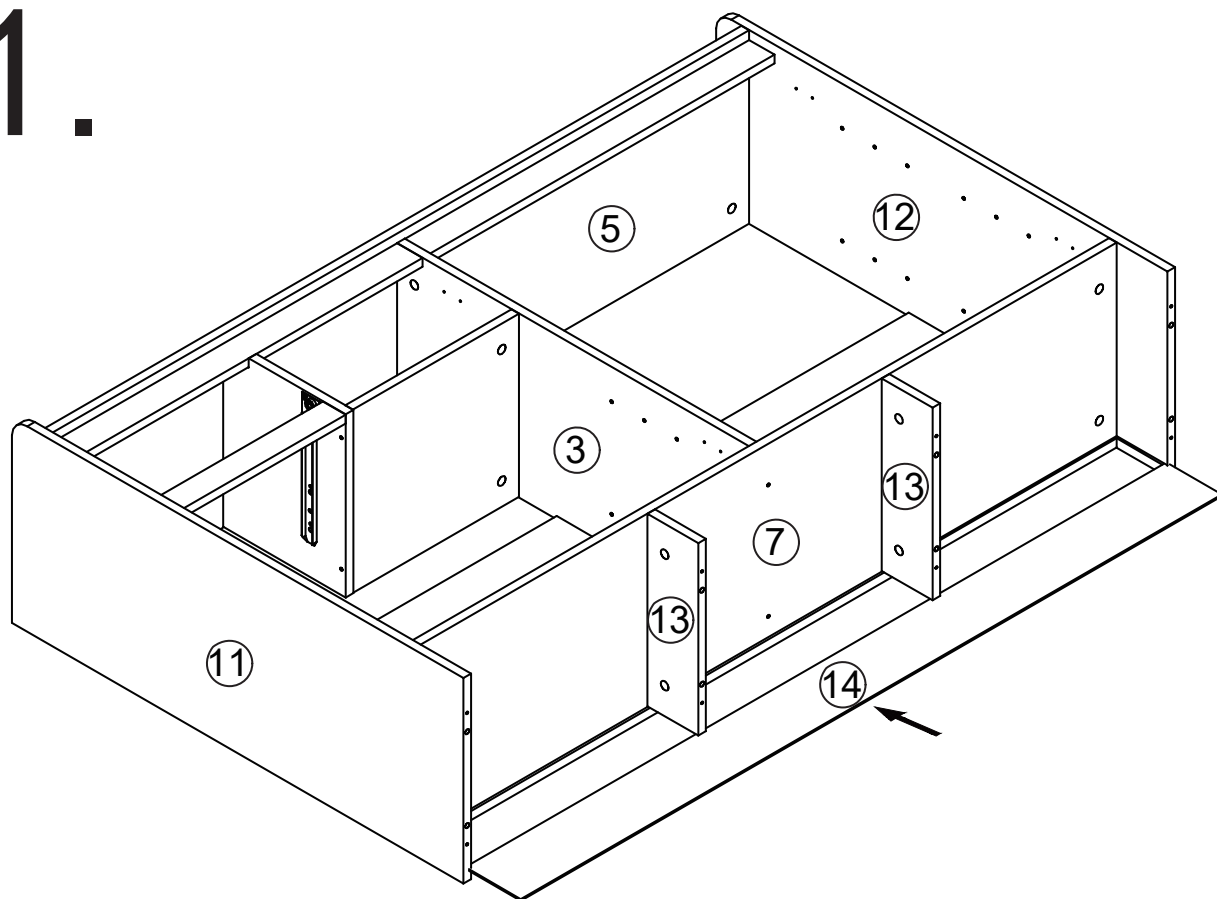


22.

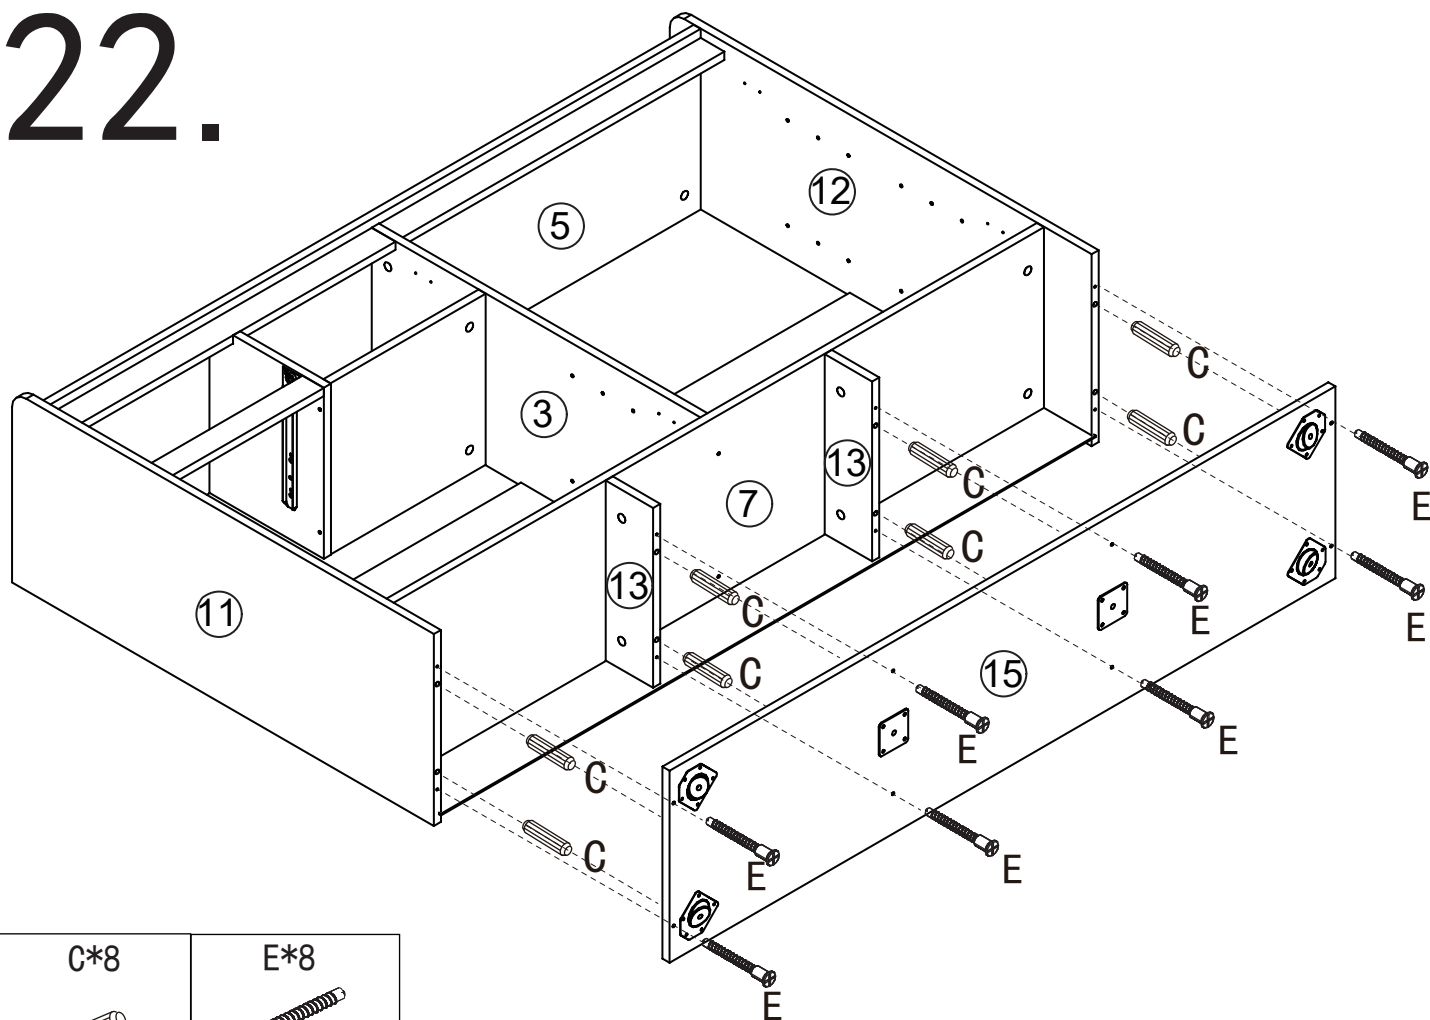


C*8



E*8




23.

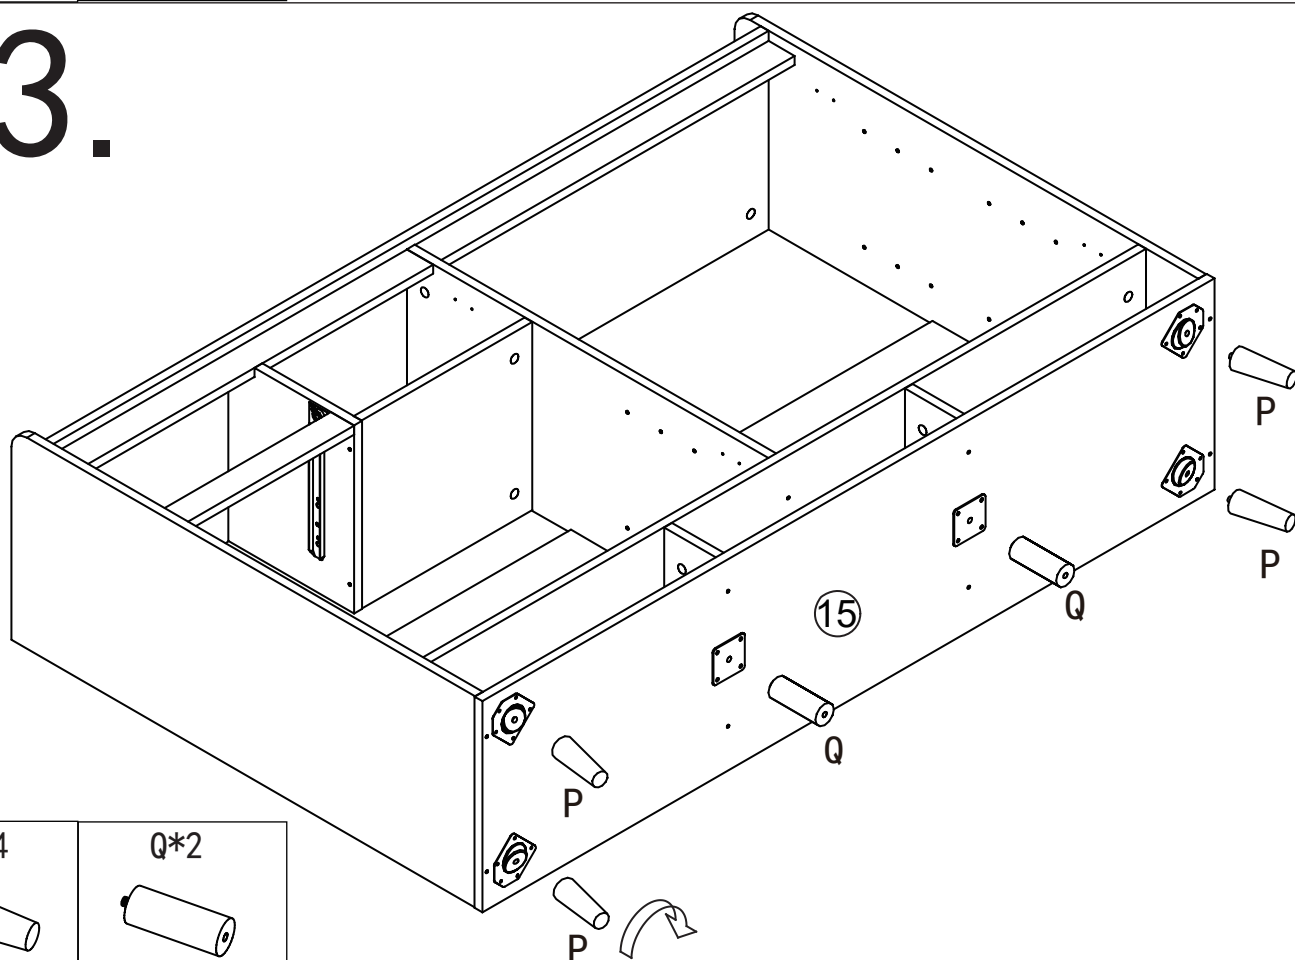


P*4



Q*2



24.

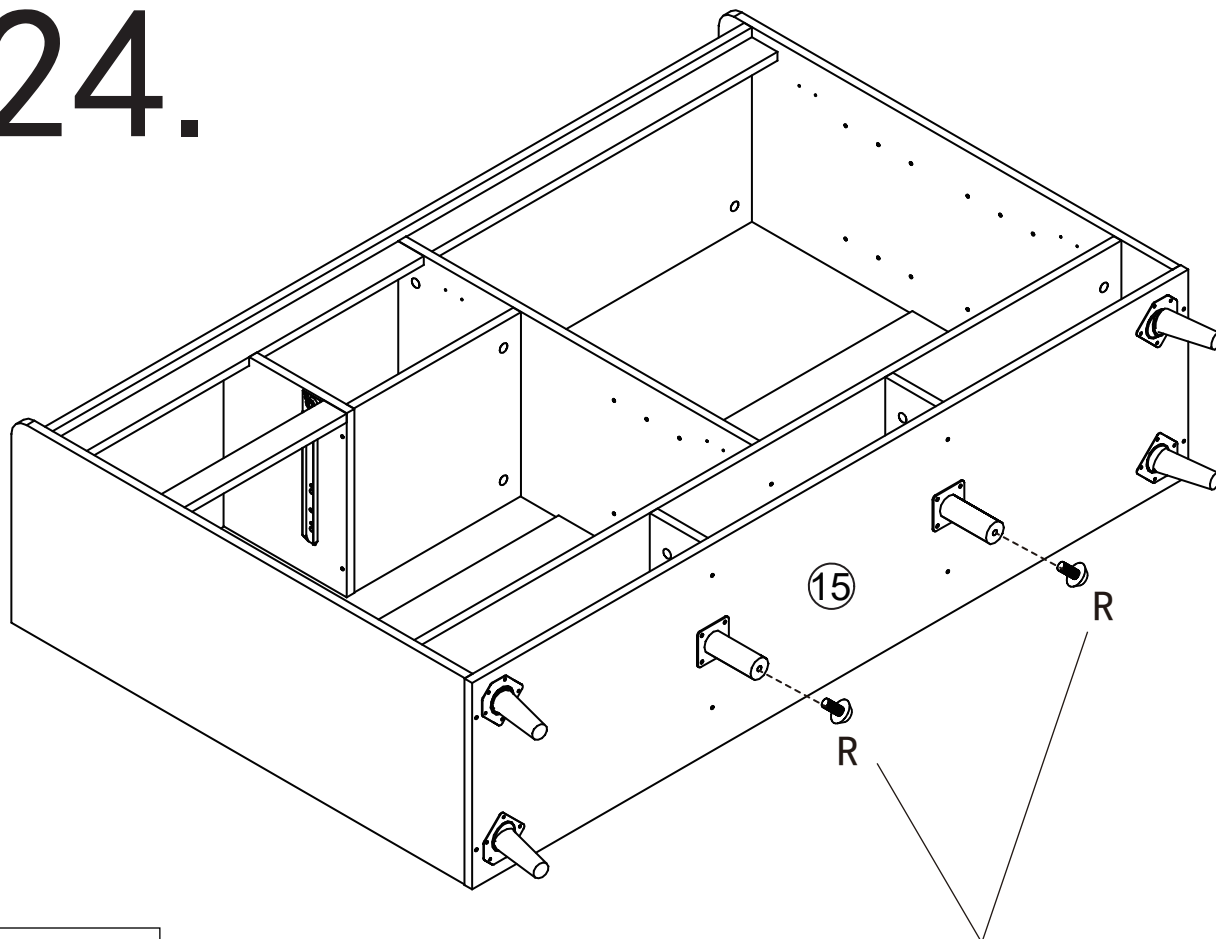


R*2



Adjust the height of the footing by rotating it

25.


Please flip carefully!

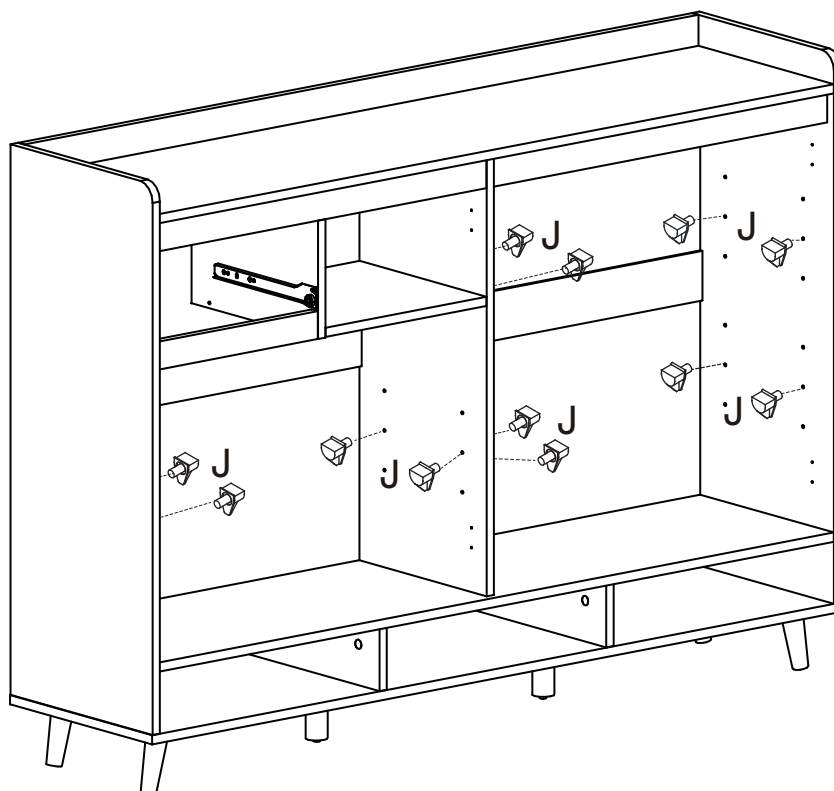


J*12



26.

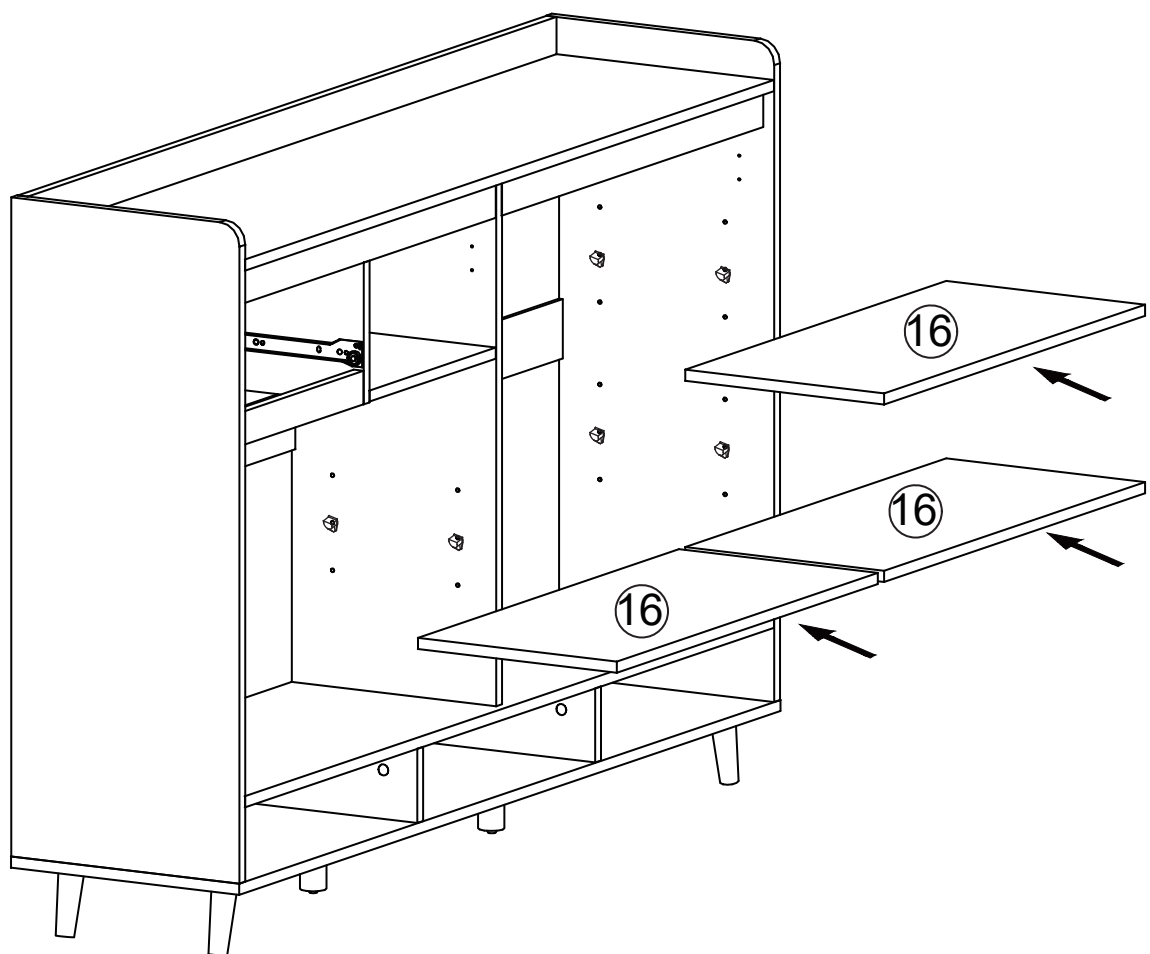


27.

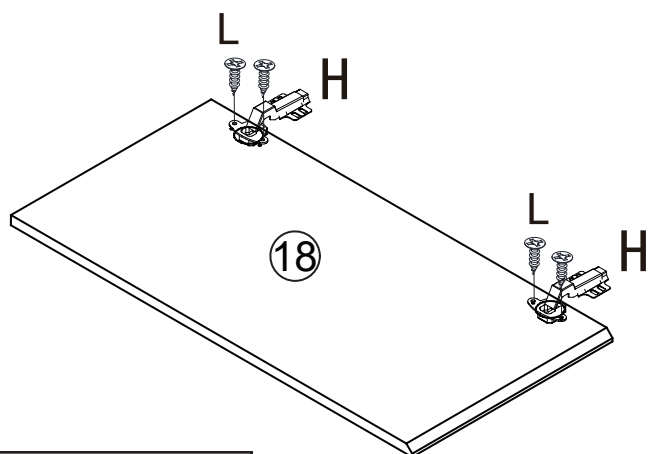


Please carefully distinguish between G and H hinges during the installation steps and adhere strictly to the instructions in their prescribed order to avoid any installation errors.



H

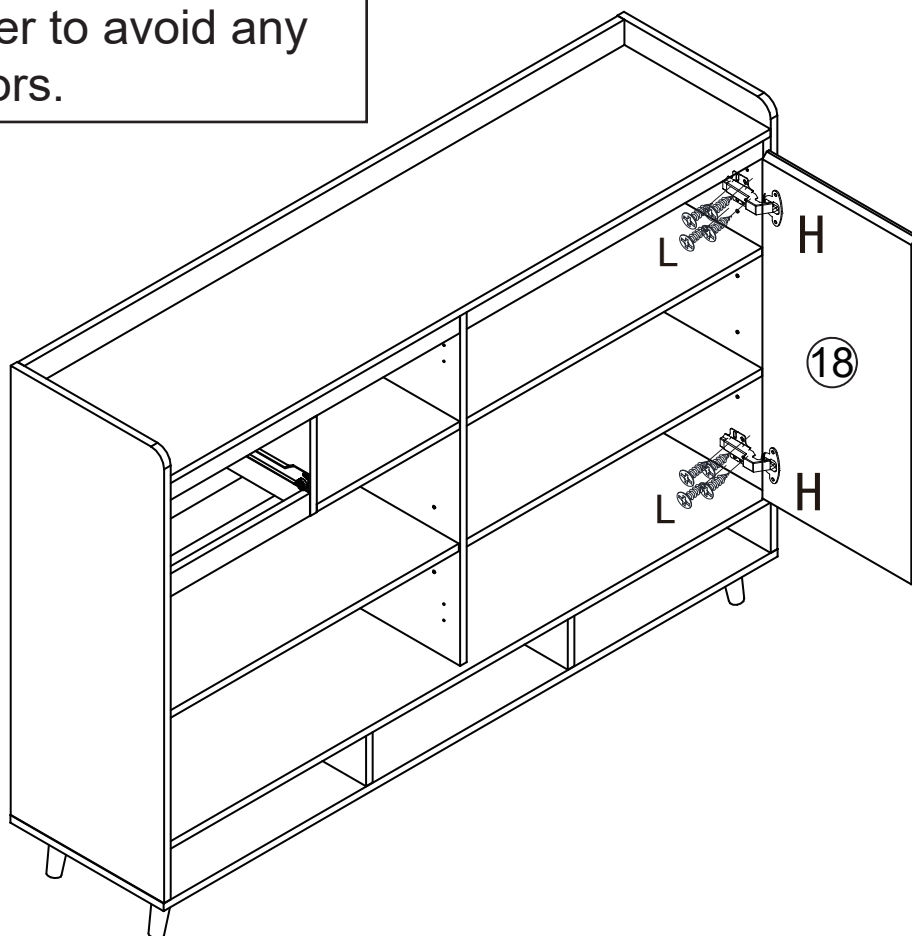


H*2

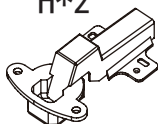

L*12




28.

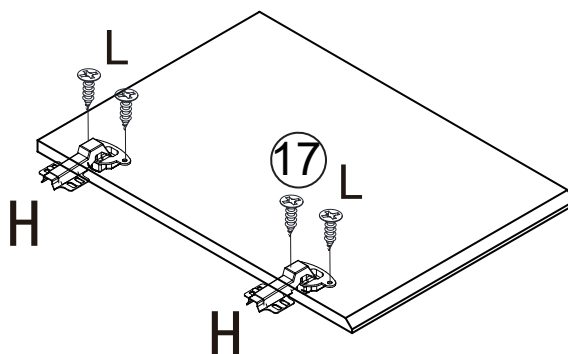


Please carefully distinguish between G and H hinges during the installation steps and adhere strictly to the instructions in their prescribed order to avoid any installation errors.



H

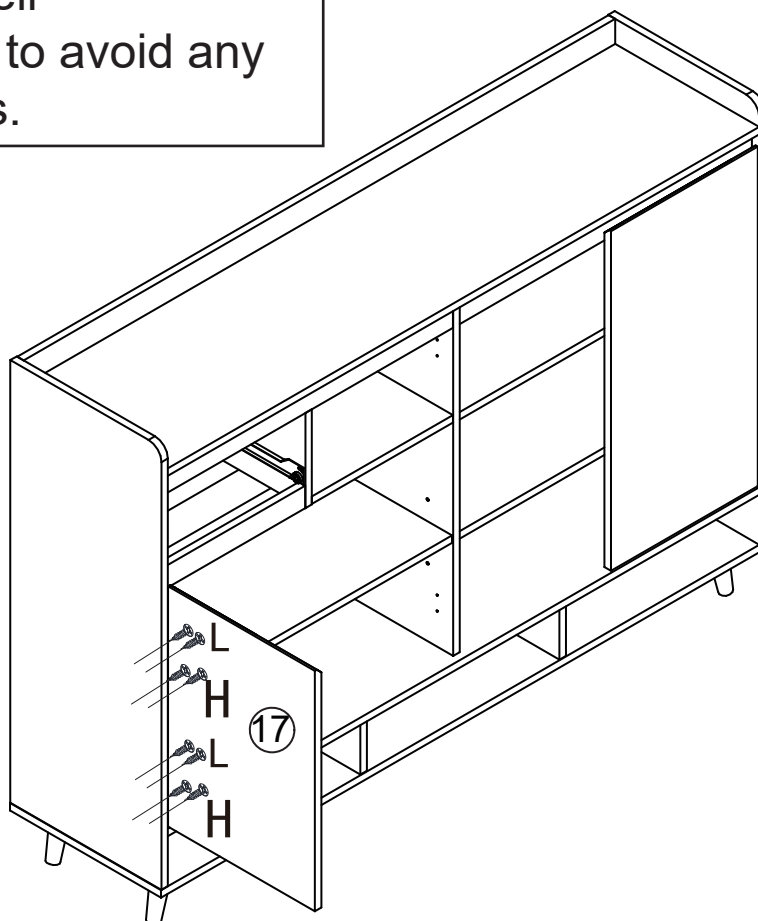


H*2

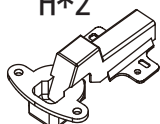

L*12




29.

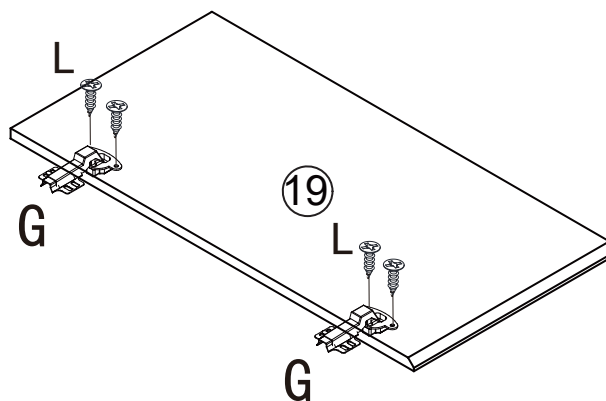


Please carefully distinguish between G and H hinges during the installation steps and adhere strictly to the instructions in their prescribed order to avoid any installation errors.



G

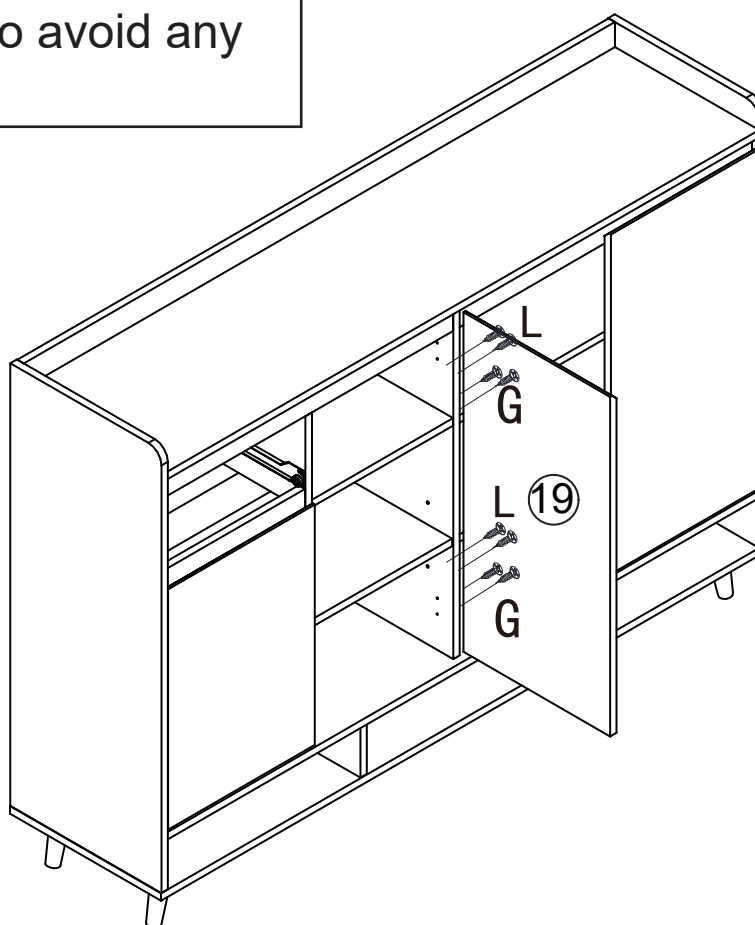


G*2



L*12




30.

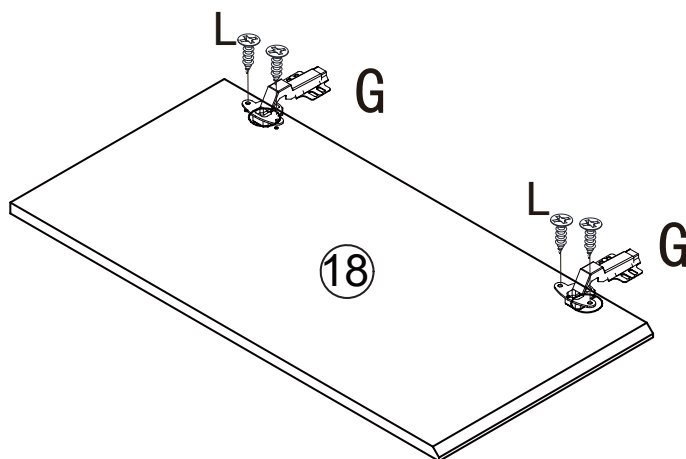


Please carefully distinguish between G and H hinges during the installation steps and adhere strictly to the instructions in their prescribed order to avoid any installation errors.



G

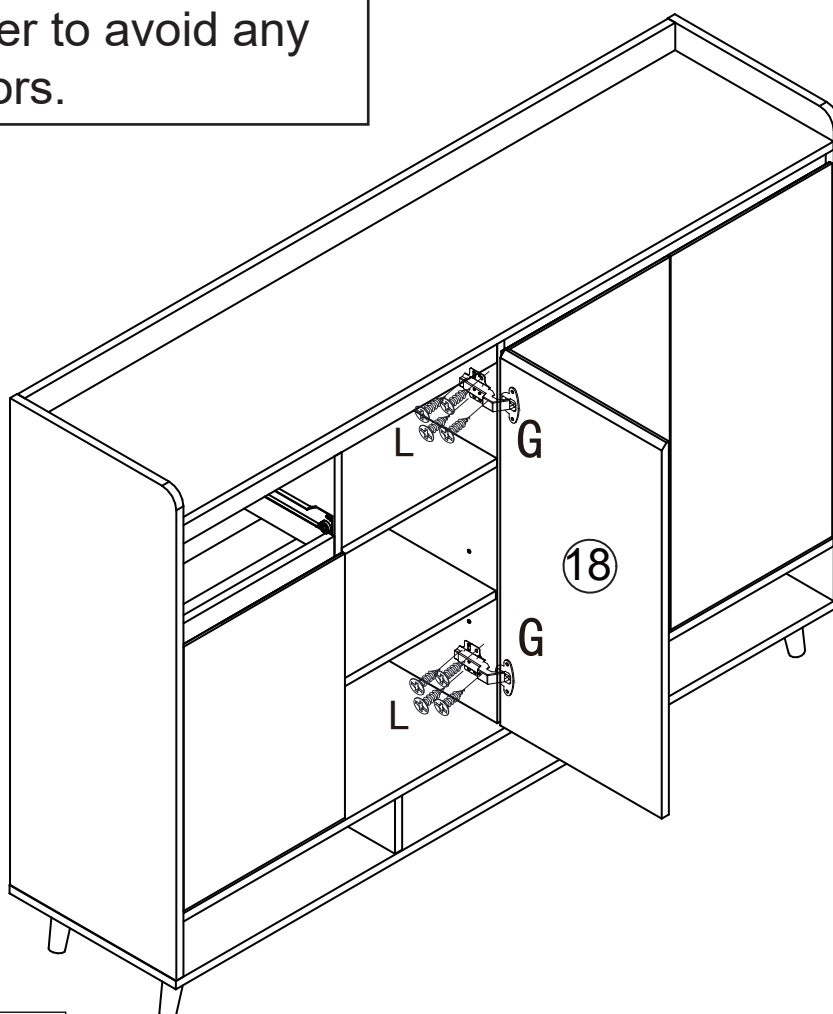


G*2







L*12



31.

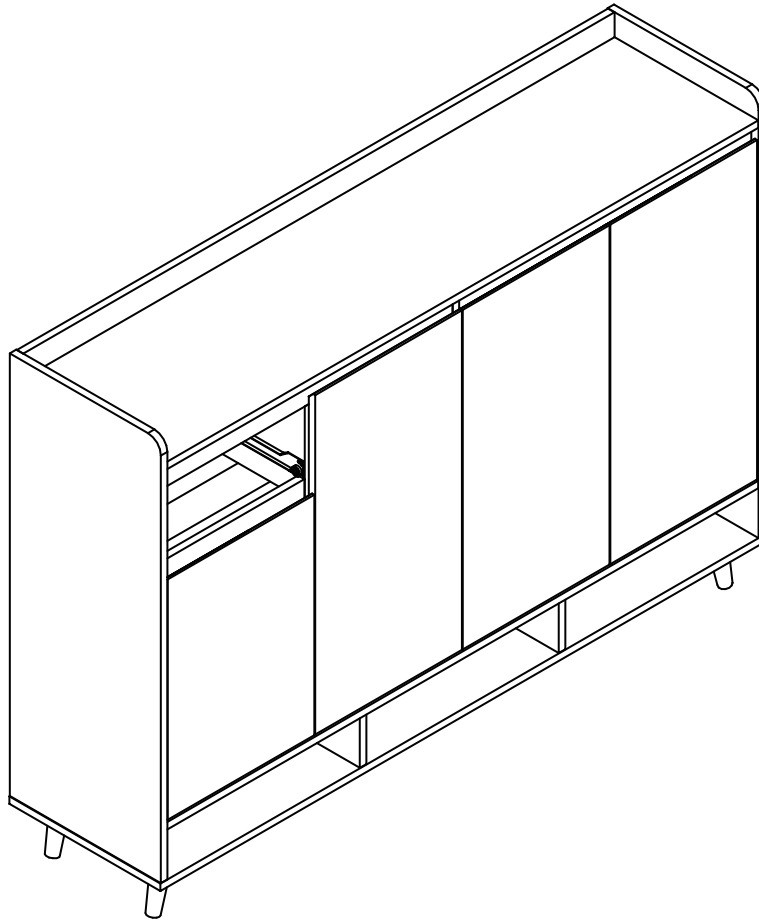


When the hinges are installed, you can refer to the pictures to adjust crevice of the doors till it's perfect:

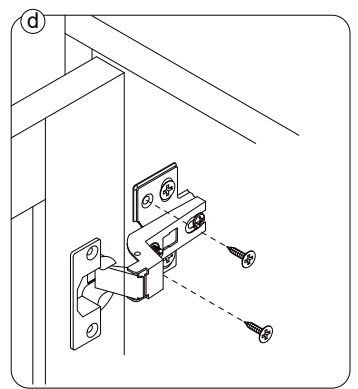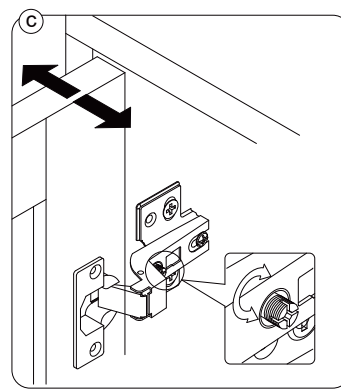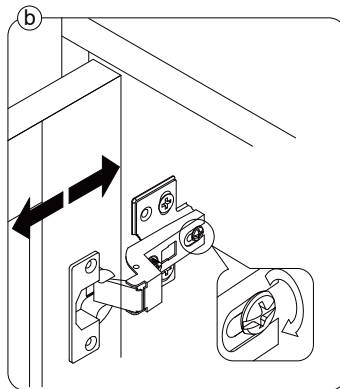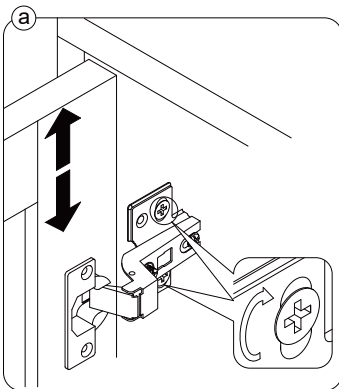


1. To adjust the doors up and down, please refer to step (a)
2. To adjust the distance between the doors and side panels, please refer to step(b)
3. To adjust the gap between two doors, please refer to step (c)
4. After the adjustment finished, please tight the screws, refer to step (d)


32.

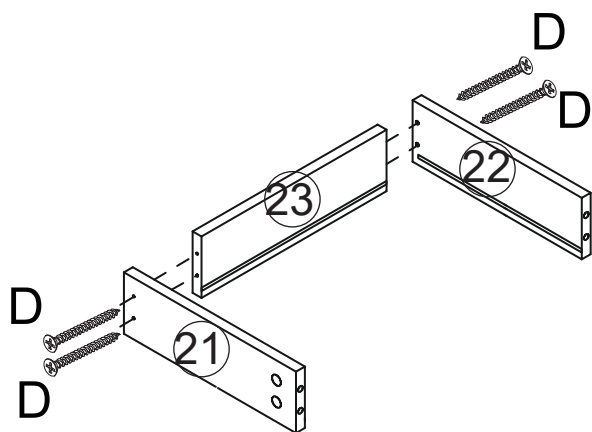


1. Connect part 21 & 22 to 23

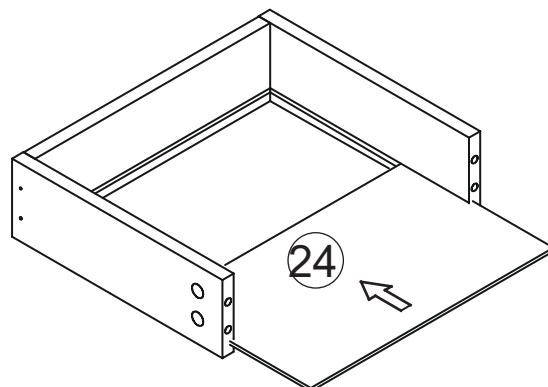


2. Insert part 24

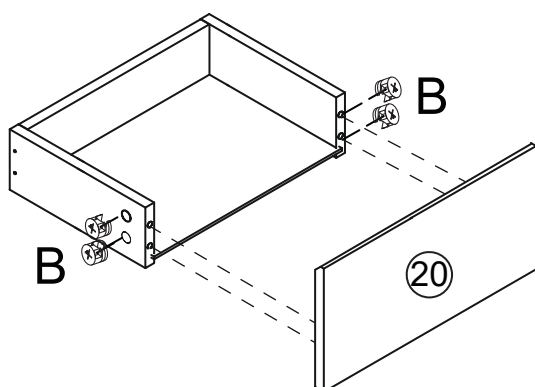

3. Connect Part 20

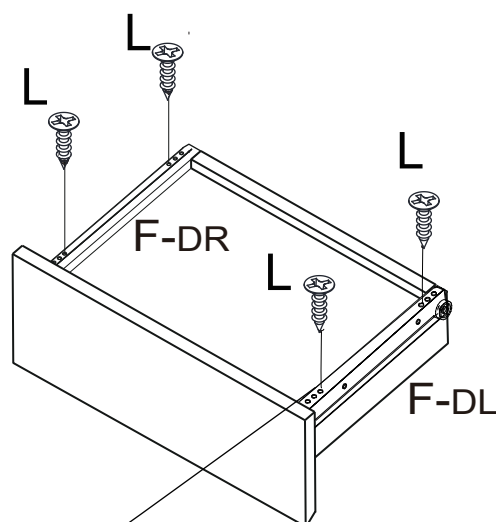


4. Install hardware "F" to part 21 & 22 according to the pre-drilled holes

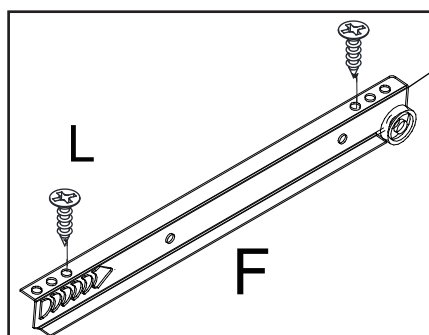

B*4



D*4



F-DL*1




F-DR*1




L*4



33.

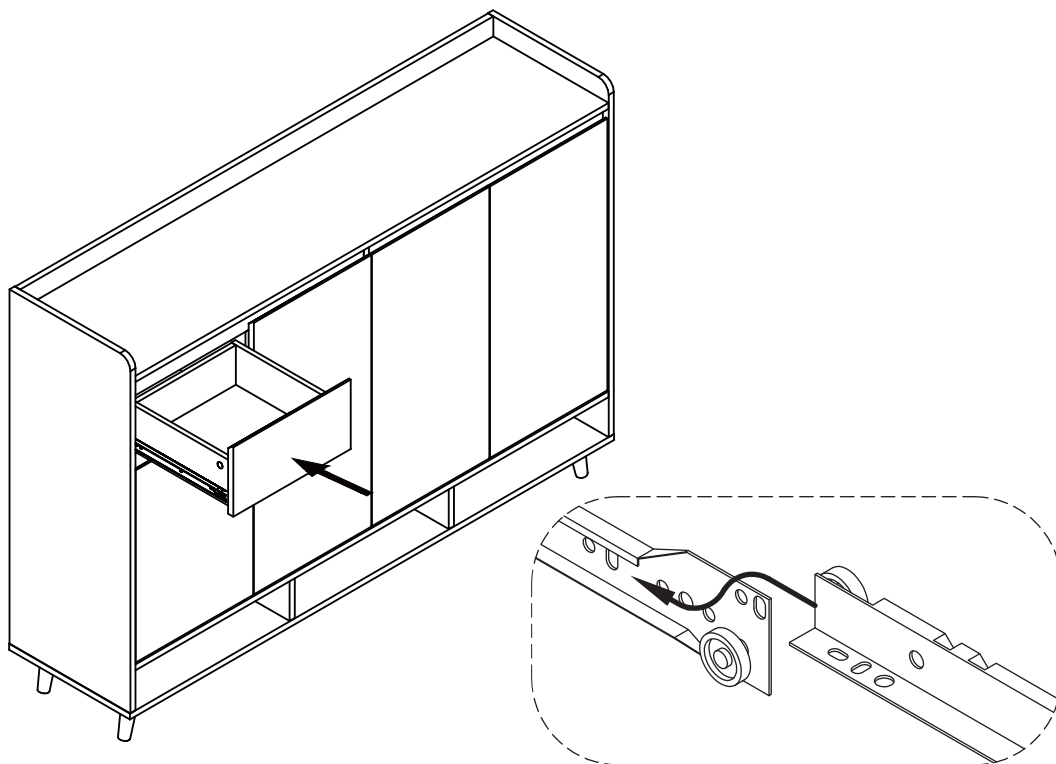

34.



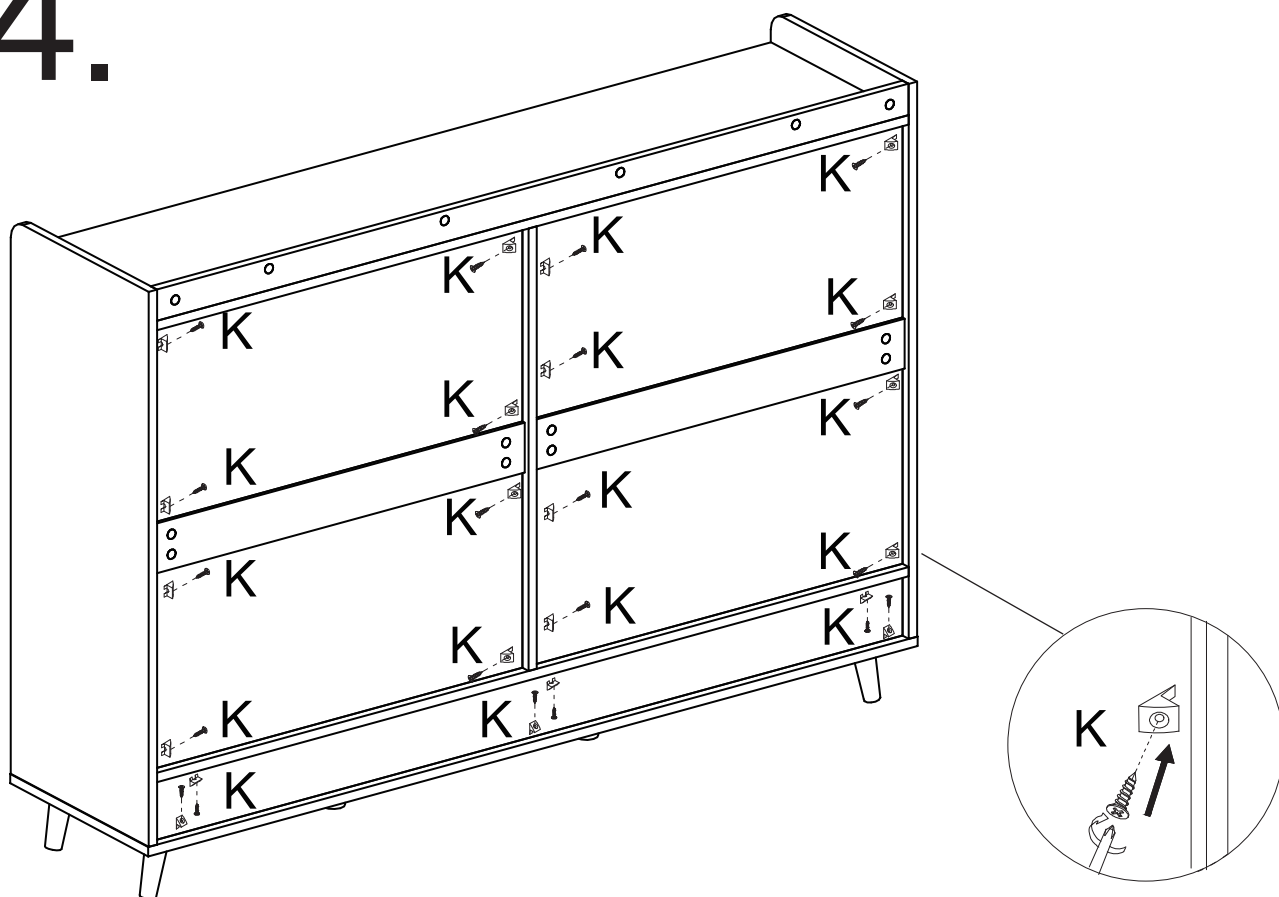


As the picture shows,
Fix hardware "K" into the gap with screws
to make the back panel more stable.

K*22



35.

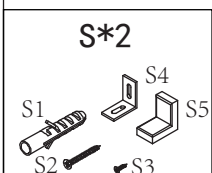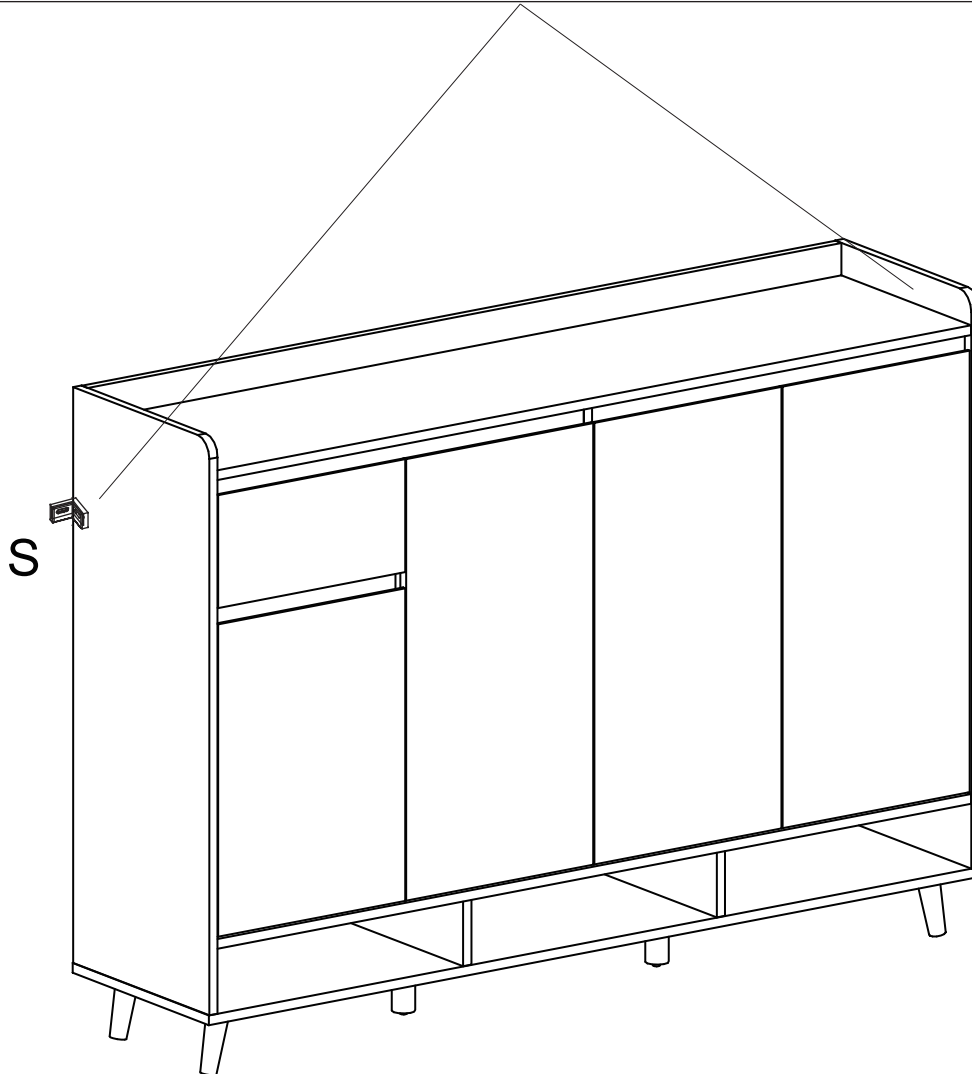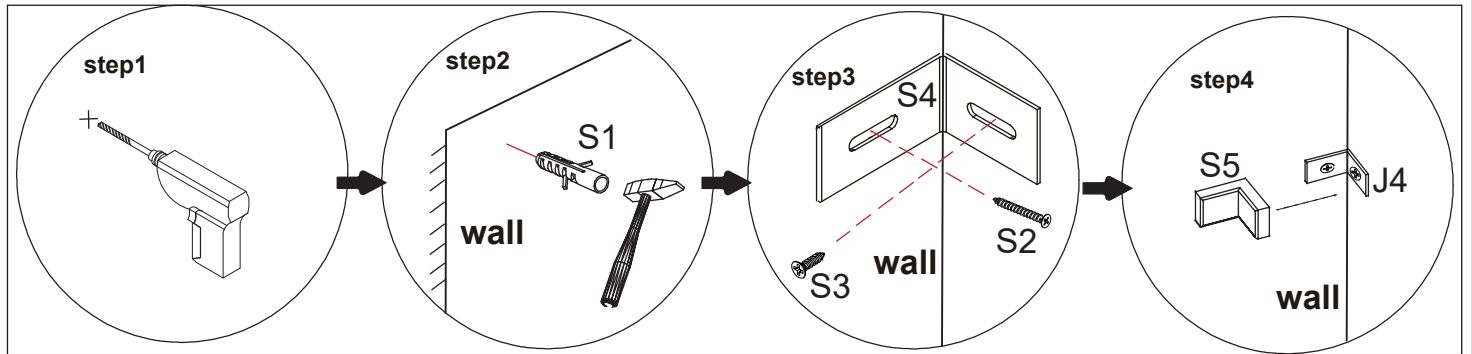

36.

