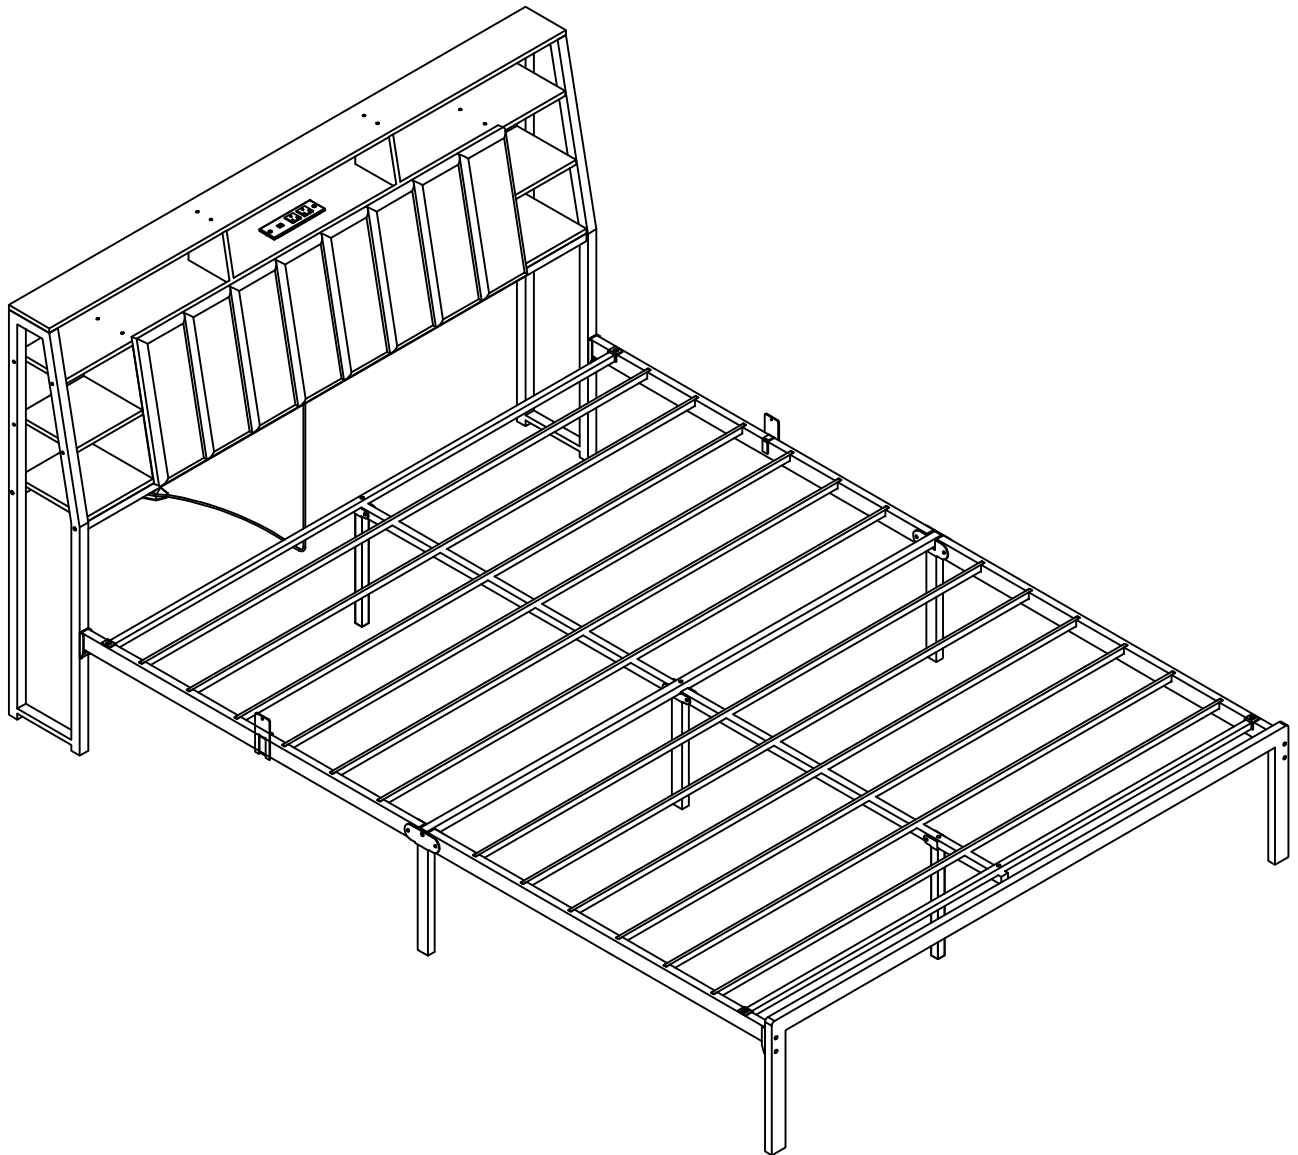


Suggestion:

For a simpler and quicker assembly process,
we recommend that two people work together.

Due to the product's structure, the estimated assembly time is 60 minutes.

IMPORTANT:












1. Please read the instructions carefully before assembling the product.
2. Before starting the assembly process, check the package carefully to make sure all necessary boards and parts are included.
3. If there are any defective or missing parts after unpacking, please stop assembly and immediately contact us.
4. Before assembly, put all parts and boards in an open area. Ensure that you have the correct parts before screwing them in place.

Warning:

1. During assembly, keep all small objects out of the reach of children, as they may be fatal if swallowed or inhaled
2. Never allow children to climb or play around the product to protect children from injury caused by the tilting of the product.
3. To avoid the potential dangers of suffocation, please keep all parts and packaging away from children.







Parts Identification1/2

Not actual size

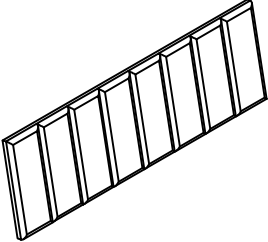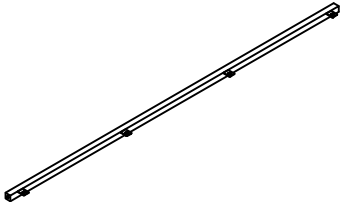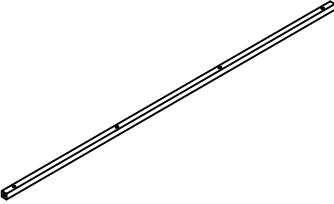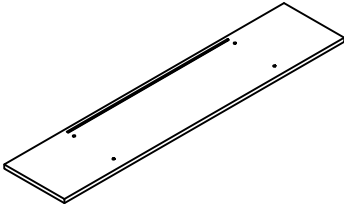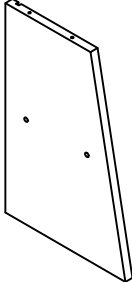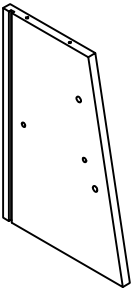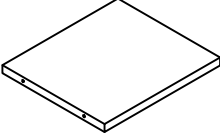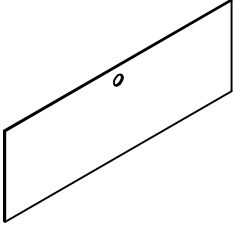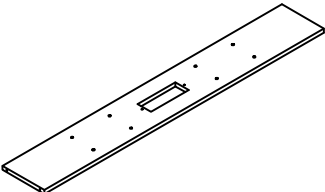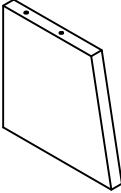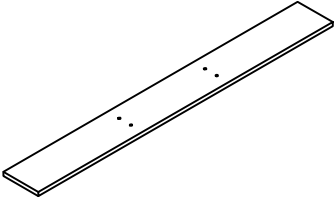①  Q'ty: 2	②  Q'ty: 1	③  Q'ty: 1
④  Q'ty: 1	⑤  Q'ty: 1	⑥  Q'ty: 1
⑦  Q'ty: 1	⑧  Q'ty: 2	⑨  Q'ty: 1
⑩  Q'ty: 1	⑪  Q'ty: 2	⑫  Q'ty: 1

Parts Identification2/2

Not actual size

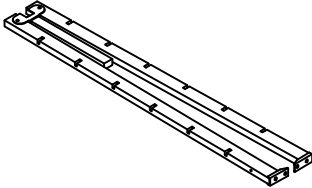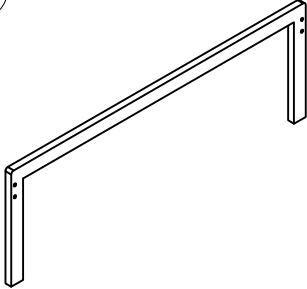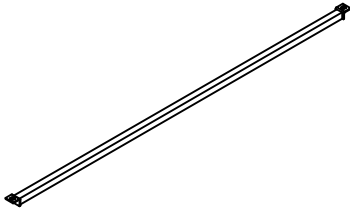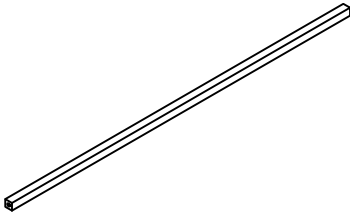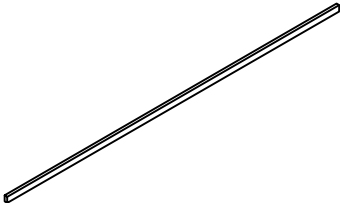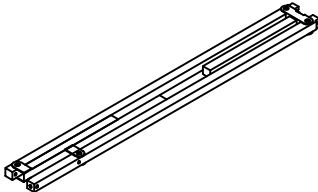⑬  Q'ty: 2	⑭  Q'ty: 1	⑮  Q'ty: 2
⑯  Q'ty: 1	⑰  Q'ty: 12	⑱  Q'ty: 1

Hardware List



Ø1/4" x 11mm

(A)


x 8+1



Ø1/4" x 28mm

(B)


x 7+1



Ø1/4" x 32mm

(C)

x 12+1



Ø1/4" x 50mm

(D)


x 7+1



Ø5 x 38mm

(E)


x 28+2



Ø1/4" x 14mm

(F)

x 8+1



M4

(G)

x 1



M3


(H)

x 1




(I)

x 2

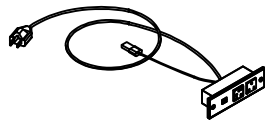


(J)

x 1

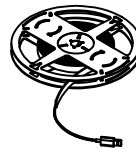

(K)

x 1




(L)

x 2



(M)

x 1




(N)

x 24+2




(O)

x 1



(P)

x 1



Ø4 x 12mm

(Q)

x 2+1

★ In many cases, we include additional hardware. So after following the assembly instructions, don't worry if there are still extra pieces left over-they're included as a "just in case" for your convenience.

★ NOTE: When assembling, please do not tighten the screws one by one completely first, until making sure that all the corresponding screws are placed in the right positions.


Self equipped tools



Cross Screwdriver
(Not included)




Slotted Screwdriver
(Not included)

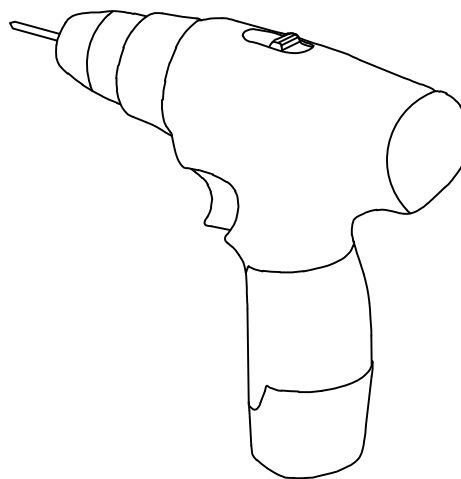

Electric Drill
(Not included)

Parts Identification

Not actual size

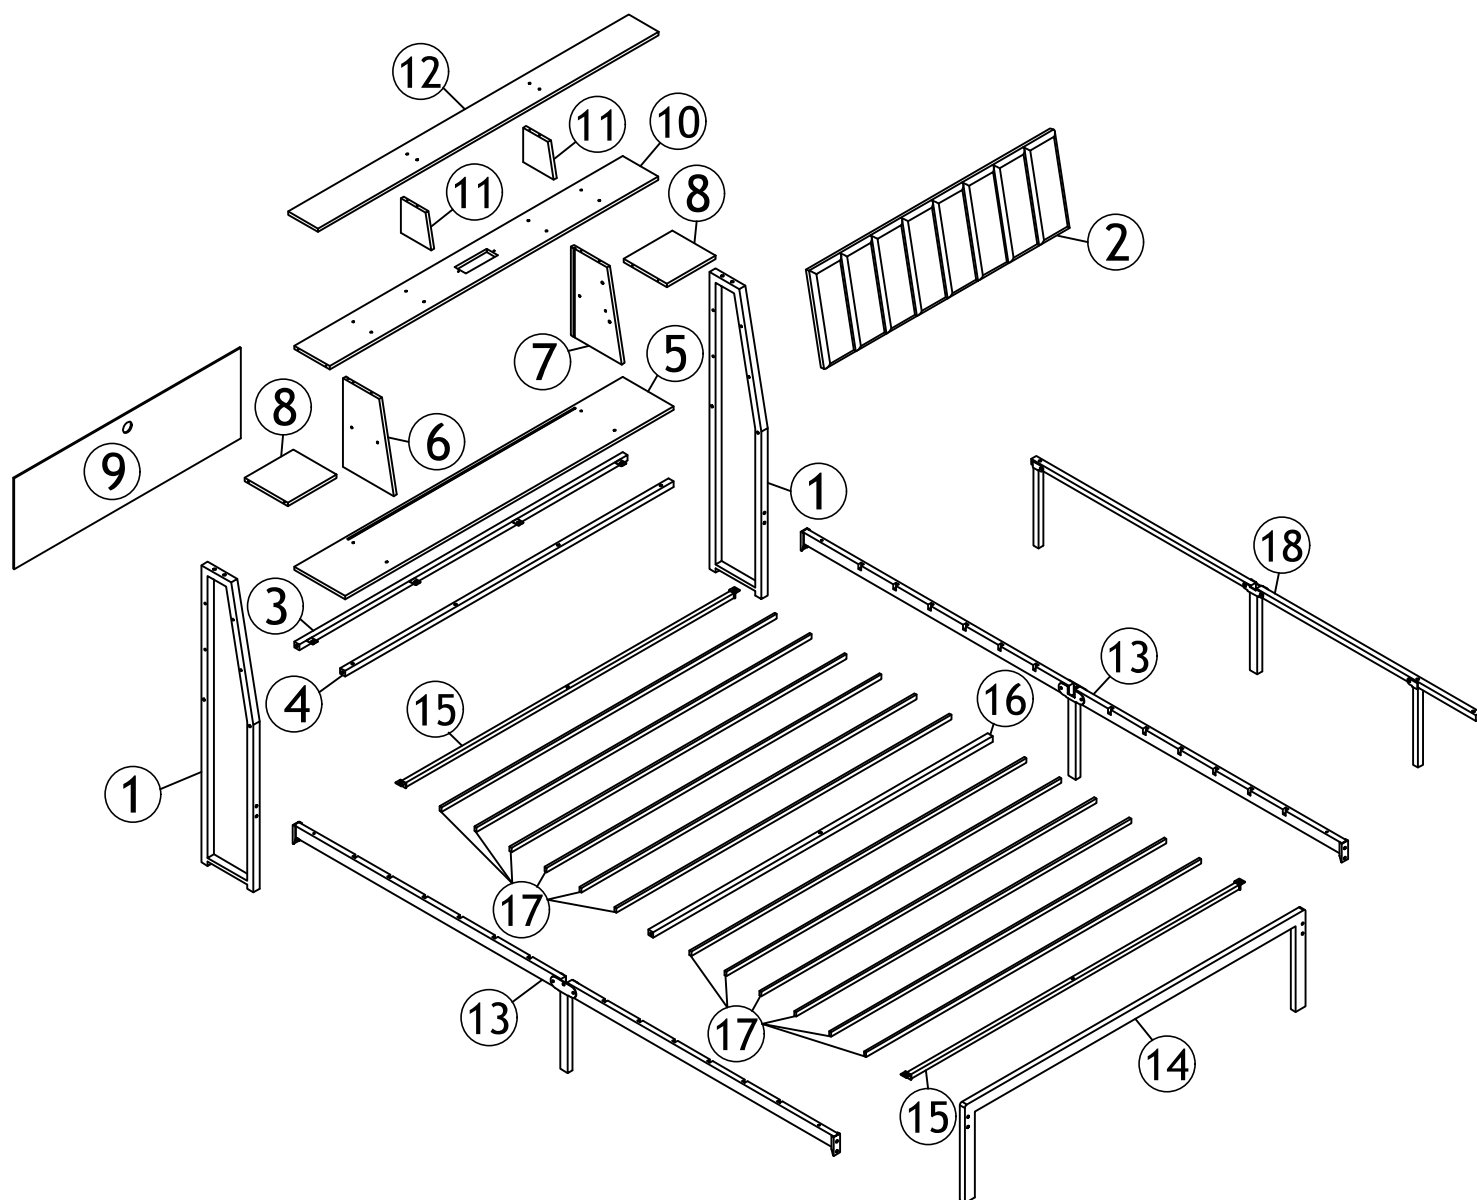

ATTENTION



When you begin each step, please check carefully whether you have taken the correct parts, so as not to use the wrong parts and cause the wrong assembly.

We recommend that you do not rush to tighten the screws. It is best to tighten the screws to two-thirds first, after all the steps are finished and the position is well adjusted, then tighten.

STEP 1



Please tighten the bolts to 80% first, and tighten all bolts 100% after all parts are assembled.





Ø1/4" x 50mm

(D)


x 4



M4

(G)



x 1

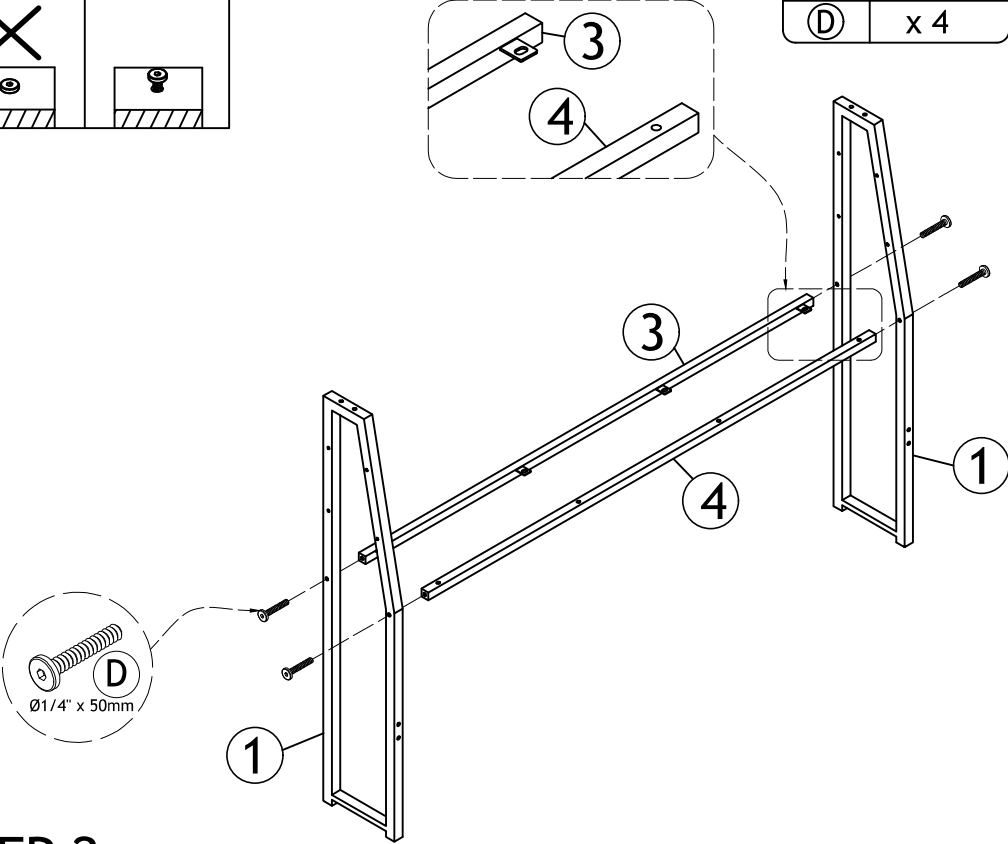


STEP 2



Please tighten the bolts to 80% first, and tighten all bolts 100% after all parts are assembled.






M3

(H)


x 1



Ø5 x 38mm

(E)

x 4

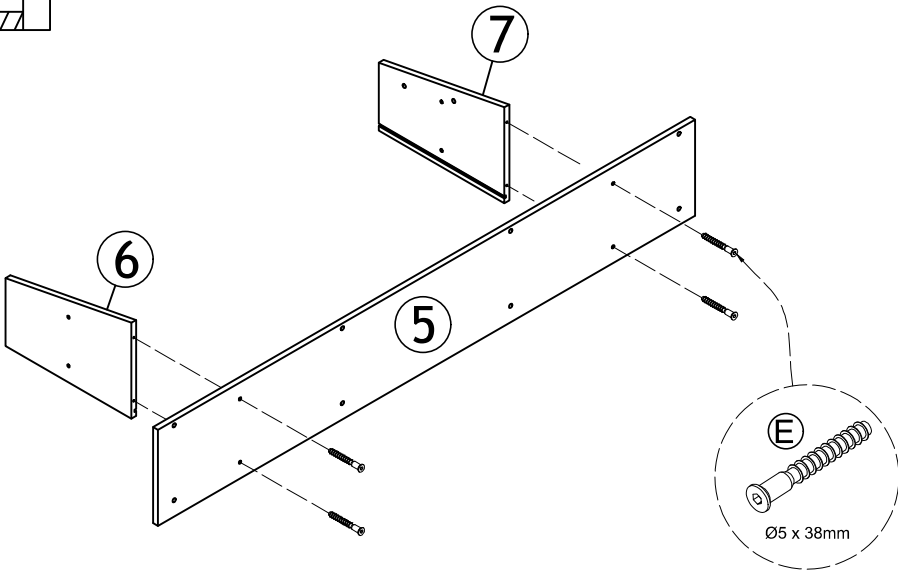

STEP 3



Please tighten the bolts to 80% first, and tighten all bolts 100% after all parts are assembled.





Ø1/4" x 11mm

(B) x 4




Ø1/4" x 11mm

(A) x 4



M4

(G) x 1

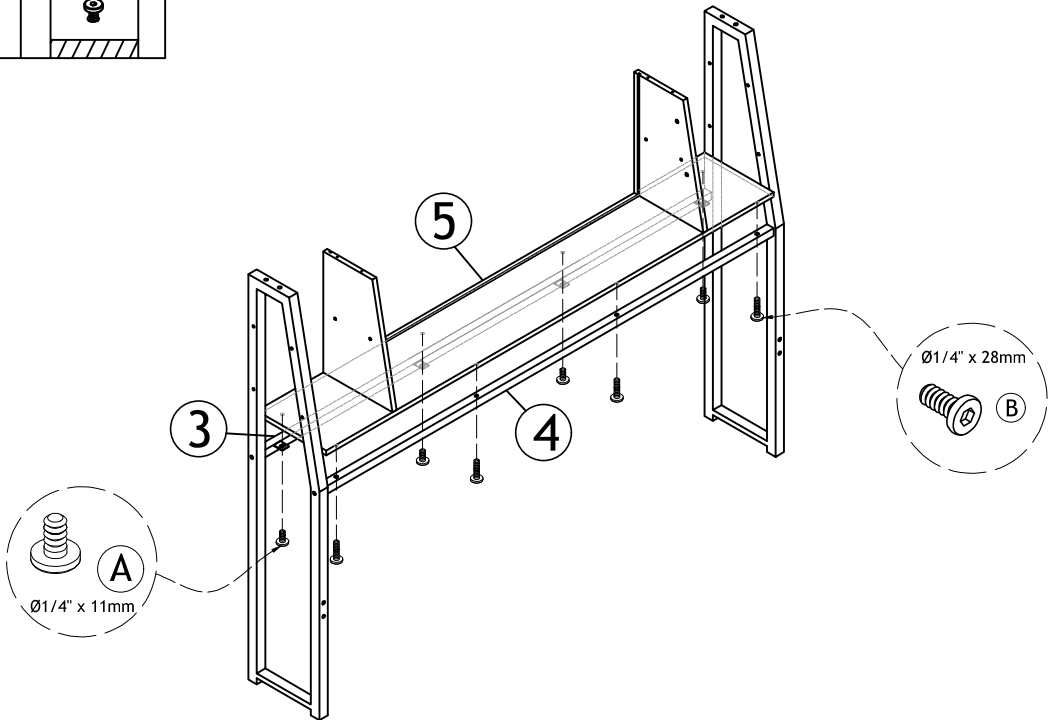

STEP 4



Please tighten the bolts to 80% first, and tighten all bolts 100% after all parts are assembled.






M3

(H) x 1




Ø5 x 38mm

(E) x 8

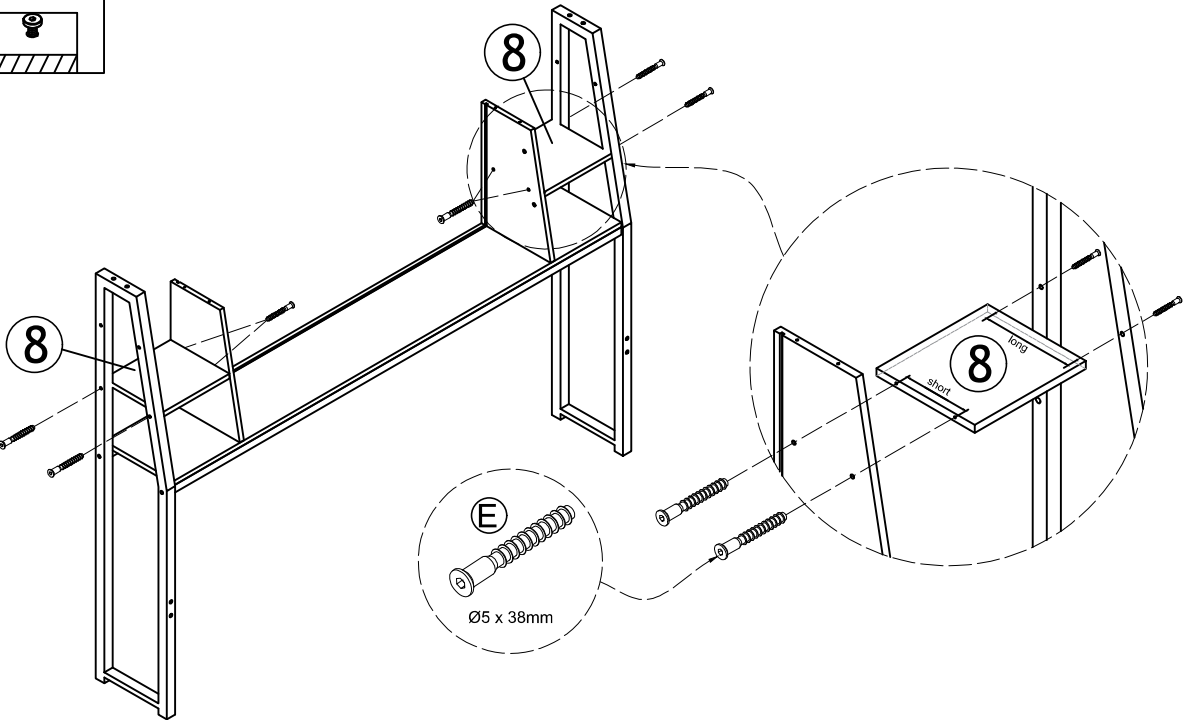

STEP 5

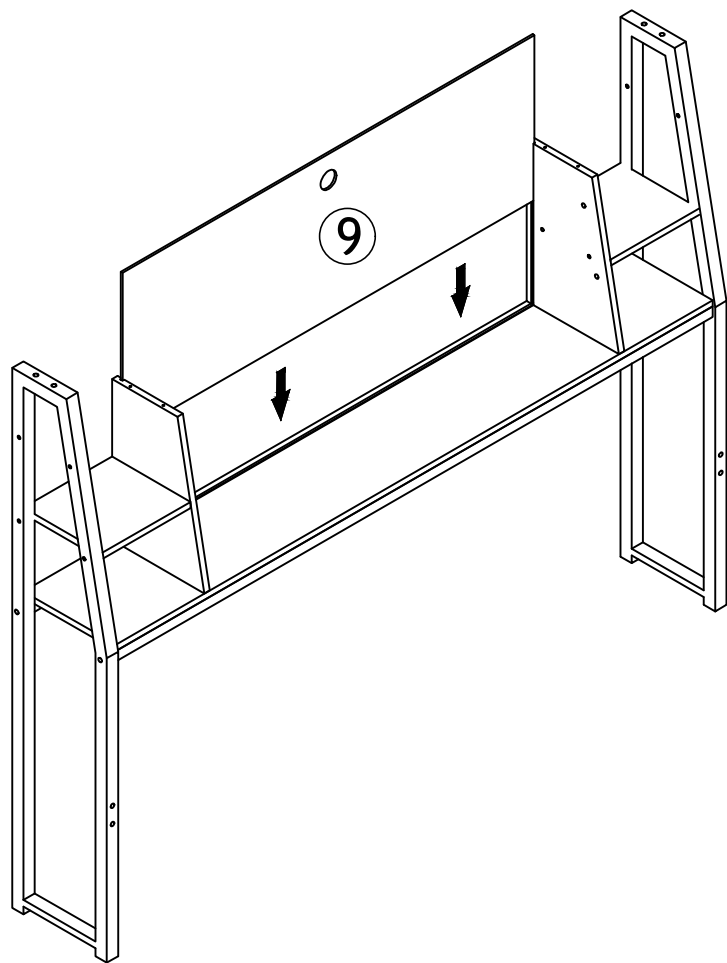

STEP 6



Please tighten the bolts to 80% first, and tighten all bolts 100% after all parts are assembled.






M3

(H)	x 1
-----	-----



Ø5 x 38mm


(E)	x 4
-----	-----

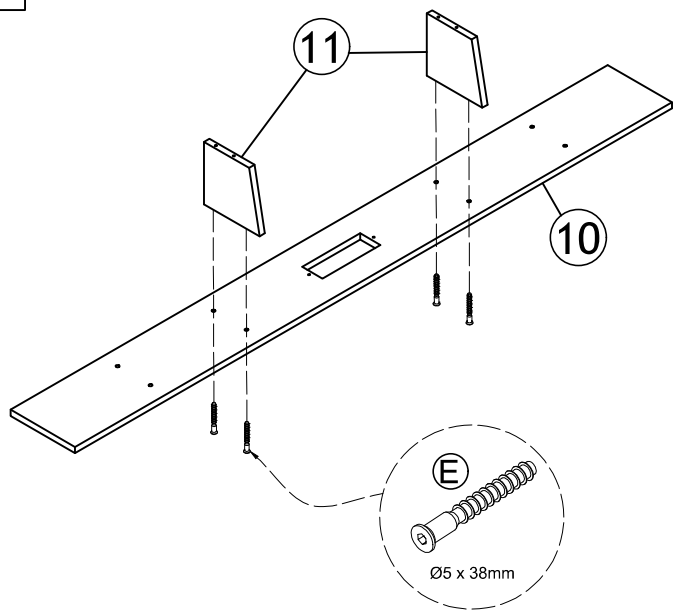

STEP 7



Please tighten the bolts to 80% first, and tighten all bolts 100% after all parts are assembled.

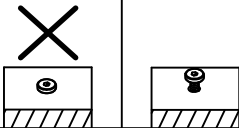




M3




x 1




Ø5 x 38mm



x 8

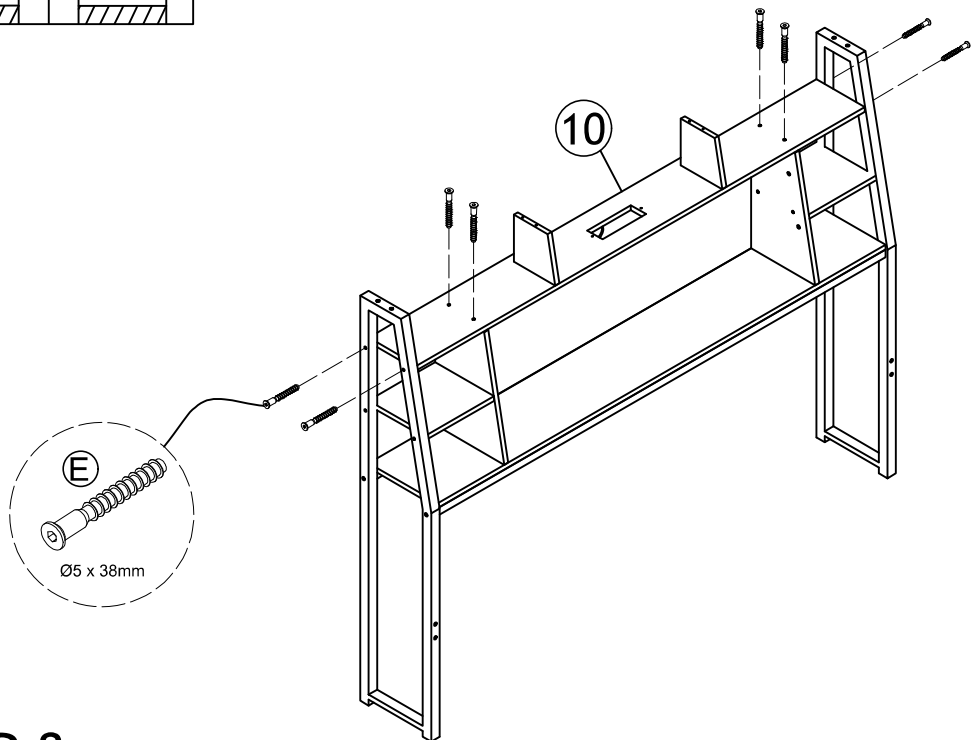


STEP 8

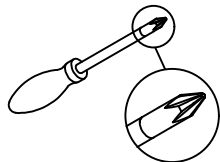



J

x 1




Ø4 x 12mm



x 2



Please screws in this step need to be tightened

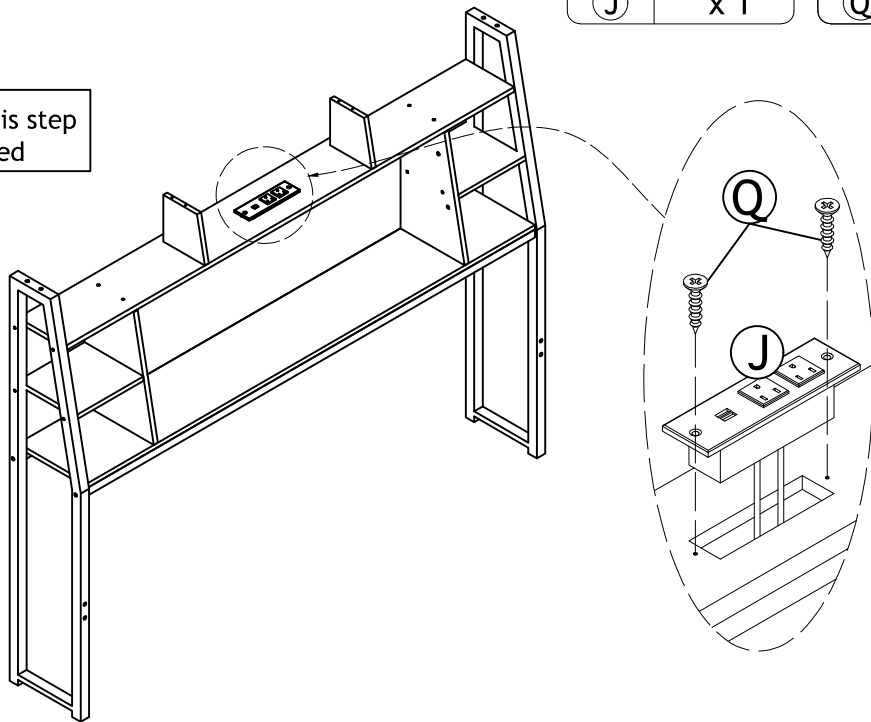

STEP 9



Please tighten the bolts to 80% first, and tighten all bolts 100% after all parts are assembled.





M3

(H)

x 1



Ø5 x 38mm

(E)

x 4



Ø1/4" x 32mm

(C)


x 4



M4

(G)

x 1

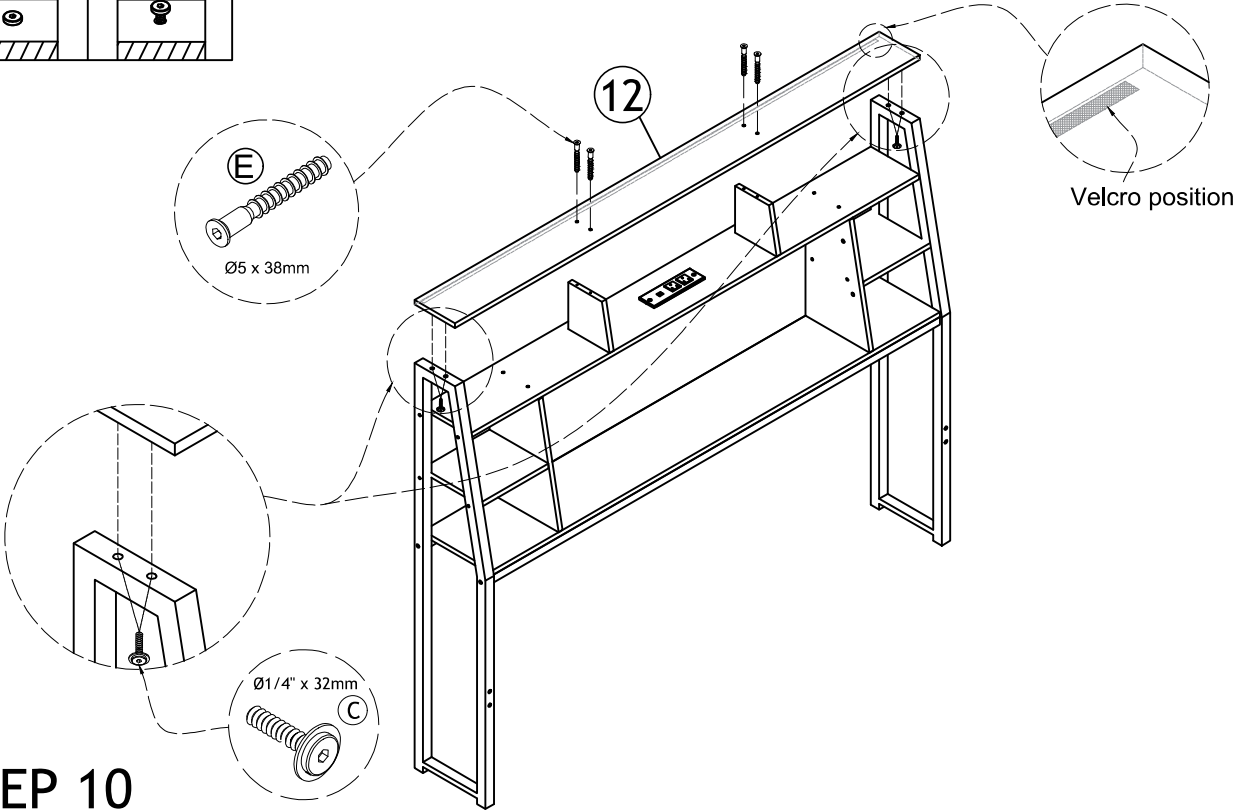

STEP 10



Please tighten the bolts to 80% first, and tighten all bolts 100% after all parts are assembled.





Ø1/4" x 11mm

(A)


x 4



M4


(G)

x 1

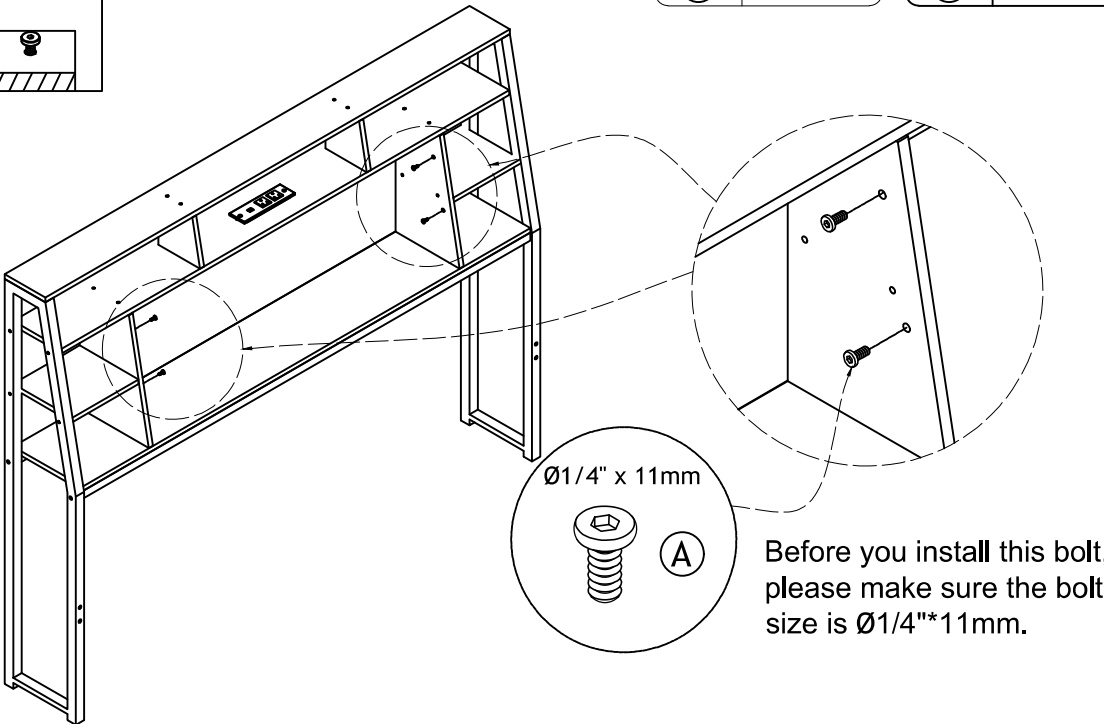


STEP 11


Before you install this bolt, please make sure the bolt size is $\varnothing 1/4"$ *14mm.

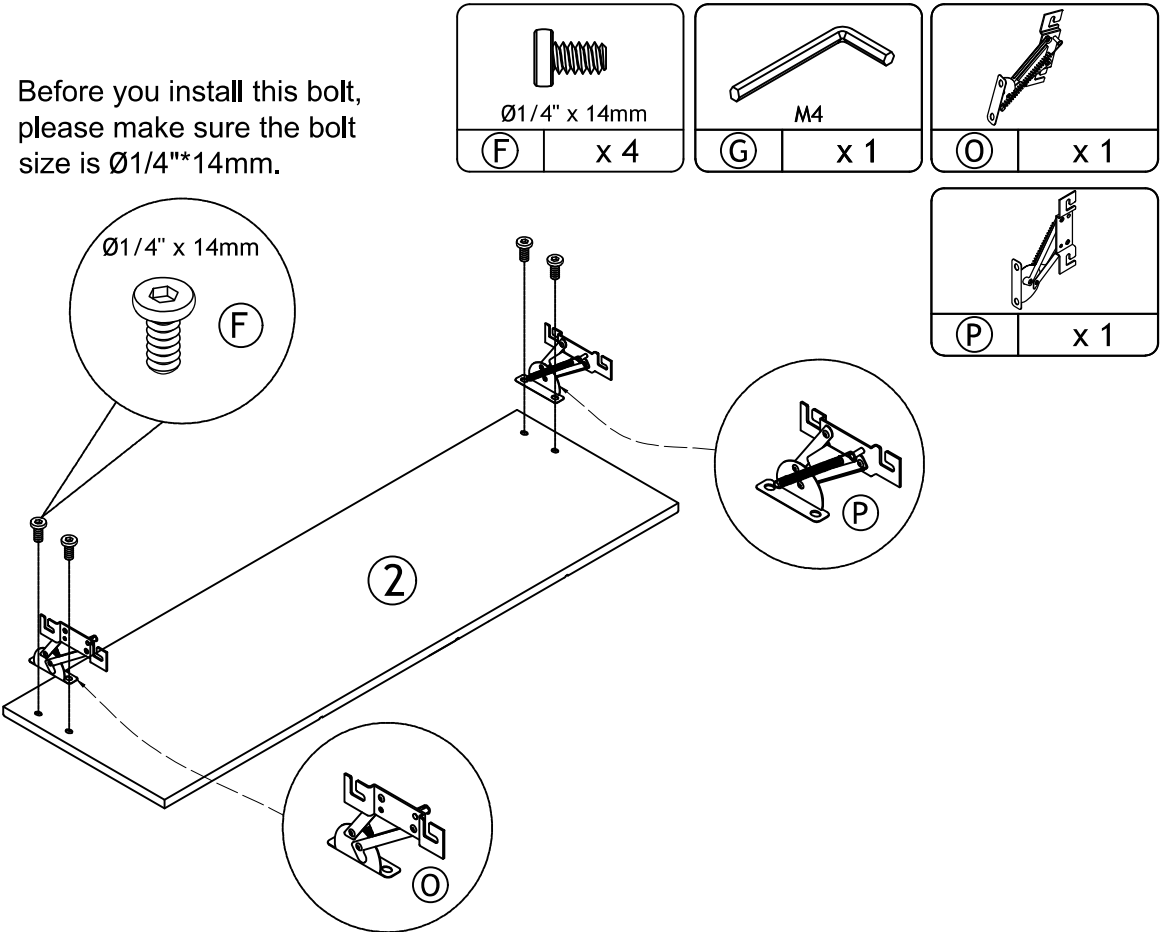

STEP 12

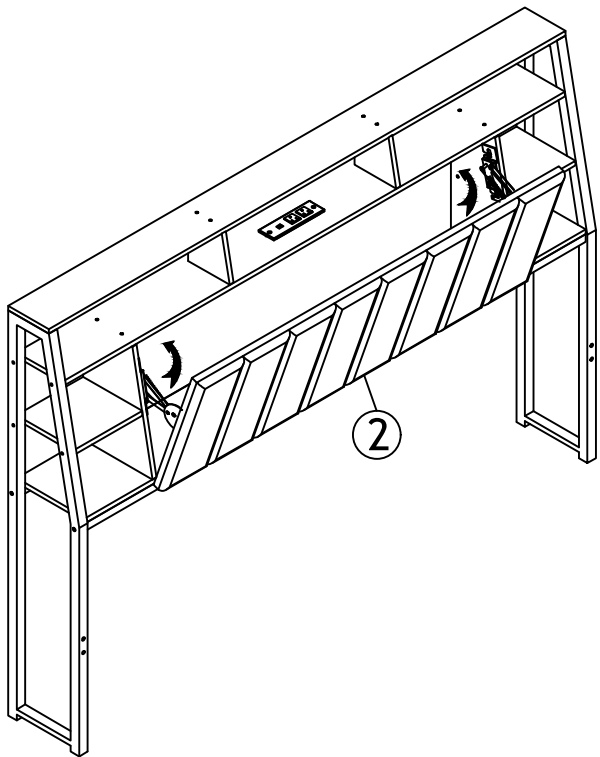

STEP 13

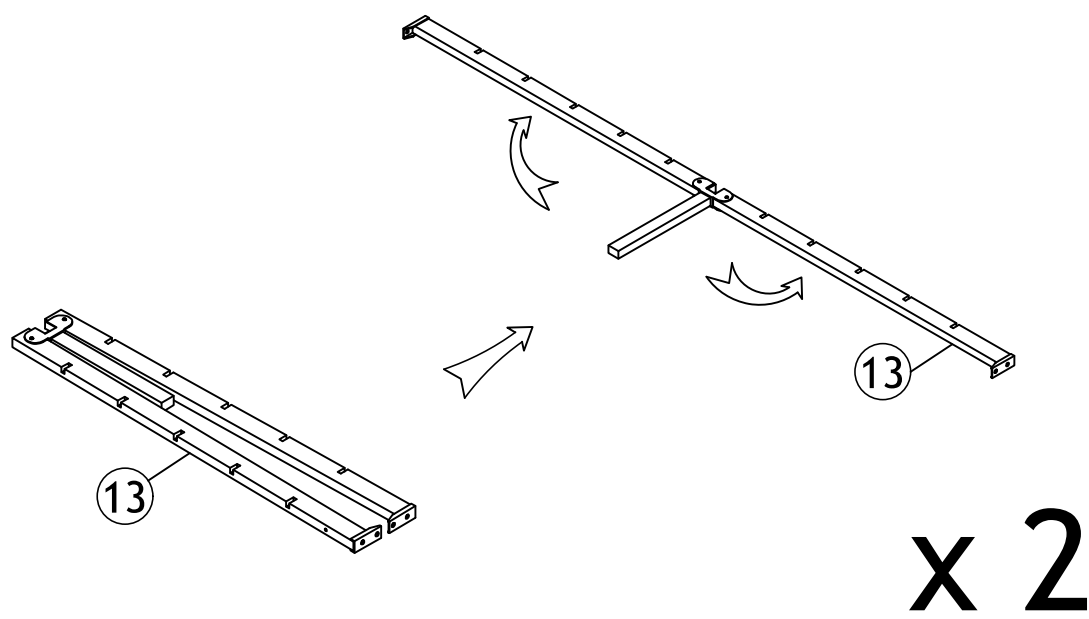

Expand the folded portion

STEP 14



Please tighten the bolts to 80% first, and tighten all bolts 100% after all parts are assembled.






Ø1/4" x 32mm

C	x 8
---	-----



M4



G	x 1
---	-----

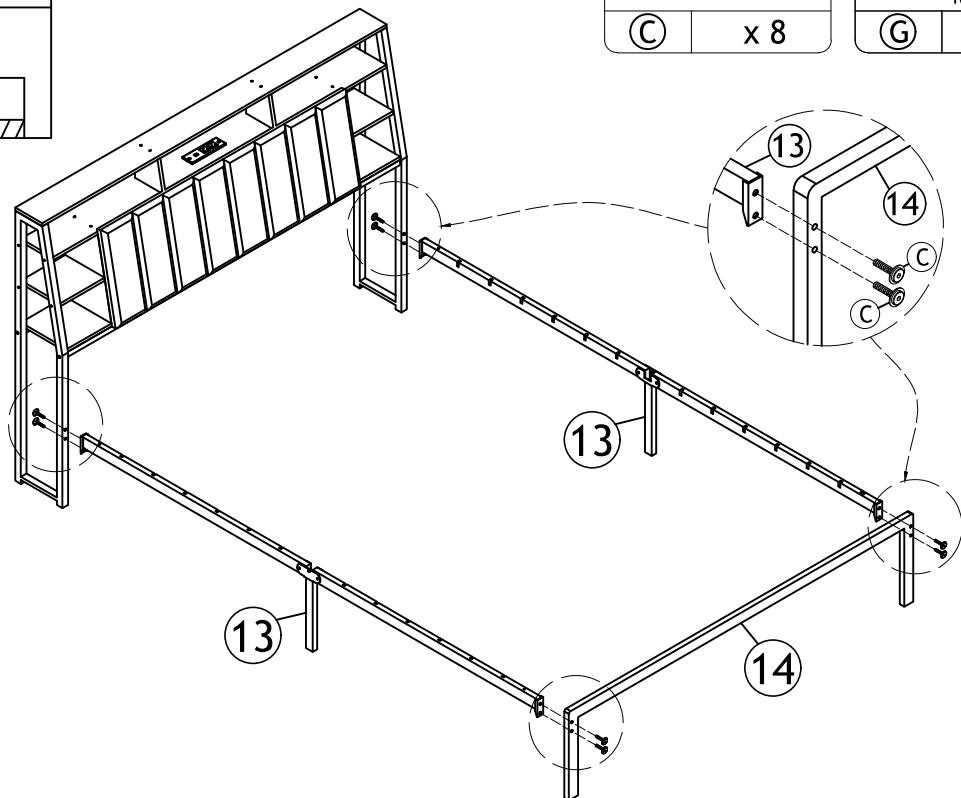

STEP 15



Please tighten the bolts to 80% first, and tighten all bolts 100% after all parts are assembled.






Ø1/4" x 14mm

(F)	x 4
-----	-----




M4

(G)	x 1
-----	-----

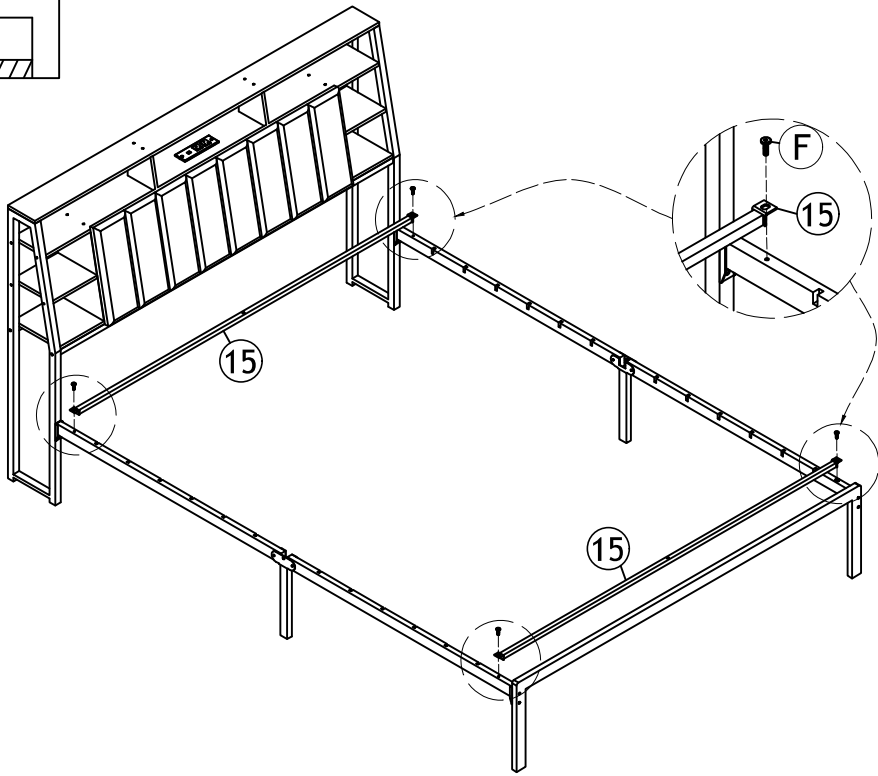

STEP 16

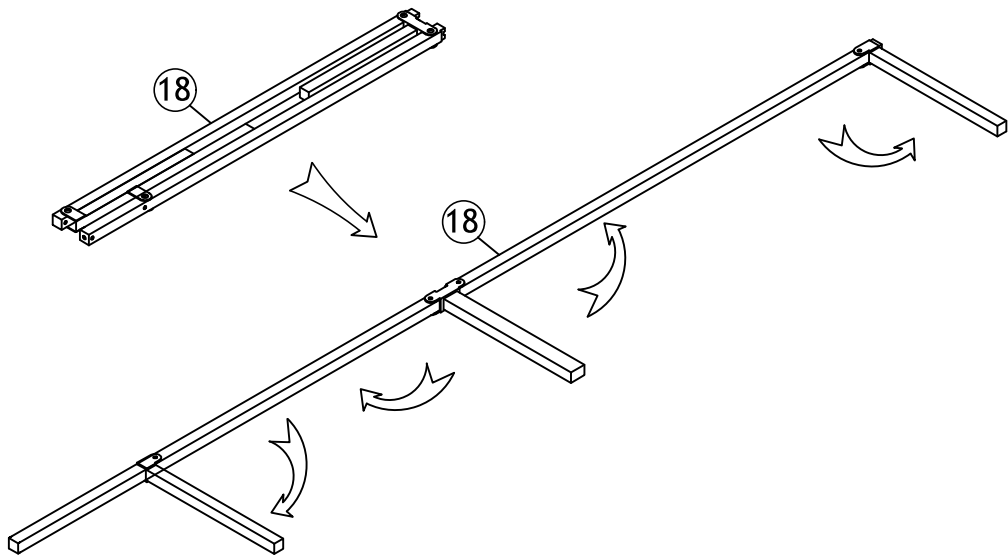

Expand the folded portion

STEP 17



Please tighten the bolts to 80% first, and tighten all bolts 100% after all parts are assembled.







Ø1/4" x 28mm

(B) x 1




Ø1/4" x 50mm

(D) x 2



M4

(G) x 1

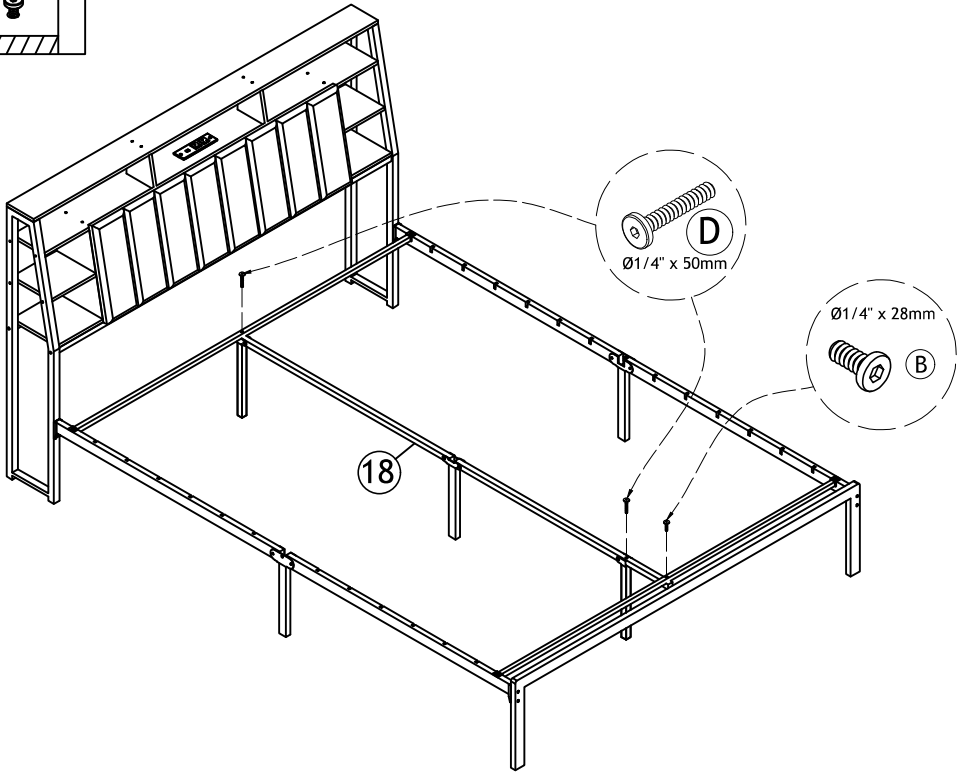


STEP 18



Please tighten the bolts to 80% first, and tighten all bolts 100% after all parts are assembled.







Ø1/4" x 50mm

(D) x 1




Ø1/4" x 28mm

(B) x 2




M4

(G) x 1

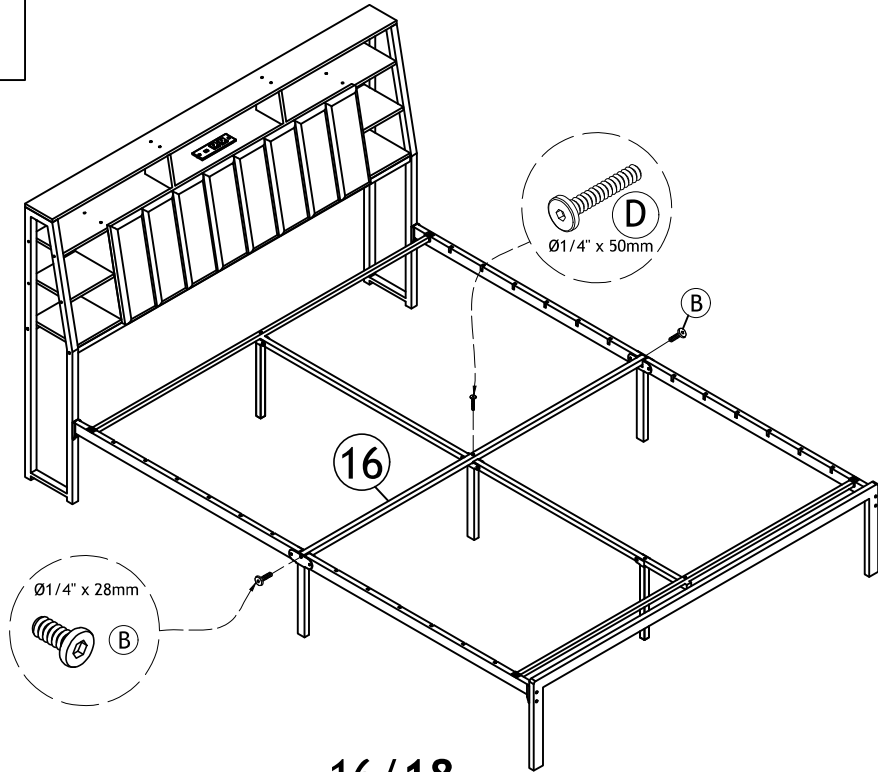


16/18


STEP 19

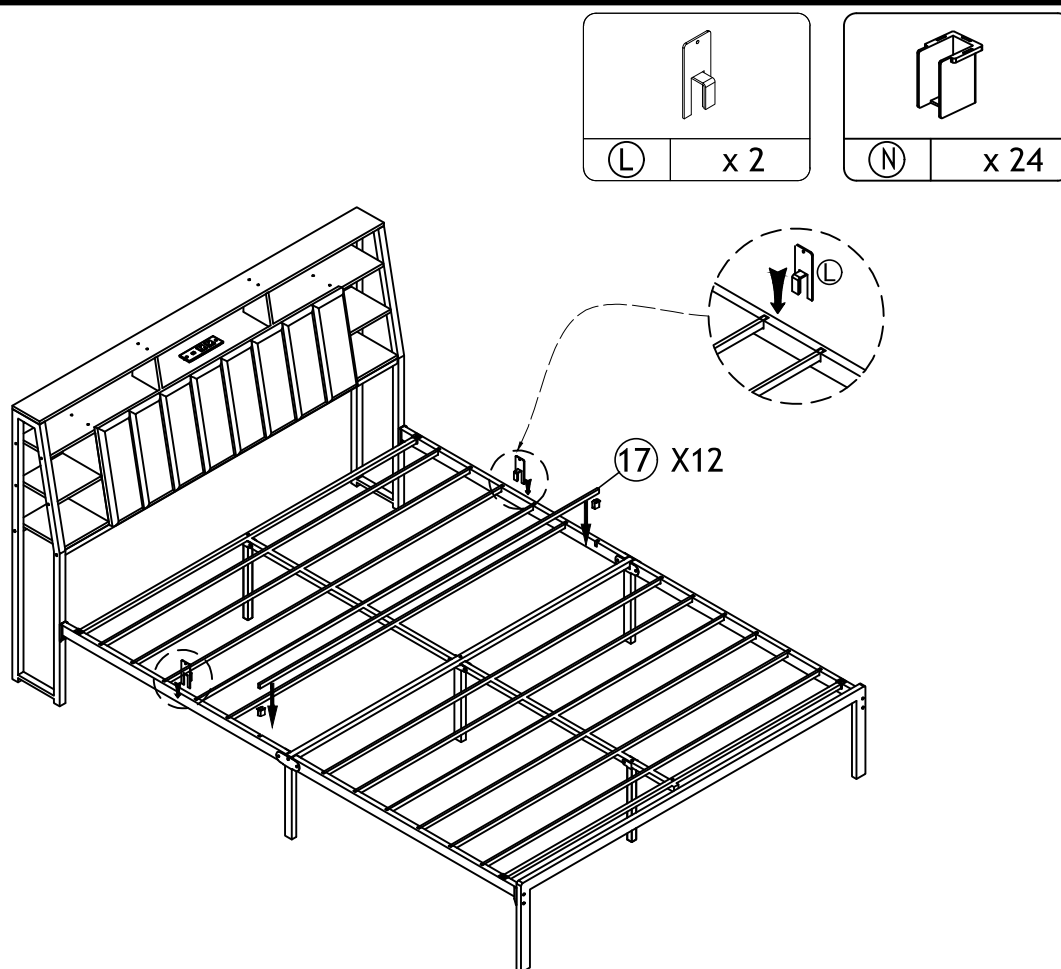


Assemble the slats

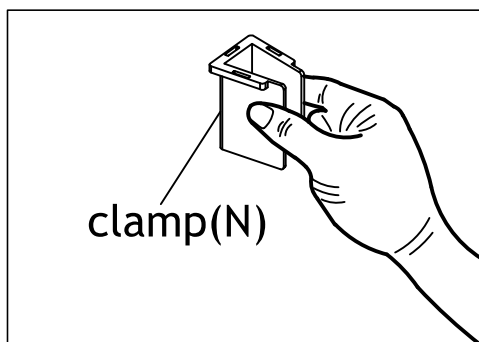


1. Squeeze the clamp (N) tightly.

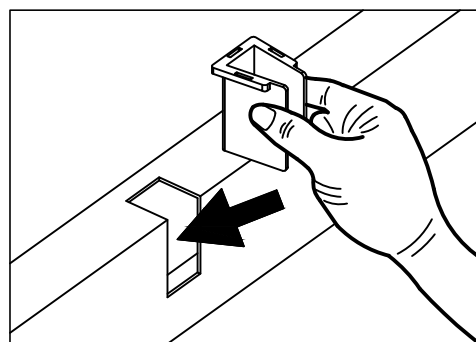

2. Put the clamp into the gaps.

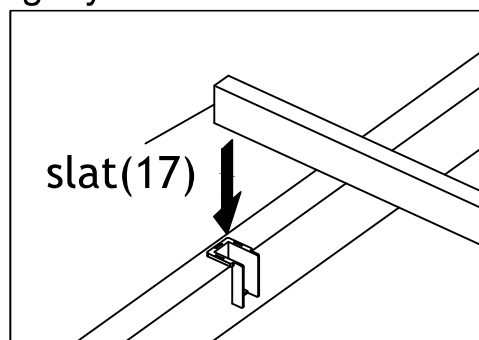

3. Put the slat (17) into the clamp.

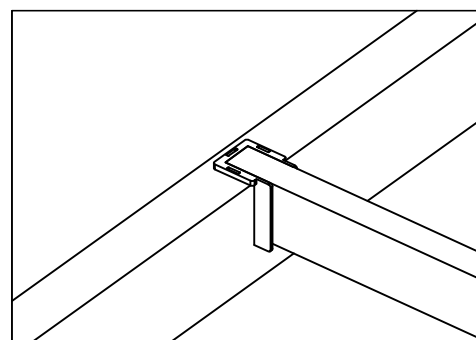

4. Finished.

STEP 20

