


Assembly Instructions

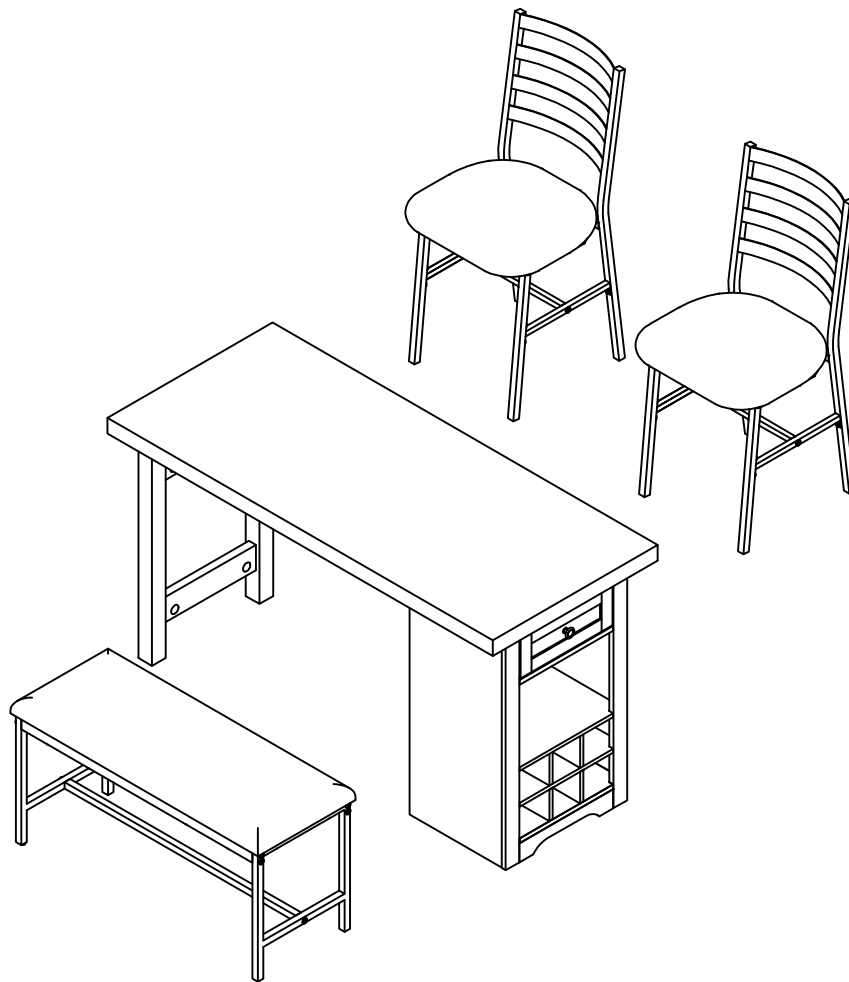


If you have any questions, please follow these steps(“Find Your Orders” - “Problem with the Order” - “Contact Seller”) to contact our customer service. Thanks!


NOTE: There are two packages A and B for this item. Please wait patiently if you only receive one for now

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

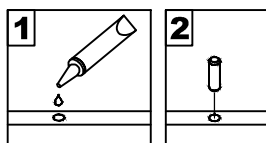


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

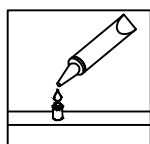


- VI. A Phillips head screwdriver is required for the assembly of this product .

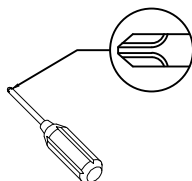


- VI. Power tools should not be used to assemble this product .

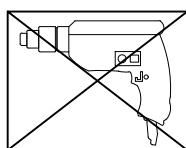


- VIII. Concealed hinges are three-way adjustable.

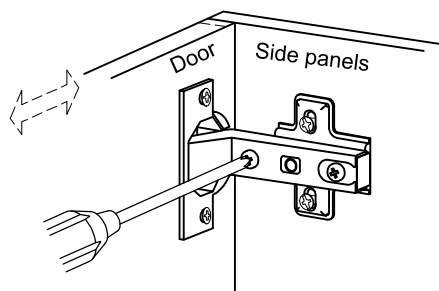

Horizontal
by screw adjustment

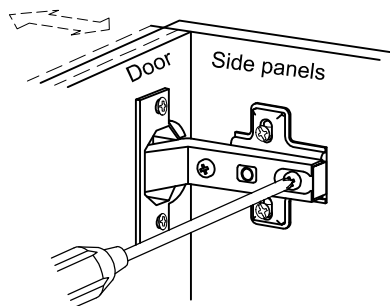


In-and-Out
by loosening the hinge-arm
mounting screw or via cam
adjustment


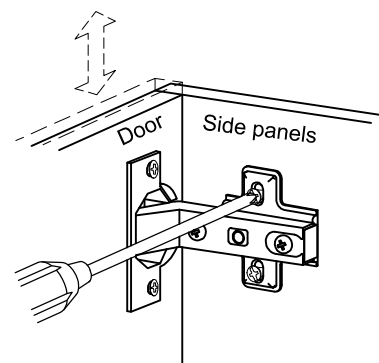



Vertical
Via slots in the mounting
plate or via cam adjustment

Parts List

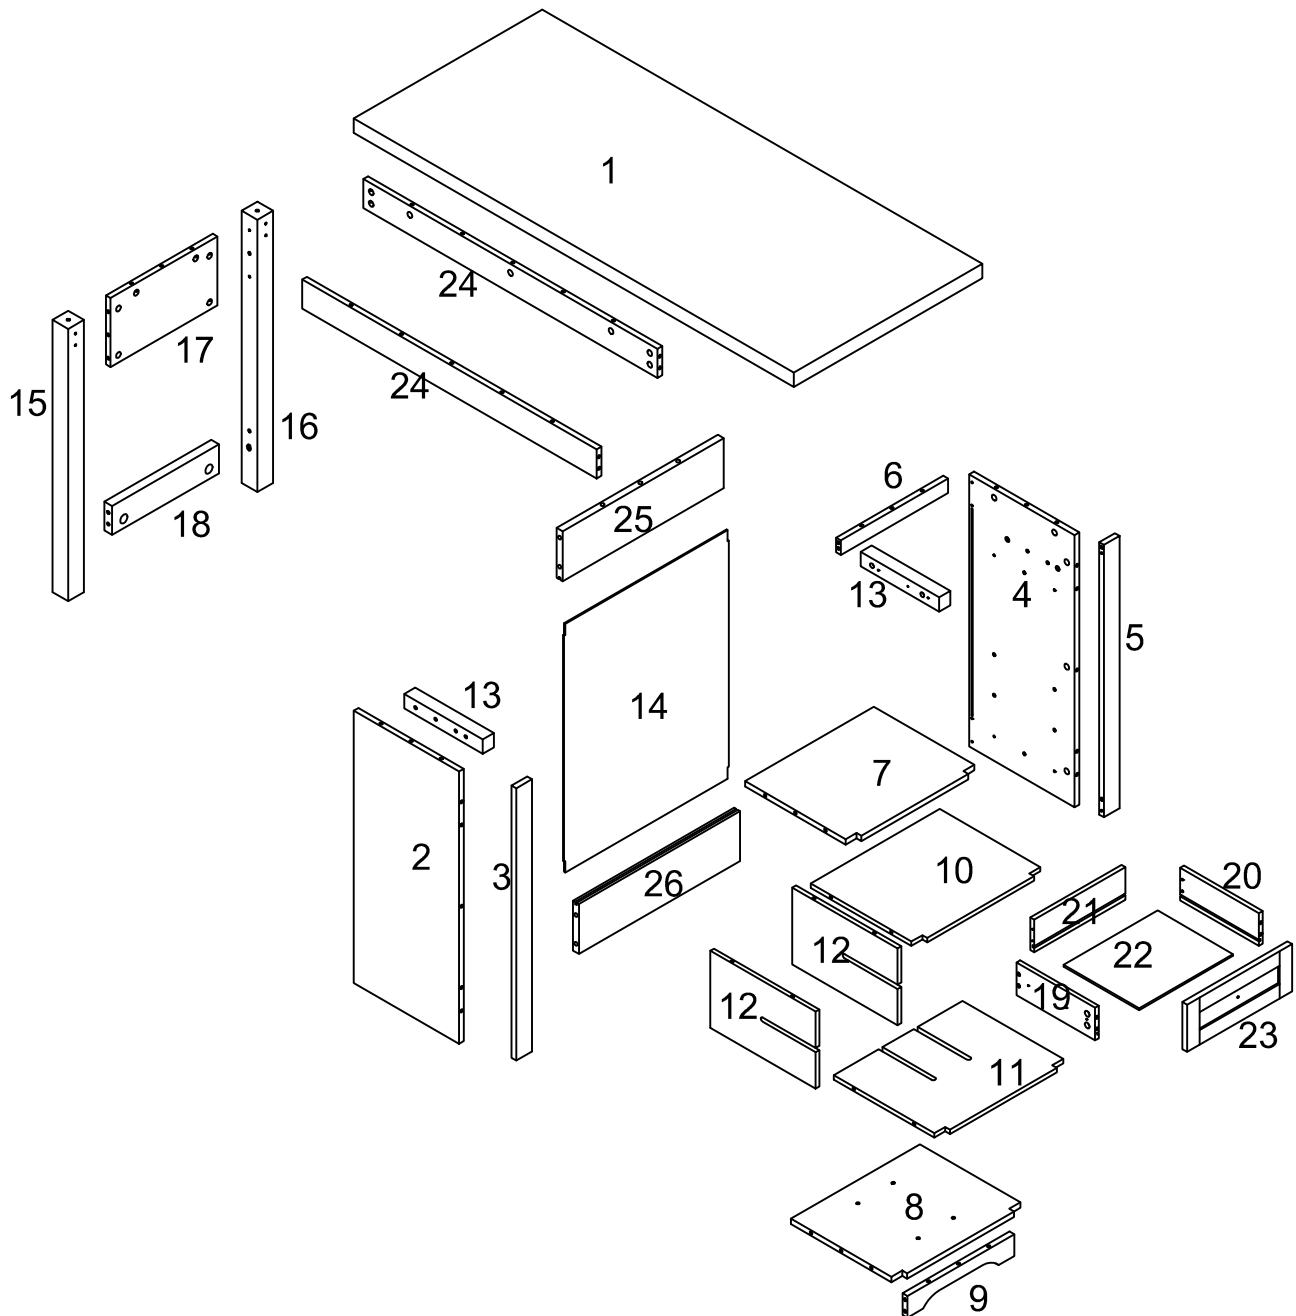

Hardware List


A		Ø8x30mm	Wooden dowel	48 pcs
B		Ø6x32mm	Cam Bolt	60 pcs
C		Ø15x11mm	Cam lock	56 pcs
D		Ø15x9mm	Cam lock	4 pcs
E		Ø30mm	Sticker	60 pcs
F		M 4	Hex Key	1 pc
G			Knob	1 pc
H		Ø4x9mm	Bolt	1 pc
I		M6*35mm	Bolt	4 pcs
J		10"	Drawer slides	1 Set
K		Ø3x12mm	Screw	18 pcs
L		Ø4x32mm	Screw	4 pcs
M			Wine glass rack	1 pc
N			Plastic wedge	6 pcs
O		Ø3x17mm	Screw	6 pcs
P		Ø8x65mm	Bolt	2 pcs
Q		M8	Arc-shaped washer	2 pcs
R		M8	Nut	2 pcs
S		M8	Wrench	1 pc
U		Ø38mm	Plastic cap	2 pcs
V			Glue tube	1 pc

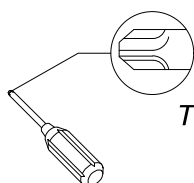


Philips head screwdriver required for assembly
(not included)

*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*



Step 1

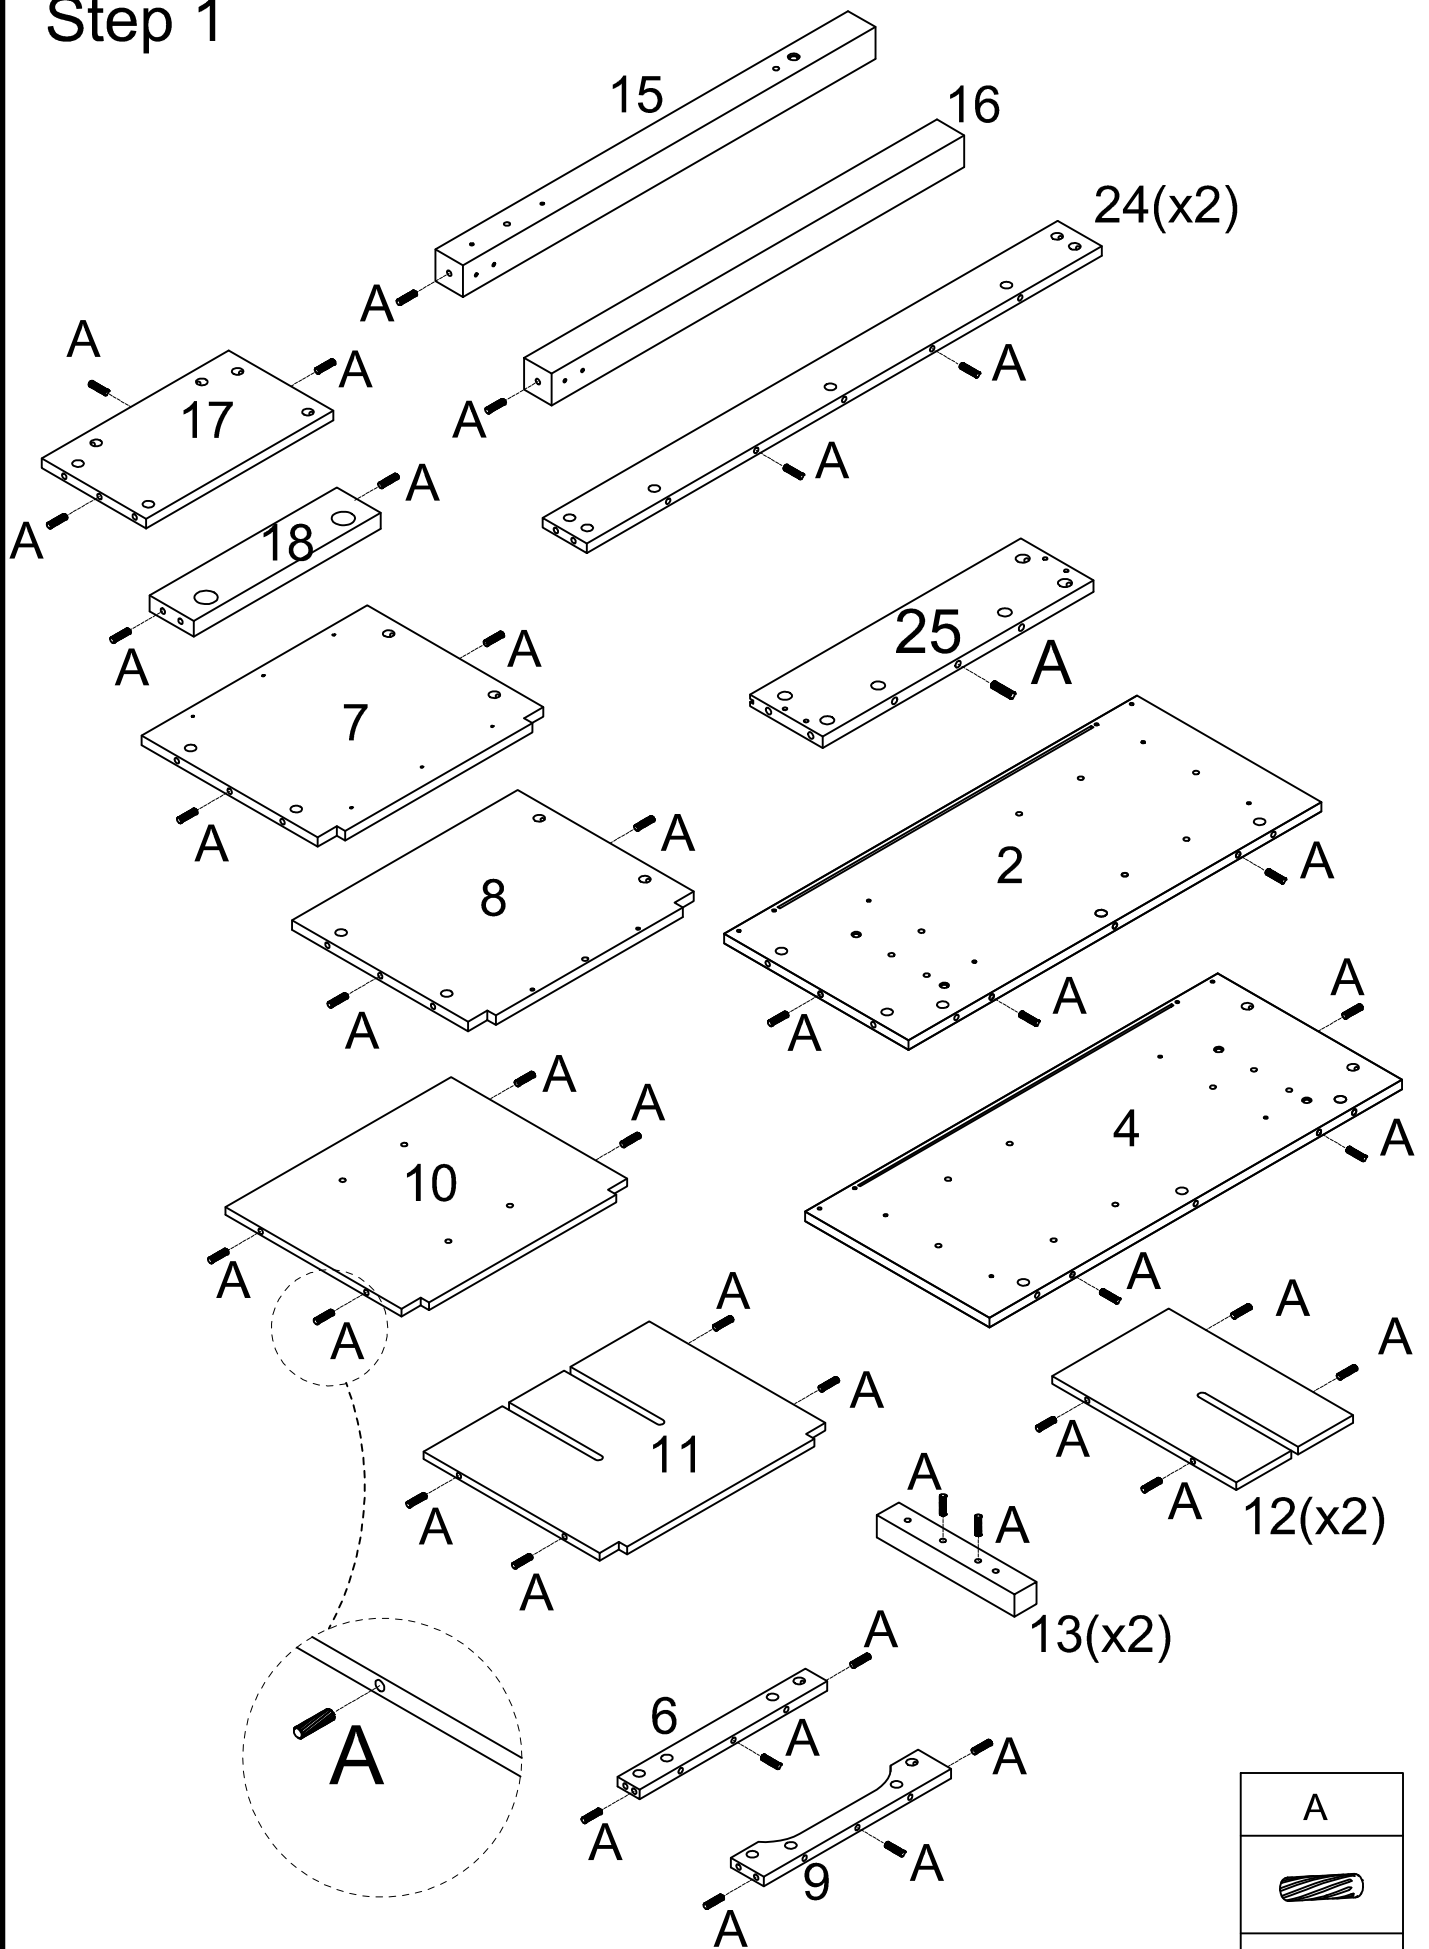

Step 2

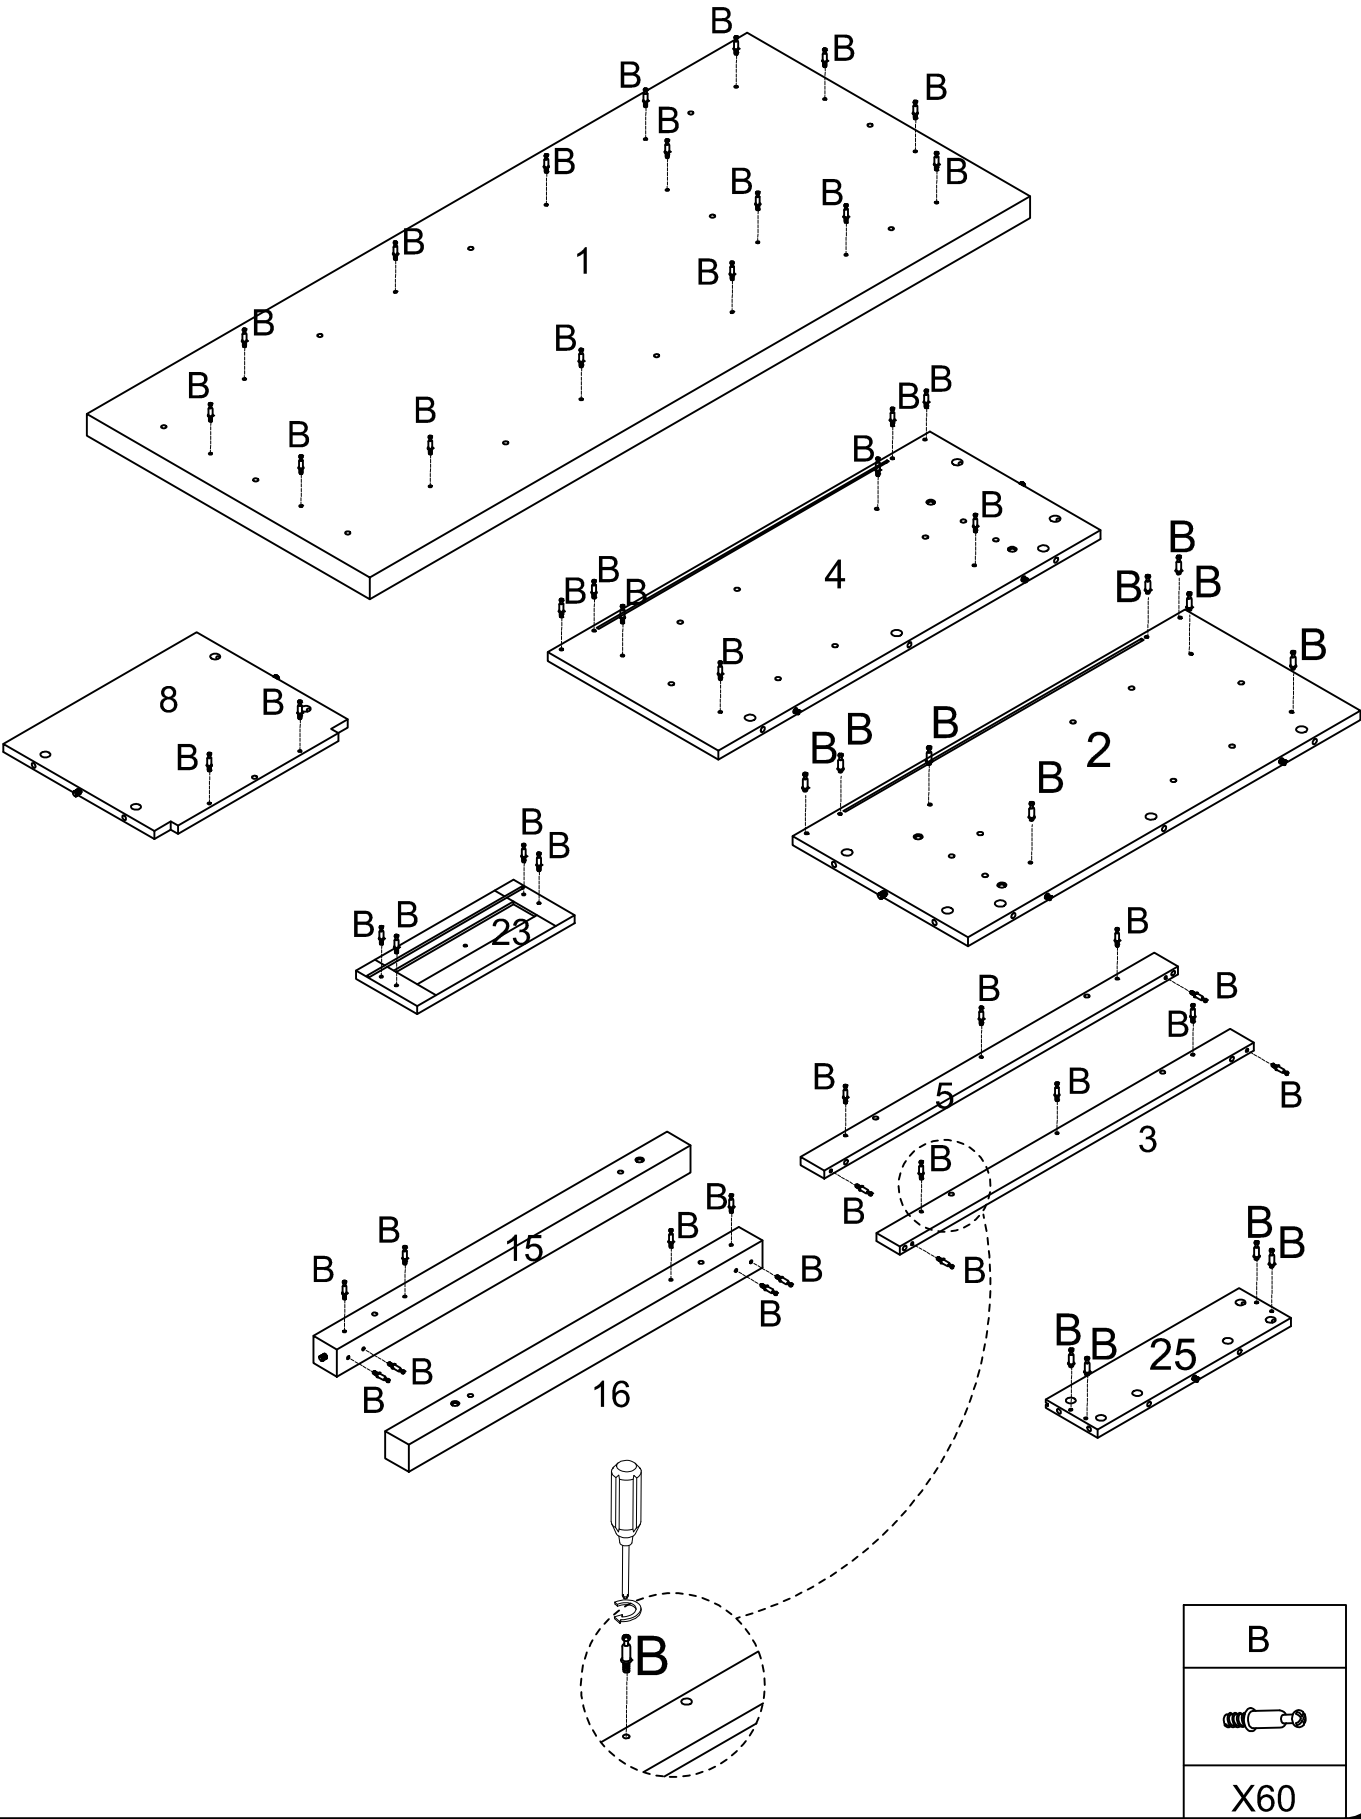


Step 3

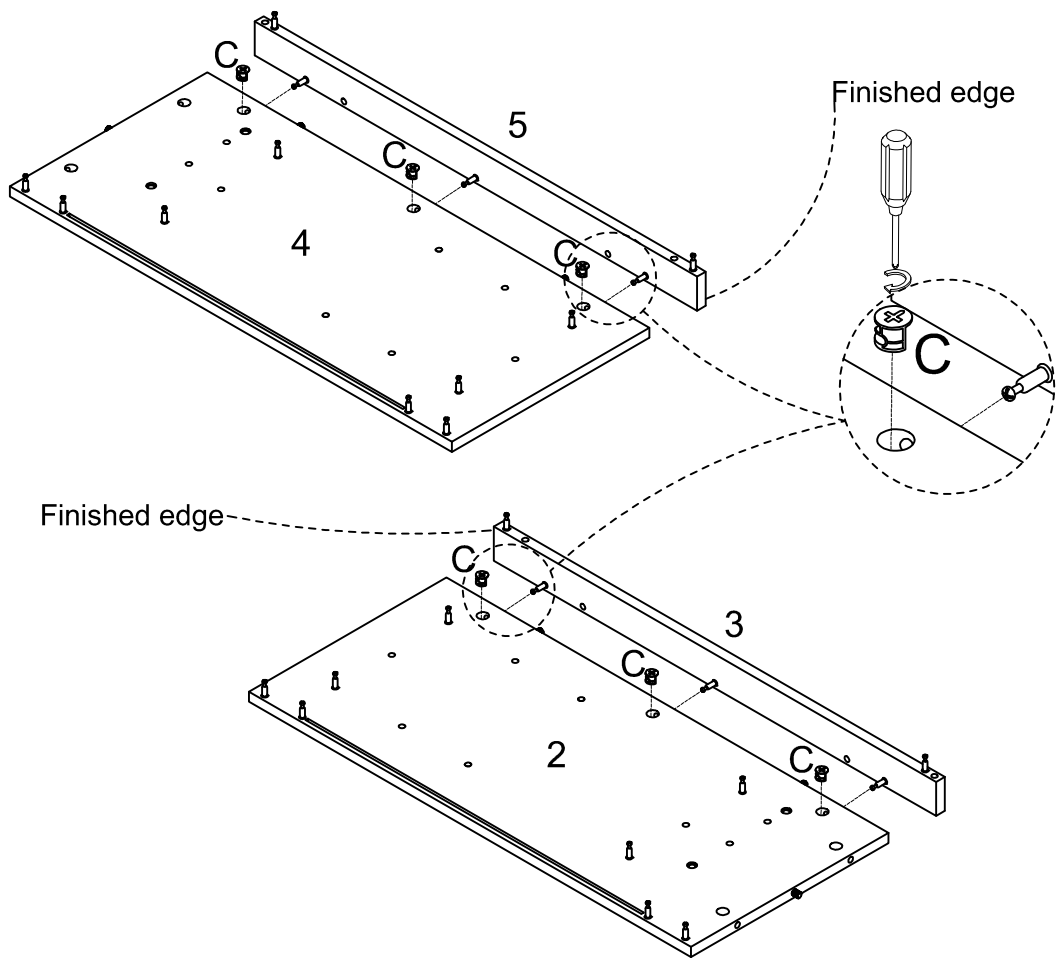

C
X6

Step 4

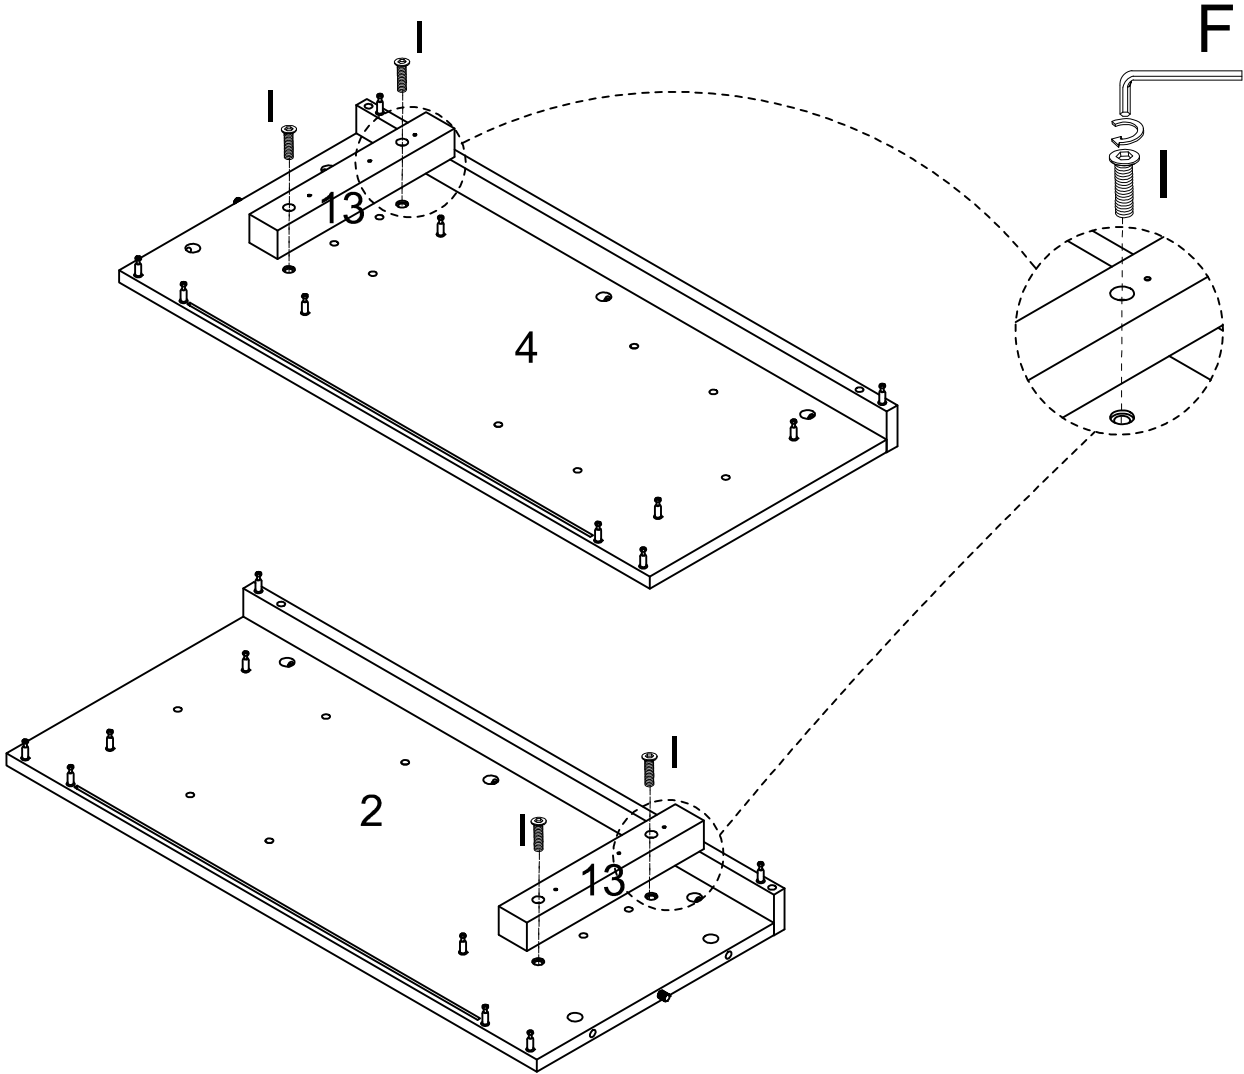


I	F
	
X4	X1


Step 5

Notice:

- 1.The drawer slider consists of two parts.The slider arm and the slider bracket .They assembled together in the package.
- 2.Pull the bracket out until it stopped, then you can find a plastic stopper in the side of the bracket.
- 3.Lift up the plastic stopper as the picture show, you can pull the bracket all out.

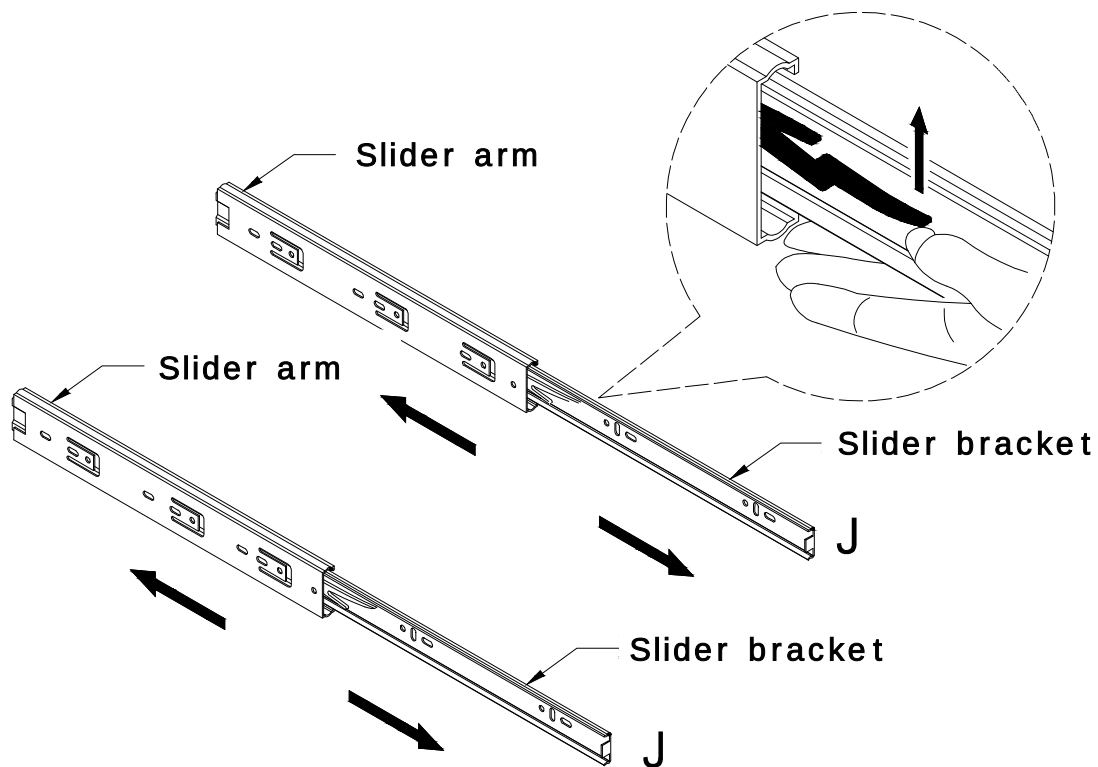



Step 6

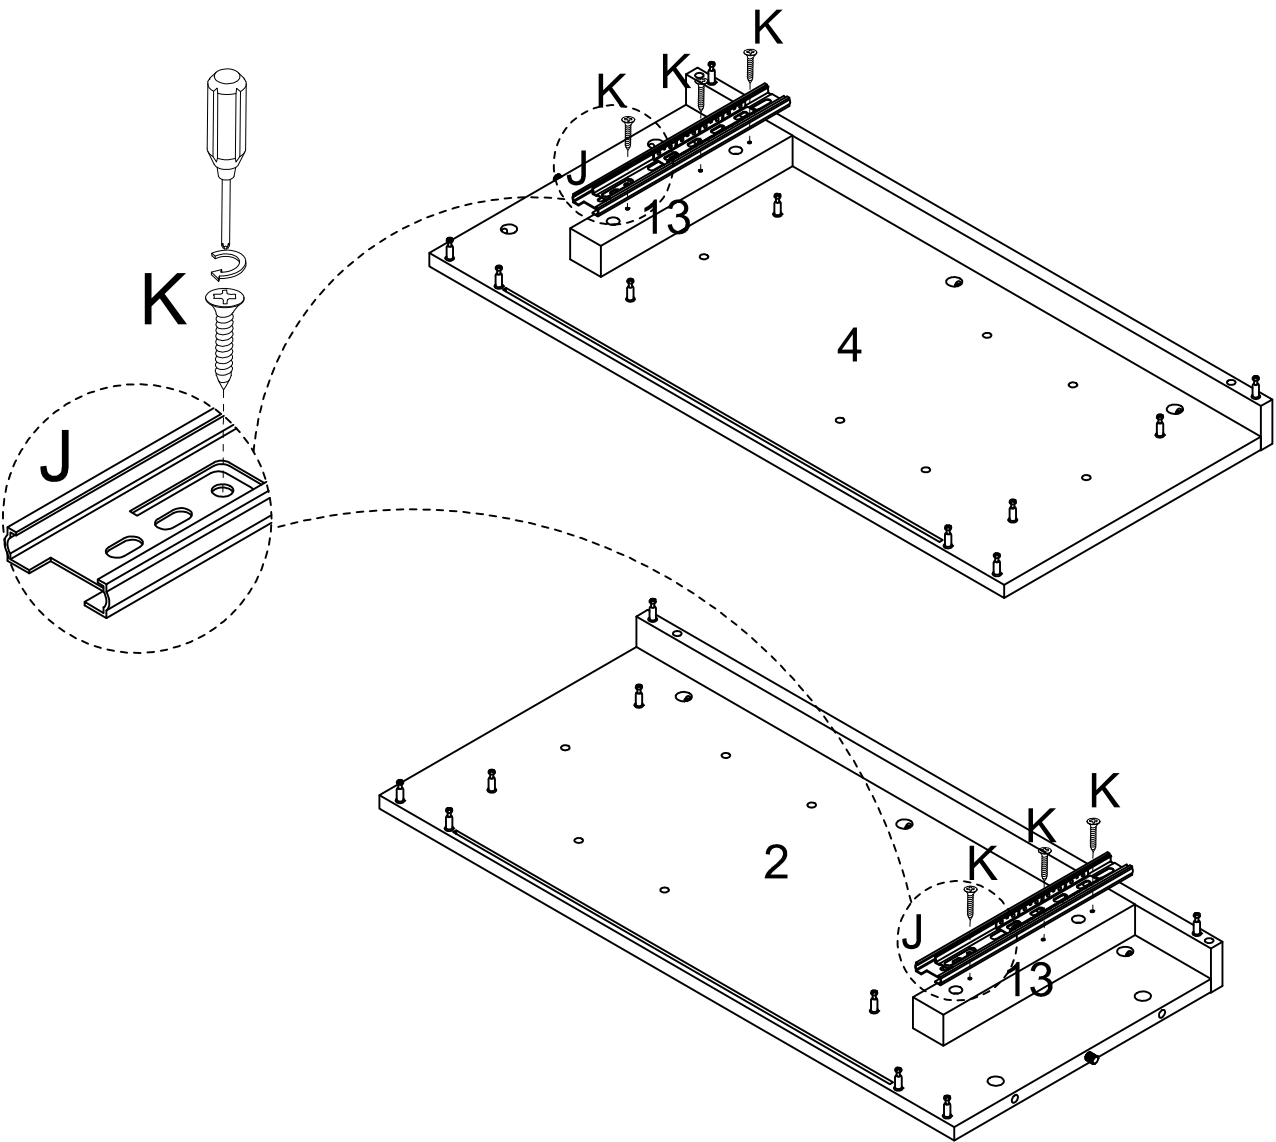



K	J
	
X6	X2

Step 7

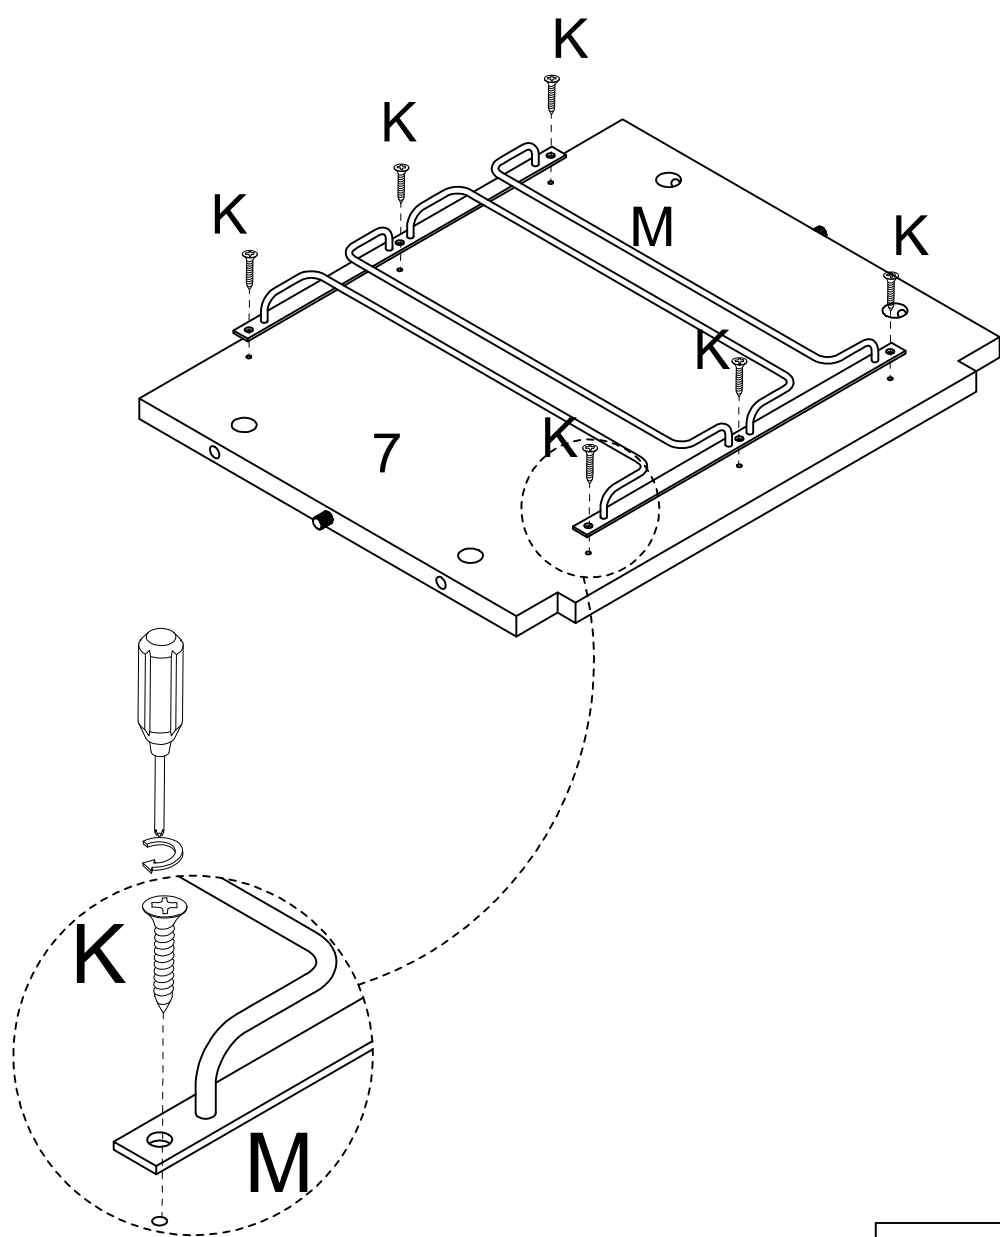

K	M
	
X6	X1



Step 8

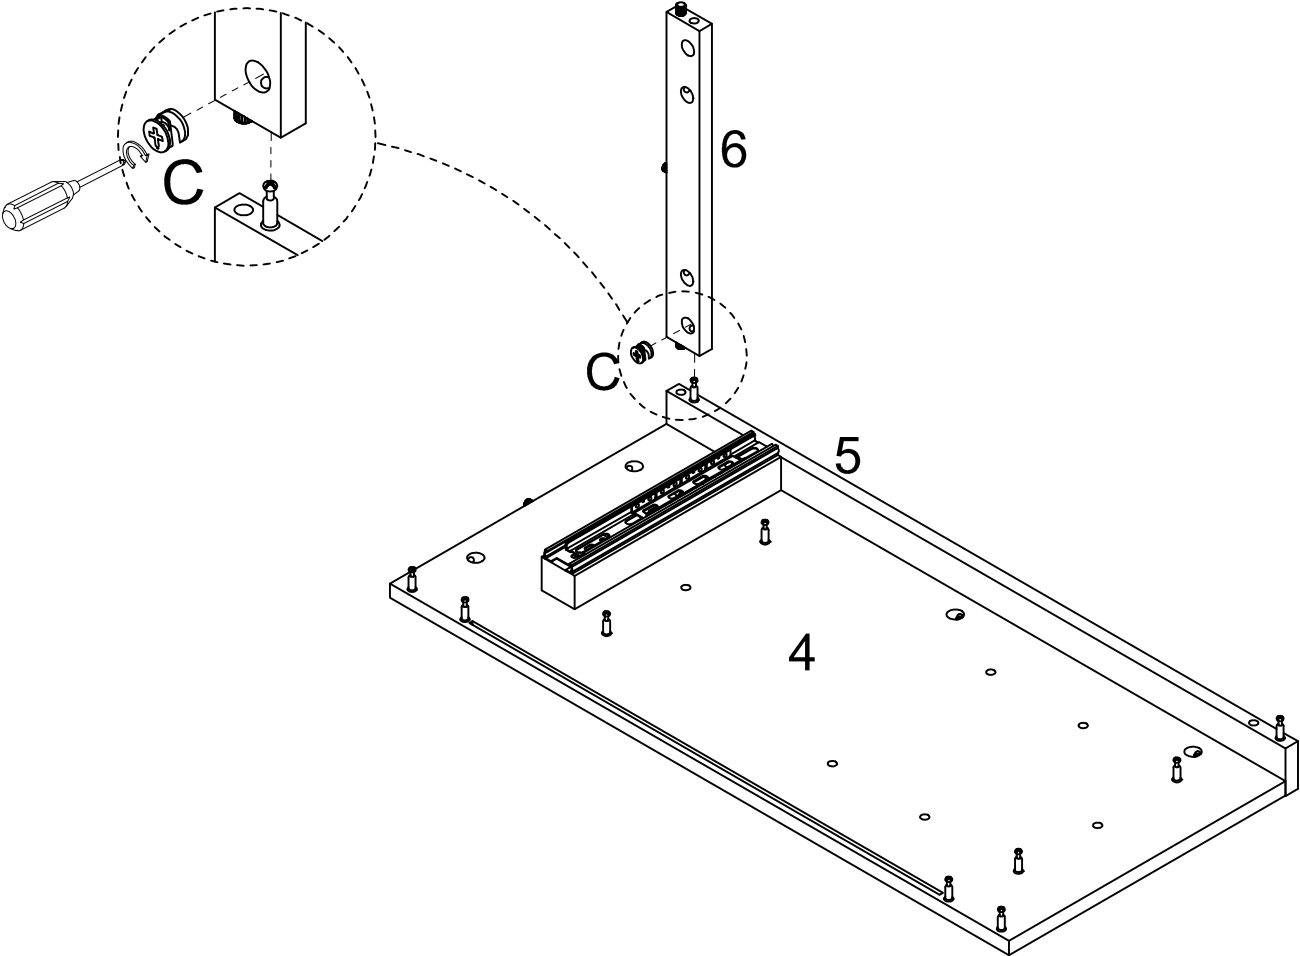

C

X1



Step 9

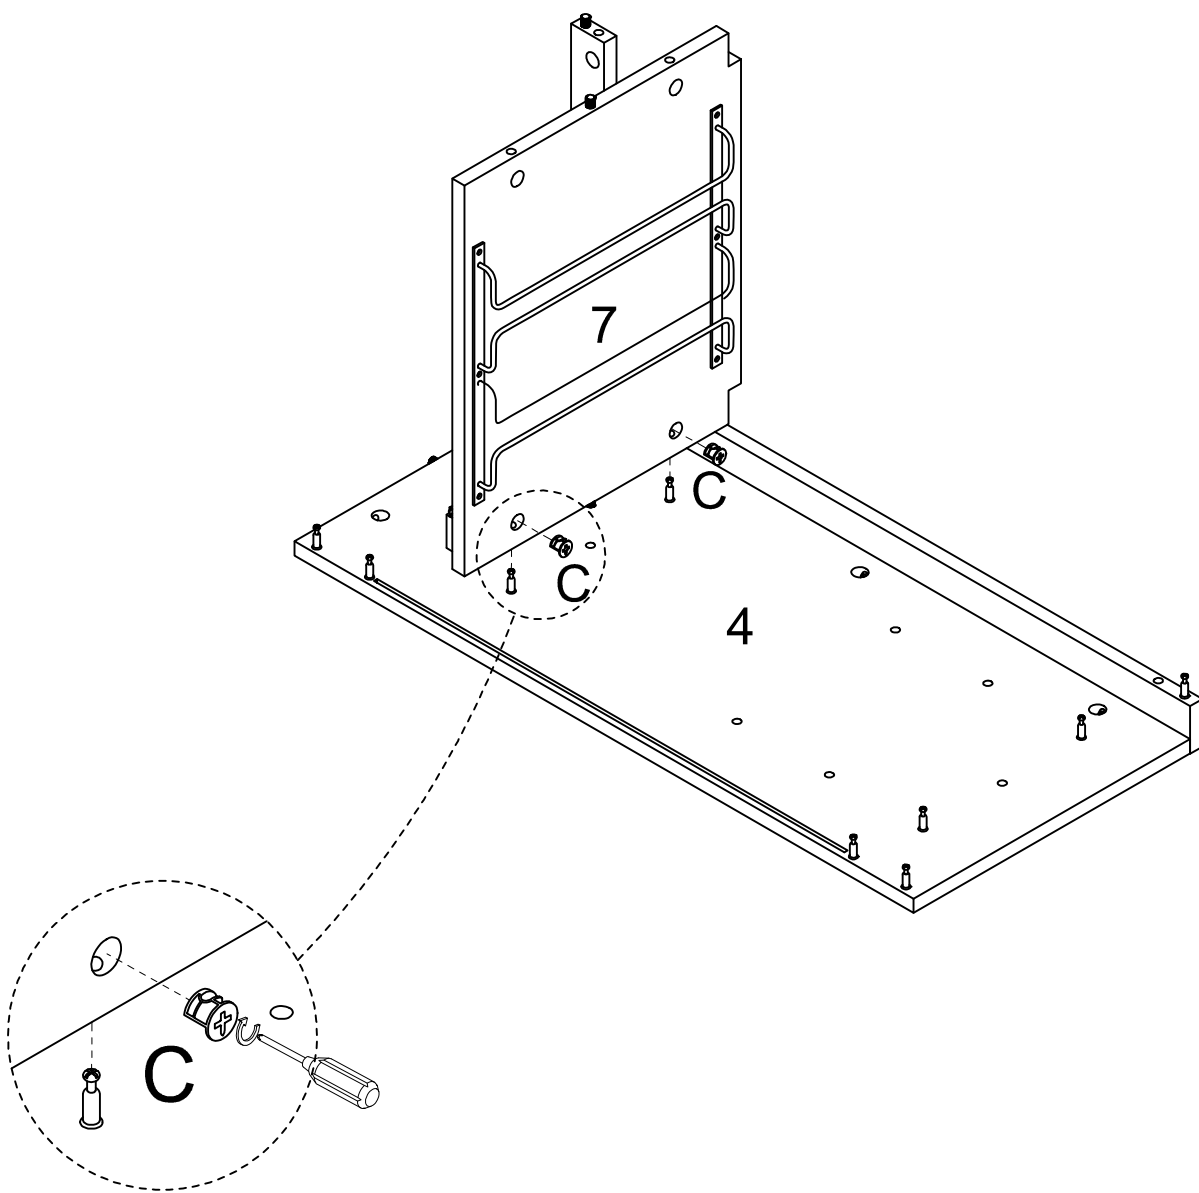

C

X2


Step 10

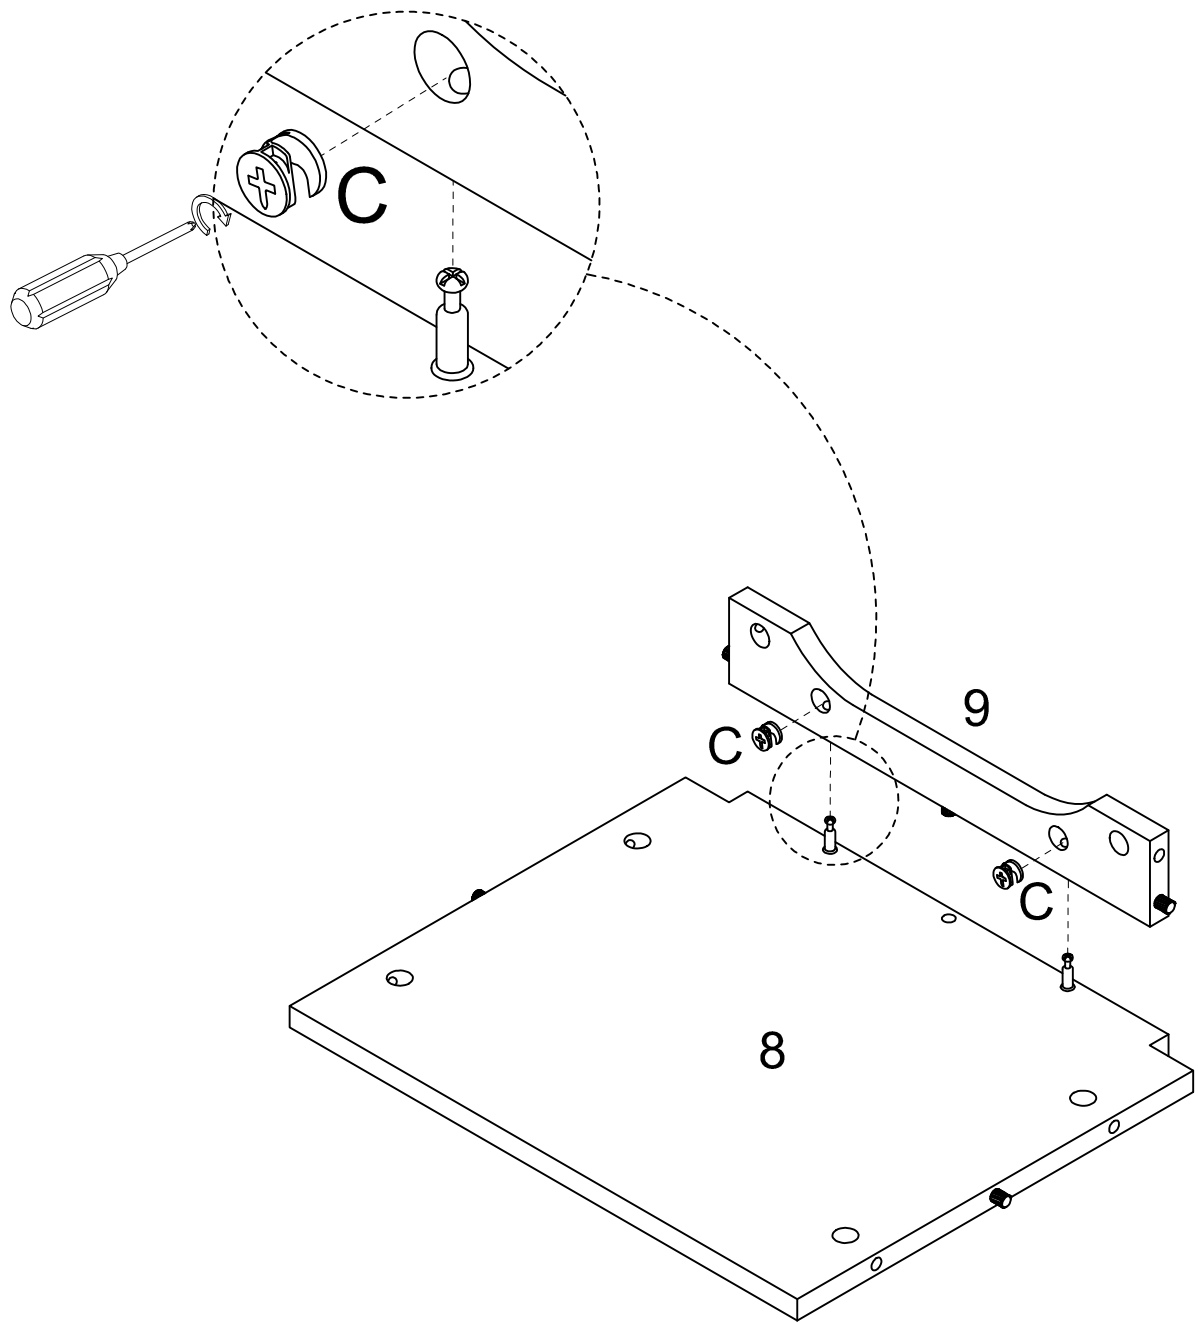


C

X2




Step 11

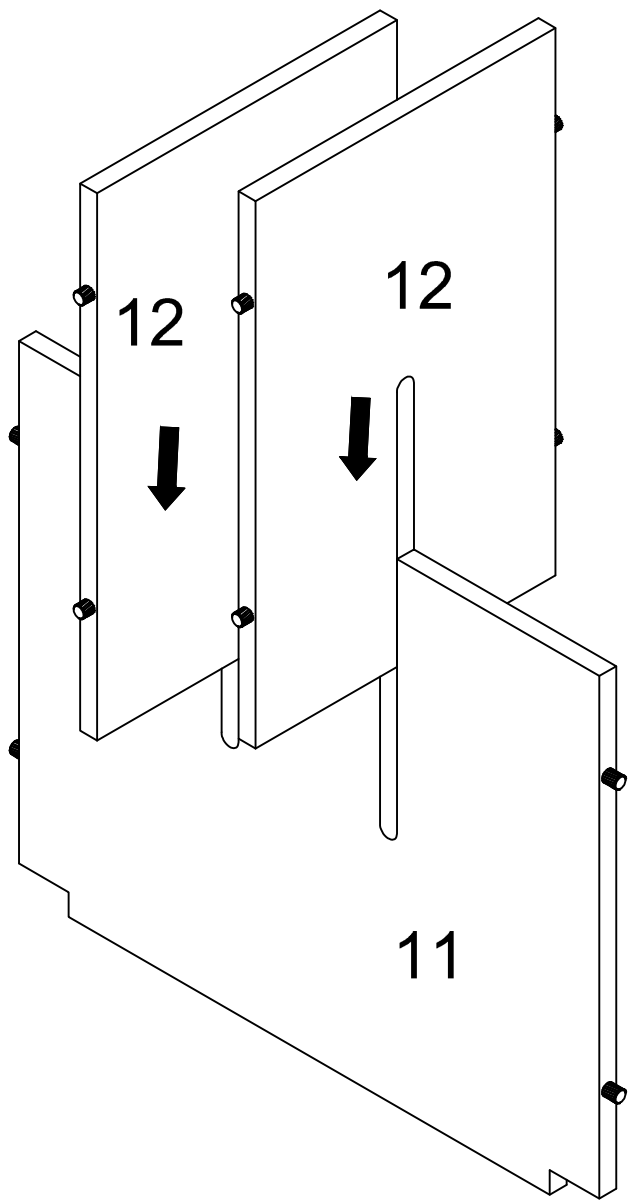

Step 12


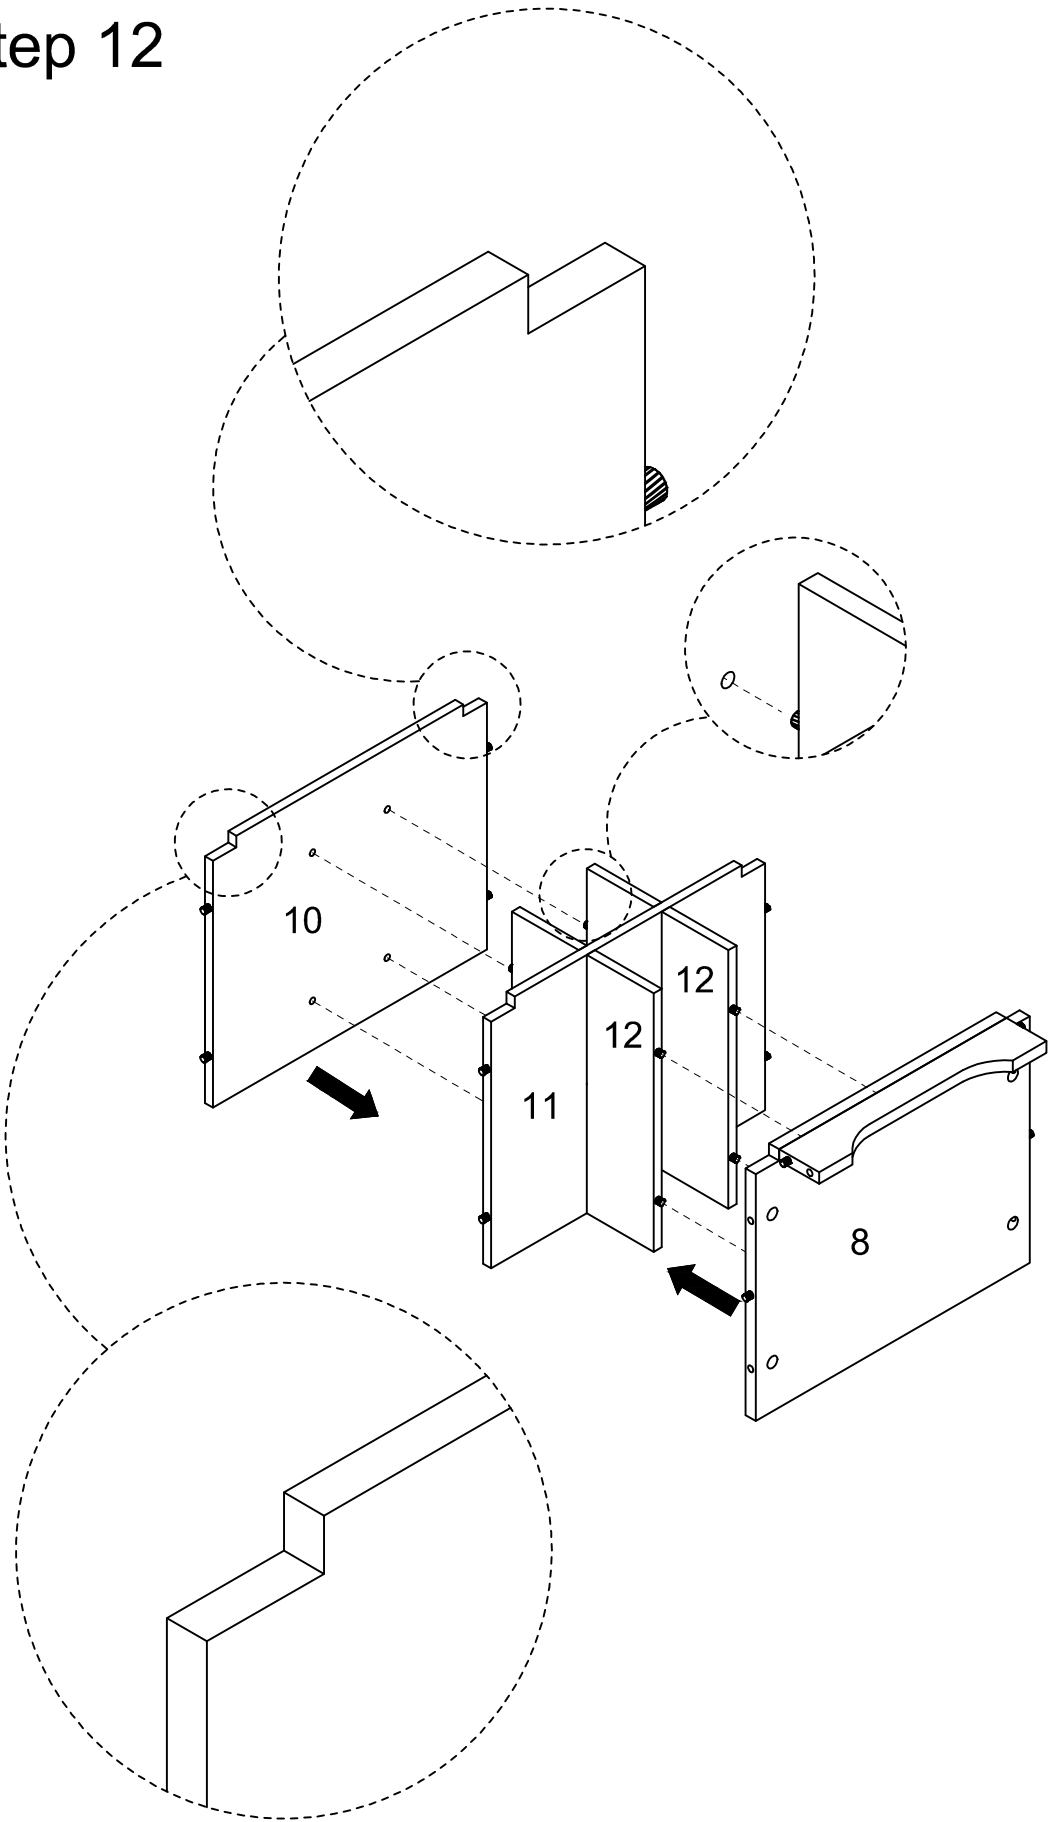


Step 13

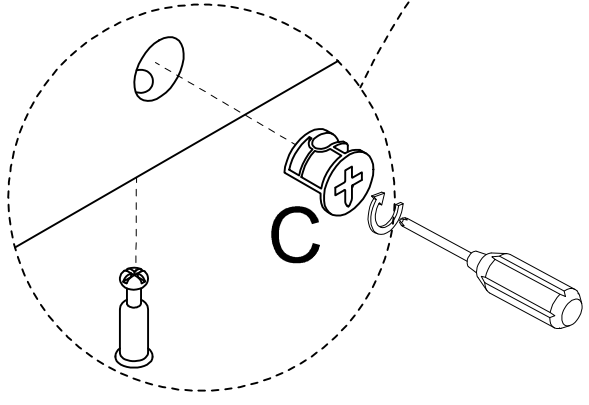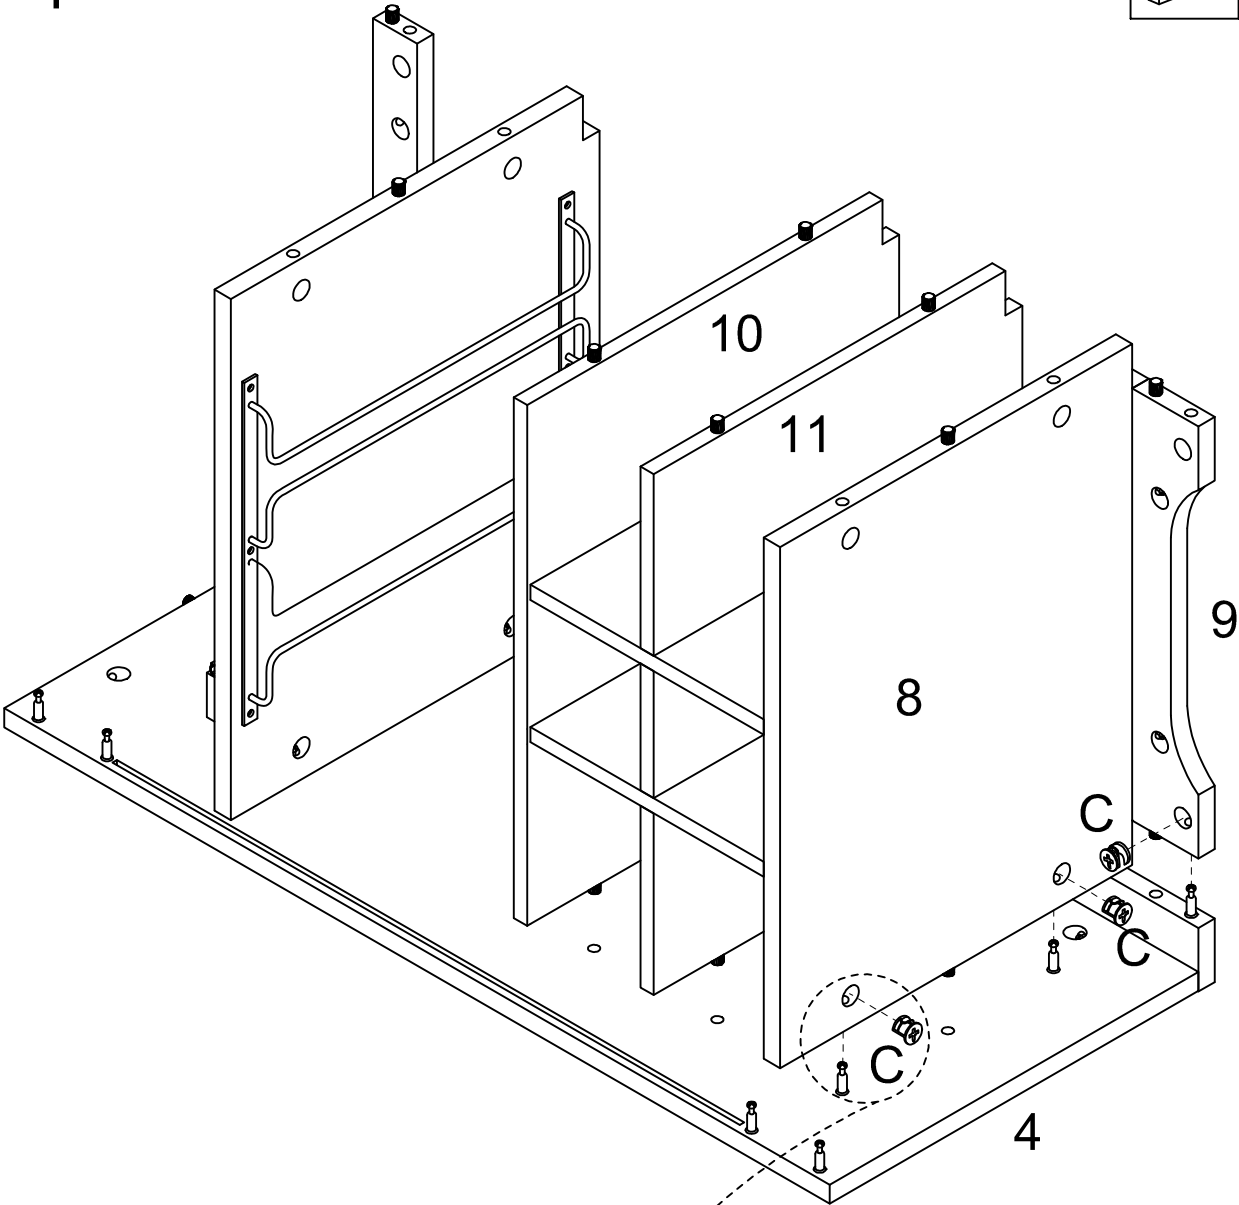

C
X3


Step 14

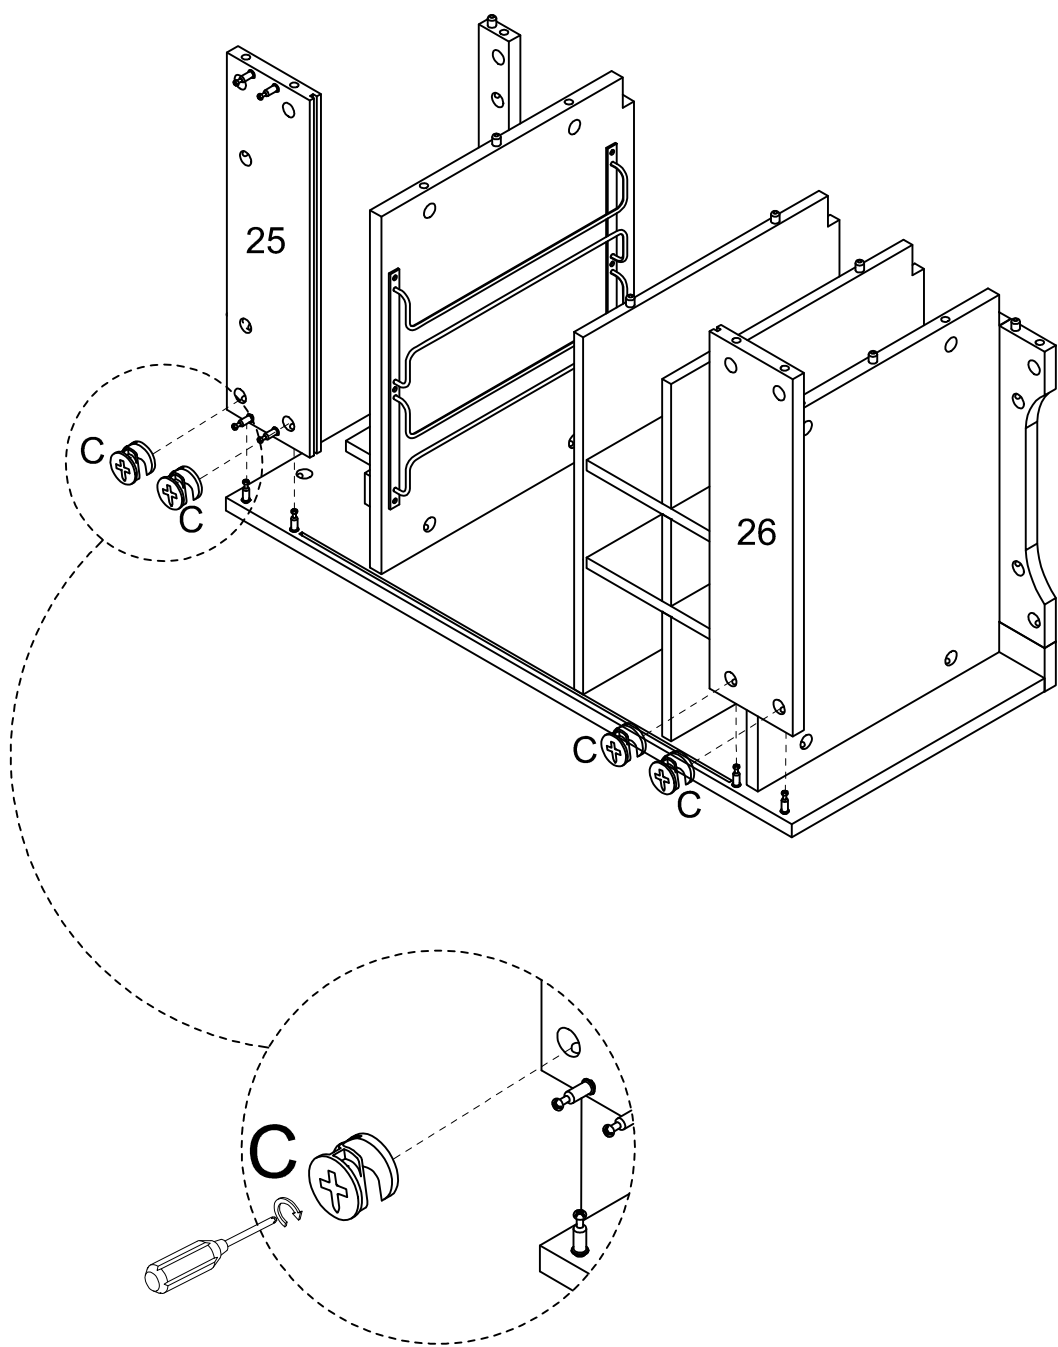



C

X4

Step 15

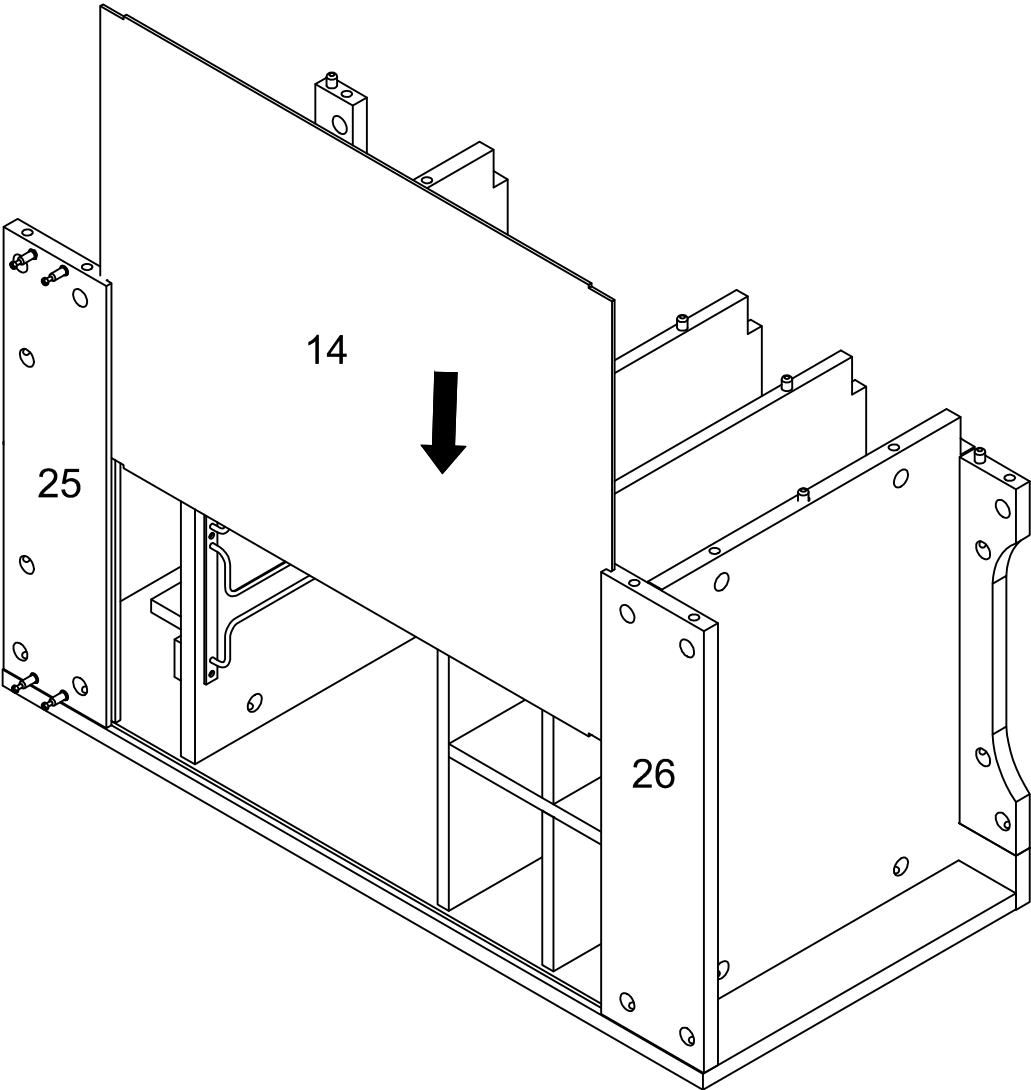



Step 16

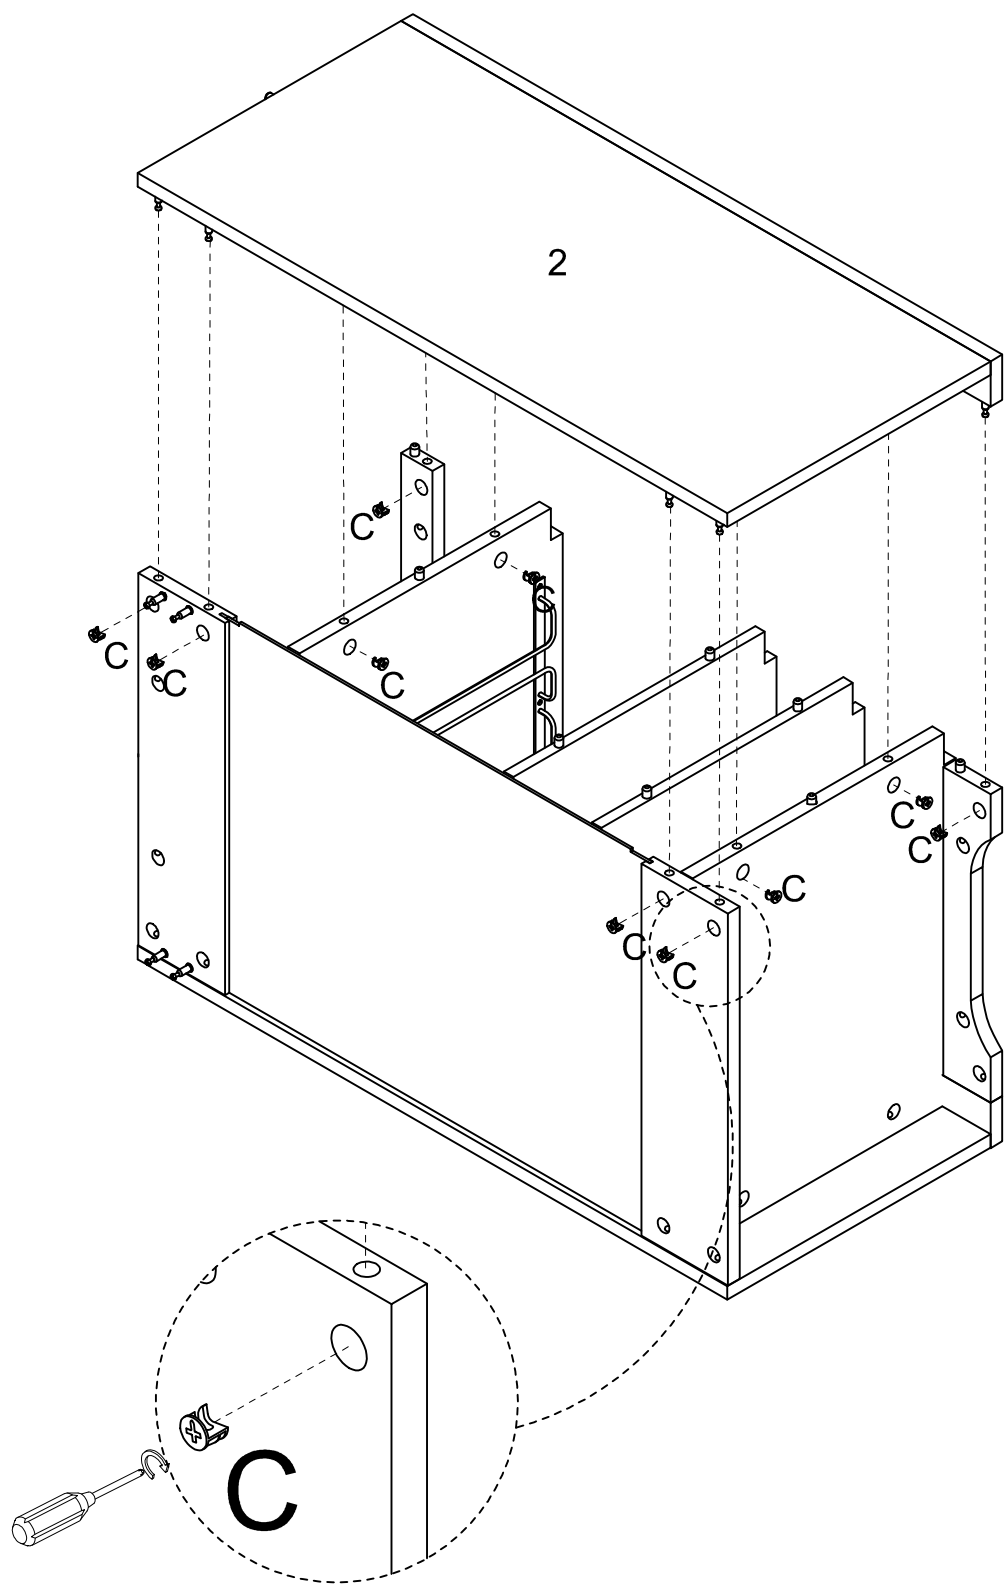

C



X10

Step 17

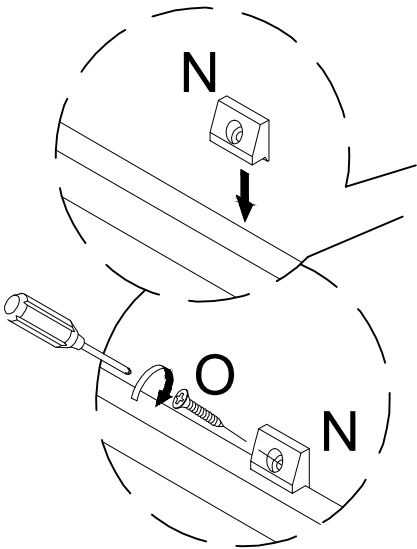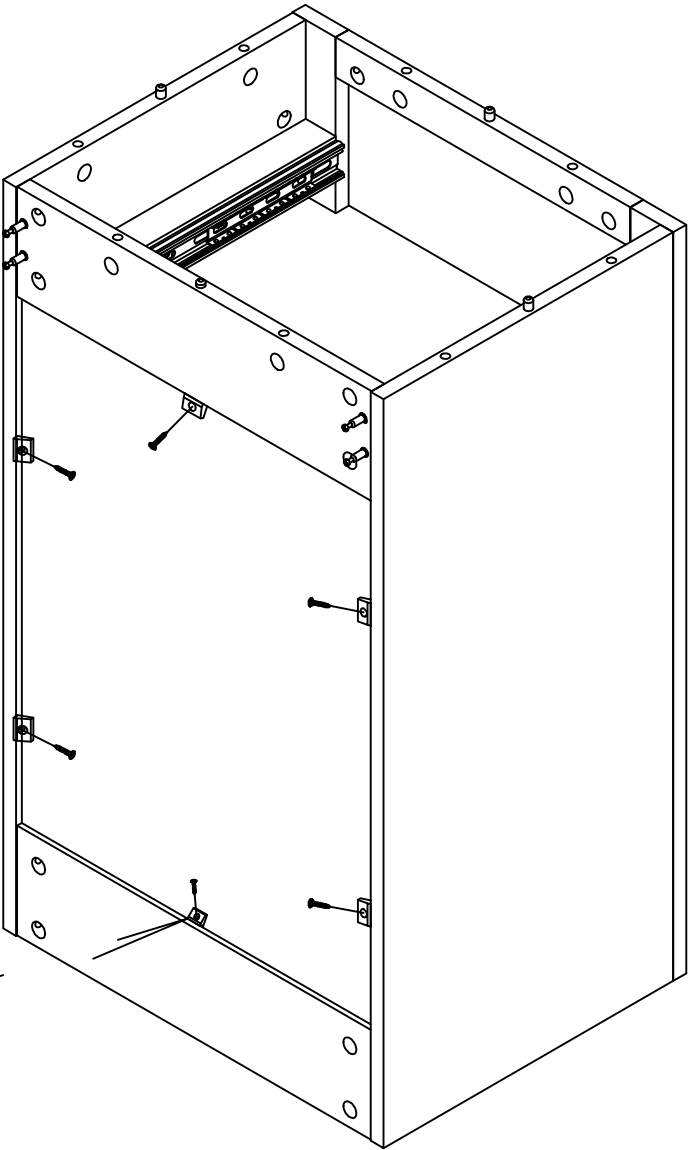

N	O
	
X6	X6



Step 18

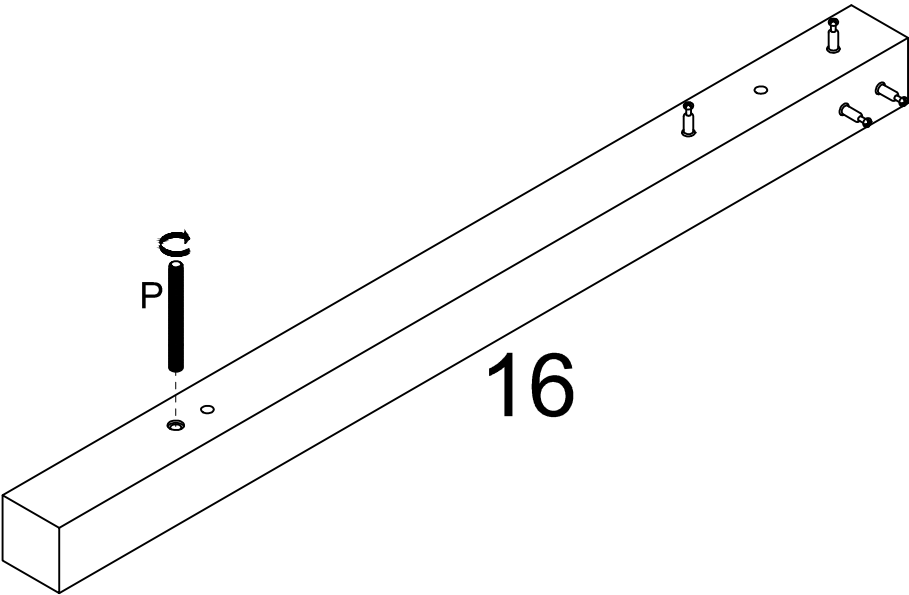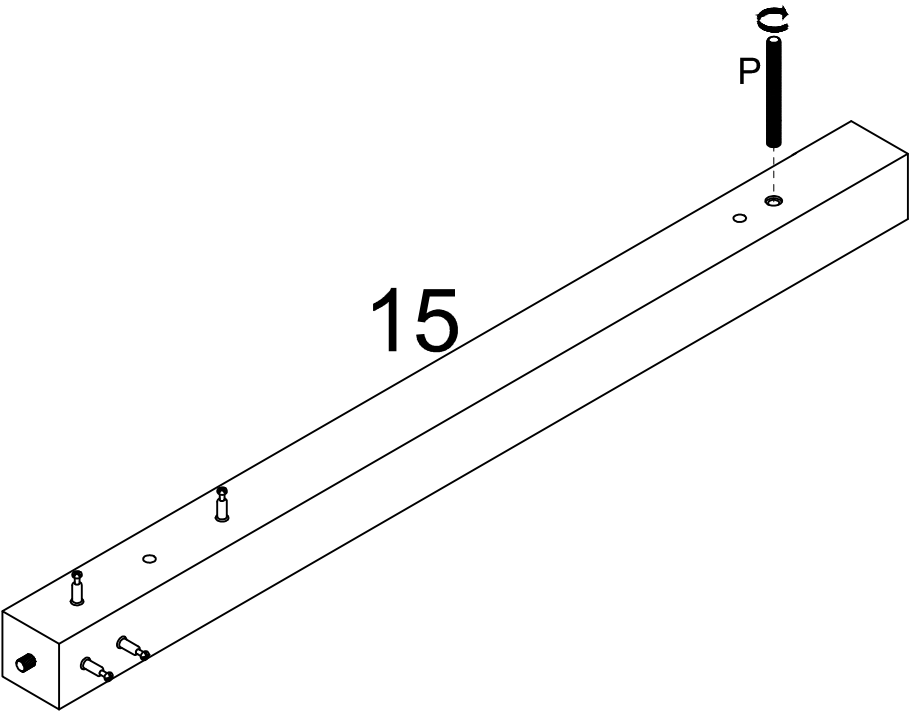

P



X2

Step 19

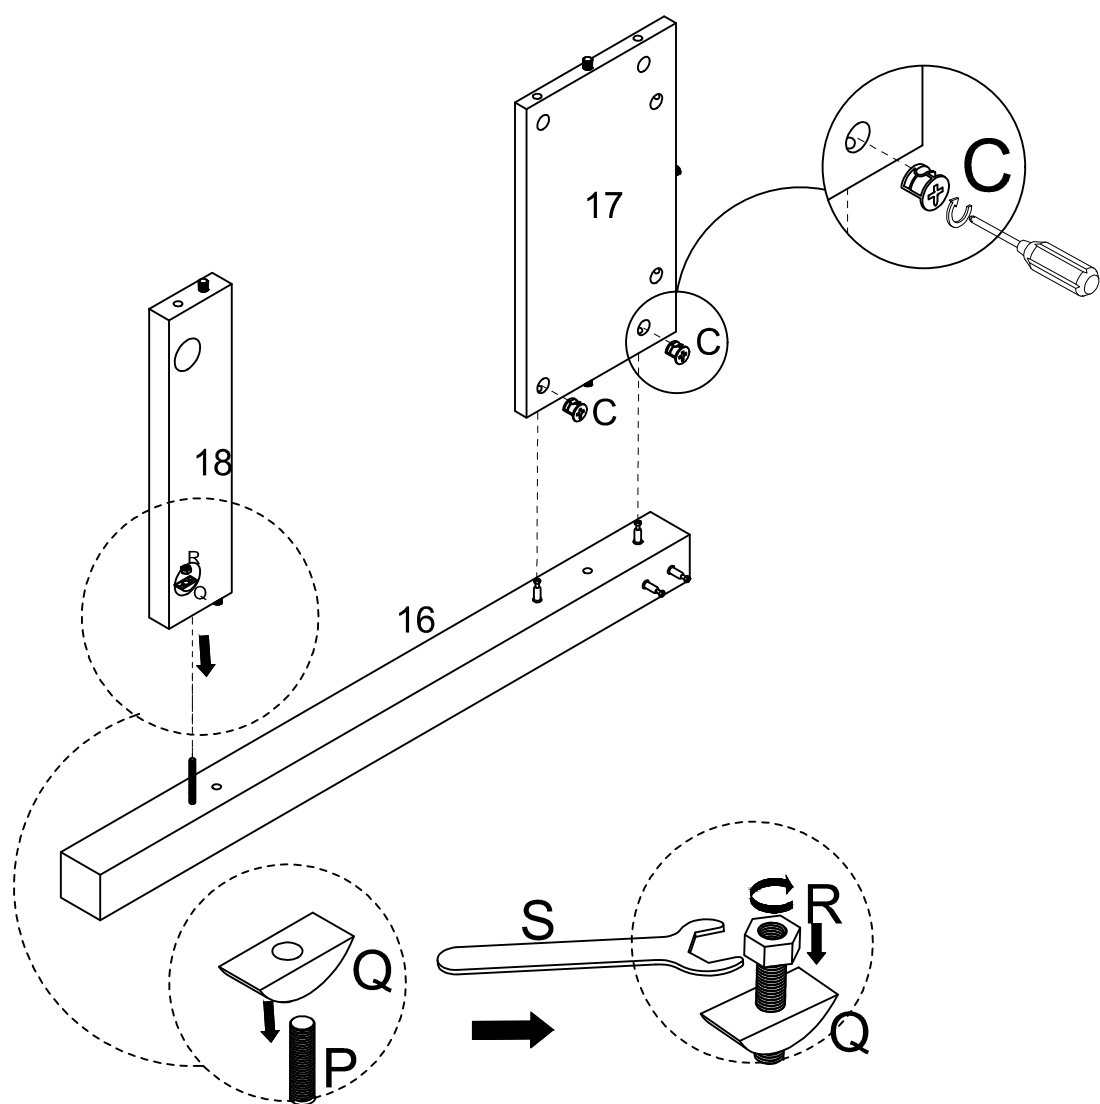



Q	R	S	C
			
X1	X1	X1	X2

Step 20

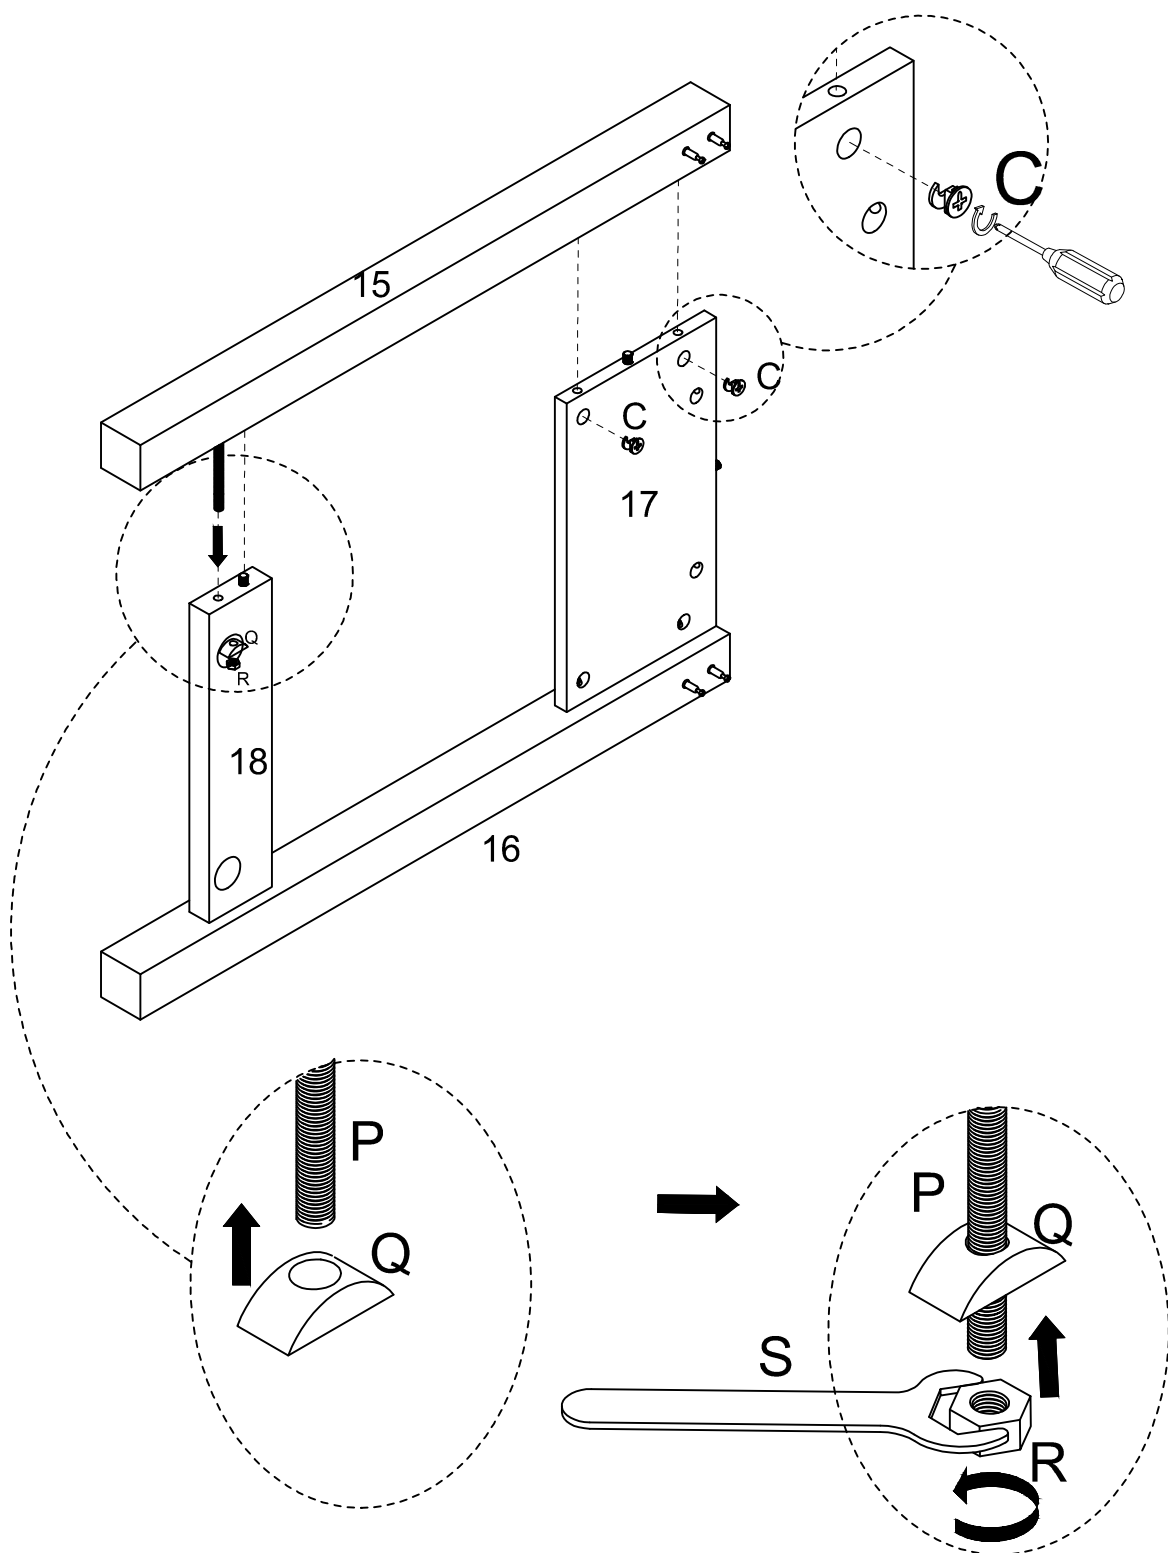

Q	R	S	C
			
X1	X1	X1	X2



Step 21

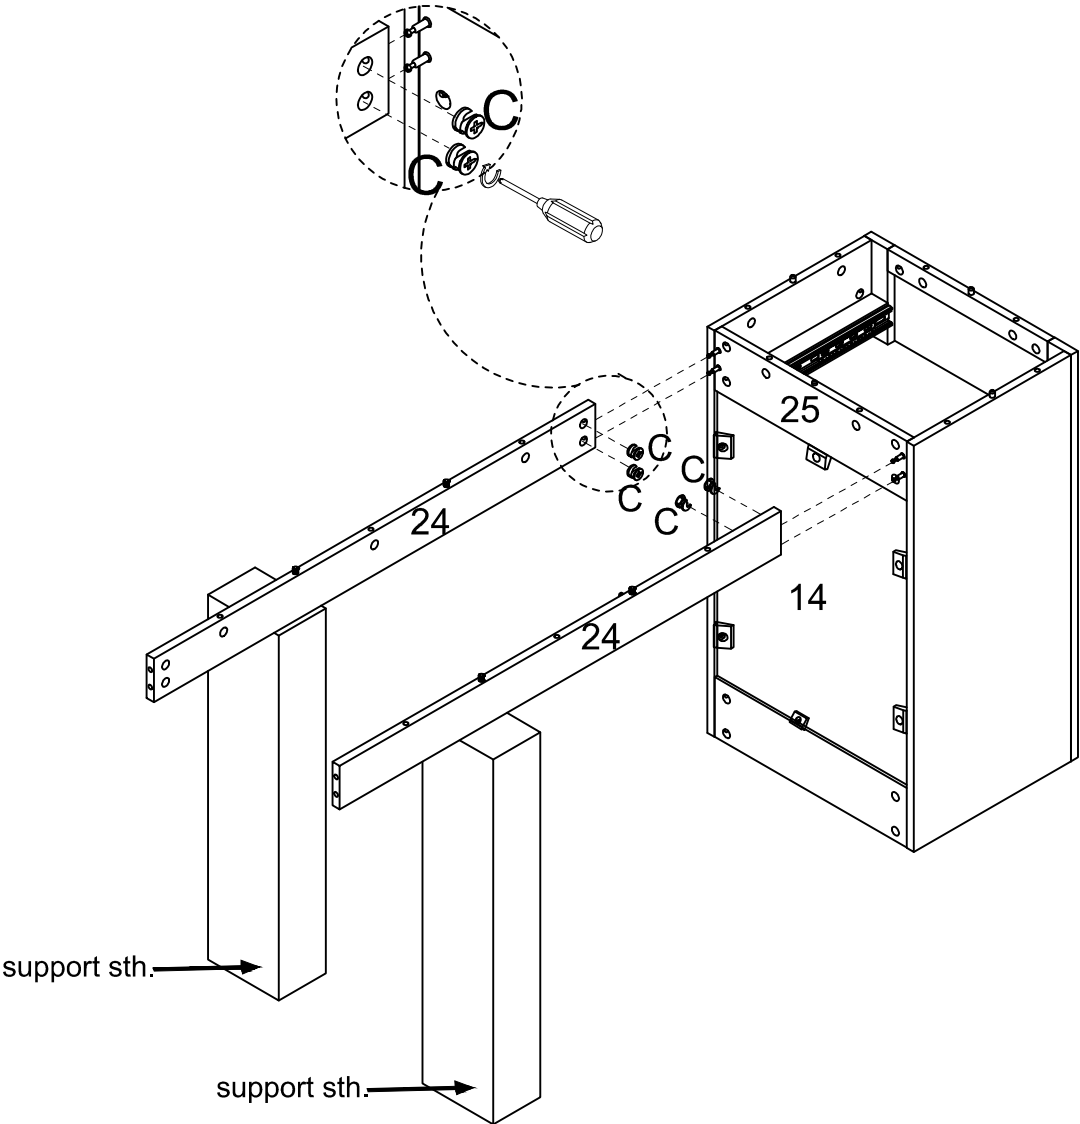

C



X4

Step 22

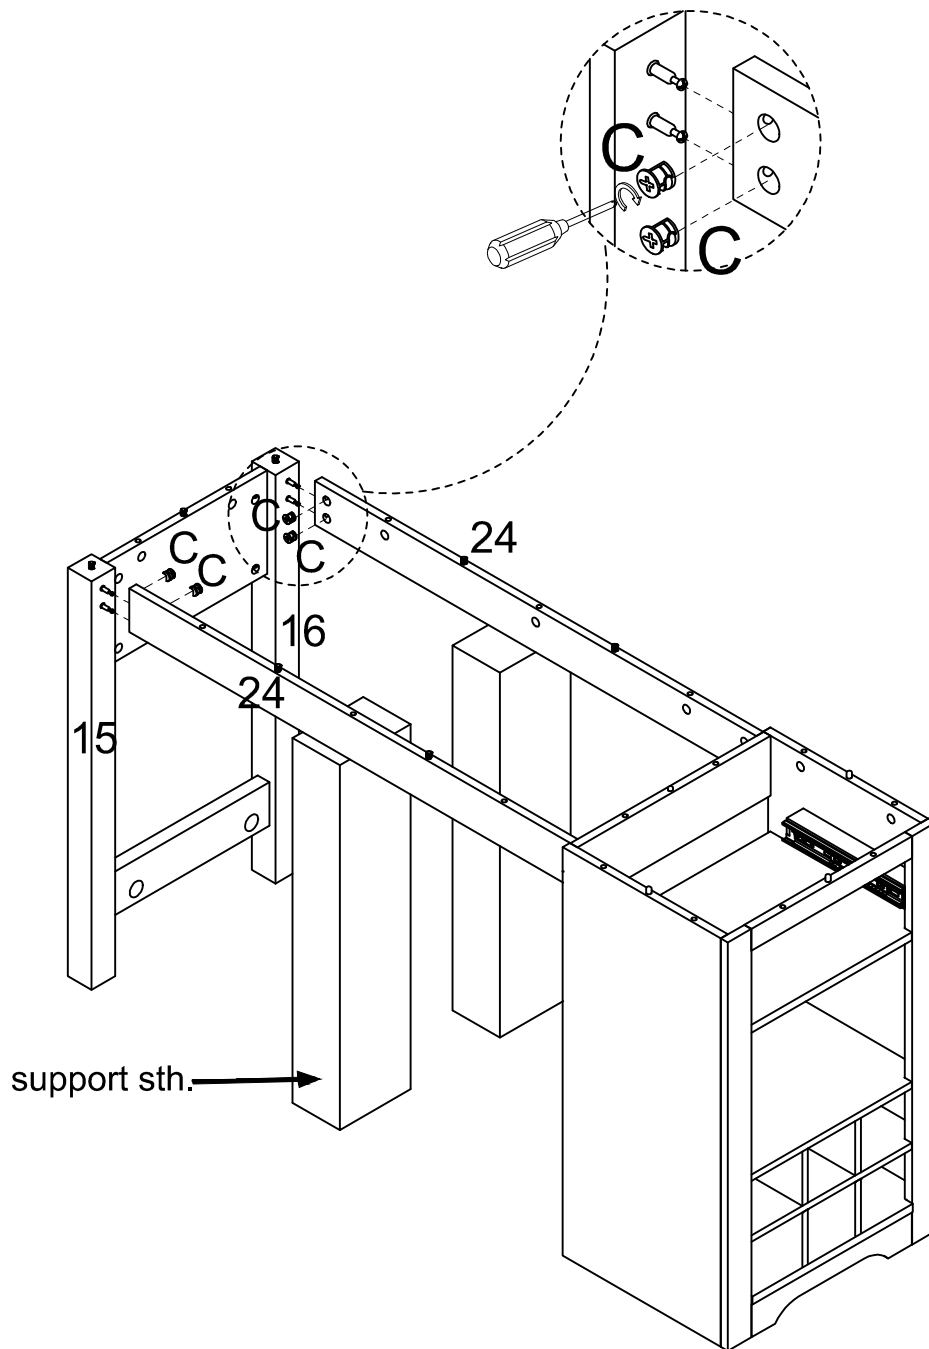


C
X4

Step 23

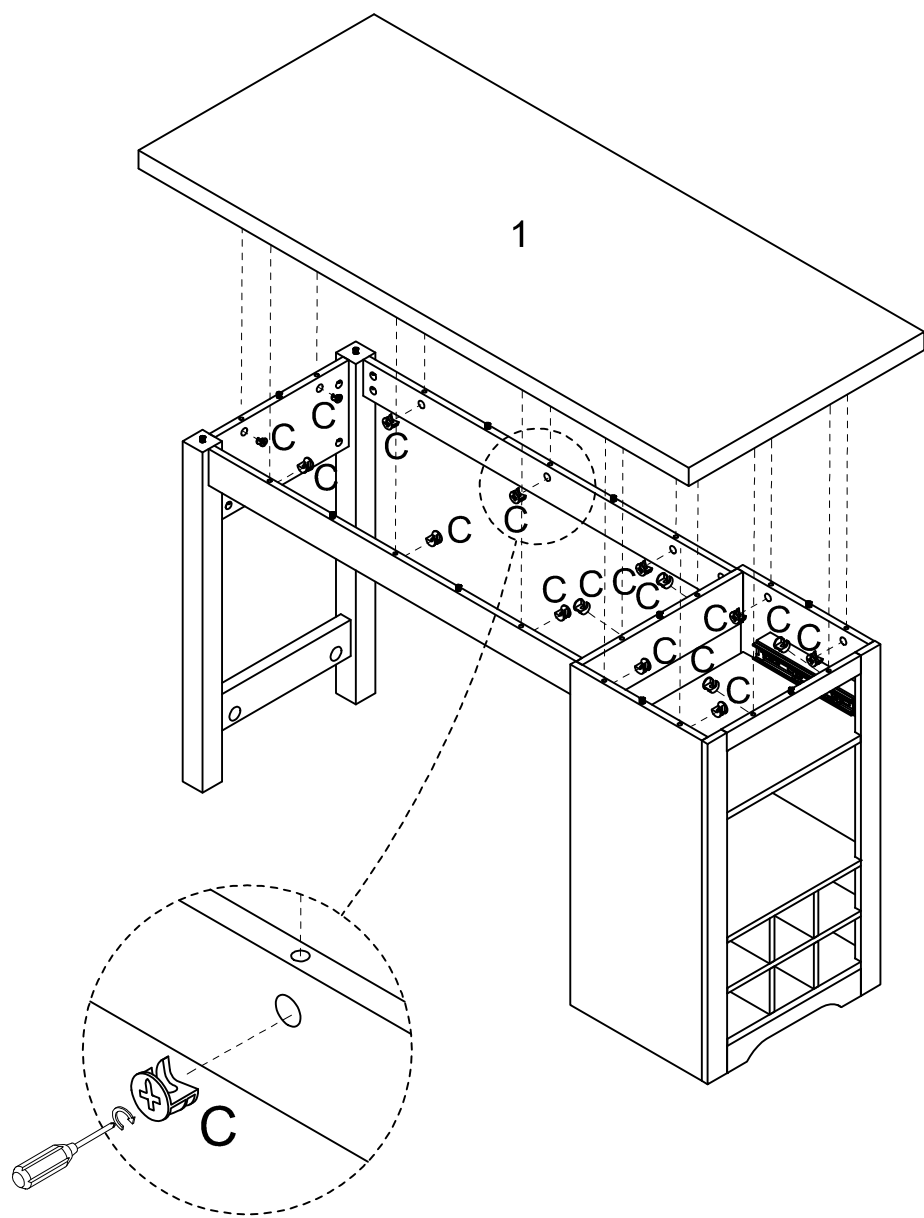


C
X16

Step 24

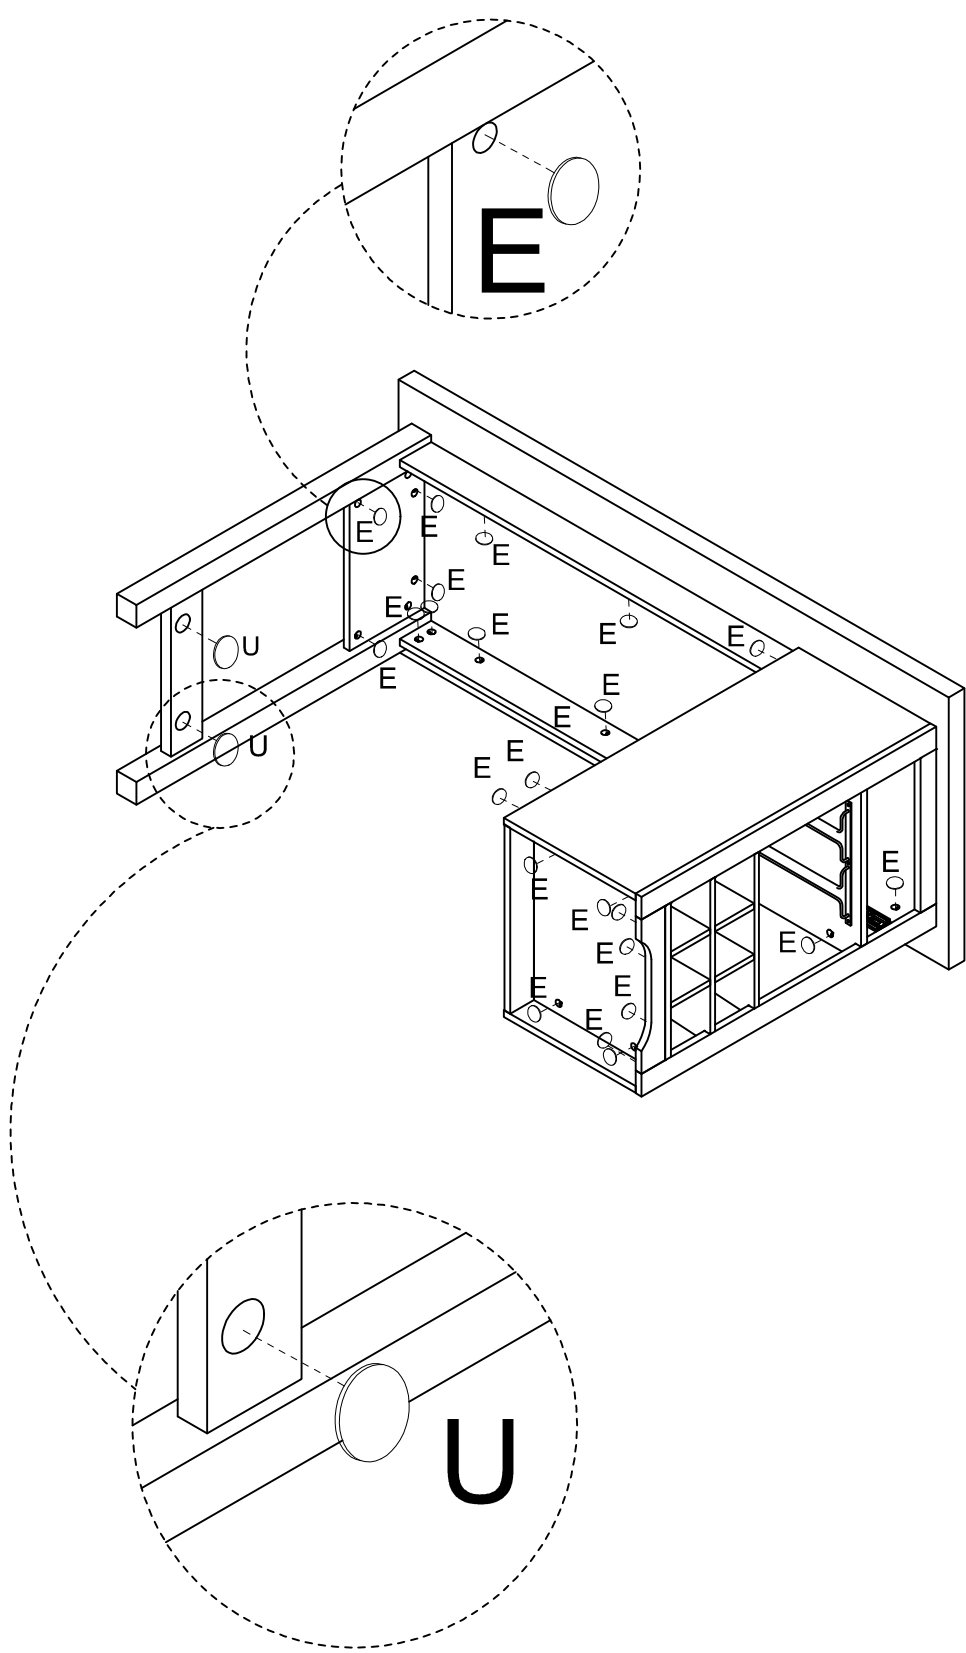

U	E
	
X2	X56


Step 25

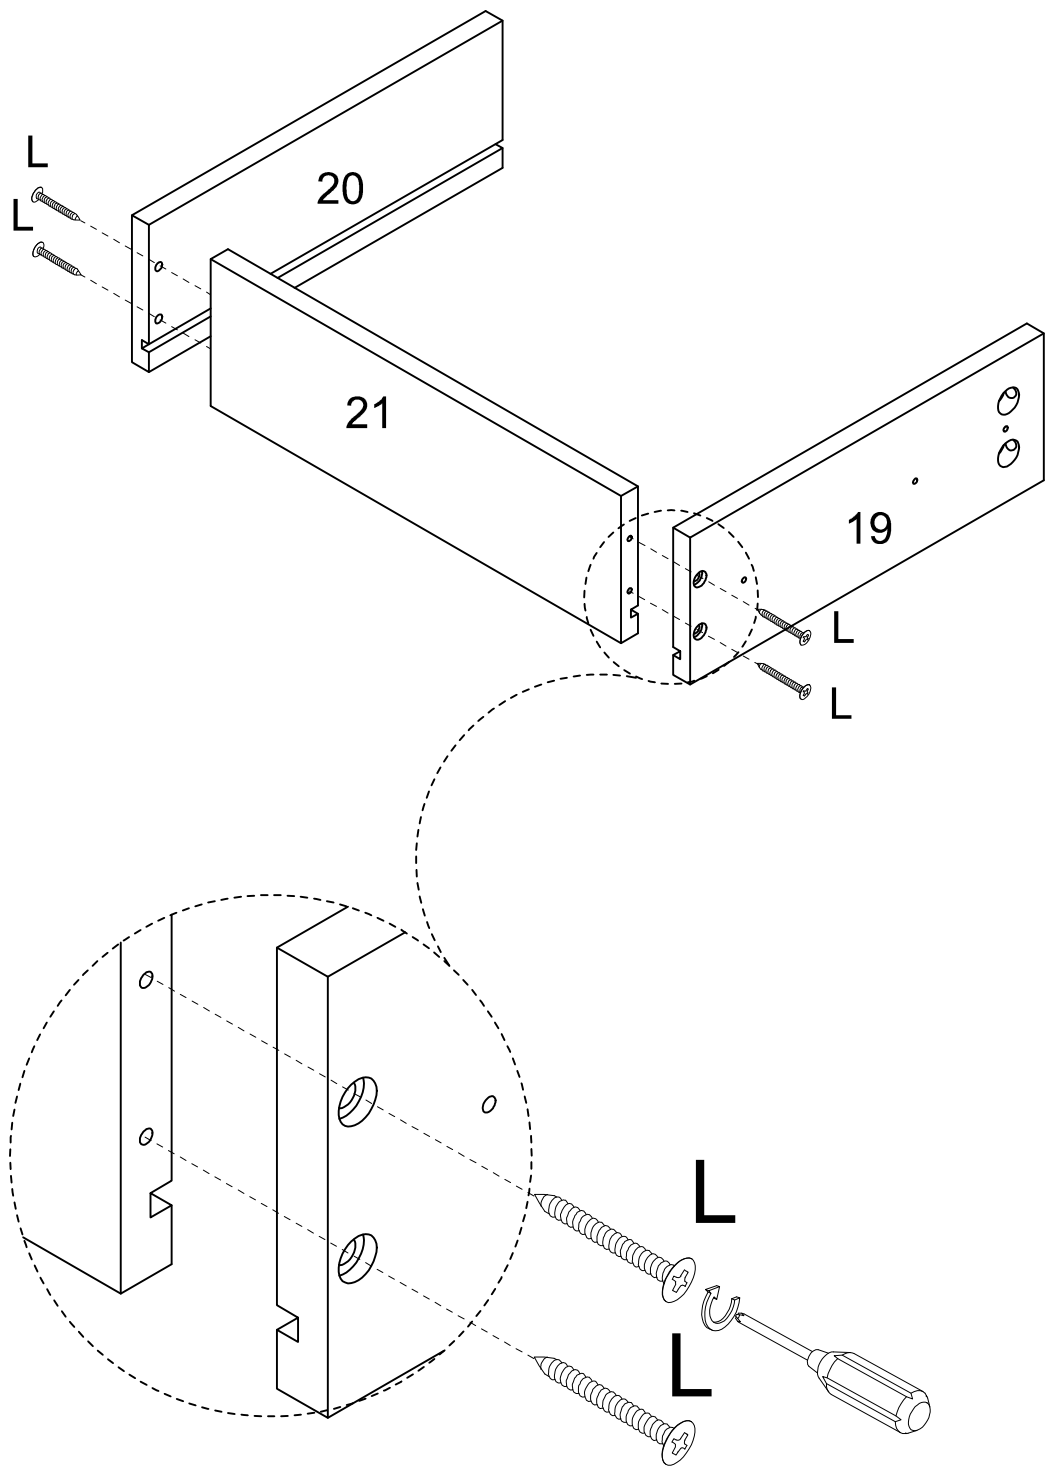



L

X4

Step 26

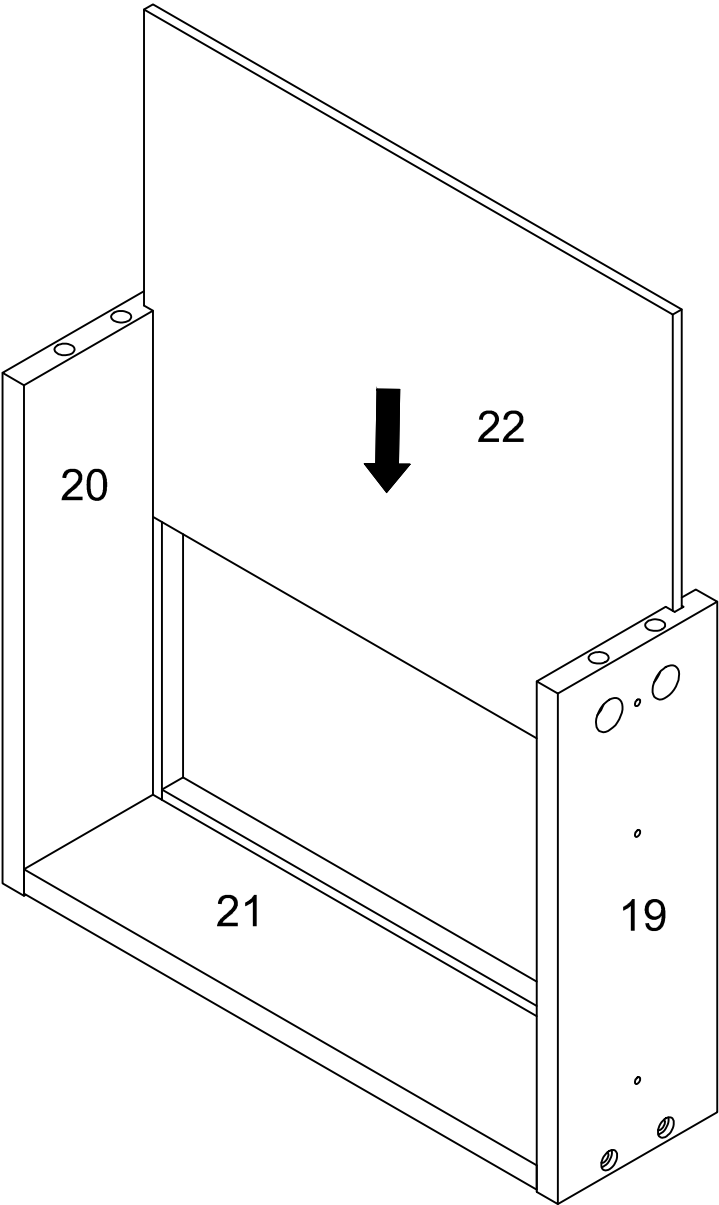


Step 27

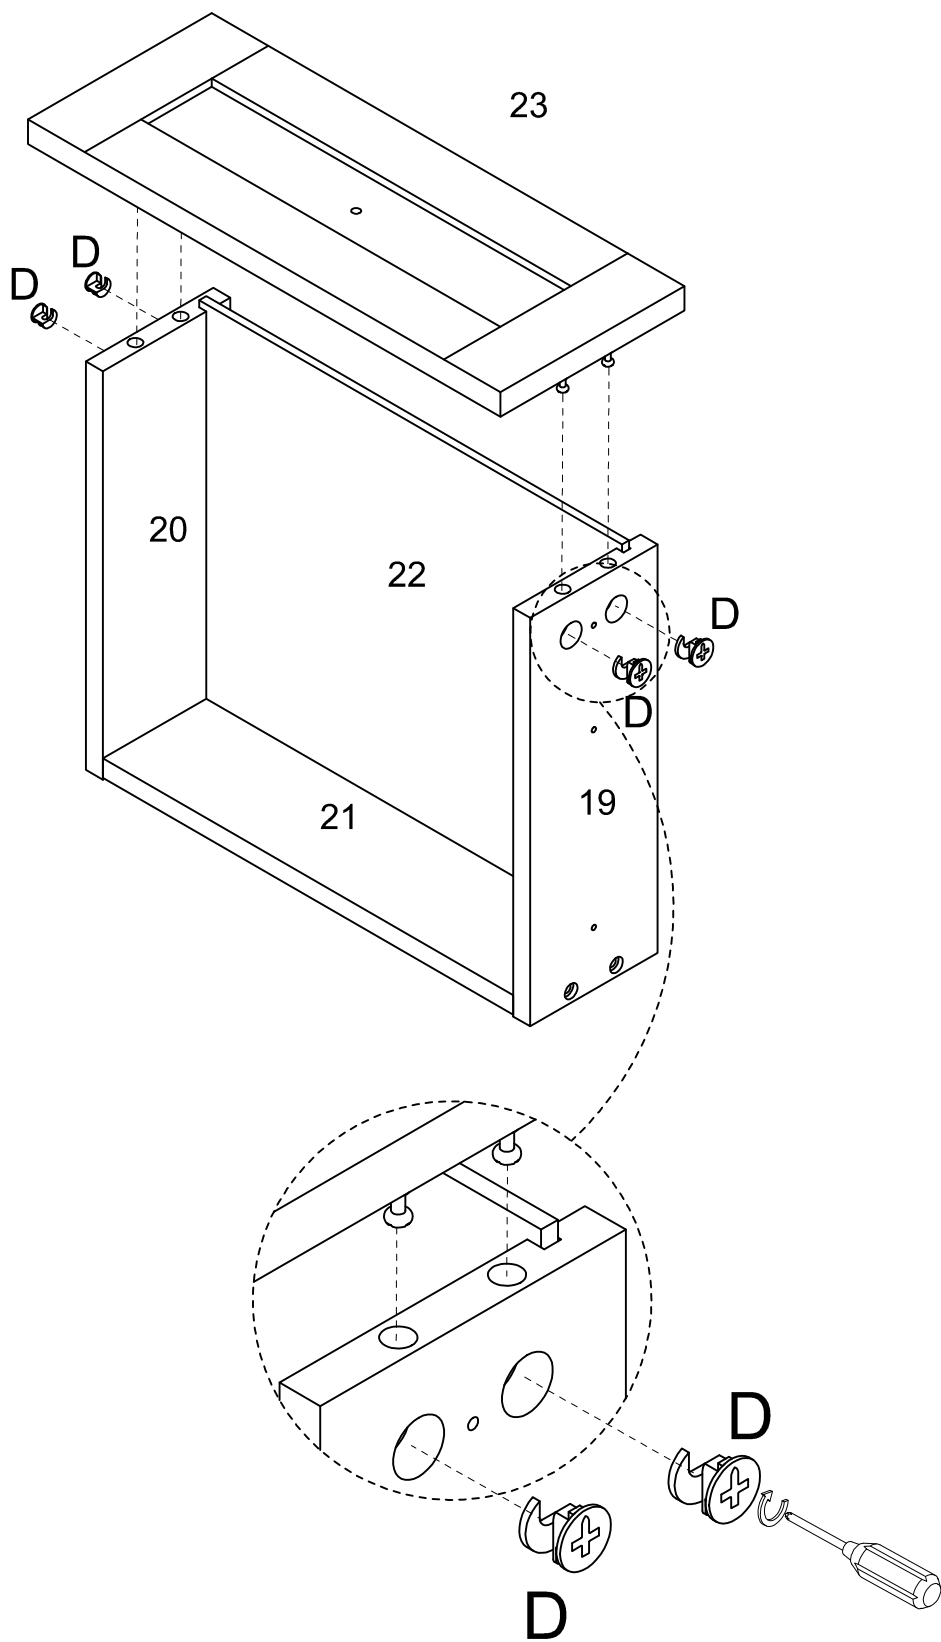

D


X4

Step 28

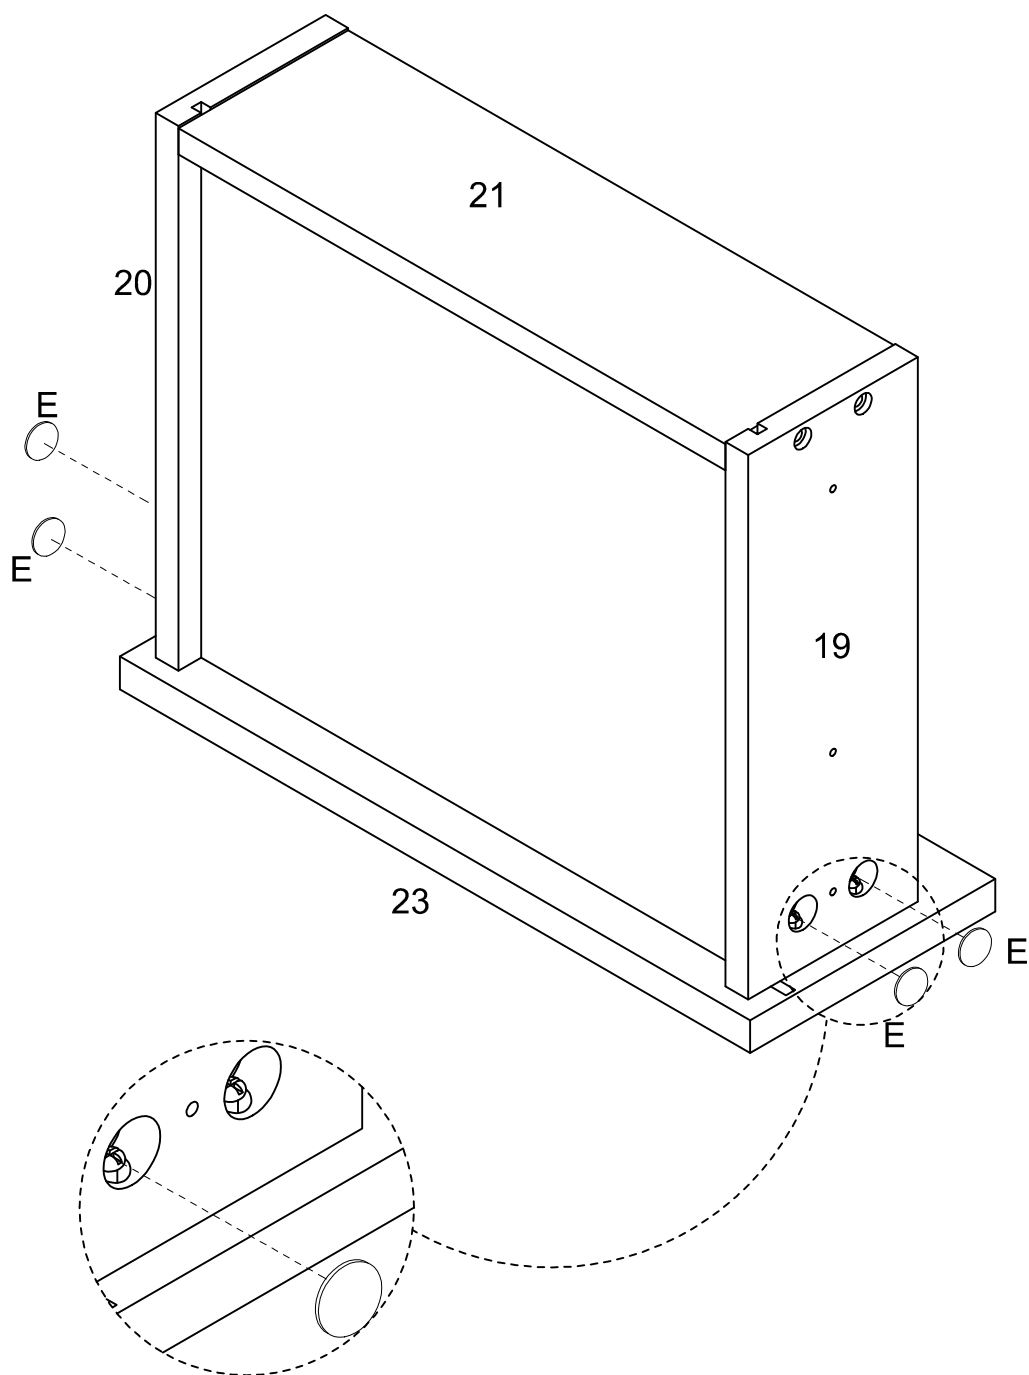


E
O
X4

Step 29

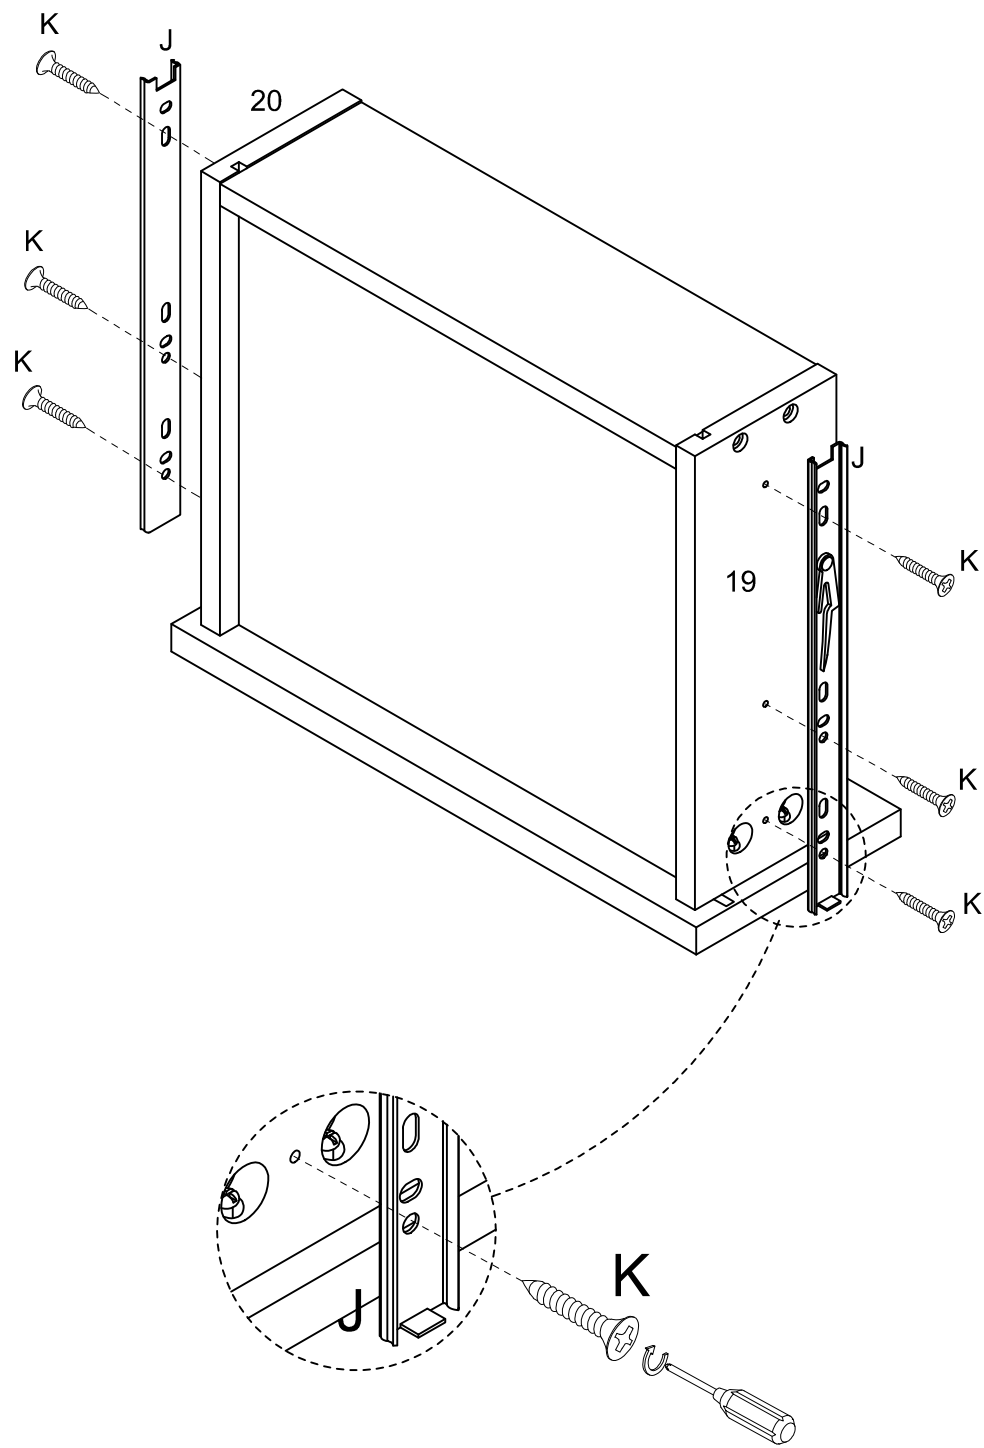



J	K
X2	X6

Step 30

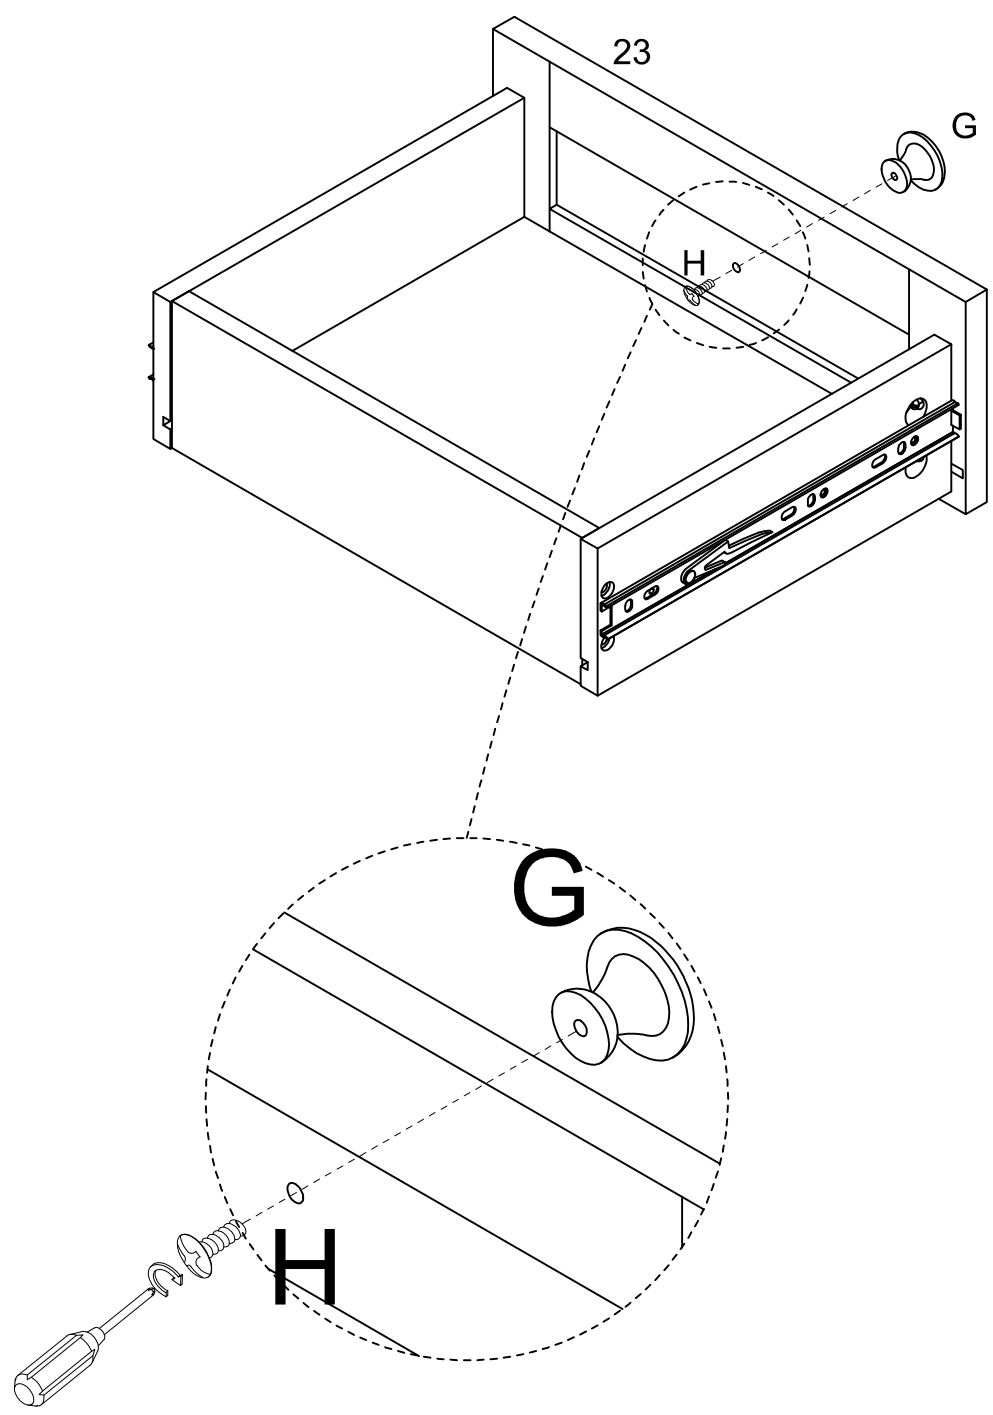

H	G
	
X1	X1

Step 31

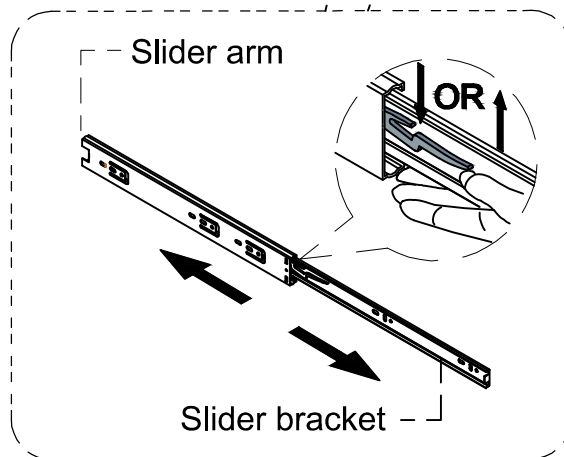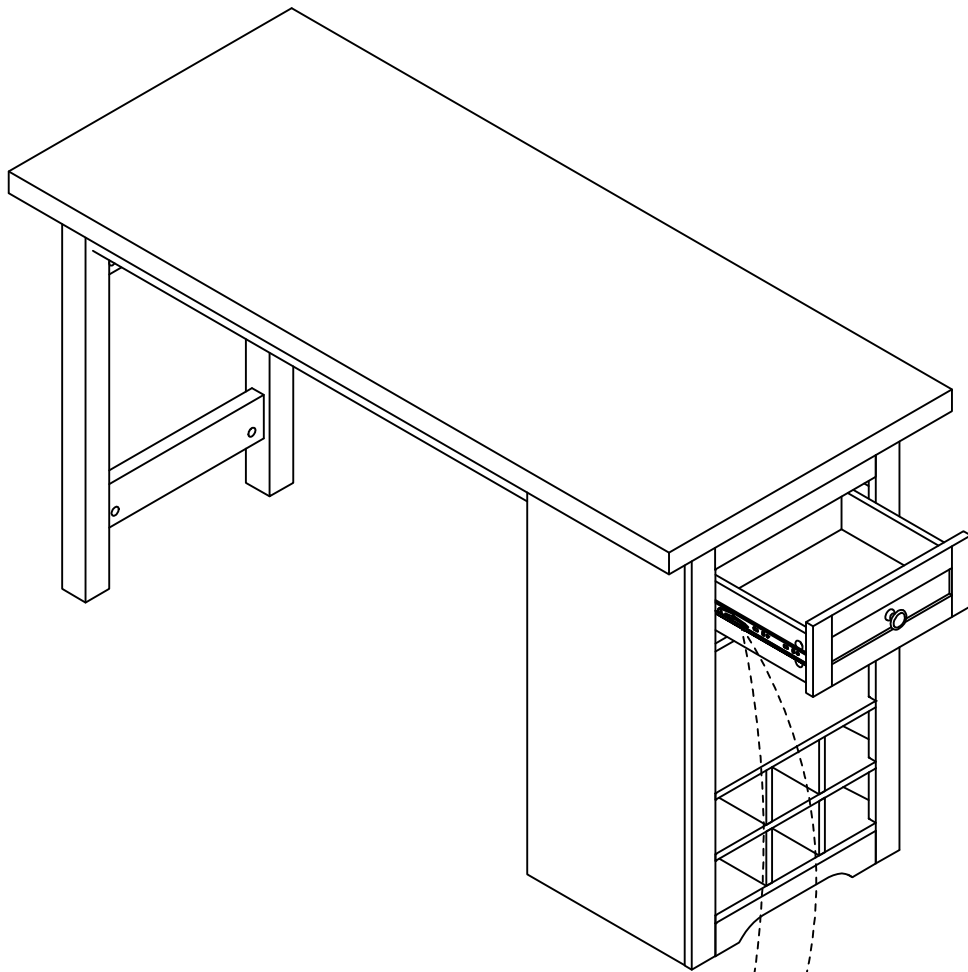

Step 32

Final Assembly

