


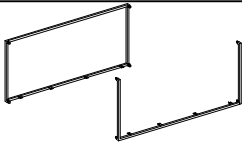



S.NO	HARDWARE / COMPONENTS		Qty
1		Desk Top	1
2		Iron Leg Pannel	2
3		Connecting pipes	2
4		Allen key	1
5		Allen Bolt	8
6		Washer	10
7		Counter sunk Allen Screw	10

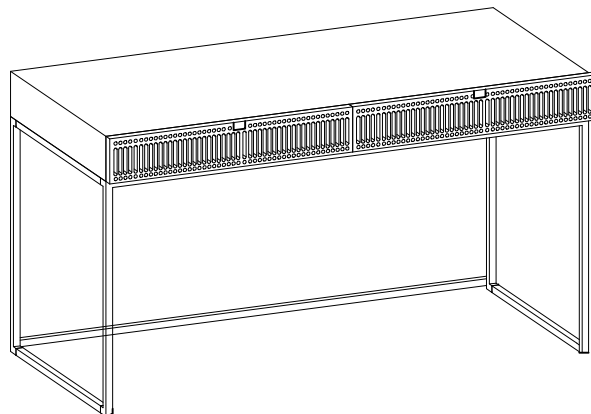



STEP 1:-
Partially loosen the connecting the Iron pipes from wooden base.

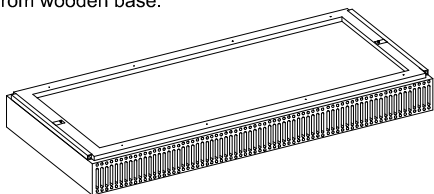


STEP 3:-
Insert the second set of connecting pipes in the bottom openings of the front iron panel.

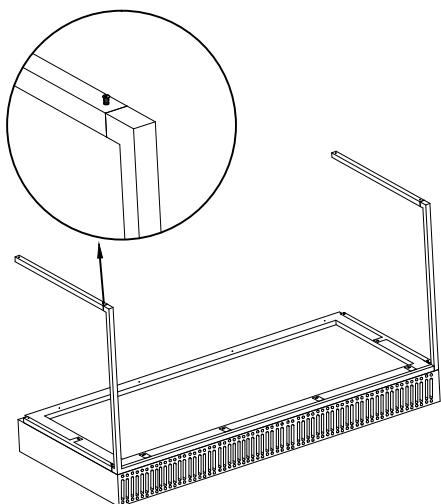


STEP 2:-
Insert the front iron panel into the pipe openings .

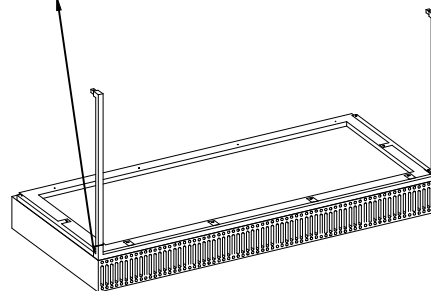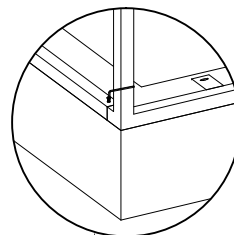


STEP 4:-
Insert the back panel into the top
and bottom connecting pipes

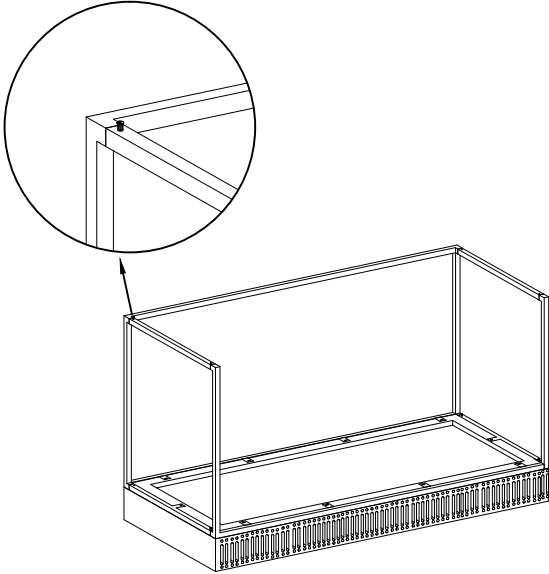

STEP 5:-
Partially tighten all the counter sunk allen
screws in the iron frame.

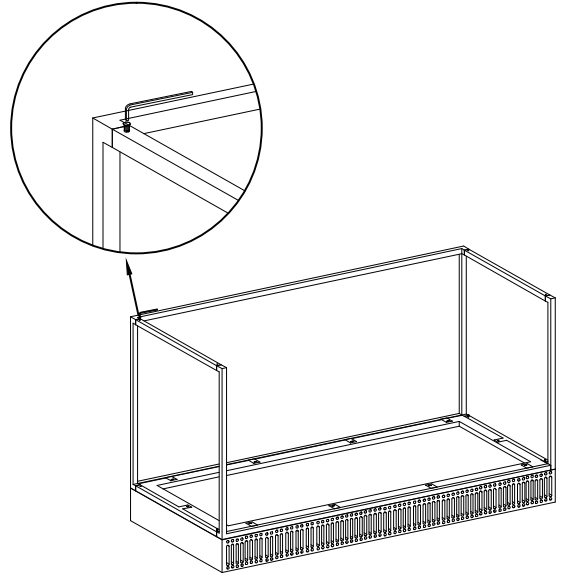

STEP 6:-
Partially tighten all the allen screws with
washer in wooden frame.

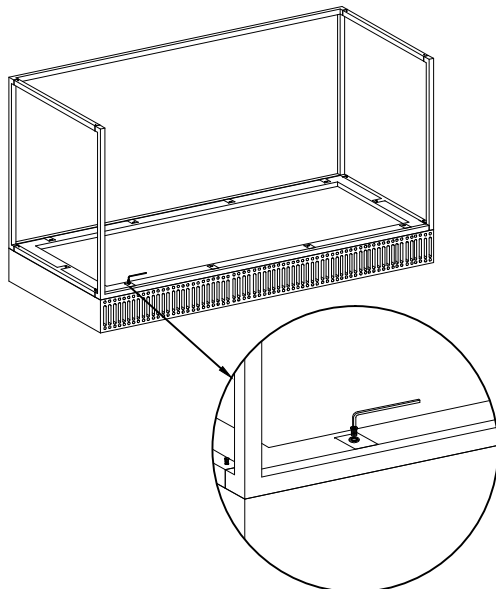

STEP 7:-
After proper alignment of all screws, tighten
them completely and your Desk is ready to use.

