

Installation Guide

01

Flat Bed



01

Flat beds are made when the edge of the bed is flush with the board.




02

Fasten the guardrail and bracket with screws



03

After installing the guardrail and accessories, place the guardrail on the bed board.

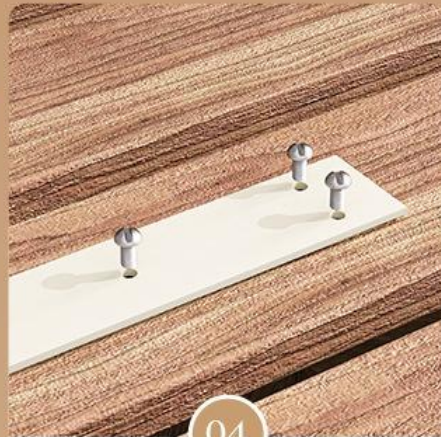

04

Use a screwdriver to fasten the self-tapping screws on the bed board surface.

02

Built-in Bed



01

The edge of the bed is higher than the bedboard for built-in beds.




02

The base is upward and rests on the bed board.



03

Tighten the guardrail and base with a screwdriver.

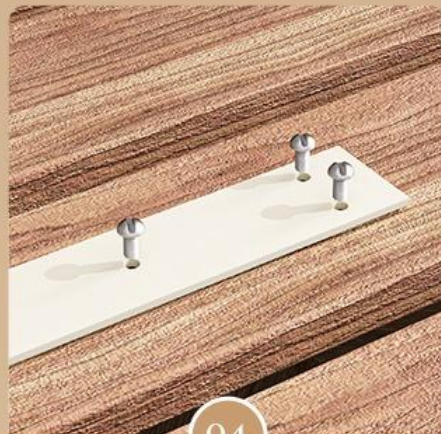

04

Fasten the self-tapping screws with a screwdriver to the bedboard.