




# ASSEMBLY INSTRUCTIONS



30 min



x 2



Tools Required


## **USEFUL HINTS BEFORE YOU START:**

1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, sort and count the parts before assembly.
4. Assemble the product on packaging cardboard to prevent scratch or damage.
5. Using incompatible hardware might cause damage to the product. **DO NOT FULLY-TIGHTEN** the nut until all nuts are ready assembled.

## **IMPORTANT NOTES:**







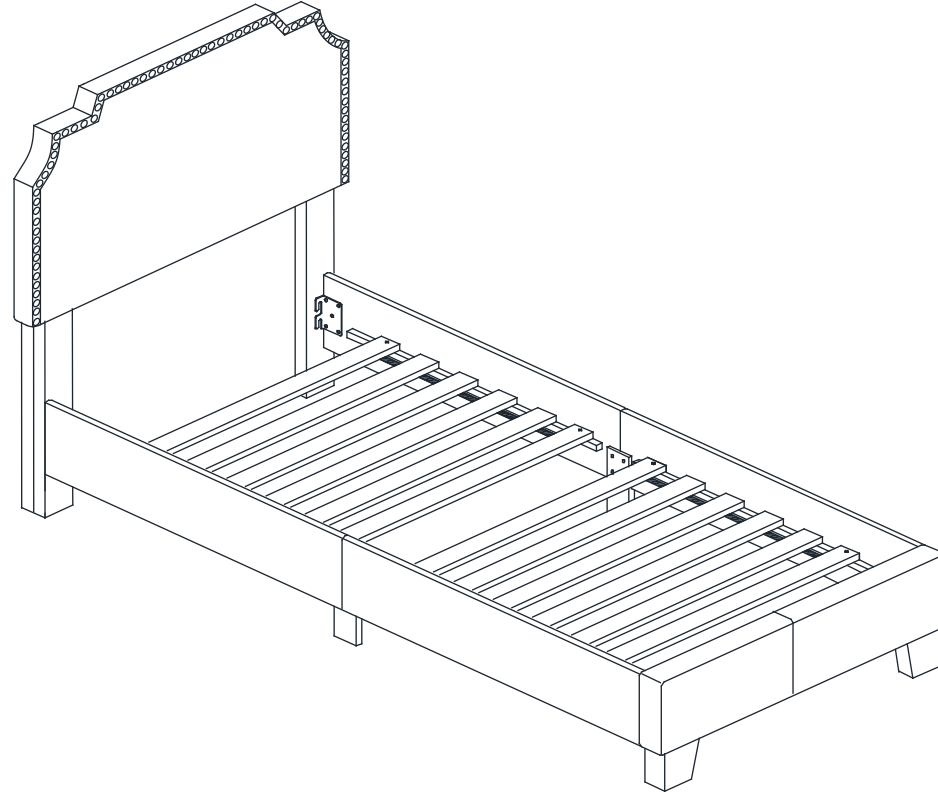












- \* This unit has been designed to support maximum 500 lbs. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.
- \* Keep all hardware parts out of reach of children.

**NEED HELP?** For replacement requests or product inquiries, please contact our Customer Service Team by emailing us. Thank you for selecting!




NAILHEAD TRIM BED FRAME


# ASSEMBLY INSTRUCTION

NO	PART LIST		QTY
1		HEADBOARD CUSHION	1PC
2		LEFT HEADBOARD LEG (WITH "L" LABEL)	1PC
3		RIGHT HEADBOARD LEG (WITH "R" LABEL)	1PC
4		FOOTBOARD CUSHION	1PC
5		FOOTBOARD LEGS	2PCS
6		SIDE RAIL (A)	2PCS
7		SIDE RAIL (B)	2PCS
8		SIDE RAIL SUPPORT LEG	2PCS
9		ROLL SLAT	2SET
NO	HARDWARE LIST		QTY
A		JCBB SCREW M8 X 20	8PCS
B		JCBC SCREW M6 X 25	8PCS
C		JCBC SCREW M6 X 35	6PCS
D		JCBC SCREW M6 X 70	2PCS
E		WOOD DOWEL	2PCS
F		SPRING WASHER	14PCS
G		FLAT WASHER SMALLER	14PCS
H		SCREW M4 X 32mm	8 PCS
I		L - KEY M5 X 65mm	1PC
J		L - KEY M4 X 100mm	1PC


## STEP 1

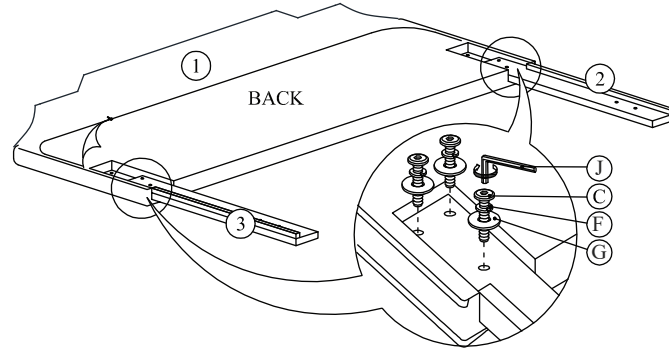


## STEP 2

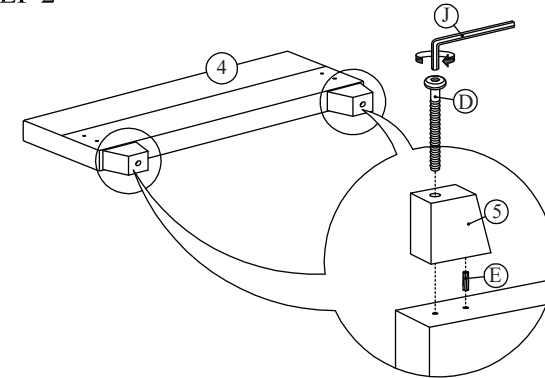


## STEP 3

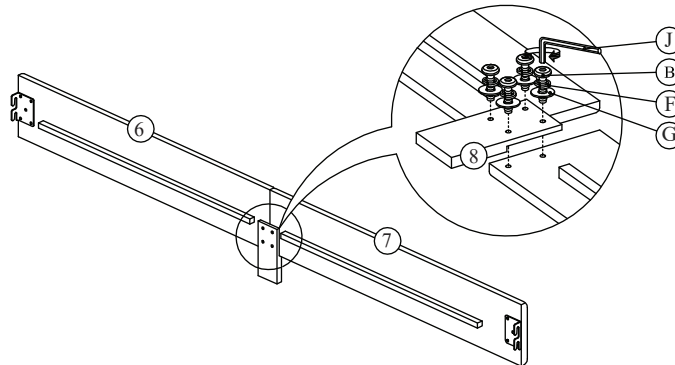


## STEP 4

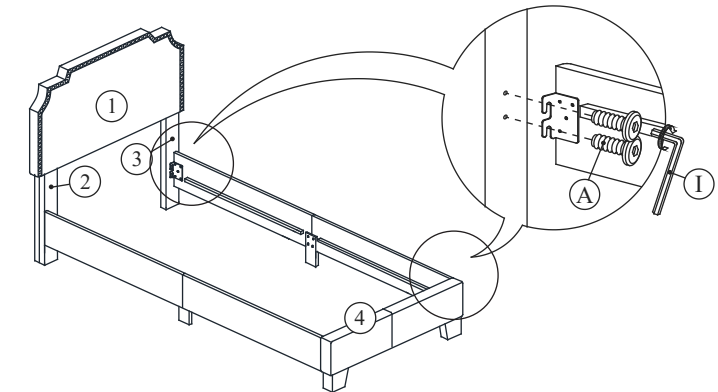

## STEP 5

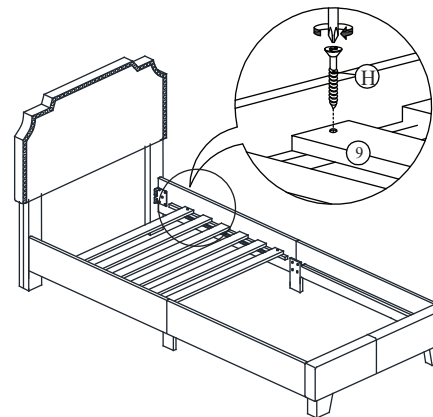

## STEP 6

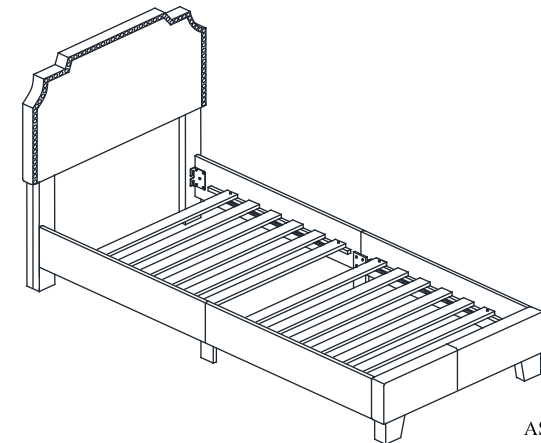

ASSEMBLY  
COMPLETED