




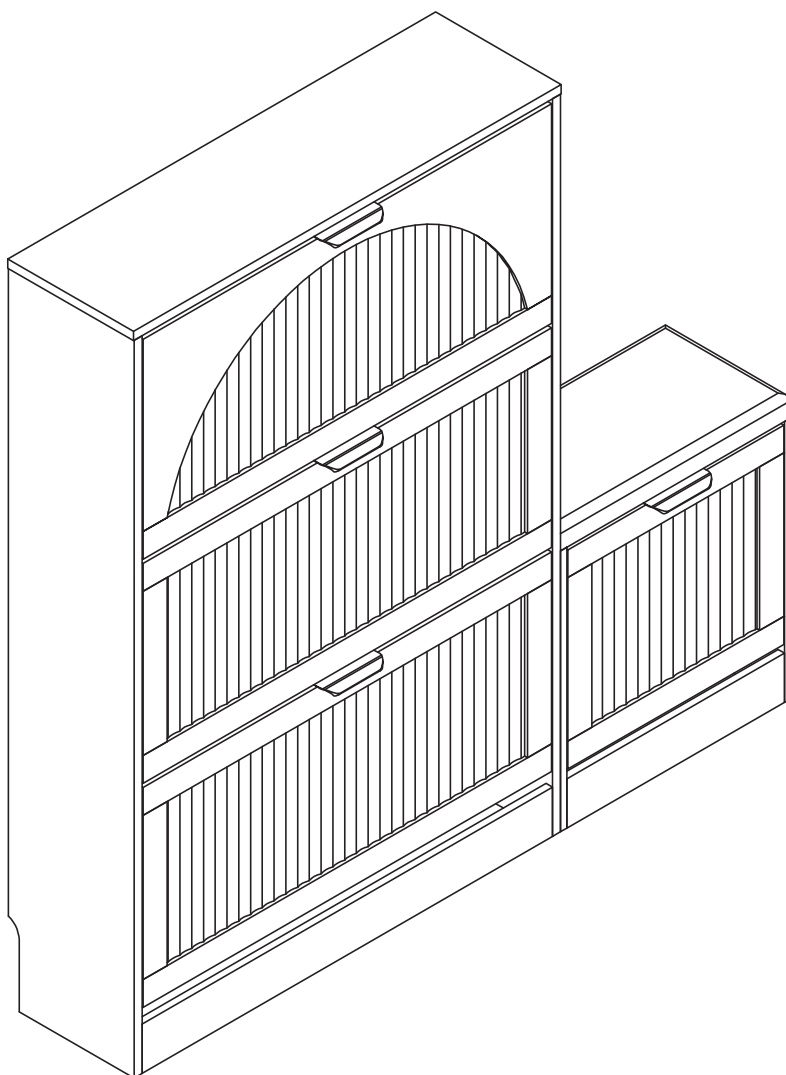


Please note: Items cannot be returned once assembled.


Installation & Assembly




IT IS RECOMMENDED
TO USE POWER TOOLS

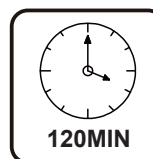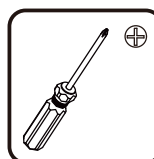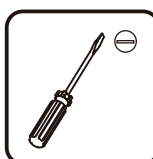


120MIN

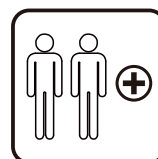


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

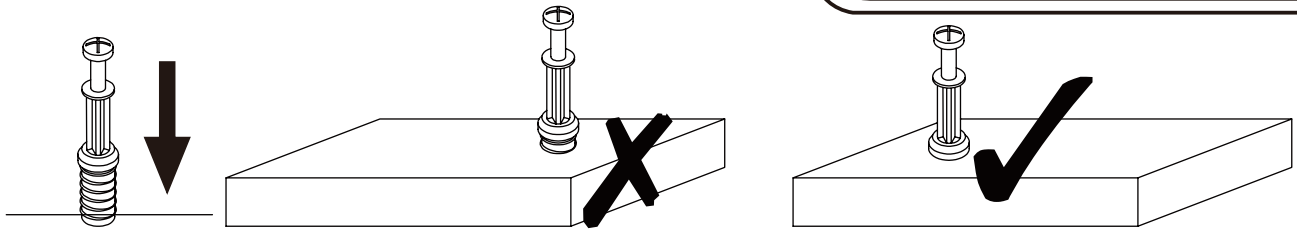


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

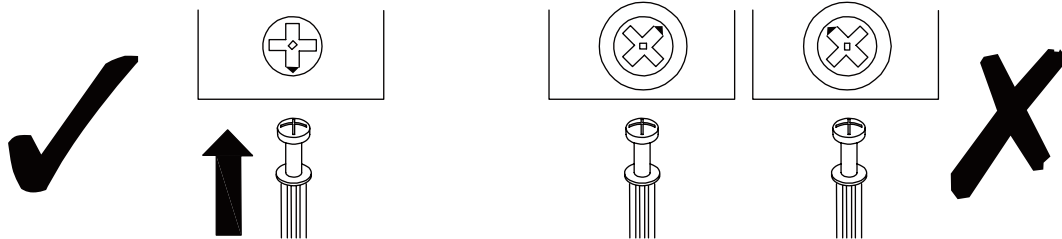











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.







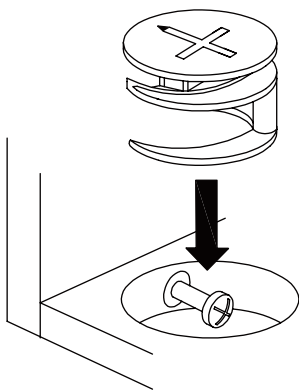







EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

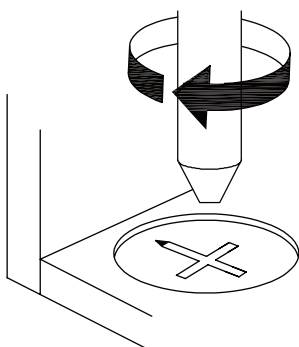

EN_Turn cam lock clockwise to tighten.

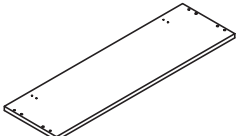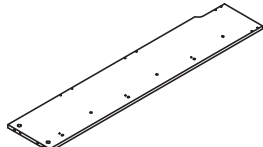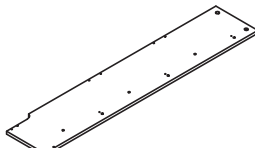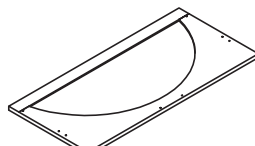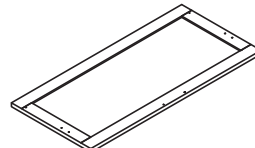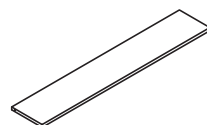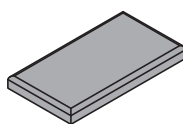NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x2	
⑤		x2	
⑥		x1	
⑦		x2	
⑧		x6	
⑨		x3	
⑩		x1	

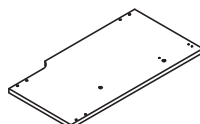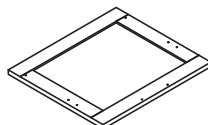
NO.	PARTS	QTY	SPARE
⑪		x1	
⑫		x1	
⑬		x1	
⑭		x2	
⑮		x1	
⑯		x2	
⑰		x1	
	 Hardware Kit	x1	

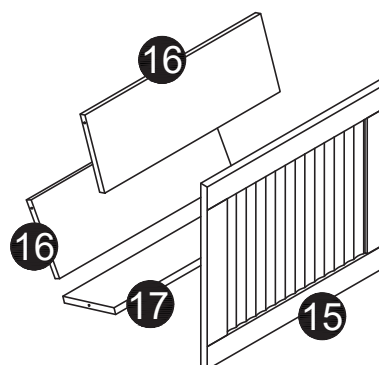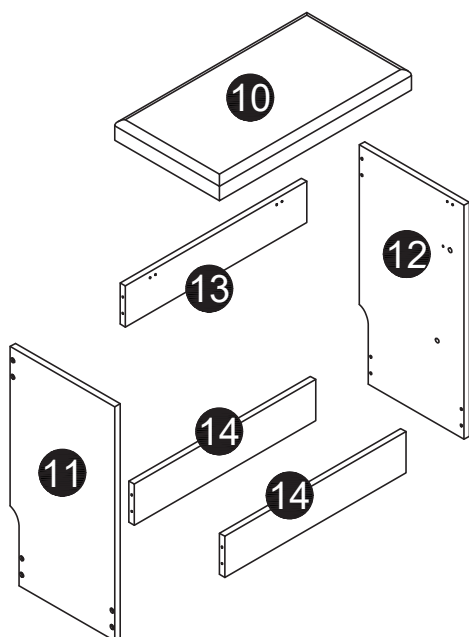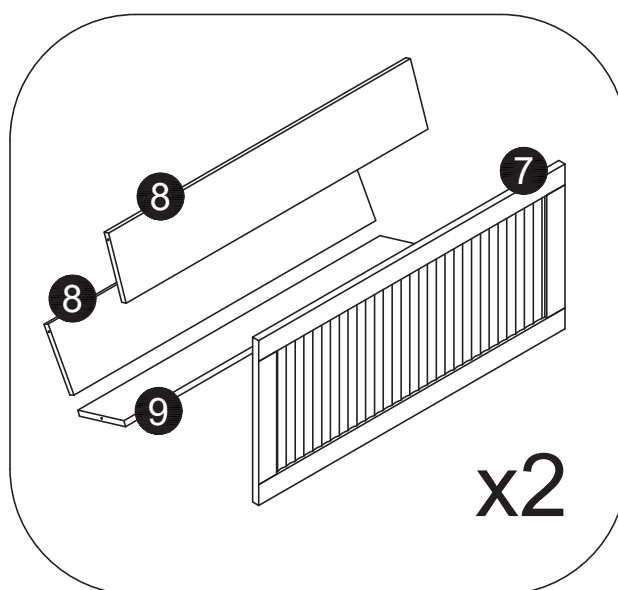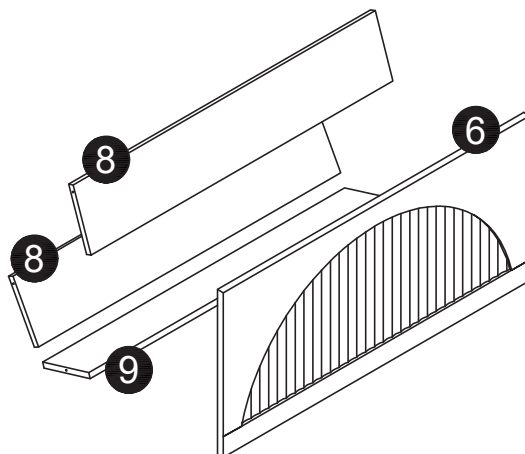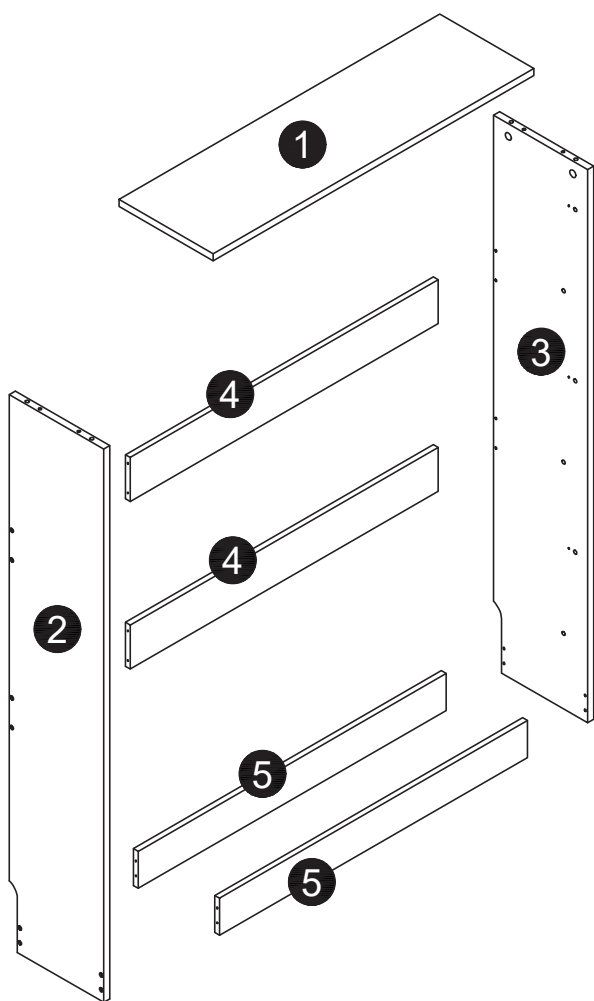

A x4 Ø6x35mm	B x4 Ø15x10mm	C x4 Ø6x30mm	D x30 Ø4x35mm +3(spare)	E x64 Ø3.5x12mm +5(spare)	F x8 +1(spare)
G x8 +1(spare)	H x8 +1(spare)	I x2	J x28 +2(spare)	K x4	L x4
M x2 M-1 M-2	N x4	O x16 Ø4x10mm +1(spare)	R x4		



E x6	F x6
-------------	-------------

01

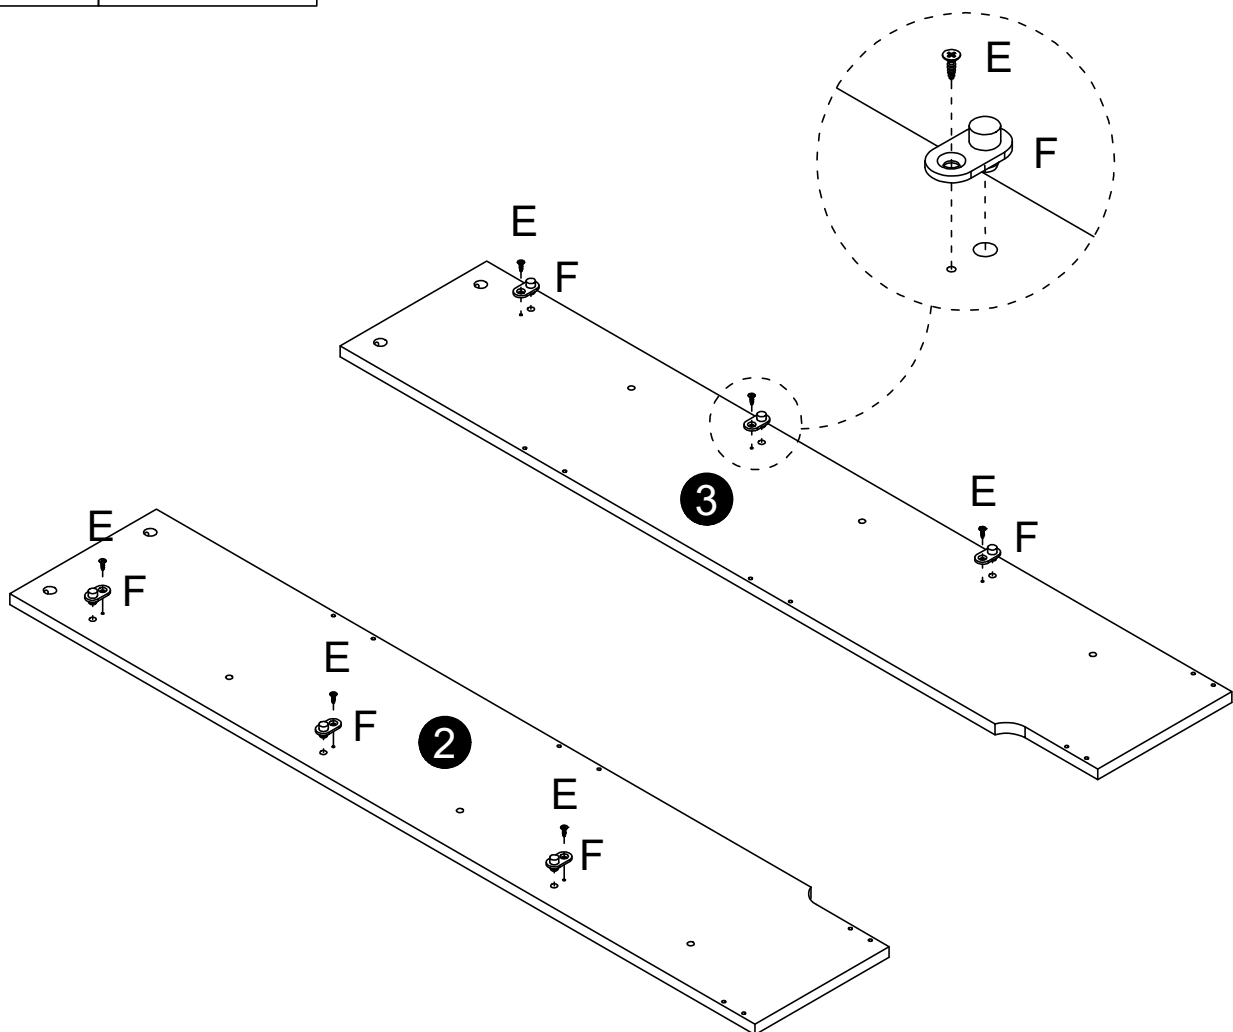

D x16

02

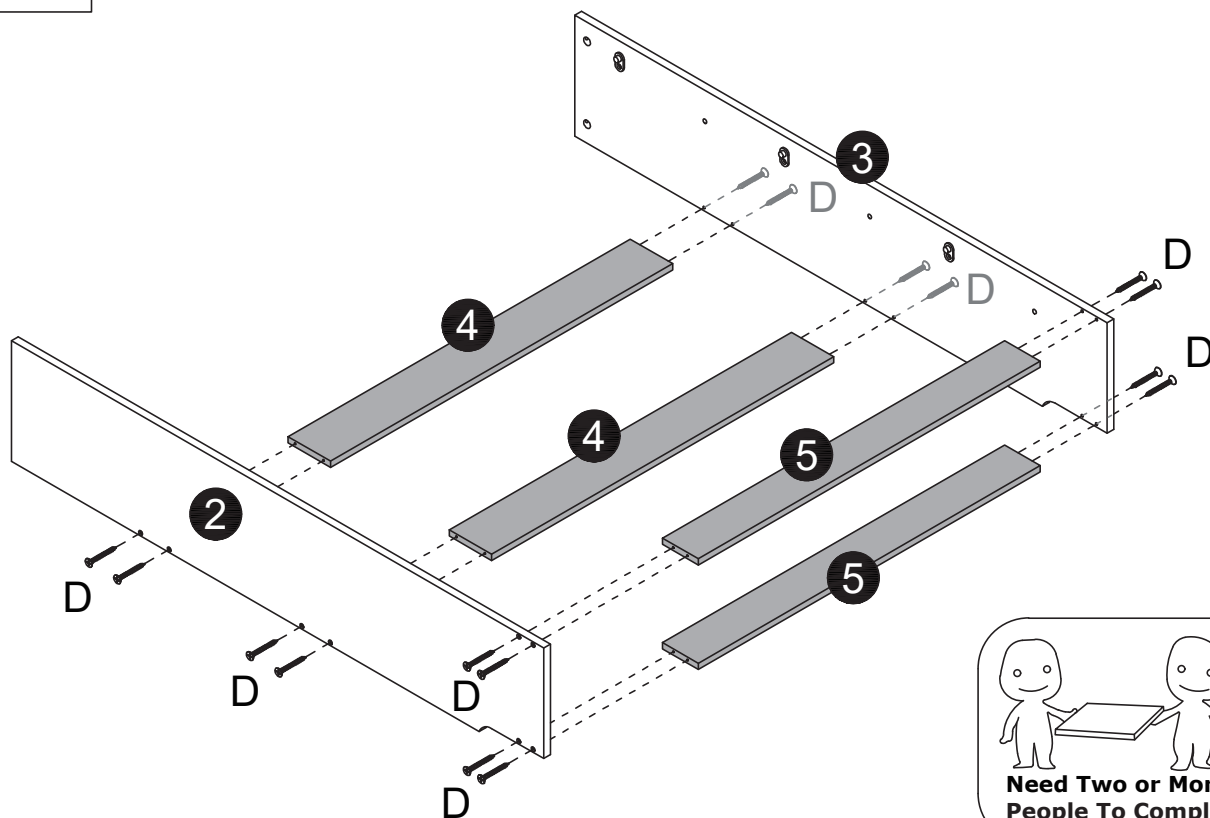


Need Two or More
People To Complete

A x4


M x2

03



M-1

M-2

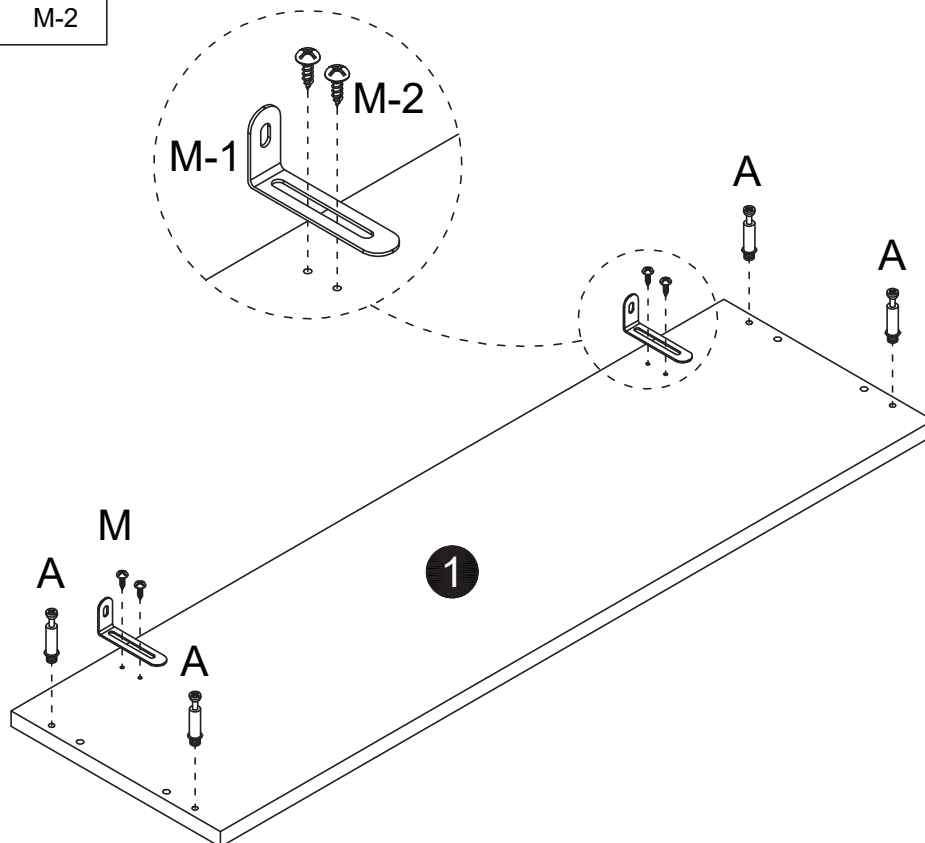


B x4




C x4




04

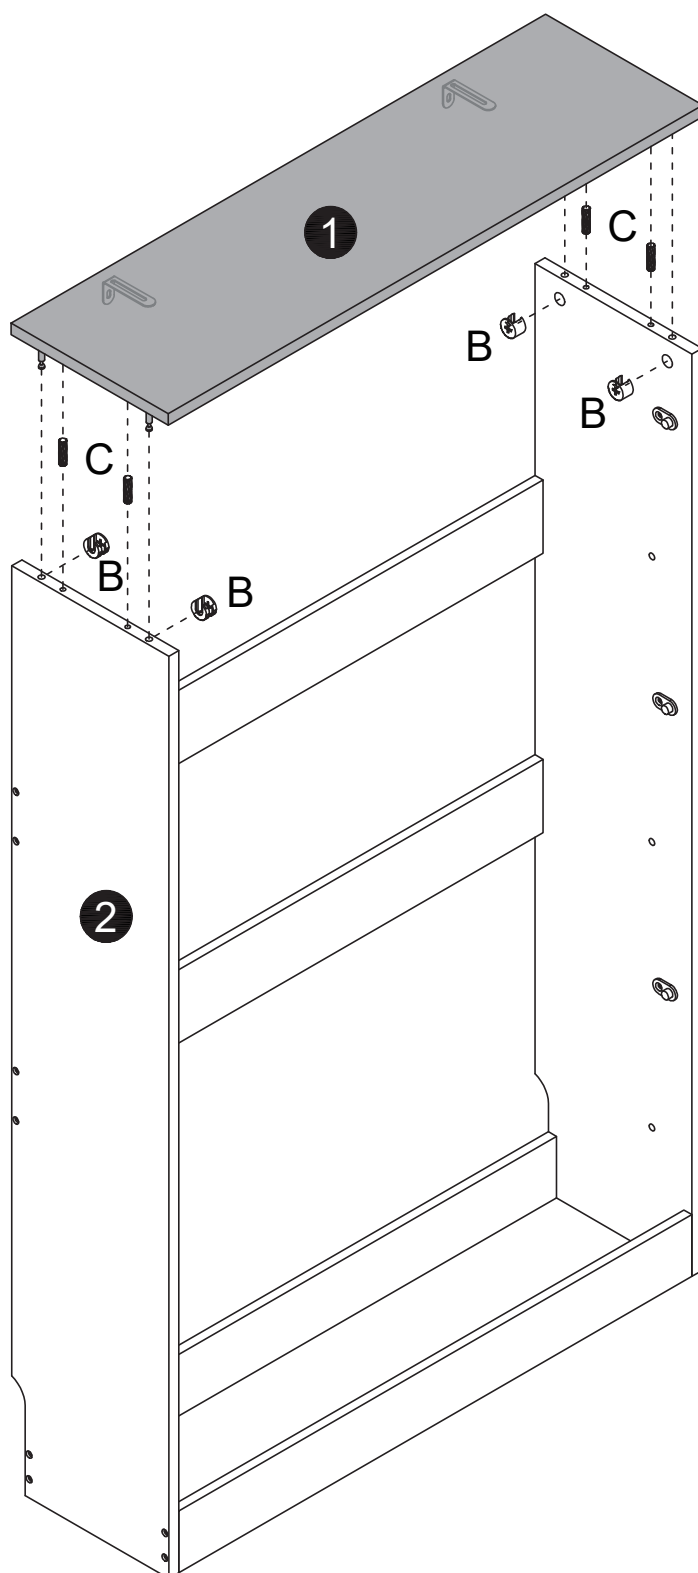


D x2



I x2




WALL

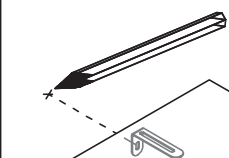

(1)x2

First, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.


WALL

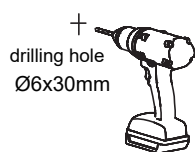

(2)x2

Then use a tape drill to make holes in the wall that are suitable for the product screws.


WALL

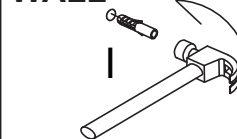

(3)x2


Then, put the expansion bolt into the hole

WALL

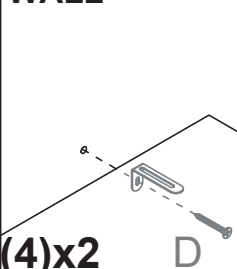

(4)x2

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.


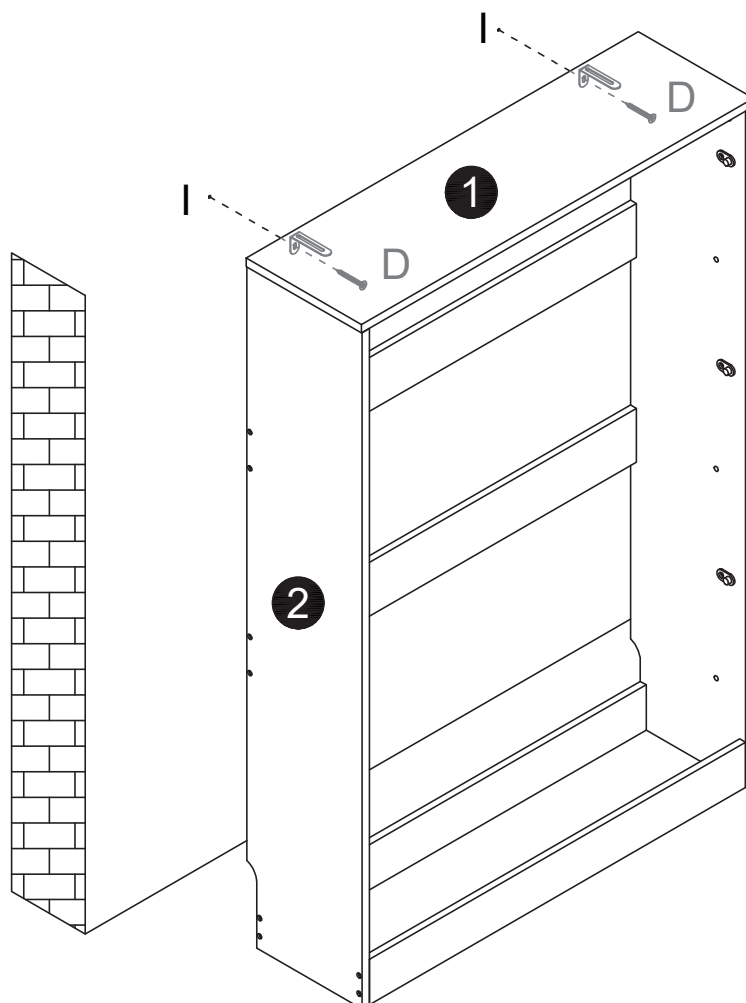


E x6




L x1



R x1

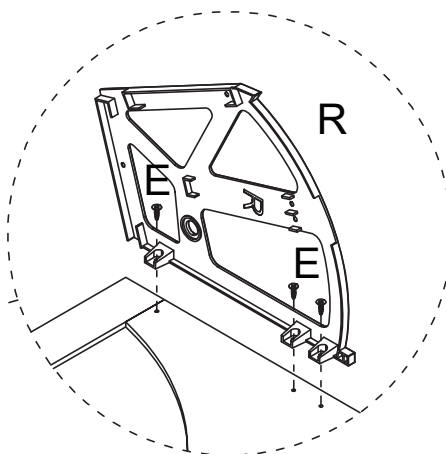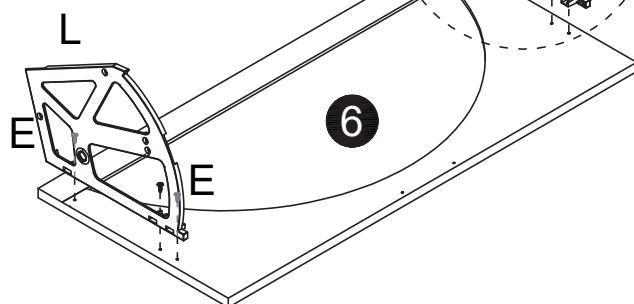

E x2

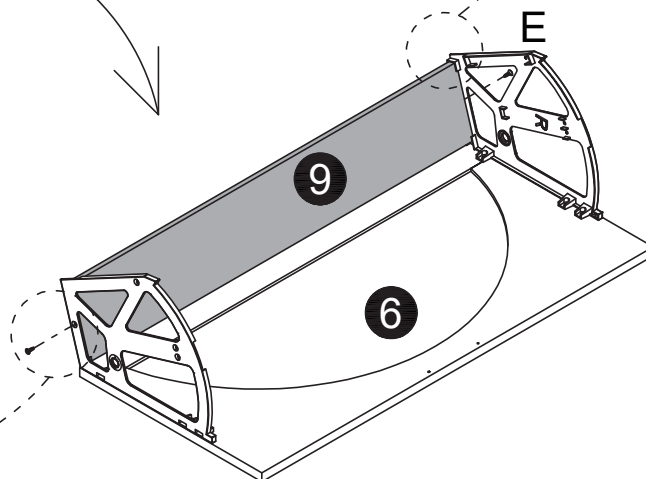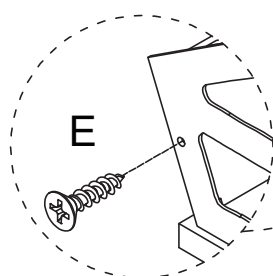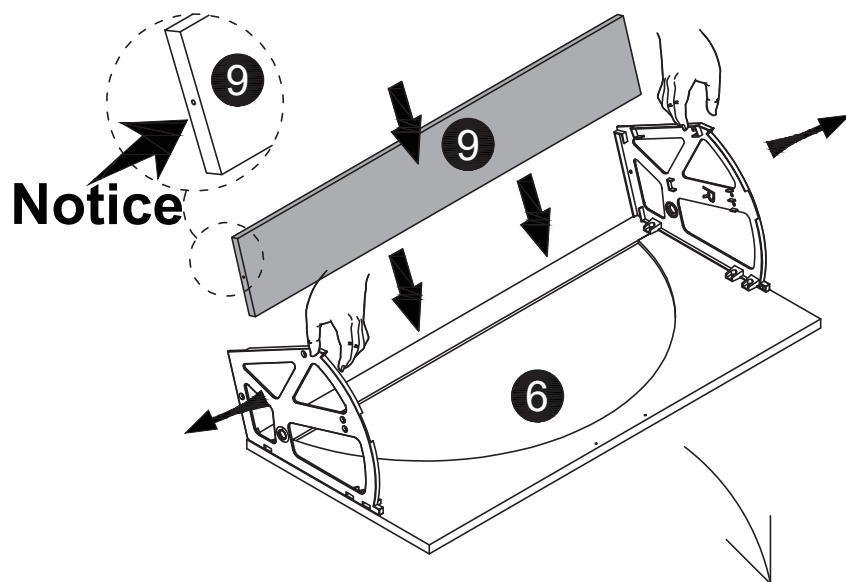


E x2

08




Notice

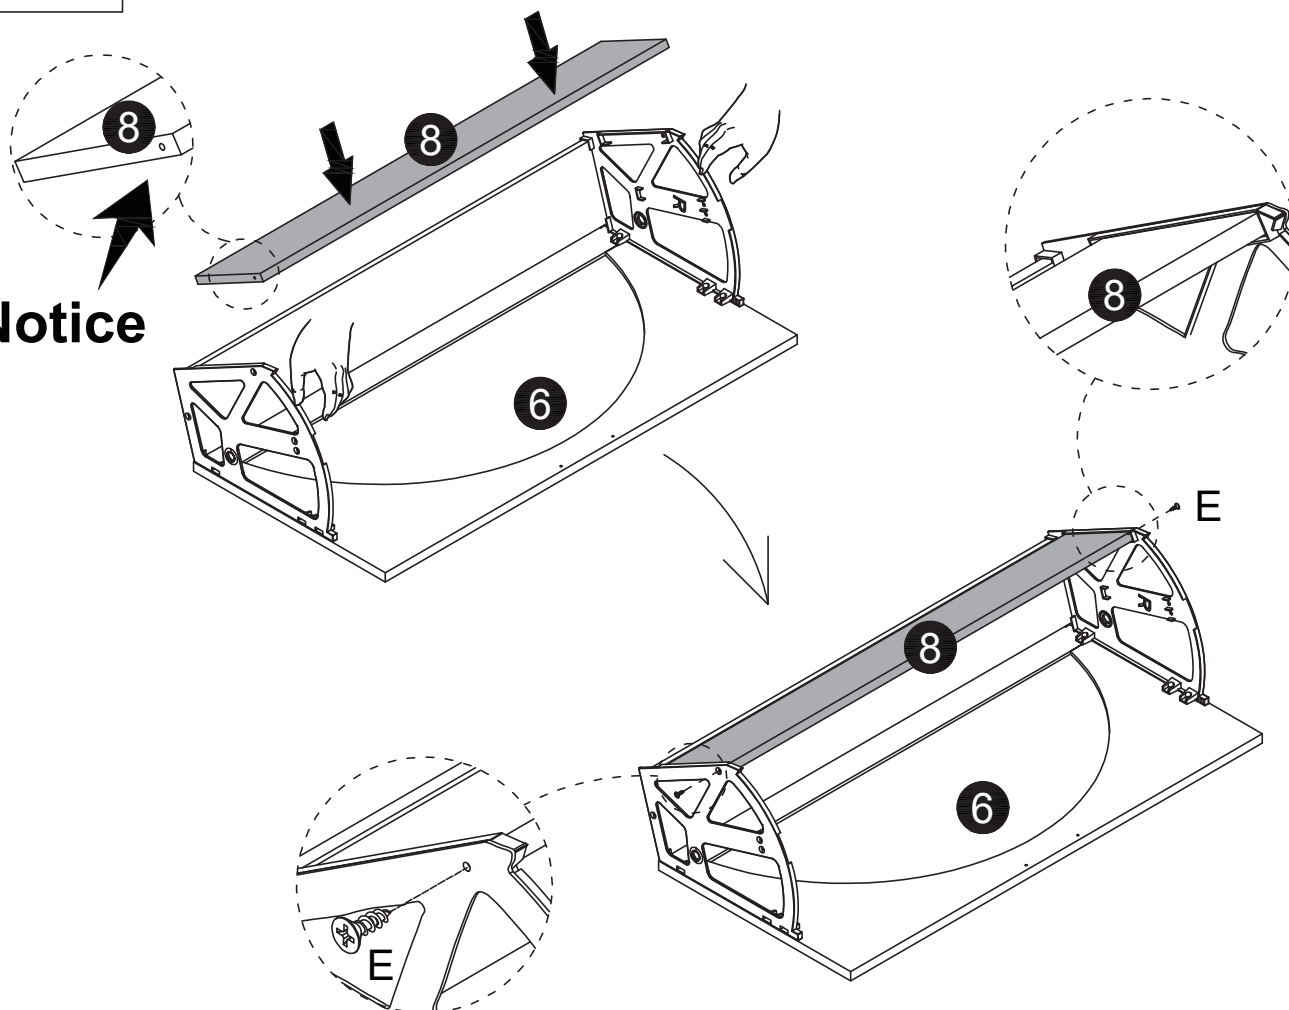

E x2

K x1


09

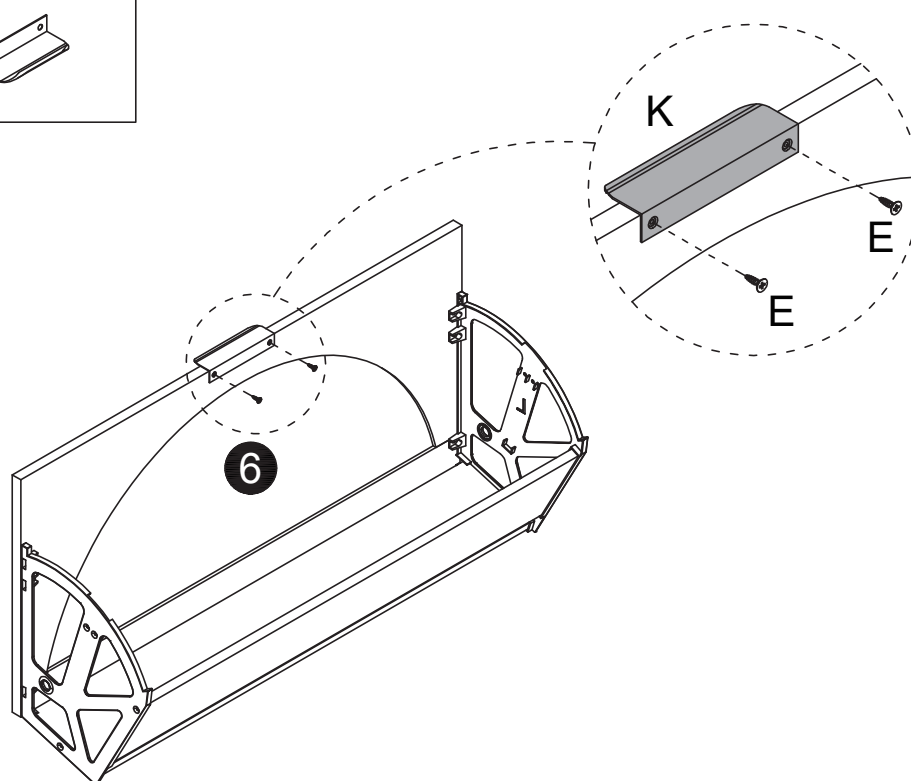



E x12



L x2





R x2

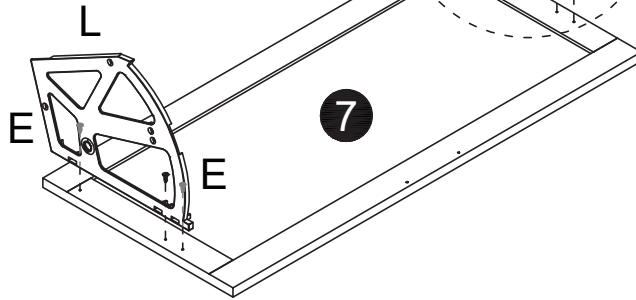

x2

E x4

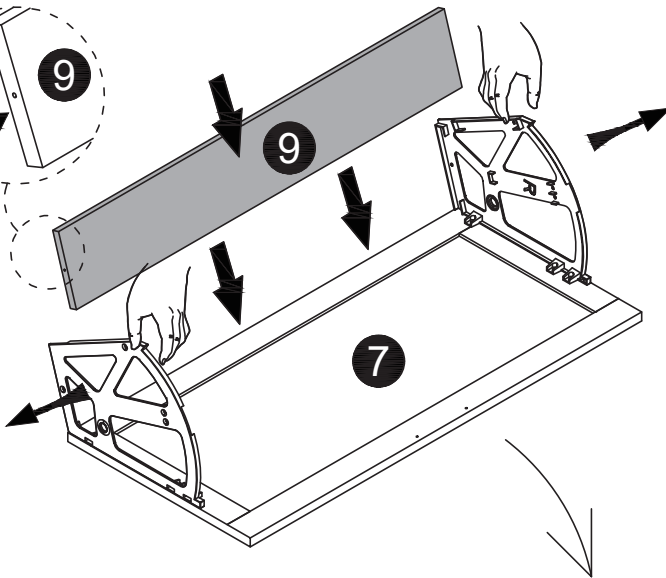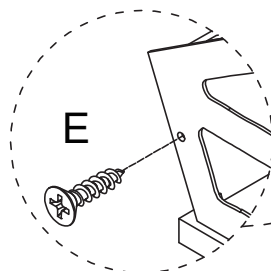**Notice****Notice**


x2

E x4

12



Notice

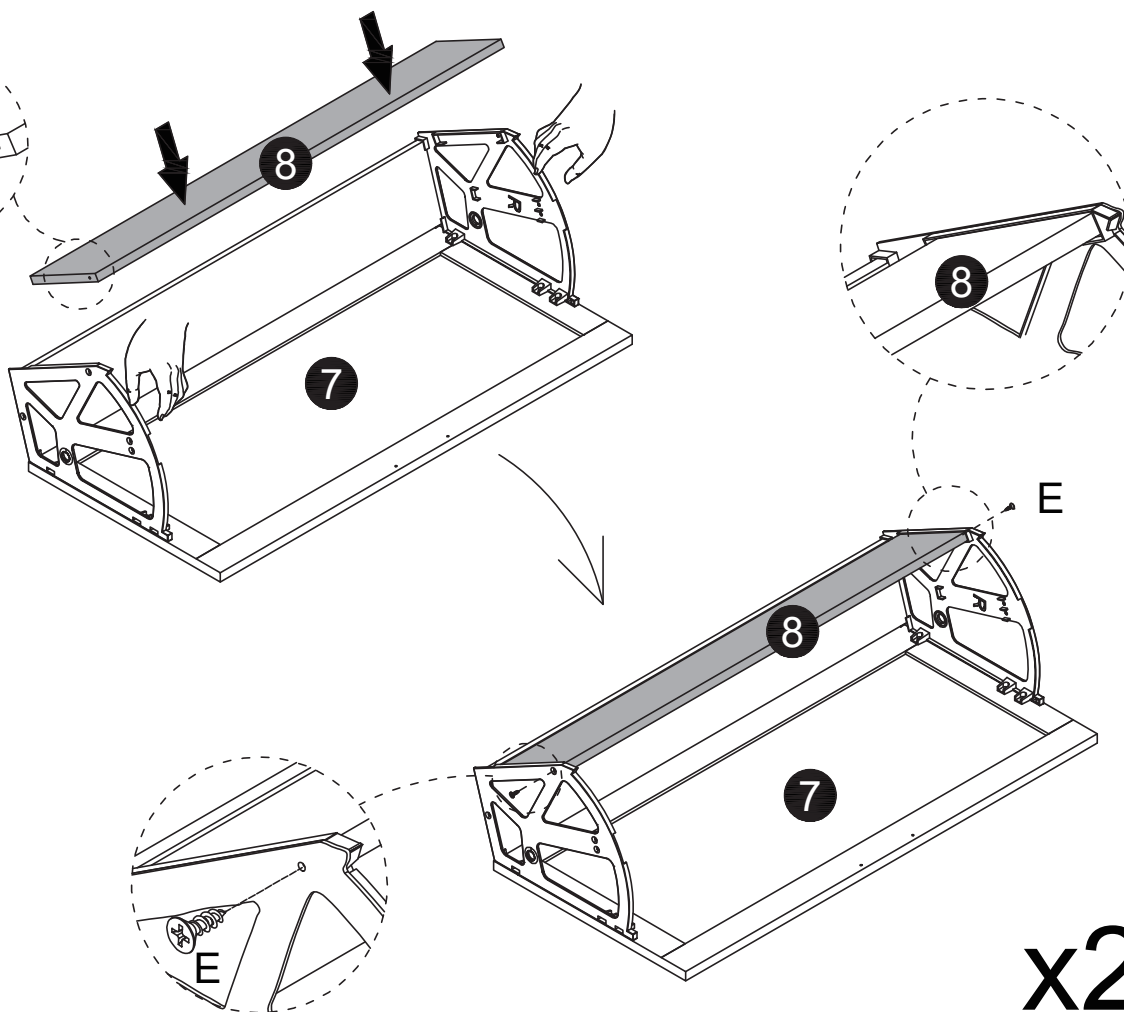


x2

E x4

K x2

13


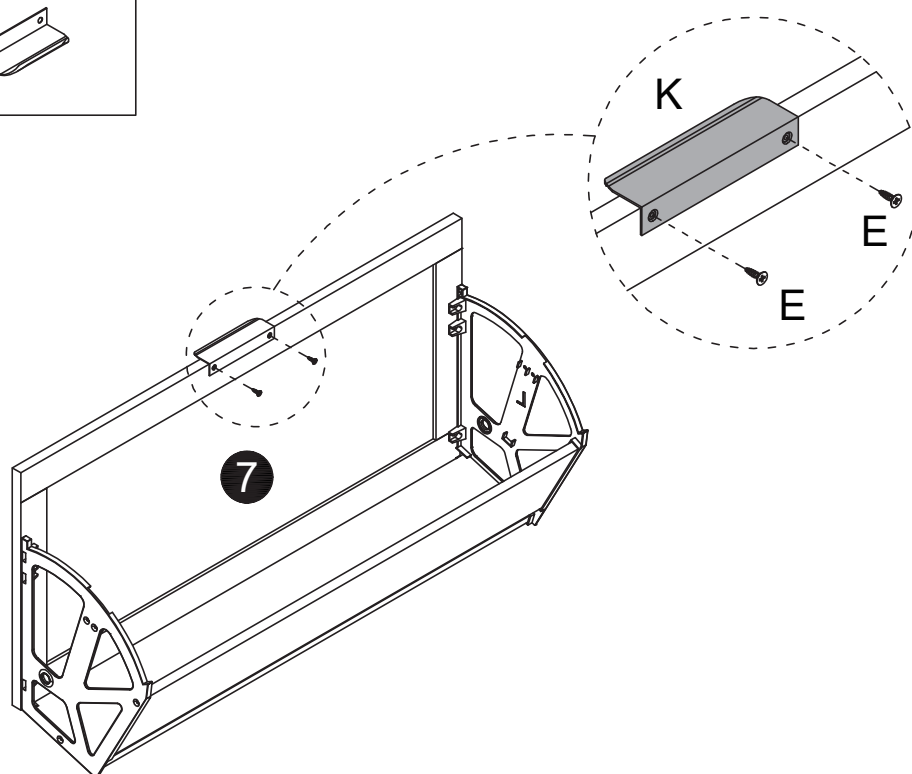


x2

G x6



H x6

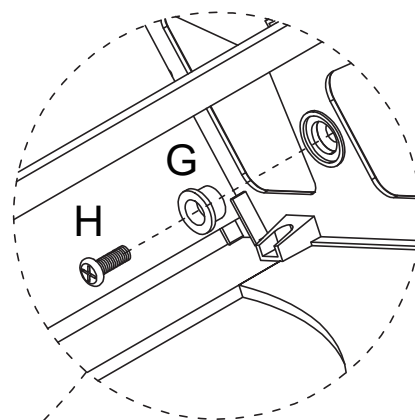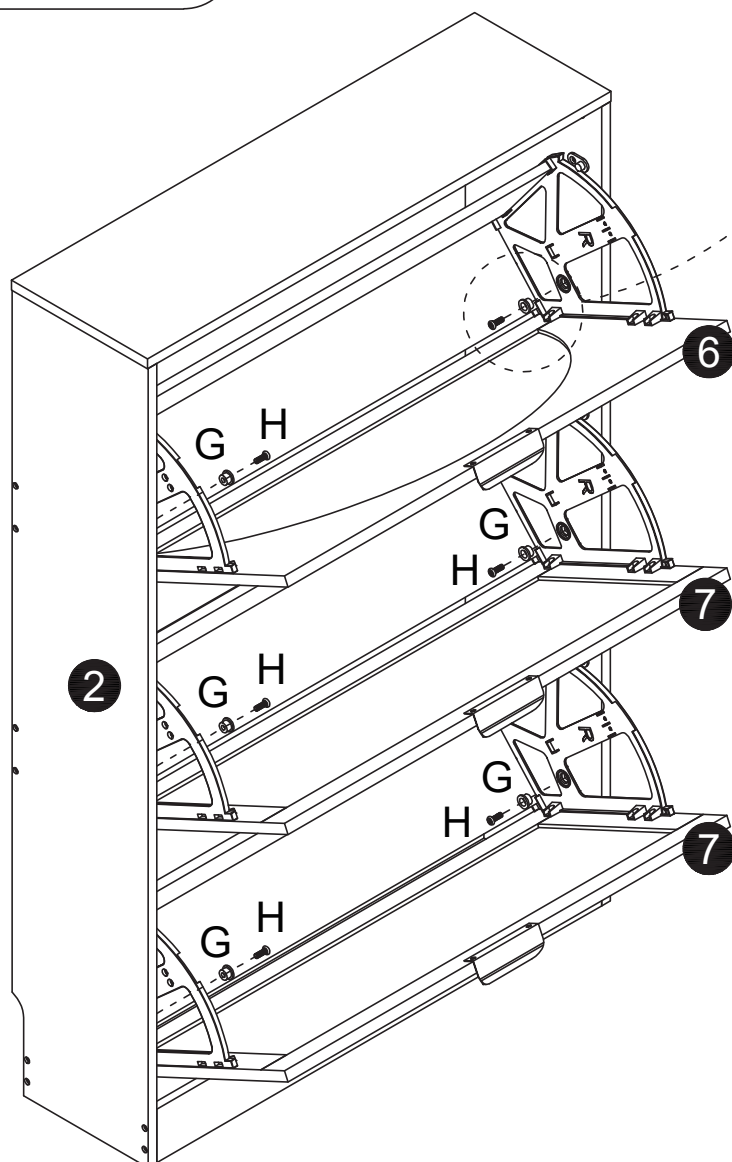



Notice 6

Note: When installing H, it is sufficient to reach 90% progress. Installing 100% may cause damage to G.


E x6



15

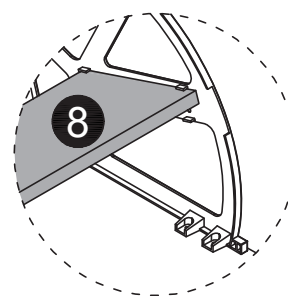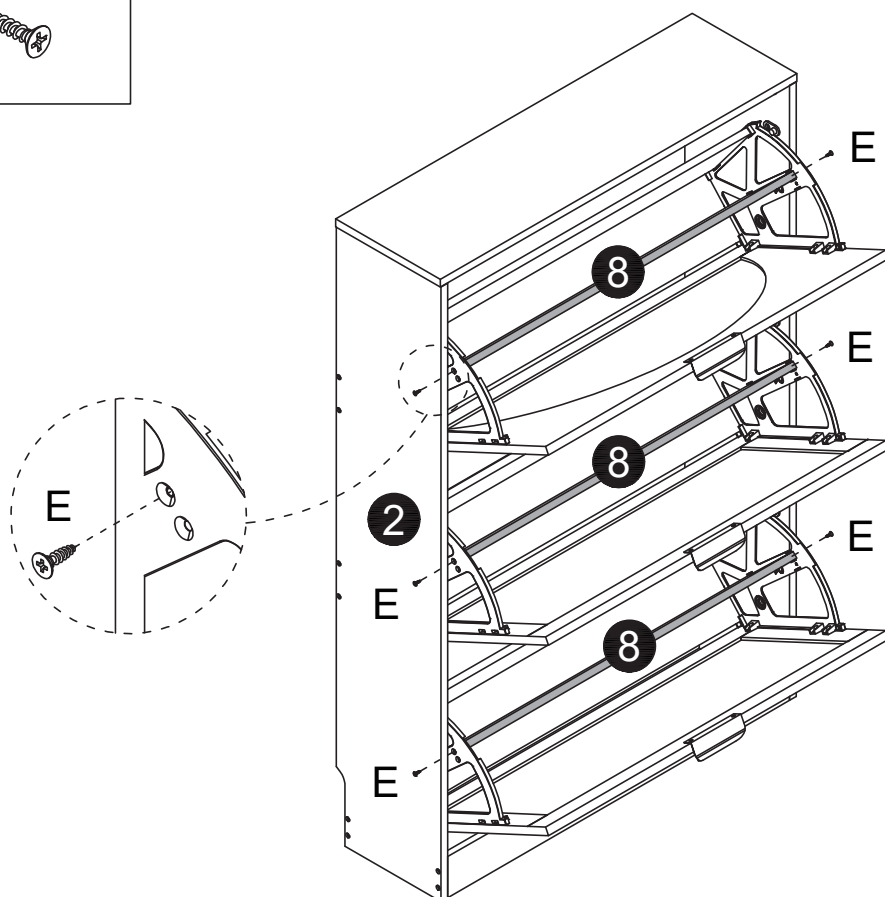


OR

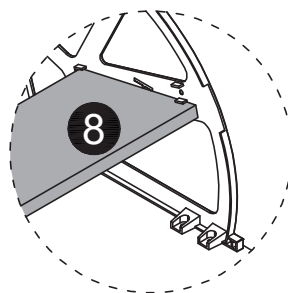

J x16






16

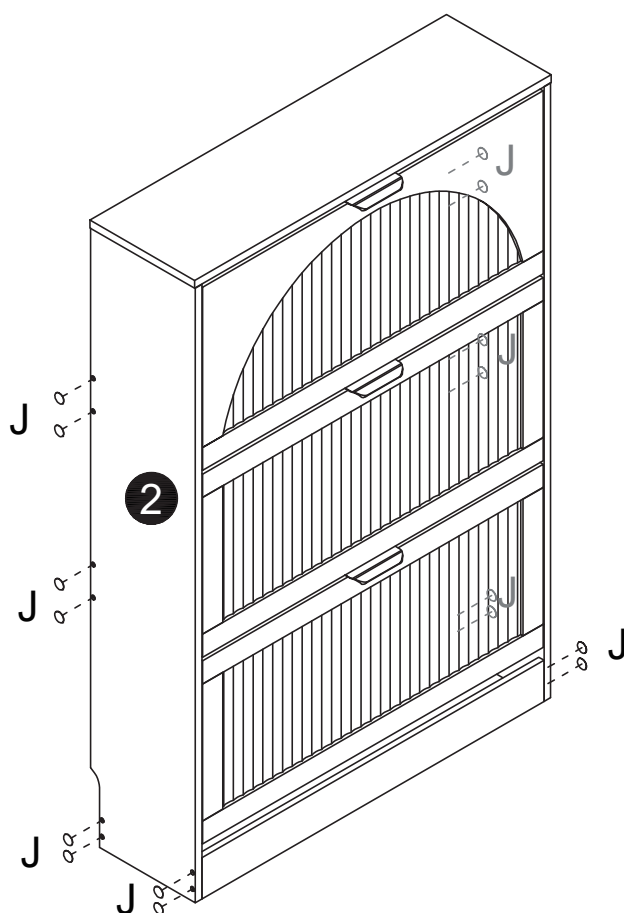


E x2






F x2

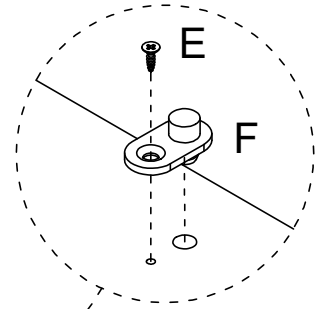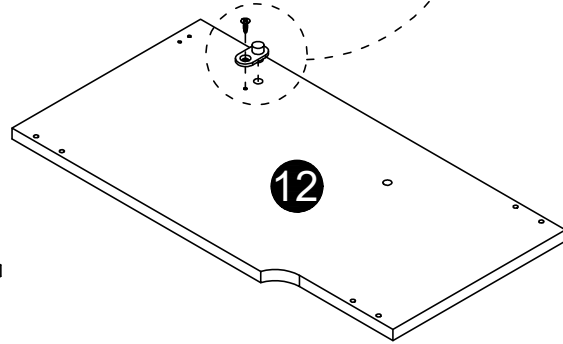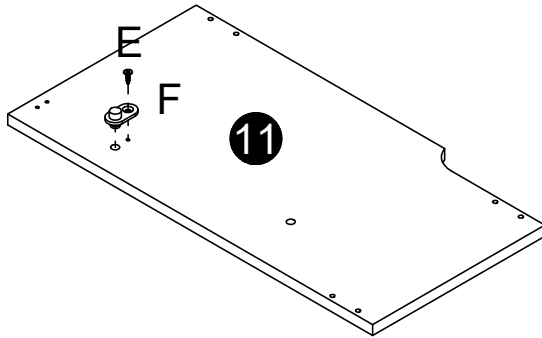

N x4





O x8

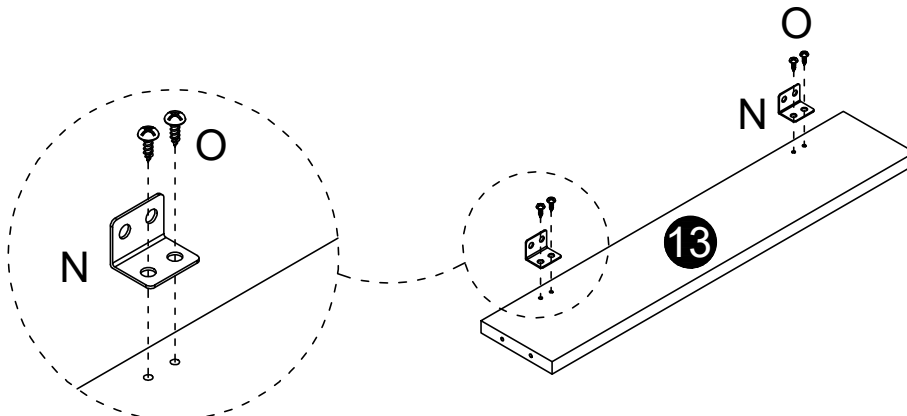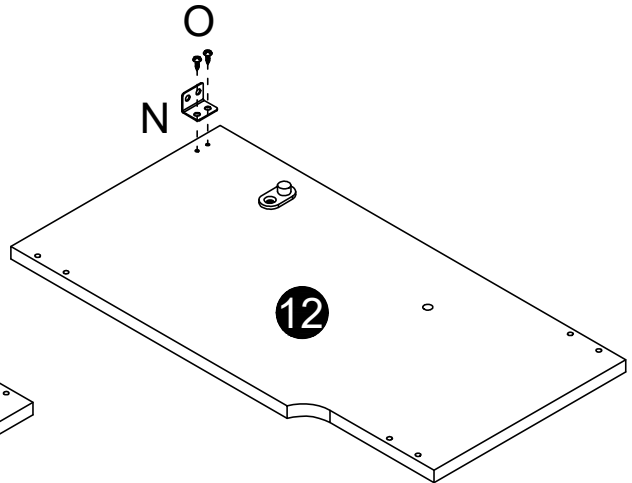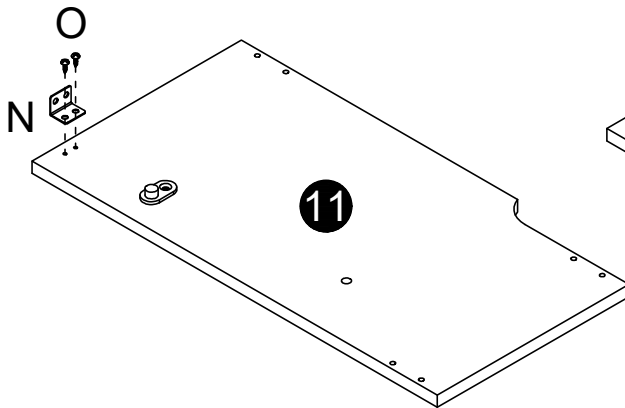


D x12

19

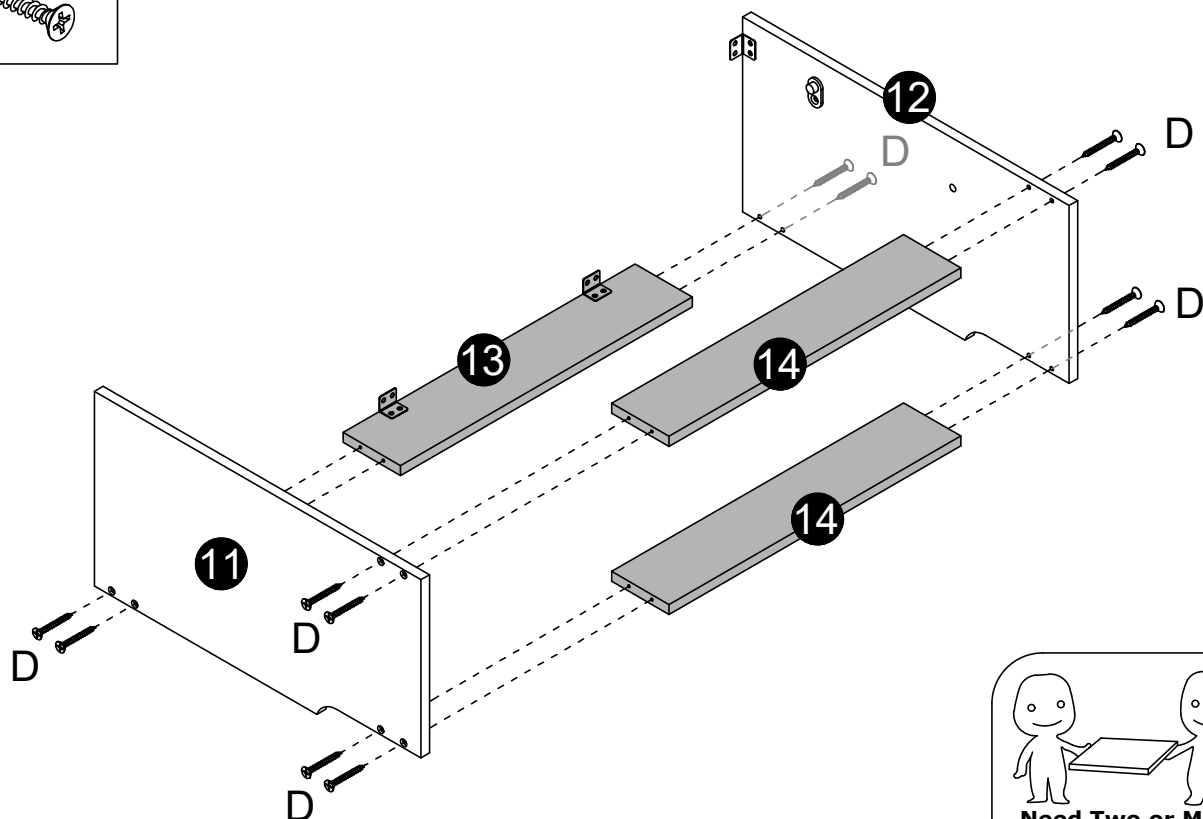


O x8

20

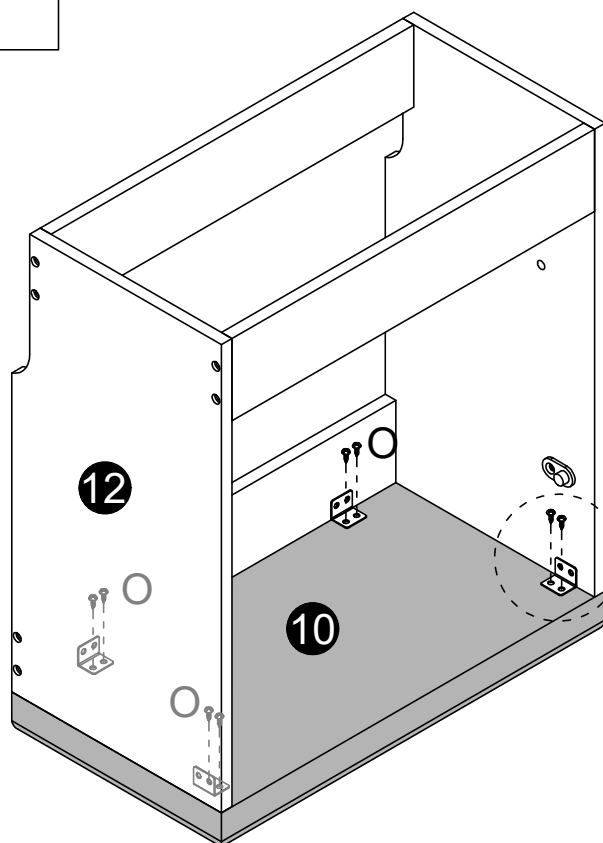

Note: Panel #10 has no holes. Its material allows for direct screw tightening after the planned position is determined.

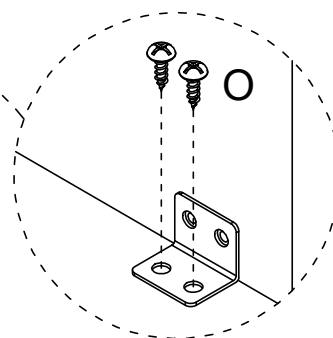


E x6


L x1



R x1

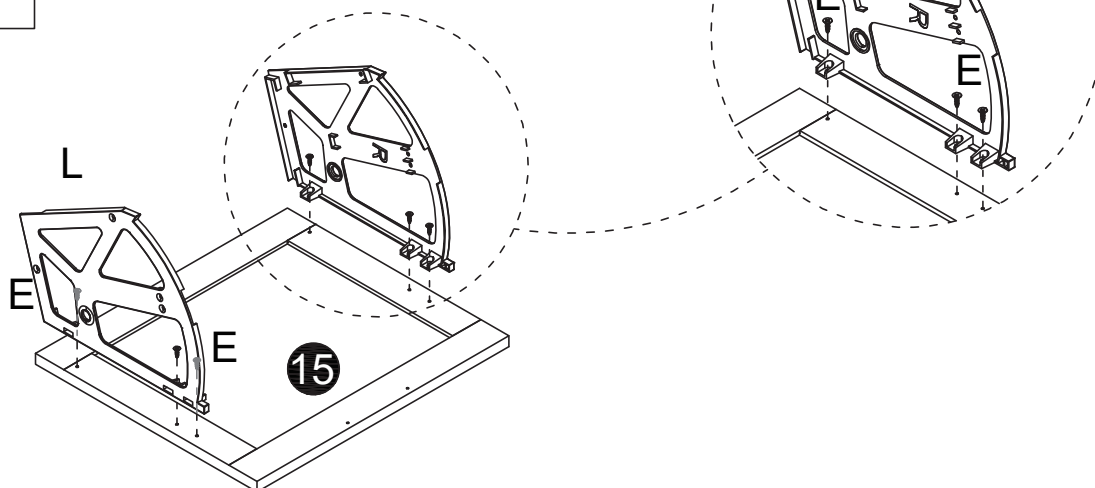


E x2

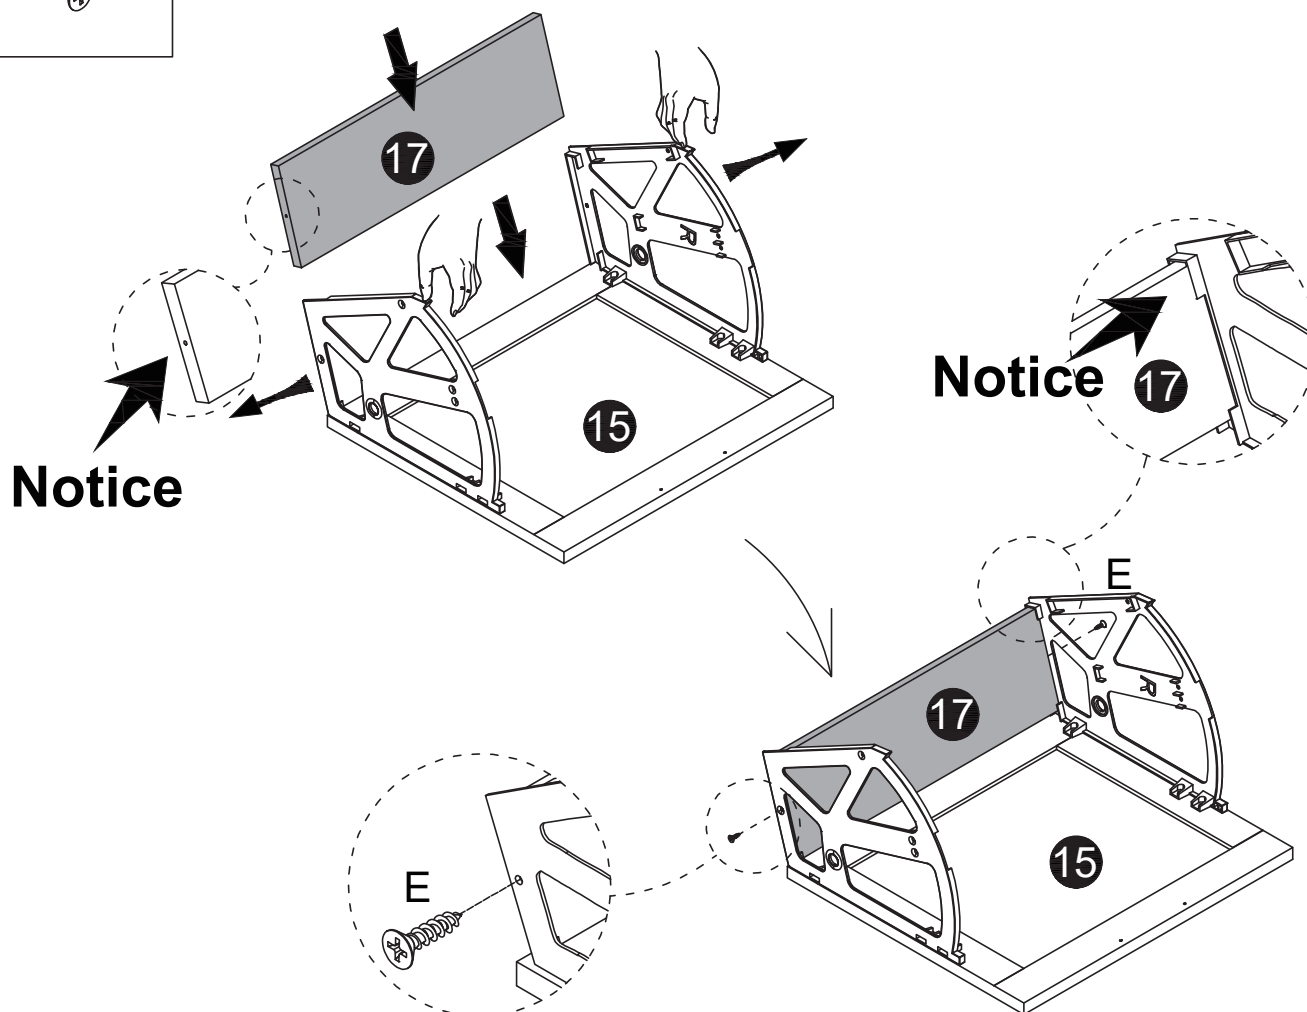

E x2




Notice

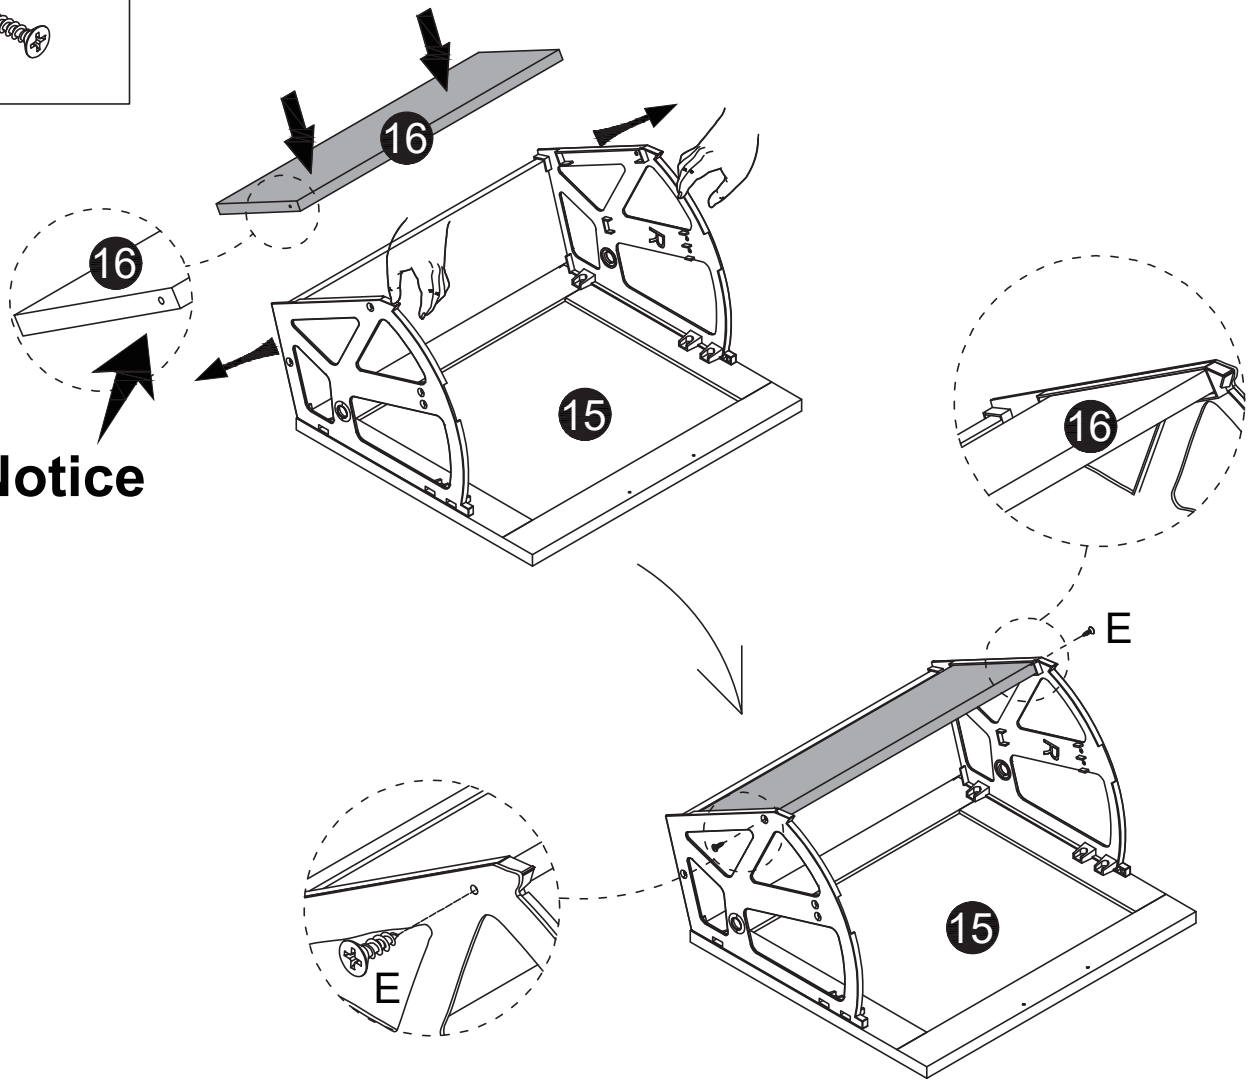

E x2



K x1

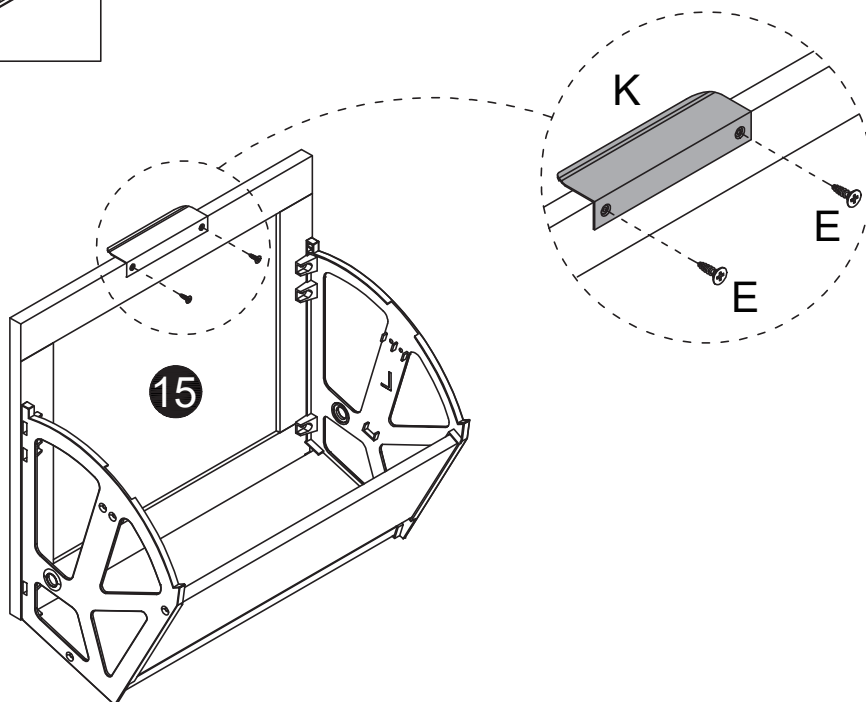



G x2





H x2



Note: When installing H, it is sufficient to reach 90% progress. Installing 100% may cause damage to G.

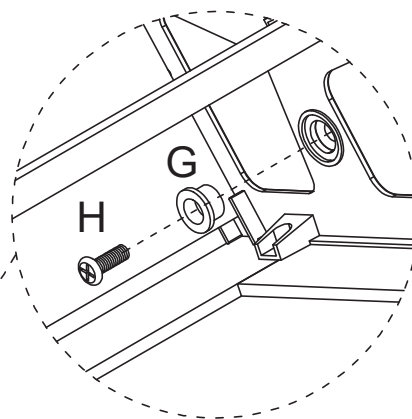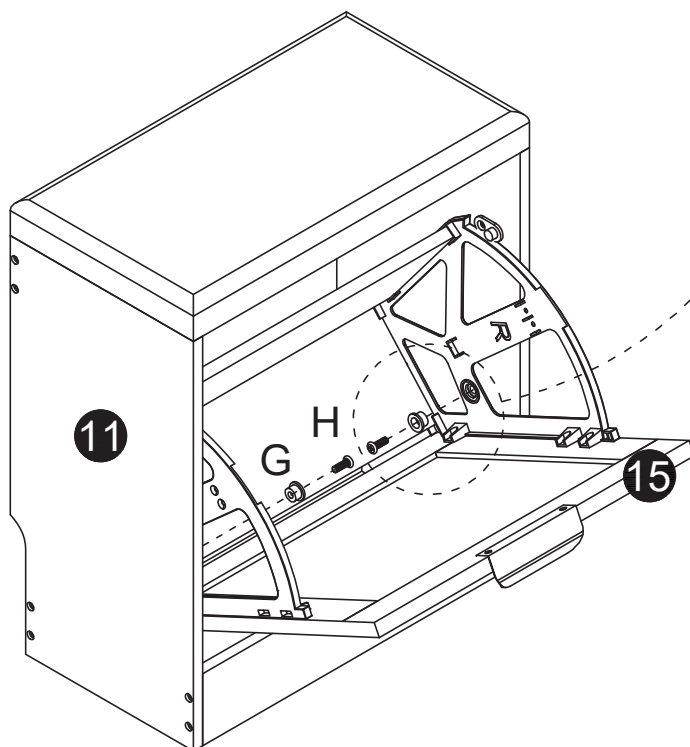

E x2

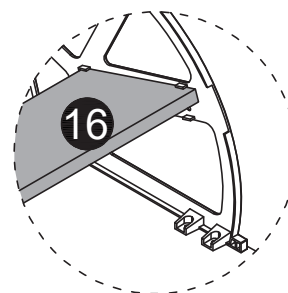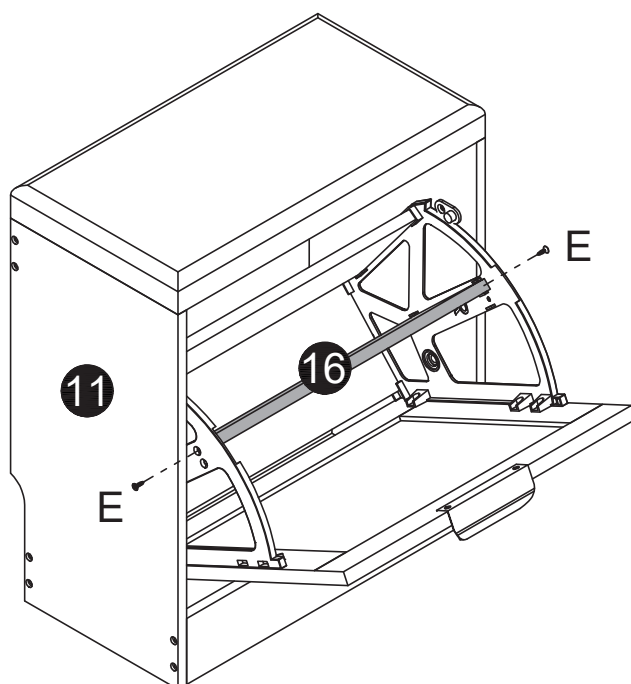

OR

