



Installation Instruction

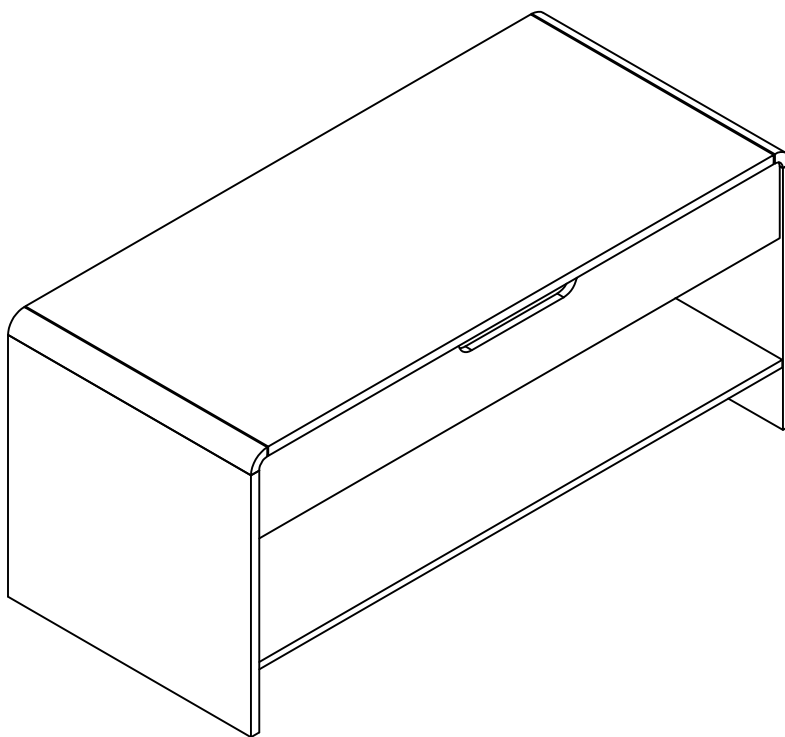

Assembling


What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation

 **100** | **35**
lbs table top lbs per

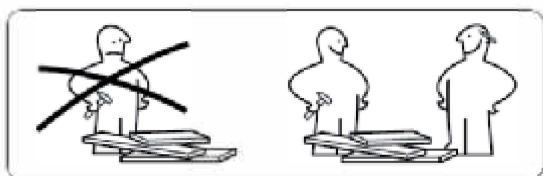


What' included

Code	Description	Qty
A	Cam Bolt	31
B	Cam Lock	31
C	Wooden Dowel	24
D	Screw	10
E	Hole position sticker	31
F	Left regulator	1
G	Right regulator	1
H	Screw	20
I	Foot nail	7
J	Wrench	1
K	Phillips screwdriver	1

The Hardwares

Ⓐ



Ⓑ




Ⓒ




Ⓓ




Ⓔ



Ⓕ



Ⓖ



Ⓗ



Ⓘ



Ⓙ



Ⓚ




IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product, you can also use power tools (please use power tools carefully)


Included Accessories



Code	Description	Qty
1	Panel	1
2	Bottom plate	1
3	Lateral plate	2
4	Front apron	1
5	Backboard	1
6	Left median plate	1
7	Right center plate	1
8	Laminate	1
9	Curved strip	2
10	Connecting pipe	1
11	Reinforcing strip	1

The Accessoriess

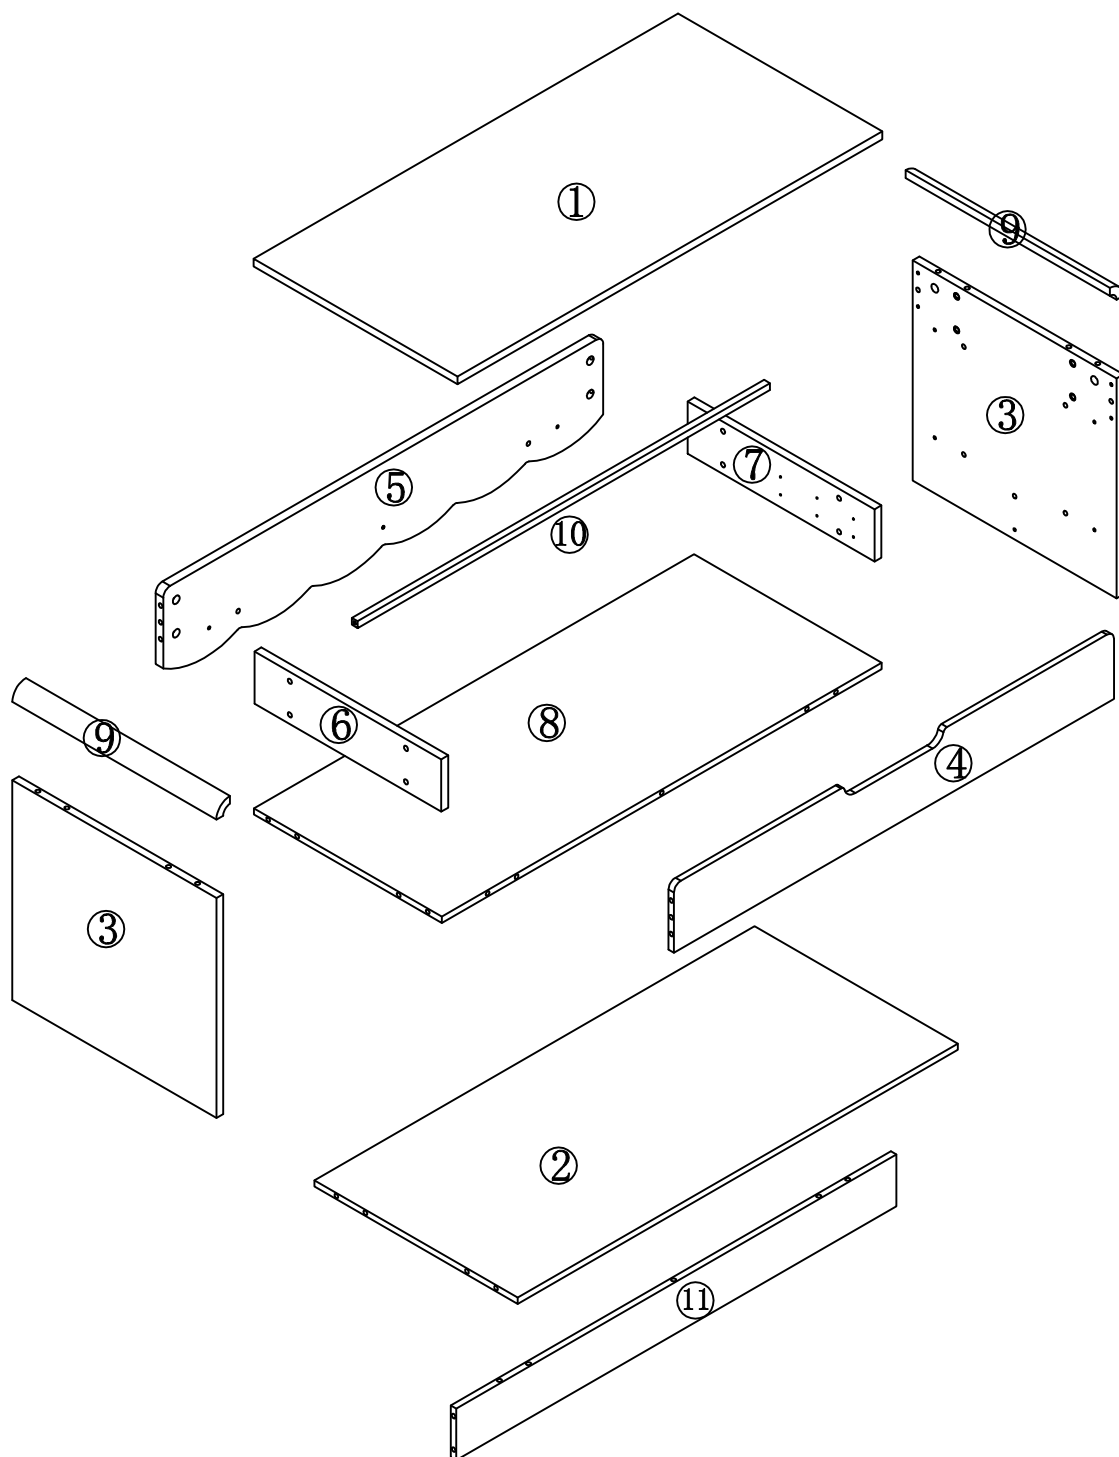



Step 1


A	x 6
	

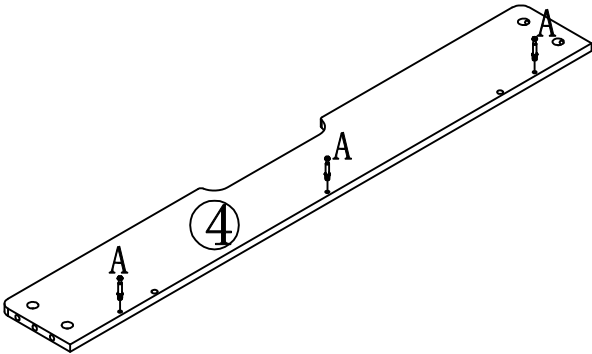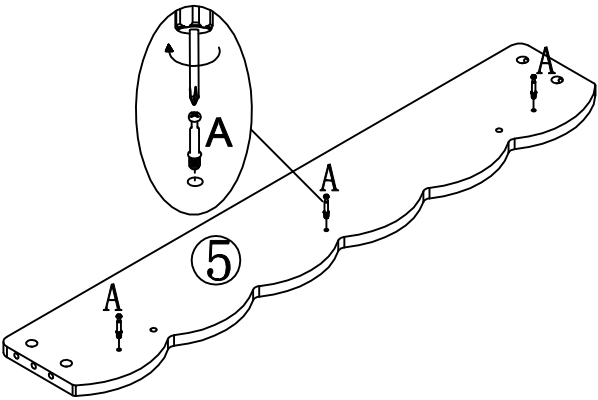


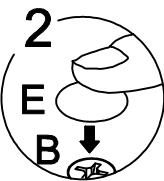
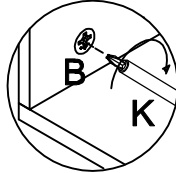
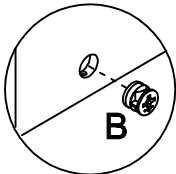
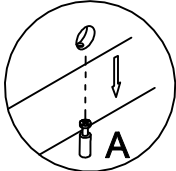
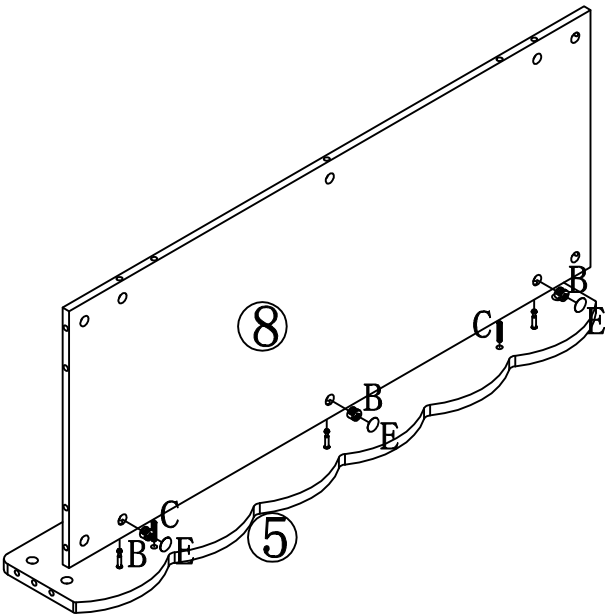
Step 2

B	x 3
	








C	x 2
	

E	x 3
	



K	x 1
	




Step 3

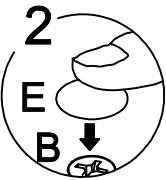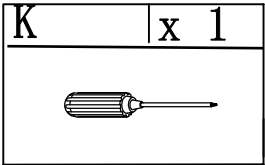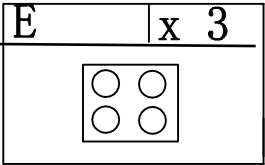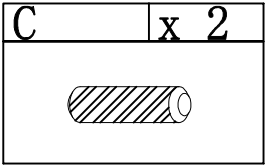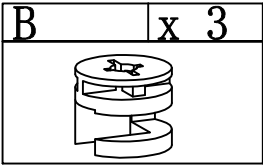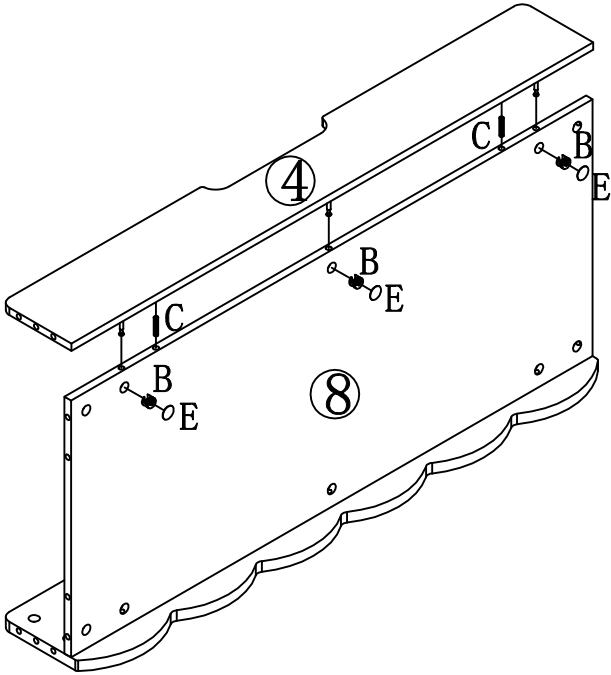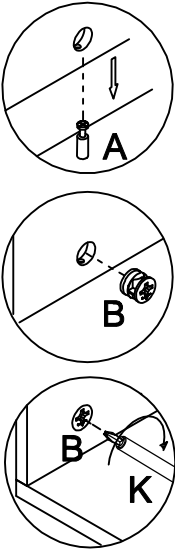


Step 4

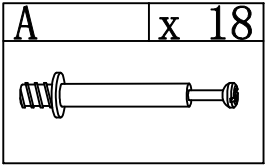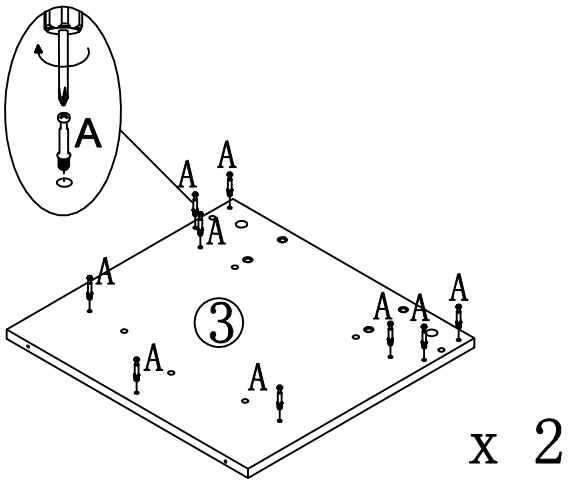



Step 5

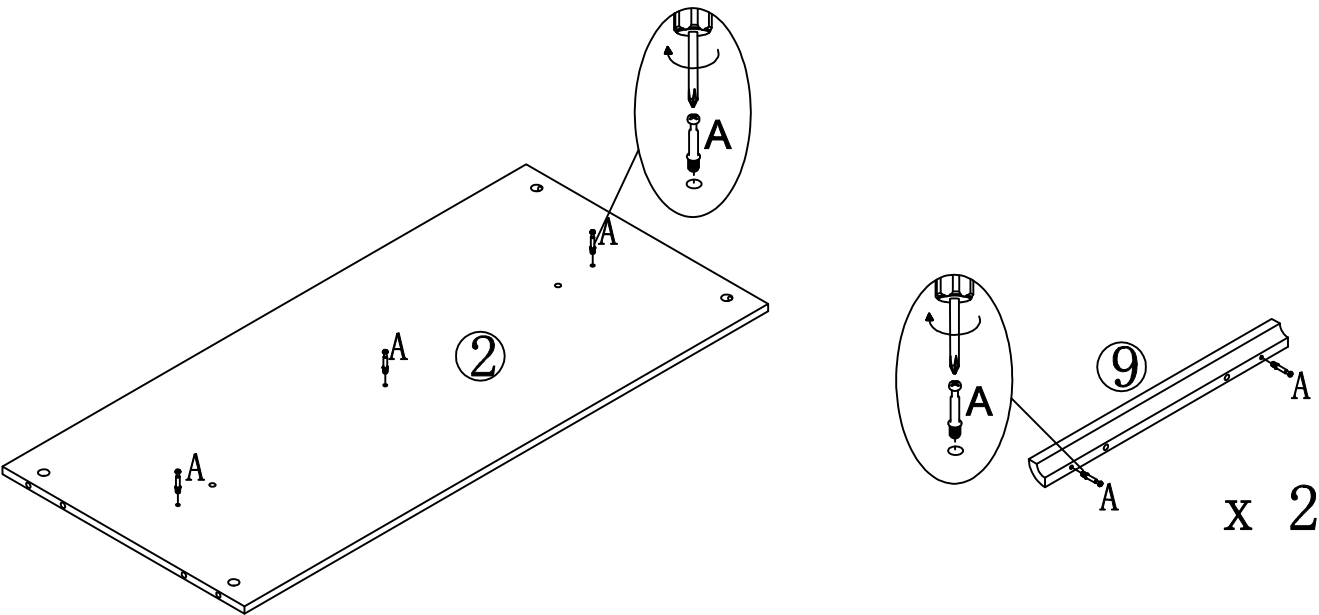
A	x 7
	




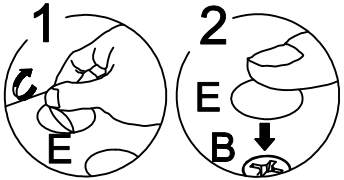
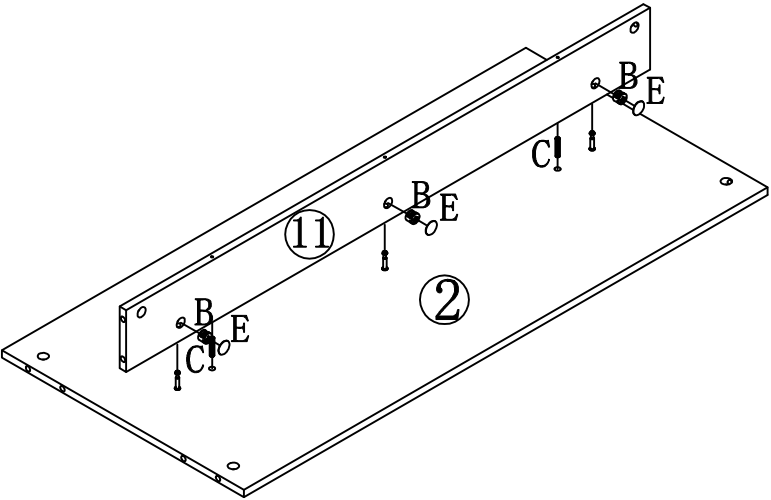
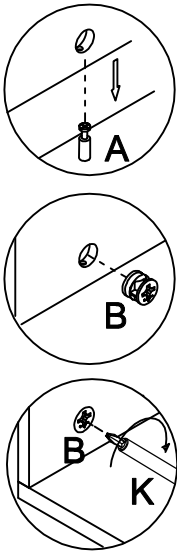
Step 6

B	x 3
	


C	x 2
	

E	x 3
	


K	x 1
	











Step 7

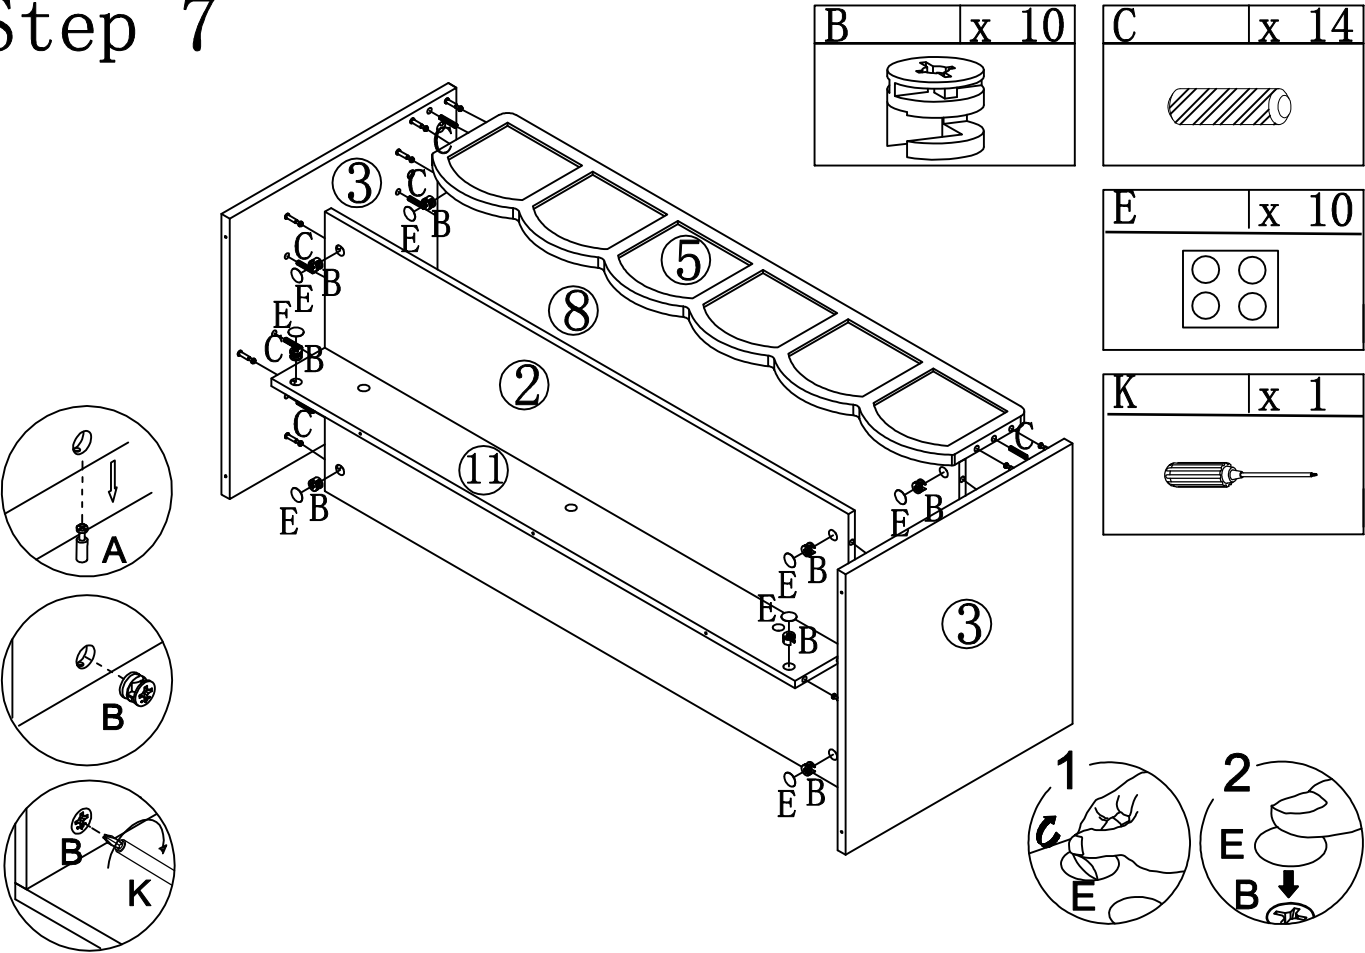










Step 8

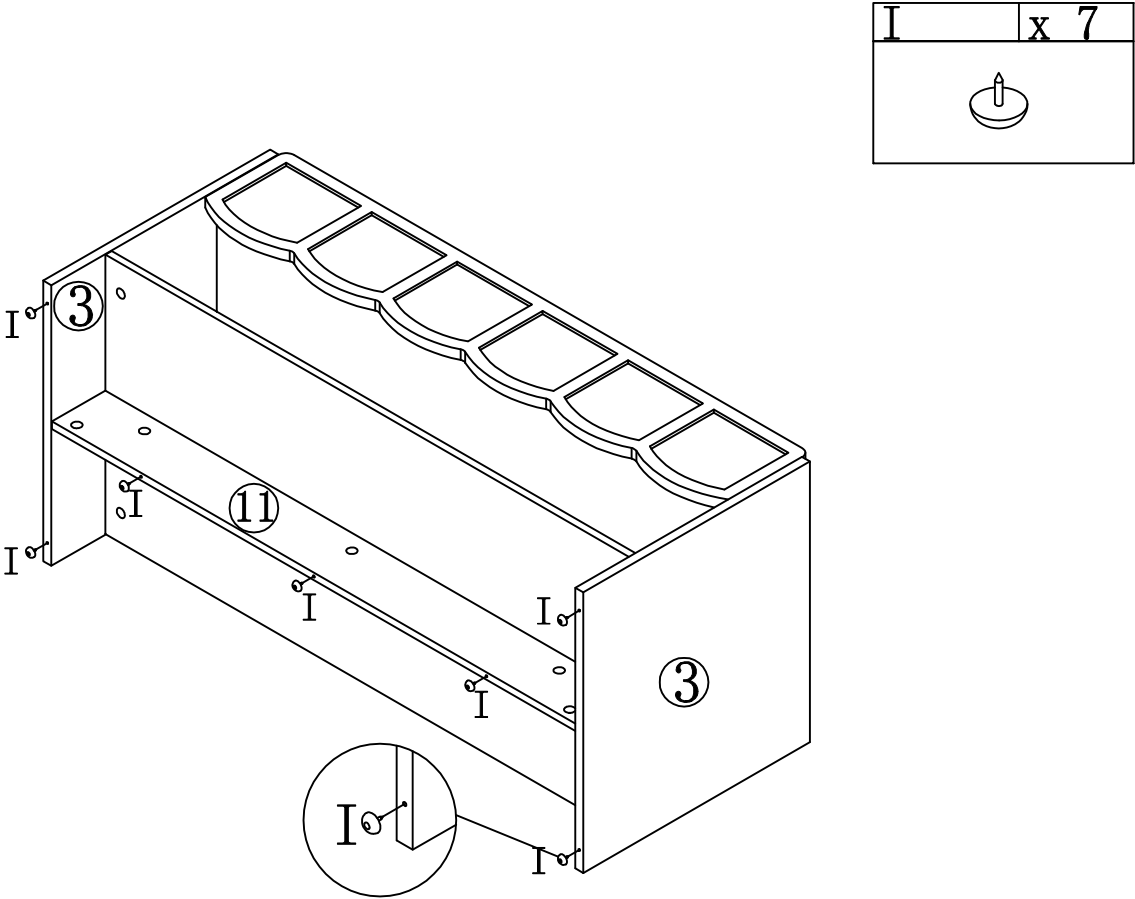


Step 9

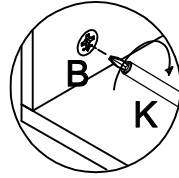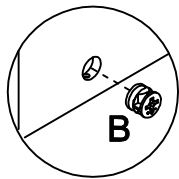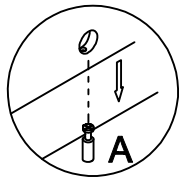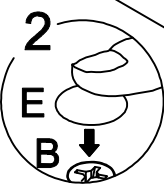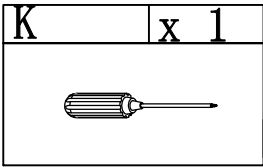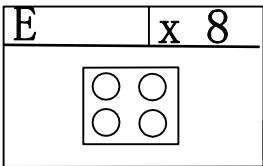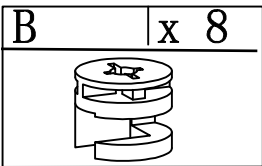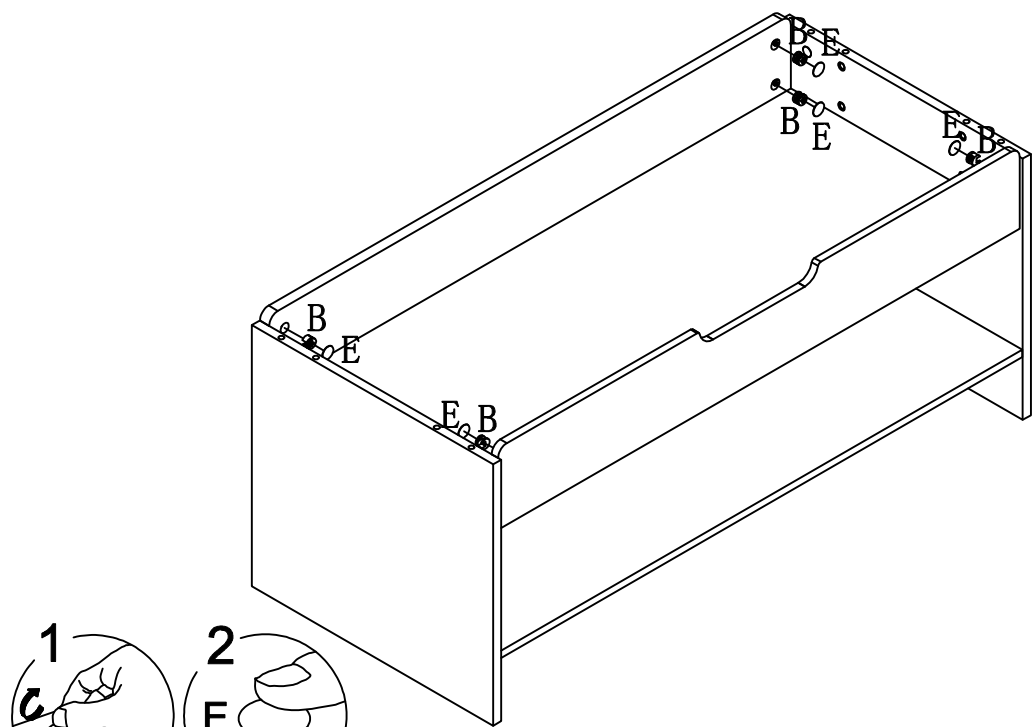


Step 10

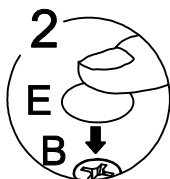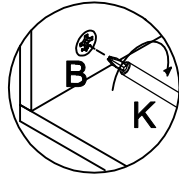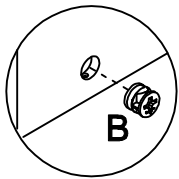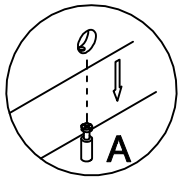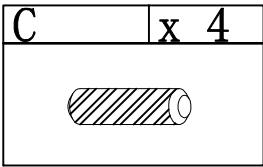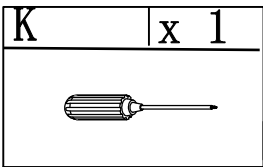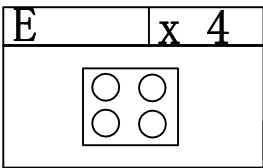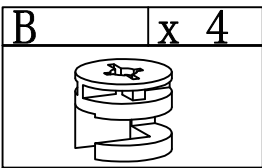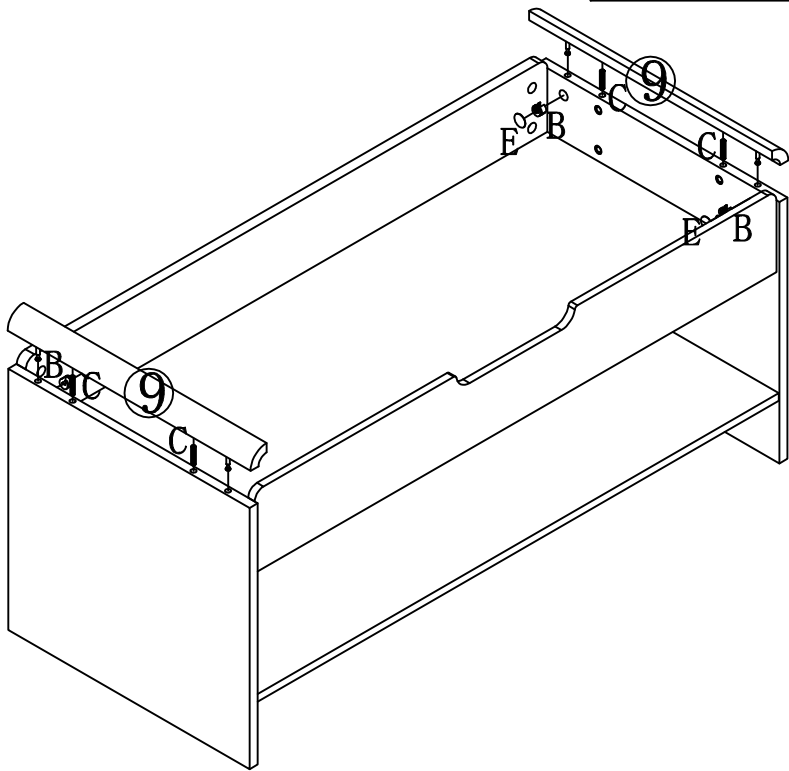




Step 11

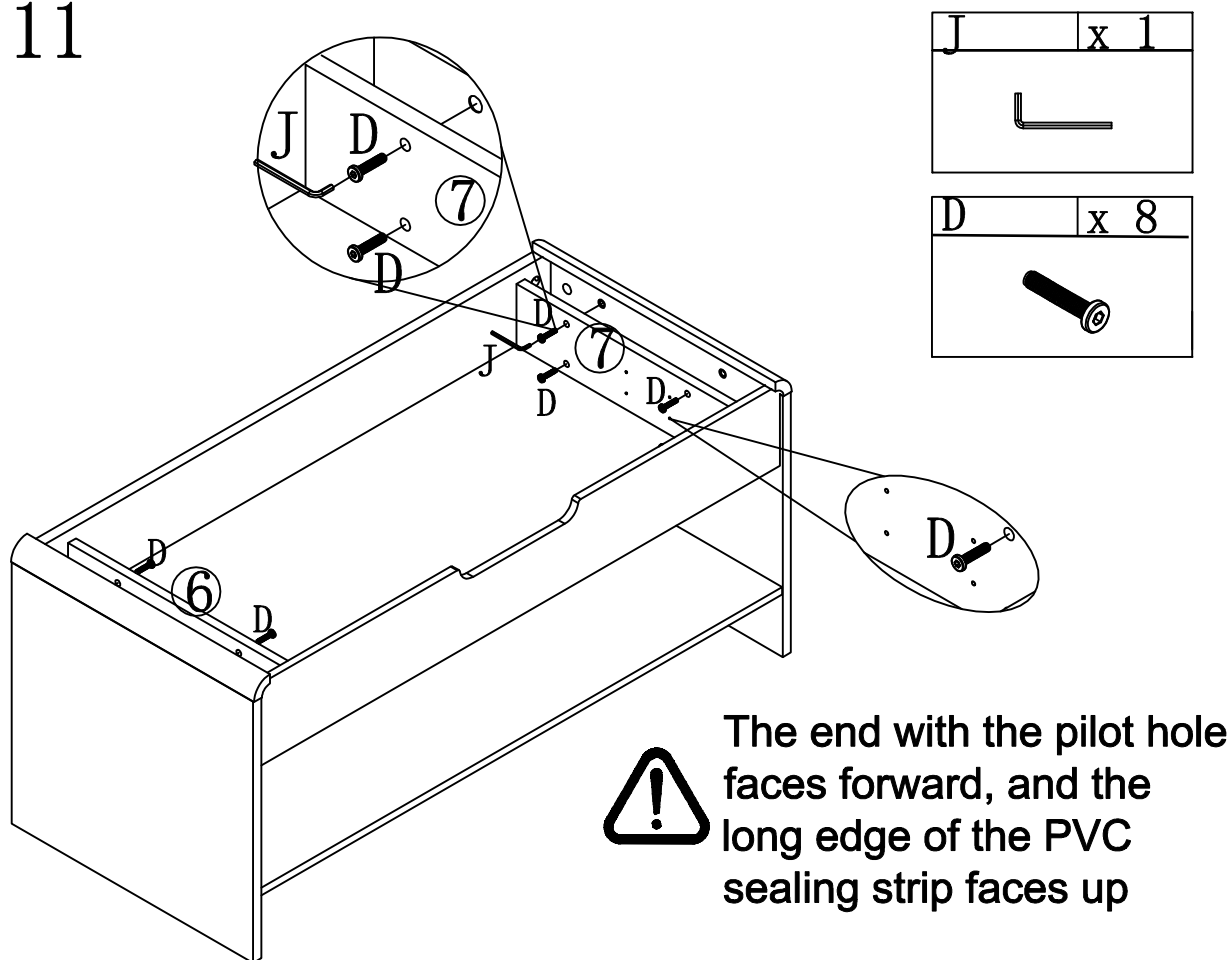



Step 12

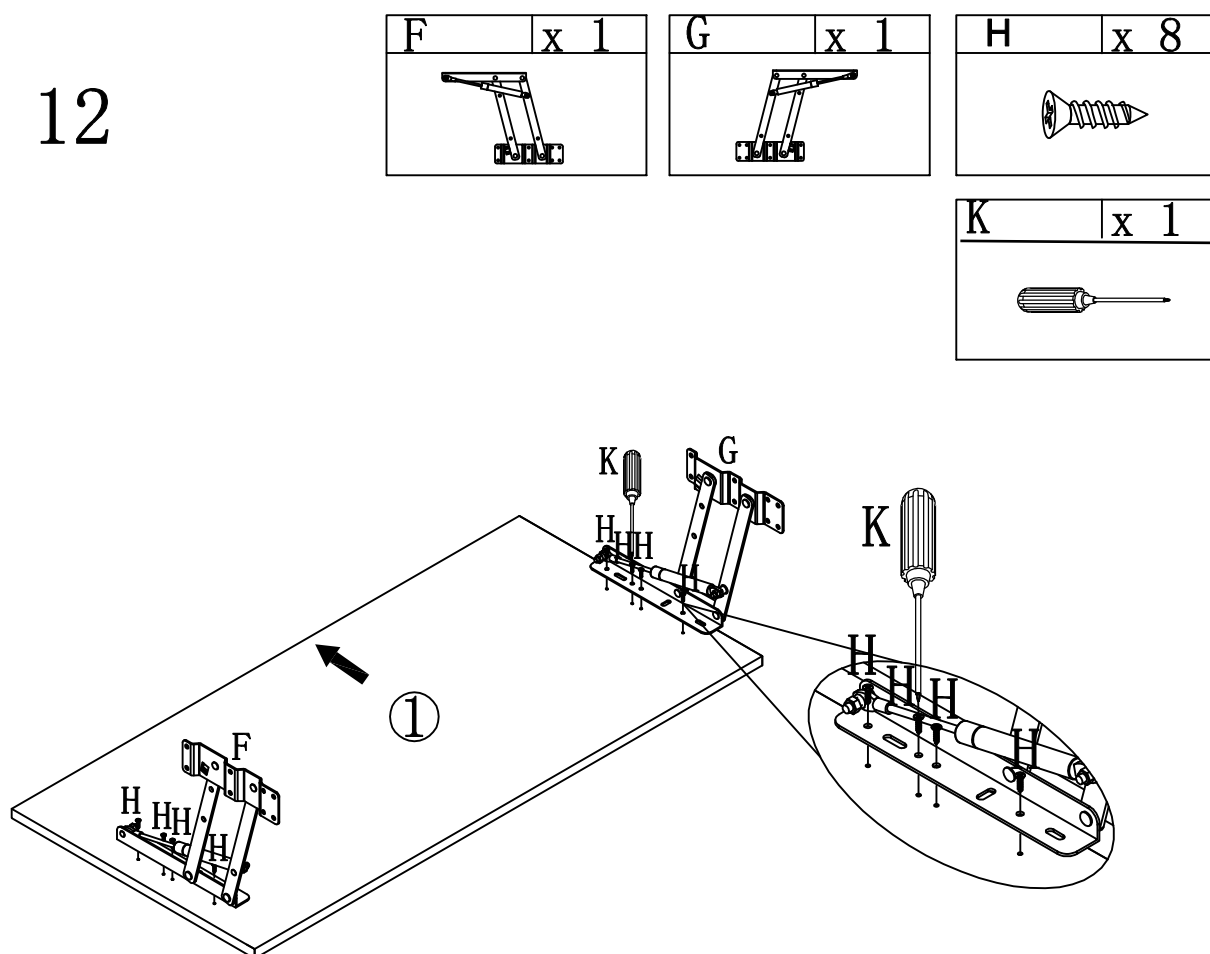

Step 13

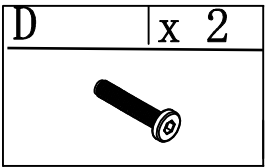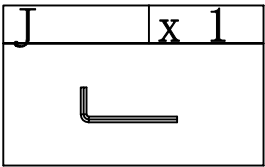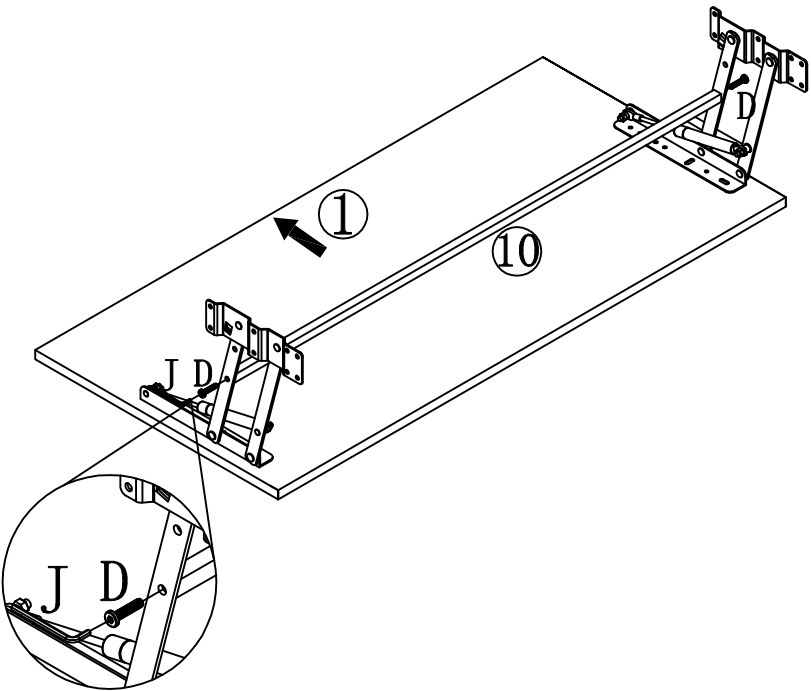

Step 14

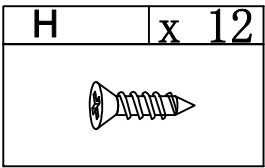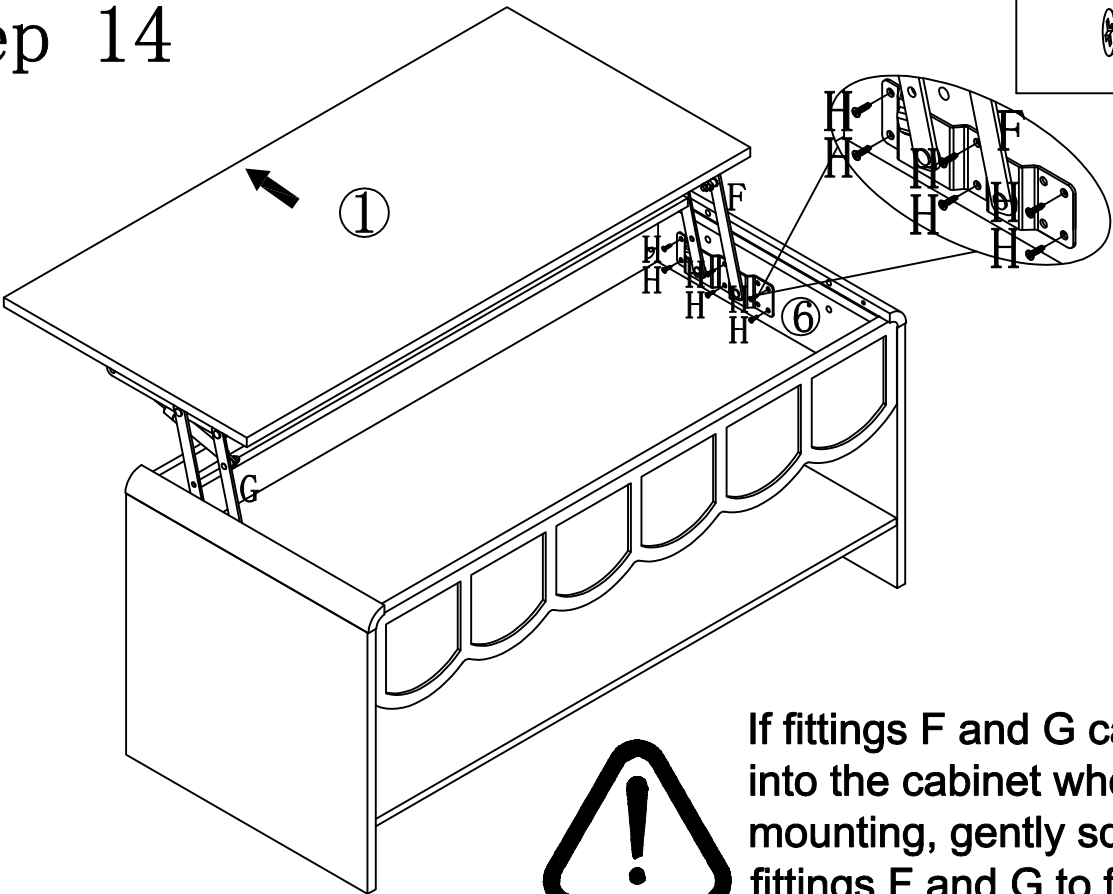

If fittings F and G cannot fit into the cabinet when mounting, gently squeeze fittings F and G to fit into the cabinet

Step 16

