



BED FRAME

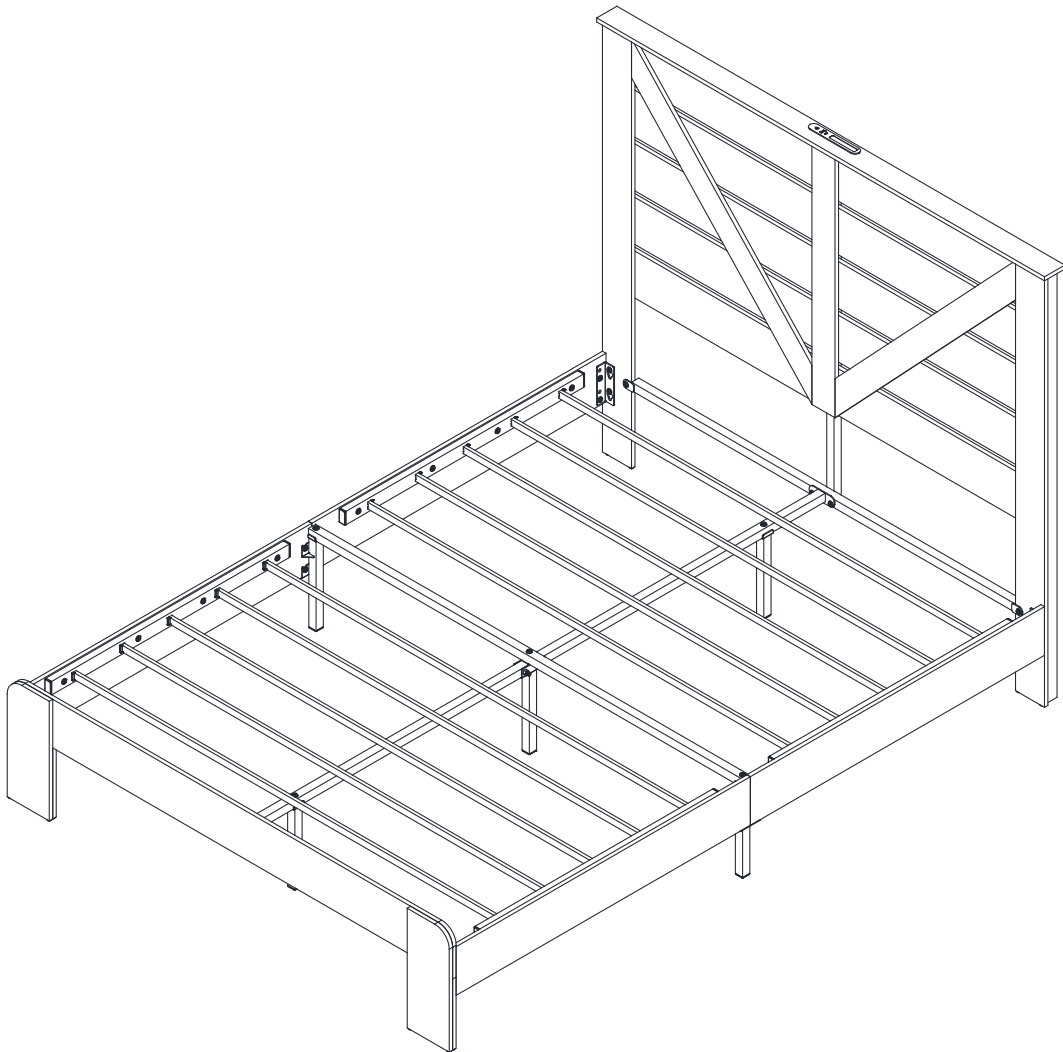

B672-F/Q/K

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction


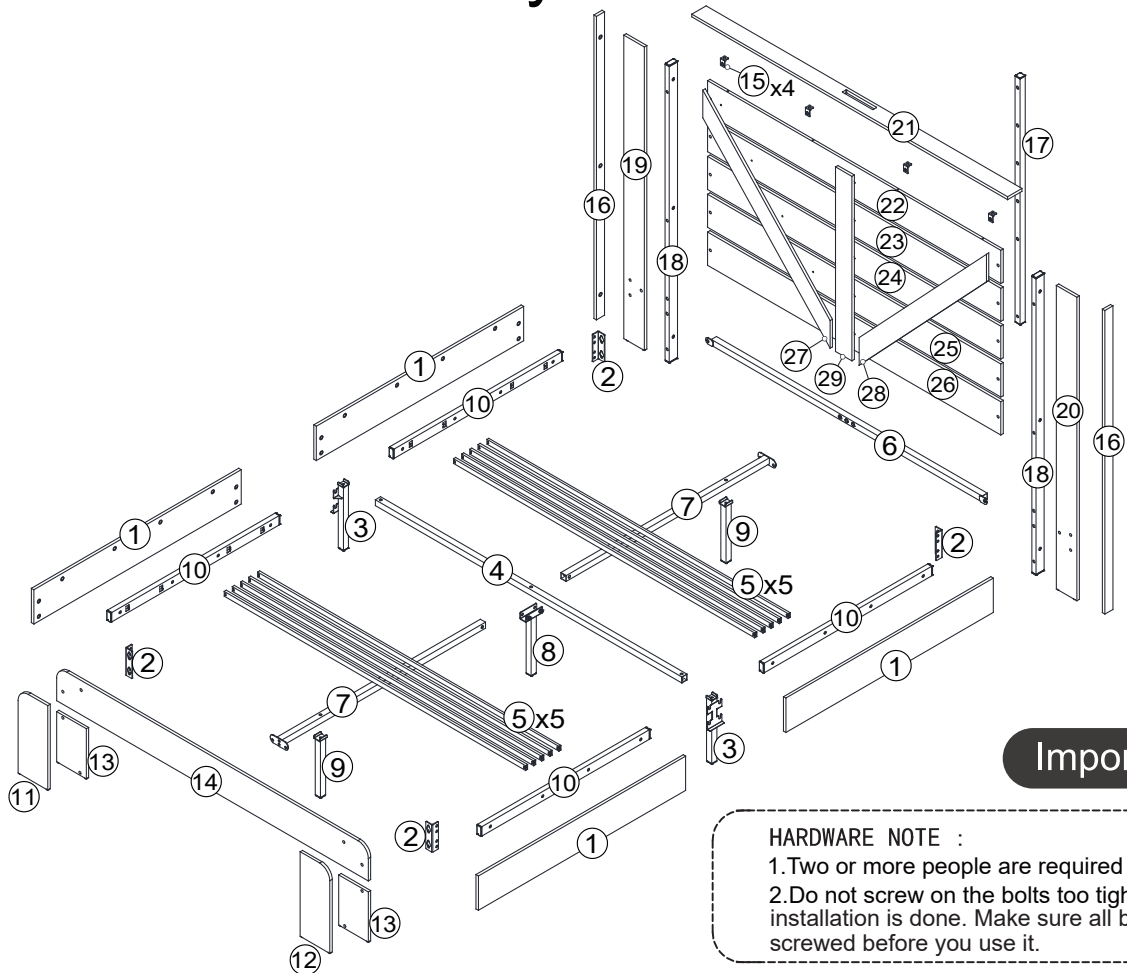






Important Note

HARDWARE NOTE :


1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

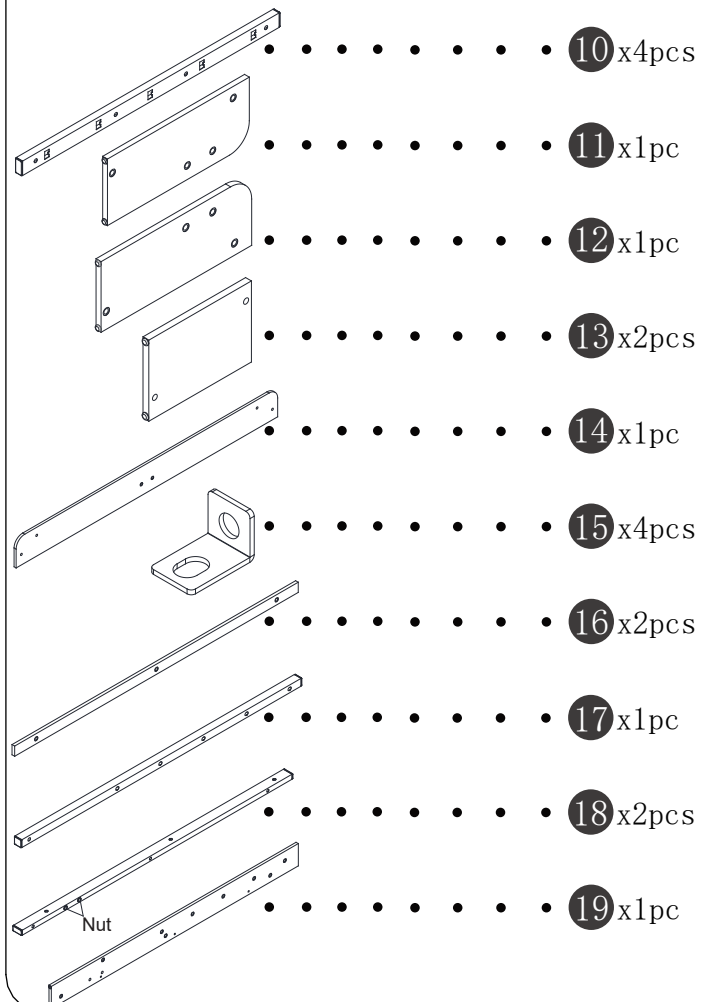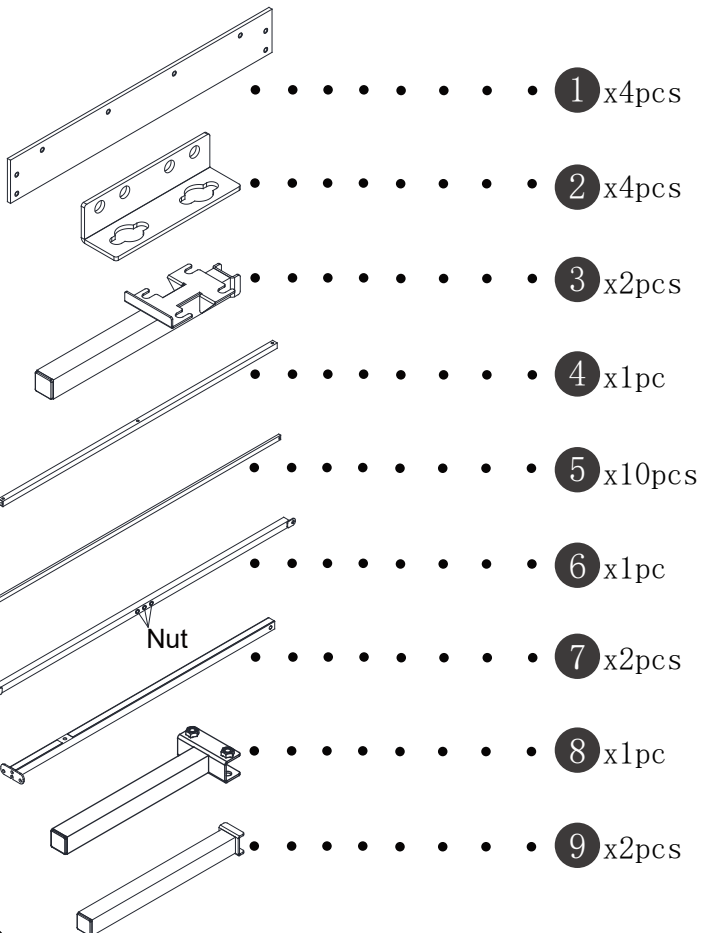

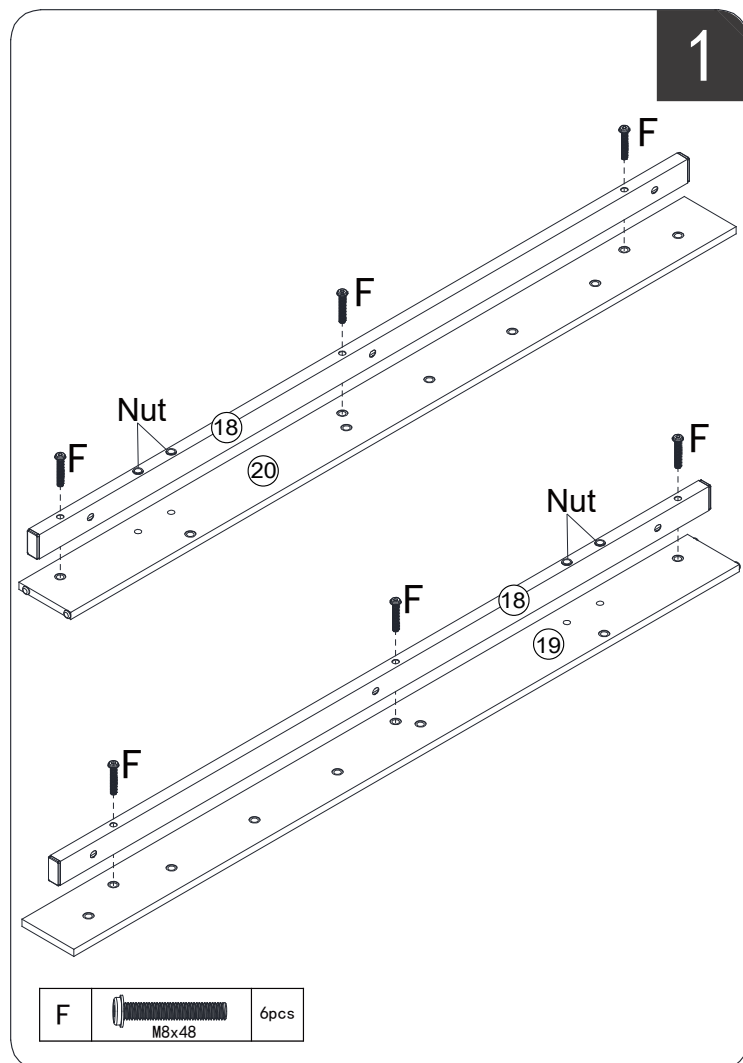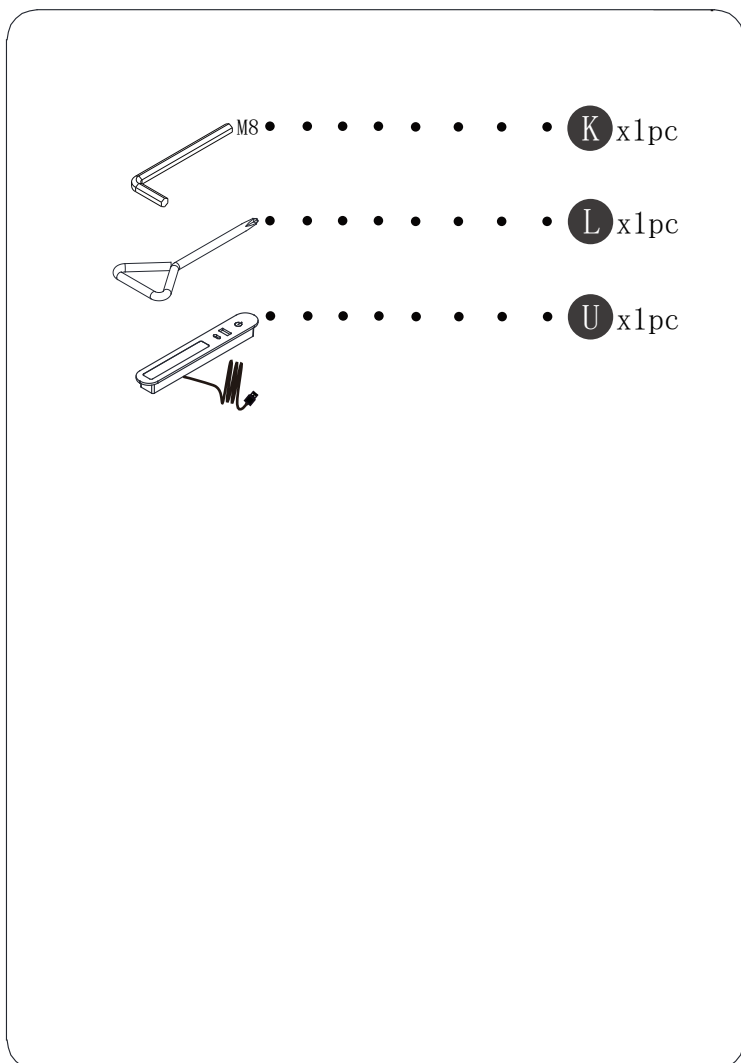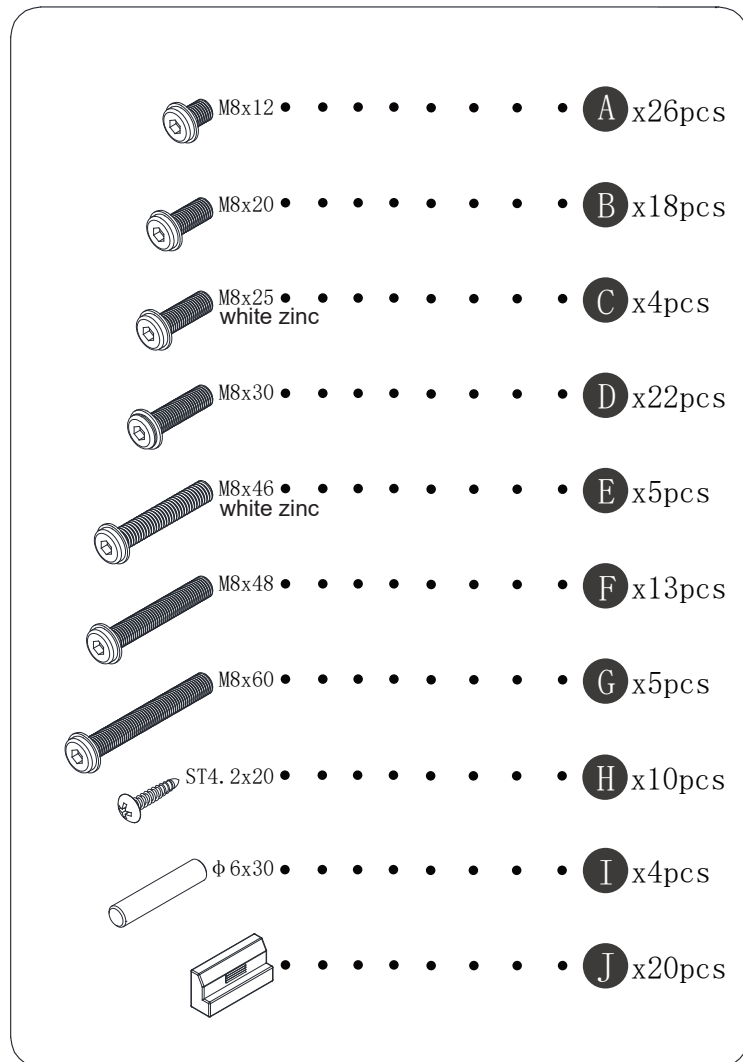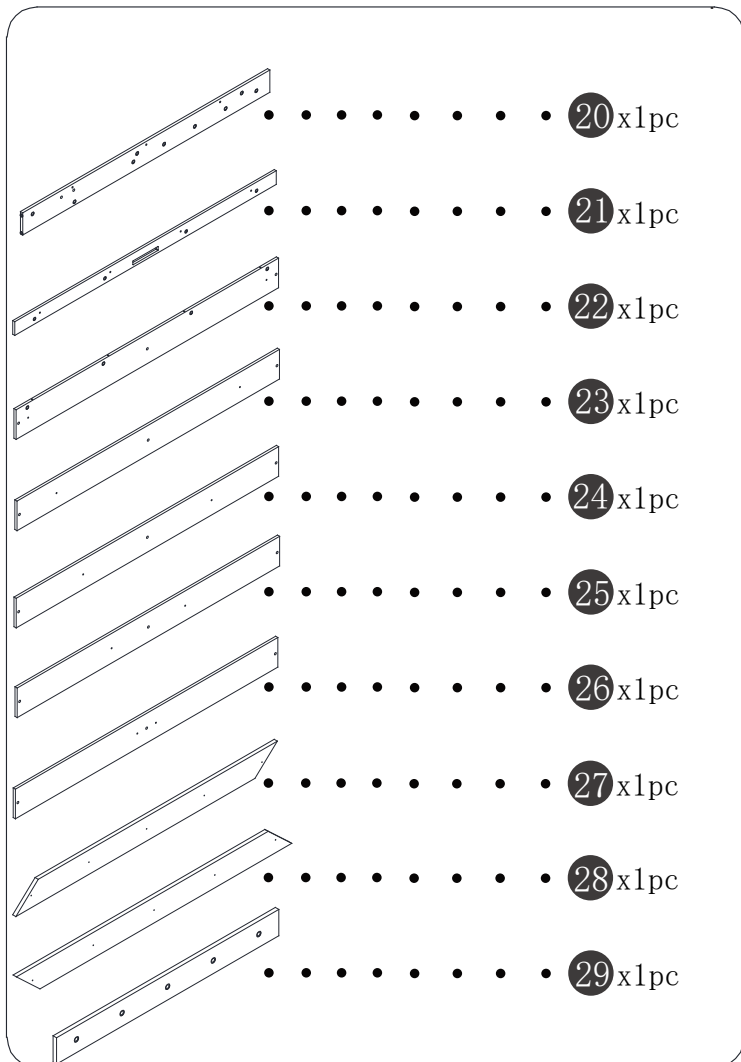

2

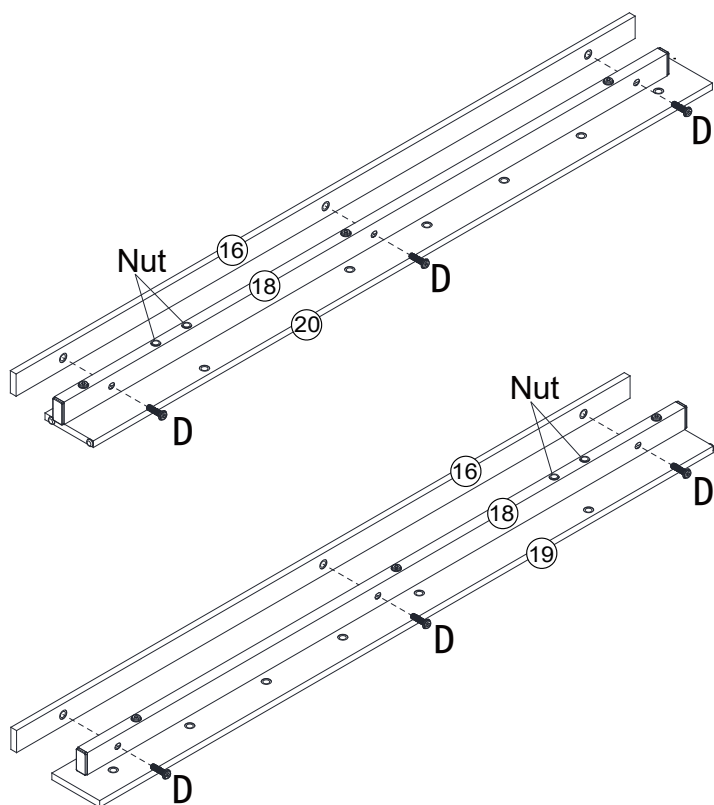


D		6pcs
---	---	------

M8x30

3


! Do not fully tighten the screws yet.

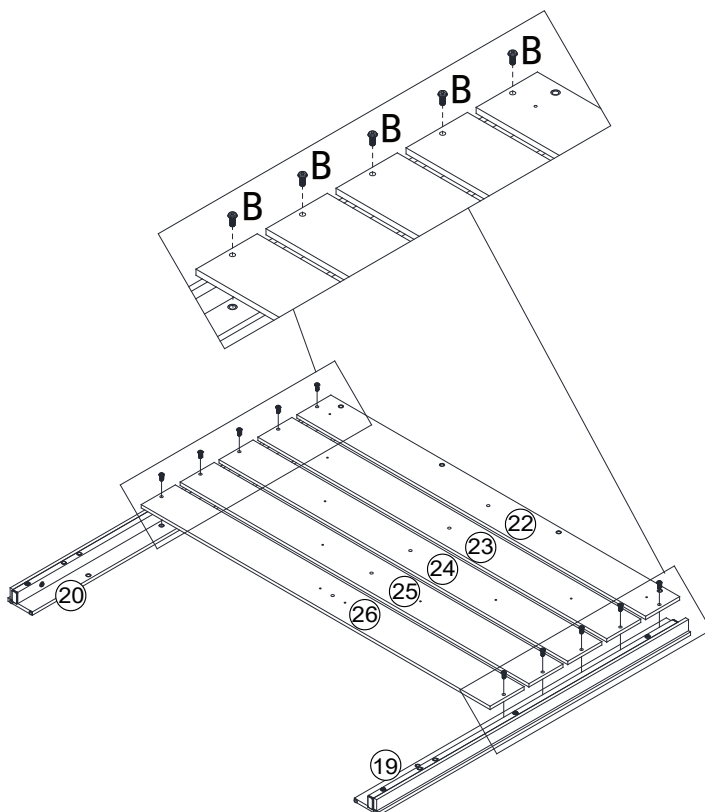

B		10pcs
---	--	-------

M8x20

4

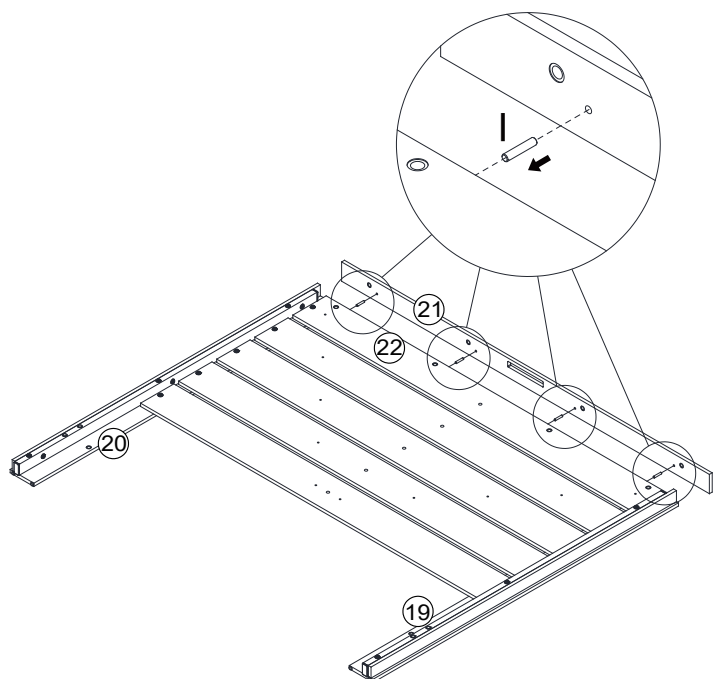


I		4pcs
---	---	------

φ 6x30

5

! Do not fully tighten the screws yet.

Install this screw first

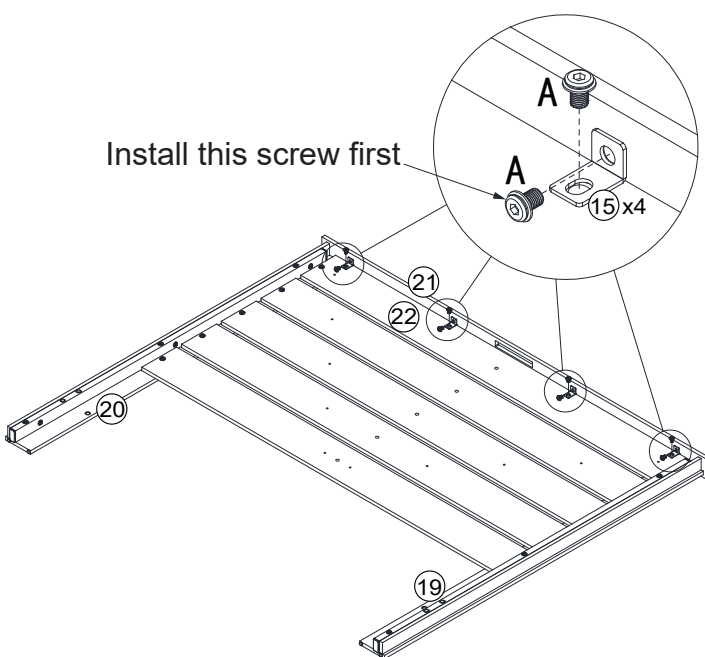


A		8pcs
---	---	------

M8x12

! Do not fully tighten the screws yet.


6

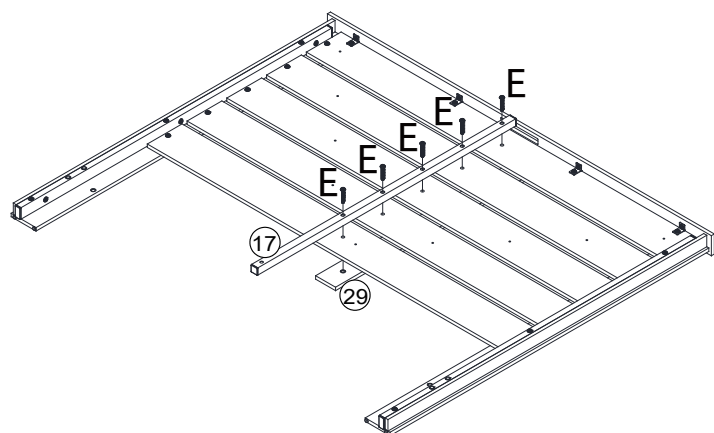

E		5pcs white zinc
M8x46		

! Fully tighten all the screws.


7

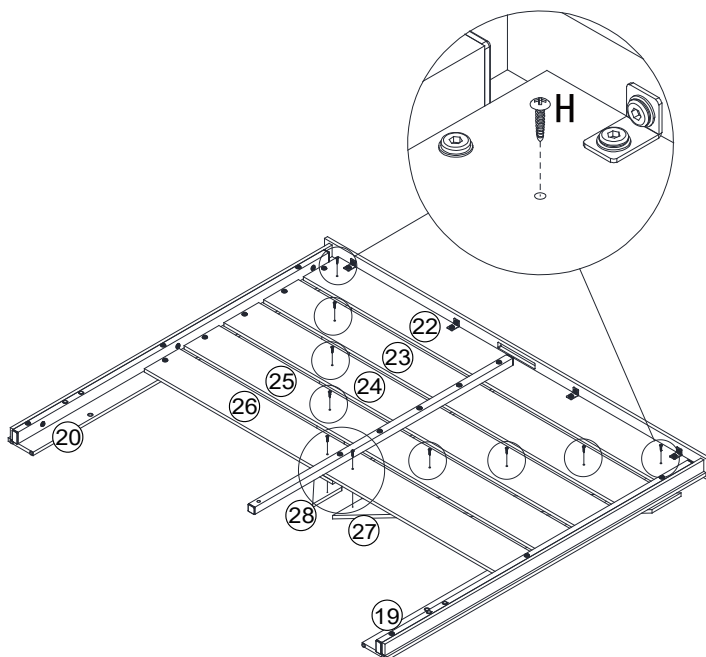

If the bottom of the part 26/27/28 are not aligned, loosen the screws on the left and right sides of the part 22/23/24/25/26, then align the bottom of the part 26/27/28, tighten the screws at last.


H		10pcs
ST4. 2x20		

8

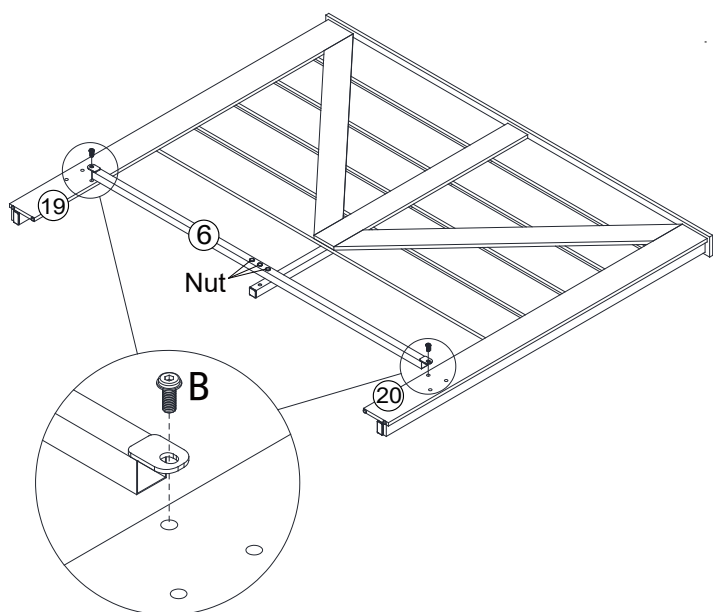

B		2pcs
M8x20		


9

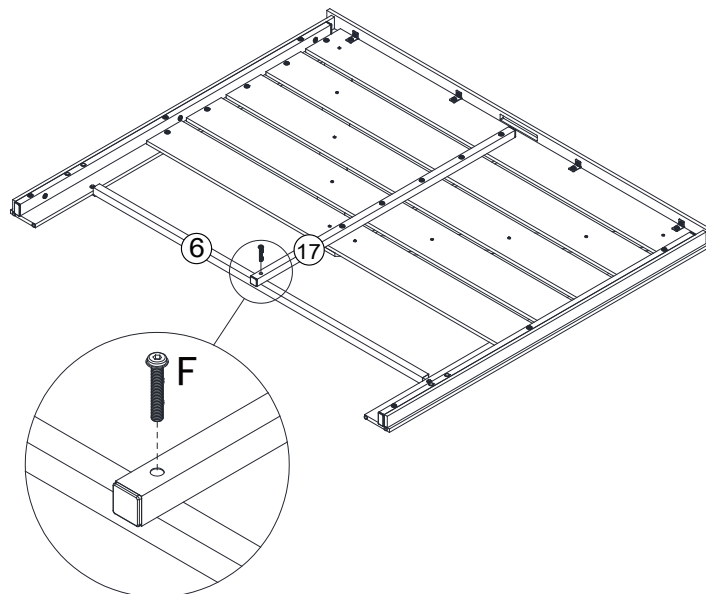

F		1pc
M8x48		

10

x2

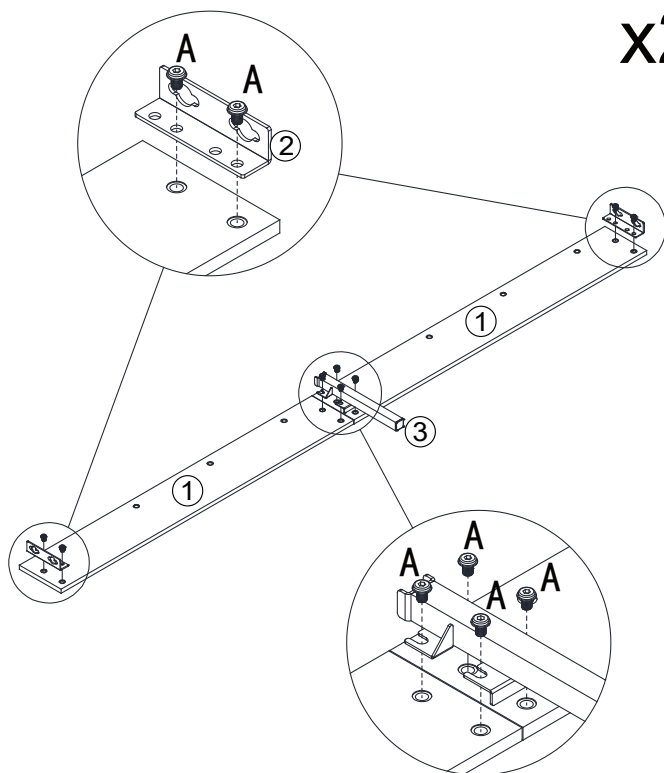


A		16pcs
---	---	-------

M8x12

11


x2

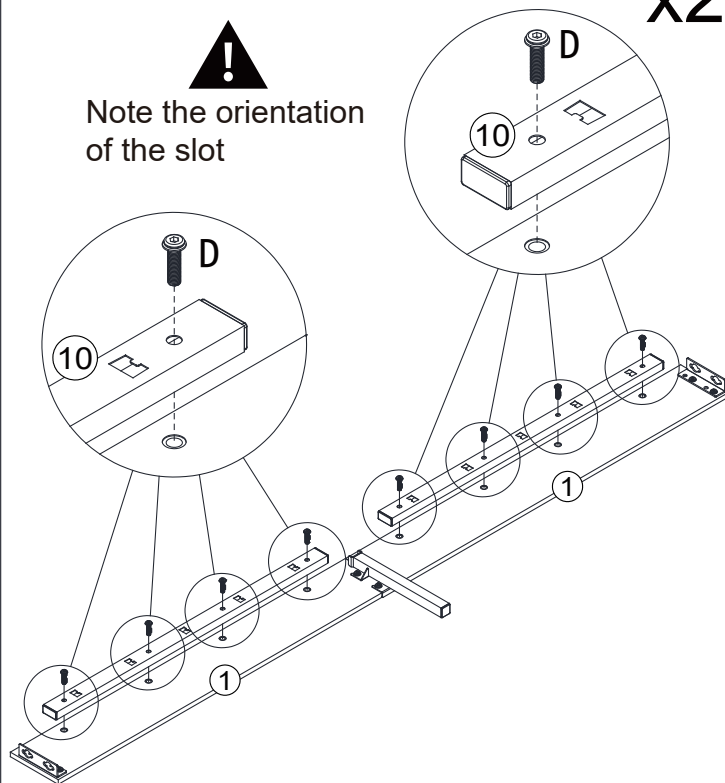

D		16pcs
---	---	-------

M8x30

12

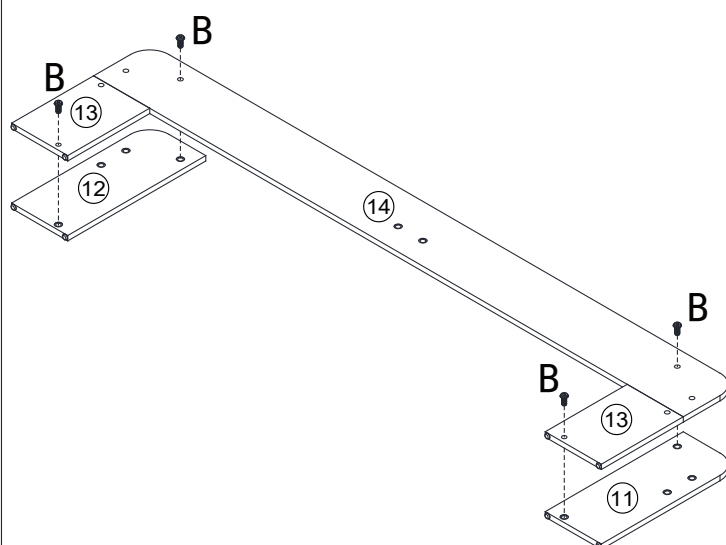


B		4pcs
---	---	------

M8x20

13


Tighten screws C

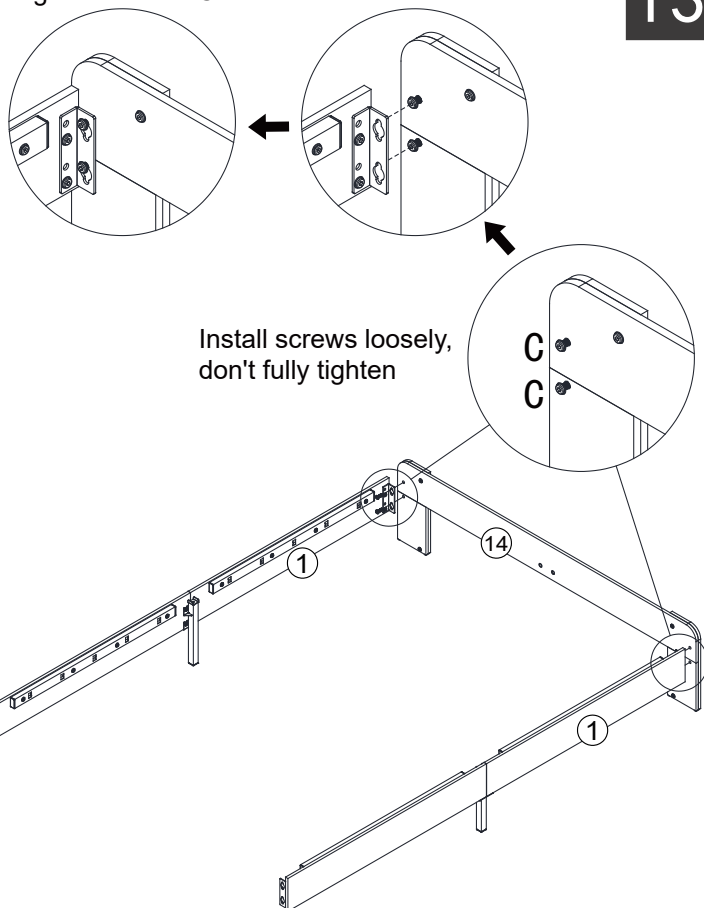


C		4pcs	white zinc
---	---	------	------------

M8x25


14

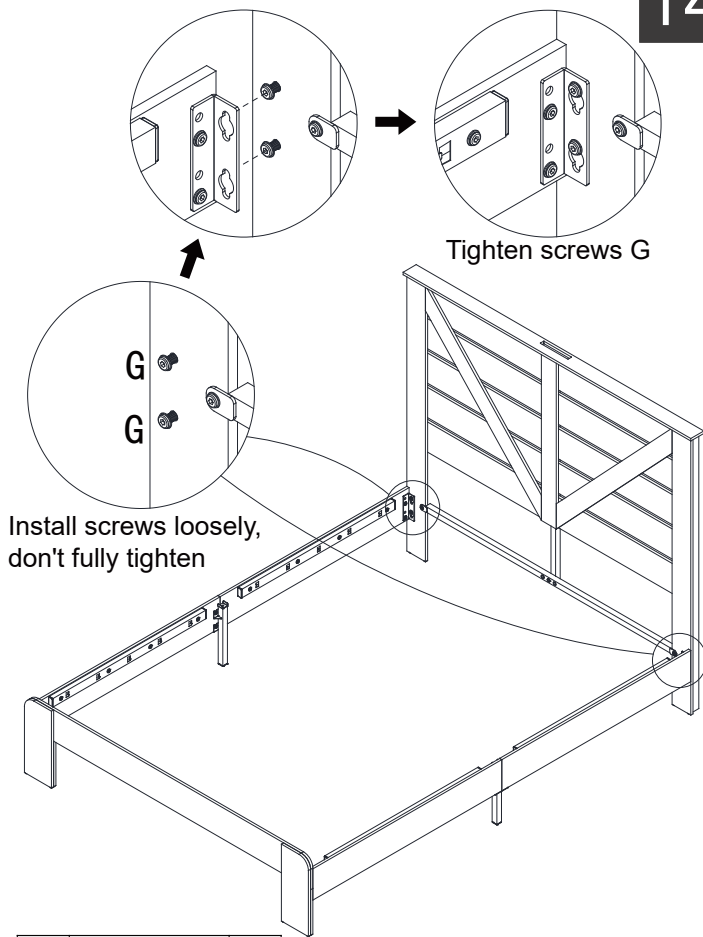


15

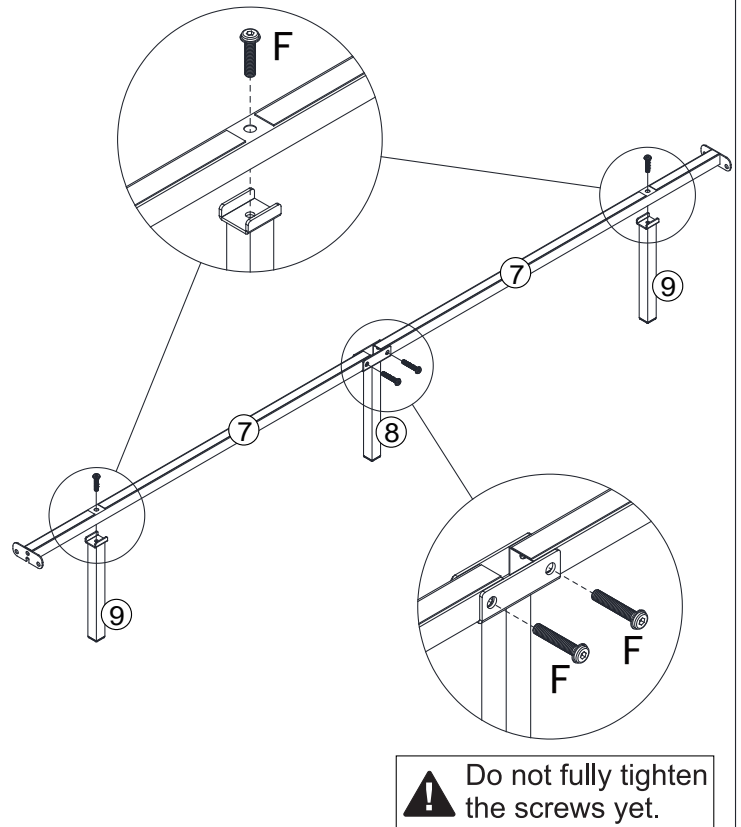


16

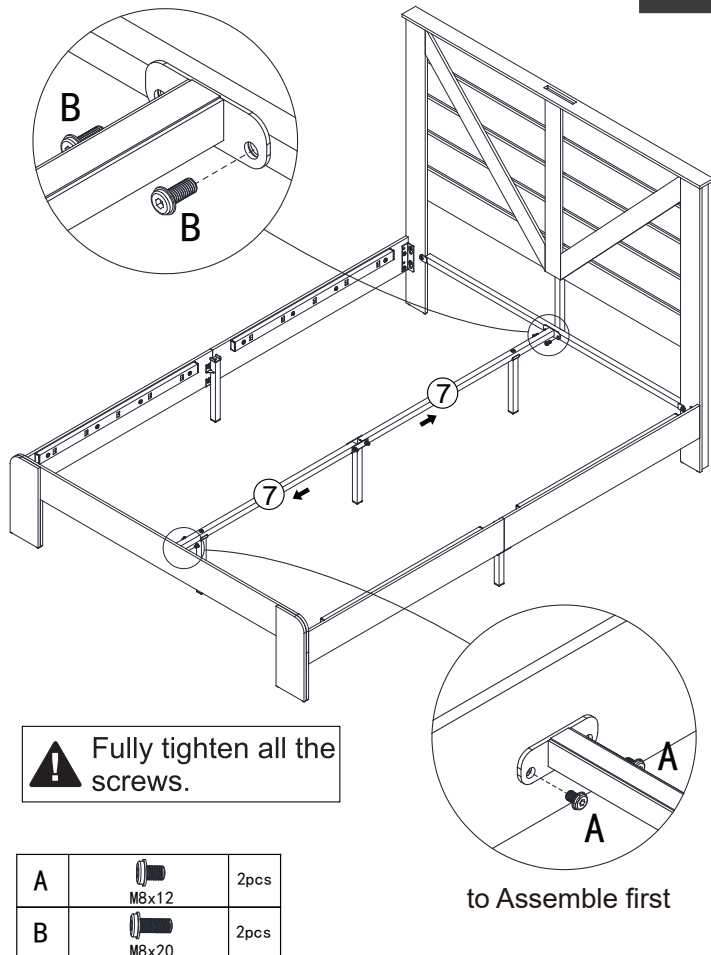


17

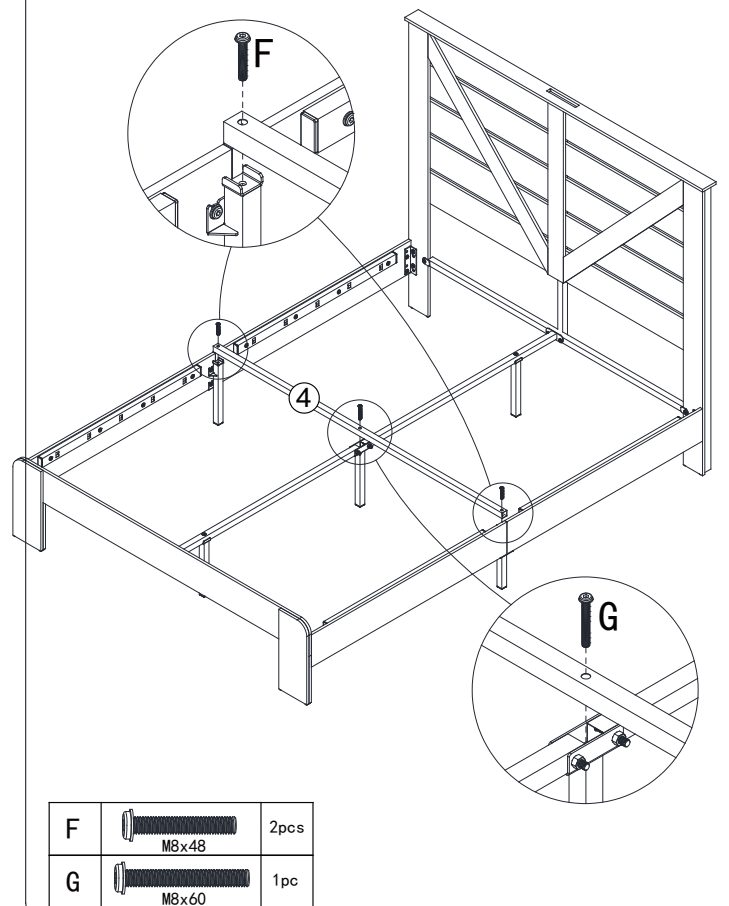

18

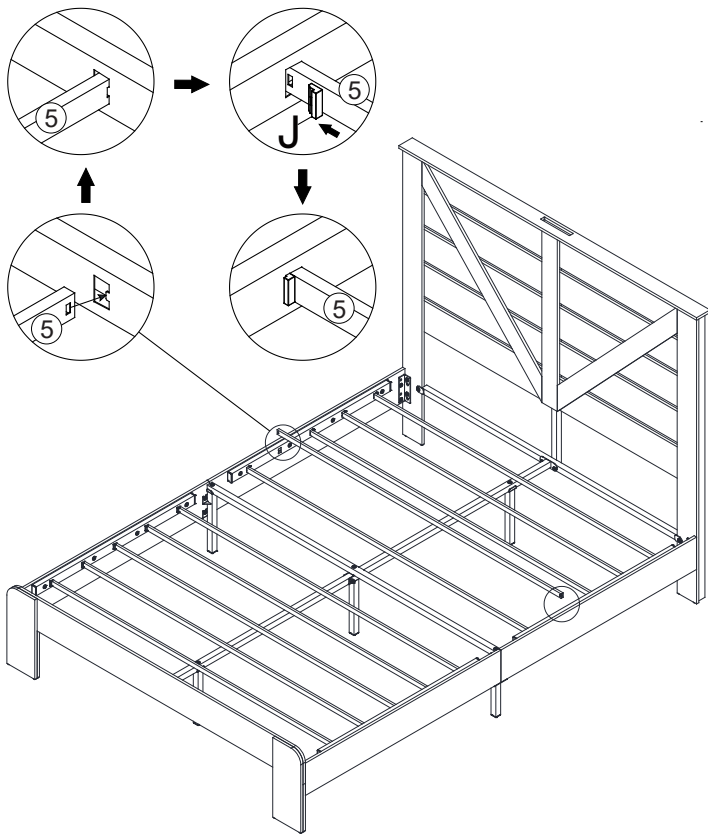


19

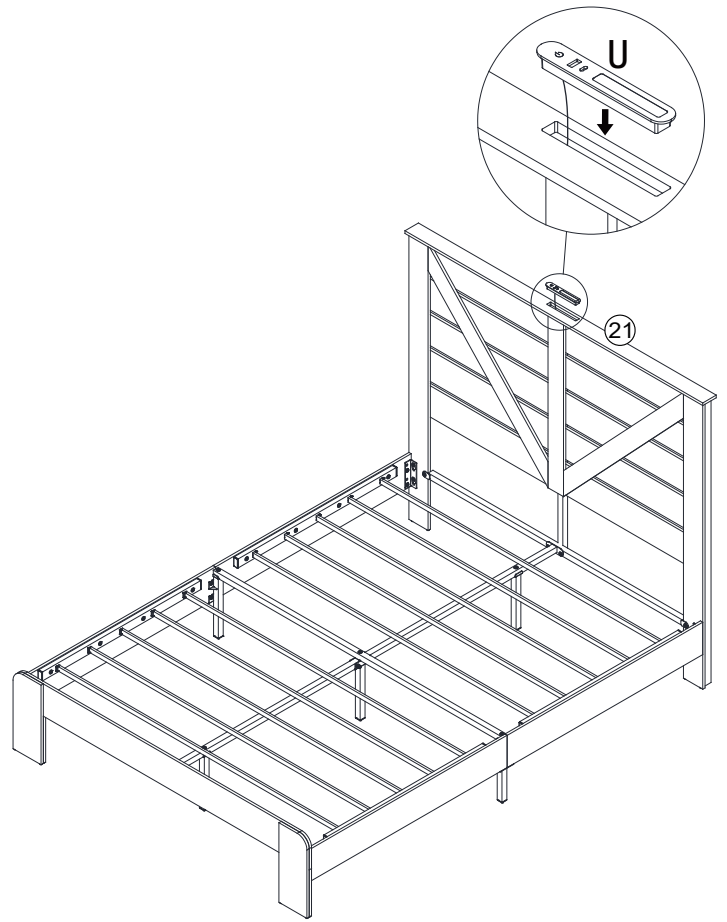

Finish

20

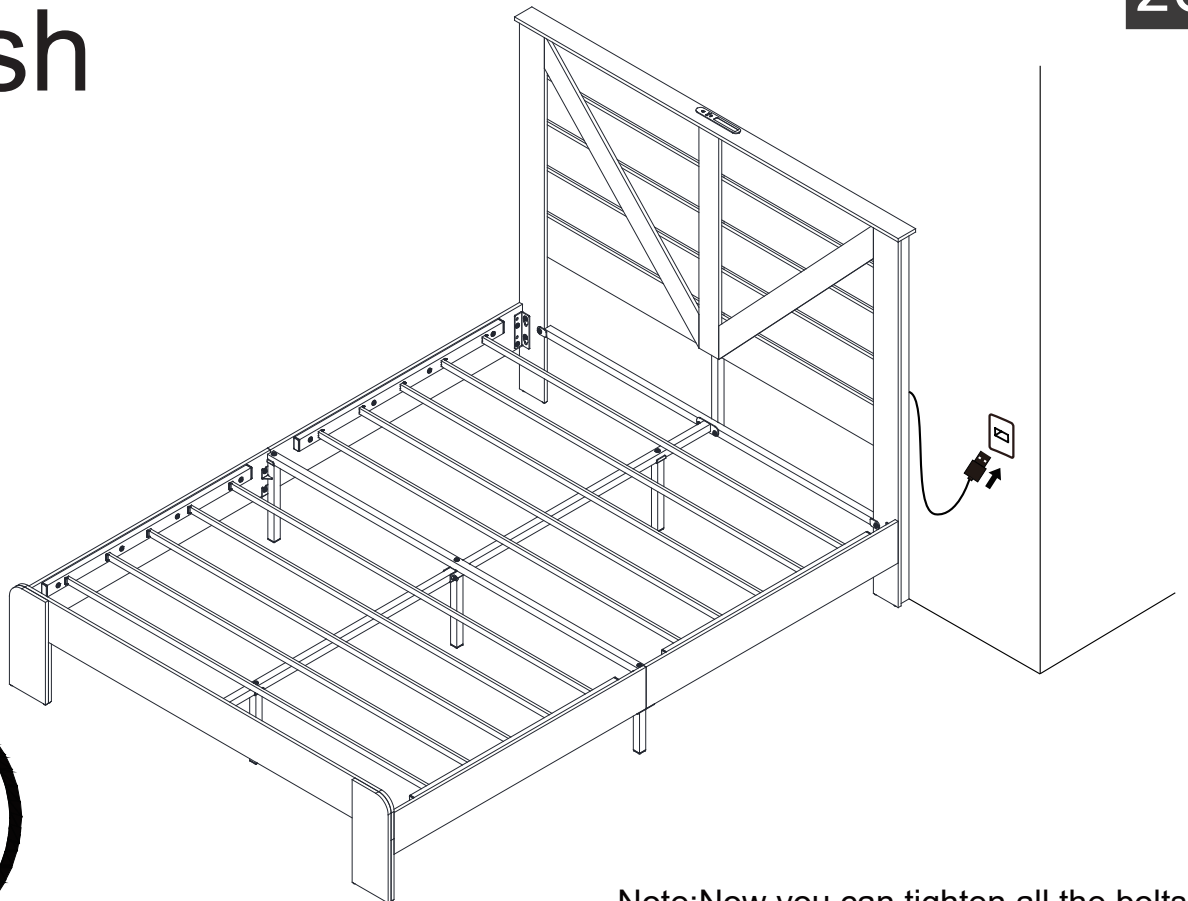

Note: Now you can tighten all the bolts