


STANDARD BATH PANEL FITTING INSTRUCTION

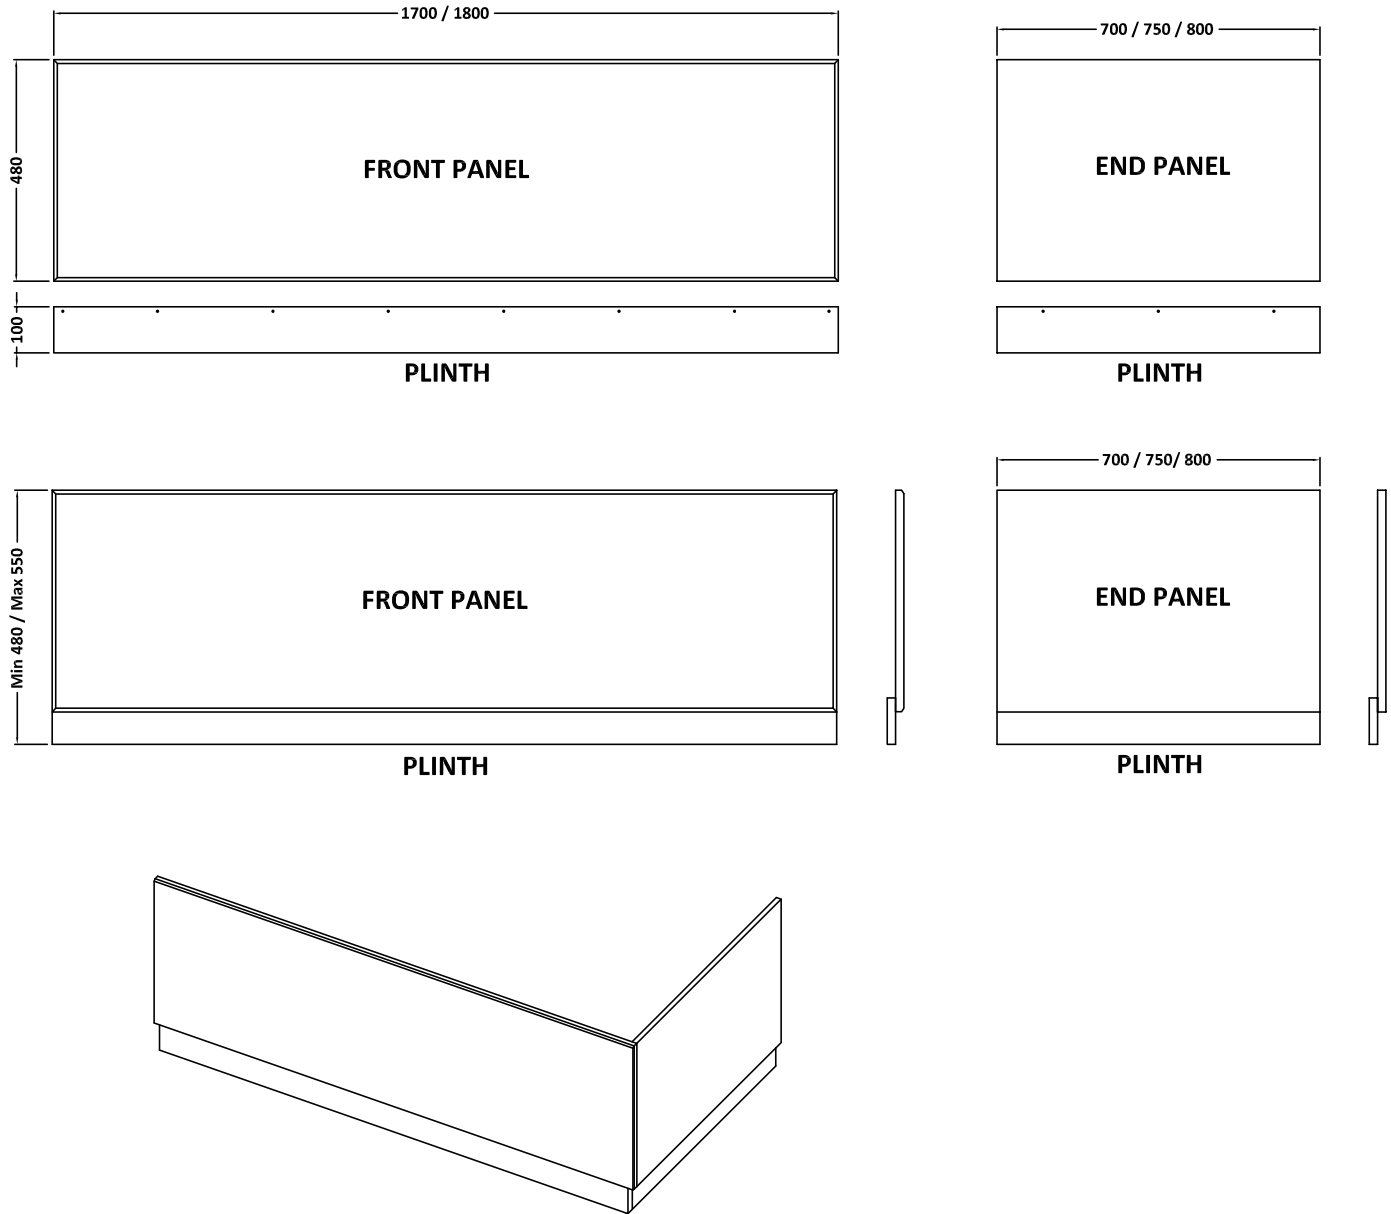

1. Measure from the underside of the bath rim to the floor to establish the height of the bath panel required.
2. Pre-drill equally spaced holes along the plinth and screw to the bottom edge of the bath panel at the correct height.
3. It is advisable that you build a frame or fit battens along the floor and down the wall sides to support the panel.
4. When an end panel is used, it is necessary to trim the panel and plinth to length, any trimming should be done at the wall end to ensure that the finished edge is at the visible corner.
5. Any cut or trimmed edges must be sealed against water ingress, it is also advisable to seal all the outer edges of the panels and in particular the underside of the bath lip where the panel meets.
6. The top edge of the bath panel must be installed in line with or just behind the front lip of the bath, the panel must not be installed in front of this lip as this will cause any excess water to sit onto the lip and eventually cause the panel to blow.
7. Maintenance: After each use, make sure to wipe any standing water and keep the bath panel clean and dry. This will ensure your new bath panel will look great for years to come.