


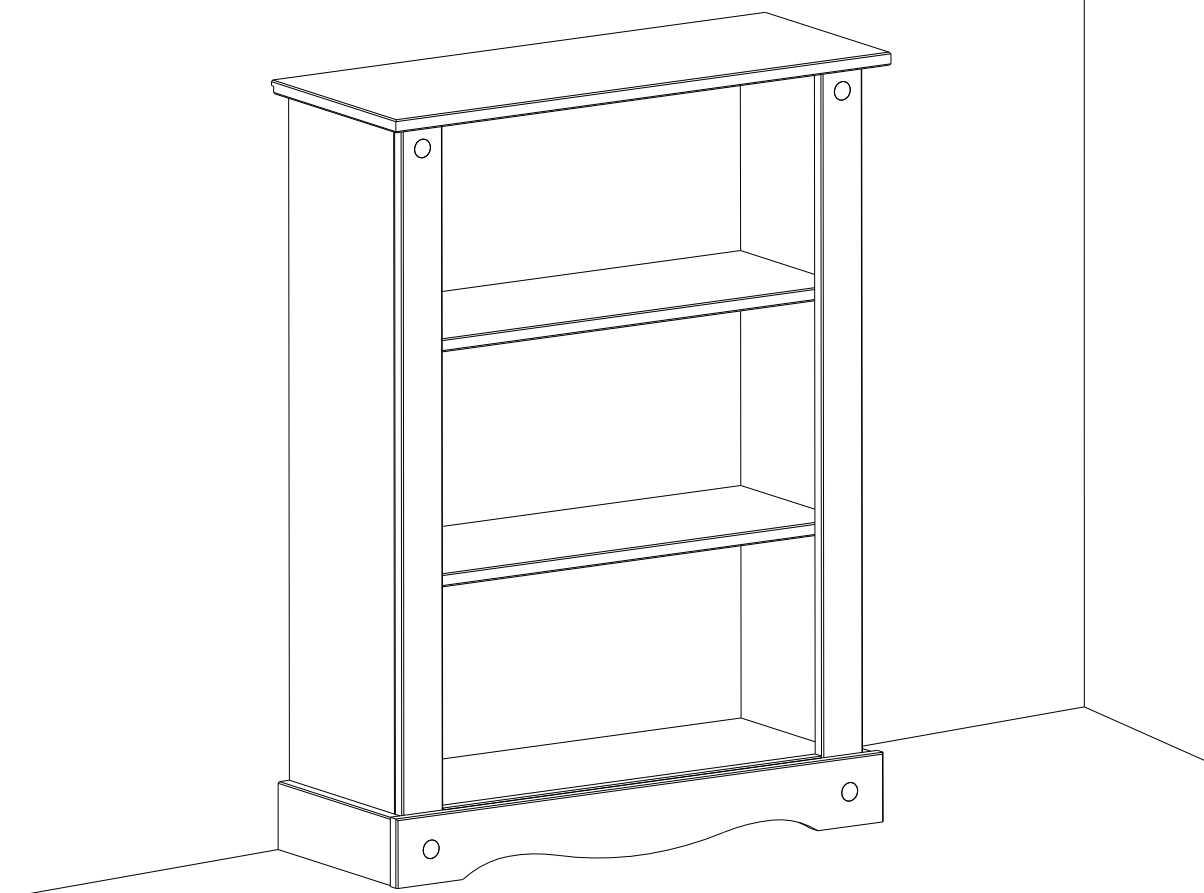


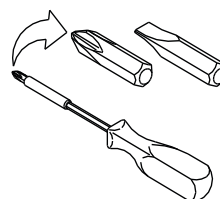



Width = 750mm
Depth = 290mm
Height = 1000mm





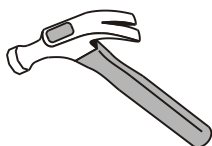








2m x 2m









0:60h

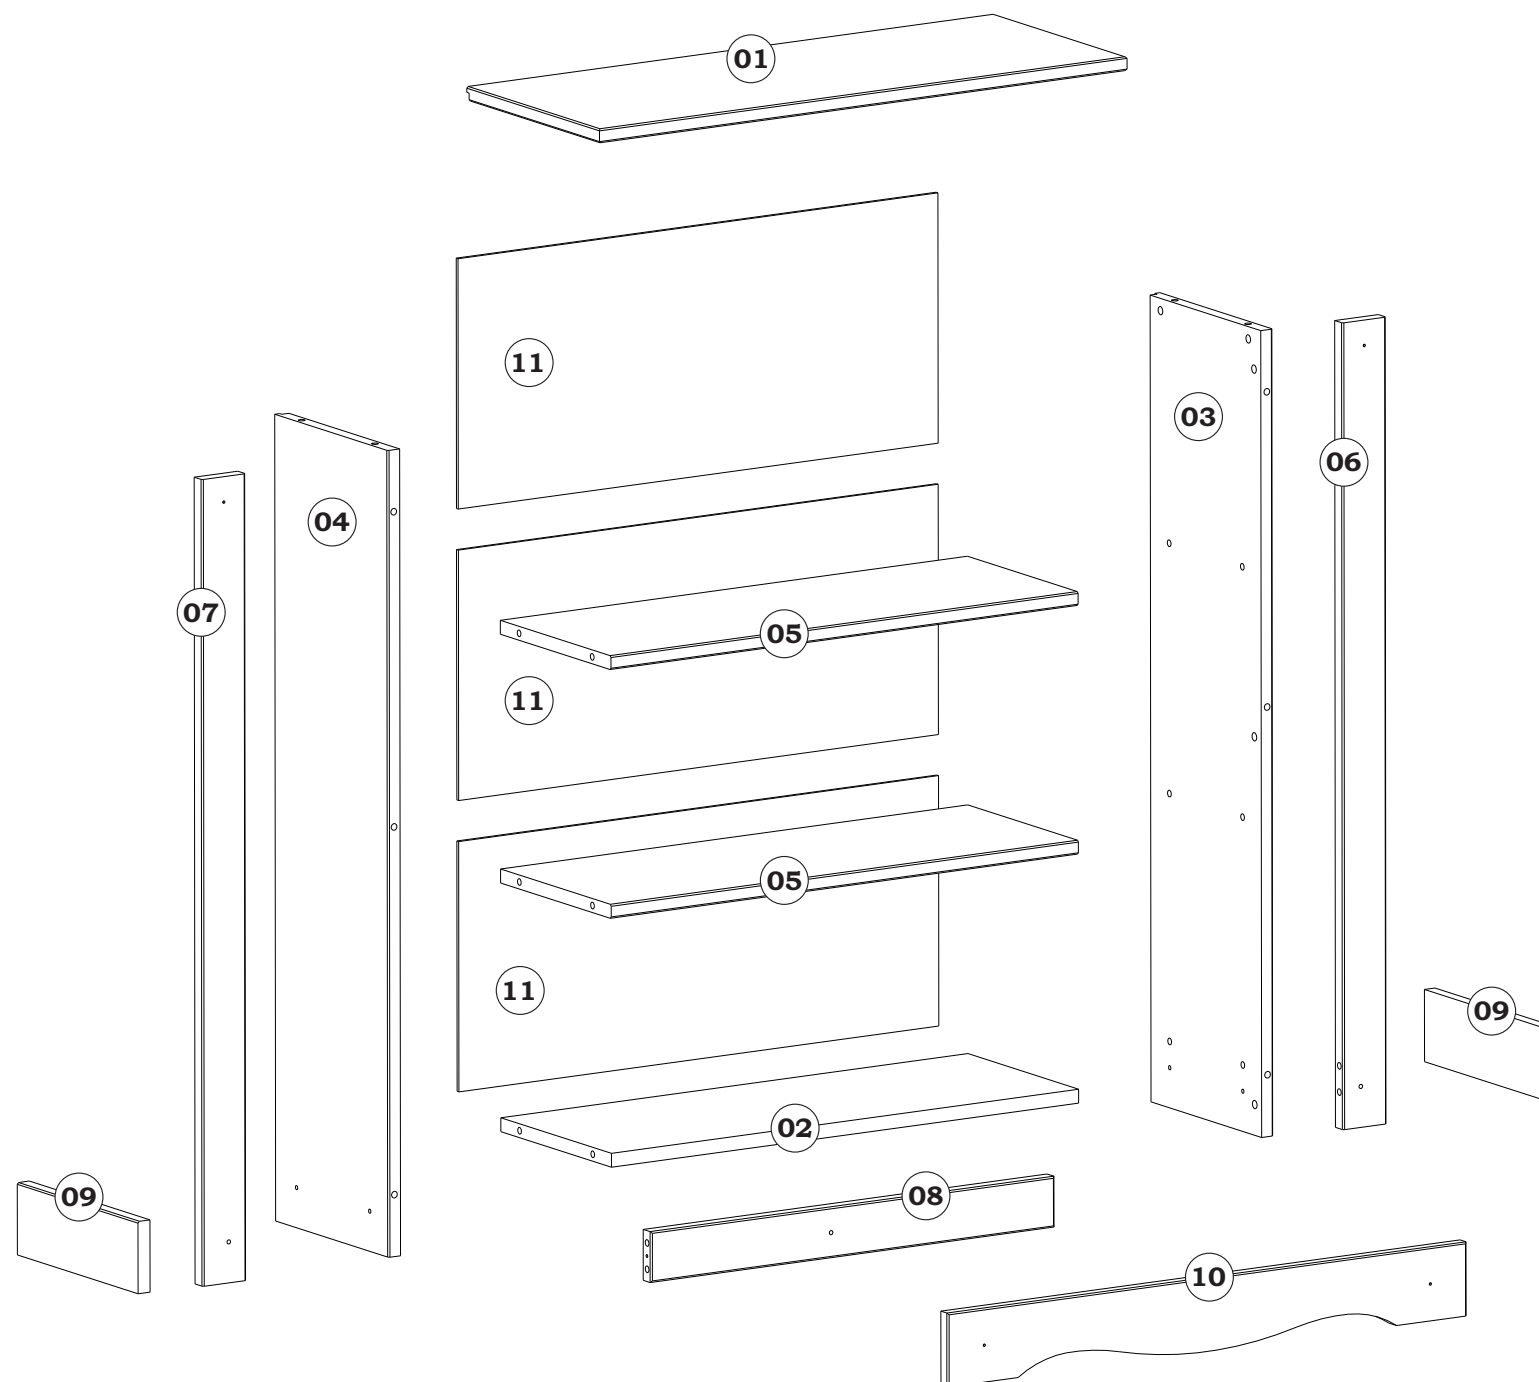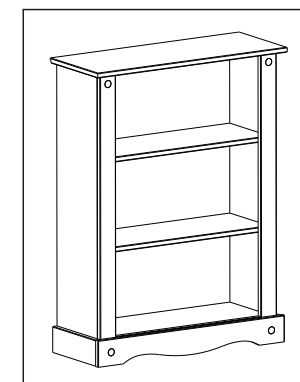

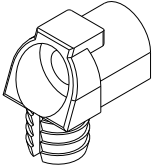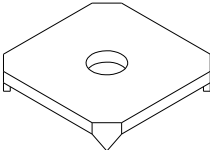
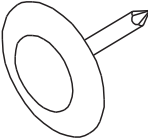
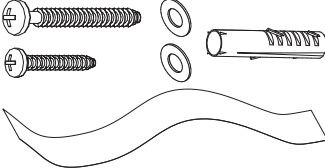
A	 Ø8,0x30mm	26
B		23
C	 Ø3,5x30mm	09
D	 Ø4,0x25mm	23
E	 8x8	44
F		10
G		04
Y		01

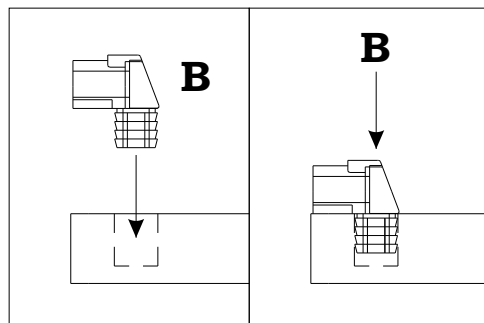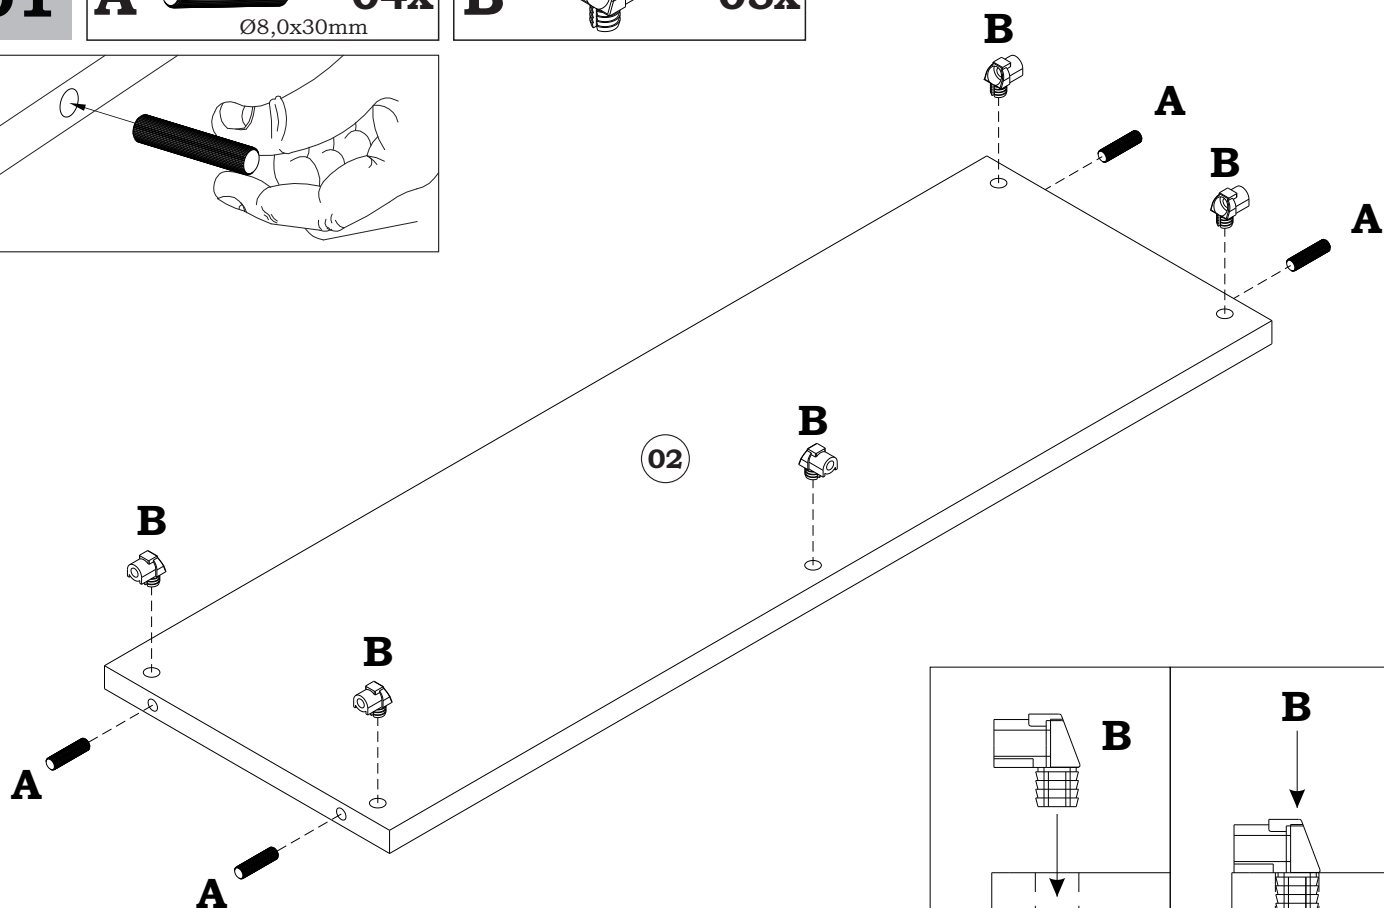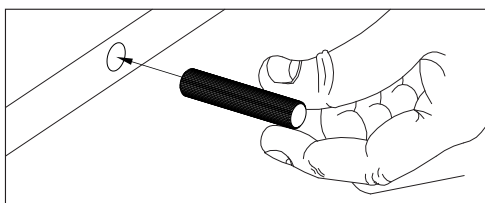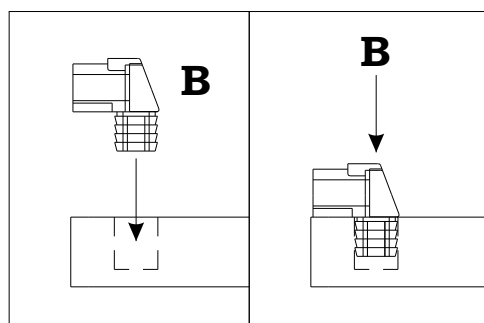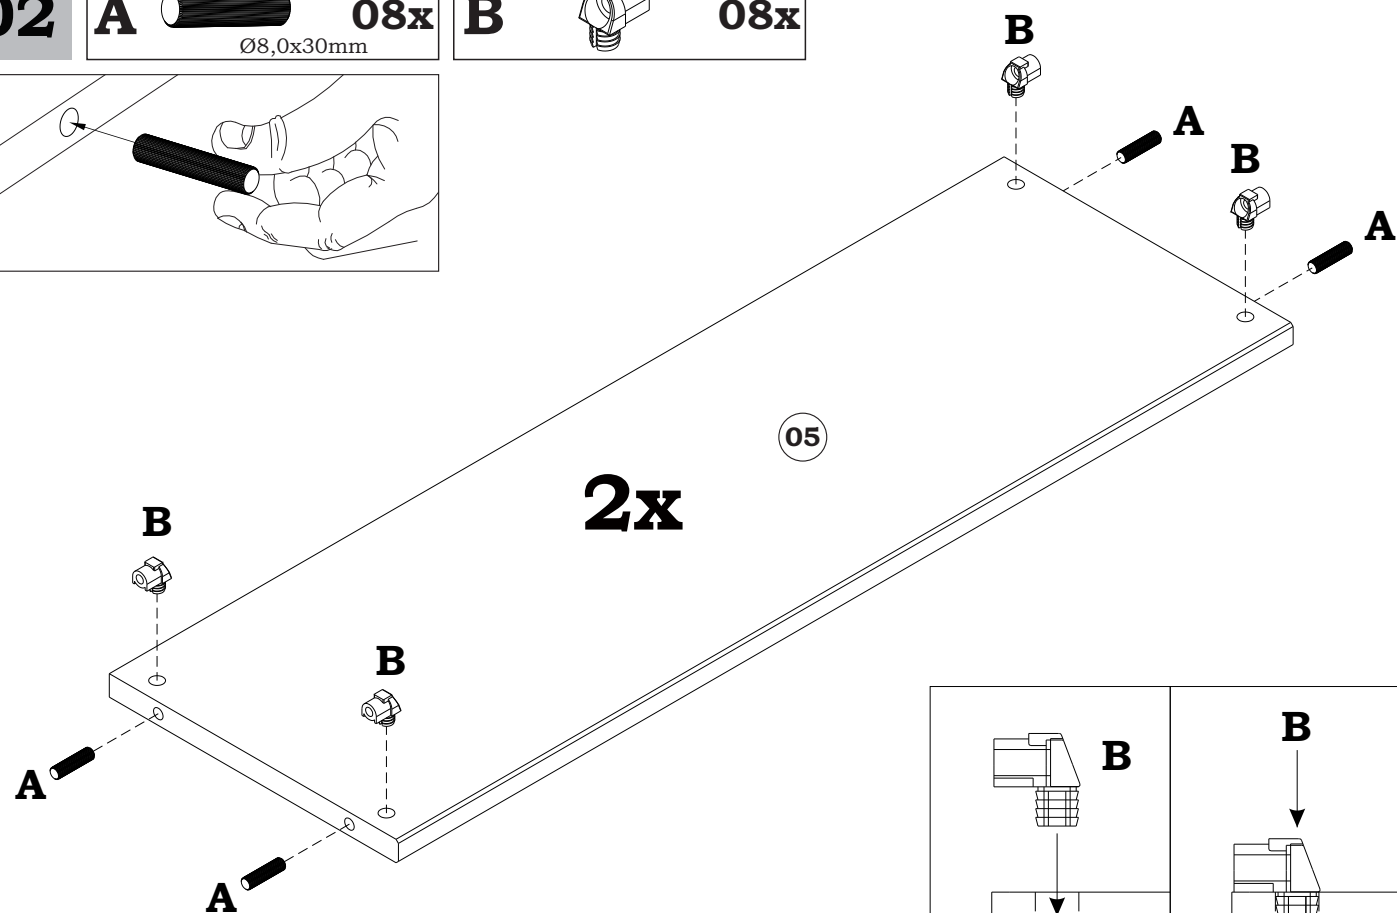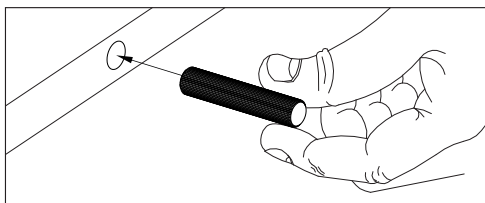01**A**  **04x**
Ø8,0x30mm**B****05x****02****A**  **08x**
Ø8,0x30mm**B****08x**

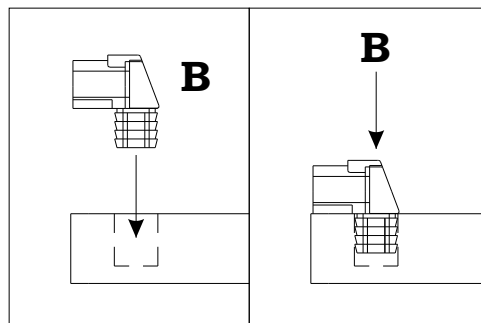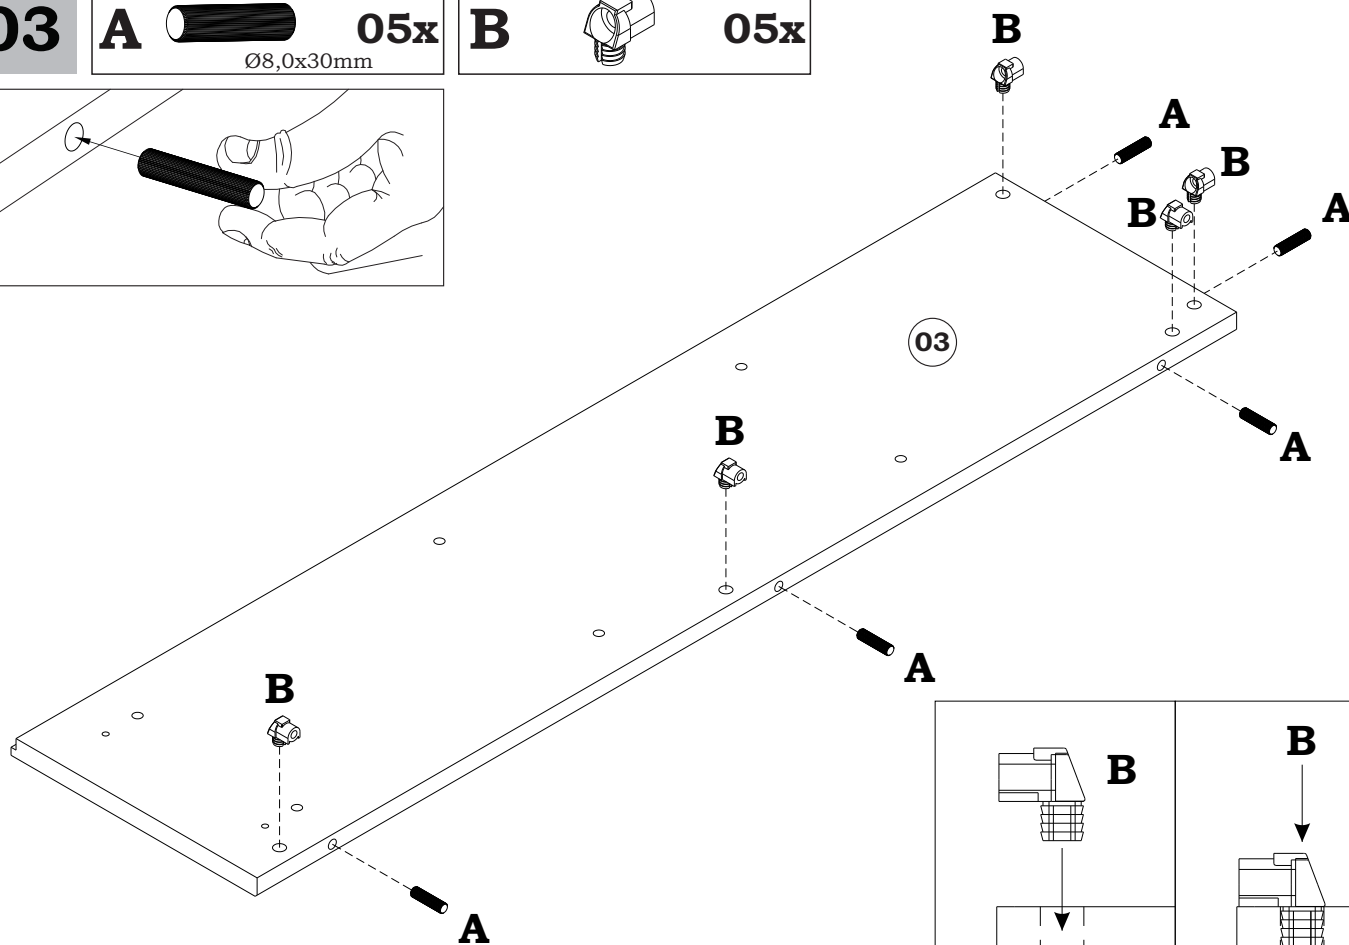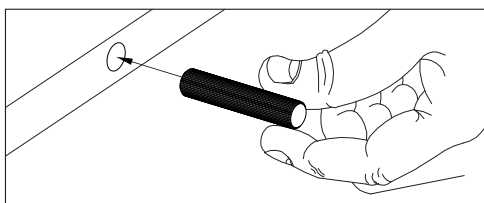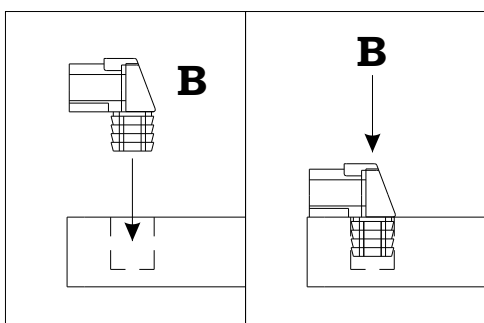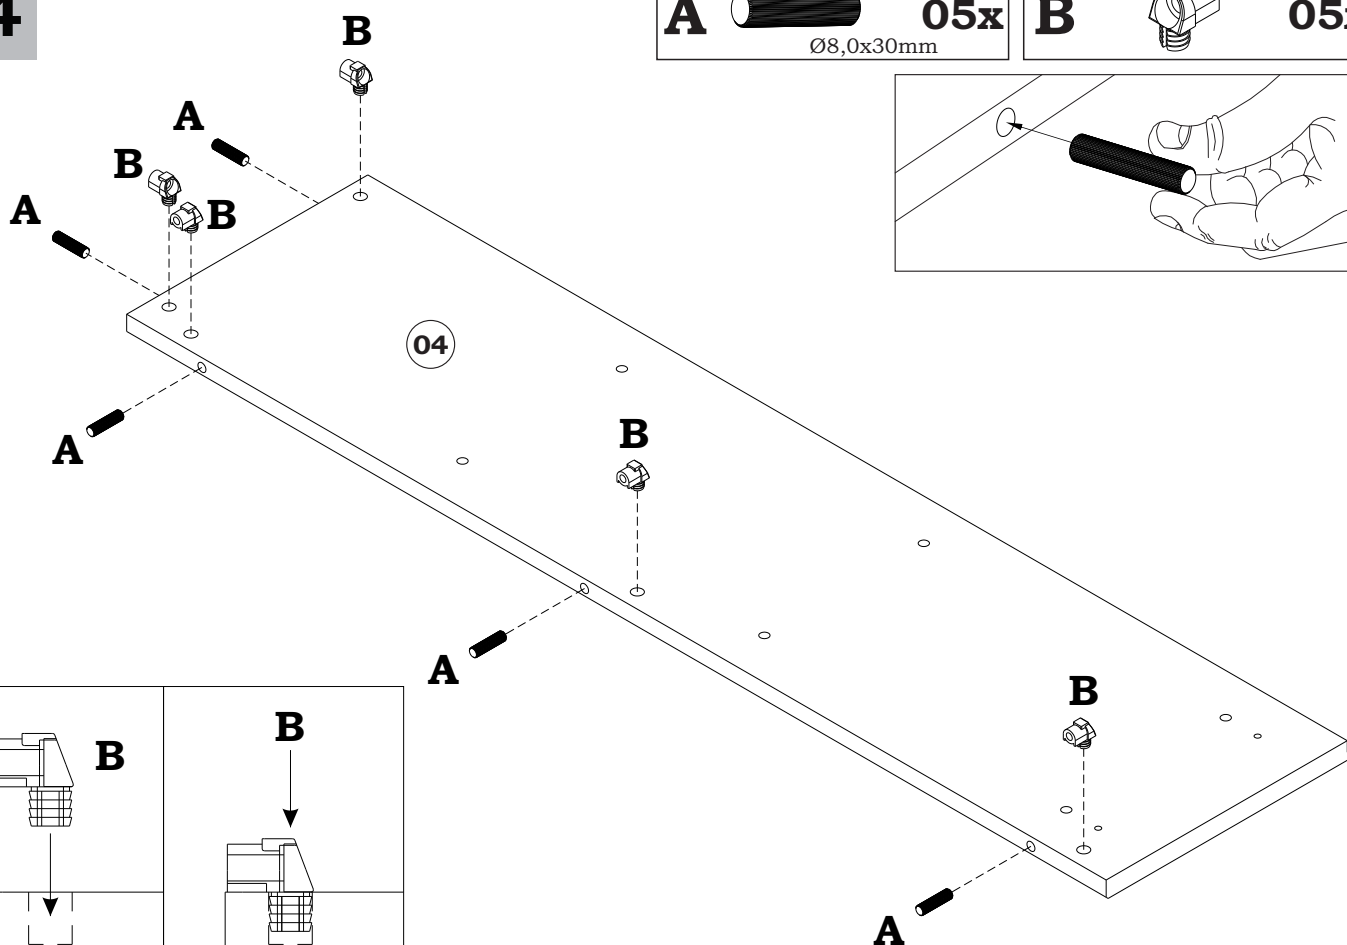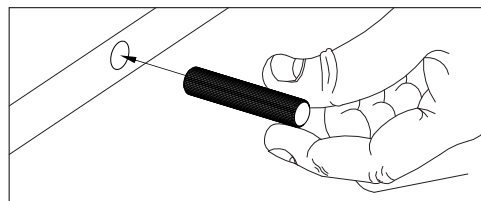
03**A**  **05x**
Ø8,0x30mm**B****05x****04****A**  **05x**
Ø8,0x30mm**B****05x**


05

A  **04x**
Ø8,0x30mm

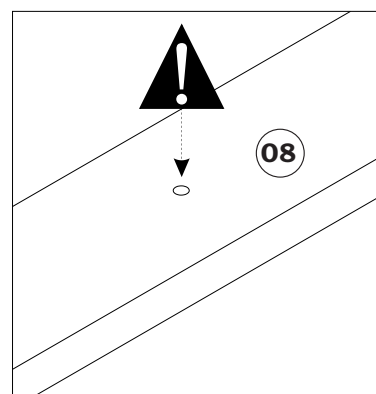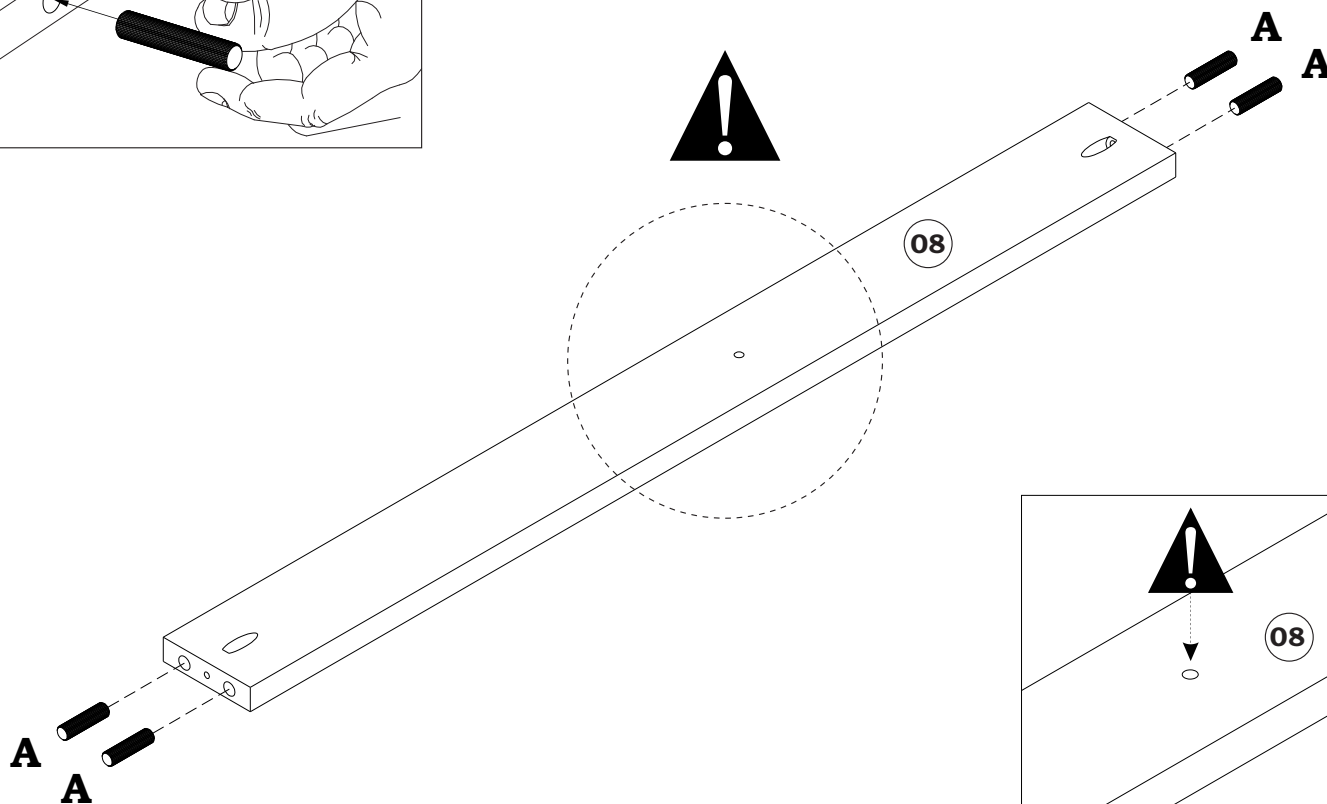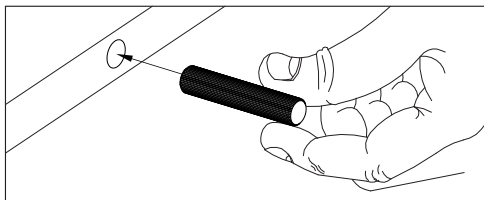





06

C  **02x**
Ø3,5x30mm

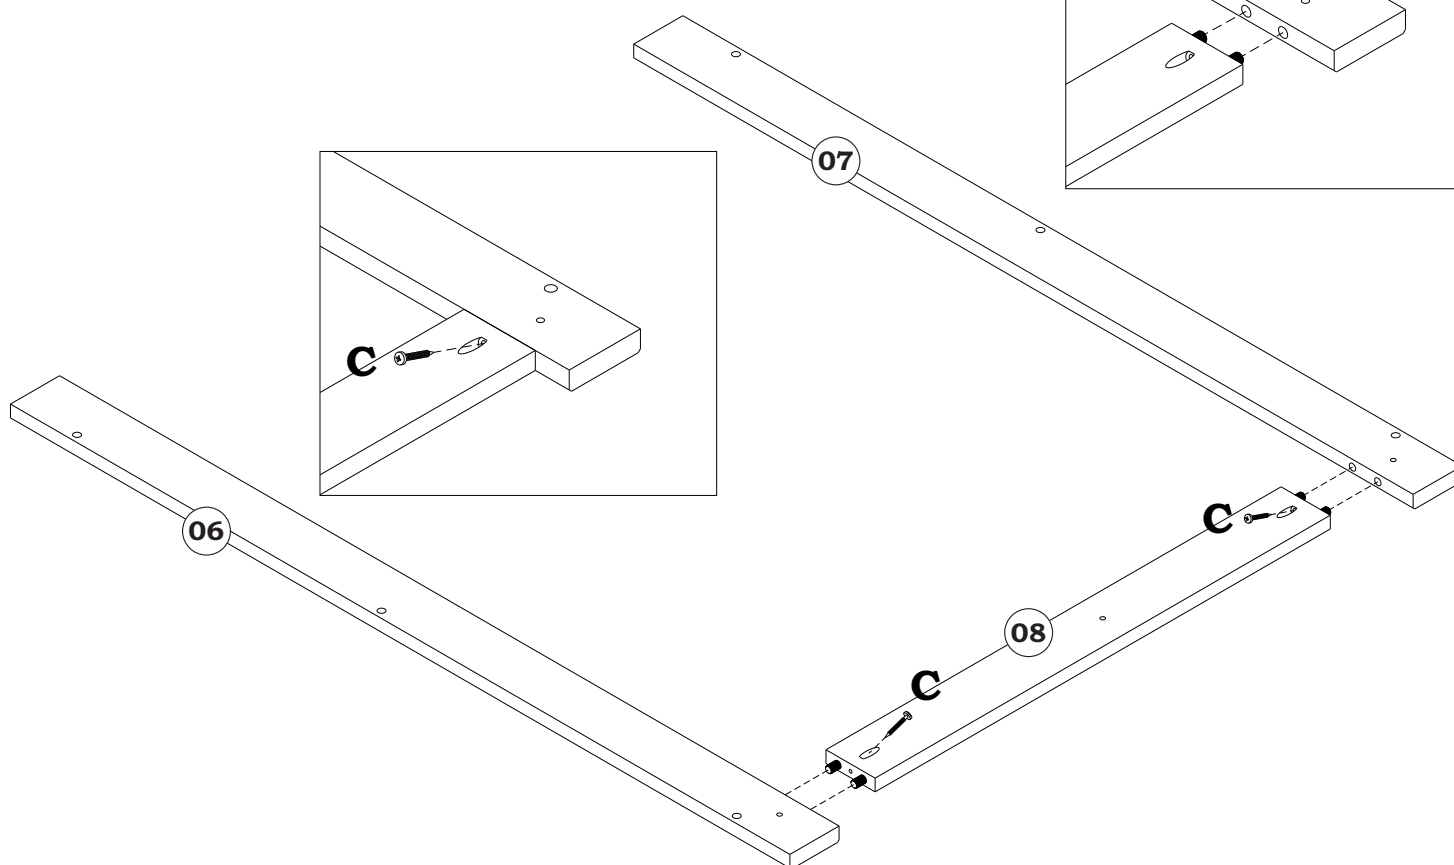





07

D  **02x**
Ø4,0x25mm

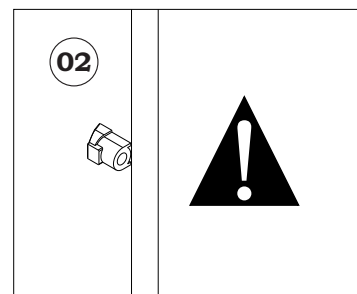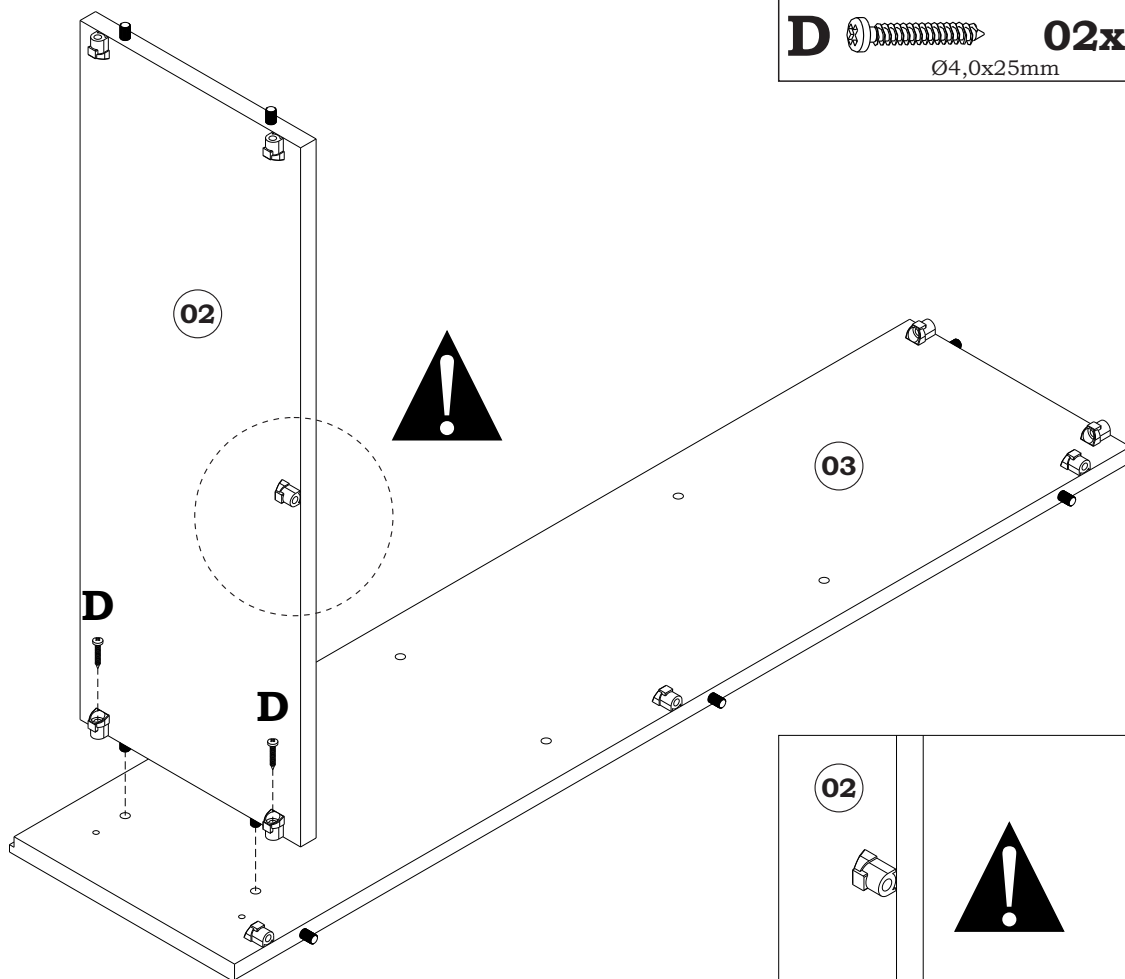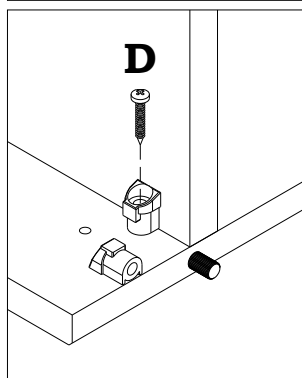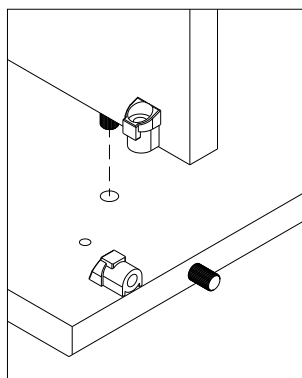

08

D  **04x**
Ø4,0x25mm

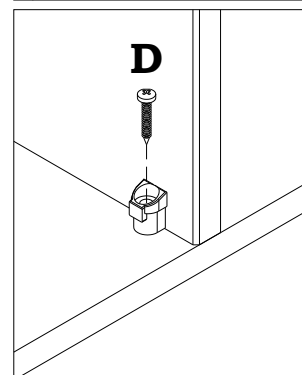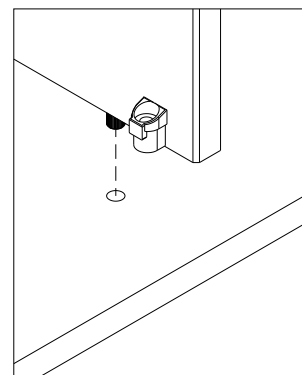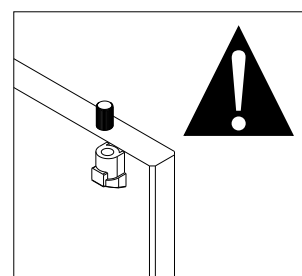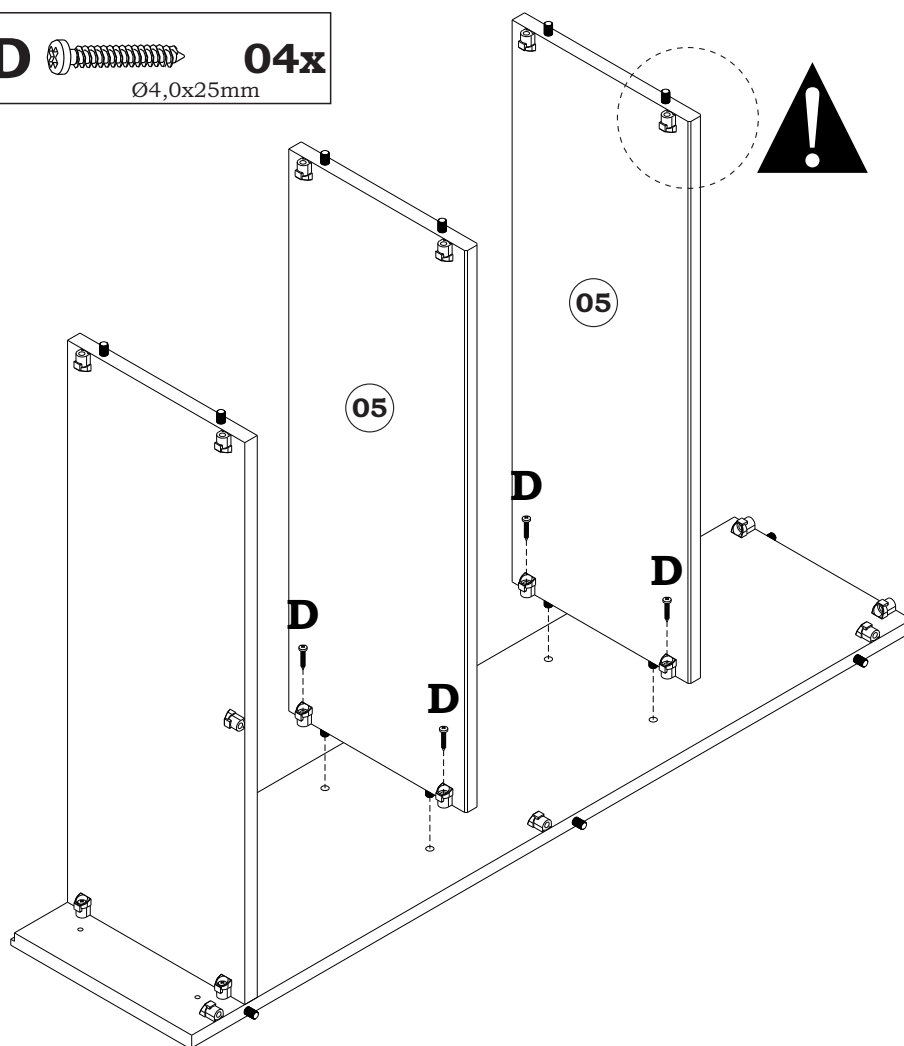



09

D





06x

Ø4,0x25mm

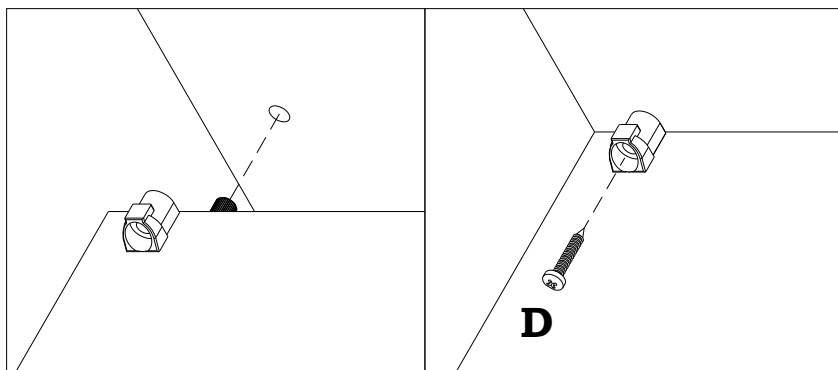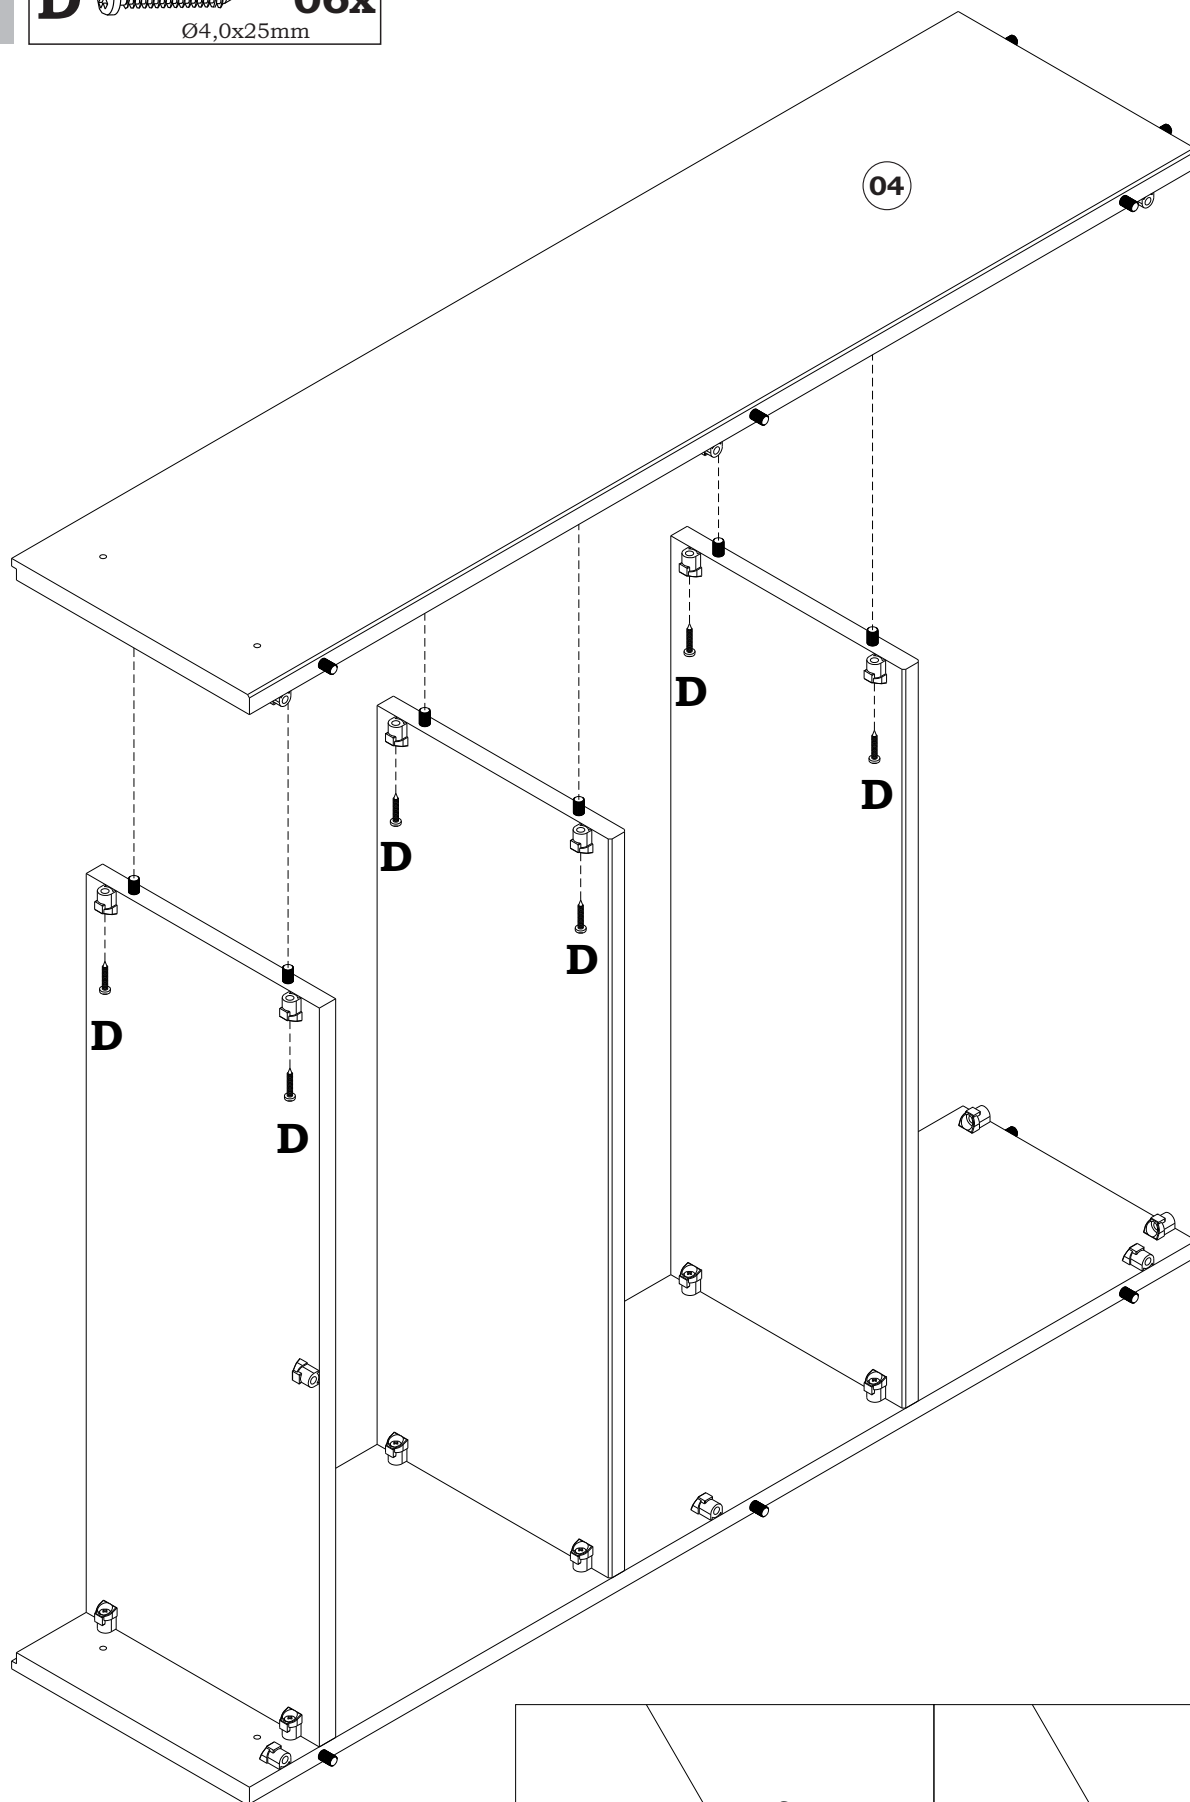



10

D  **07x**
Ø4,0x25mm

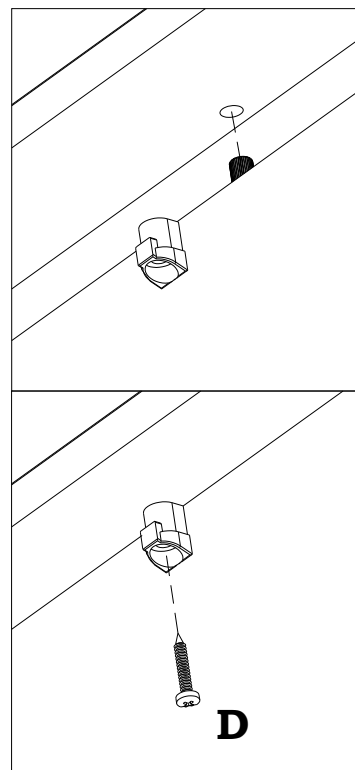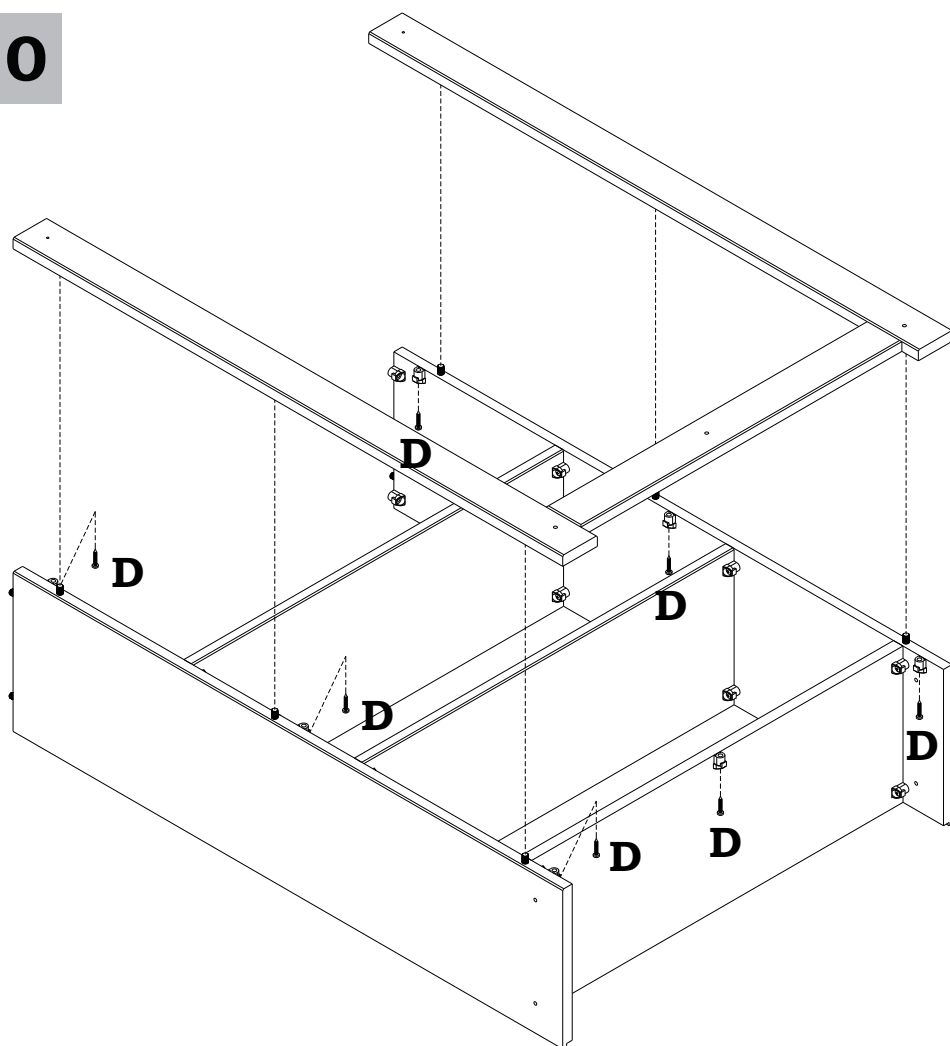



11

C  **04x**
Ø3,5x30mm

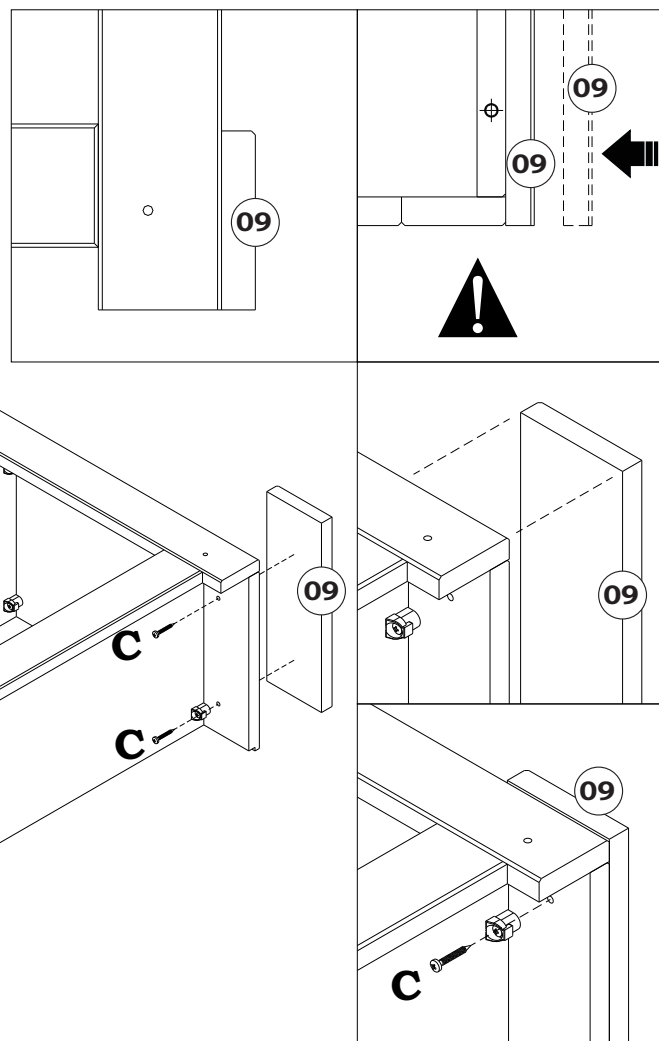
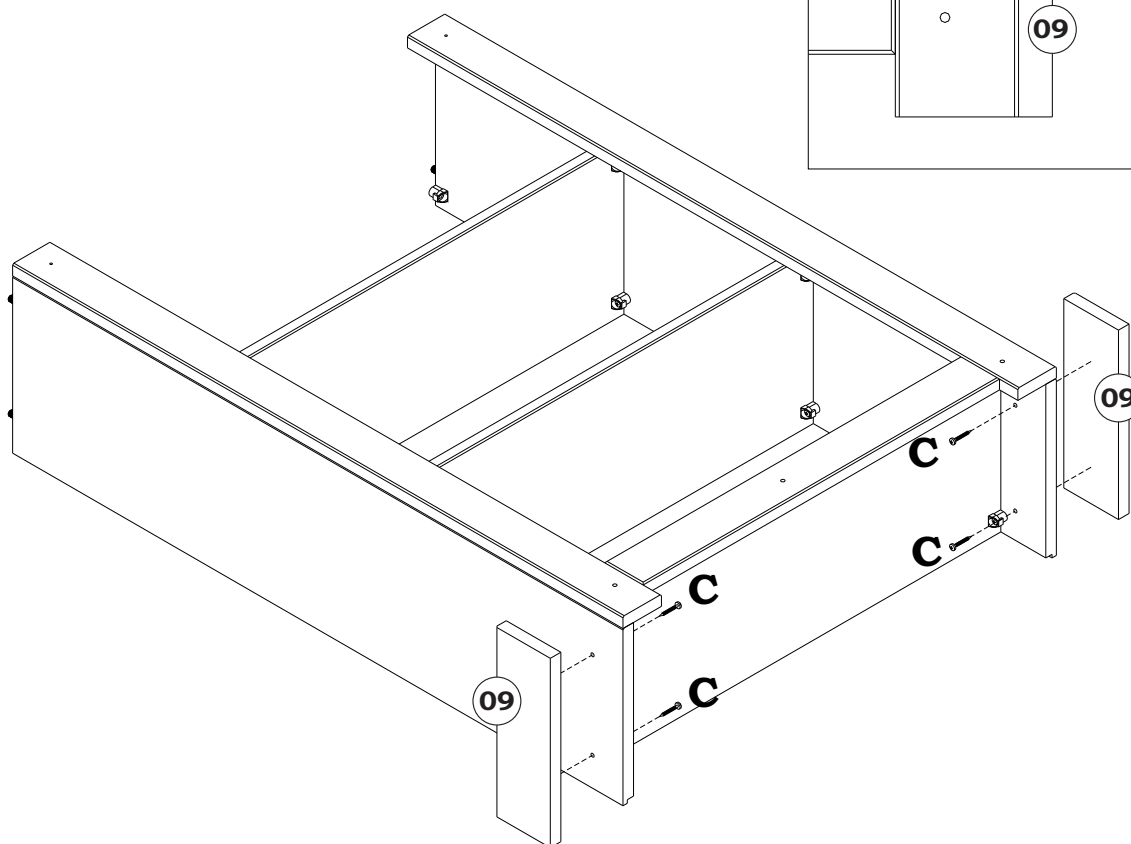


12

C  **03x**
Ø3,5x30mm


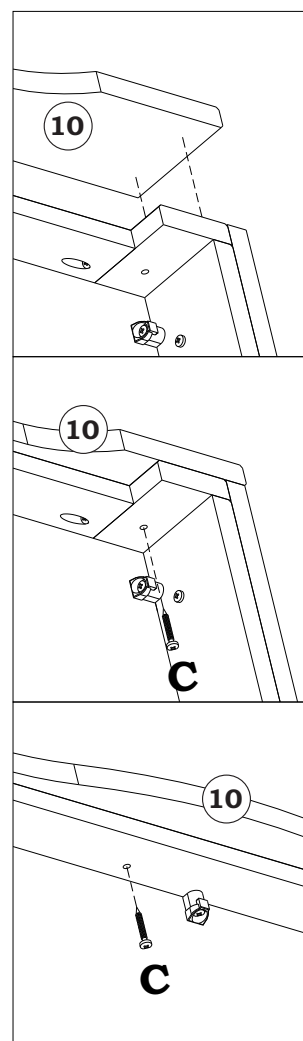
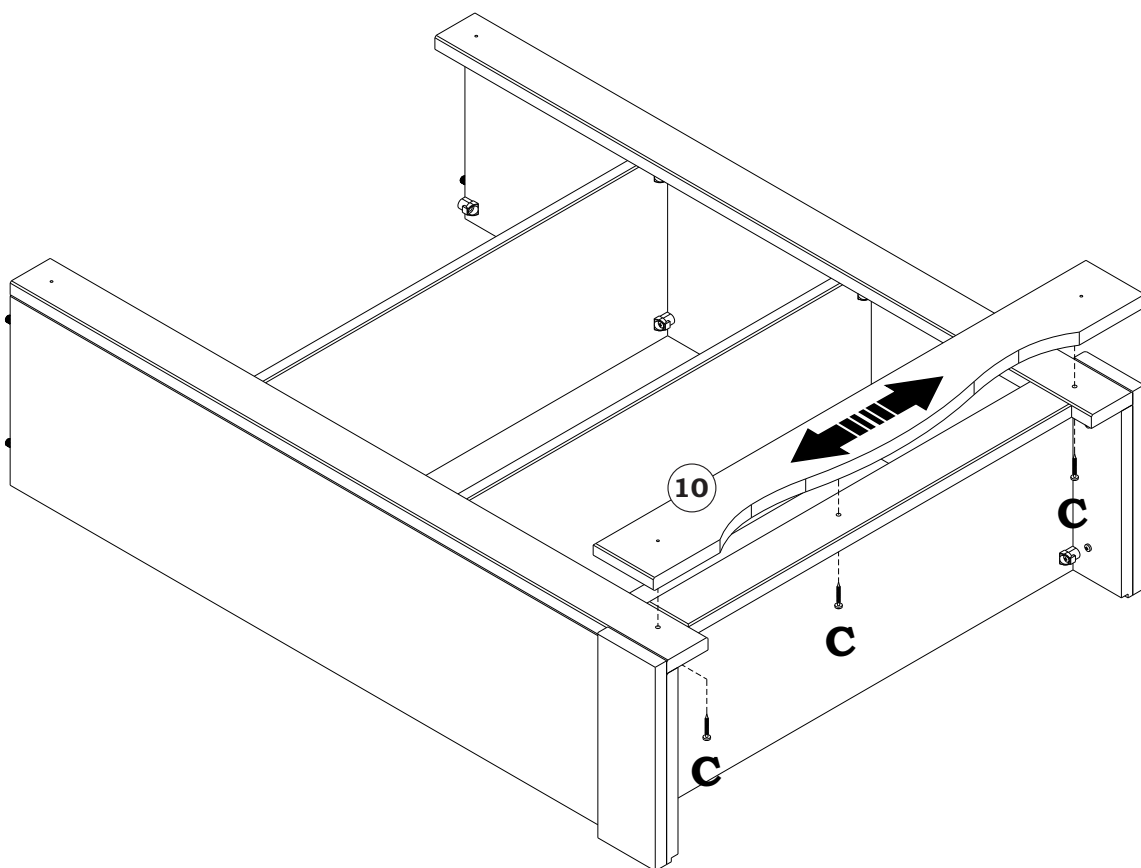



13


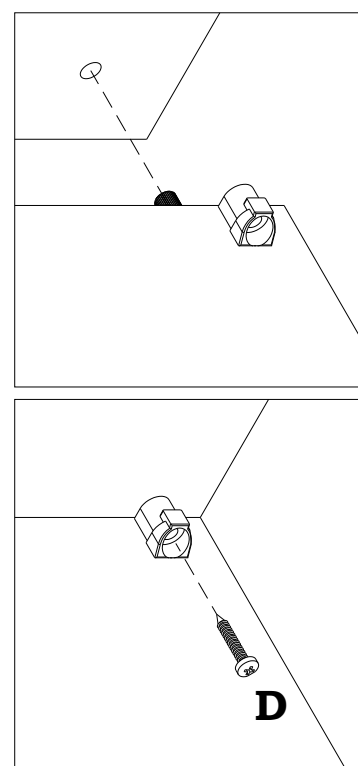
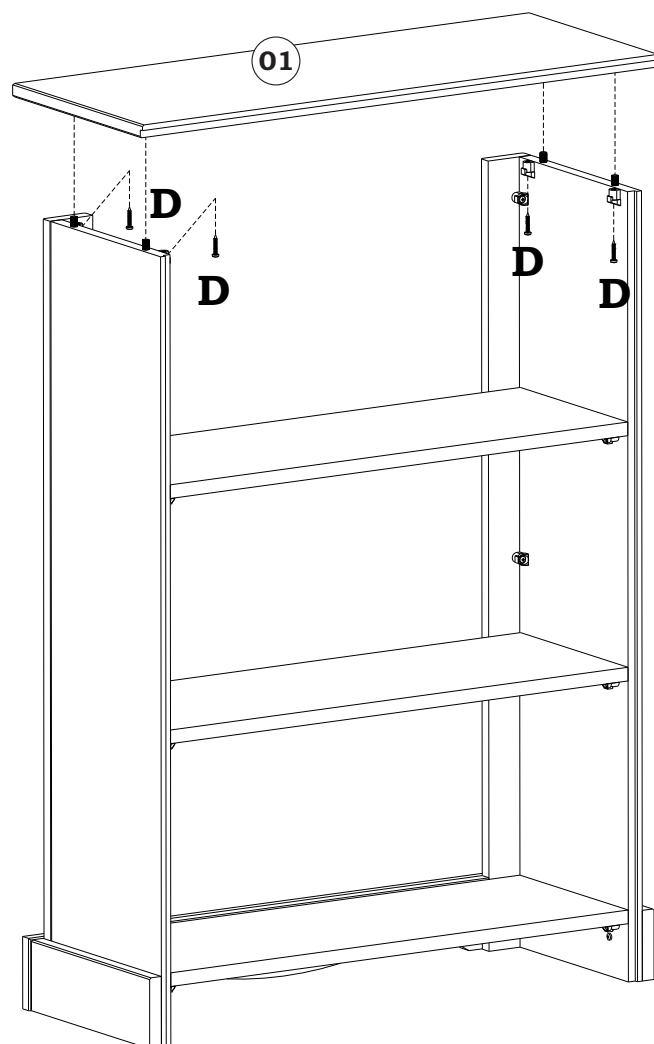



D  **04x**
Ø4,0x25mm

14

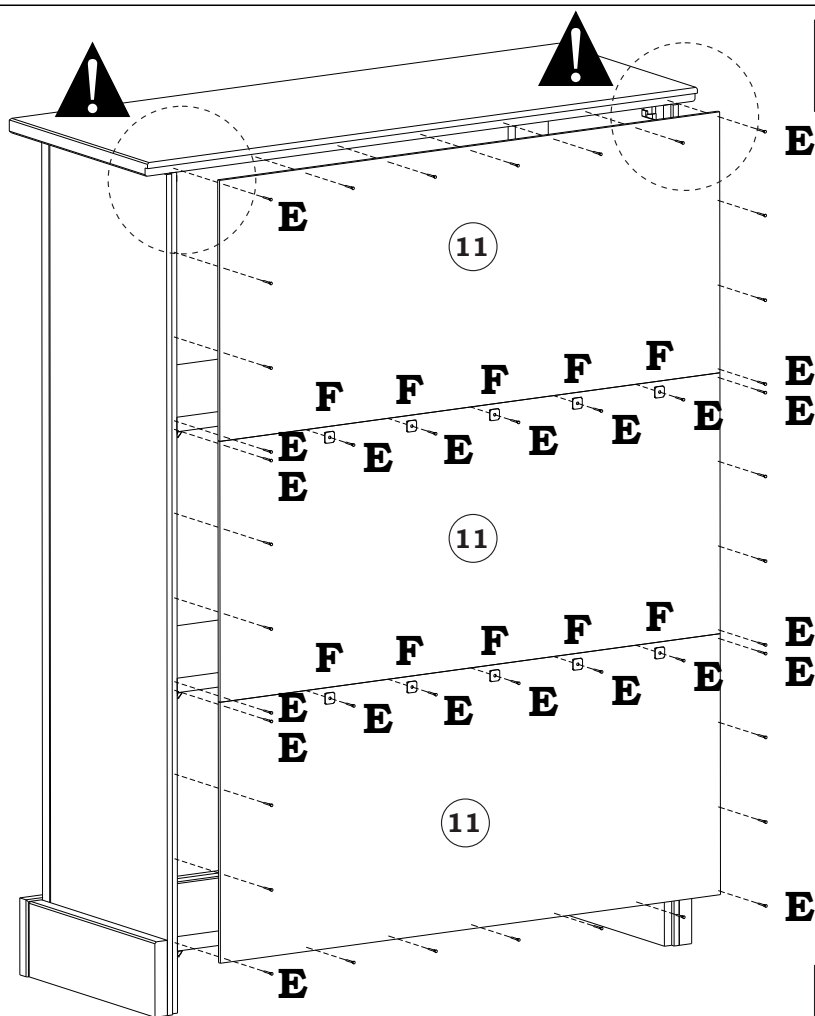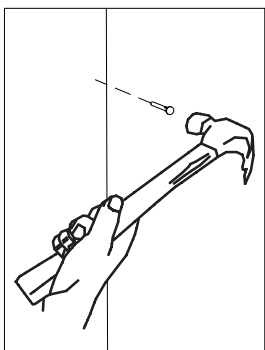
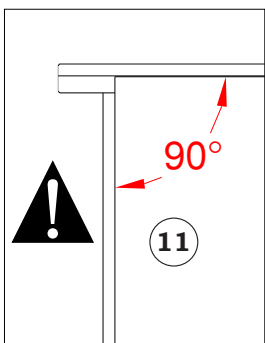


E  **44x**
8x8

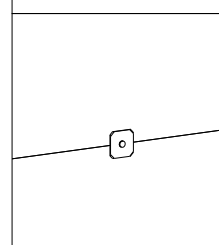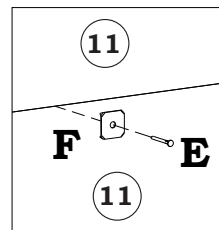
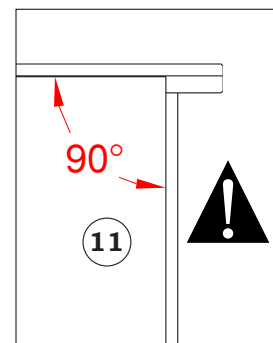


F  **10x**

15

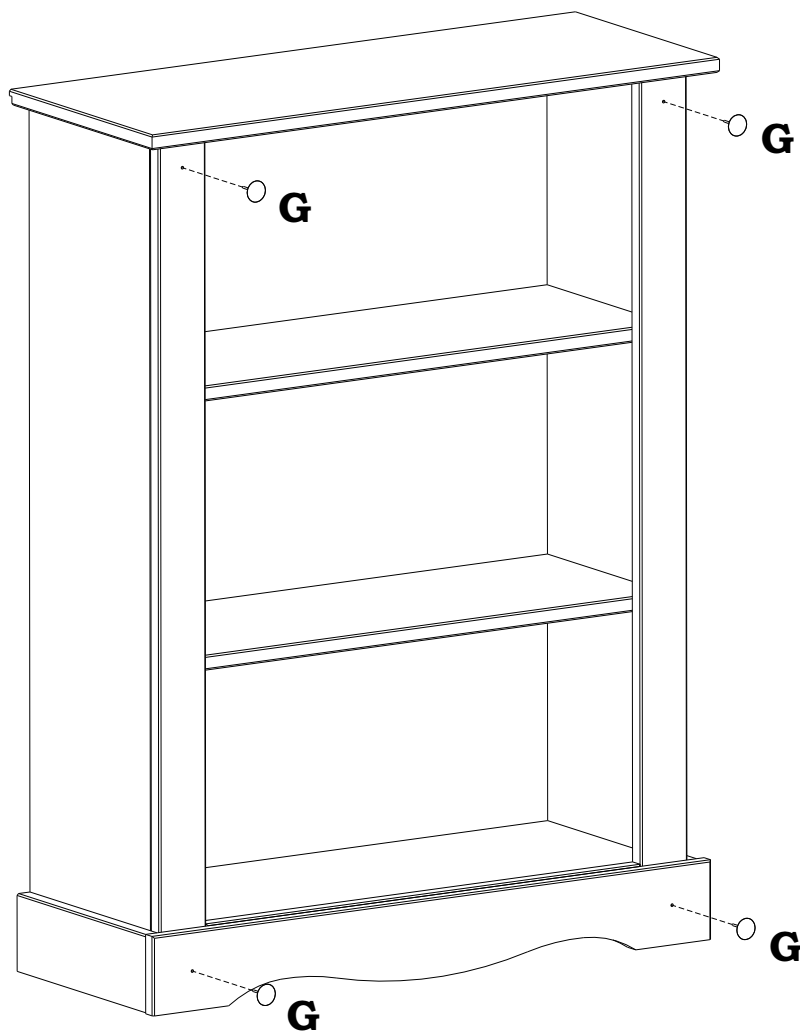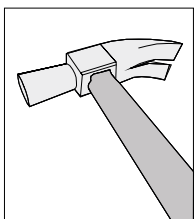

G  **04x**




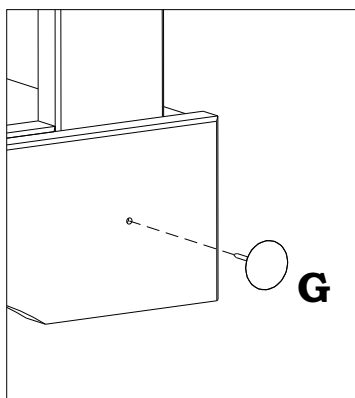
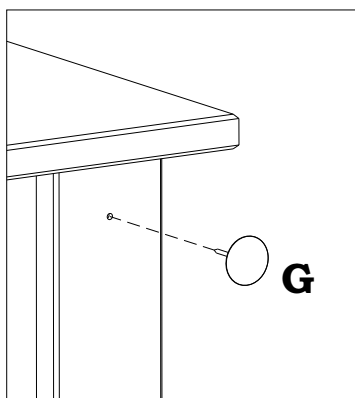


16

Y



01x

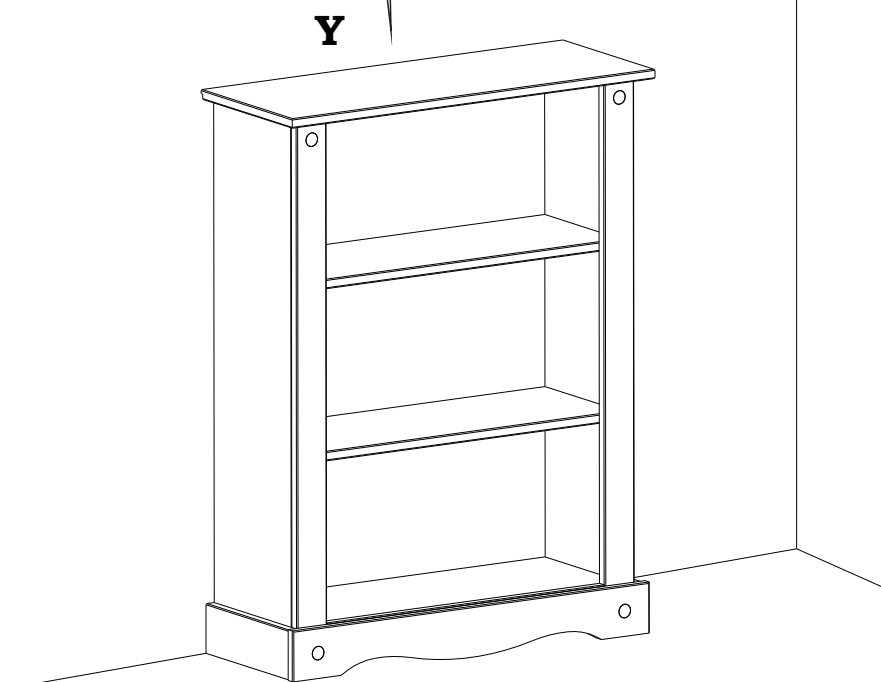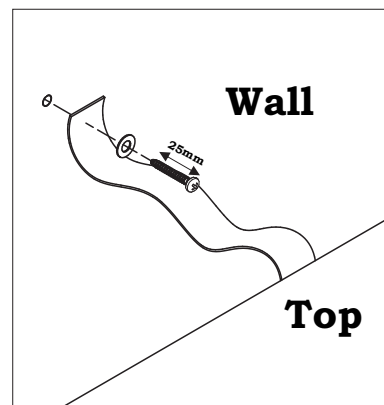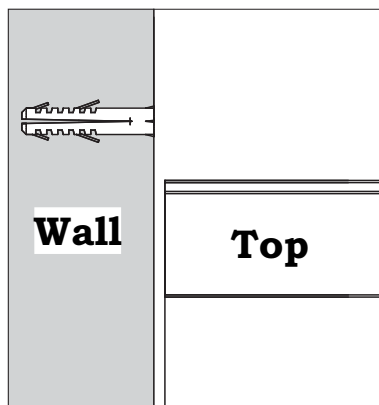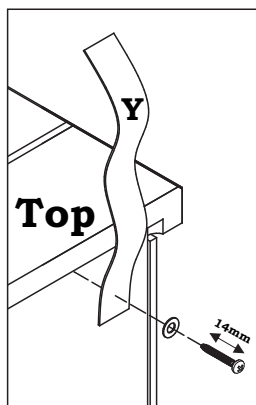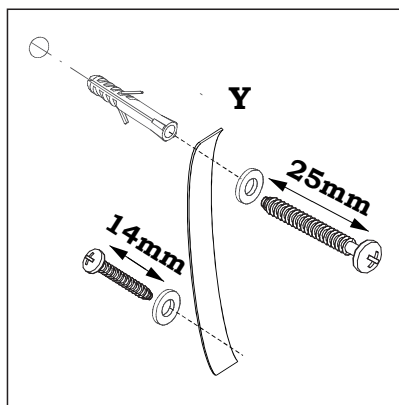

WARNING: CHECK FOR HIDDEN PIPES AND CABLES BEFORE DRILLING.

IMPORTANT: IF YOUR WALLS ARE NOT SOLID LIKE BRICK OR STONE, YOU WILL REQUIRE SPECIALIST FITTINGS (NOT SUPPLIED).

- Place fixing strip against the wall and mark position for drilling hole.
- Drill hole in your wall to a depth of 30mm using a 6mm drill bit. If the surface of your wall is soft and crumbly, we would advise you to use a 5mm drill bit for a tighter fit.
- Insert the wall plug into the hole with end flush to the wall surface.
- Attach fixing strip to the wall using the 25mm screw + washer and securely tighten.
- Pre-drill small pilot hole on the back edge of the furniture top using a 2mm drill bit. Attach the other end of fixing strip to the back edge of the furniture top using the 14mm screw + washer and securely tighten.