




INSTRUCTION MANUAL

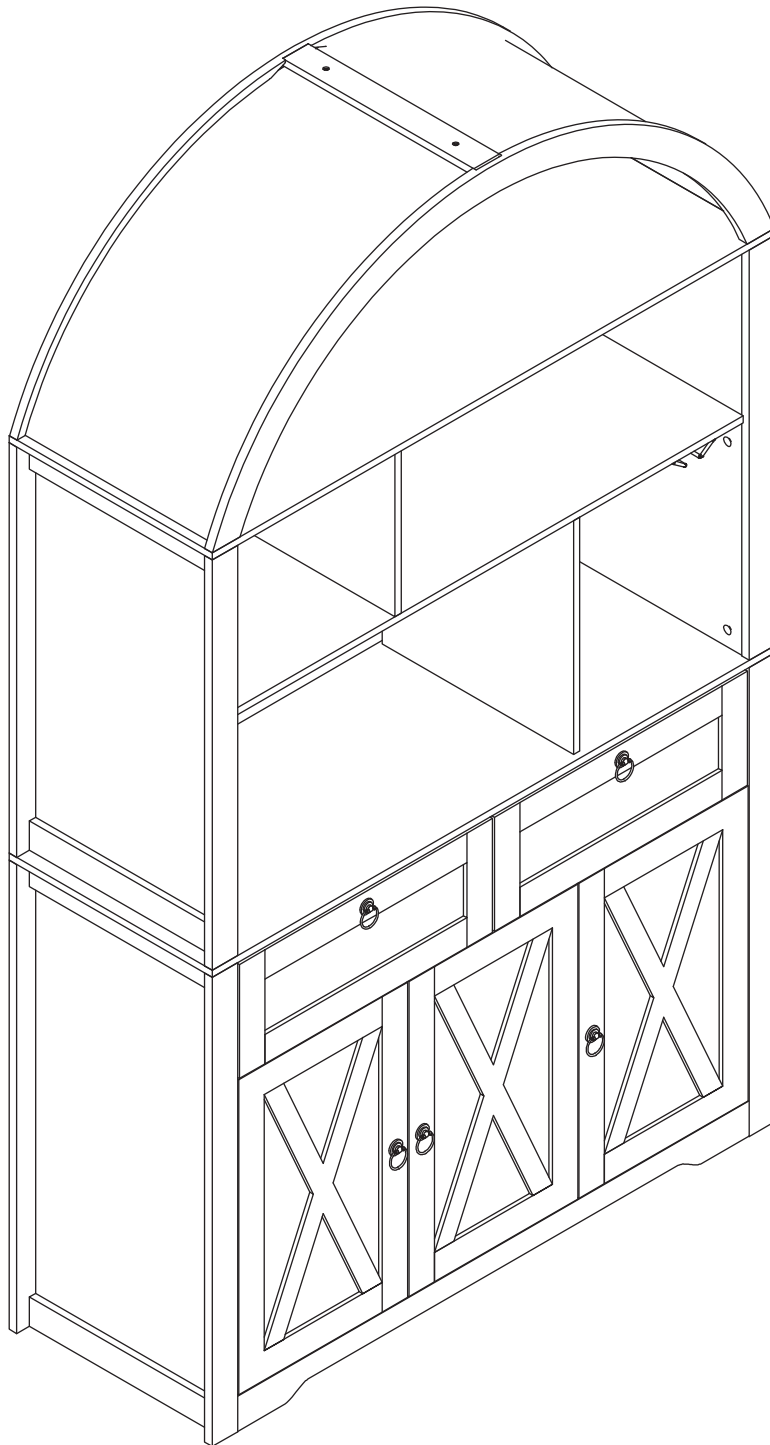

We stand behind we sell. If you are not satisfied with your purchase, you can return it for a replacement or refund.


For any further question don't hesitate to contact us.


SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

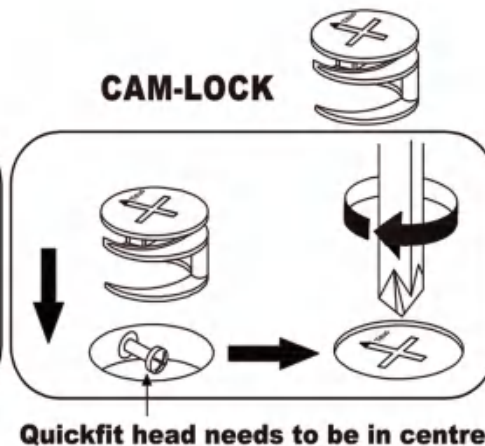
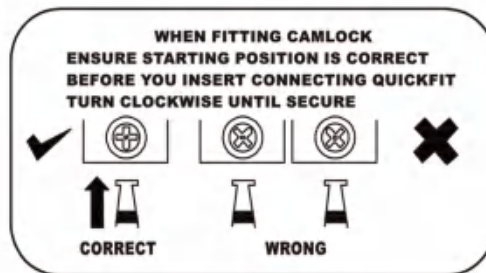


QUICKFIT



Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

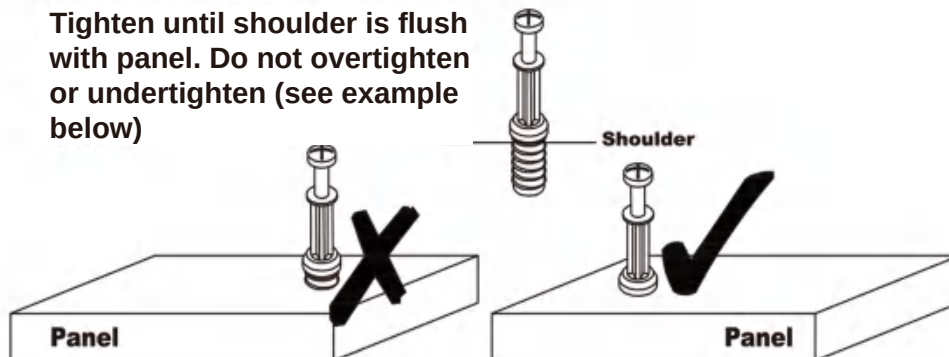

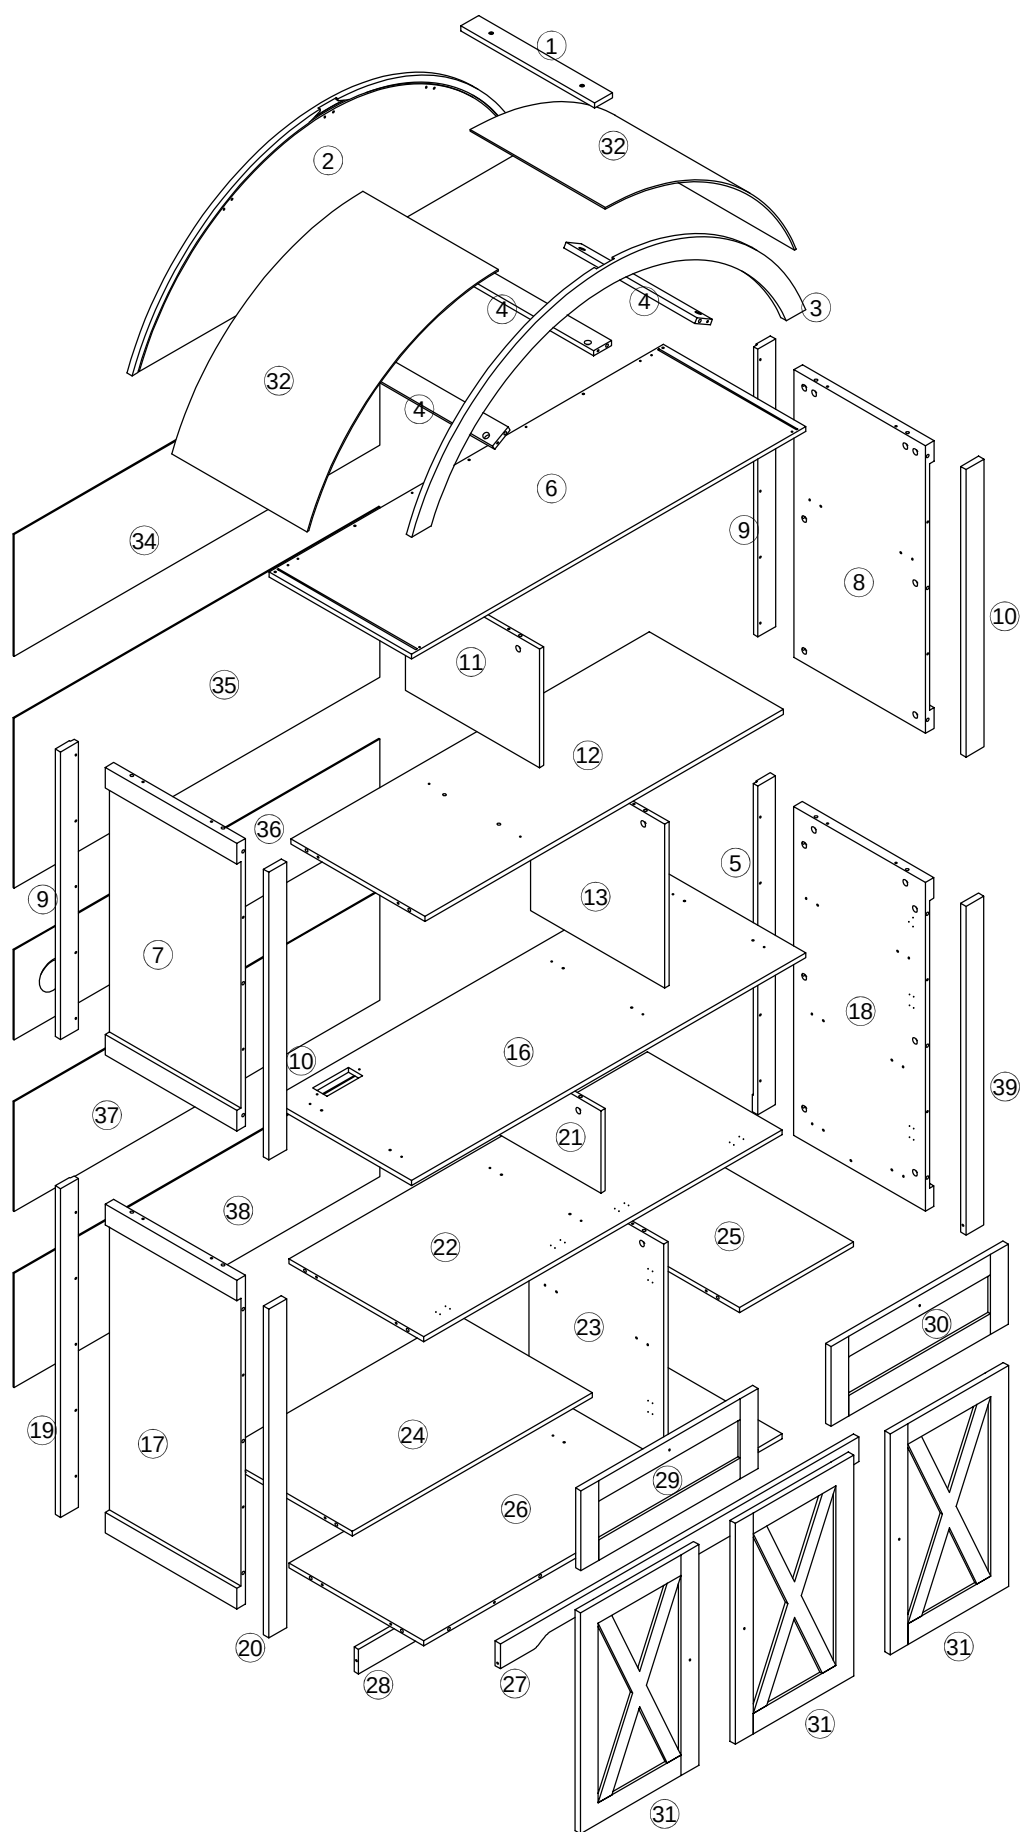

A	 6x30mm	78pcs	K		10pcs
B	 6x35mm	80pcs	L	 4x18mm	5sets
C	 15x9.5mm	80pcs	N		2pcs
D	 6x20mm	2pcs	P		2pcs
E	 4x25mm	2pcs	Q	 4x12mm	1set
F	 4x35mm	14pcs	R	 3x12mm	1set
G	 3.5x12mm	60pcs	S	 4x12mm	2sets
H	 3x10mm	44pcs	T	 4x50mm	2sets
J	 3x12mm	14pcs			

1


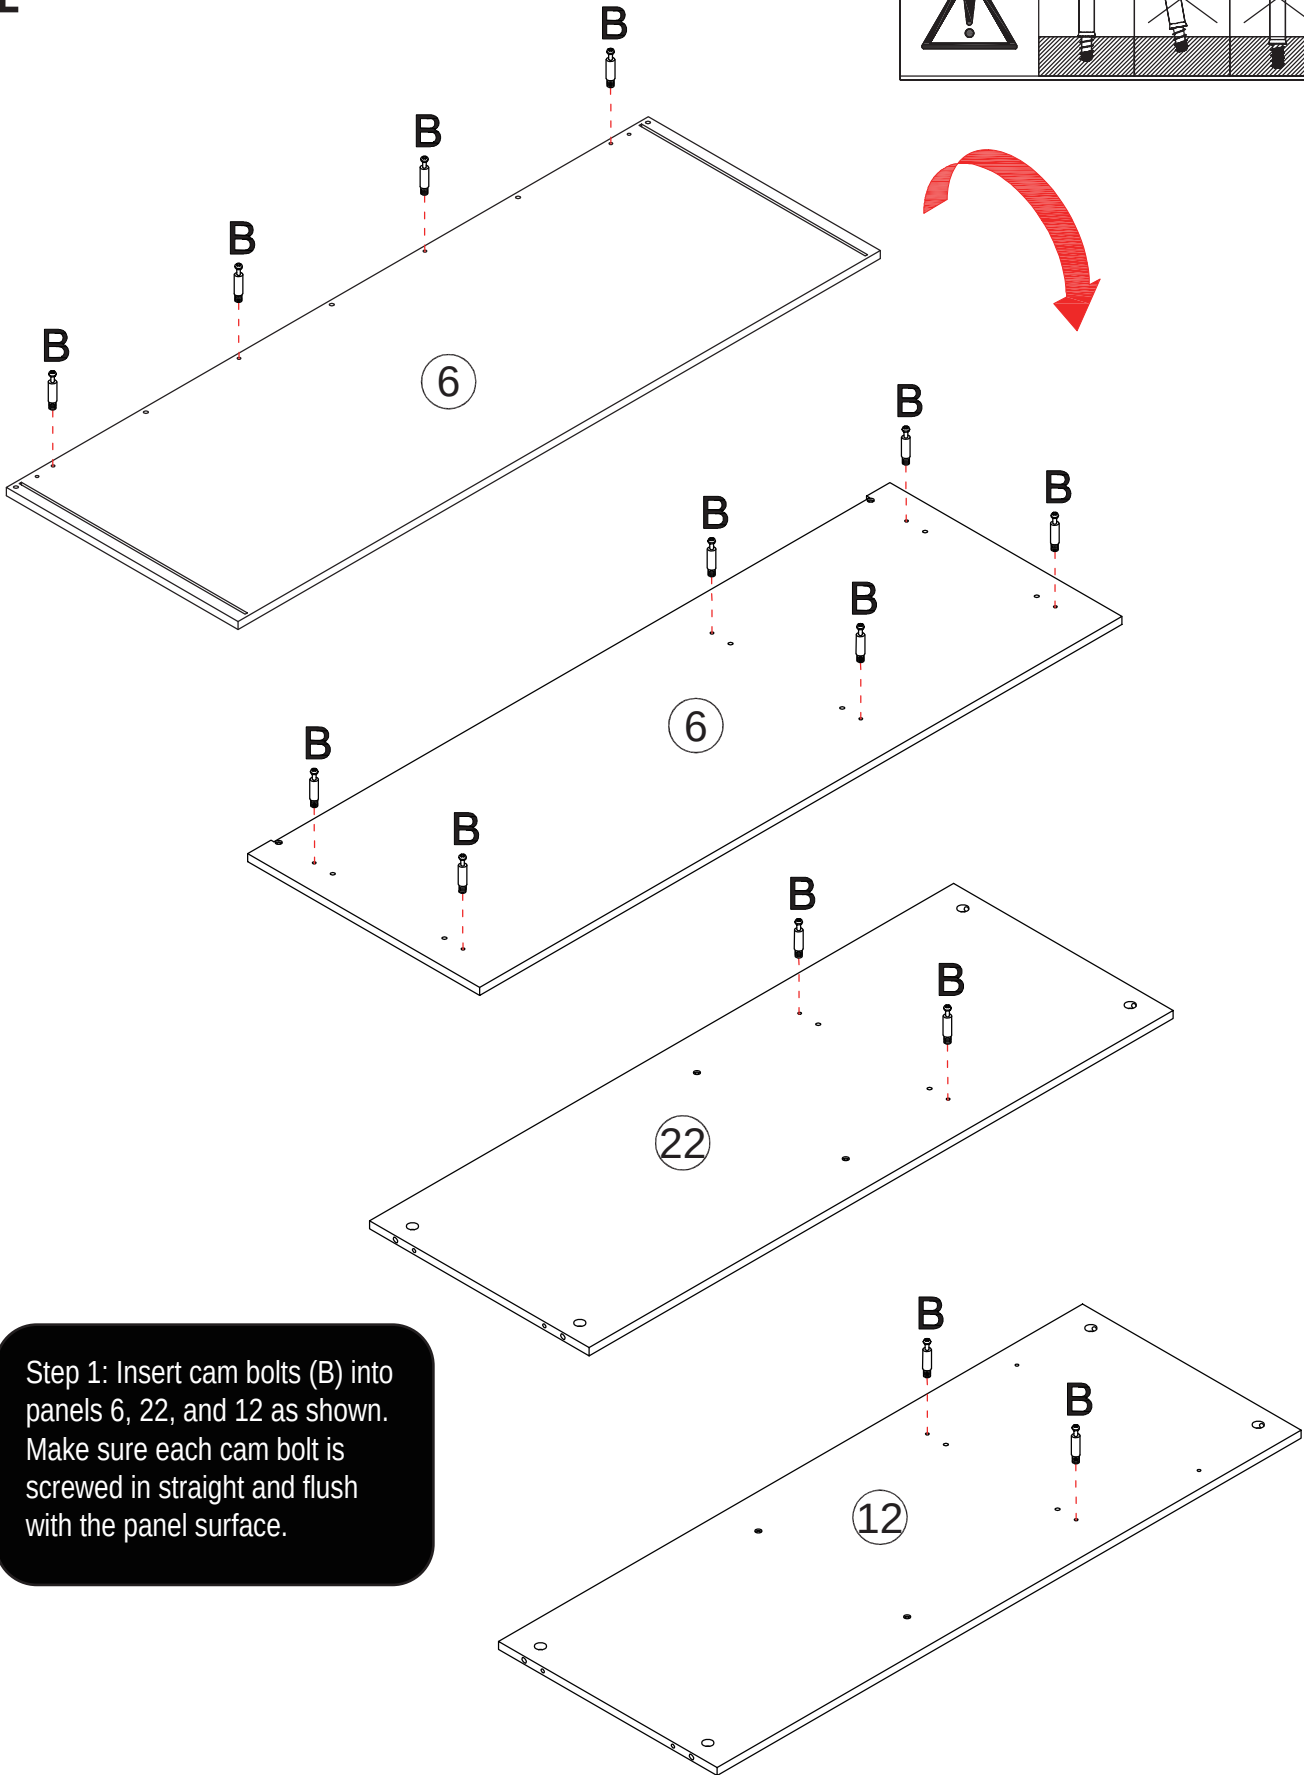
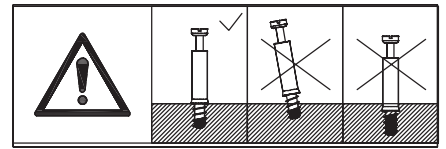


Step 1: Insert cam bolts (B) into panels 6, 22, and 12 as shown. Make sure each cam bolt is screwed in straight and flush with the panel surface.






(B)x14pcs

2

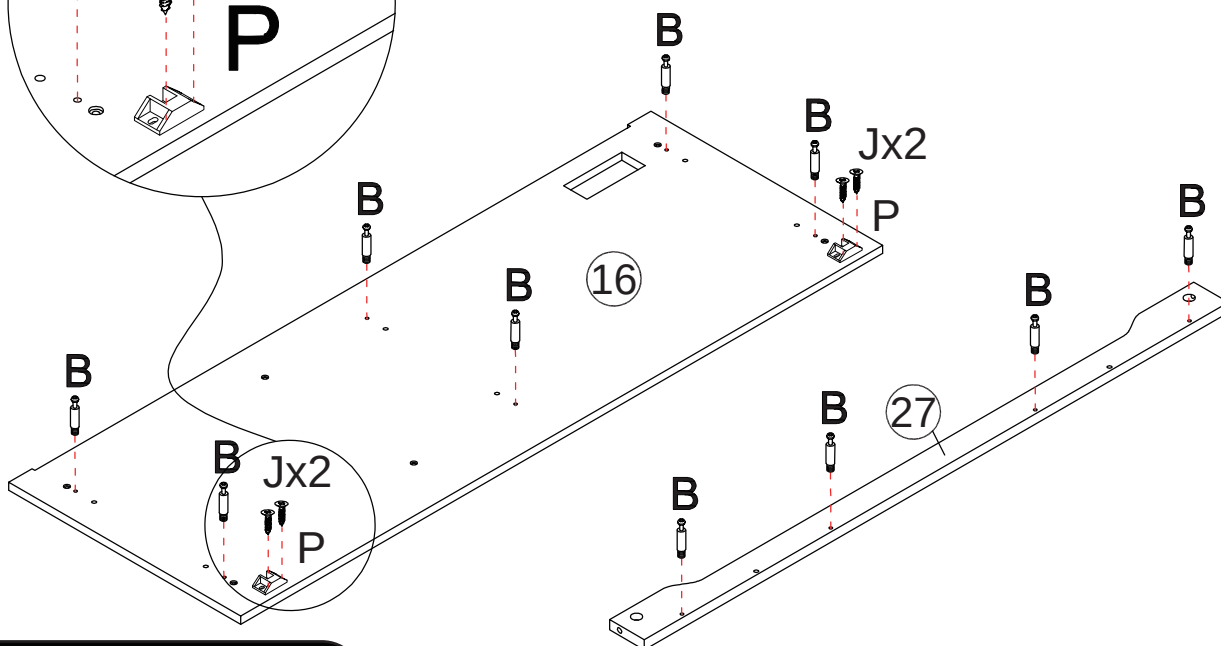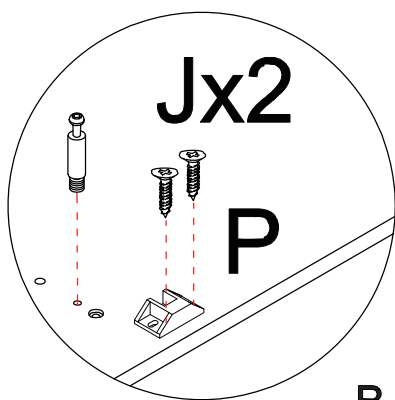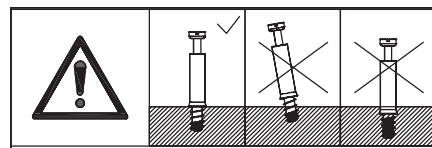

Step 2: Insert cam bolts (B) into panels 16, 27, 26, and 23. Attach the brackets (P) to panel 16 with screws (J), following the enlarged detail.

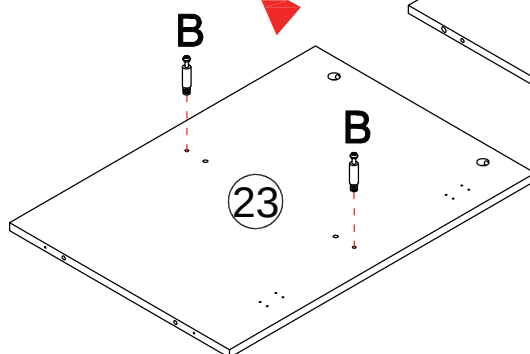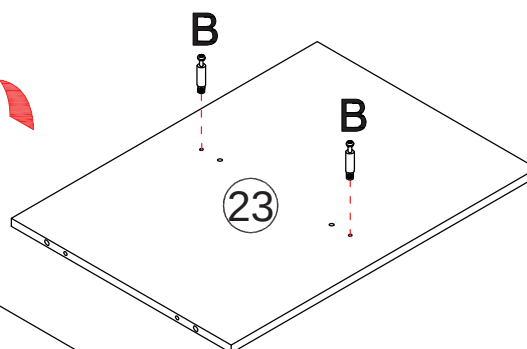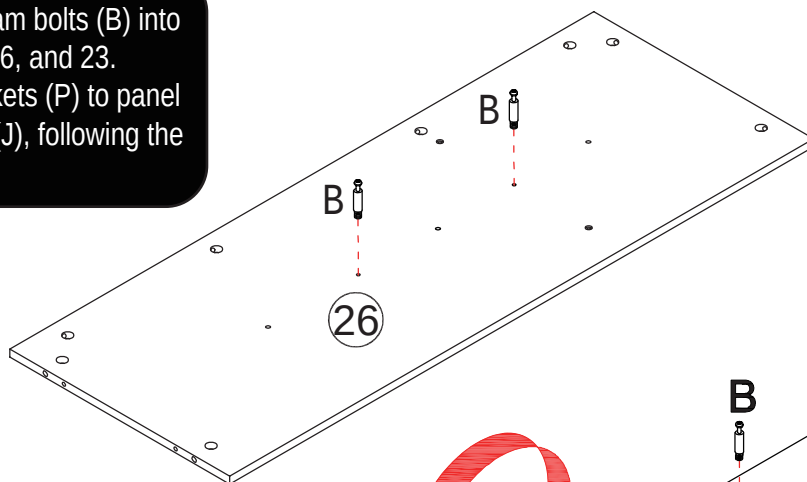

(B)x16pcs




(J)x4pcs



(P)x2pcs

3

Step 3: Connect panel 24 to panel 23 using wood dowels (A) and cam locks (C). Tighten the cam locks after the panels are aligned.

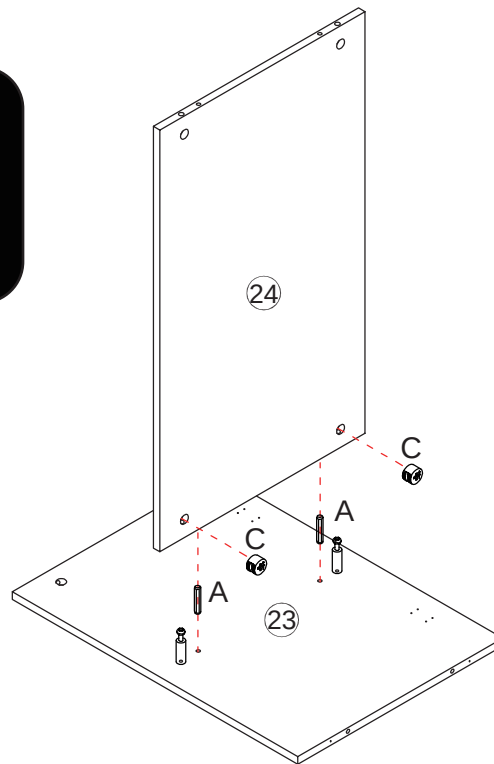



(A)x2pcs



(C)x2pcs

4

Step 4: Attach panel 25 to the assembly with wood dowels (A) and cam locks (C). Ensure the finished edges face the correct direction.

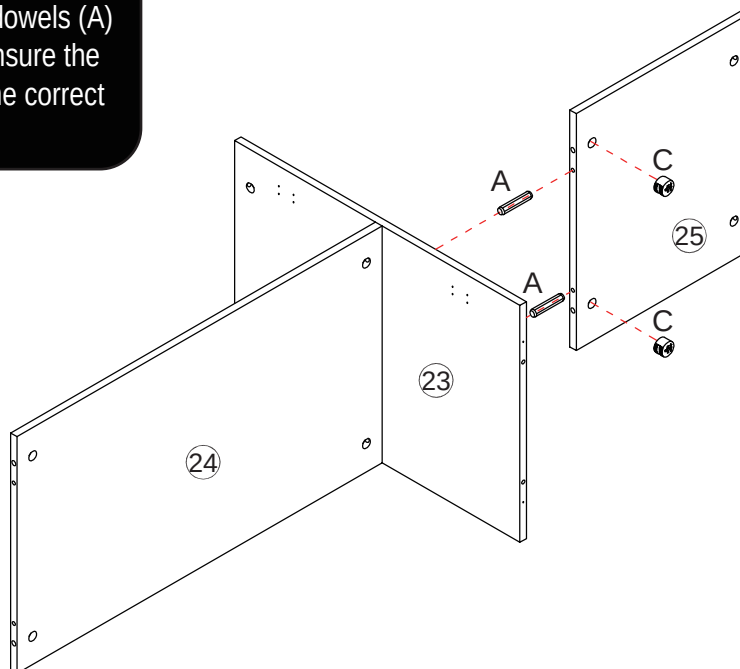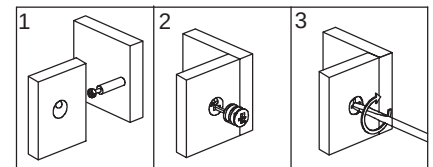


(A)x2pcs



(C)x2pcs

5

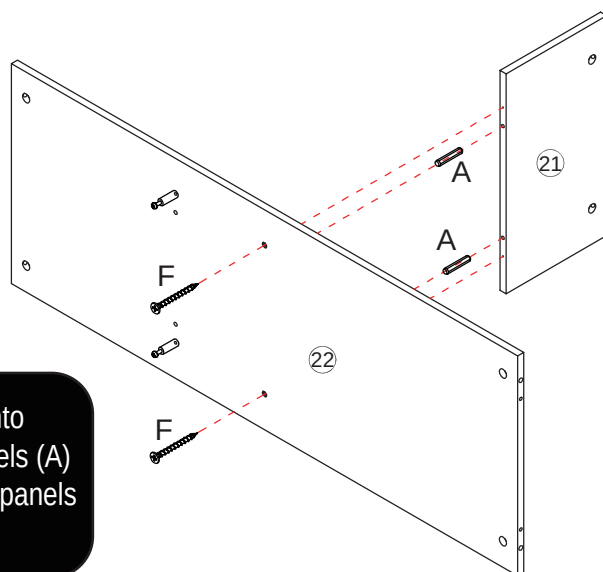

Step 5: Install panel 21 onto panel 22 using wood dowels (A) and screws (F). Keep the panels square while tightening.





(A)x2pcs



(F)x2pcs

6

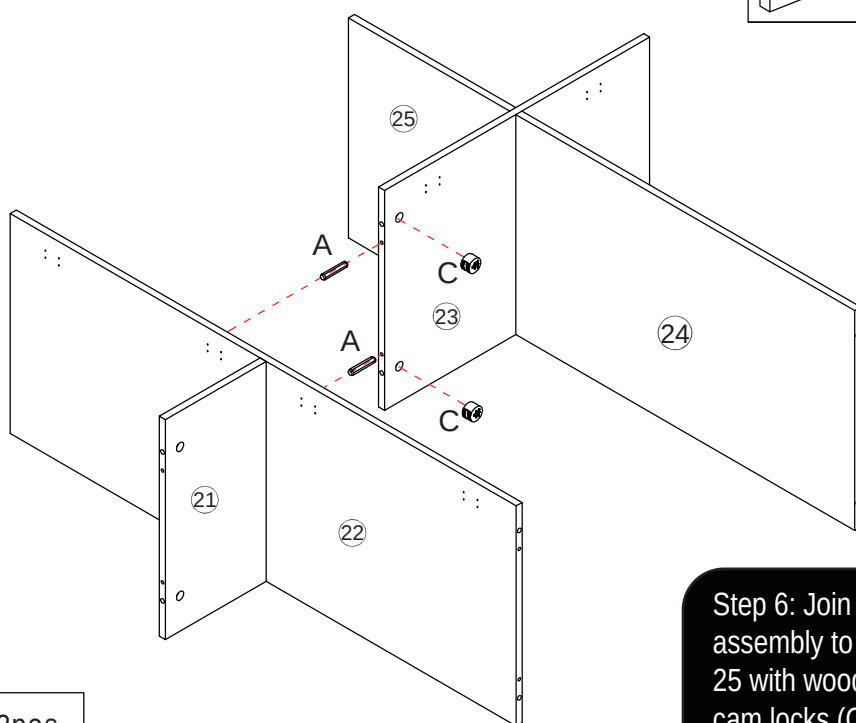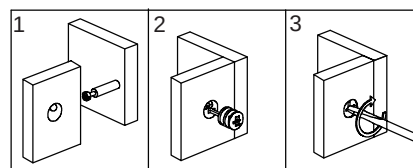

Step 6: Join the panel 22 assembly to panels 23, 24, and 25 with wood dowels (A) and cam locks (C). Lock all cam locks securely.




(A)x2pcs



(C)x2pcs

7

Step 7: Attach panel 26 to the lower assembly using wood dowels (A) and screws (F). Align the pre-drilled holes before fastening.

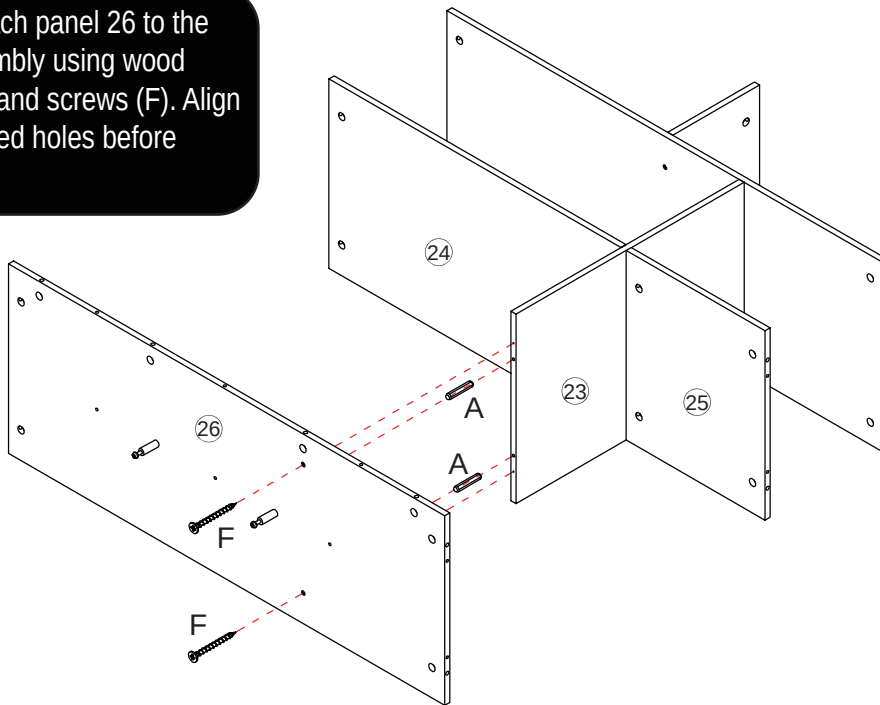



(A)x2pcs



(F)x2pcs

8

Step 8: Install strip 28 onto panel 26 using wood dowels (A) and cam locks (C). Tighten the cam locks to secure the strip.

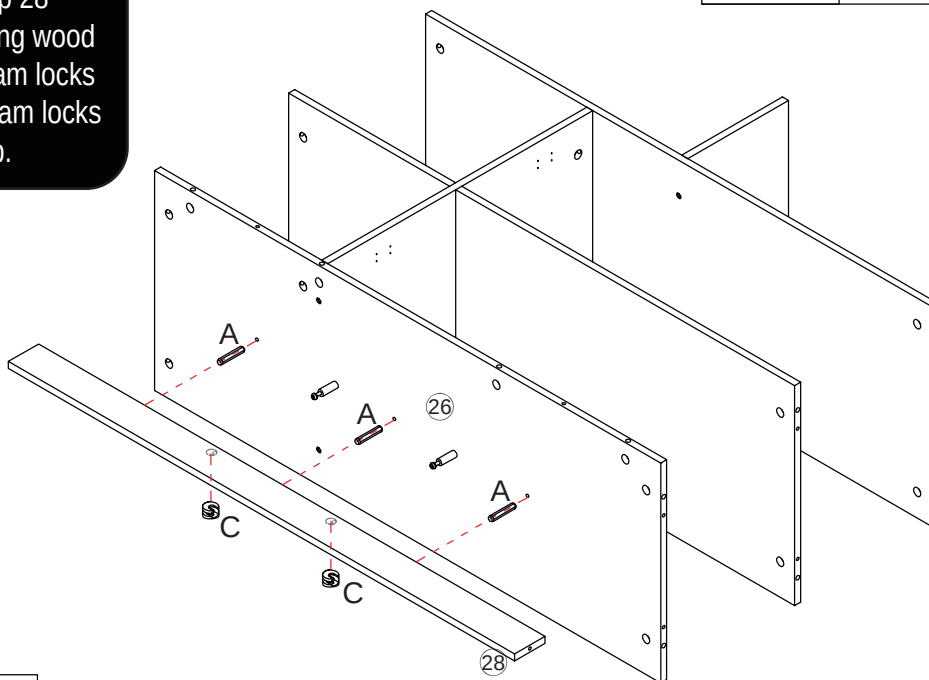
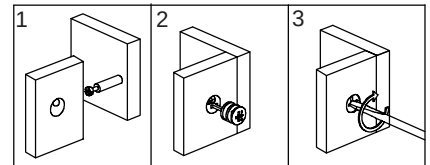


(A)x3pcs




(C)x2pcs

9

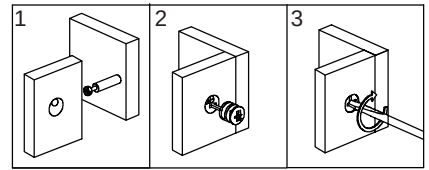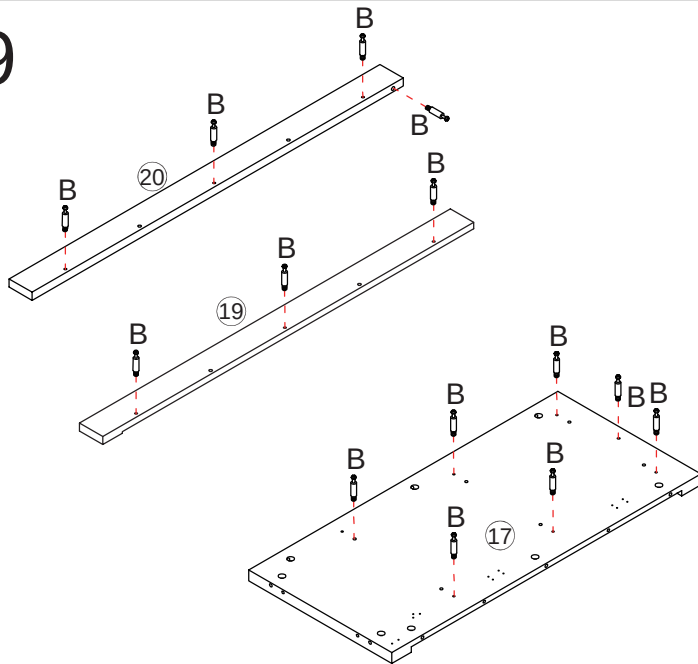

Step 9: Prepare the left side frame. Insert cam bolts (B) into parts 19, 20, and 17, then assemble them with panel 17 using wood dowels (A) and cam locks (C).

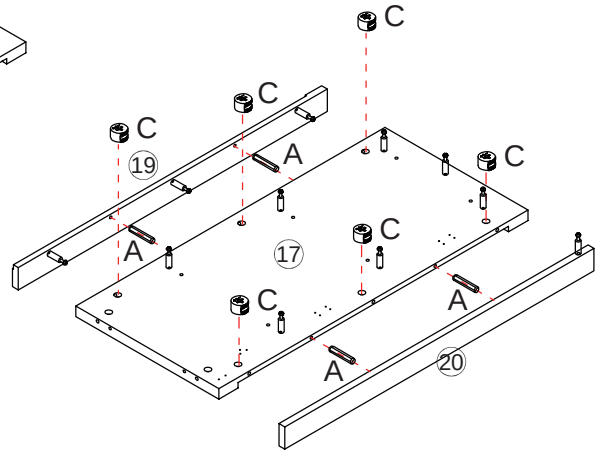

(A)x4pcs





(B)x14pcs




(C)x6pcs

10

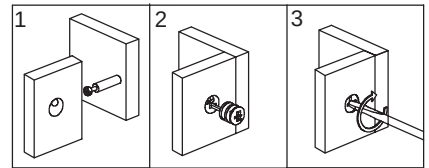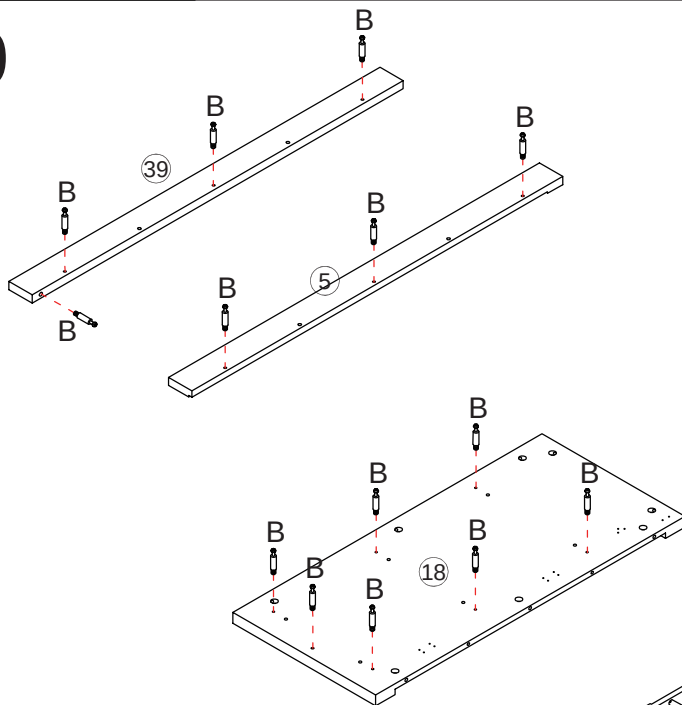

Step 10: Prepare the right side frame. Insert cam bolts (B) into parts 39 and panel 18, then assemble the frame with wood dowels (A) and cam locks (C).

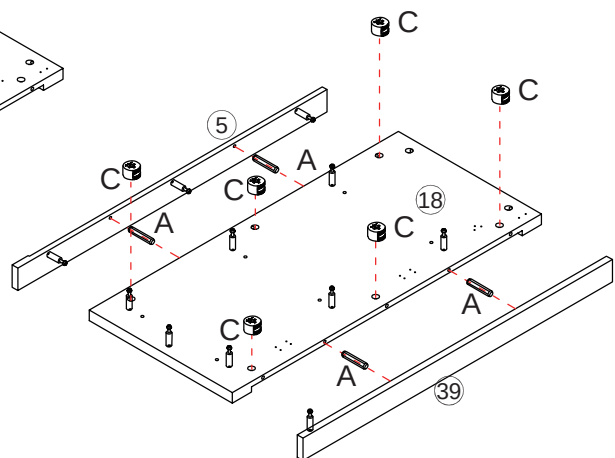

(A)x4pcs





(B)x14pcs



(C)x6pcs

11

Step 11: Attach part 27 to the front of the lower assembly using wood dowels (A) and cam locks (C).

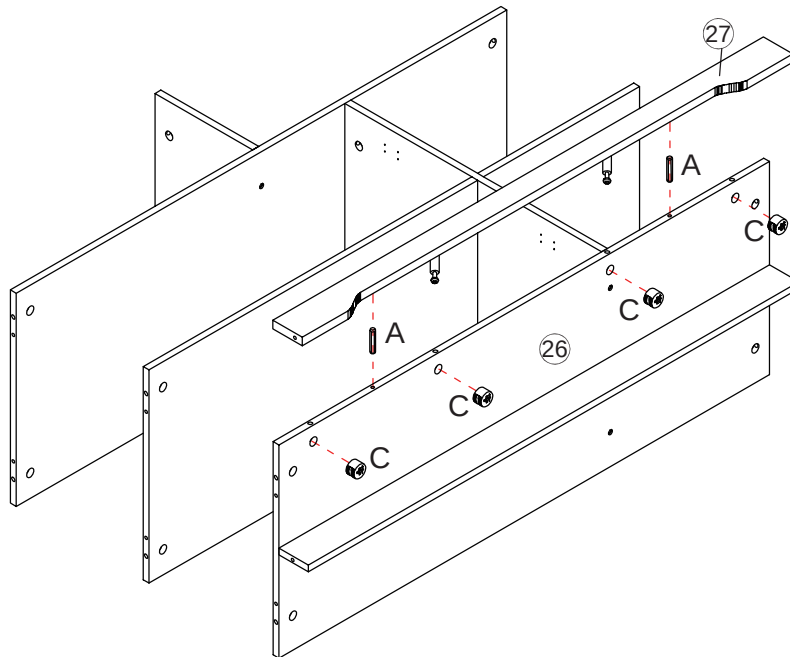
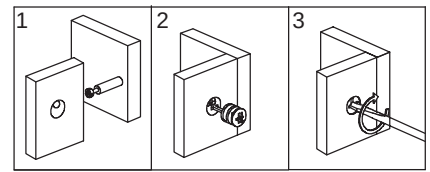


(A)x2pcs



(C)x4pcs

12

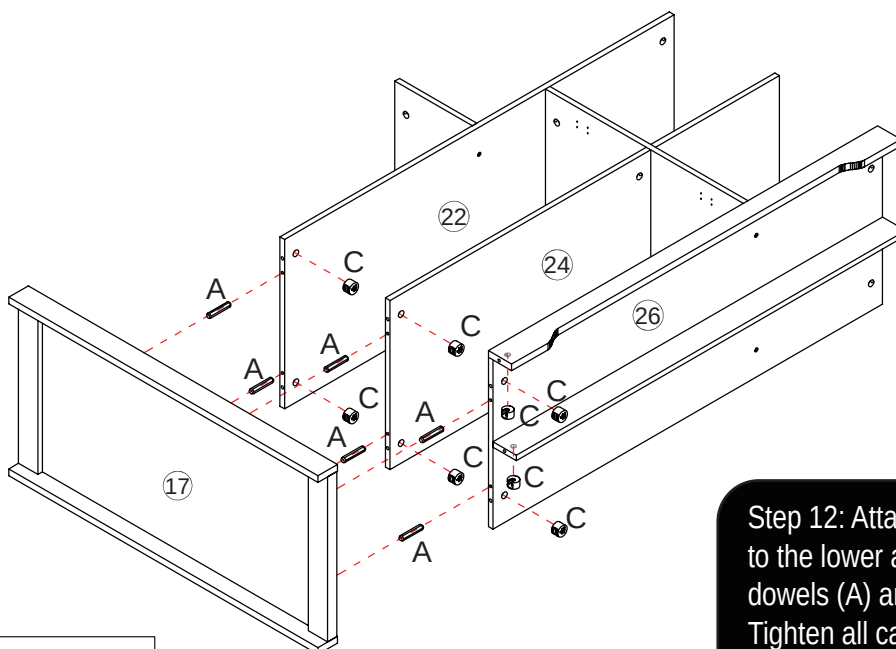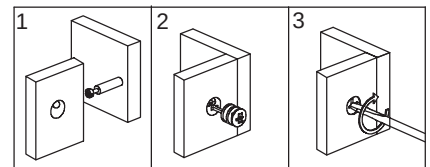

(A)x6pcs





(C)x8pcs

Step 12: Attach the left side frame to the lower assembly using wood dowels (A) and cam locks (C). Tighten all cam locks after the side frame is seated.

13

Step 13: Attach the right side frame to the lower assembly using wood dowels (A) and cam locks (C).

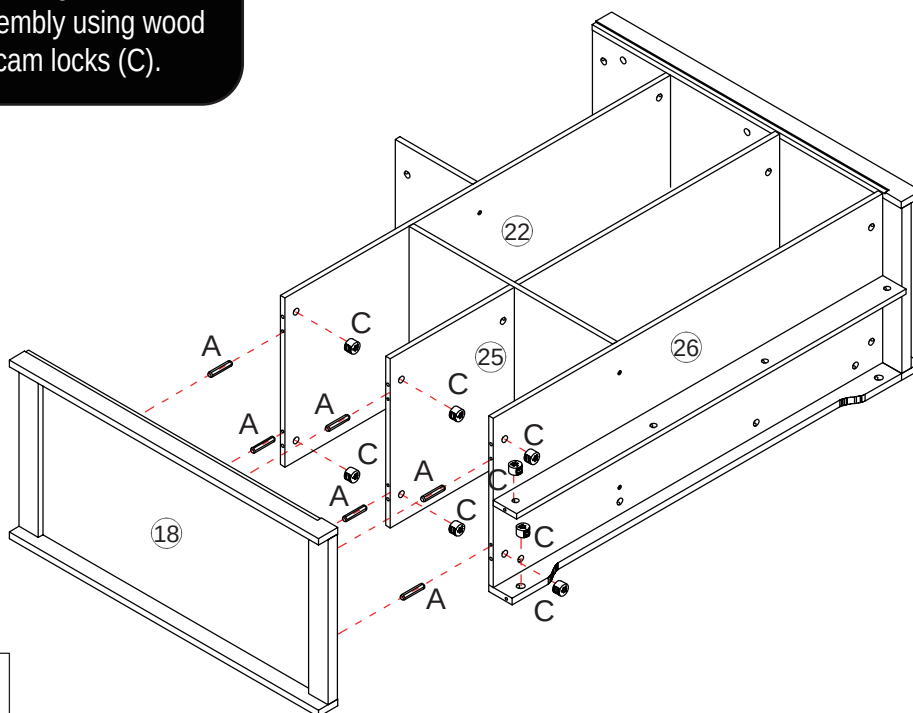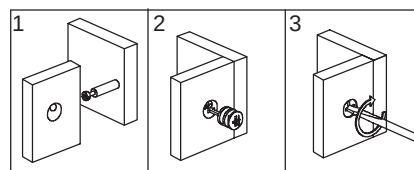


(A) x6pcs



(C) x8pcs



14

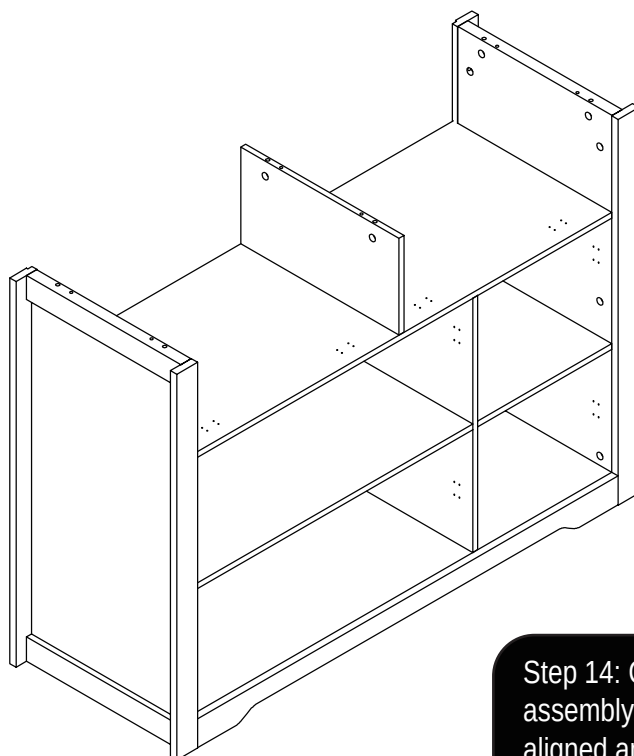

Step 14: Check the lower cabinet assembly. Make sure all panels are aligned and all cam locks are fully tightened.

15

Step 15: Attach panel 13 to panel 12 using wood dowels (A) and cam locks (C).

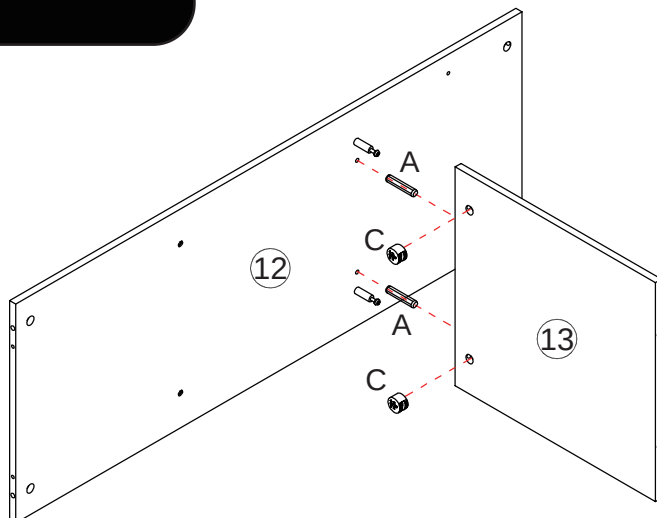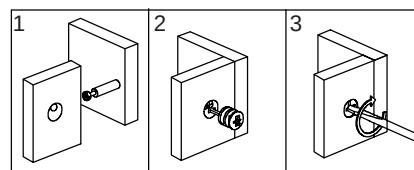


(A)x2pcs



(C)x2pcs

16

Step 16: Attach panel 11 to panel 12 using wood dowels (A) and screws (F).

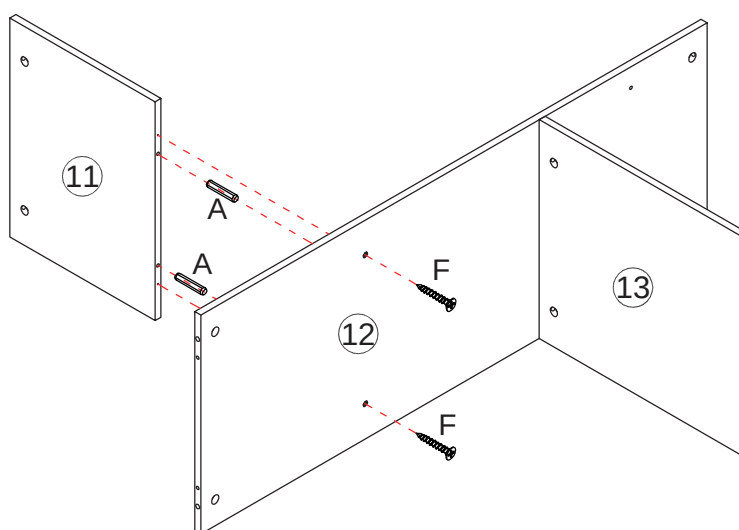


(A)x2pcs



(F)x2pcs

17

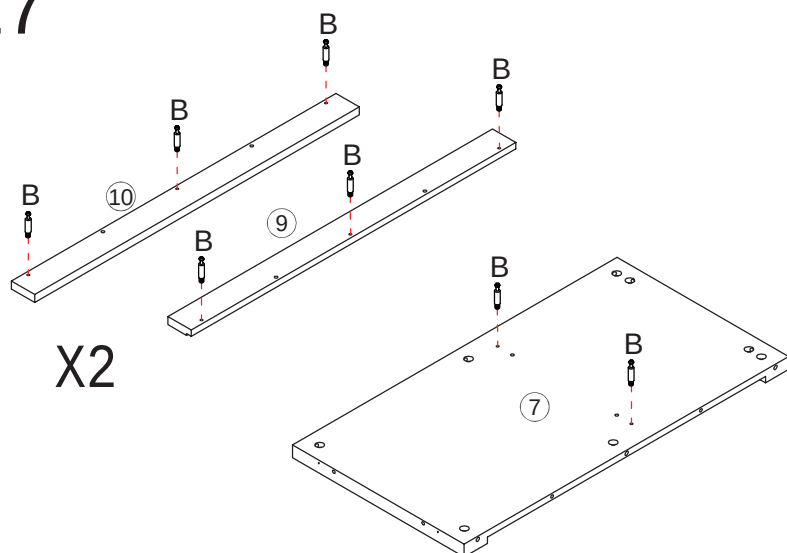

Step 17: Prepare the left upper side frame. Insert cam bolts (B) into parts 9, 10, and panel 7, then assemble with wood dowels (A) and cam locks (C). Repeat where indicated.





(A)x4pcs




(B)x14pcs



(C)x6pcs

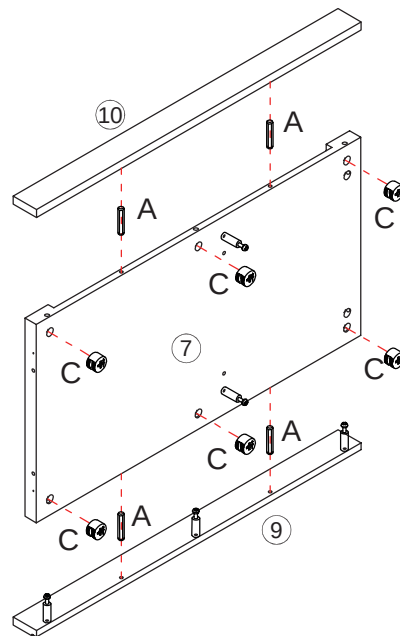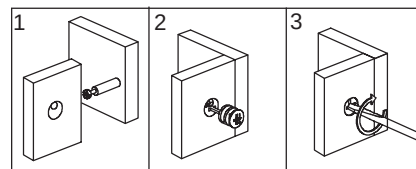

18

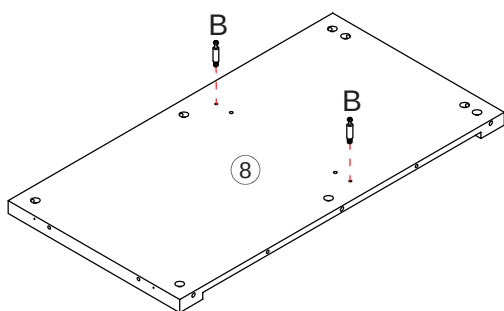

Step 18: Prepare the right upper side frame. Insert cam bolts (B) into panel 8, then attach parts 9 and 10 using wood dowels (A), cam locks (C), and screws (B) as shown.





(A)x4pcs





(B)x2pcs



(C)x6pcs

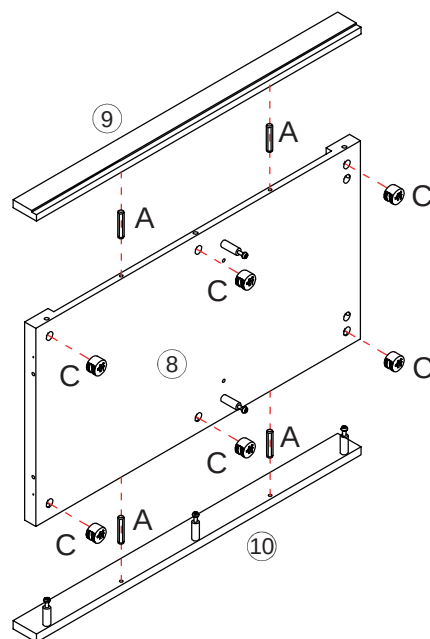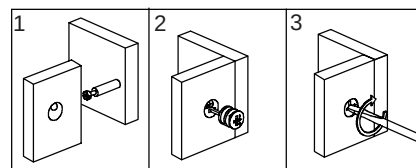

19

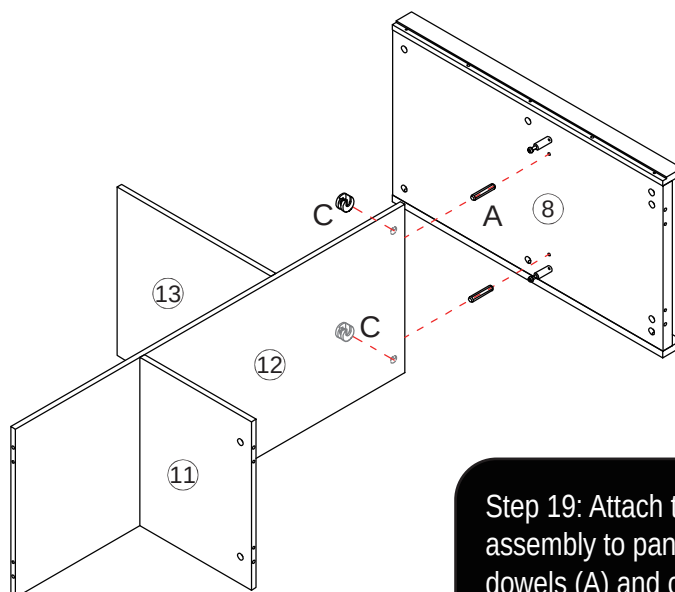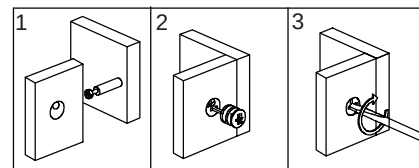


Step 19: Attach the panel 12/13 assembly to panel 8 using wood dowels (A) and cam locks (C).


 (A)x2pcs

 (C)x2pcs

20

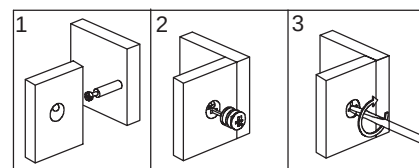


Step 20: Attach panel 7 to the opposite side of the panel 12/13 assembly using wood dowels (A) and cam locks (C).

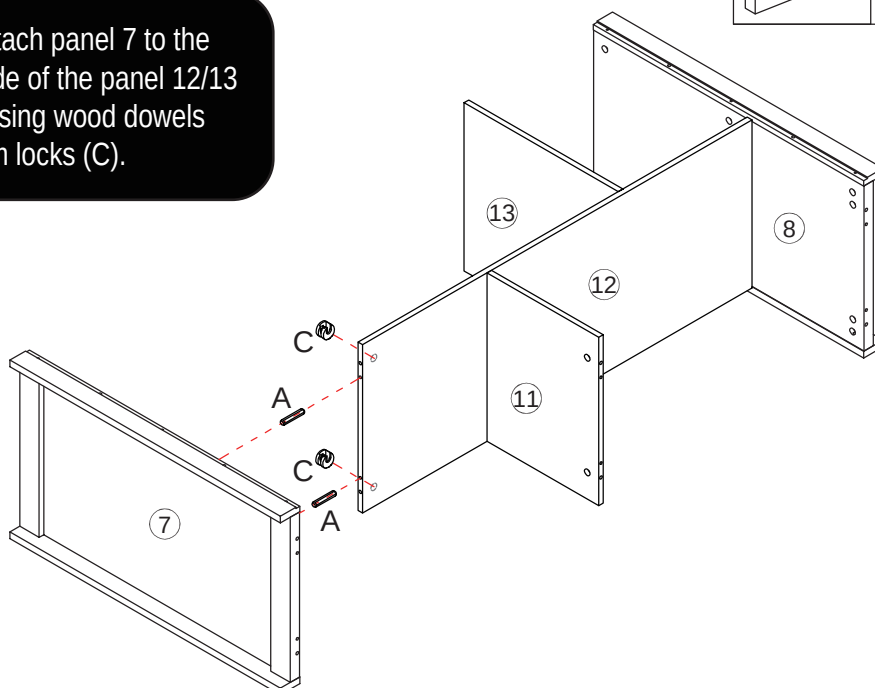

 (A)x2pcs

 (C)x2pcs

21

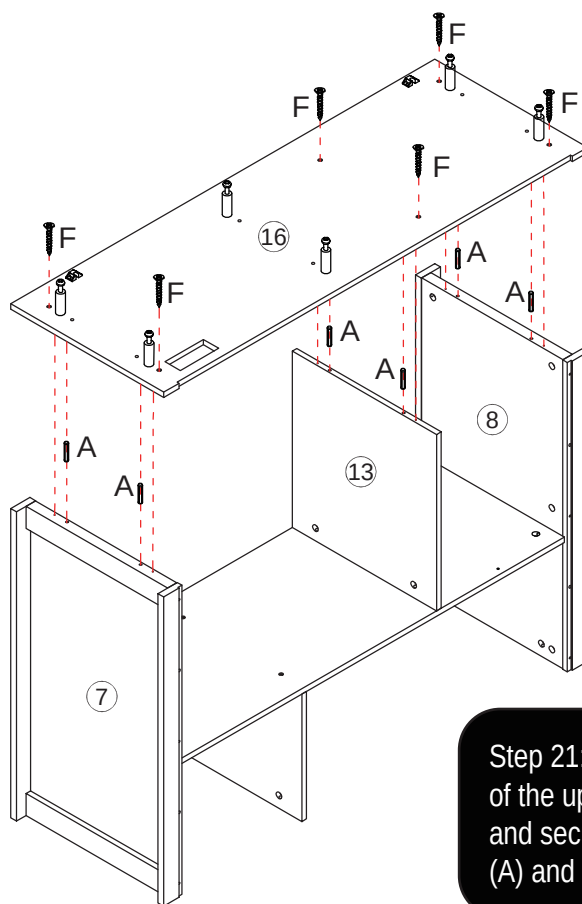

Step 21: Place panel 16 on top of the upper cabinet assembly and secure it with wood dowels (A) and screws (F).




(A)x6pcs






(F)x6pcs

22

Step 22: Check the upper cabinet assembly. Make sure the frame is square and all fasteners are tightened.

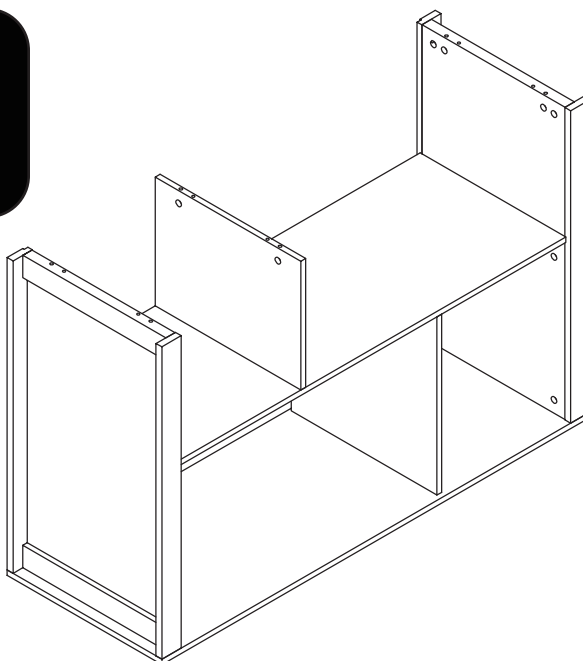

23

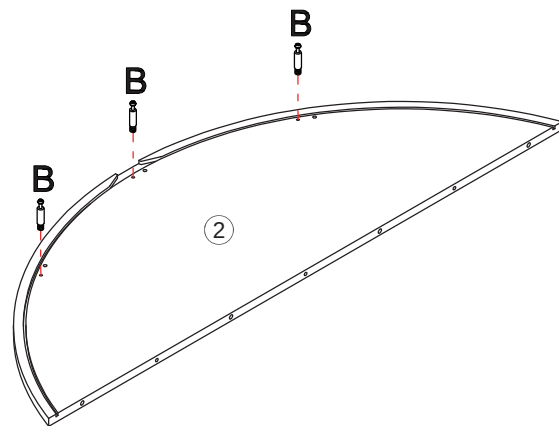
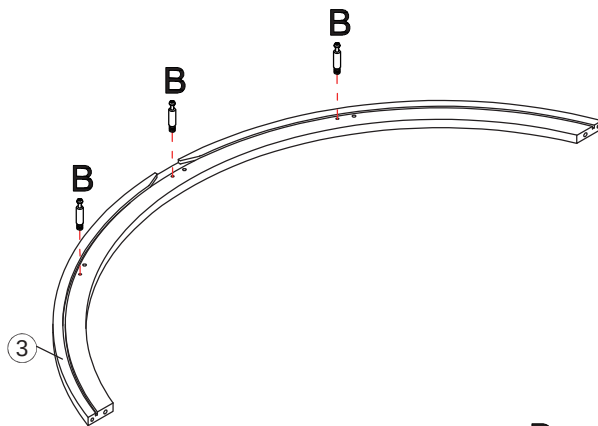
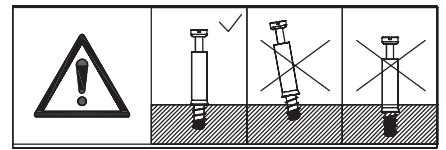


Step 23: Insert cam bolts (B) into curved side panels 2 and 3 as shown.



(B)x6pcs

24

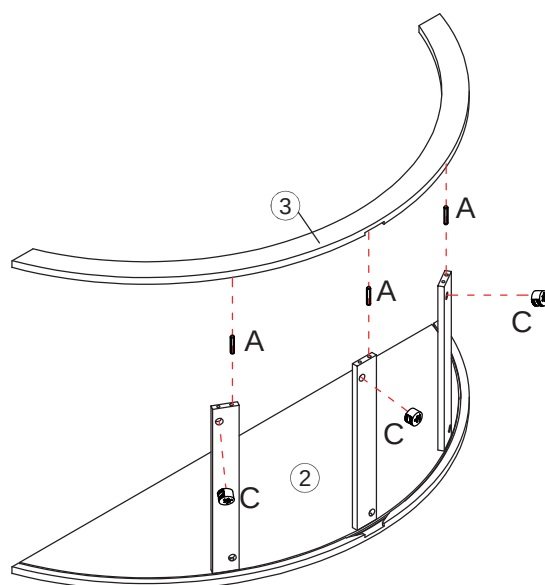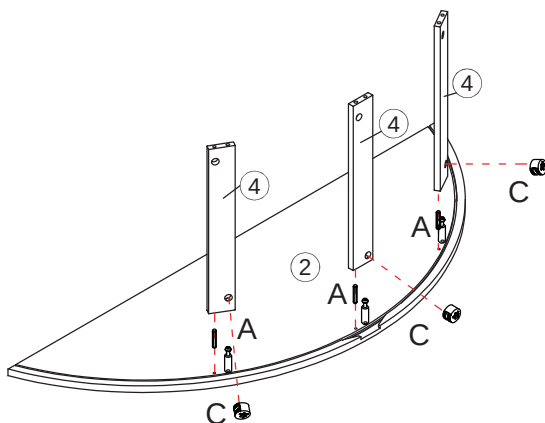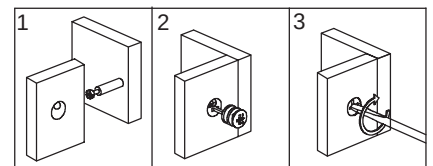

Step 24: Attach support pieces 4 to the curved side panels 2 and 3 using wood dowels (A) and cam locks (C). Tighten the cam locks to hold the supports in place.





(A)x6pcs



(C)x6pcs

25

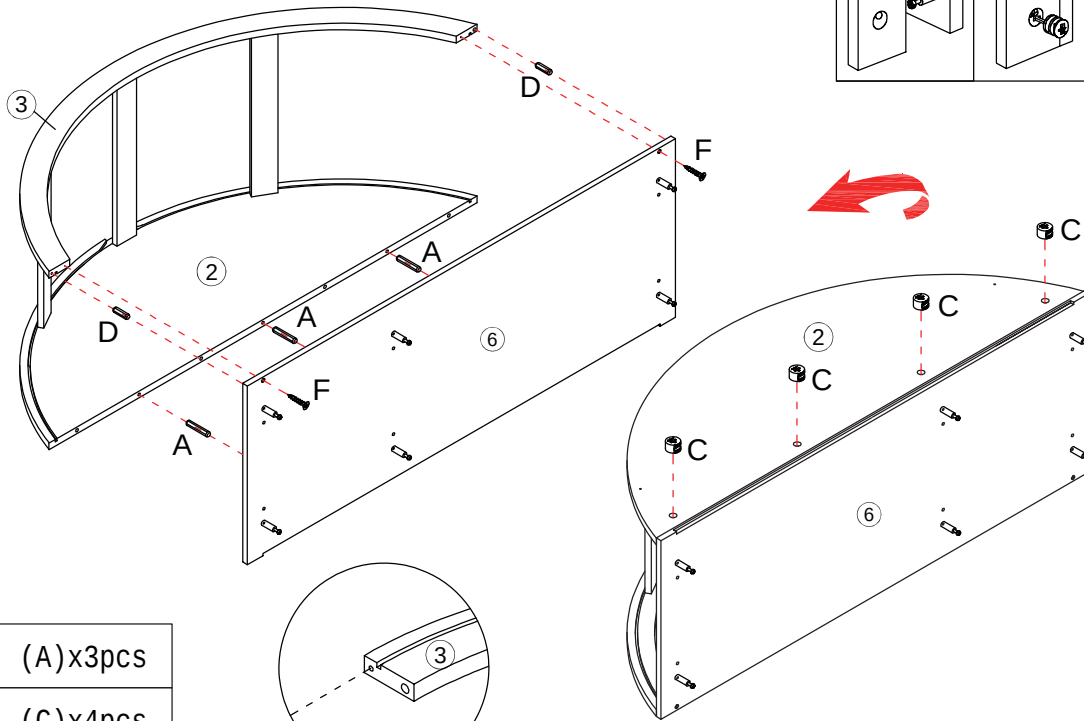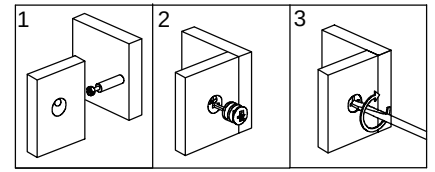


	(A)x3pcs
	(C)x4pcs
	(F)x2pcs
	(D)x2pcs


Step 25: Attach panel 6 between the curved side panels using wood dowels (A), cam locks (C), screws (F), and brackets (D). Align the curved panels before tightening.

26

Step 26: Slide the flexible curved back panels 32 into the grooves on the arched top assembly, overlapping them as shown.

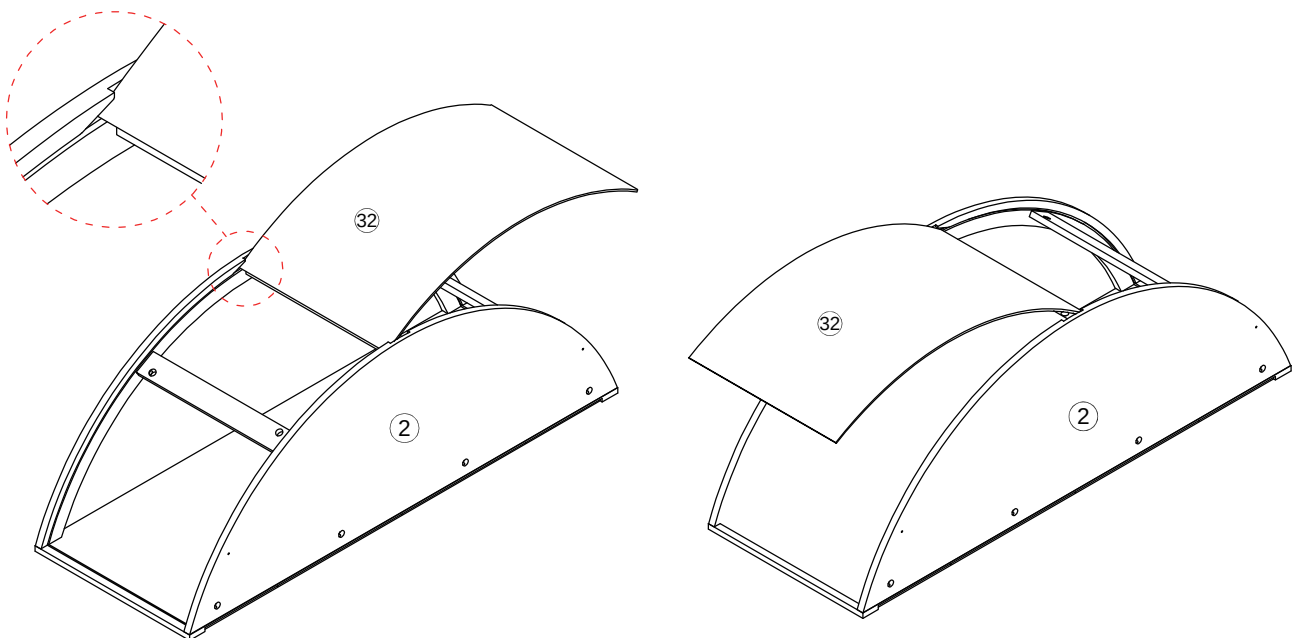

27

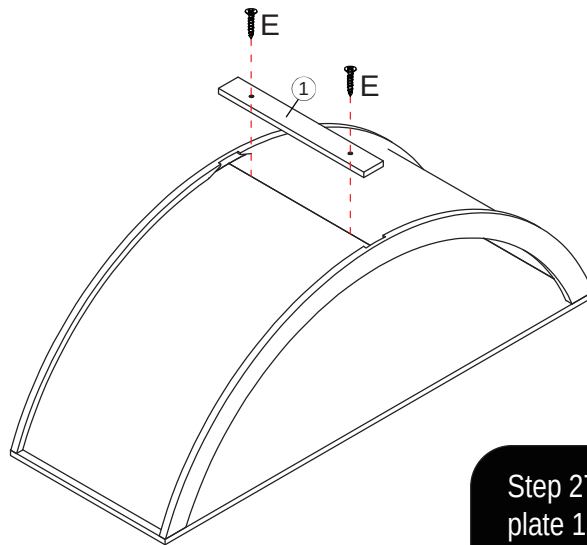


Step 27: Secure the top connector plate 1 to the arched top using screws (E).



(E)x2pcs

28

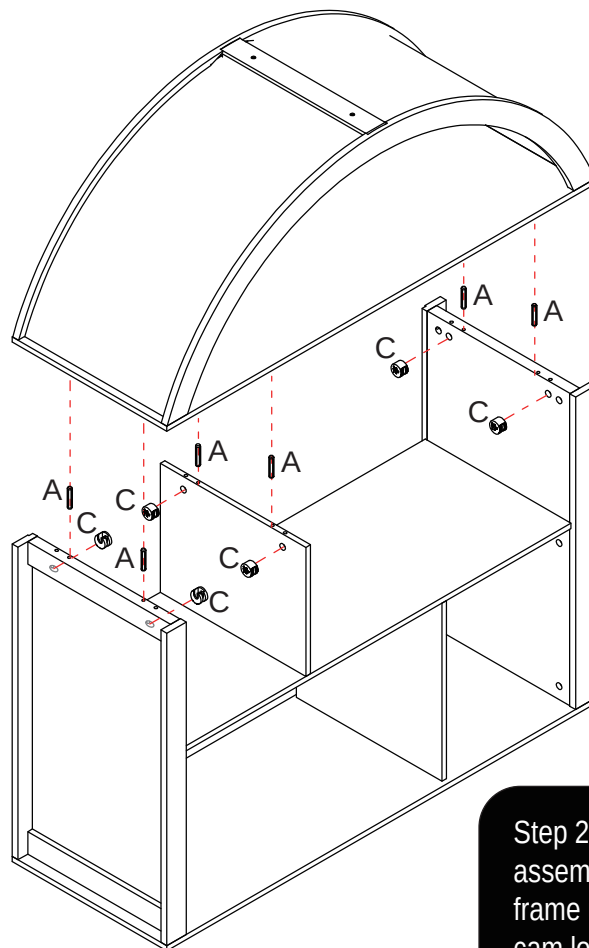


Step 28: Attach the arched top assembly to the upper cabinet frame using wood dowels (A) and cam locks (C).



(A)x6pcs



(C)x6pcs

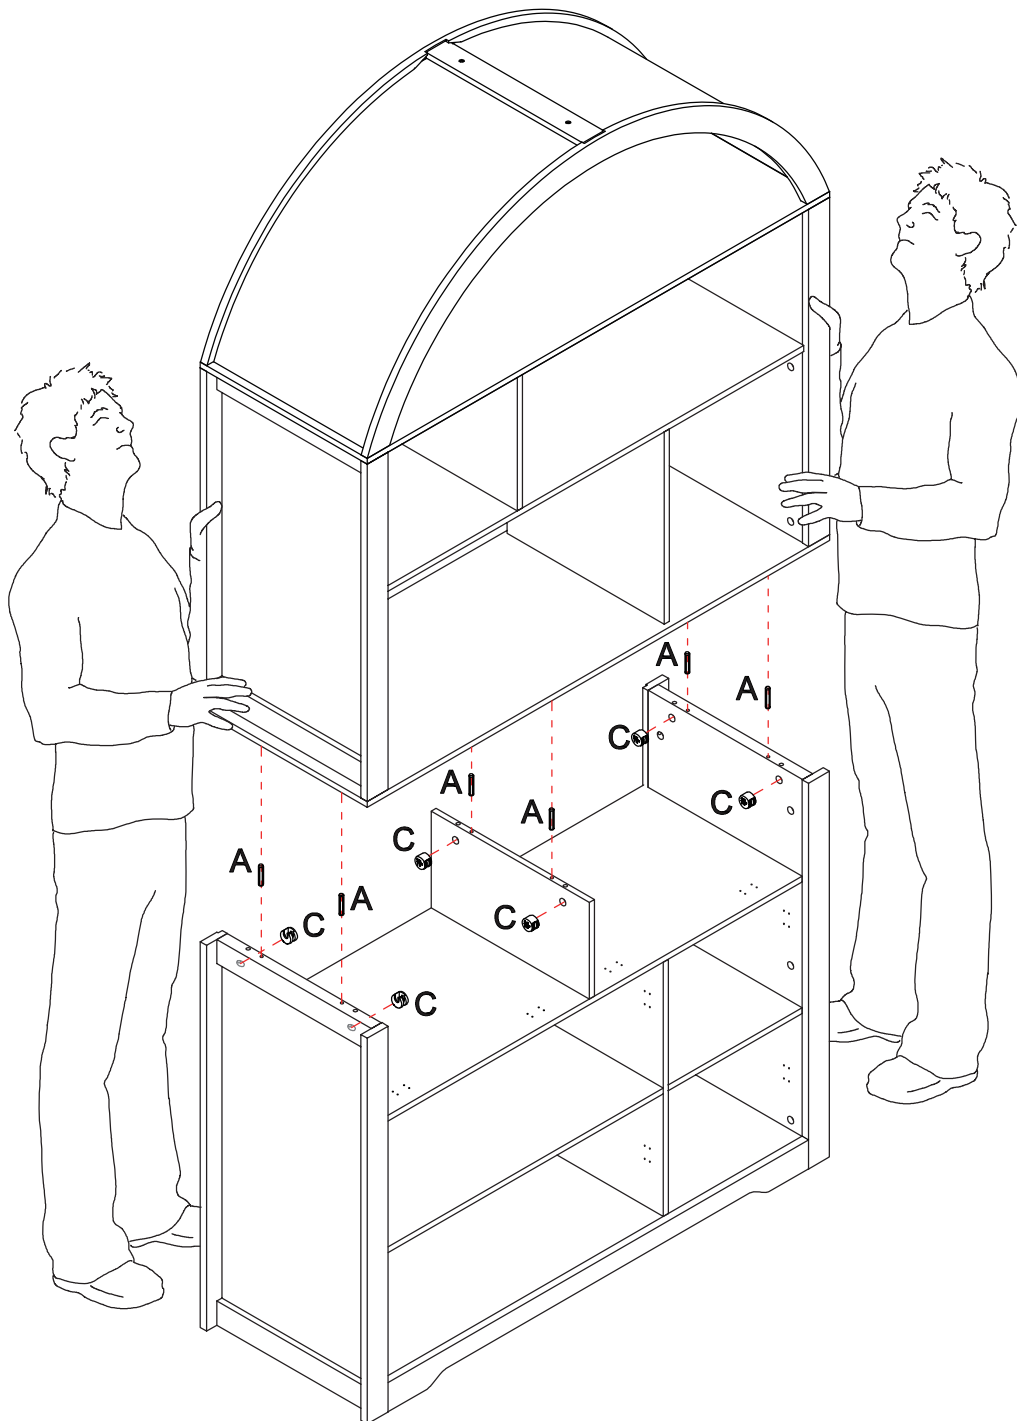

Step 29: With two people, lift the upper cabinet assembly onto the lower cabinet assembly. Secure the two sections together with wood dowels (A) and cam locks (C).




(A)x6pcs



(C)x6pcs


30

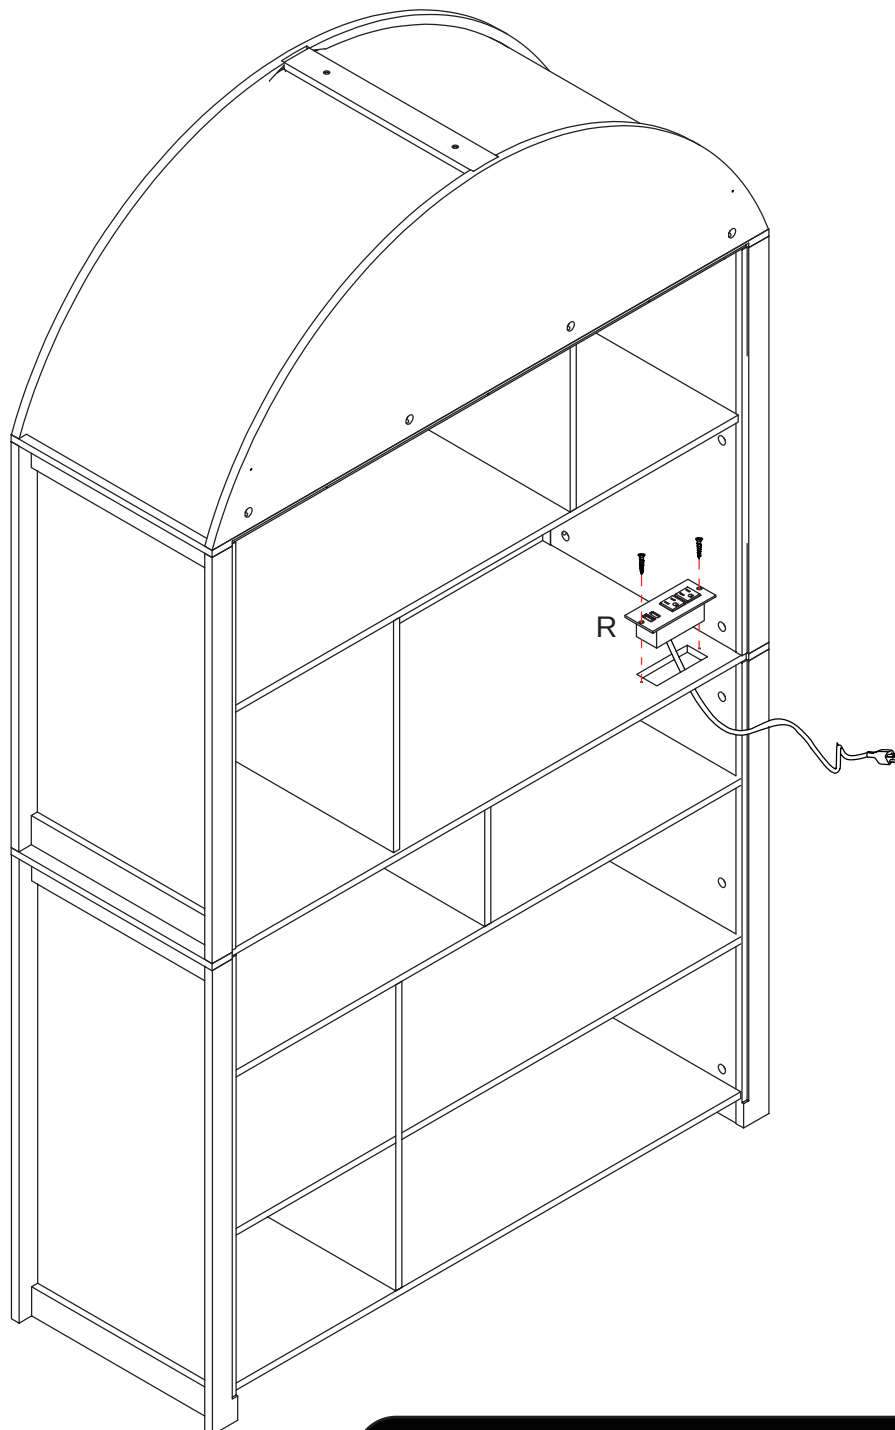

Step 30: Install the anti-tip bracket set (R) on the back of the cabinet and secure it according to the diagram.

(R)x1set

31

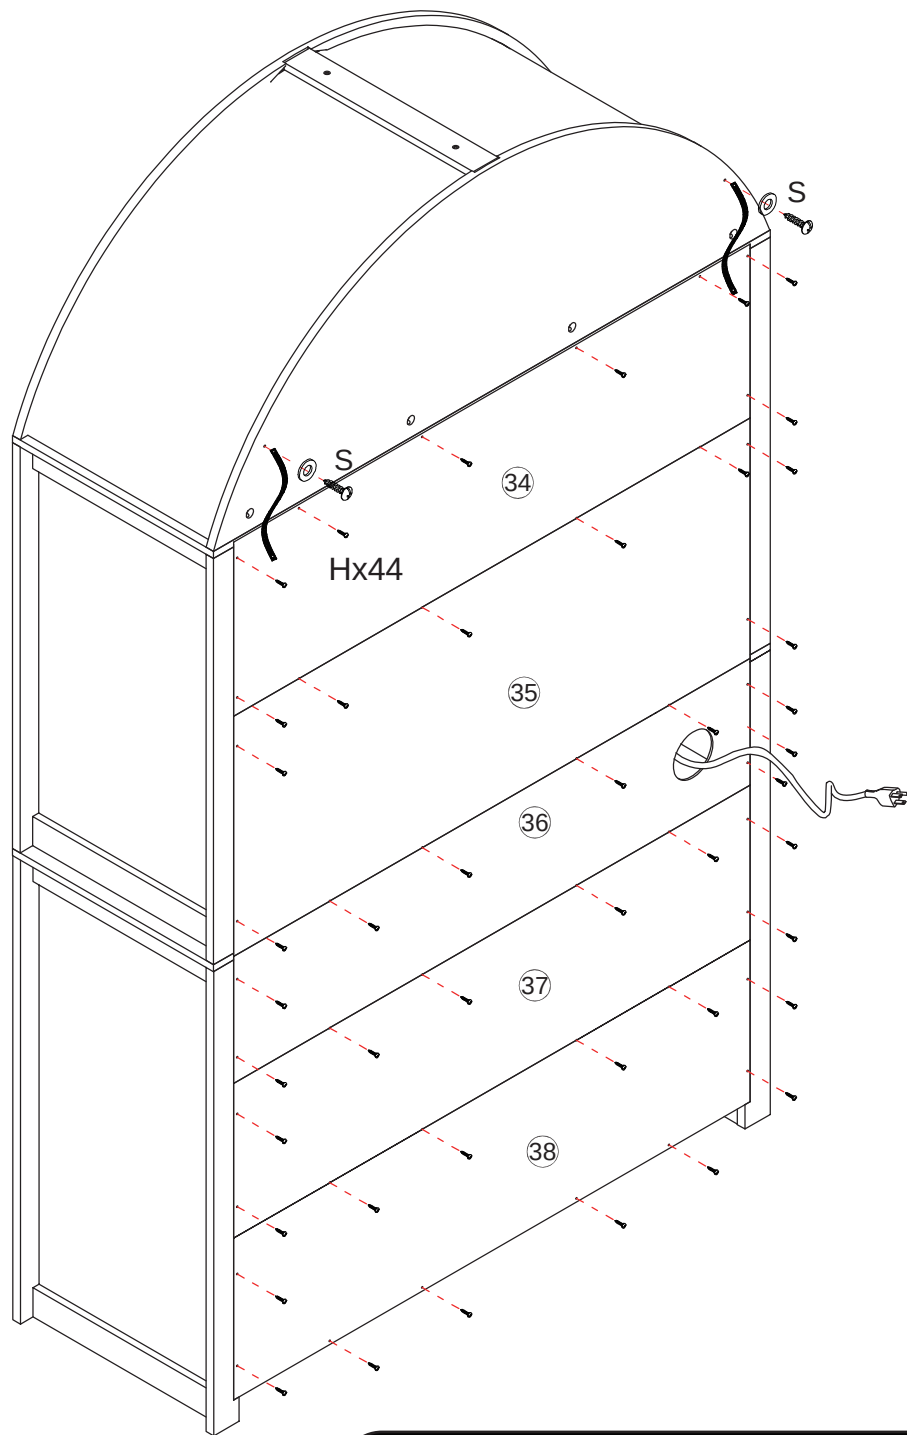

Step 31: Attach back panels 34, 35, 36, 37, and 38 to the rear of the cabinet using screws (H). Install the safety straps (S) at the top as shown.




(H)x44pcs








(S)x2sets

32

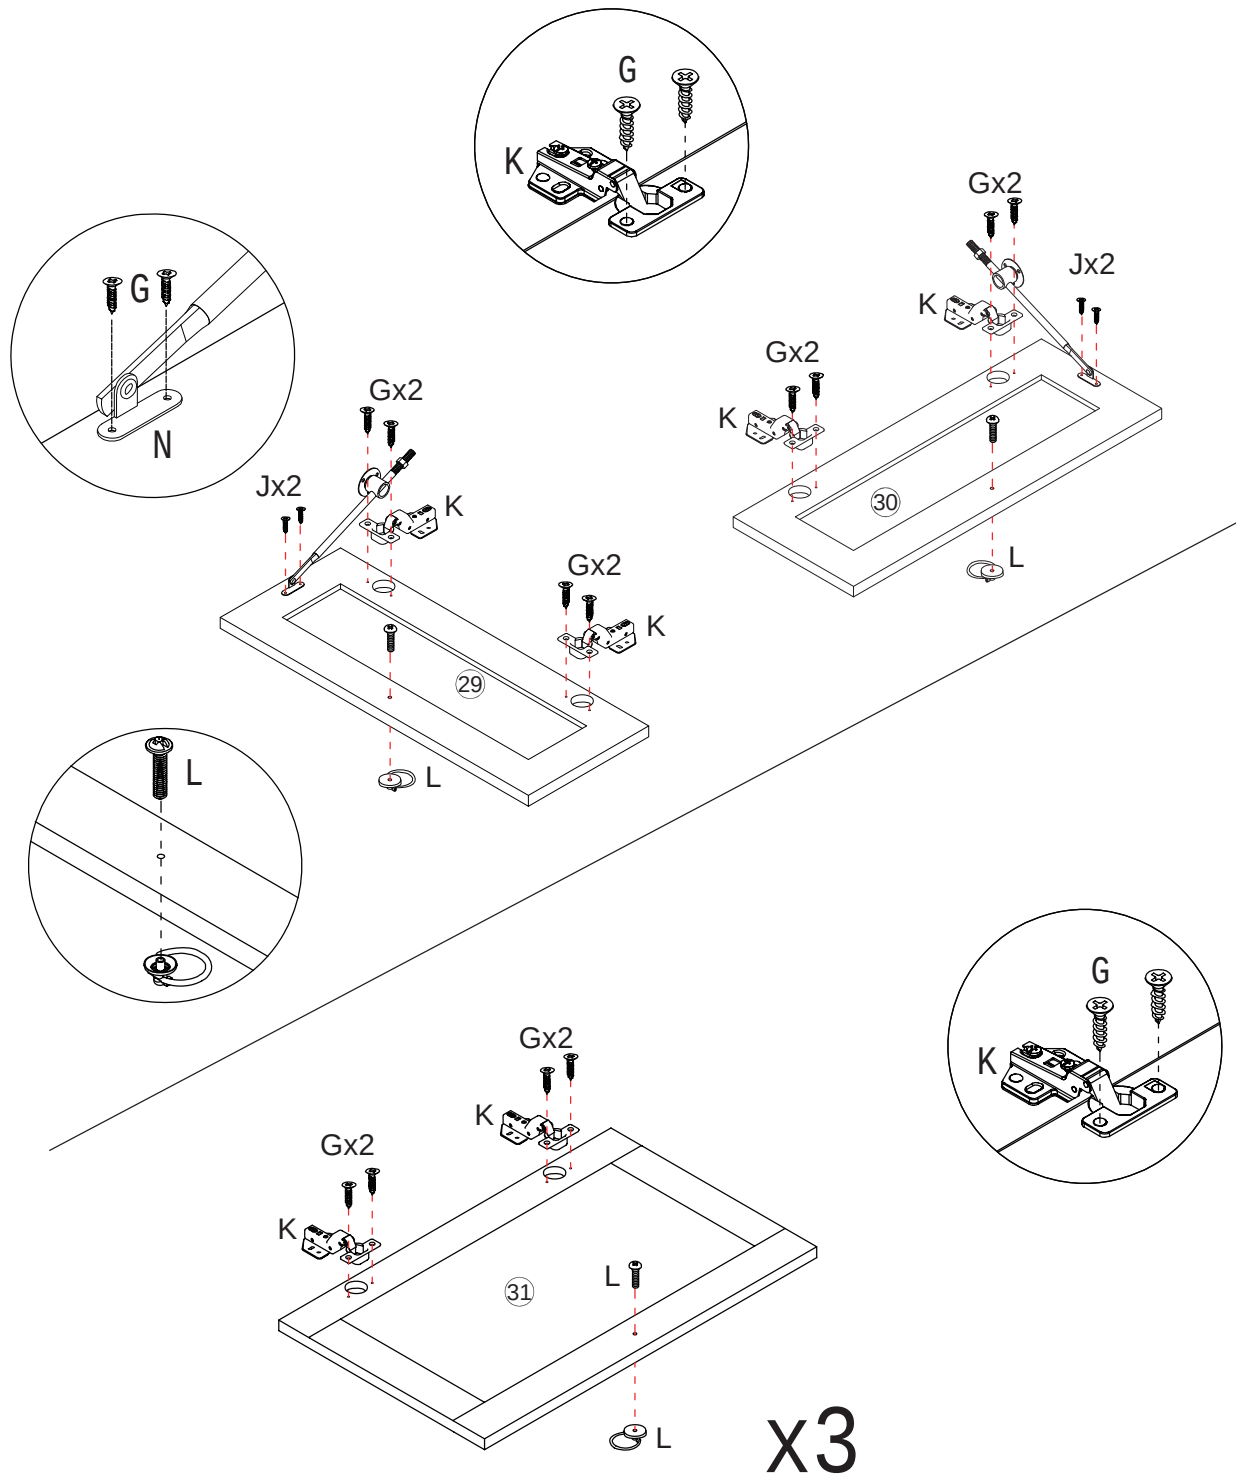

	(G)x20pcs
	(J)x4pcs
	(K)x10pcs
	(L)x5sets
	(N)x2pcs

Step 32: Assemble the drawer fronts 29, 30, and 31. Attach hinges (K), knobs (L), brackets (N), and screws (G/J) as shown. Repeat for all three door/drawer fronts where indicated.

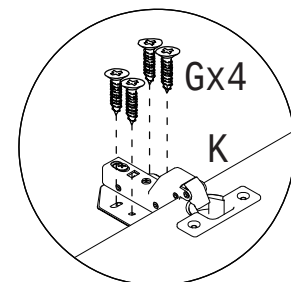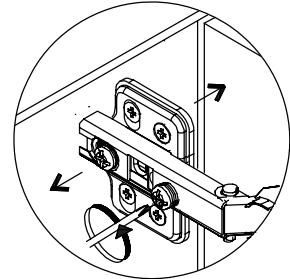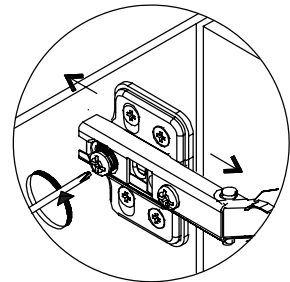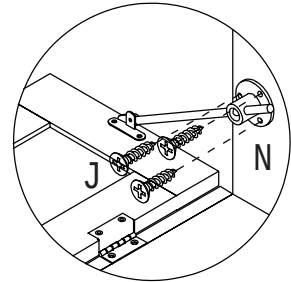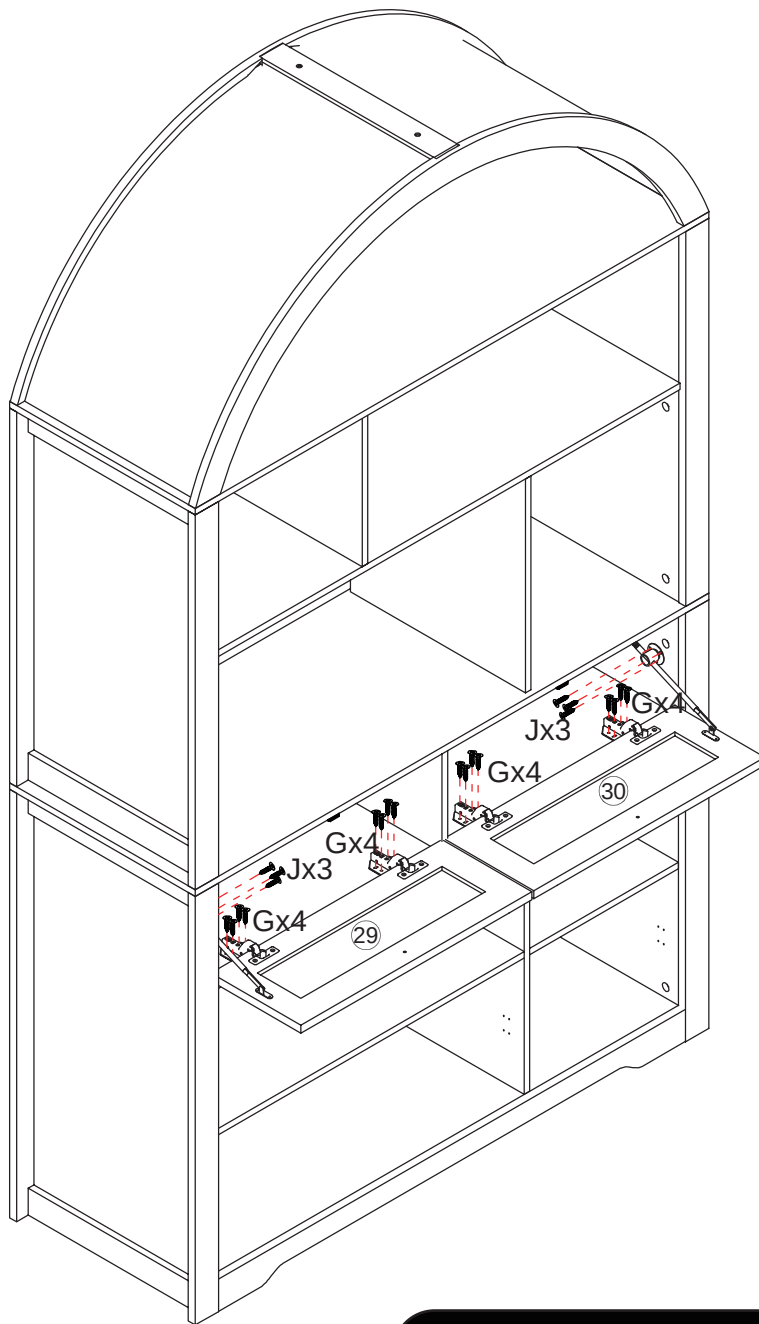

Step 33: Install the prepared drawer/front panels 29 and 30 onto the cabinet. Adjust the hinges and secure them with screws (G) and (J) as shown.







(G)x16pcs



(J)x6pcs

34

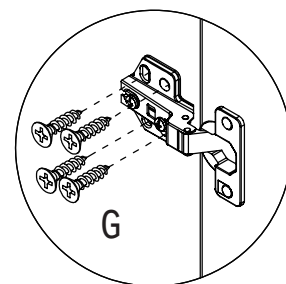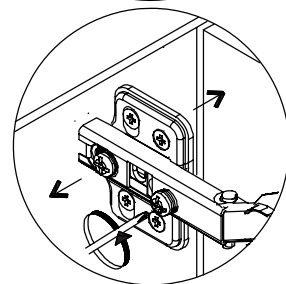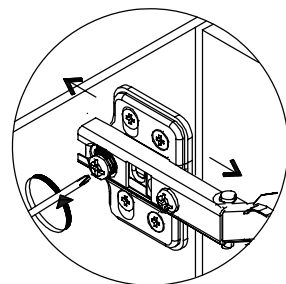
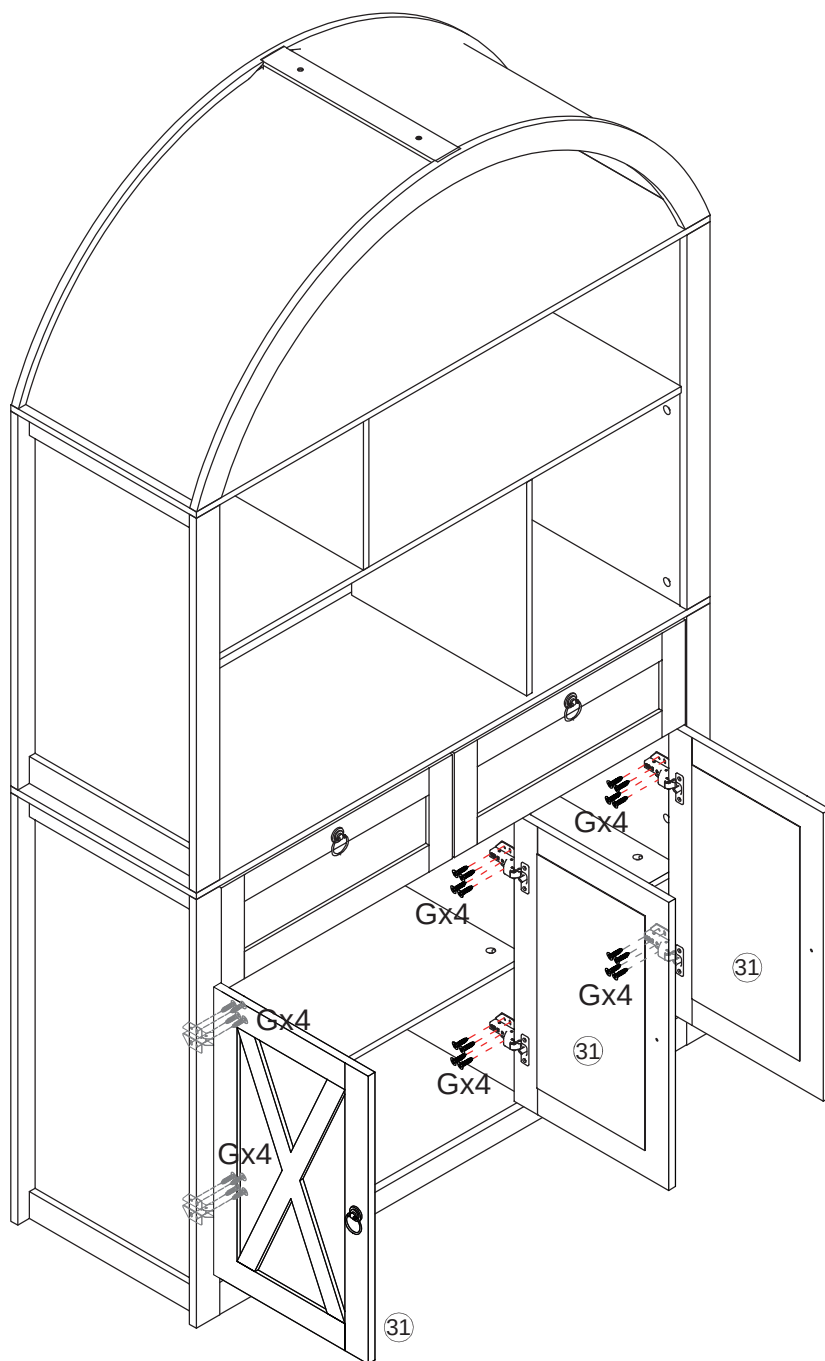


Step 34: Install the three door panels 31 onto the lower cabinet. Adjust the hinges so the doors are level and close smoothly, then secure with screws (G).



(G)x24pcs

35

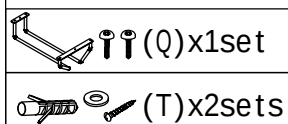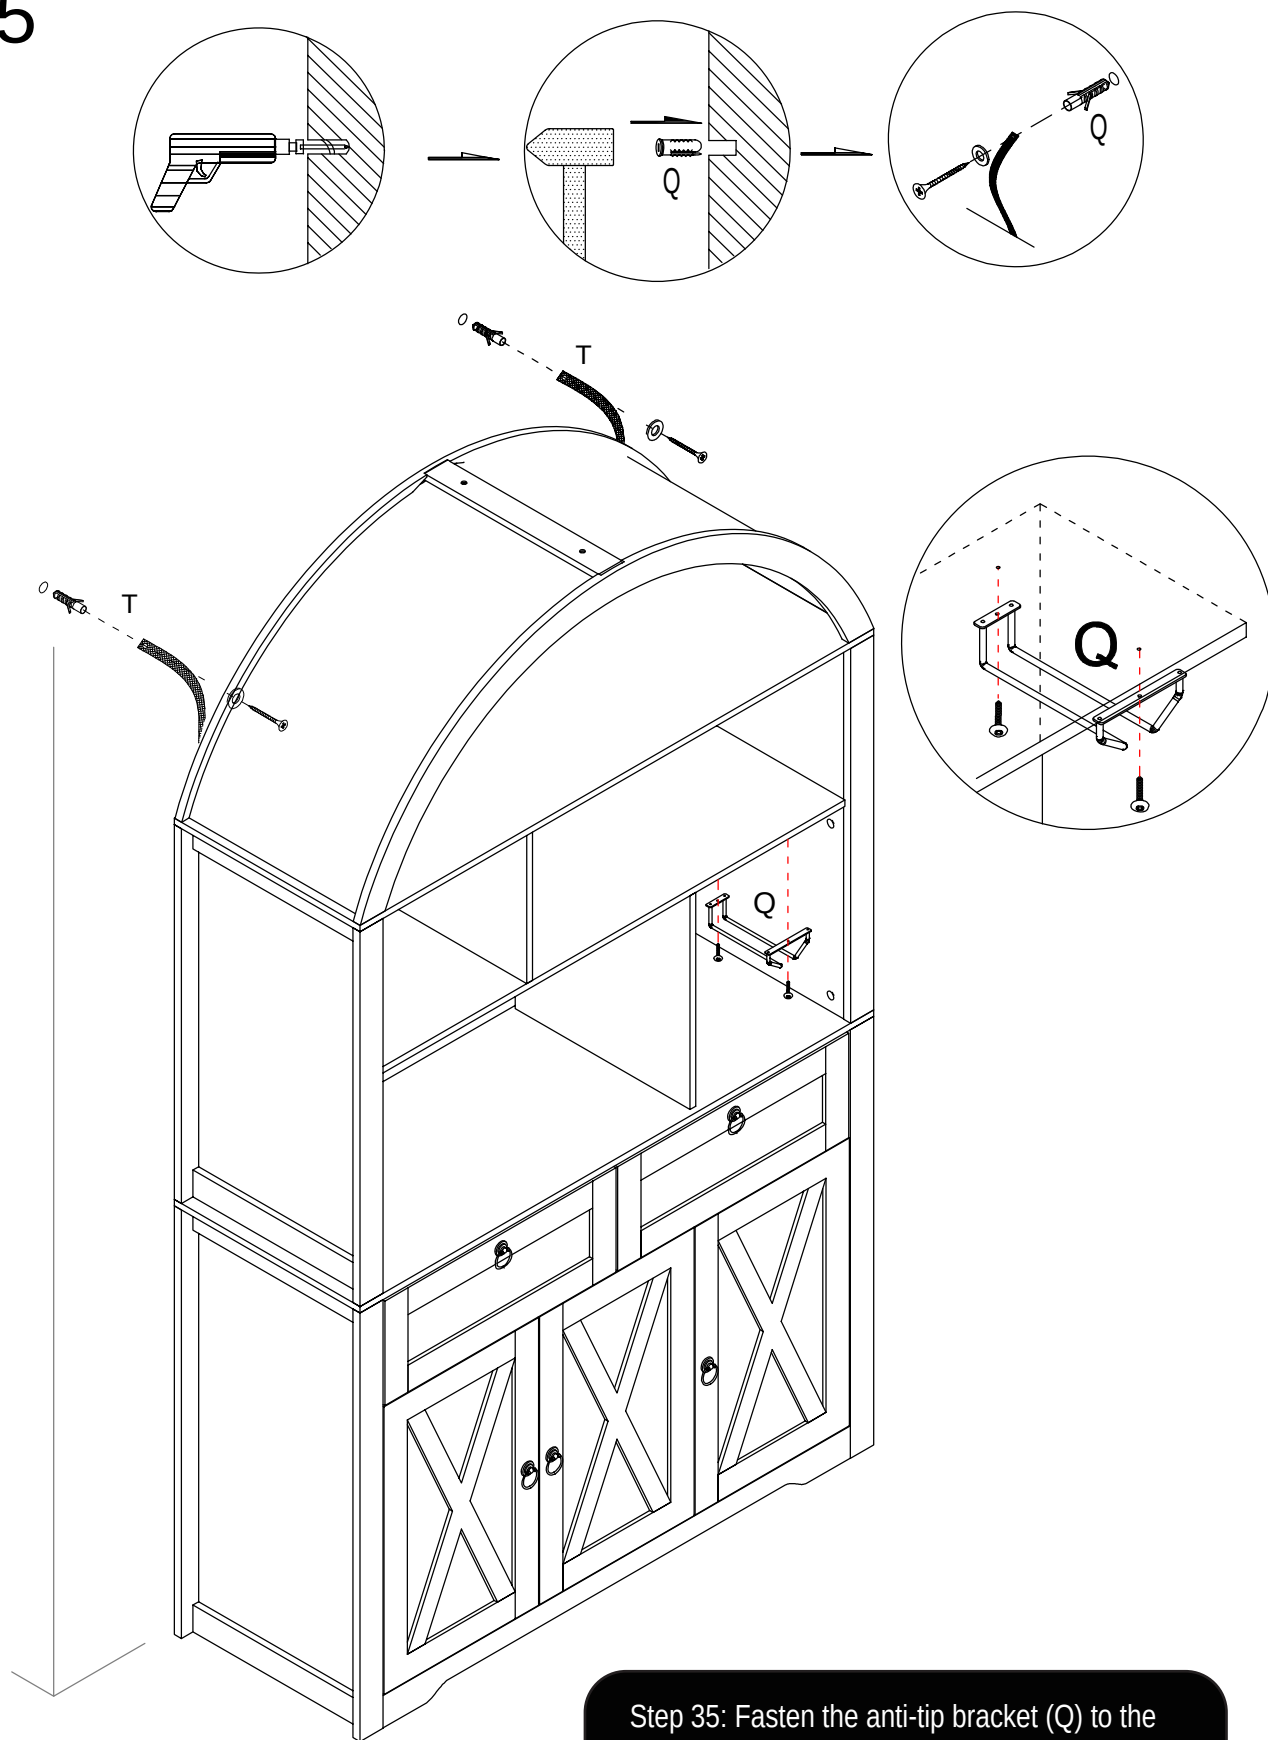

Step 35: Fasten the anti-tip bracket (Q) to the wall and the cabinet. Confirm the cabinet is stable before use.