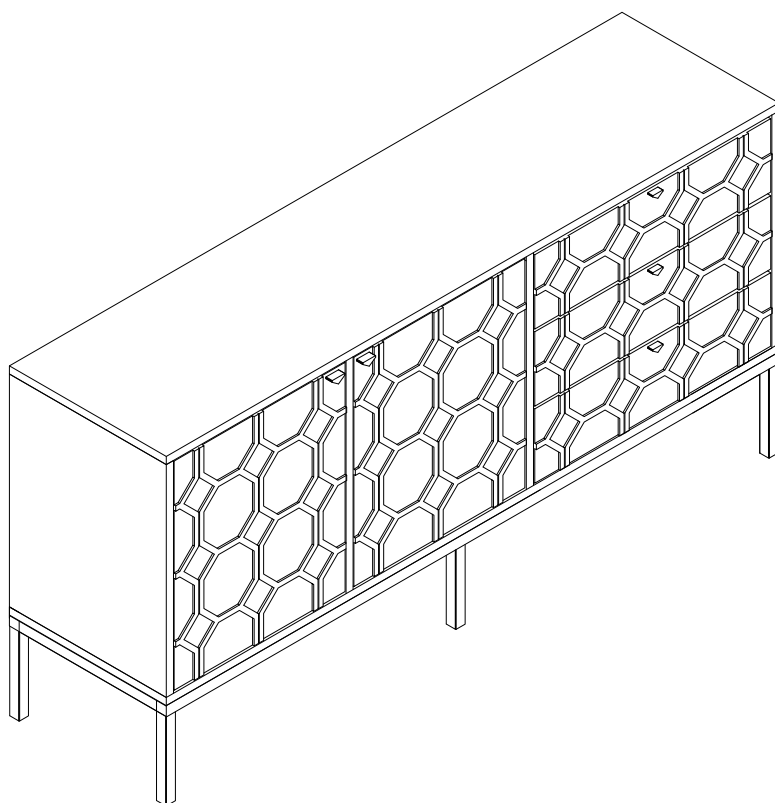


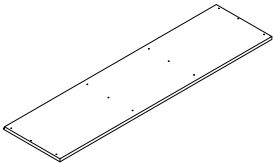
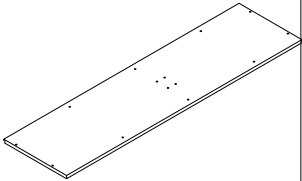




# ASSEMBLY INSTRUCTIONS





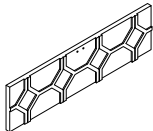
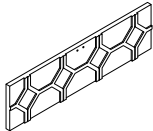
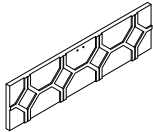

It is normal for the sealed environment  
to smell, not a product quality problem.

ASSEMBLY INSTRUCTIONS

Part List:

ITEM	DESCRIPTION	PART	QTY
1	Top panel		1
2	Bottom panel		1
3	Left side panel		1
4	Right side panel		1
5	Left Partition Panel		1
6	Right Partition Panel		1


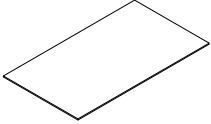
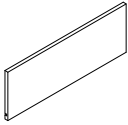
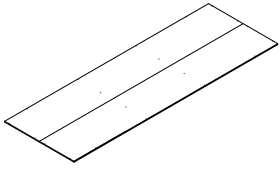
Part List:

ITEM	DESCRIPTION	PART	QTY
7	Left Door Panel		1
8	Right Door Panel		1
9	Drawer Front		1
10	Drawer Front		1
11	Drawer Front		1
12	Drawer Left Side		3

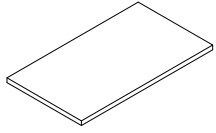
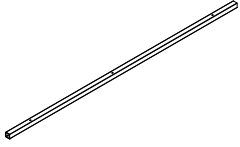


# ASSEMBLY INSTRUCTIONS

Page 3 of 11

## Part List:

ITEM	DESCRIPTION	PART	QTY
13	Drawer Right Side		3
14	Drawer Dottom		3
15	Adjustble Shelf Panel		3
16	Back panel		1











## Part List:

ITEM	DESCRIPTION	PART	QTY
17	Drawer Back		2
18	Metal Strip		2
19	Metal Leg		2
20	Leg		







MADE IN CHINA

## ASSEMBLY INSTRUCTION

## Hardware List:

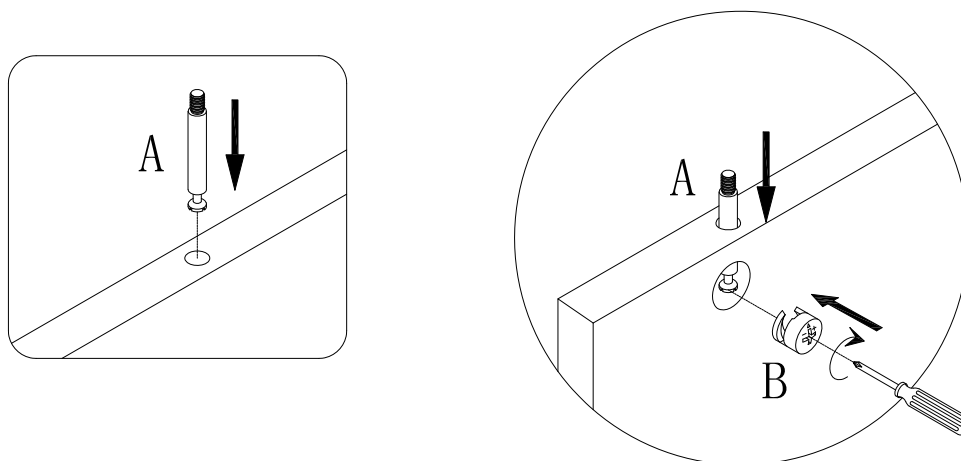
ITEM	DESCRIPTION	PART	QTY
A	Camlock bolt	 Φ8*30mm	8
B	Camlock	 Φ1/4"*30mm	10
C	Wooden dowel	 Φ1/4"*38mm	4
D	Bolt	 Φ1/4"*12.7mm	4
E	Allen wrench		1
F	Allen wrench	 Φ4*25mm	24
G	Handle		5
H	Machine screw	 Φ5/32"*19mm	10
I	Door fitting		4
J	Wood screw	 Φ3.5*12mm	24

## Hardware List:

ITEM	DESCRIPTION	PART	QTY
K	Round head screw	 Φ3*12mm	20
L	Shelf support		8
M	Safety wall strap		2
N	Plastic anchor		2
O	Mounting screw	 Φ4*38mm	2
P	Washer		2

- \* Required screwdriver & mallet, not included.
- \* Before discarding packing materials, please check to make sure that all parts and hardware is present.
- \* Two people needed for assembly.
- \* Please follow the instructions closely; do not over tighten screws or bolts unless instructed.
- \* After a few days from initial assembly, the product may have acclimated to the new environment. Please retighten the hardware.

## Guideline For Assembling of Cam Lock(A & B)




Screw camlock bolt (A) to wood part.

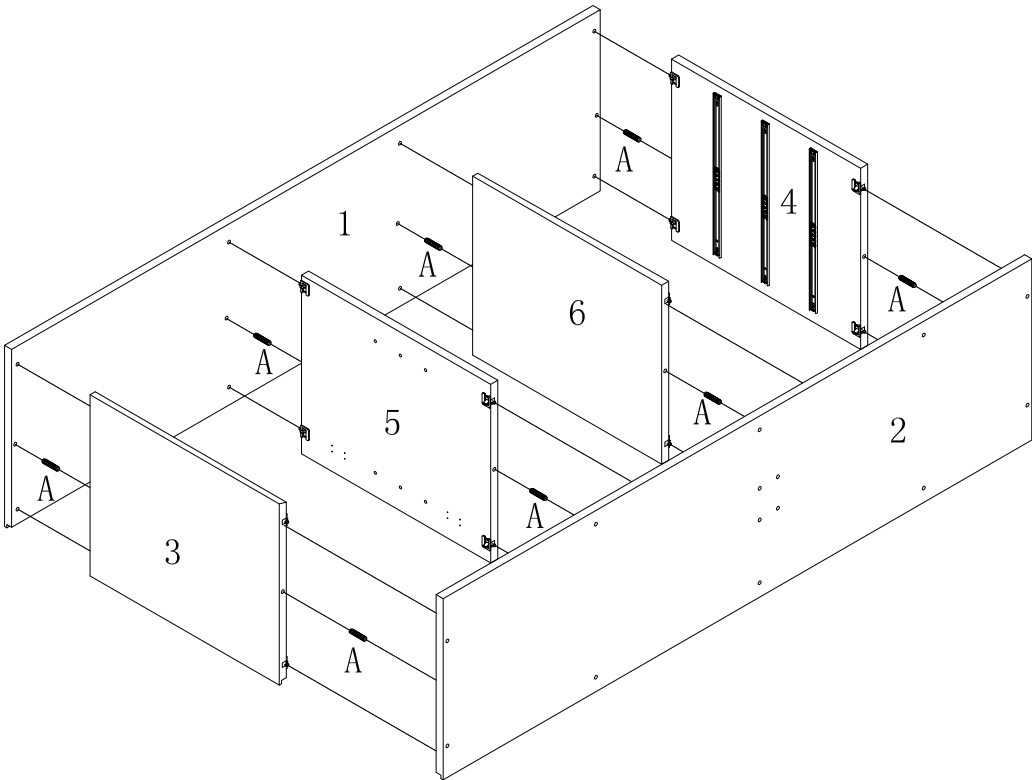
Do not assemble camlock (B) unless instructed.

To assemble camlock (B), ensure long side of the + is facing the bolt (A) before inserting into hole.



# ASSEMBLY INSTRUCTION

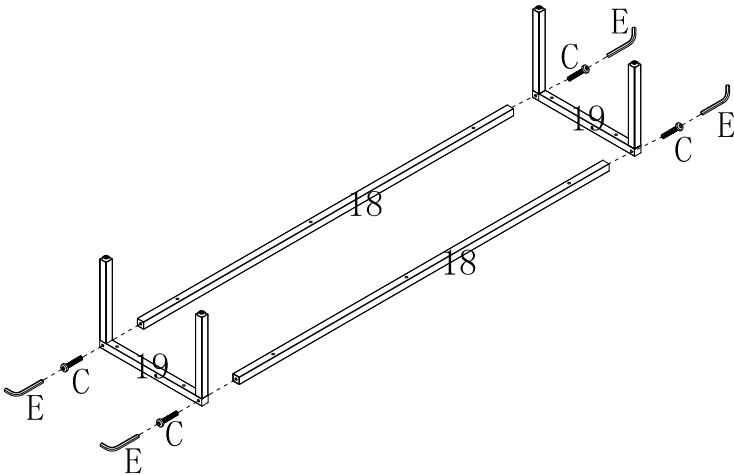
## STEP 1

A:  8PCS





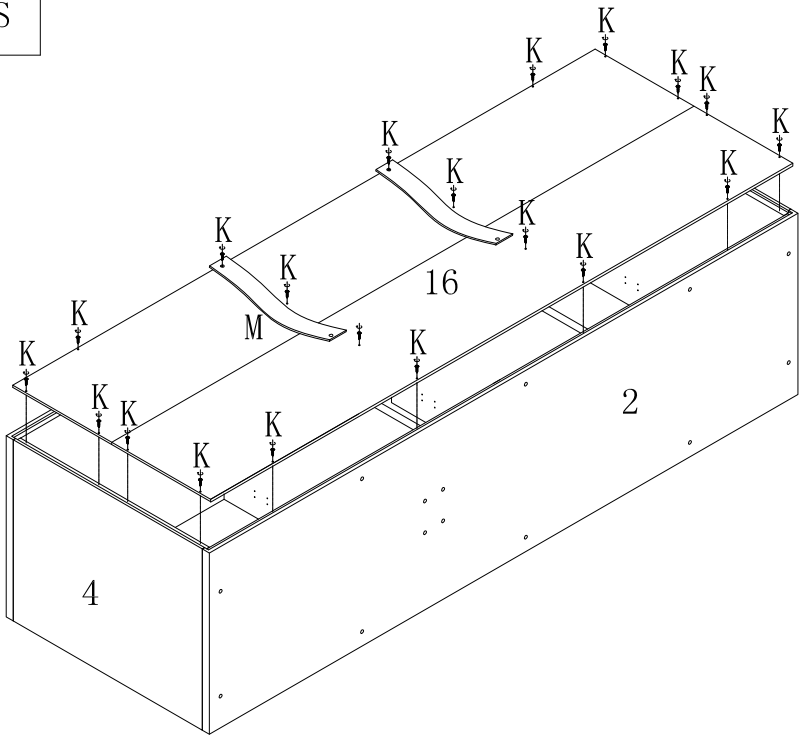
## STEP 2

C:  4PCS  
E:  1PC





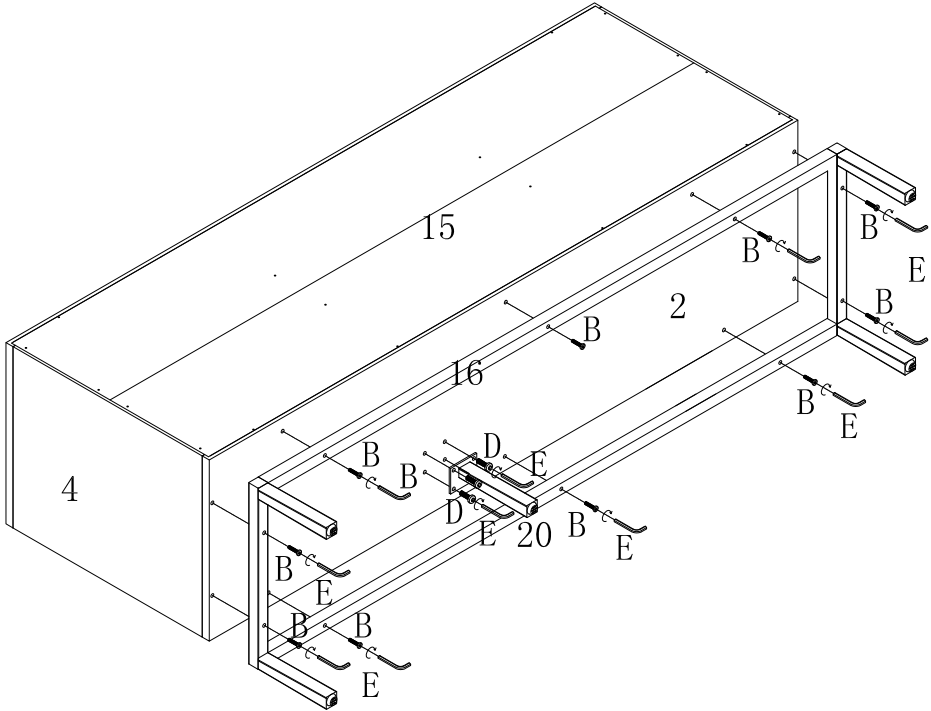
STEP 3

K:		20PCS
M:		2PCS







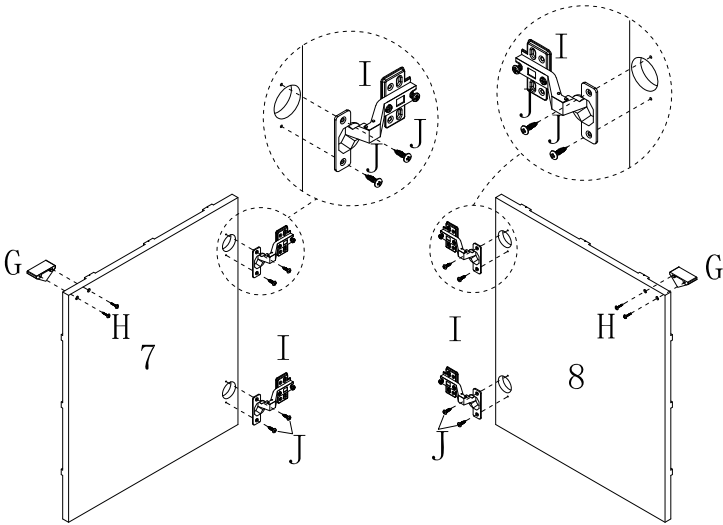
STEP 4

B:		10PCS
D:		4PCS




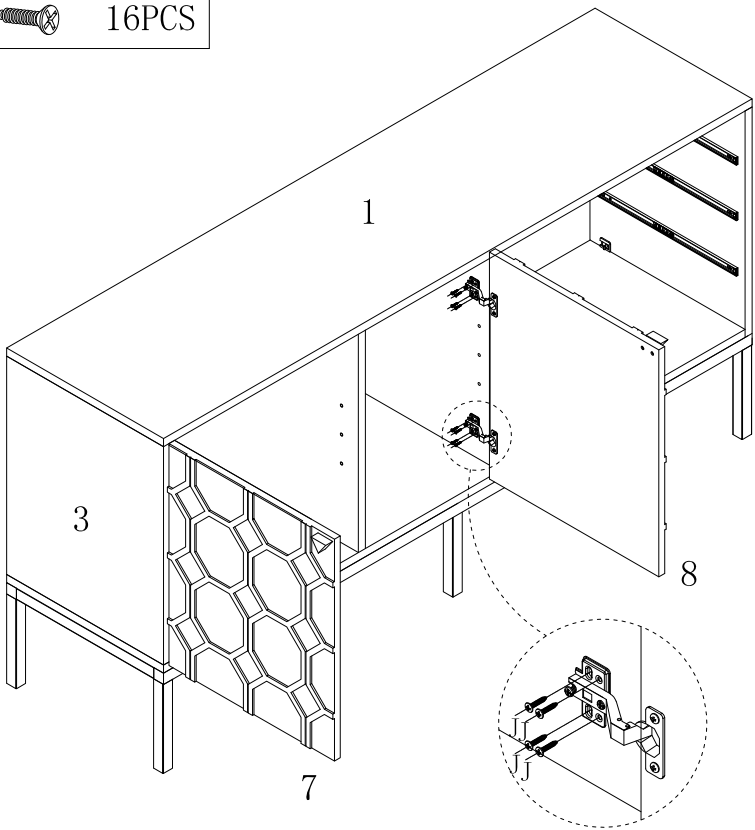
STEP 5

G:		2PCS
H:		4PCS
I:		4PCS
J:		8PCS

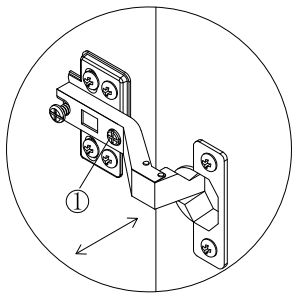


STEP 6

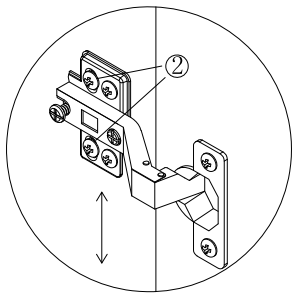
J:		16PCS
----	---	-------



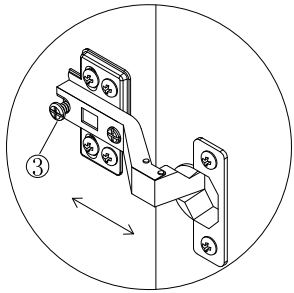
DOOR FITTING



To adjust in width




To adjust in height

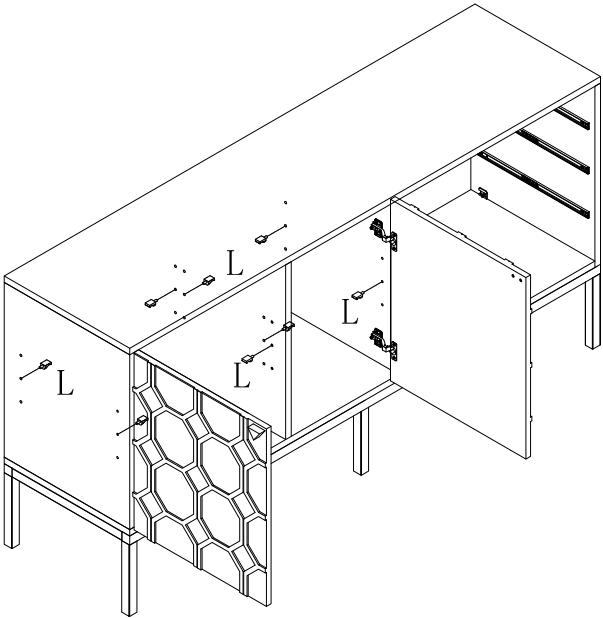


To adjust in depth

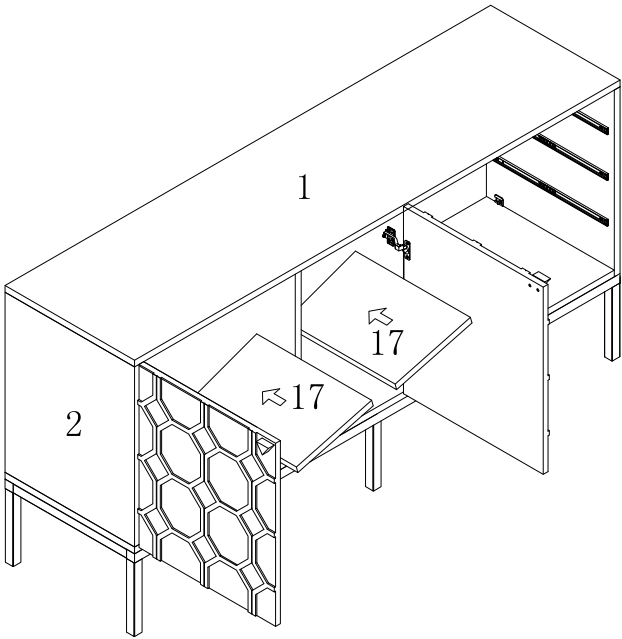


STEP 7

L:  8 PCS






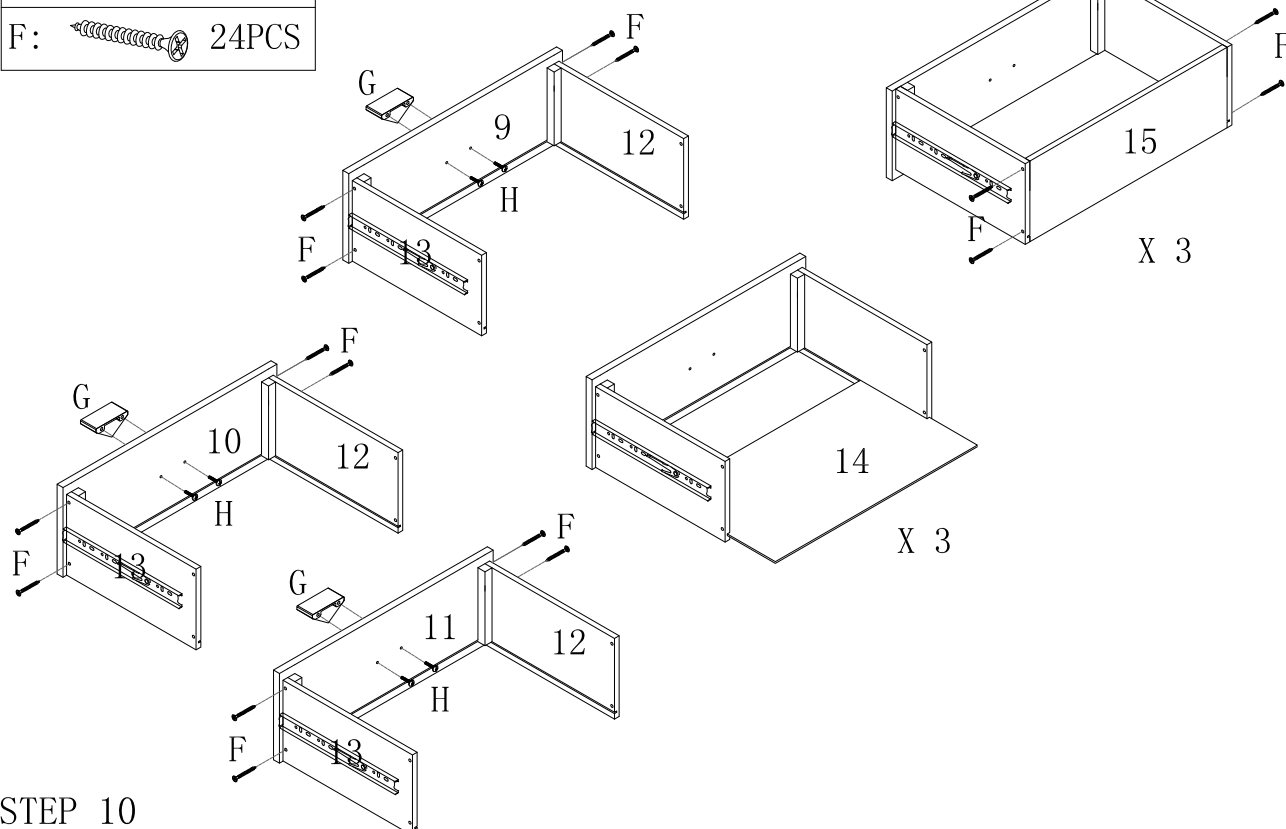
STEP 8



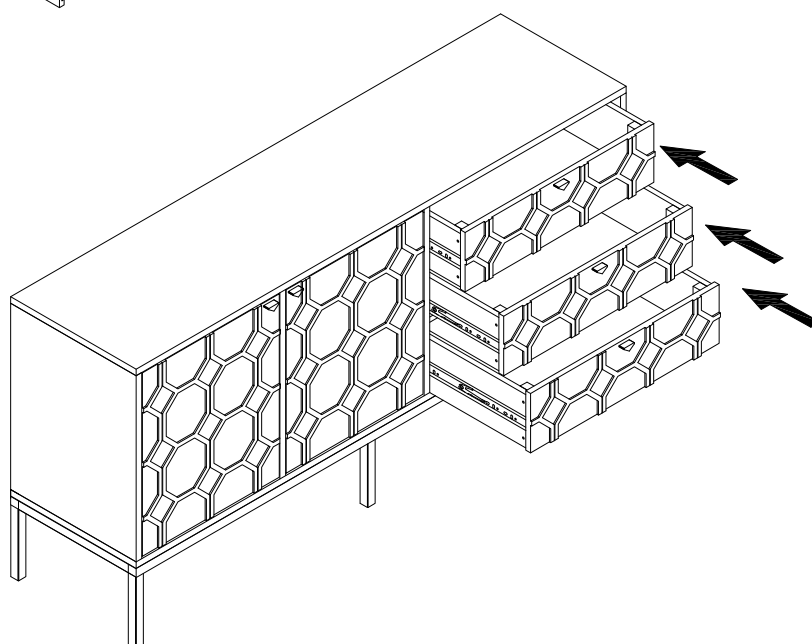
## ASSEMBLY INSTRUCTION

## STEP 9




G:		3PCS
H:		6PCS
F:		24PCS

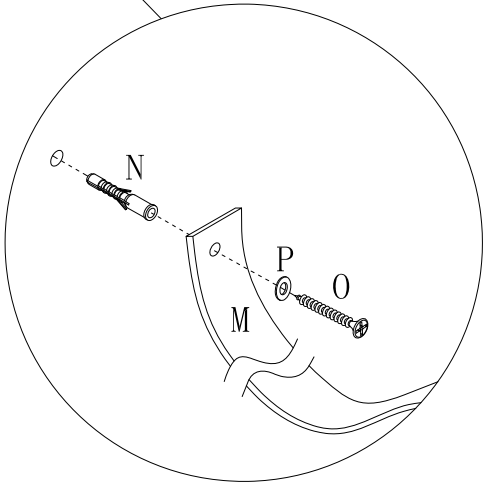
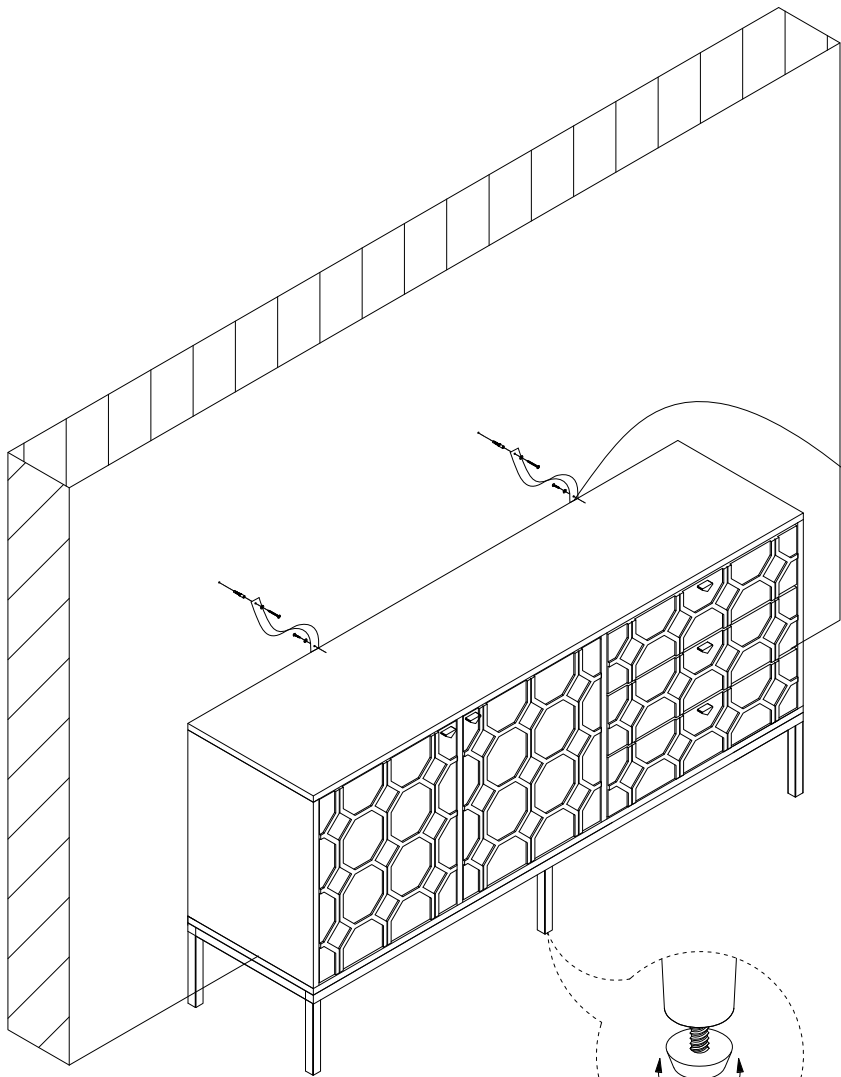


## STEP 10



## STEP 11

N:		2PCS
O:		2PCS
P:		2PCS



After installation, adjust the adjustable foot to keep the cabinet balanced and align the door.

For safety reasons, it is recommended to install safety wall strap to fix the item.