


Assembly instructions

Hand basin cabinet

Model:06-200BC117-C3WH

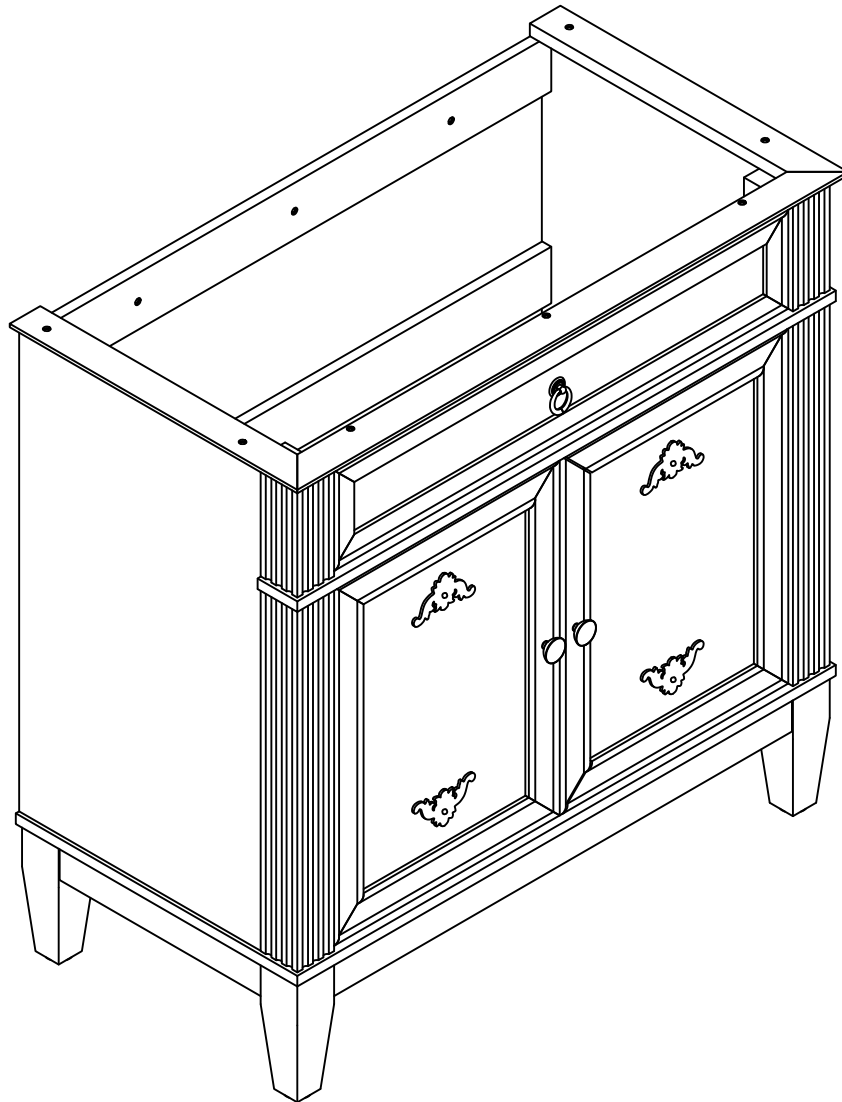

MADE IN P.R.C.

Thank you for your purchase.All components are included in a single package. Please follow the instructions step by step for a quicker and smoother installation process.If you encounter any issues,please contact our customer service team service@broovewave.com,and we will be pleased to assist you.





If you purchase our complete bathroom vanity set (including the vanity cabinet, mirror cabinet, and sink basin), please note that the items will be shipped in three separate packages.


This arrangement is made to ensure the highest level of protection during transit — since the mirror, ceramic basin, and cabinet are crafted from different materials, each requires its own specialized packaging for safe delivery.

You may receive the packages on different days, but rest assured that all items belong to the same order.

If you have any questions or concerns, please feel free to contact us anytime at service@broovewave.com — we're always happy to help.

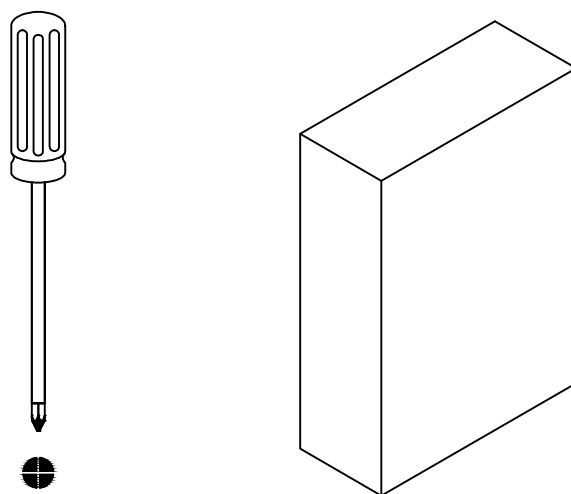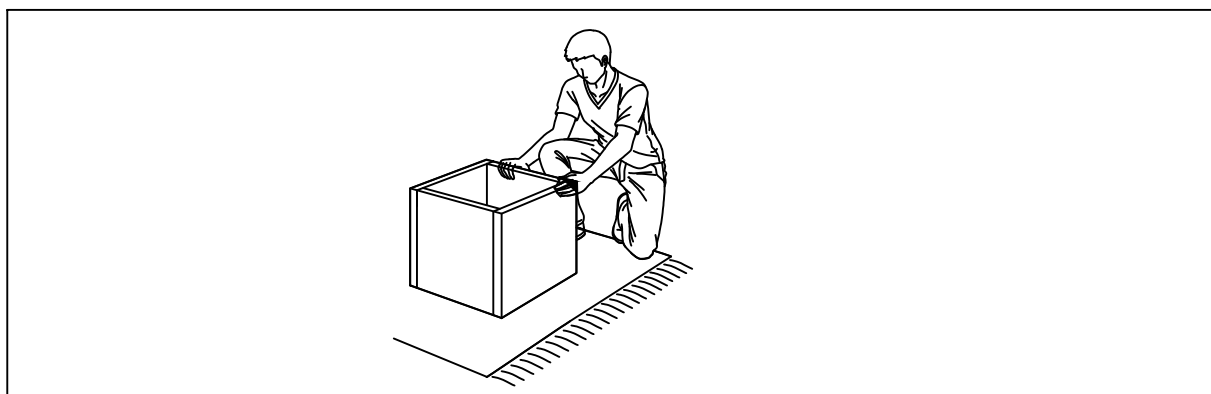

Assemble the furniture on empty carton, carpet, or rug to prevent scratches or damage.

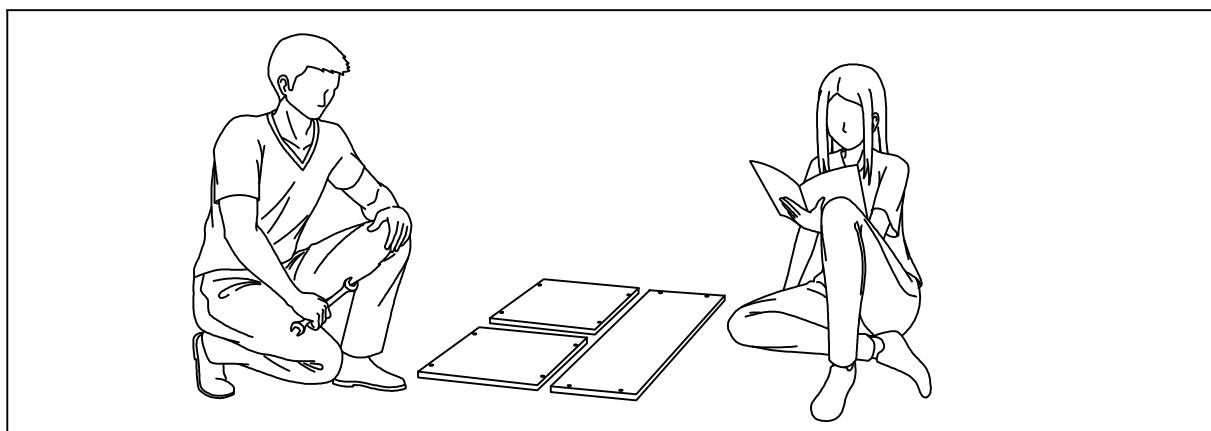

This furniture requires 2 people to assembly.
Make sure no parts are missing or damaged before assembly.

Not actual size


✓ CHECK ALL PARTS

☐ Are you missing anything?


Double-check that all parts, hardware, and accessories listed on Pages 3-6 are accounted for. We can send any missing parts.

☐ Should we send any replacements?


If there are any flaws in the parts, we can send replacements!

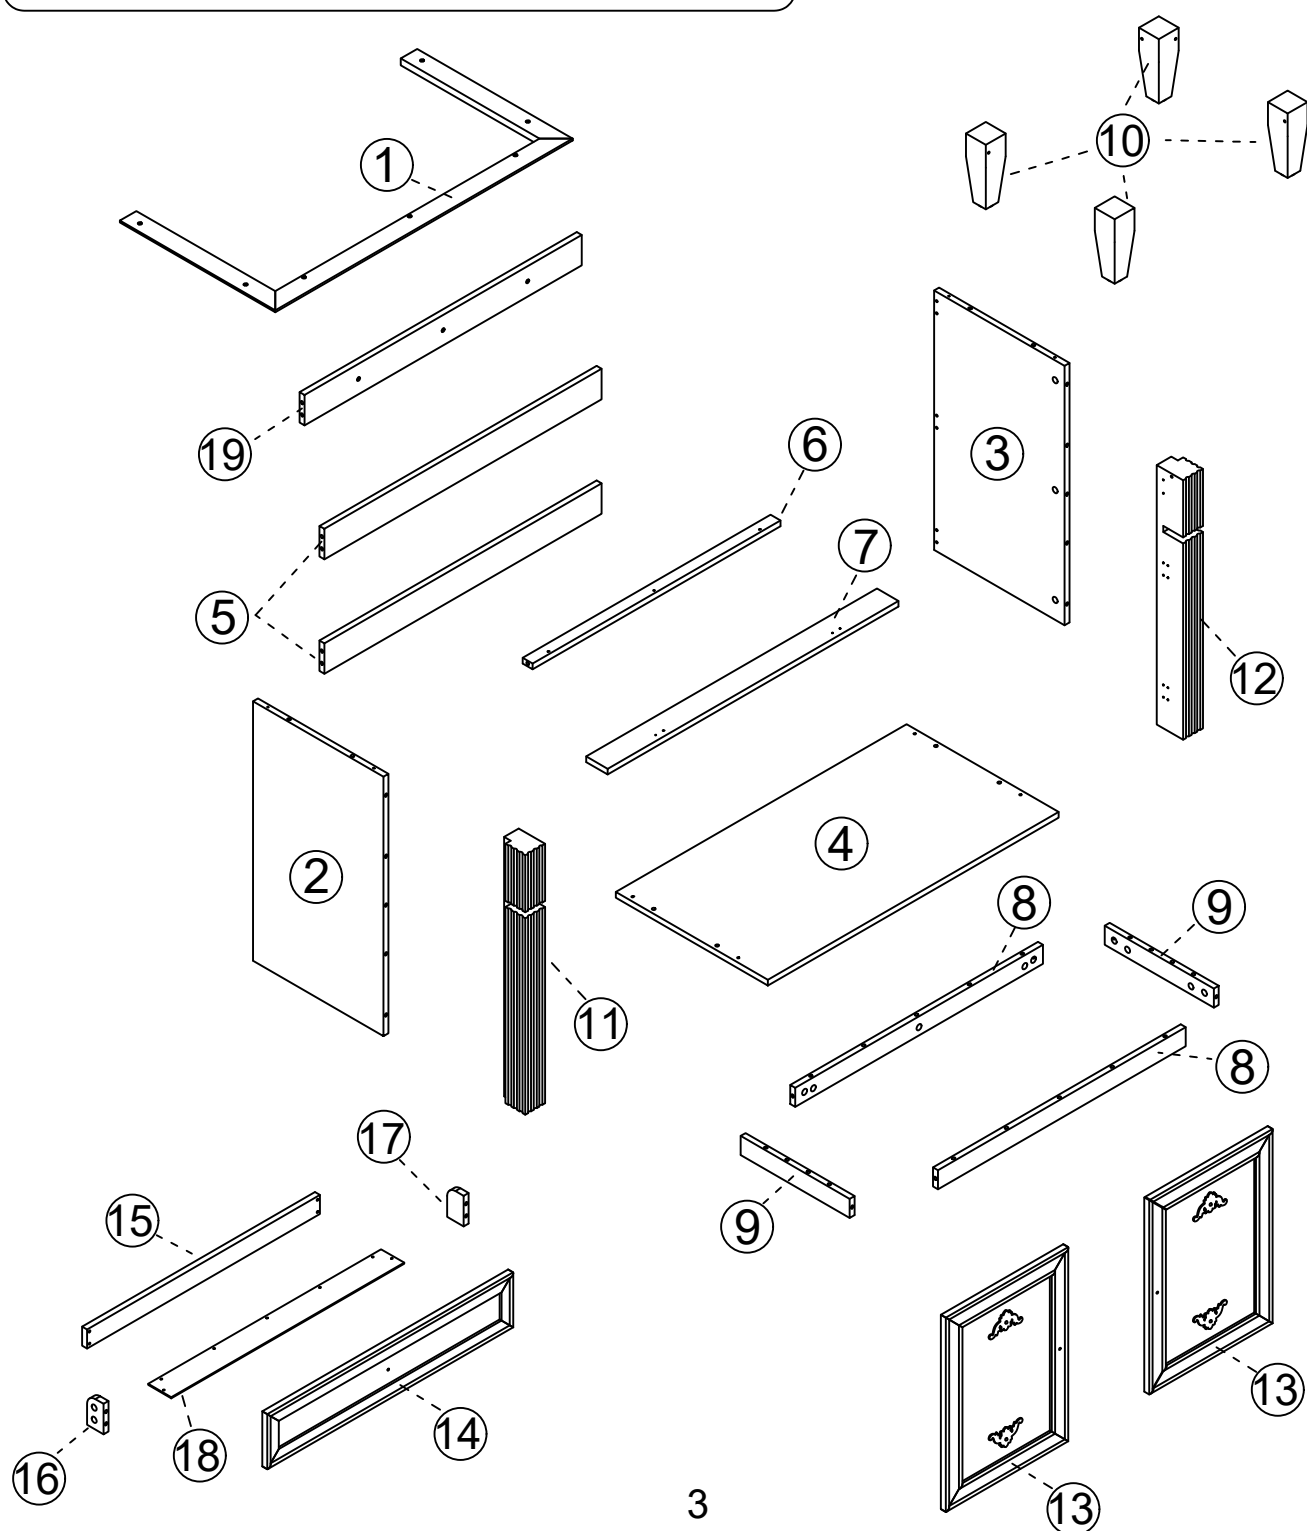


Not actual size

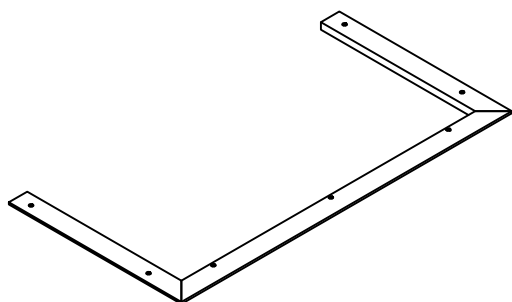


① X1

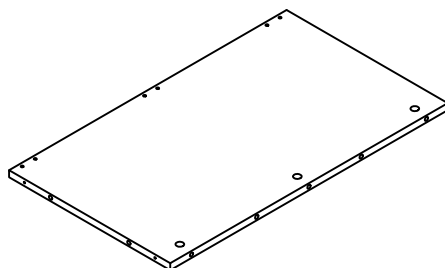


② X1

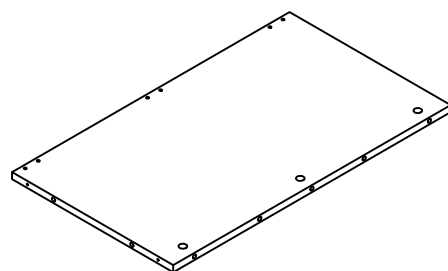


③ X1

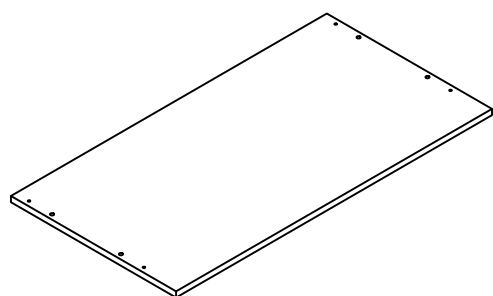


④ X1

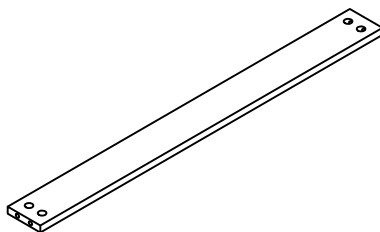


⑤ X2

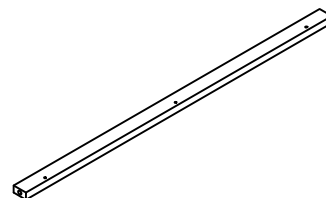


⑥ X1

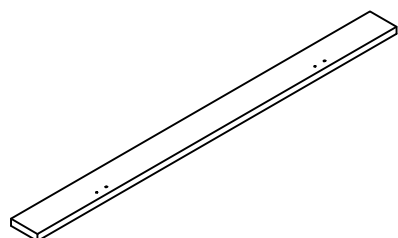


⑦ X1

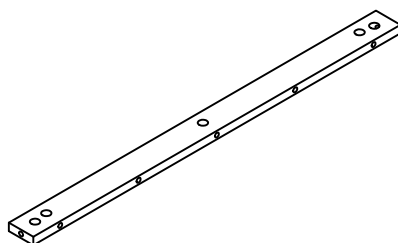


⑧ X2

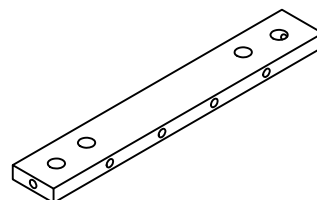


⑨ X2



⑩ X4

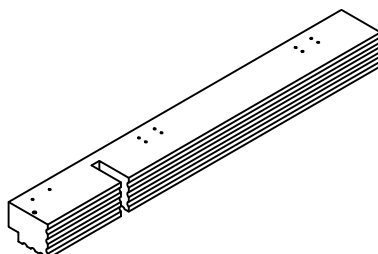


⑪ X1

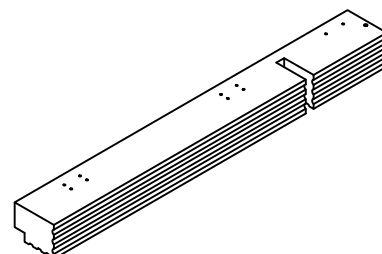


⑫ X1


Not actual size

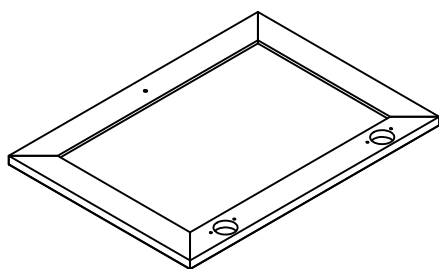


⑬X2

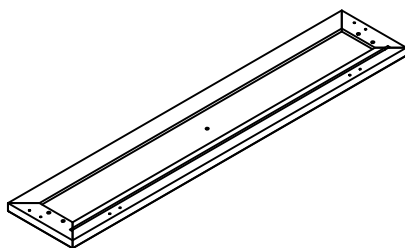


⑭X1

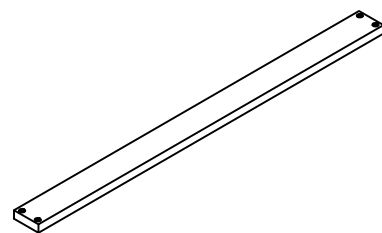


⑮X1

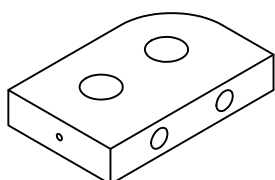


⑯X1

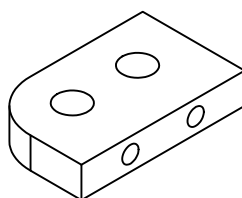

⑰X1
















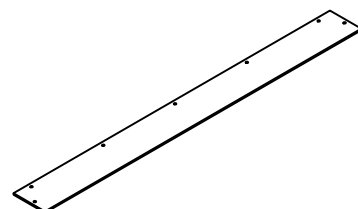


⑱X1




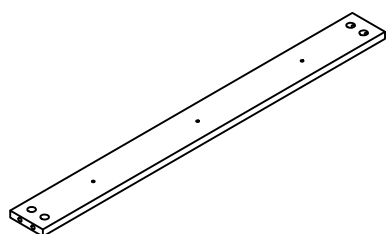


⑲X1

Not actual size

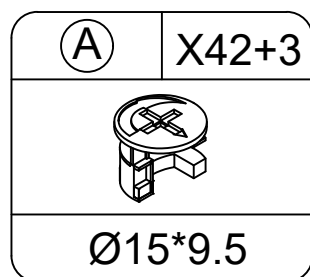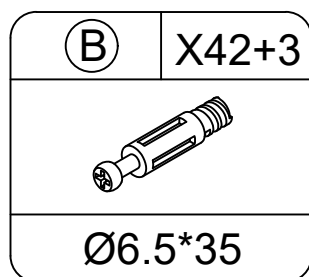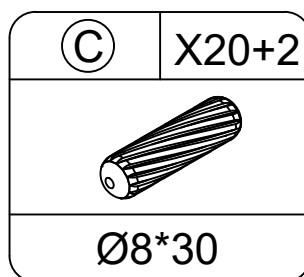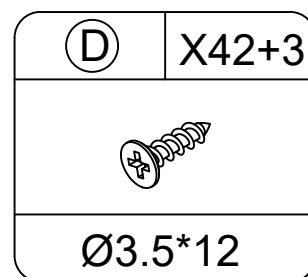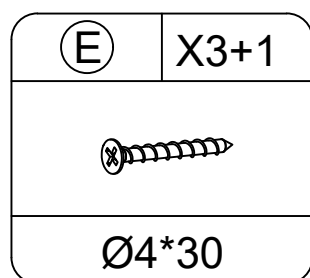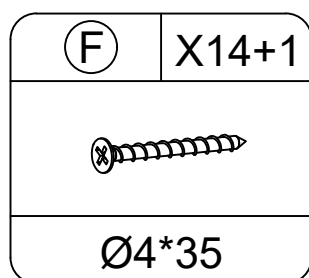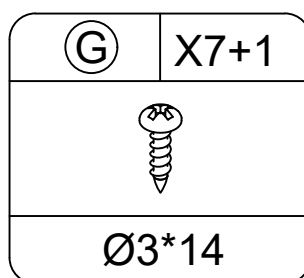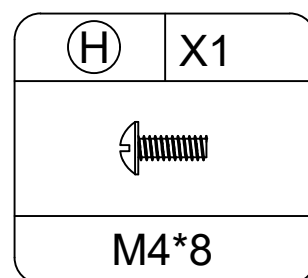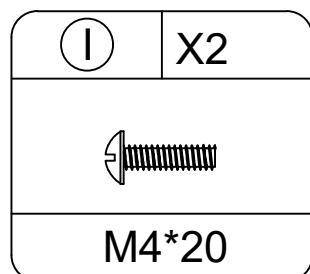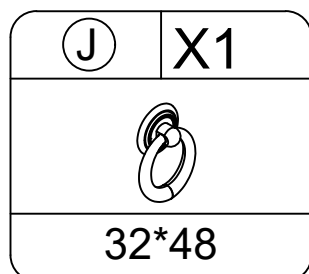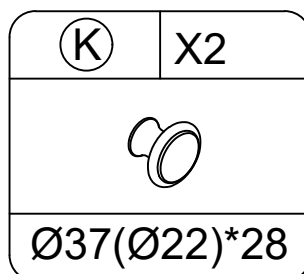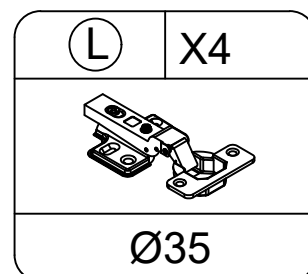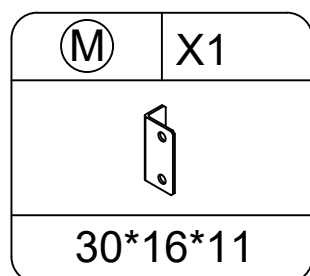
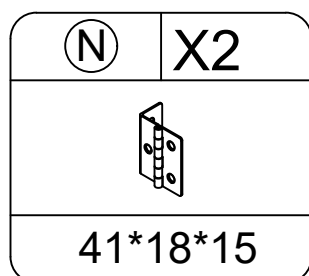
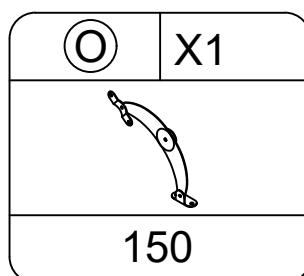
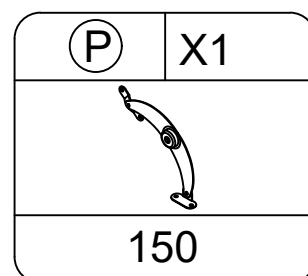


Not actual size



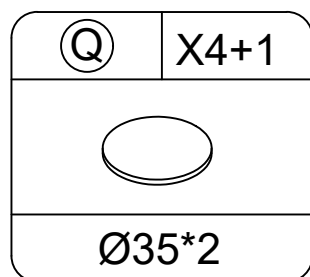
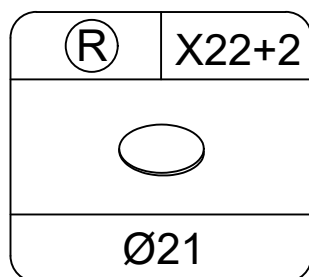
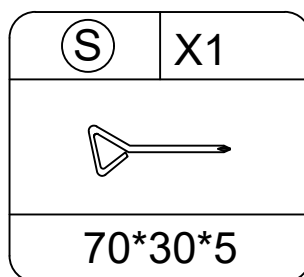
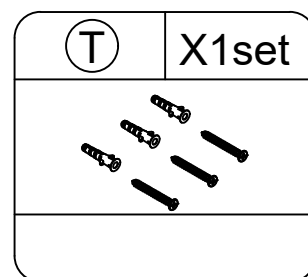


Cam Lock Fastening System



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

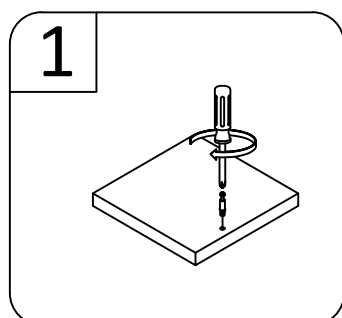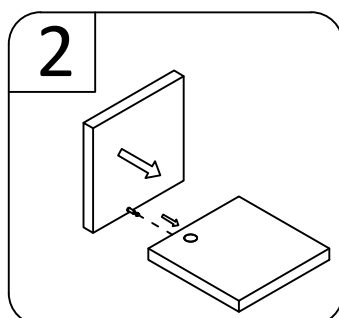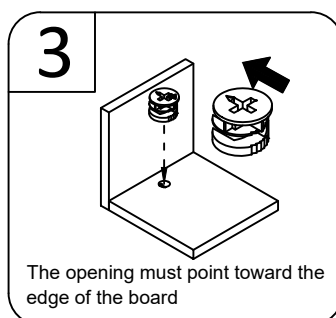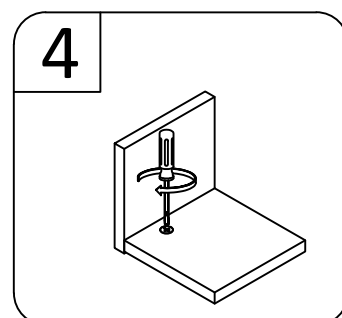


STEP 1

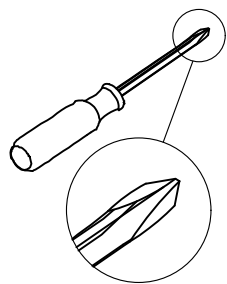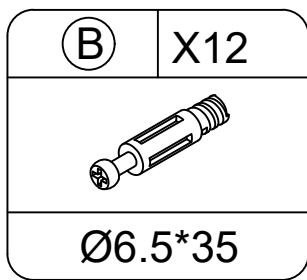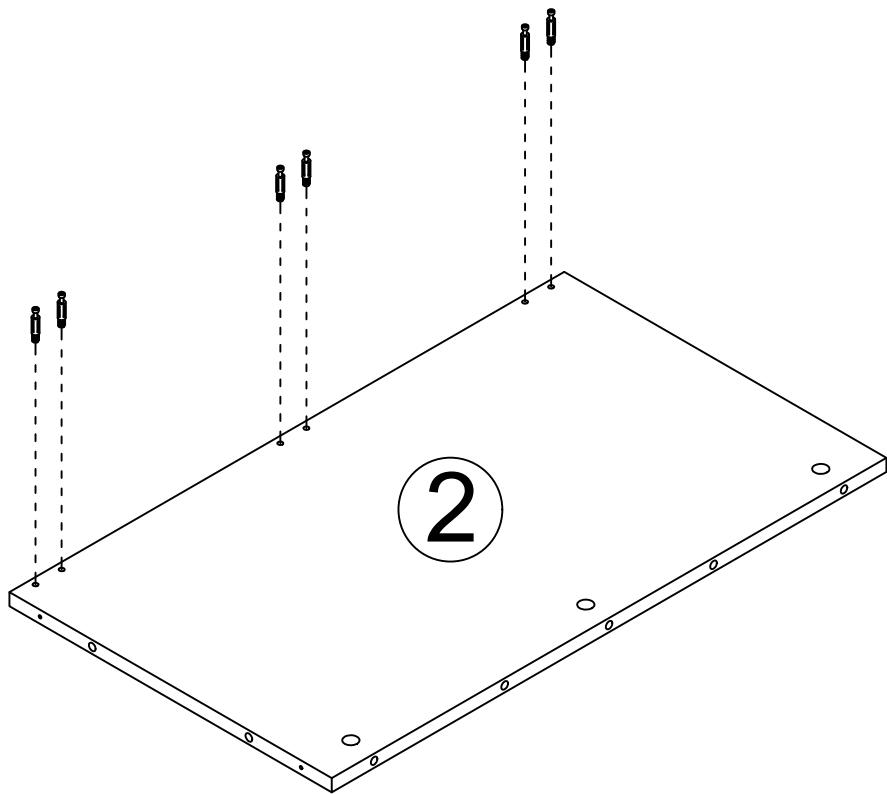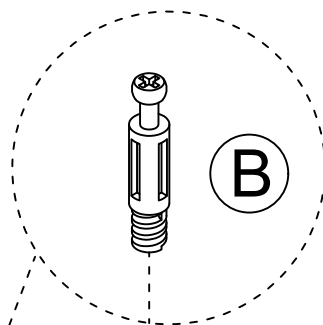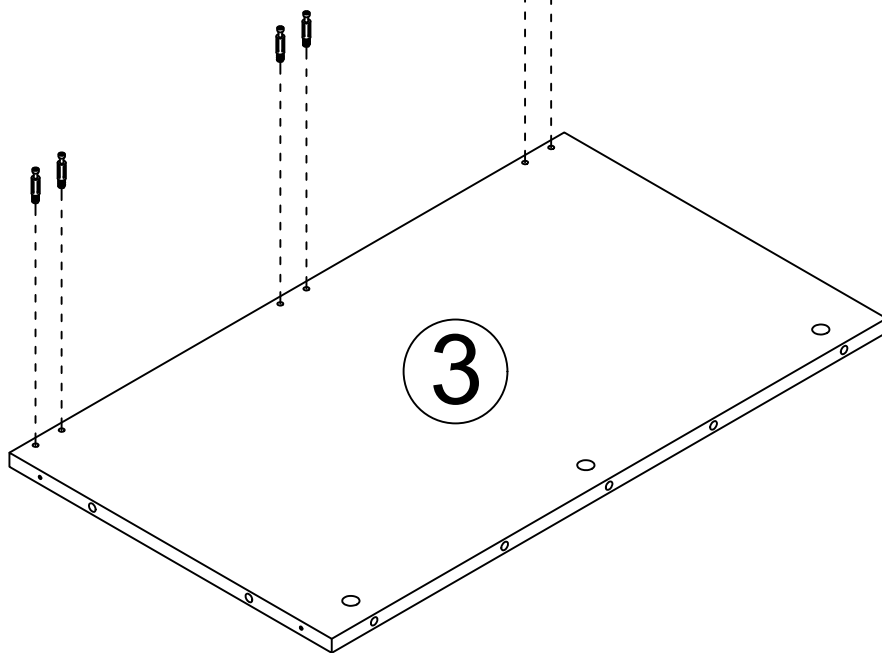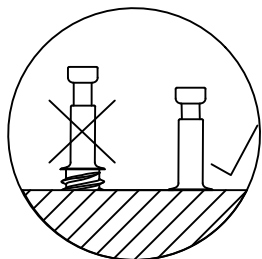



STEP 2

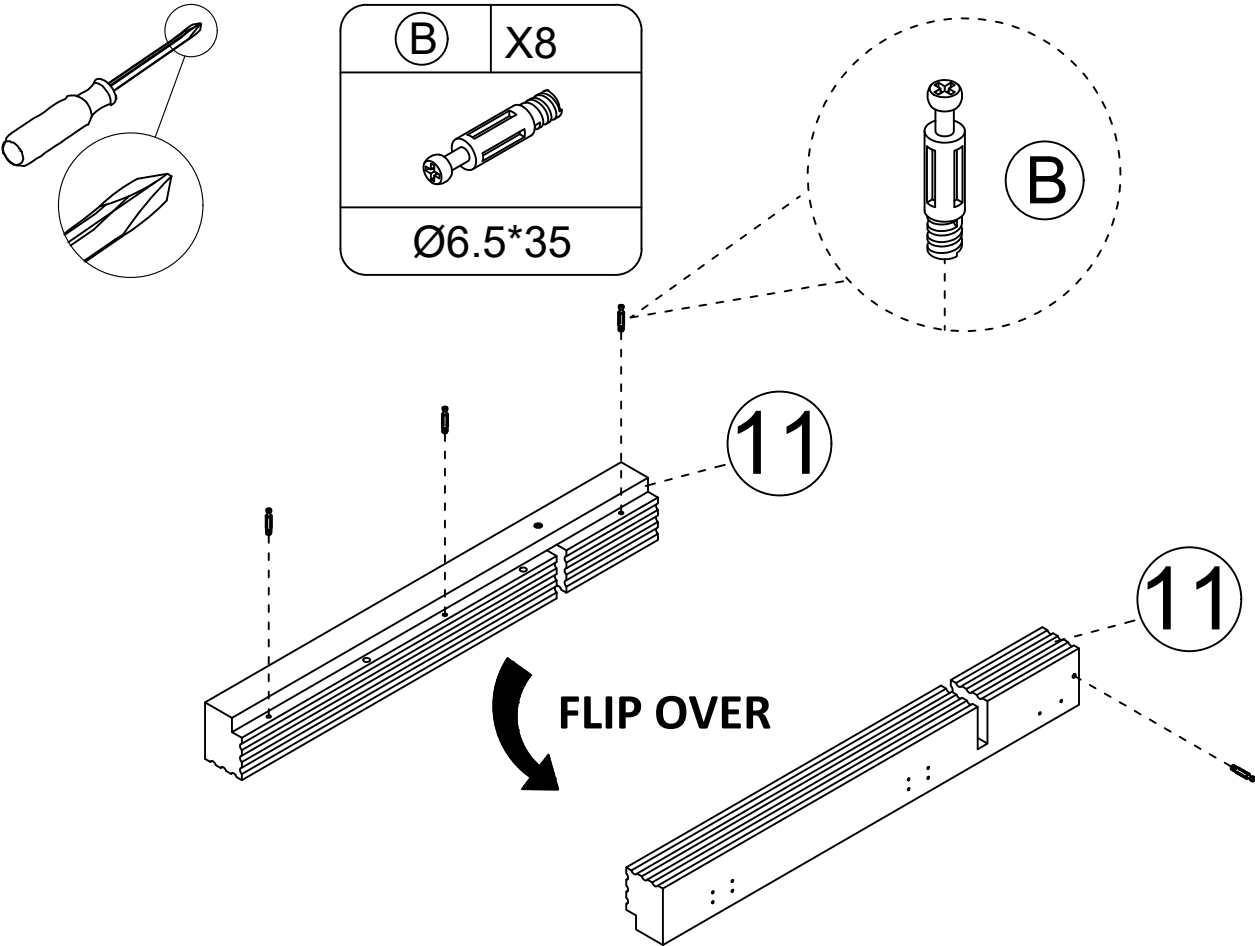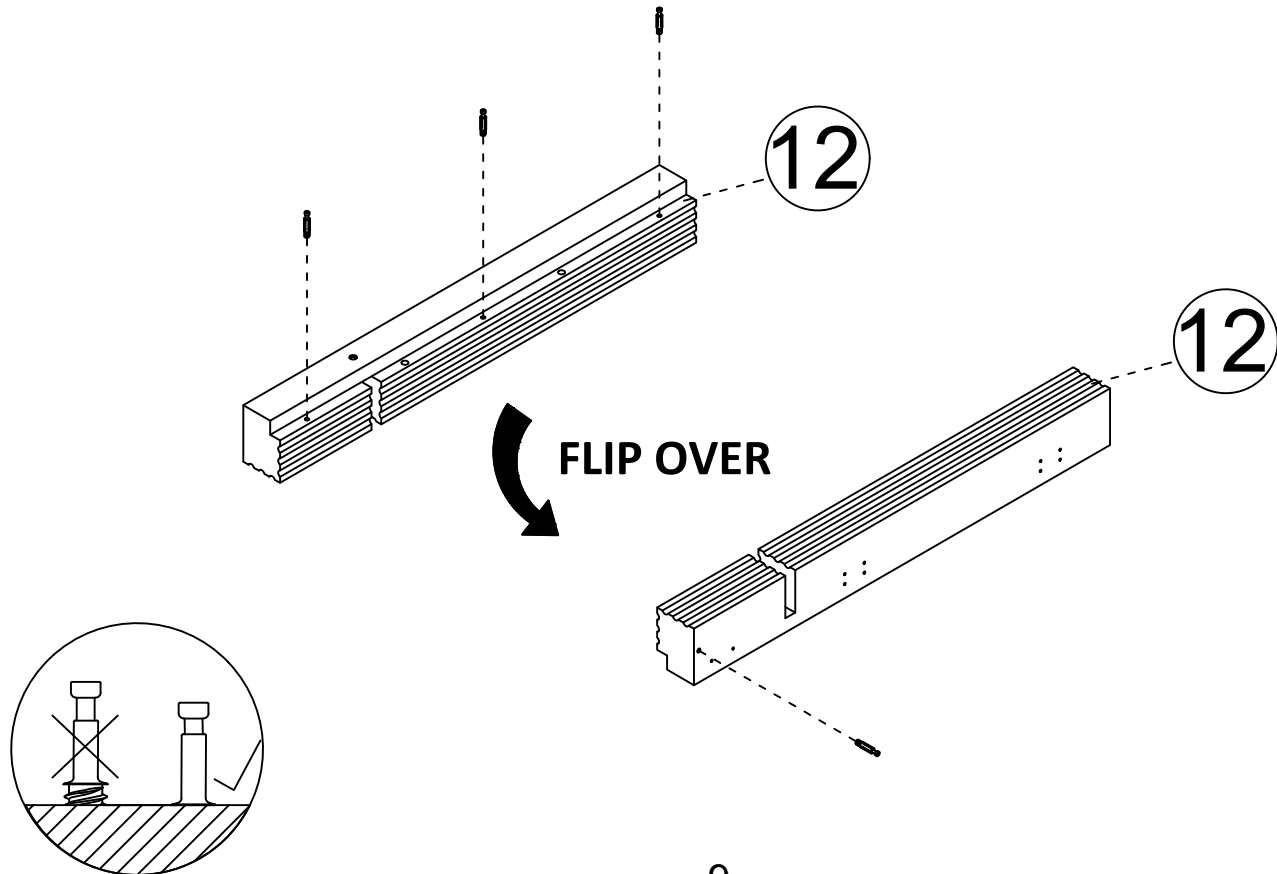


STEP 3

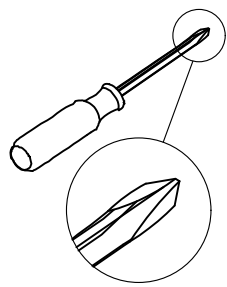


(A)	X3
	
Ø15*9.5	

(C)	X2
	
Ø8*30	




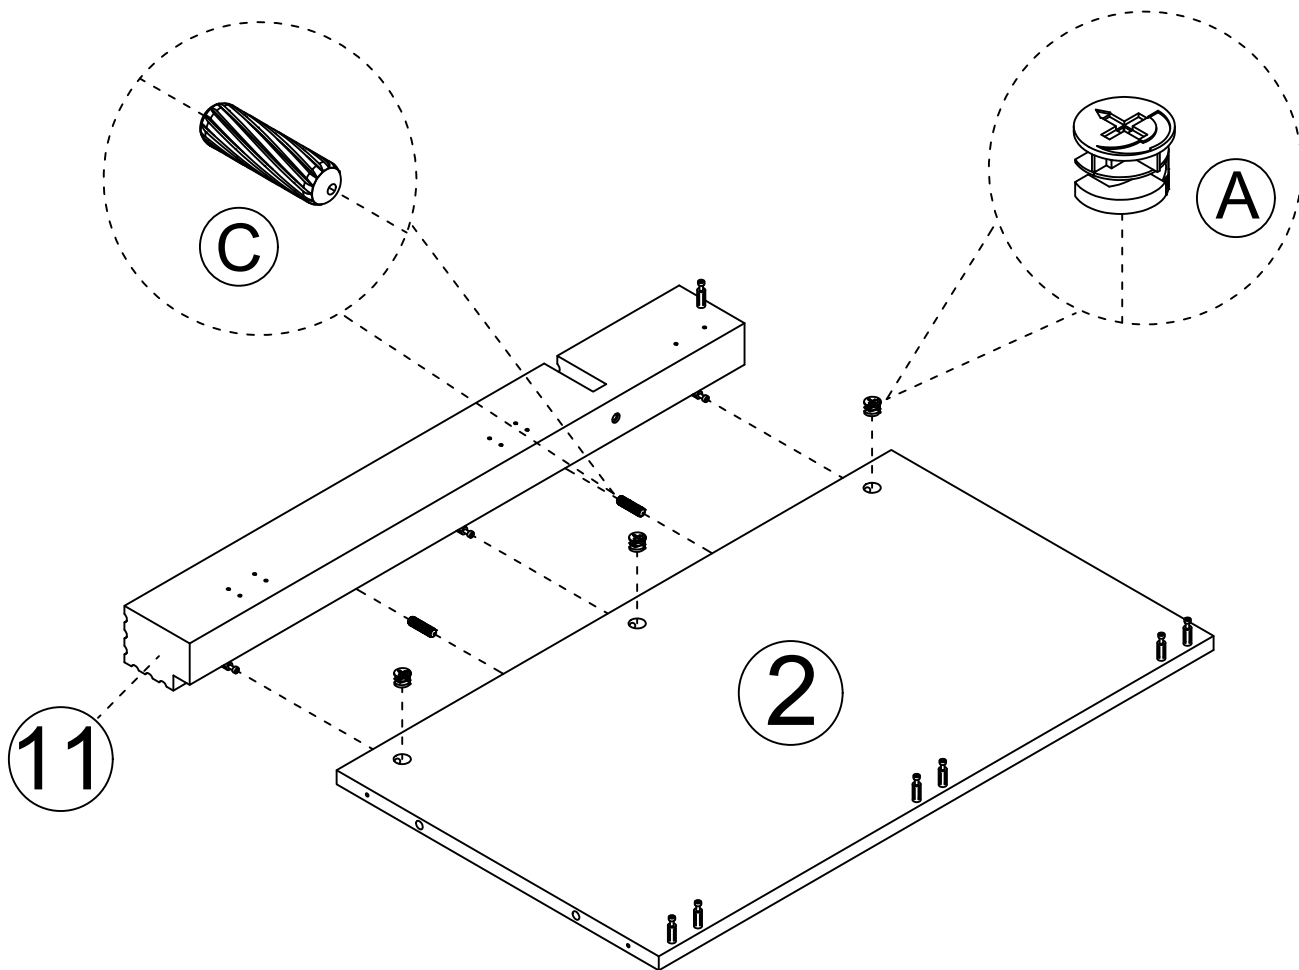


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

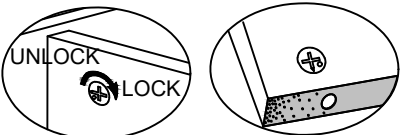


Proper orientation of CAM LOCK

STEP 4

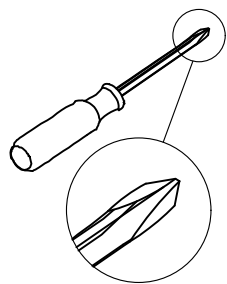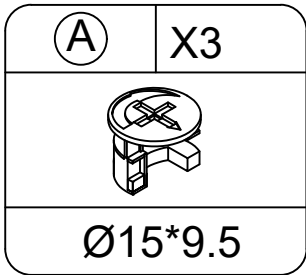
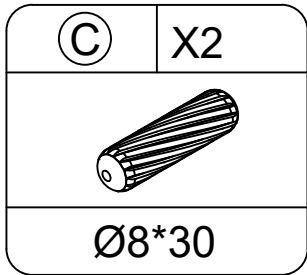
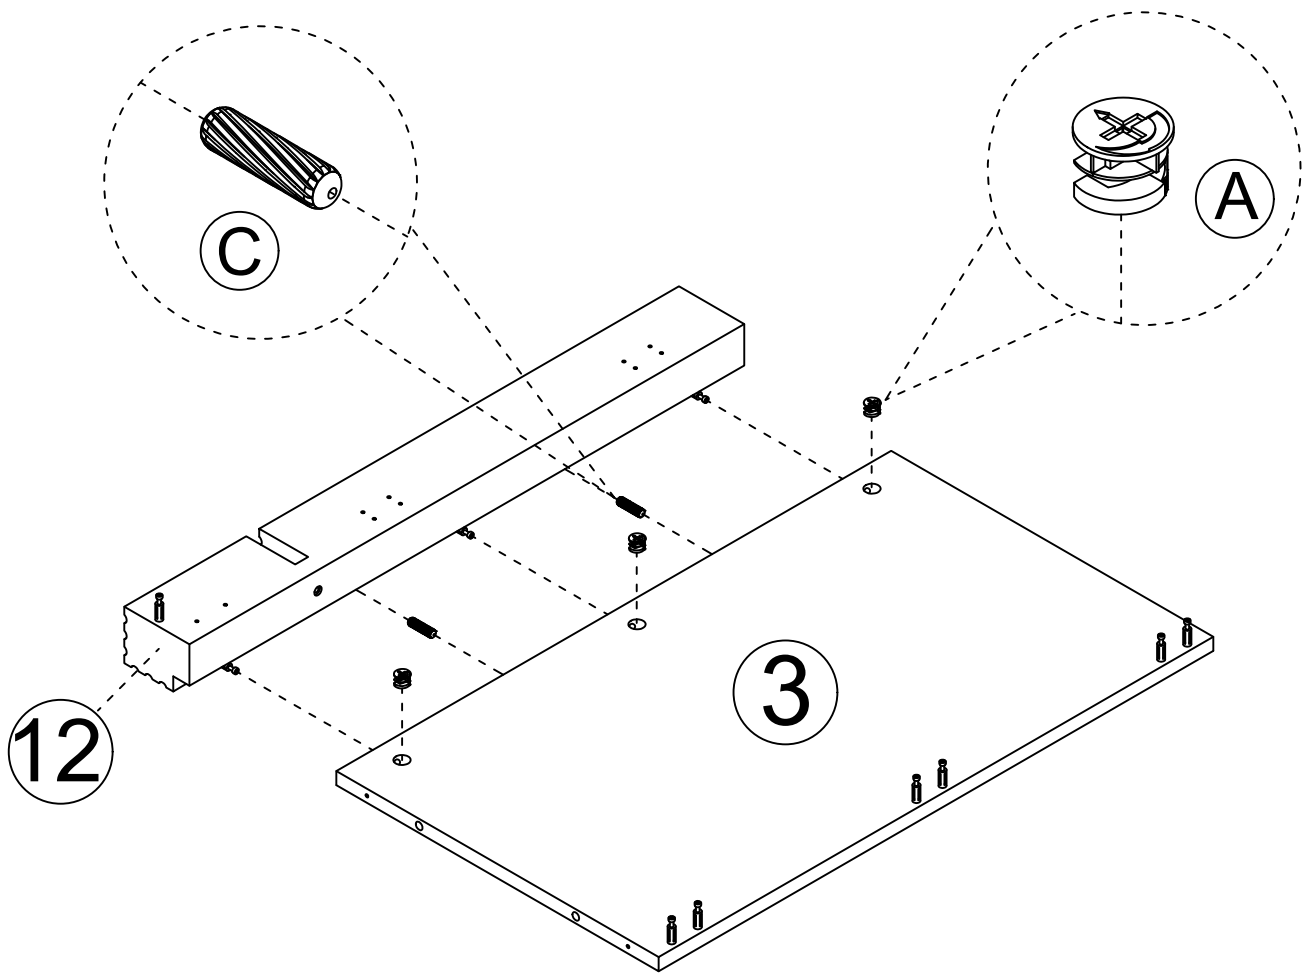


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

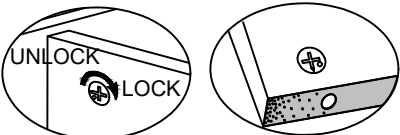


Proper orientation of CAM LOCK

STEP 5

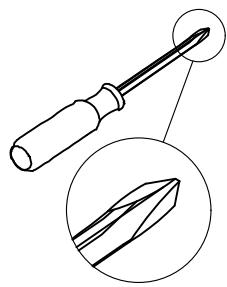
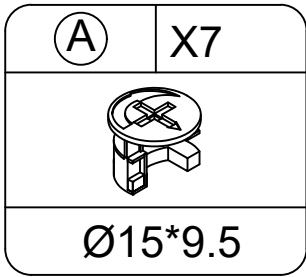
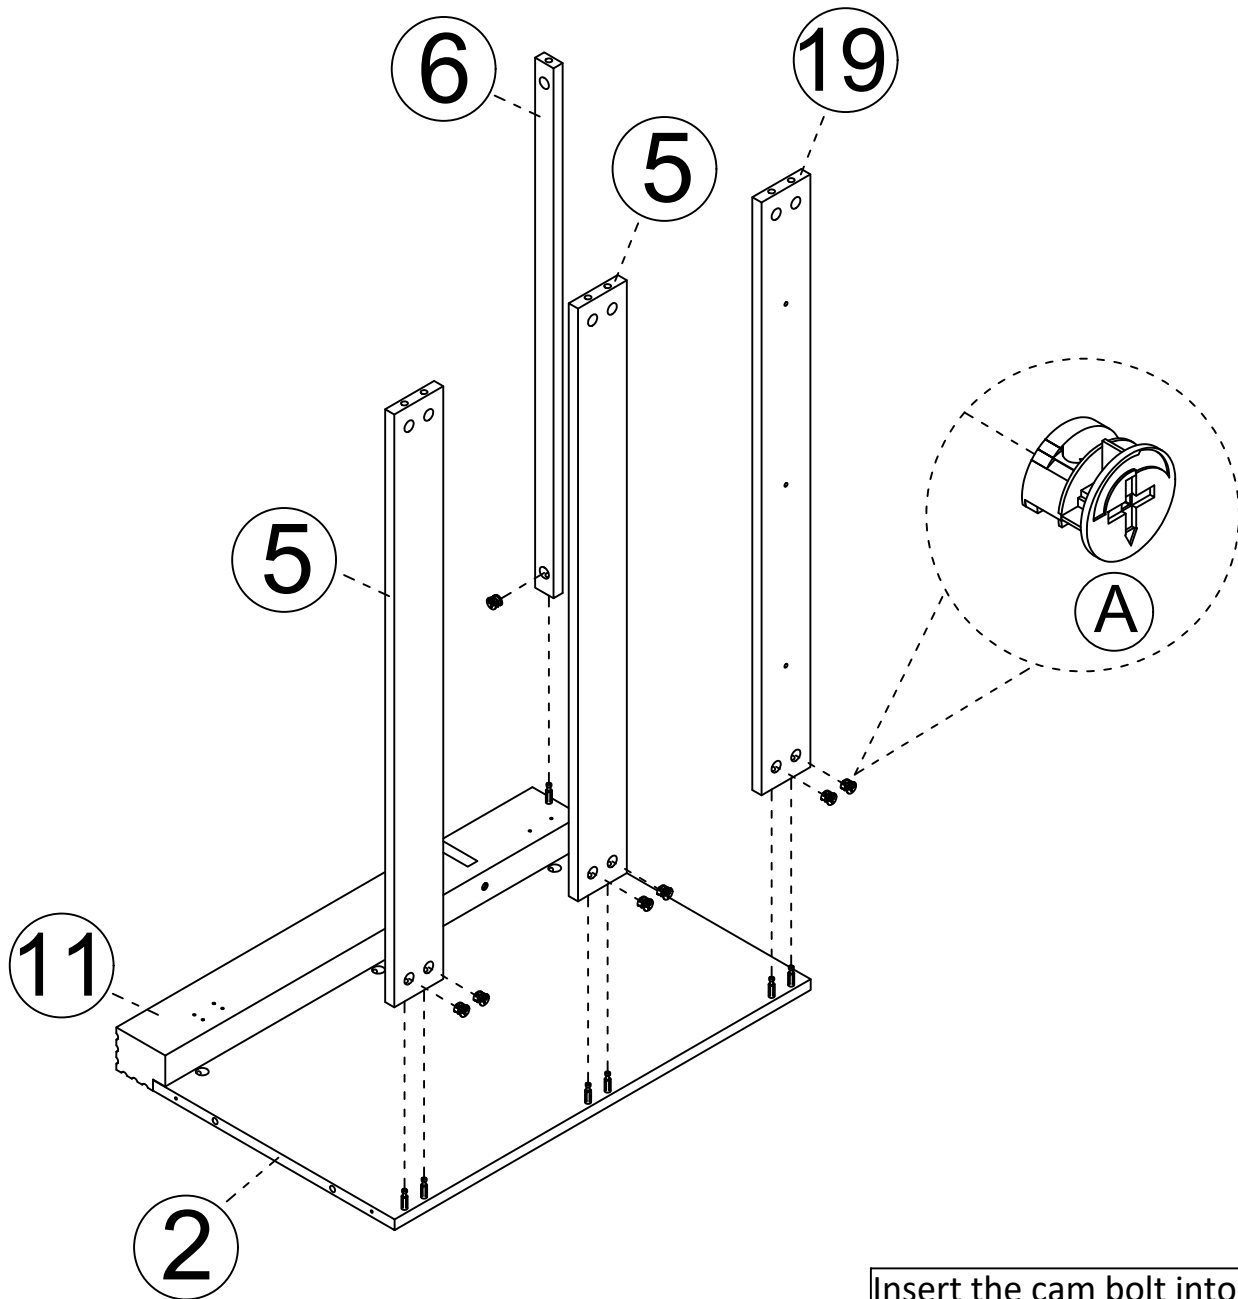


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

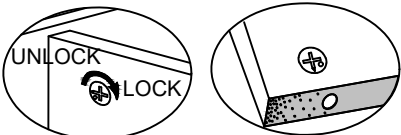


Proper orientation of CAM LOCK

STEP 6

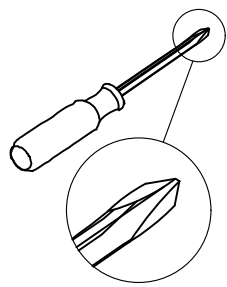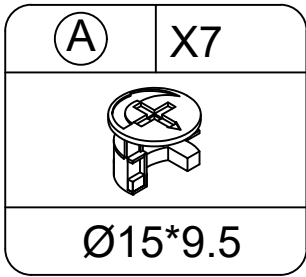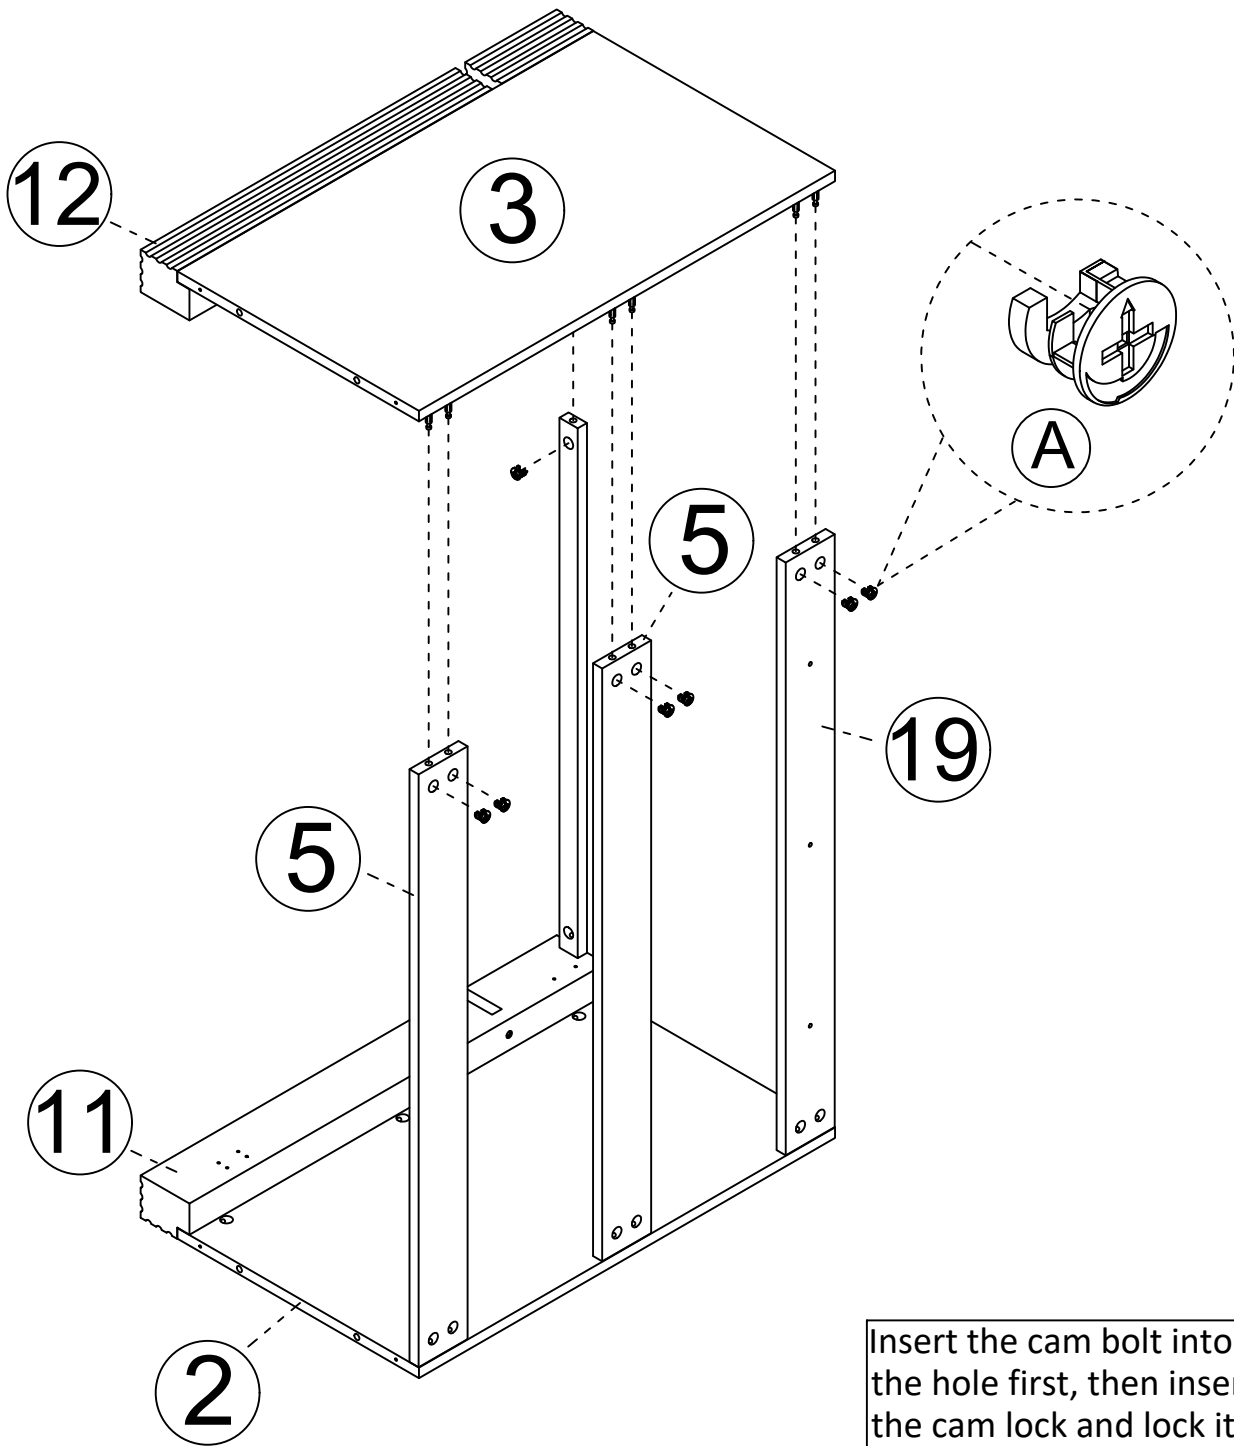



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

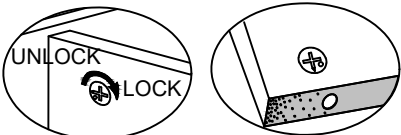





Proper orientation of CAM LOCK

STEP 7





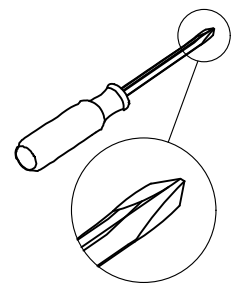


(C)	X4
	
Ø8*30	





(F)	X4
	
Ø4*35	

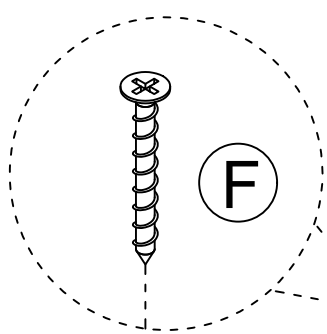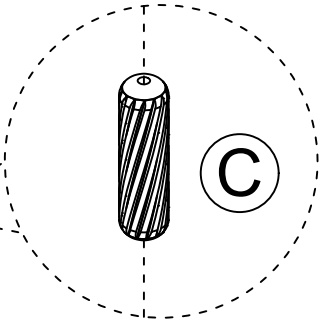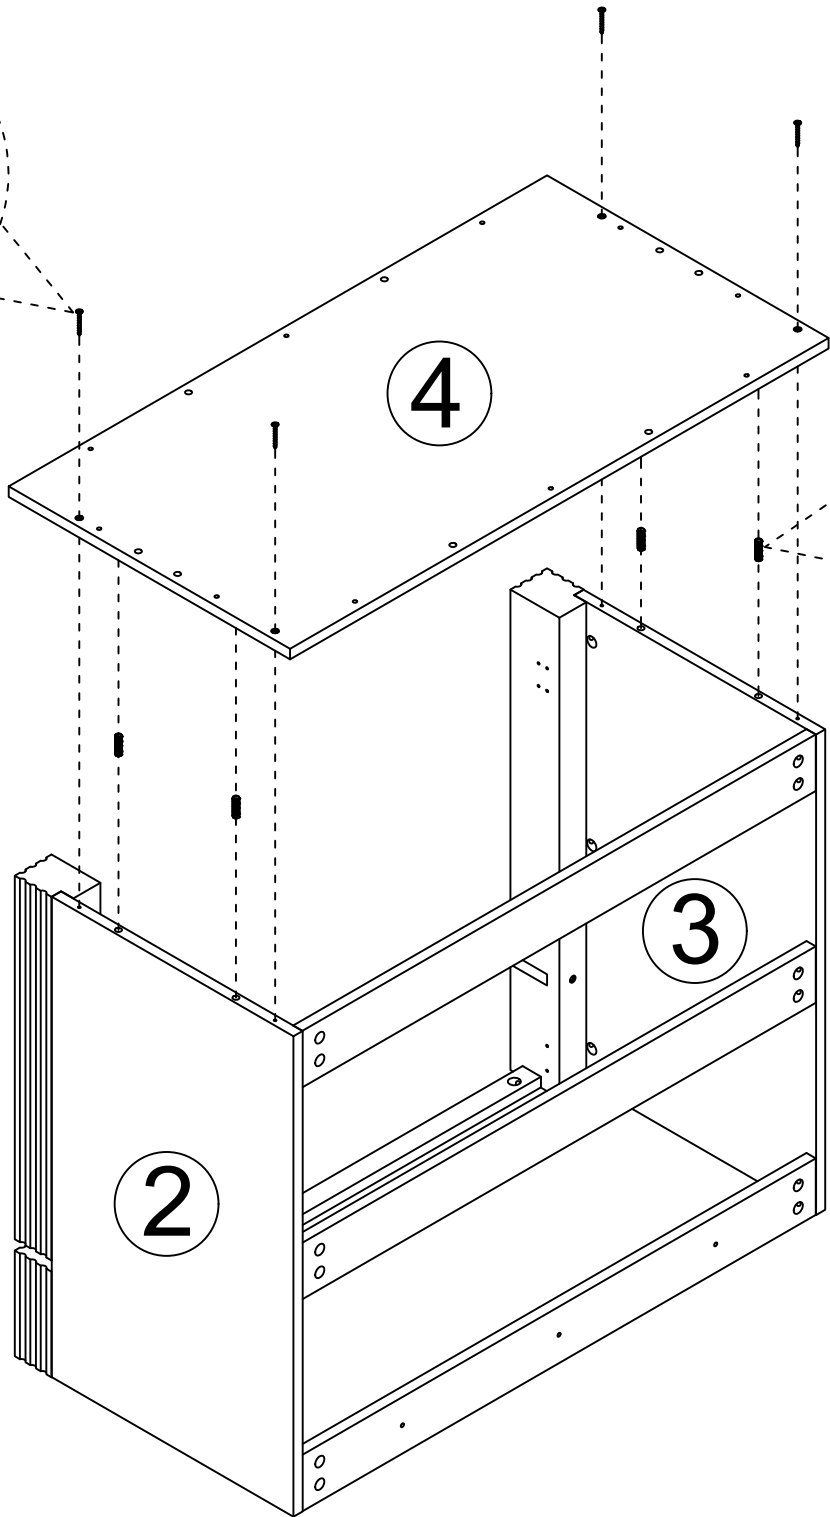


STEP 8

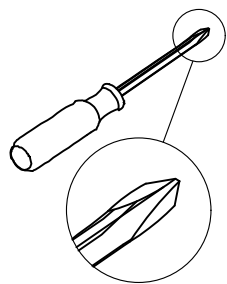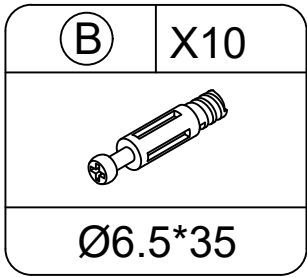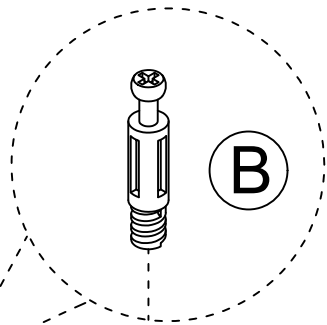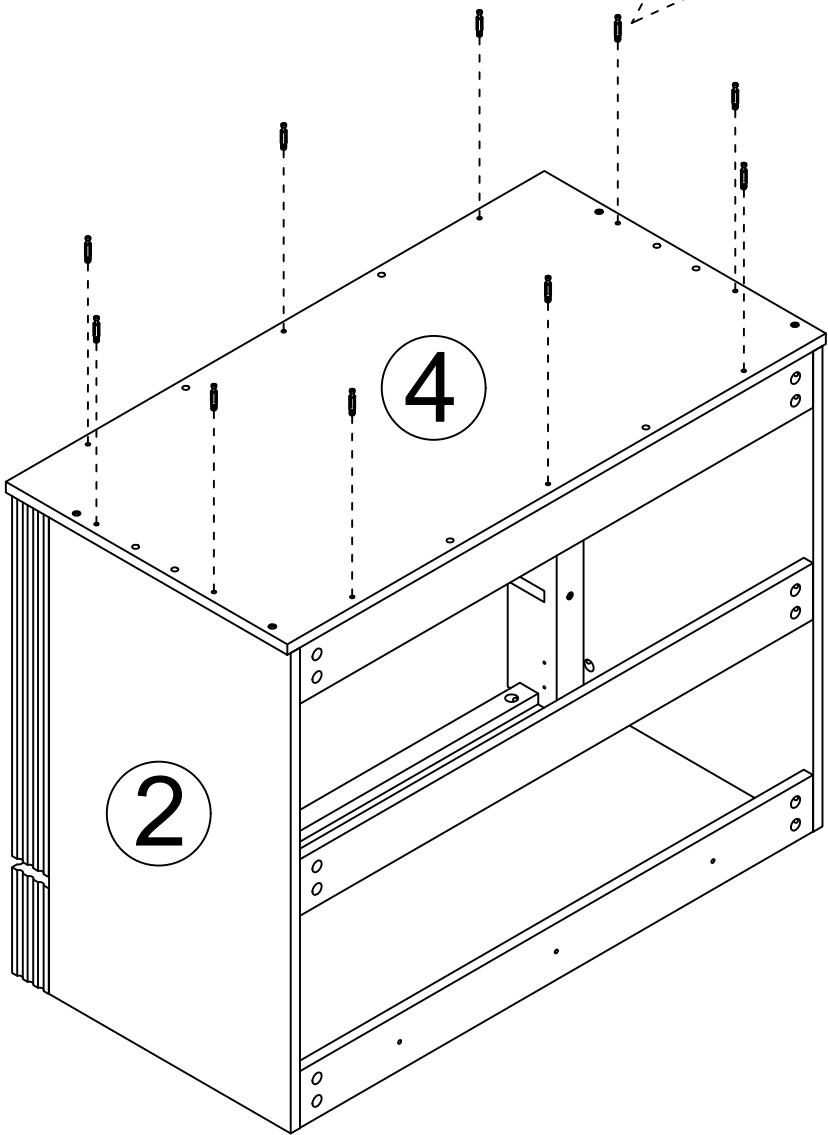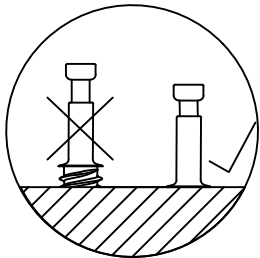


STEP 9

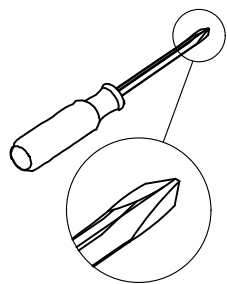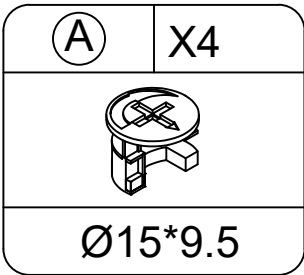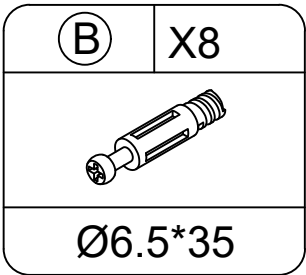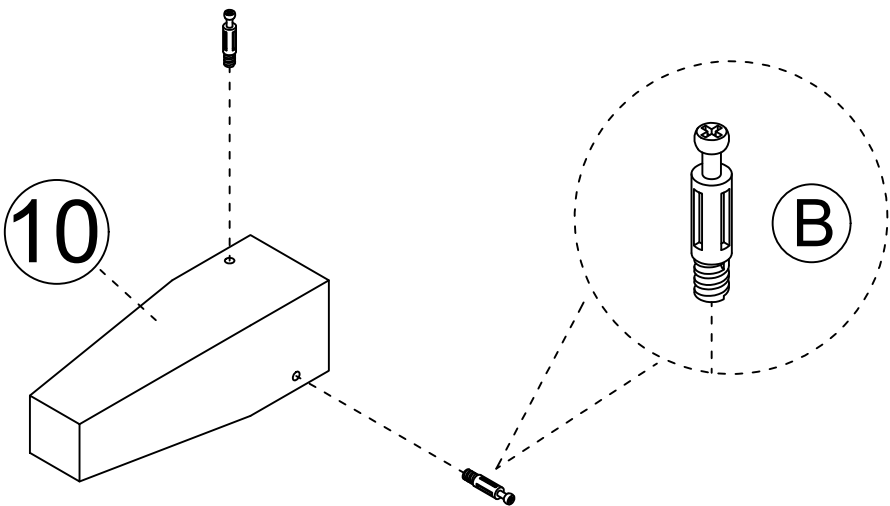


x4

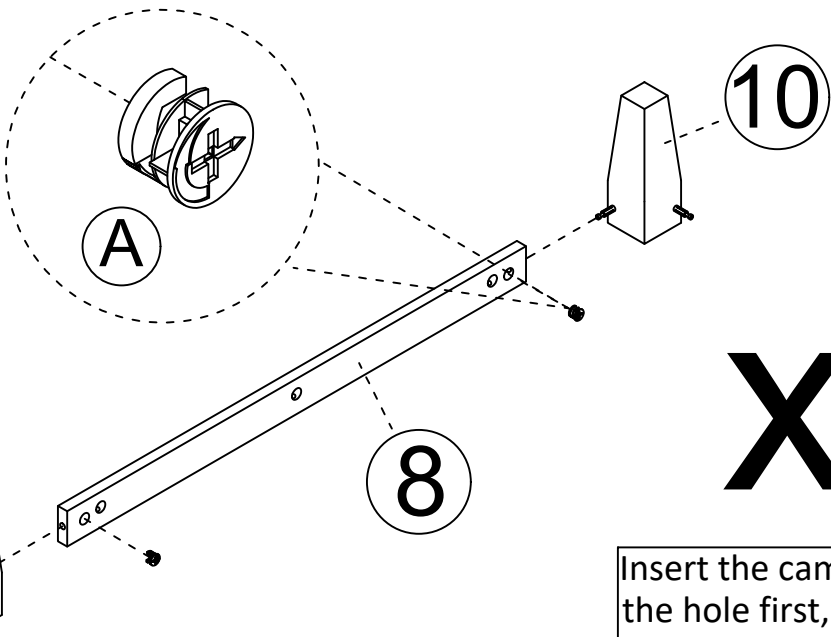

x2



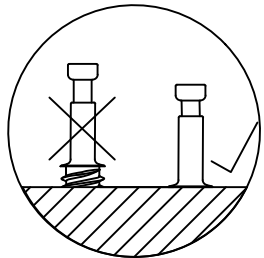


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

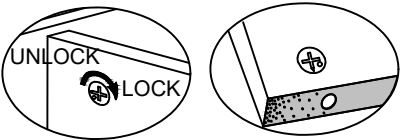


Proper orientation of CAM LOCK

STEP 10


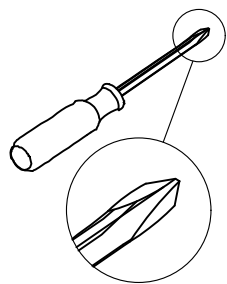
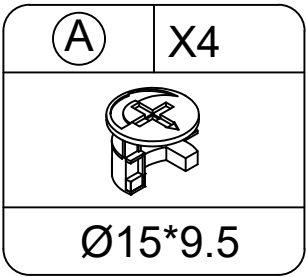
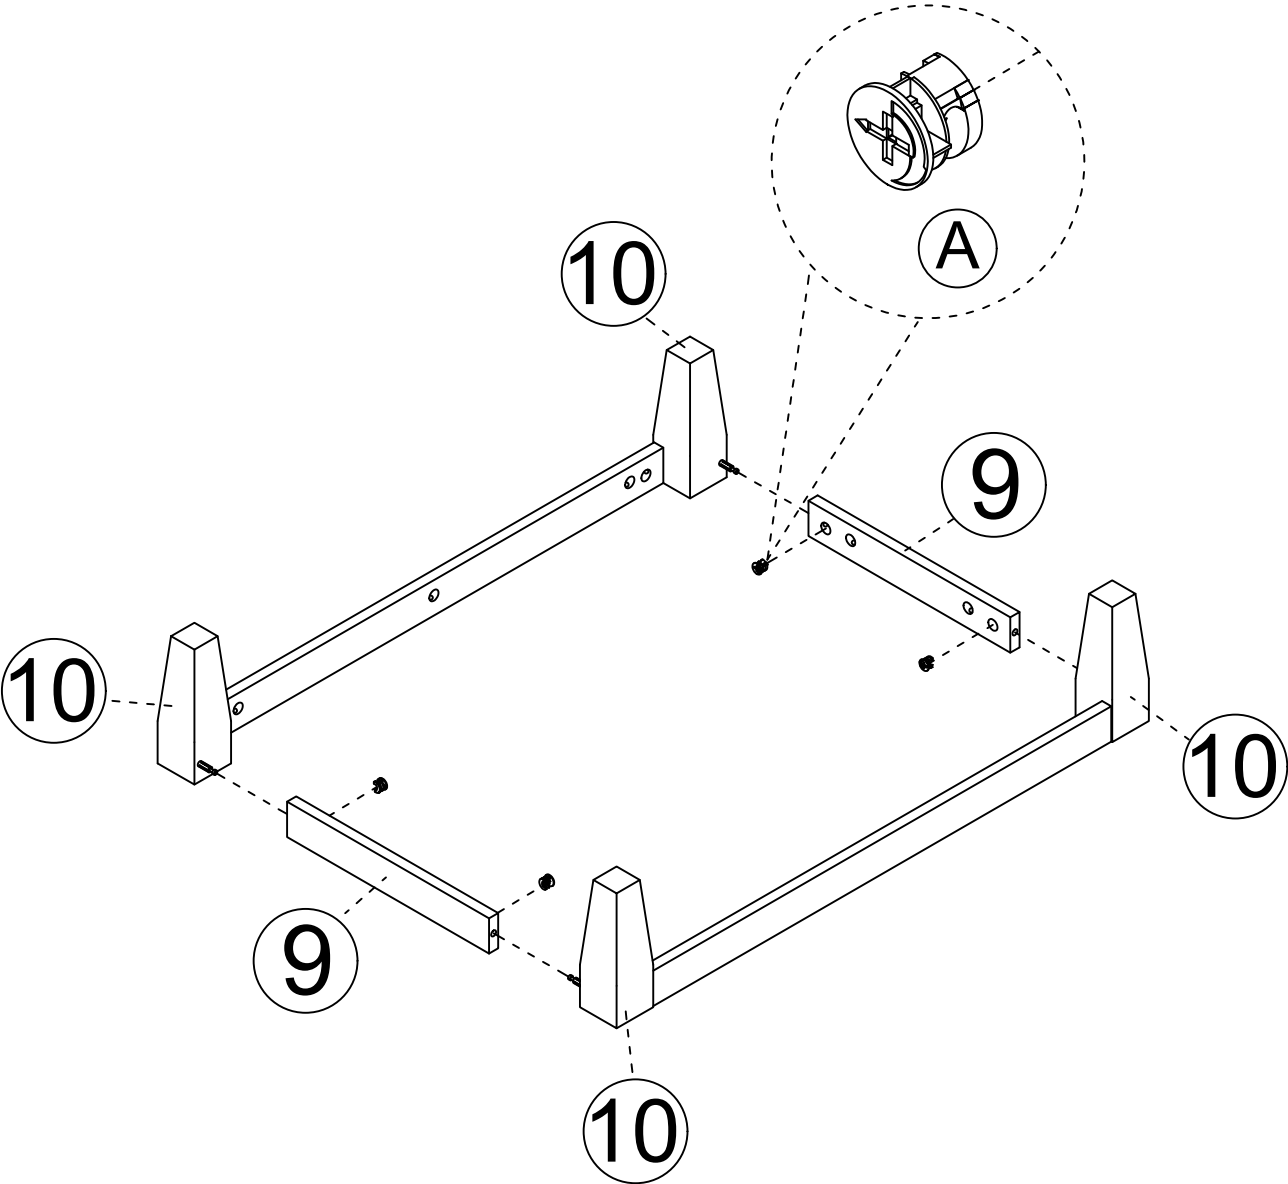


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

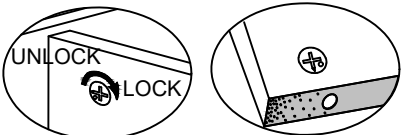


Proper orientation of CAM LOCK

STEP 11

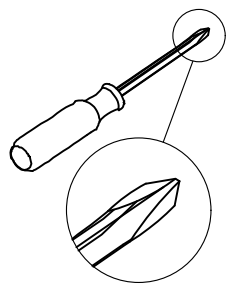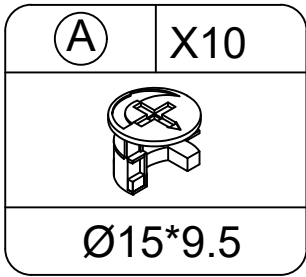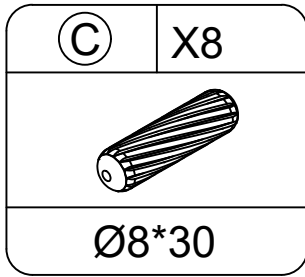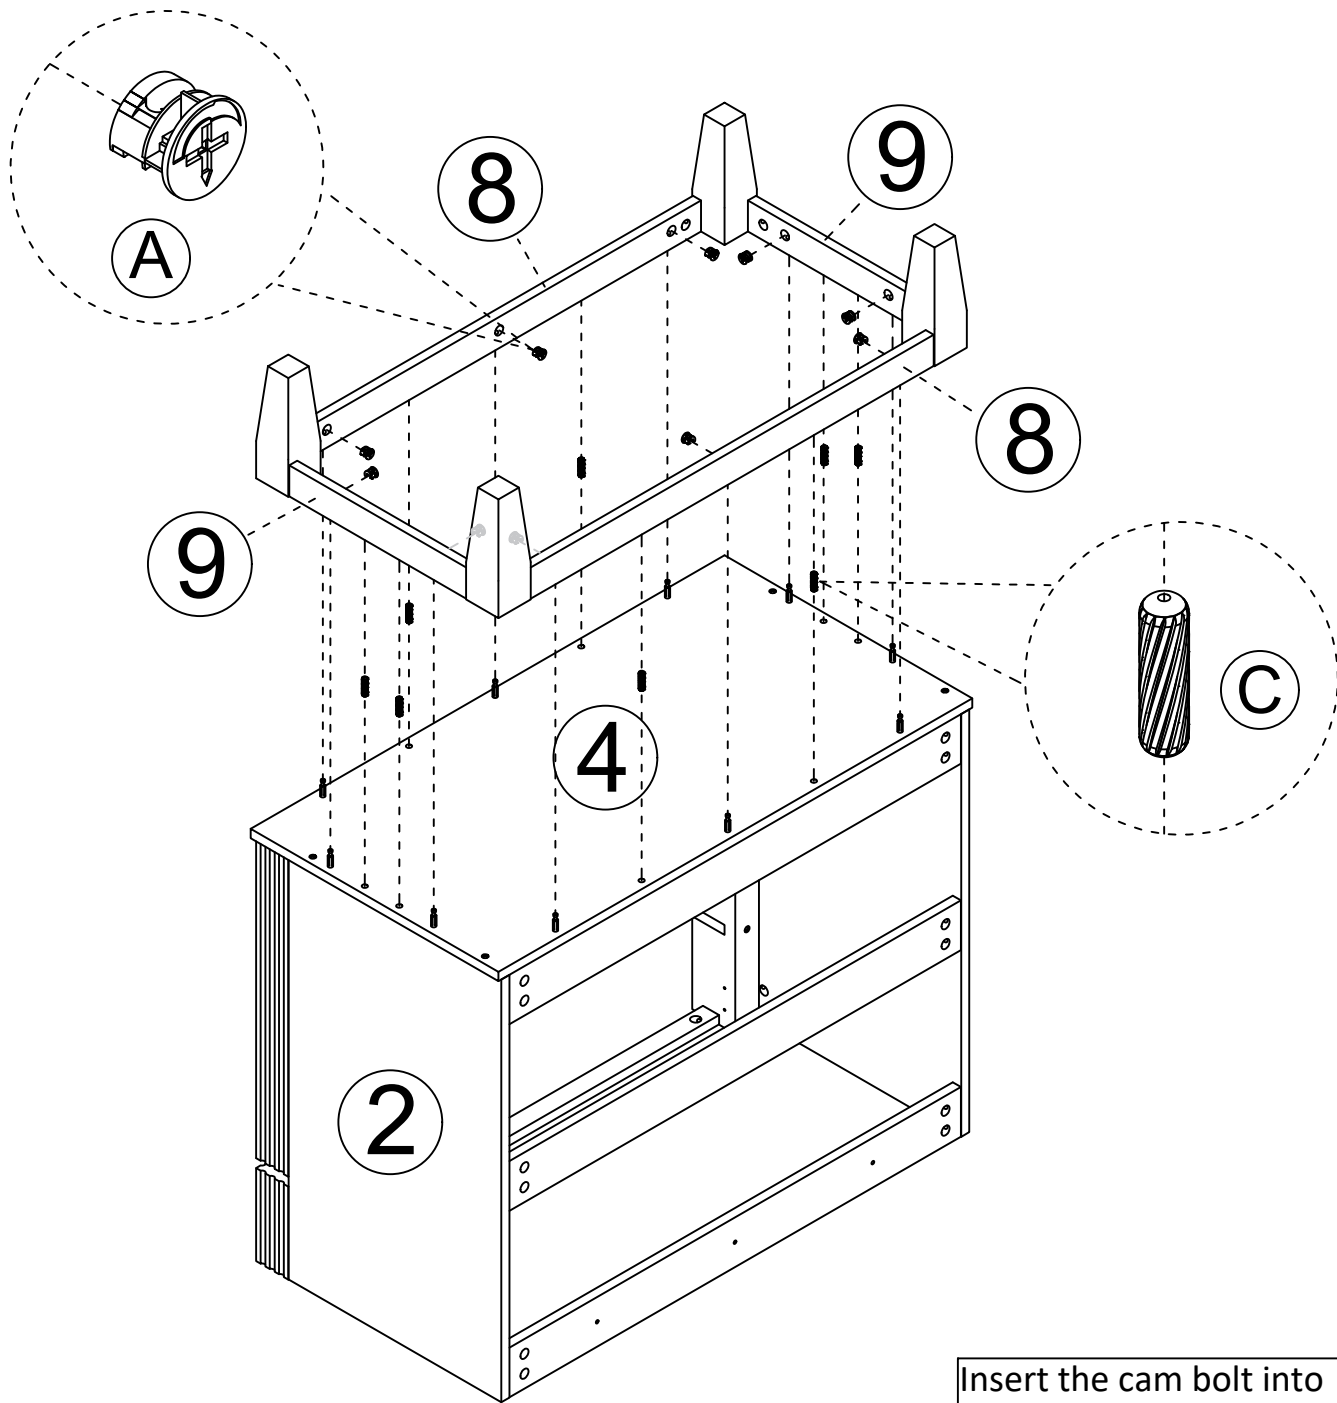




**Requires two people
to install.**

Insert the cam bolt into
the hole first, then insert
the cam lock and lock it.

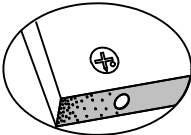


Proper orientation of CAM LOCK

STEP 12

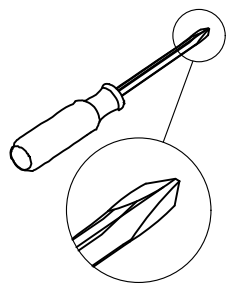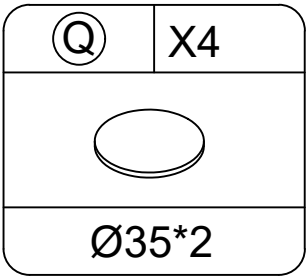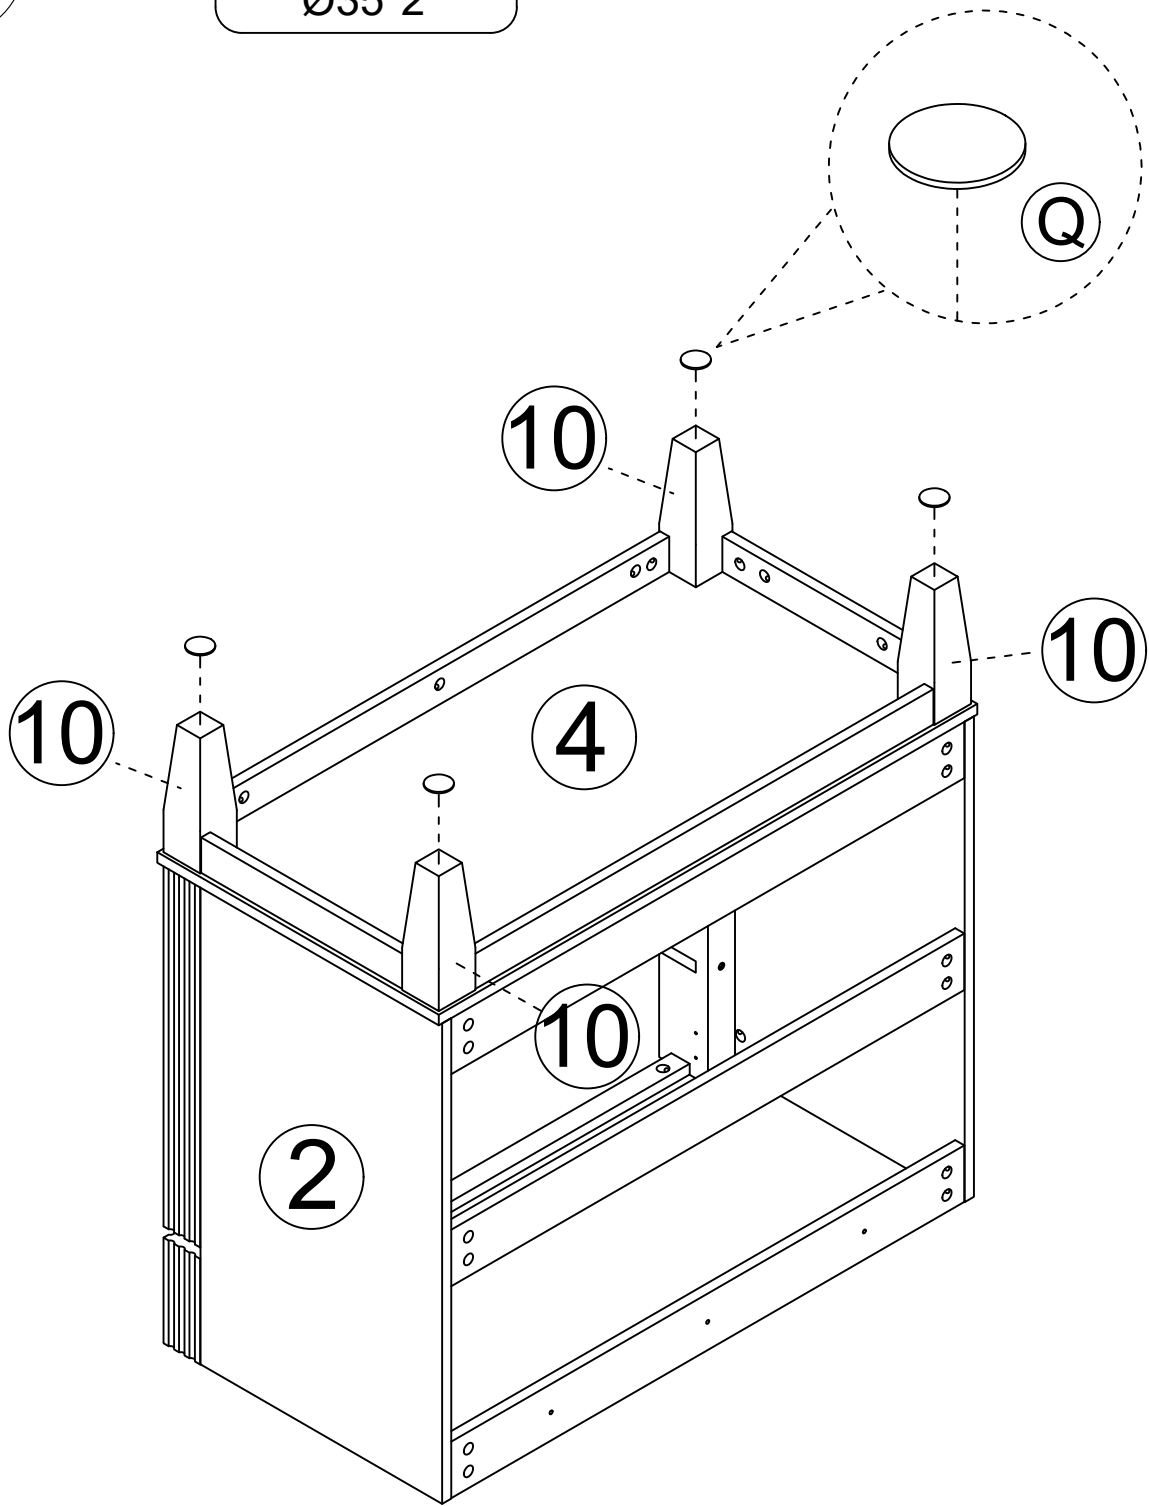



STEP 13

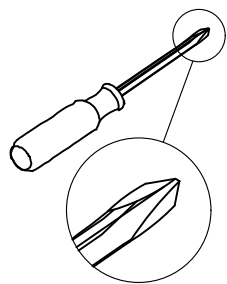


ⓓ	X2
	
Ø3.5*12	


ⓕ	X2
	
Ø4*35	


Ⓜ	X1
	
30*16*11	

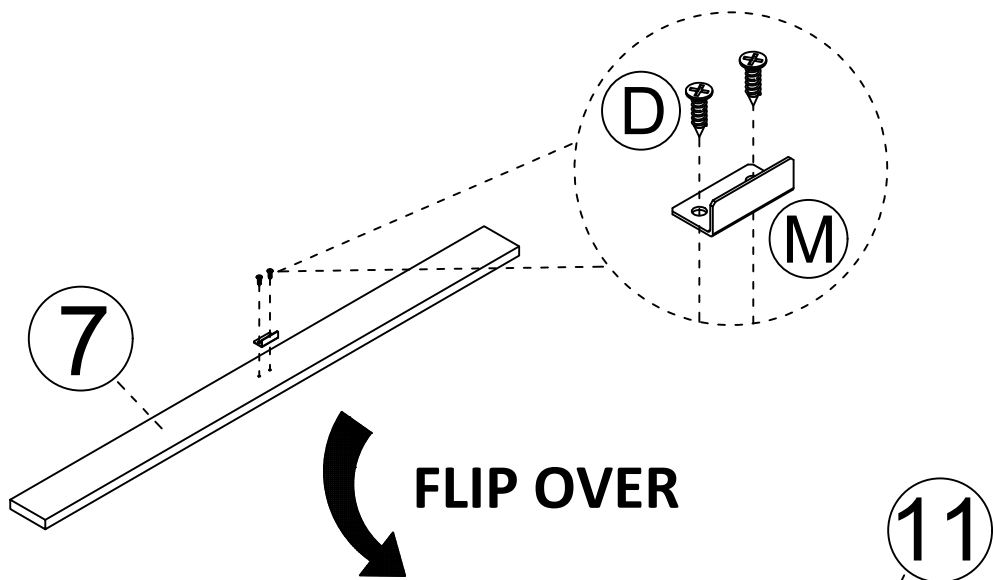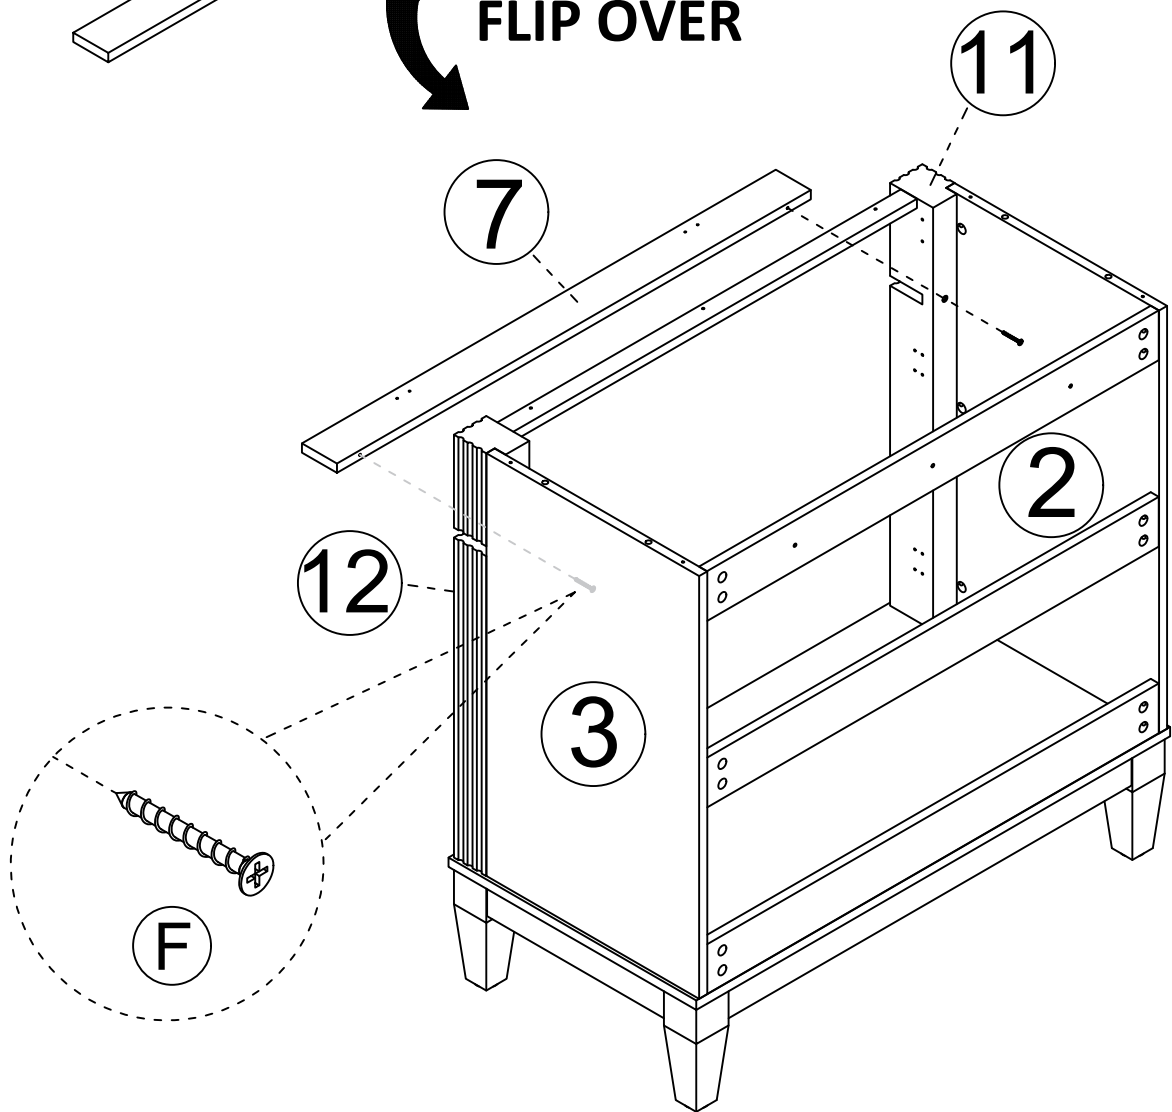




STEP 14

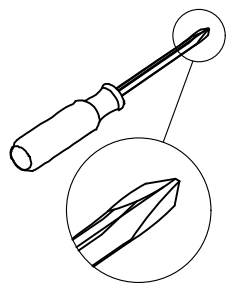


(F)	X4
	
Ø4*35	

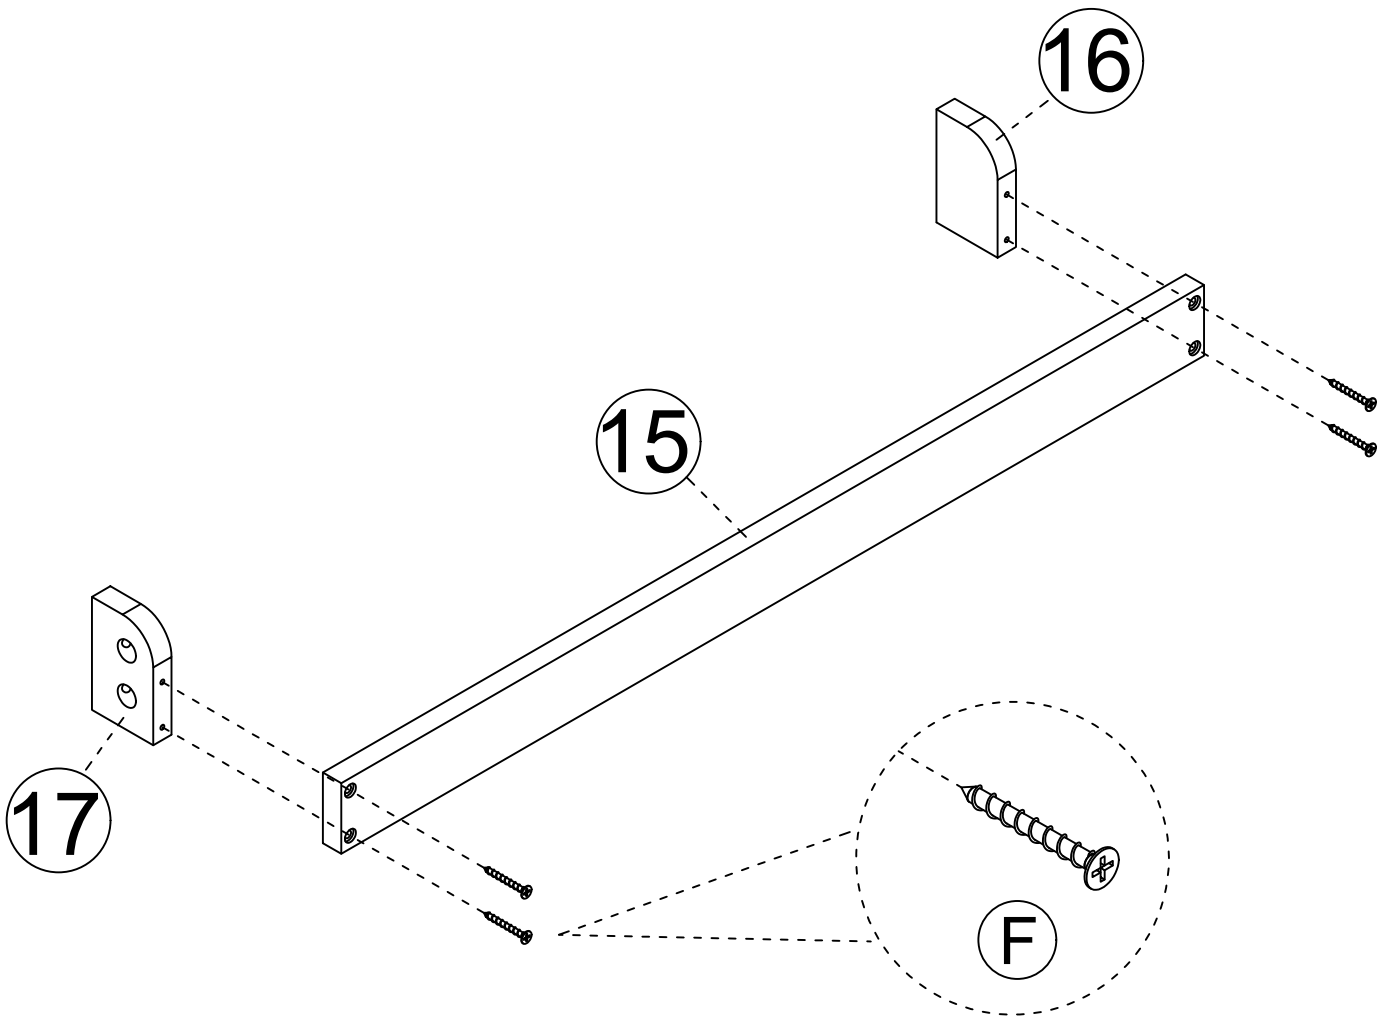


STEP 15

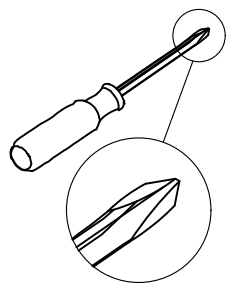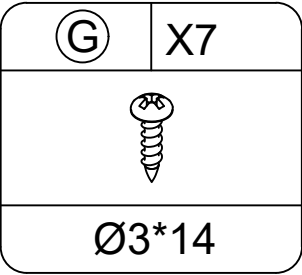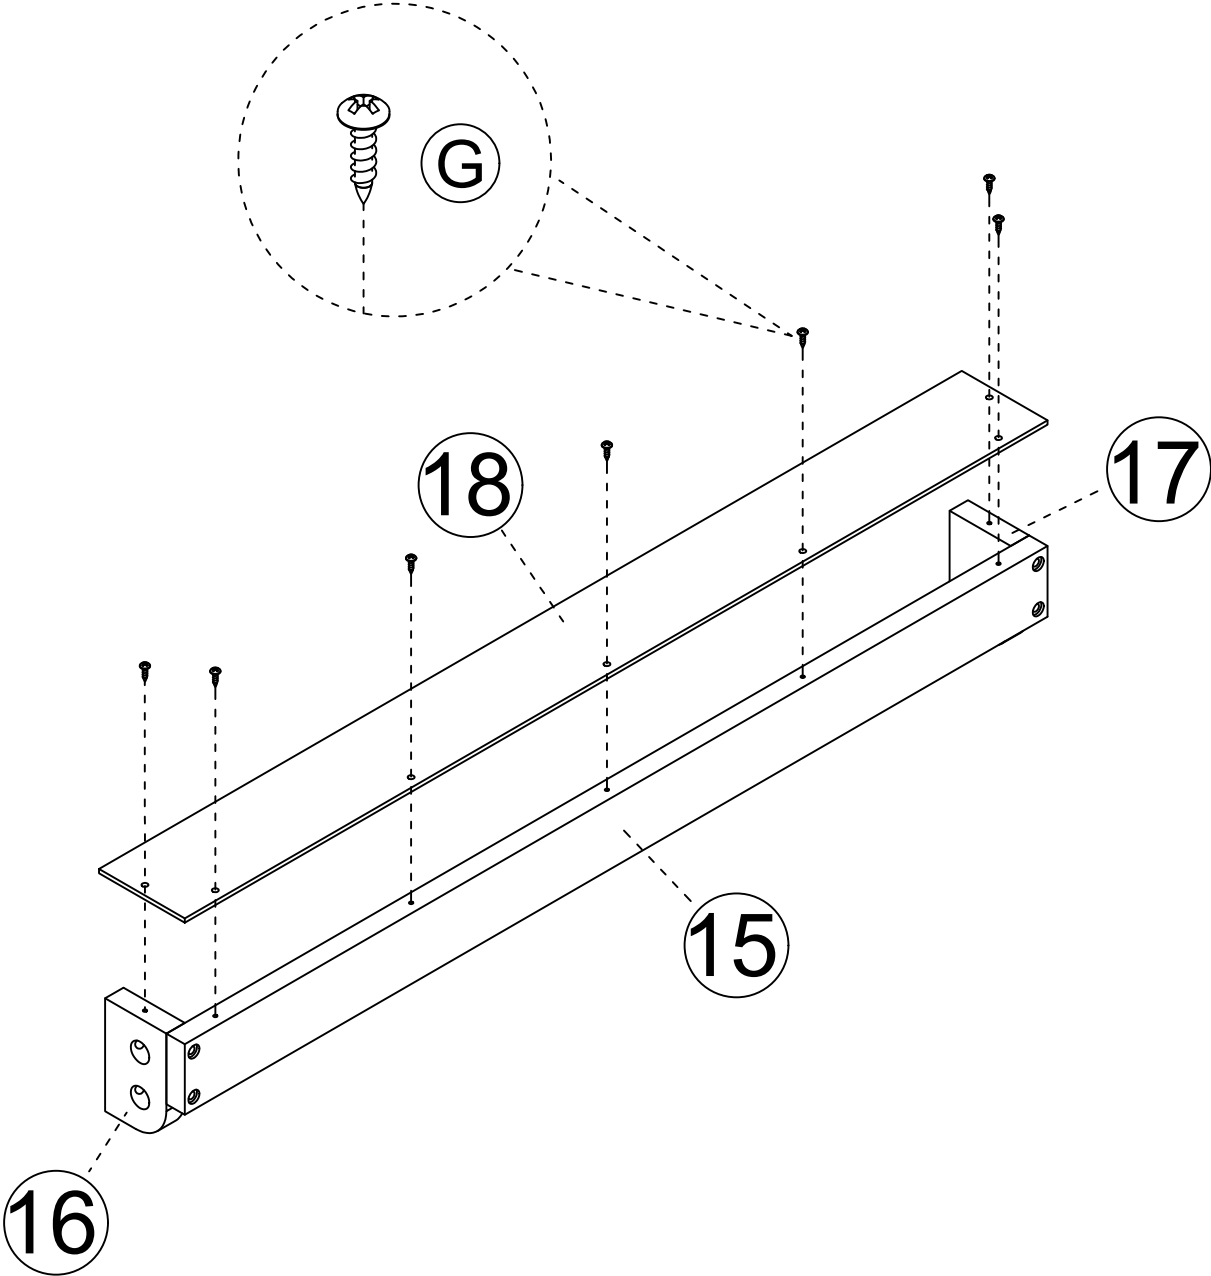

STEP 16

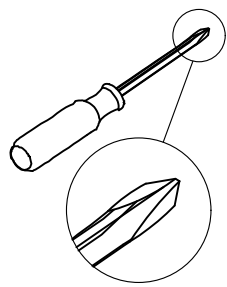

(B)	X4
	
Ø6.5*35	

(D)	X8
	
Ø3.5*12	


(H)	X1
	
M4*8	

(J)	X1
	
32*48	




(N)	X2
	
41*18*15	

(O)	X1
	
150	


(P)	X1
	
150	

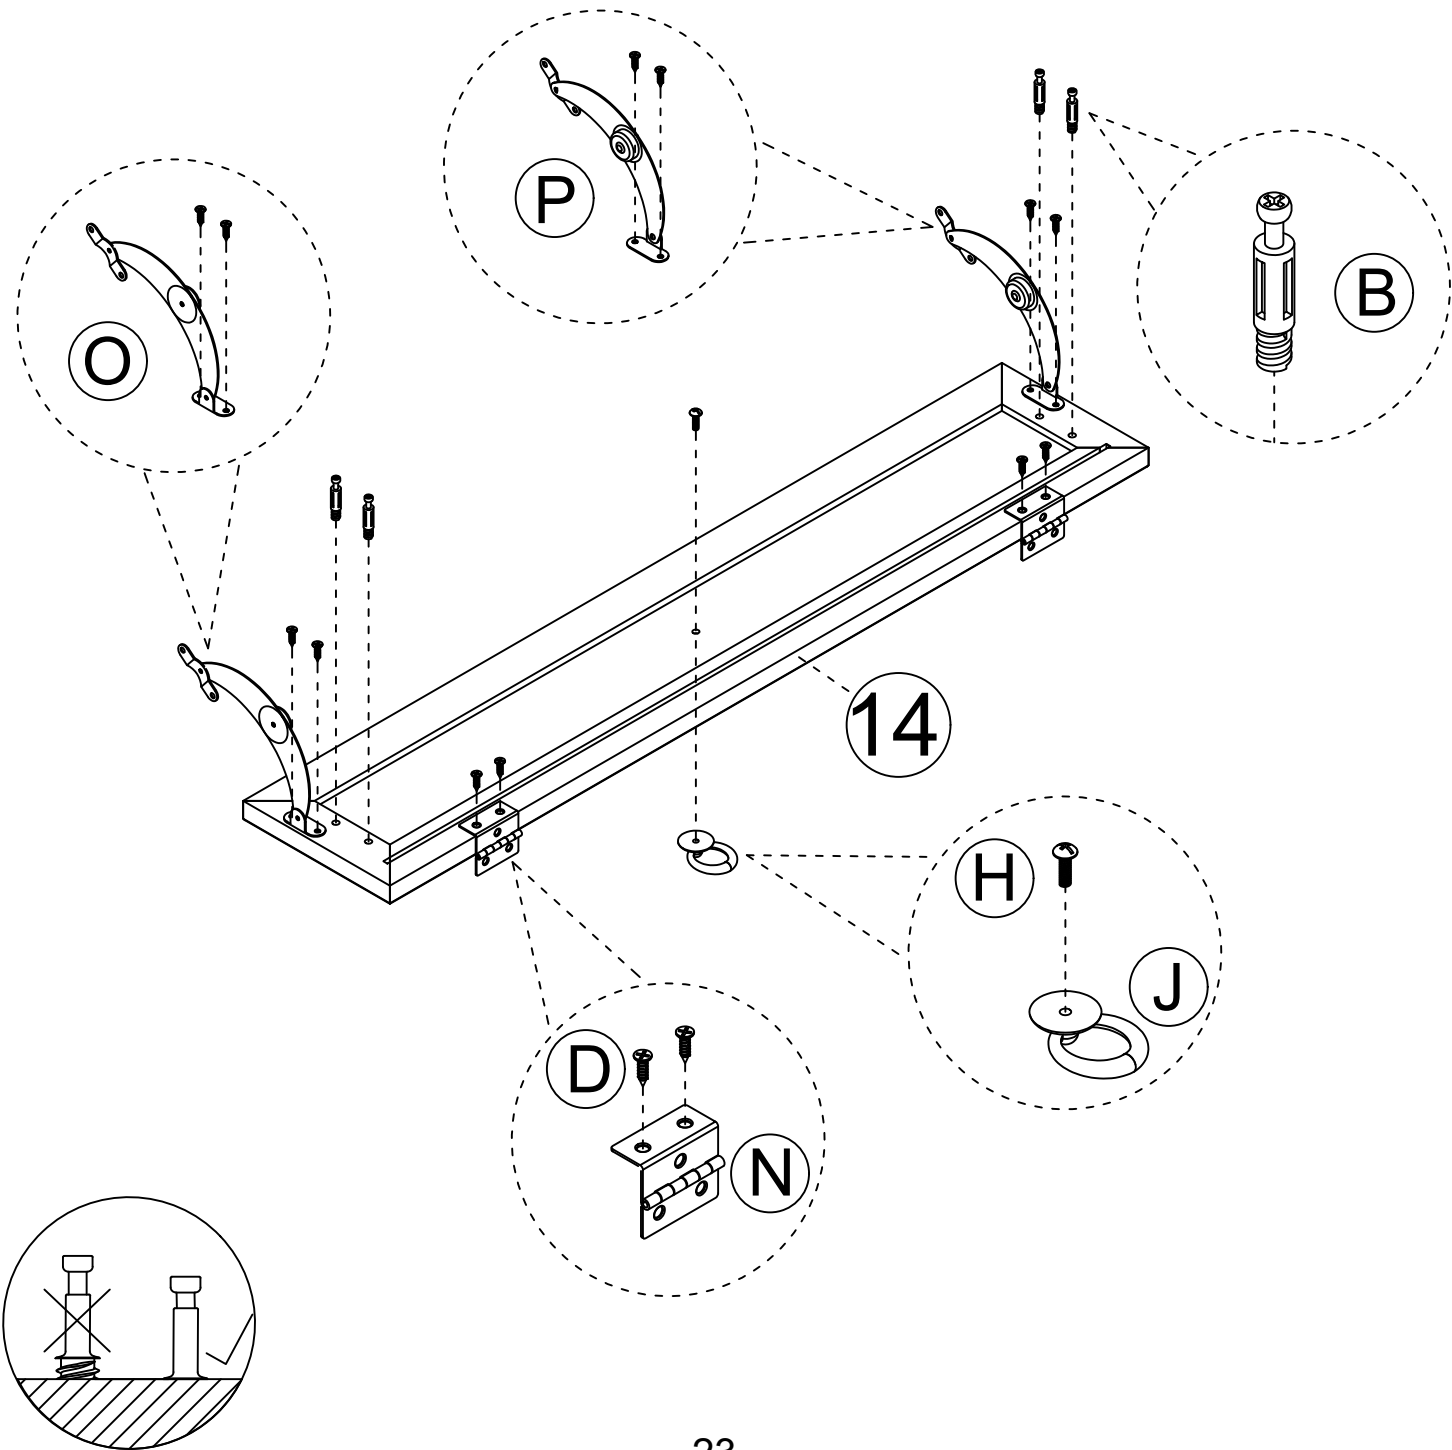

STEP 17

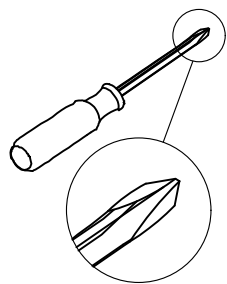
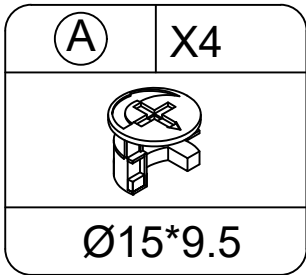
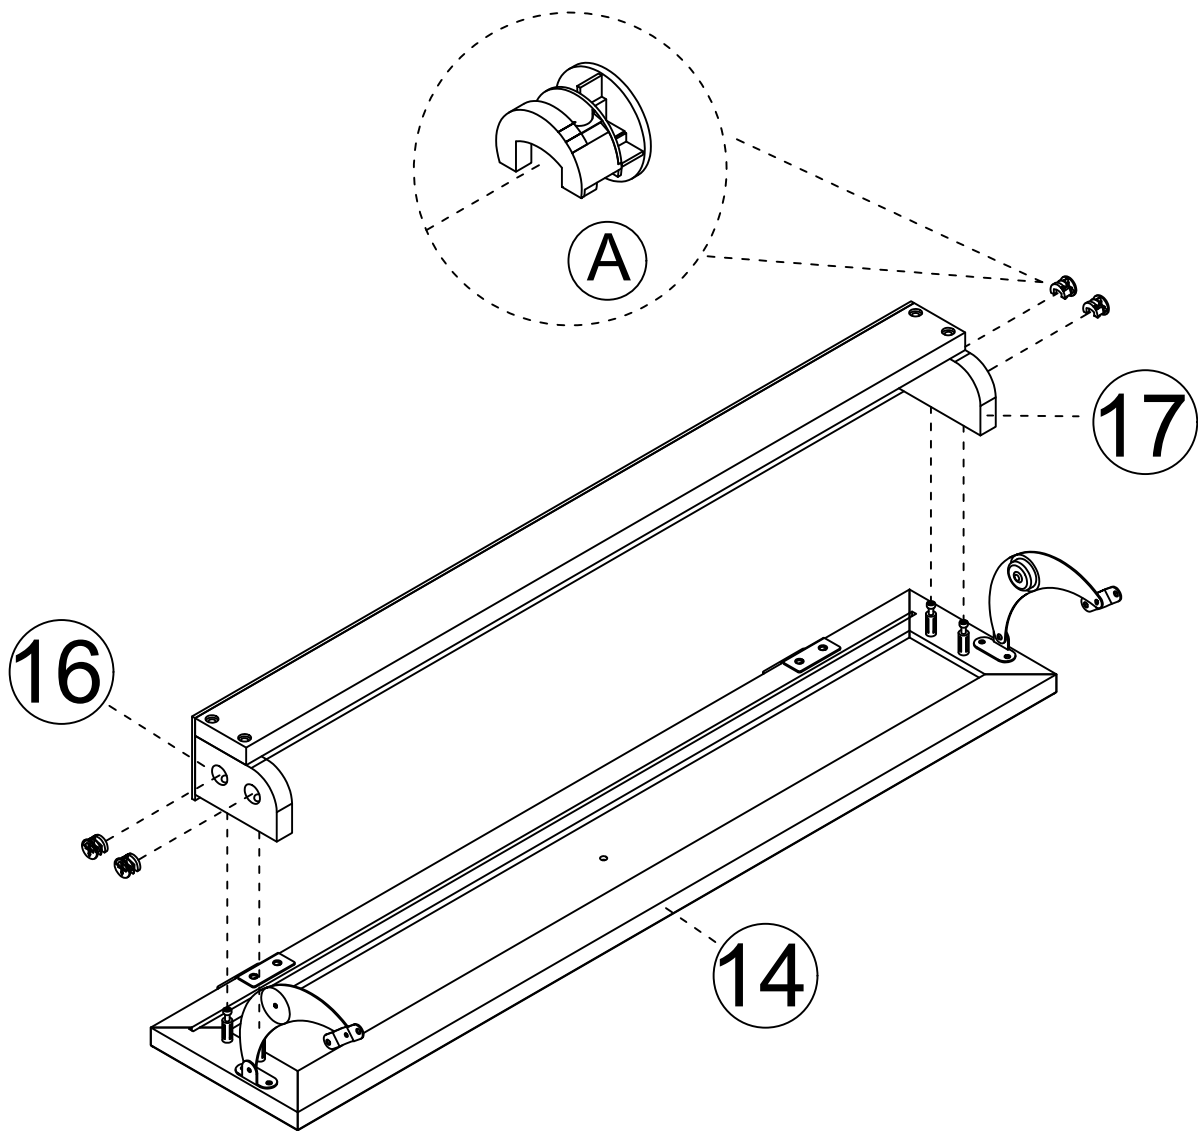


Insert the cam bolt into the hole first, then insert the cam lock and lock it.



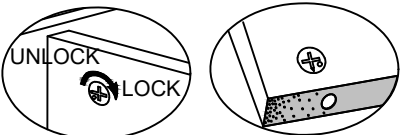


Proper orientation of CAM LOCK


STEP 18

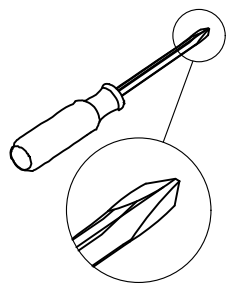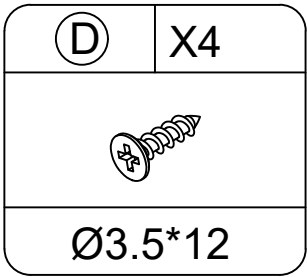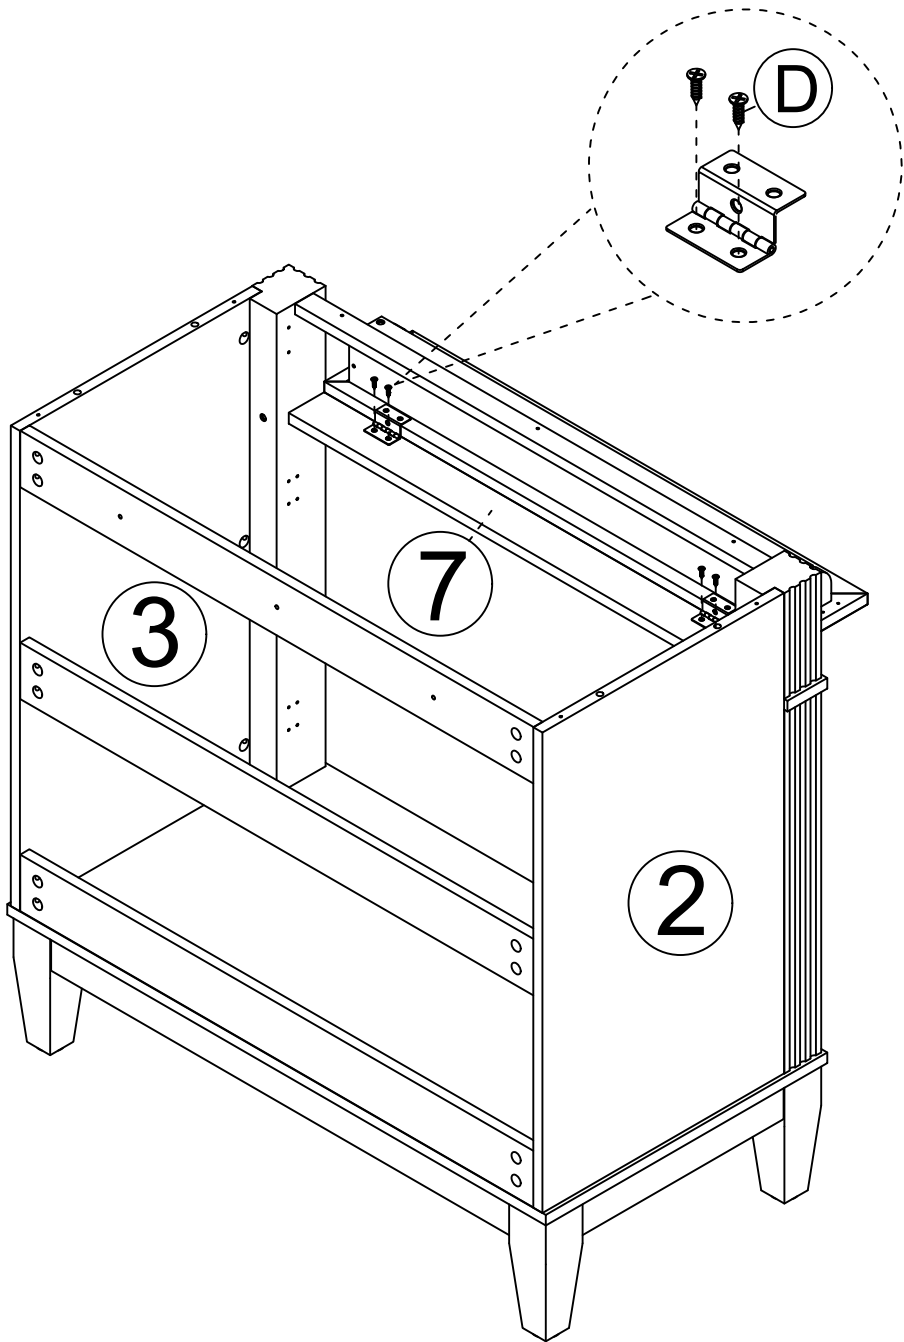



STEP 19

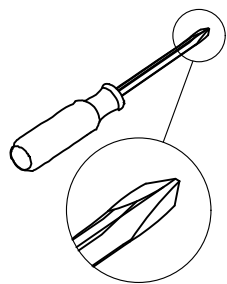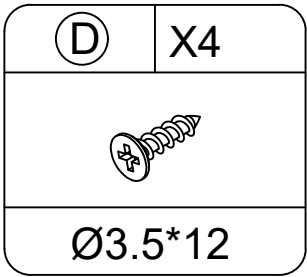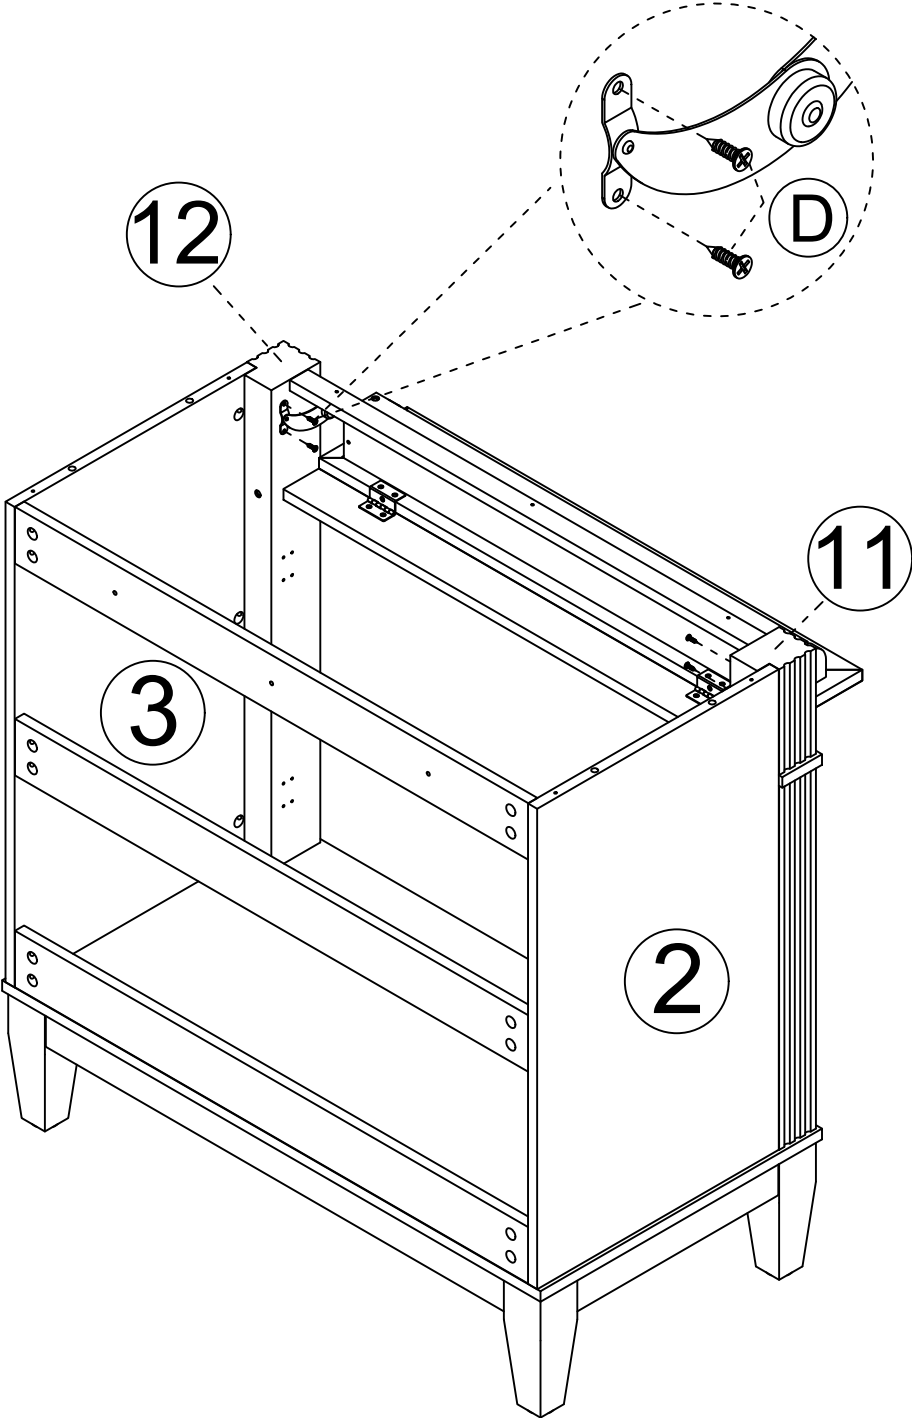



STEP 20

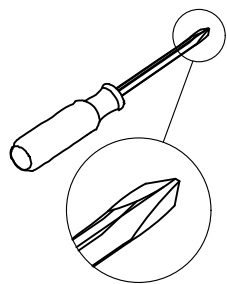


Ⓒ	X4
	
Ø8*30	

Ⓔ	X3
	
Ø4*30	

Ⓕ	X4
	
Ø4*35	

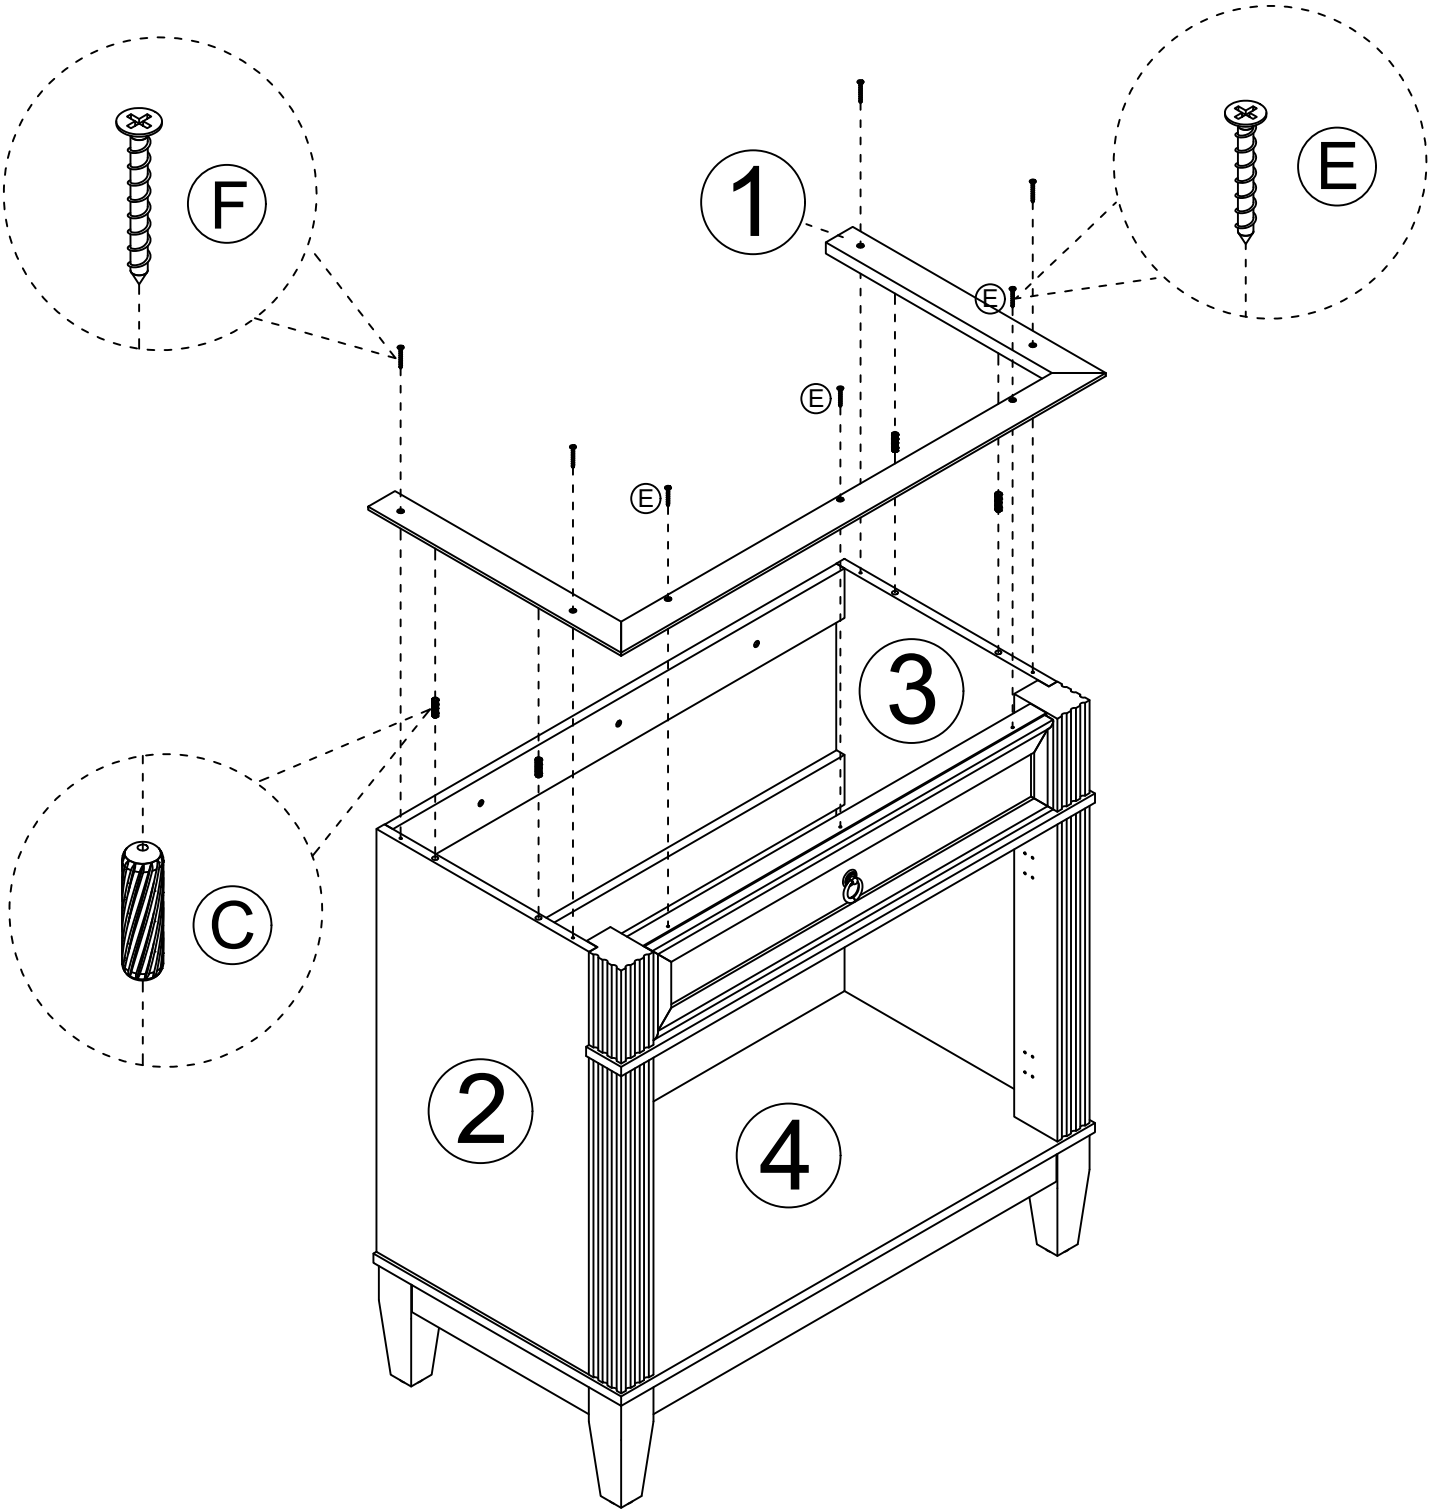


STEP 21

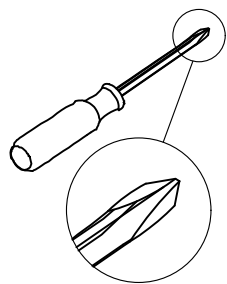


Ⓓ	X8
	
Ø3.5*12	

Ⓘ	X2
	
M4*20	


Ⓚ	X2
	
Ø37(Ø22)*28	

Ⓛ	X4
	
Ø35	

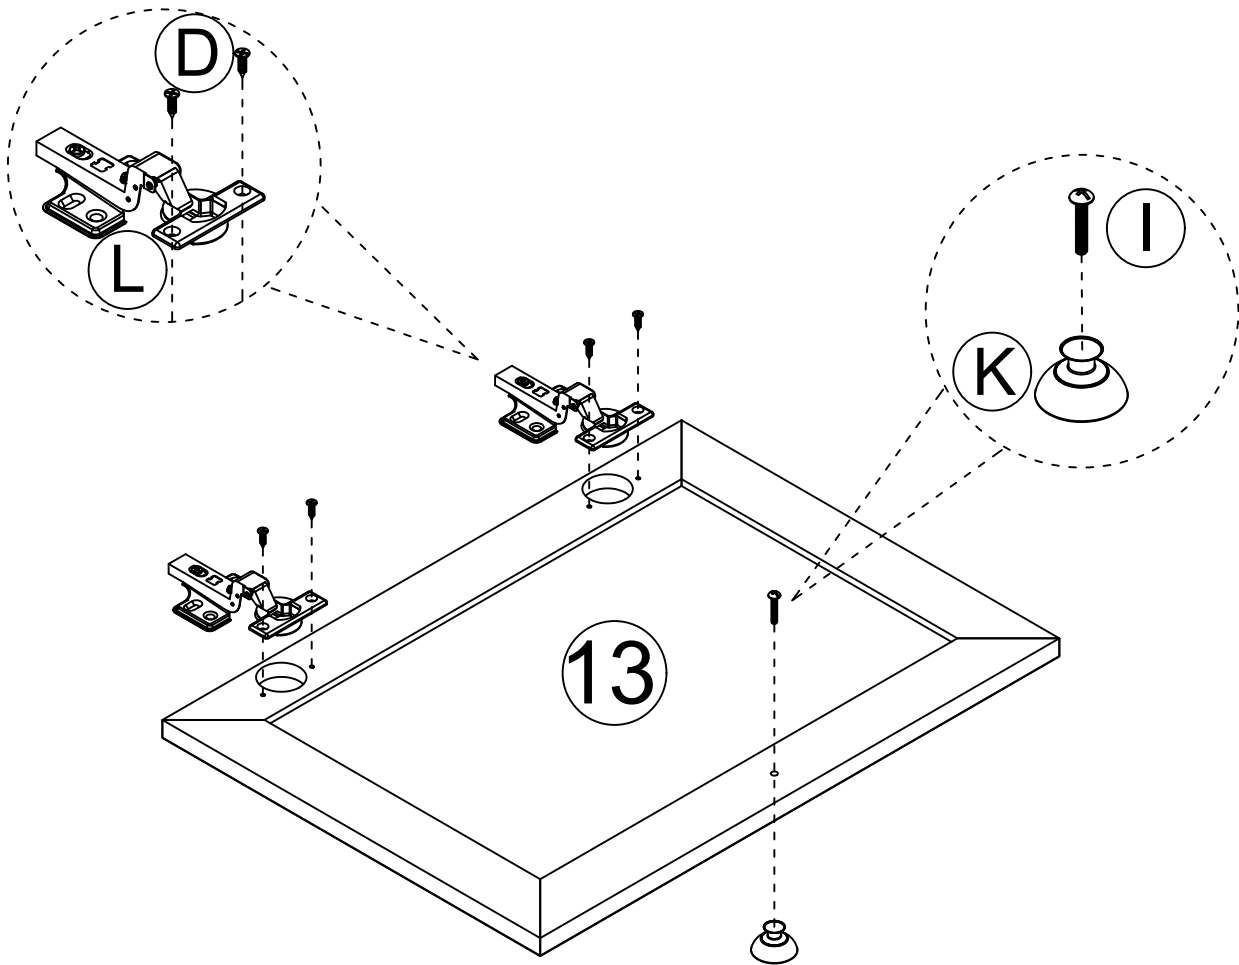


x2


STEP 22

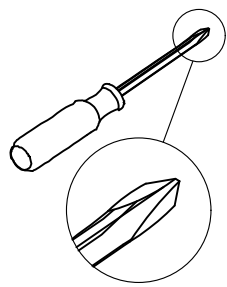

ⓓ	X16
	
Ø3.5*12	


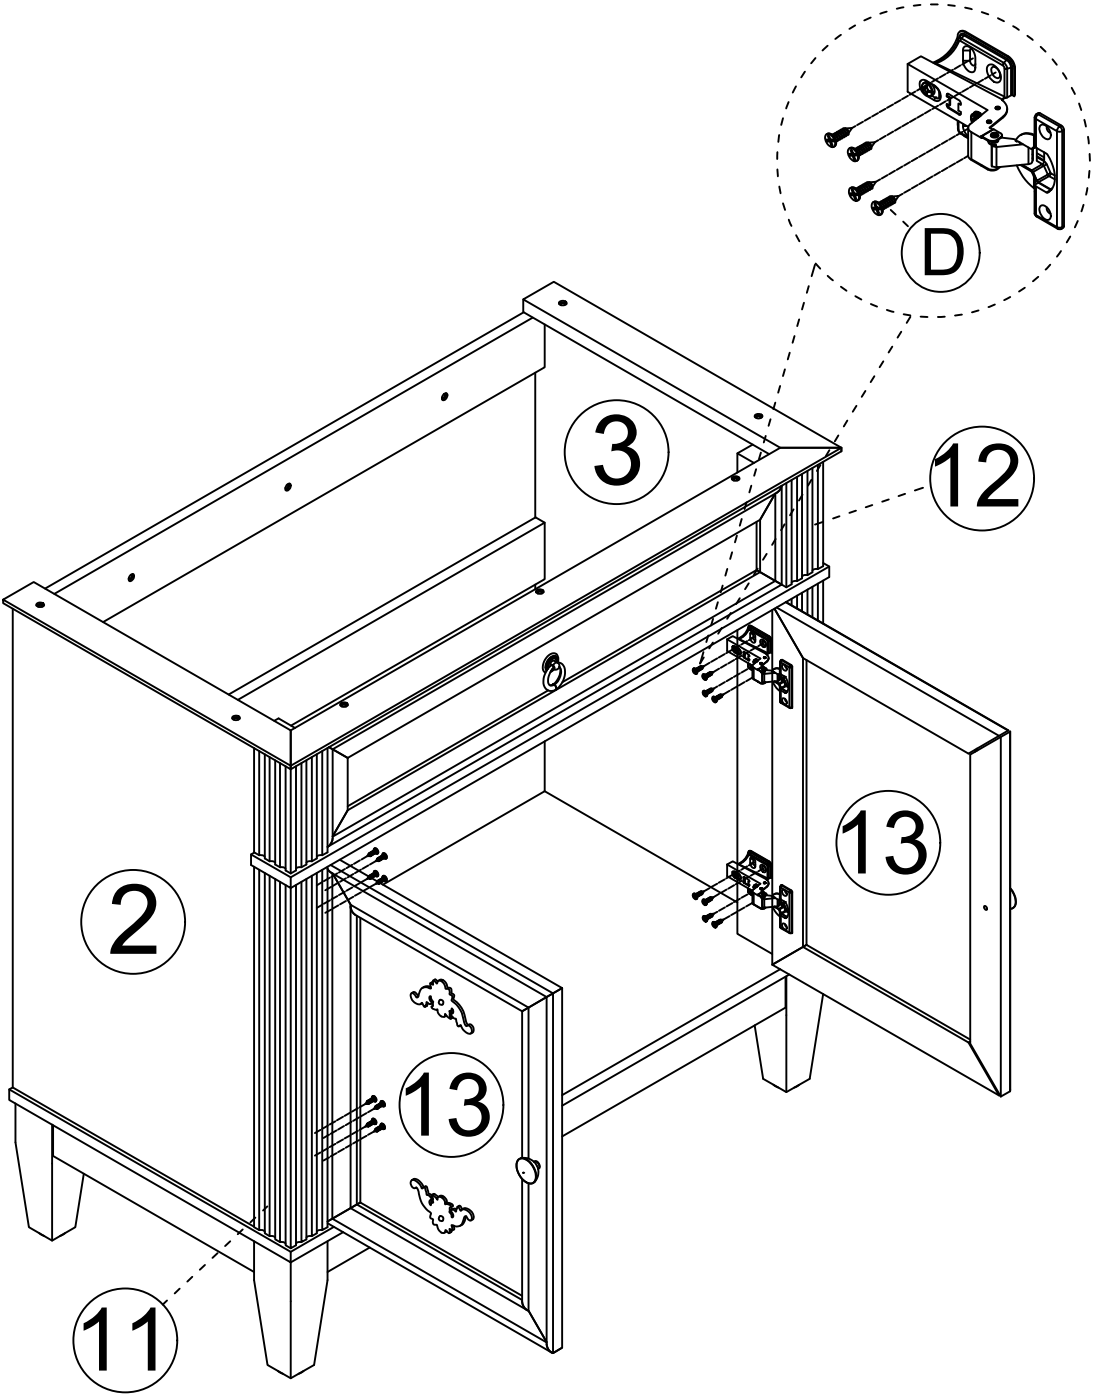


STEP 23

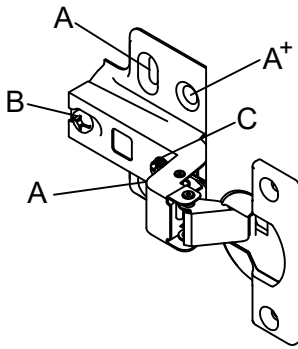



NOTE: If you encounter a gap or difficulty closing the door after installation, Please adjust the hinge according to the following operation.

The method is as follows:

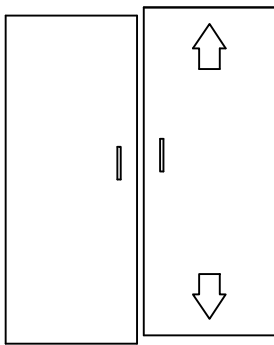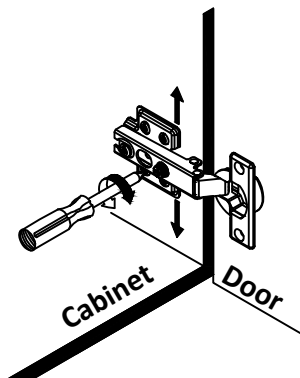



[How to adjust vertical height of the door]

- First remove the 2 screws "A+" on the hinge.
- Then loosen the 2 screws "A" on the hinge so that it can be adjusted up or down a few millimeters.
- Then tighten "A" and reinstall "A+".

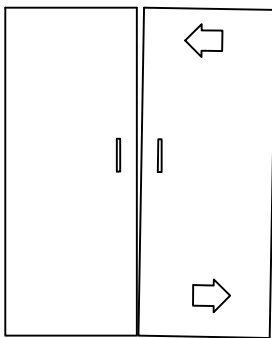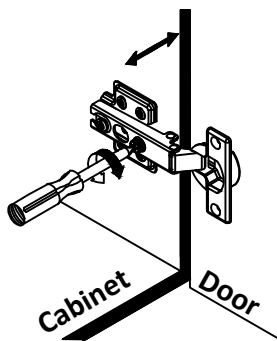

[How to adjust the level of the door]





- Turn screw "C" on hinge to adjust the level of the door.

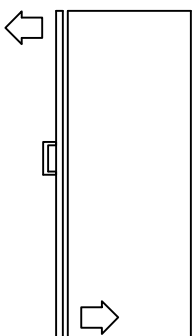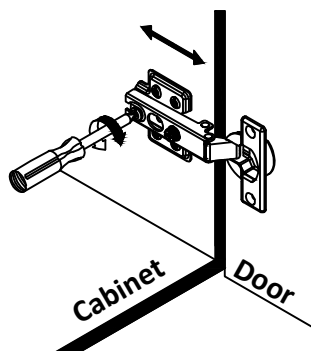

[How to adjust depth of the door]






- Loosen screw "B" and adjust the depth of the door.
- If screw "B" is loose, the depth of the door still cannot be adjusted. Simply loosen the screw "C" slightly to adjust the position of the door forward and backward.
- After adjusting the position, tighten screw "B" last.

STEP 24

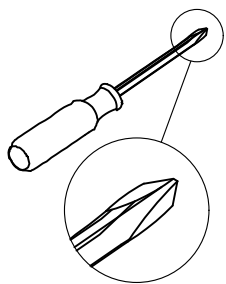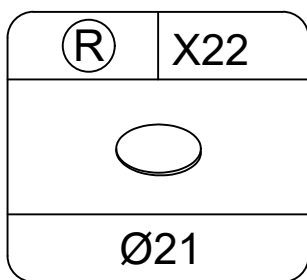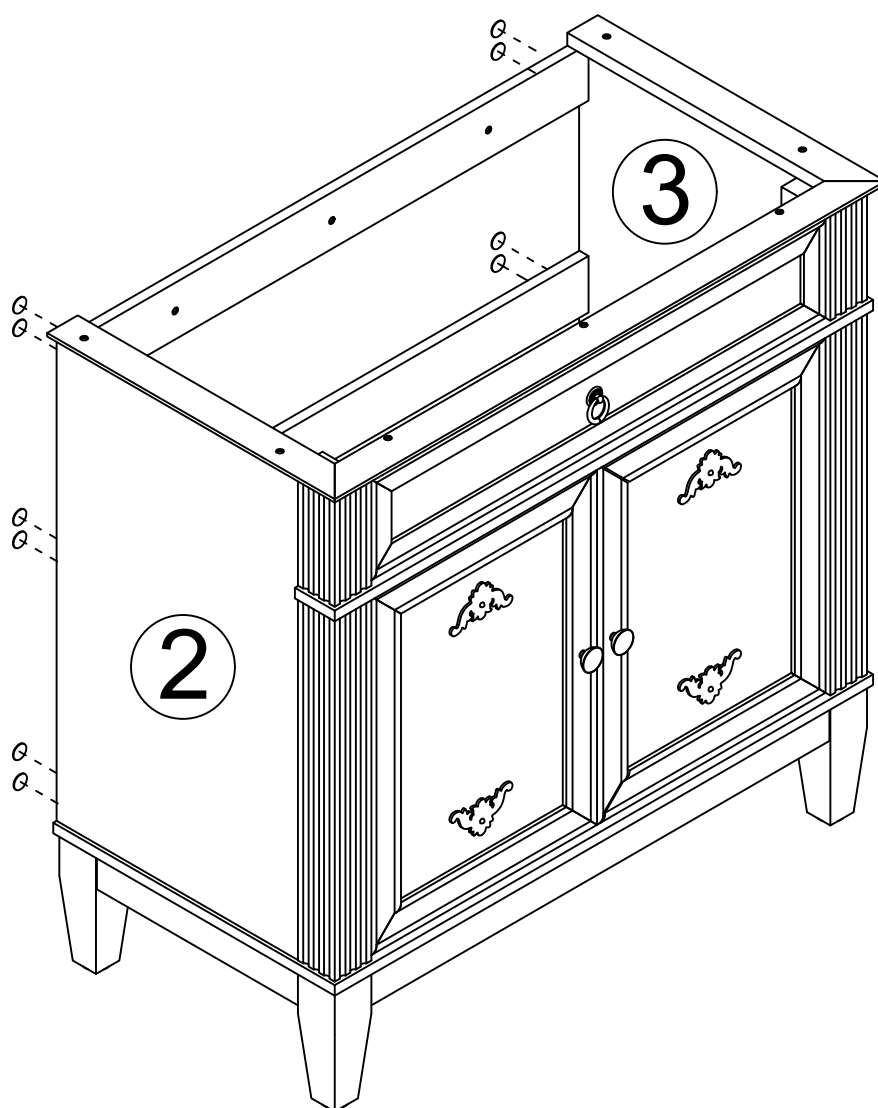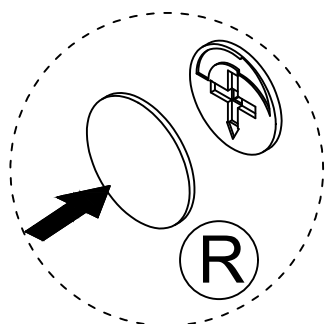


In order to make the product more beautiful, please paste hardware R on the exposed holes.

STEP 25

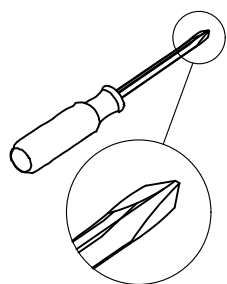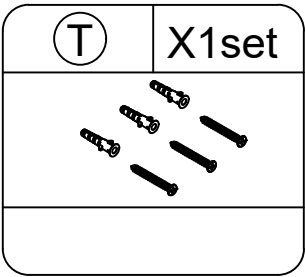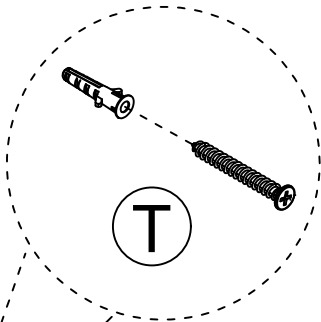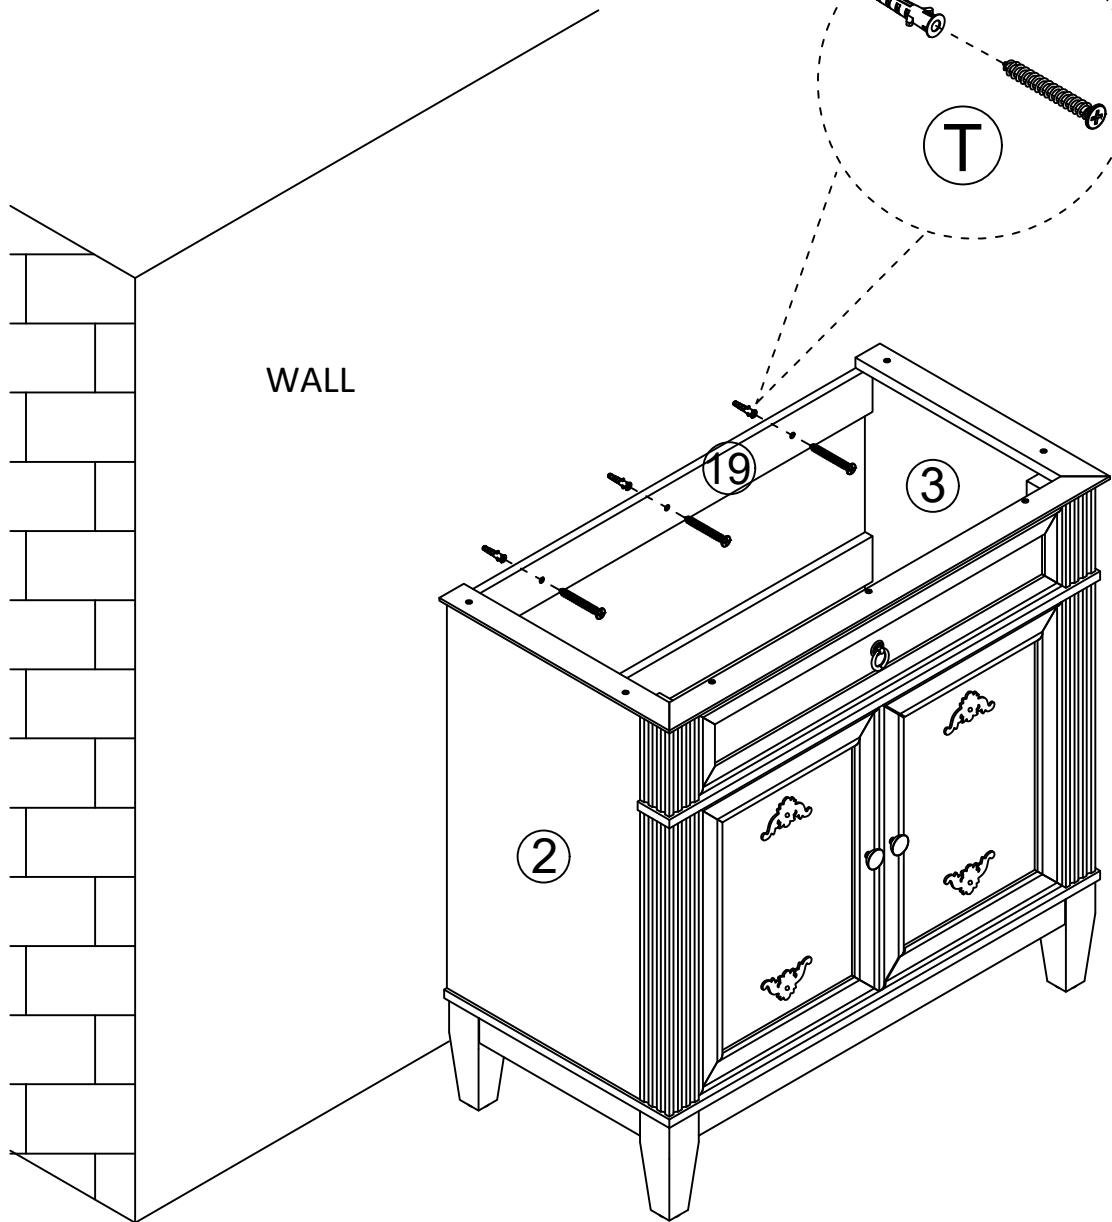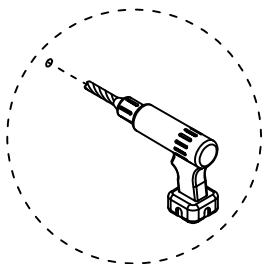


STEP1

Drill three Ø8
holes on the wall

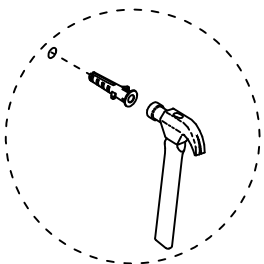

STEP2

Put three anchors
in the holes

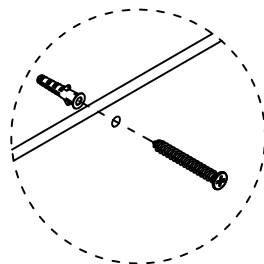

STEP3

Fix the device on the
wall by the long
screws