



GENEVA BED ASSEMBLY INSTRUCTION (FULL / QN)

ATTENTION: THERE IS 1 BOX OF HARDWARE
(INCLUDING BOLTS, WRENCH, SUPPORT LEG) PACKED
INSIDE BOX OF METAL SUPPORT.


P1 HEADBOARD (HB) 1PC	P2 FOOTBOARD (FB) 1PC	P3 SIDE RAIL 2PCS	P4 METAL TUBE 1PC	P5 SLAT 26PCS	P6 SUPPORT LEG 2 PCS	P7 WOODEN LEG 4PCS			
A WRENCH 5/16" 1PC	B BOLT 5/16" 1" 4PCS	C BOLT 5/16"x3.25" 8PCS	D BOLT 5/16"x2.5" 4PCS	E WRENCH 5/16" 1PC	F PLASTIC CLIPS 26 PCS	G PLASTIC CLIPS 13 PCS	H FLAT WASHER Ø5/16" 16 PCS	I SPRING WASHER Ø5/16" 16 PCS	J NUT M8*13MM 4 PCS

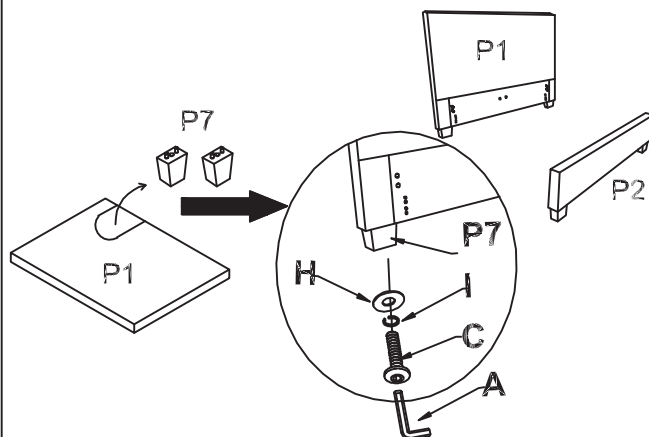


STEP 1: ASSEMBLE THE WOODEN LEGS TO THE BOTTOM OF
HEADBOARD AND FOOTBOARD.

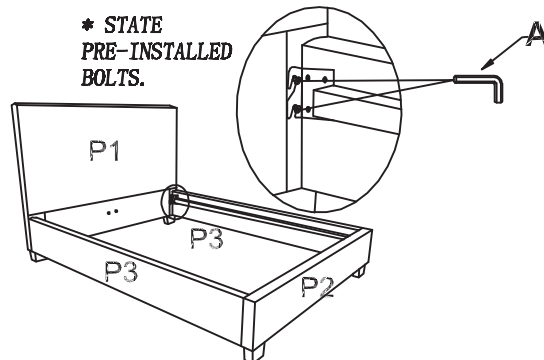


STEP 2: LOOSEN THE BOLTS OF HEADBOARD (P1) & FOOTBOARD (P2).
CONNECT THE SIDERAIL (P3) WITH HEADBOARD (P1) AND FOOTBOARD
(P2) BY HOOK, TIGHTEN THE PRE-INSTALLED BOLTS BY WRENCH (A).

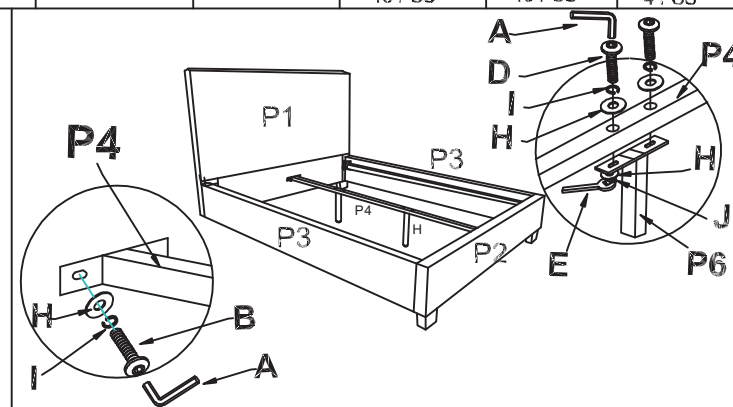


STEP 3: CONNECT THE METAL TUBE TO THE HEADBOARD & FOOTBOARD
WITH BOLT (B) BY WRENCH (A). ASSEMBLE THE SUPPORT LEG (H) TO
THE BOTTOM OF TUBE WITH BOLT (D) BY WRENCH (A).

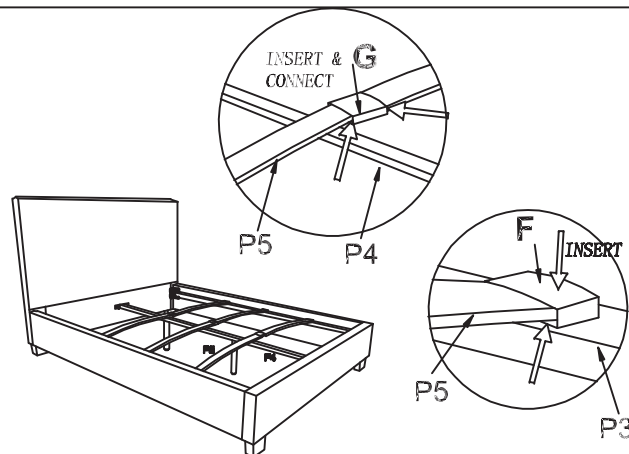

STEP 4: INSERT CLIPS (F) TO SIDE RAILS' TUBE. INSERT SLATS
TO THE CLIPS (F), THEN CONNECT THE TWO SIDE'S OF THE SLATS
TOGETHER BY CLIPS (G).

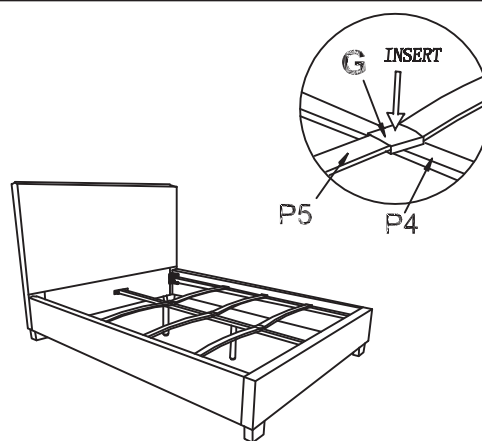

STEP 5: INSERT CLIPS (G) INTO THE MIDDLE TUBE OF THE
REMAINING SLATS TO THE BED FOUNDATION.

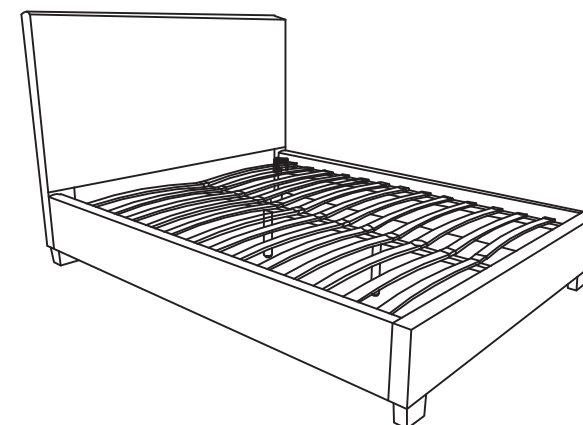

ASSEMBLY COMPLETE.