
ASSEMBLY INSTRUCTIONS


MOD-7120

V1.10.25.23

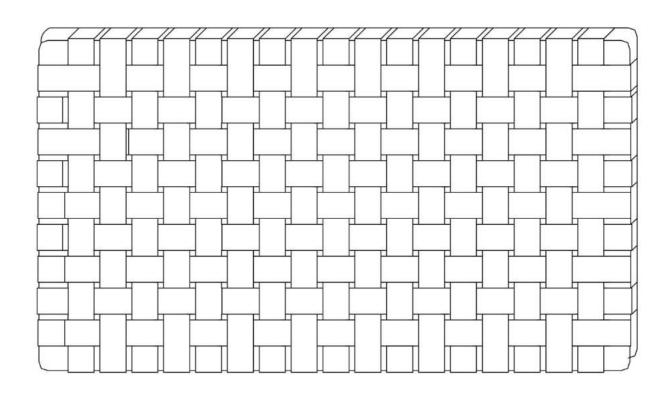



Let's get started!





Read through all of the instructions before starting



Approx. 30 minutes assembly time



2 people recommended for assembly



Care instructions are listed in the last step of this manual



Make sure you have all parts and components before discarding any packing materials **Only use hand tools to assemble this item.** Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

Α	Headboard		х1
---	-----------	--	----

Provided hardware:

For Headboard

1		PVC Wall Plug	х4
2	@mm	Wood Screw M4 x 38mm	х4
3	(8.0)	Wood - 21 x 40 x 80mm	x2

A

What you need:

Phillips (+) Phillips Head Screwdriver

You may also need:

- + Power Drill
- + Level




Step 1

HARDWARE


1 PVC Wall Plug x4

2 Wood Screw M4 x 38mm x4


3 Wood - 21 x 40 x 80mm x2

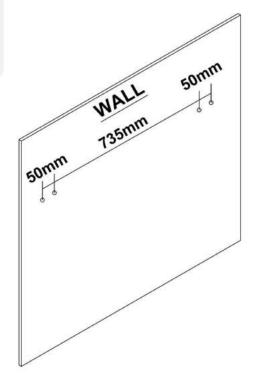




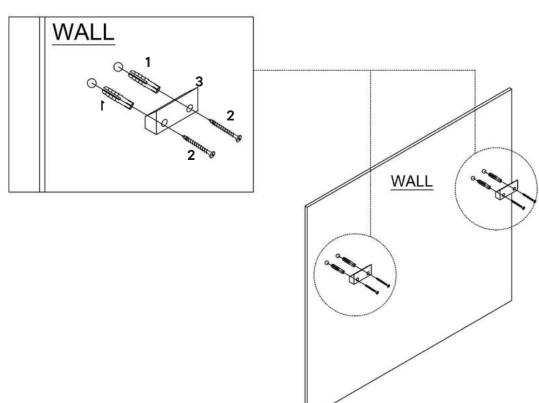

Step 2

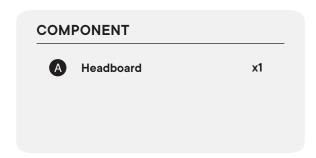

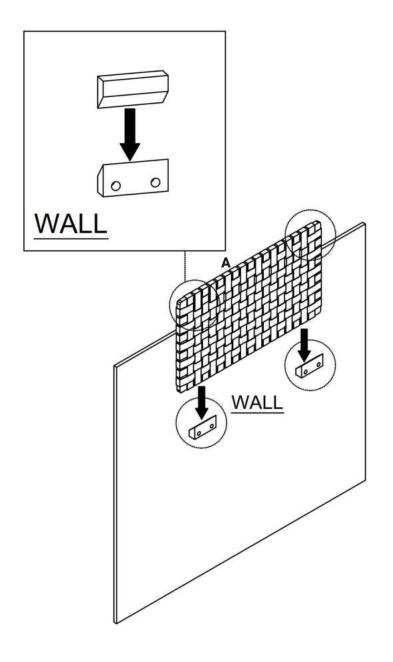

Great job!

Headboard assembly is complete



CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

CONNECT WITH US! (6) (7)







Tag us @modway_furniture and #modway for a chance to be featured.

