


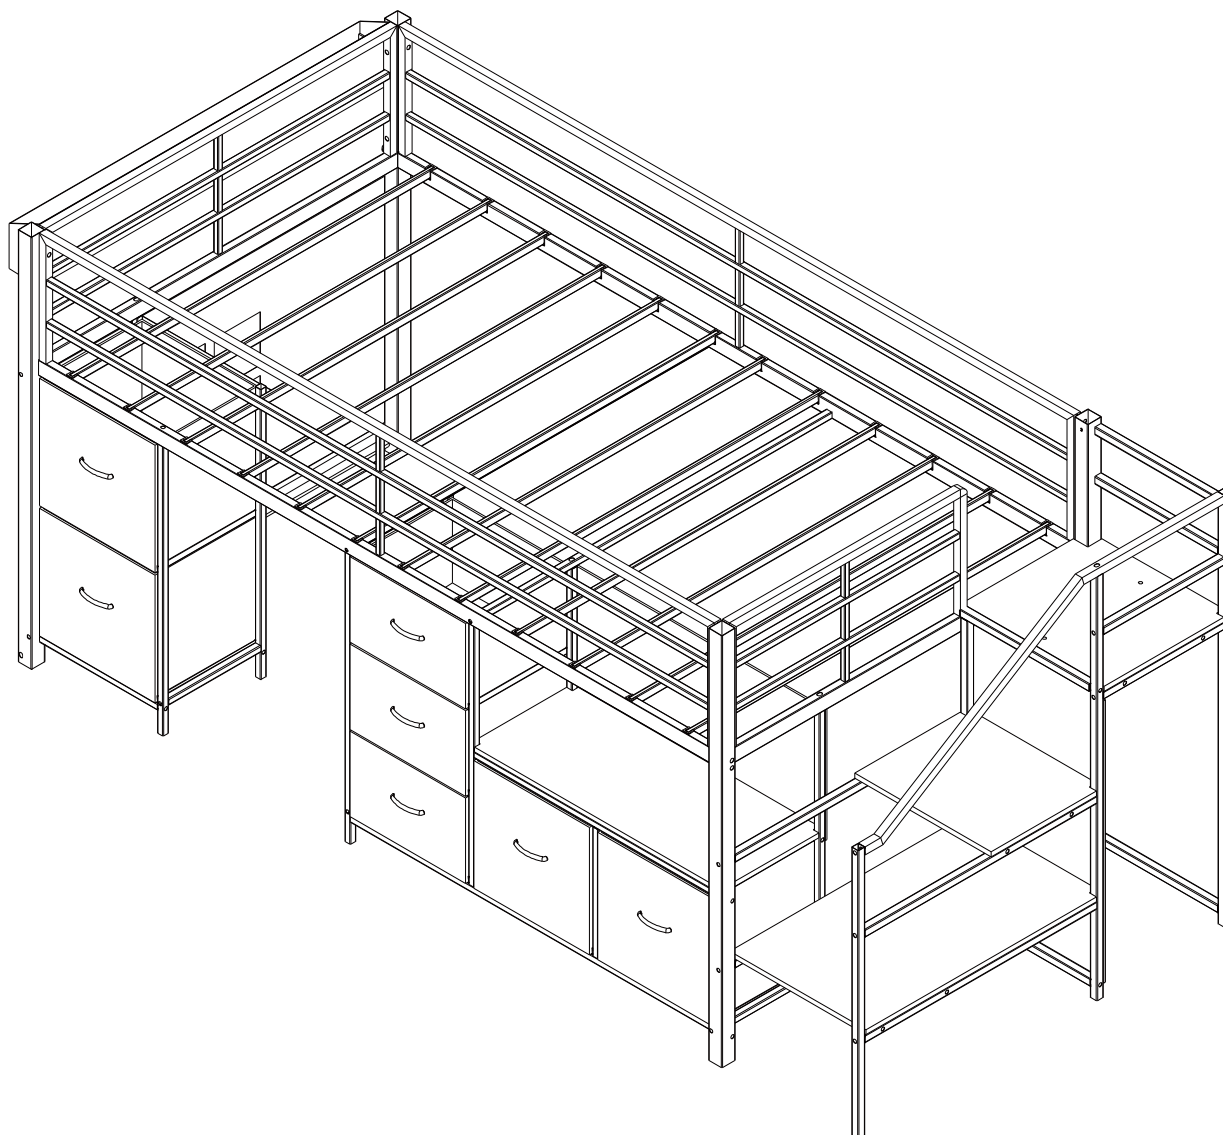




If the wall nails are not locked, there is a risk of the bed overturning

CAUTION: When tightening the screws, tighten sequentially. Do not tighten any screws fully and then towards the next one. When every part is OK, then tighten all the screws.



AJ-DJ505161





Version : 1.0

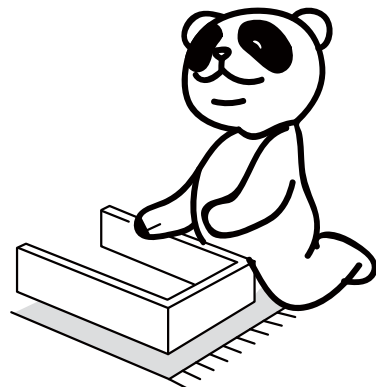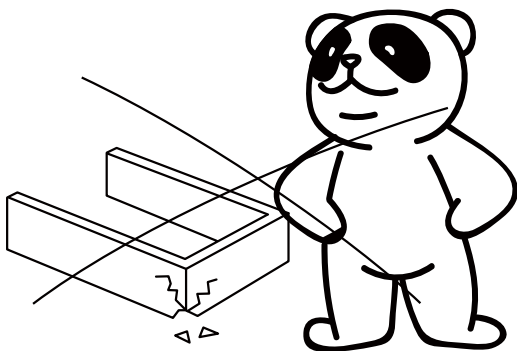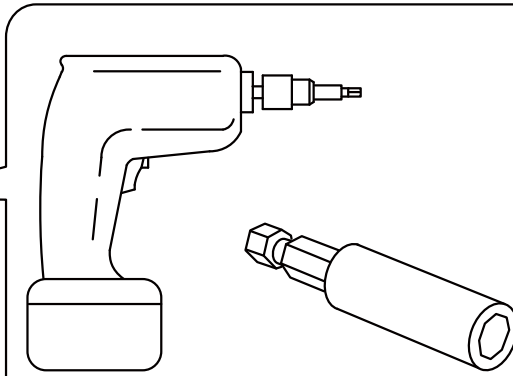

Violent installation is prohibited

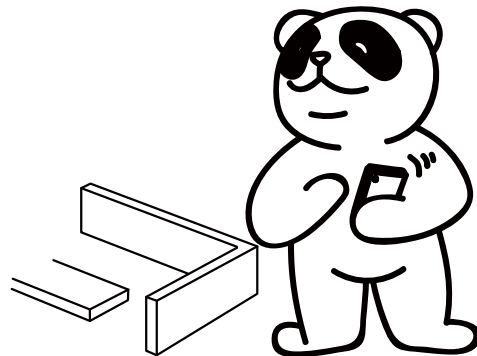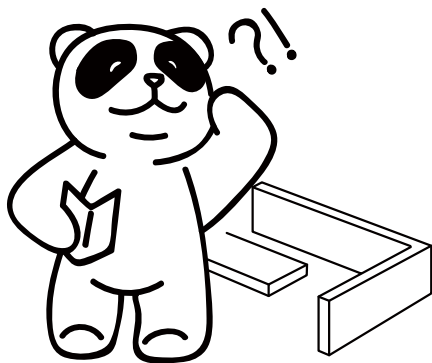


Please call if you need help

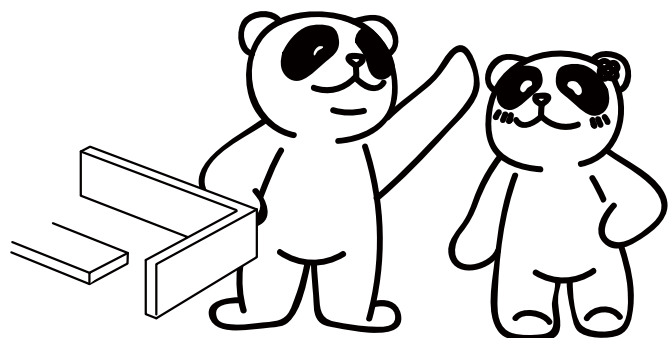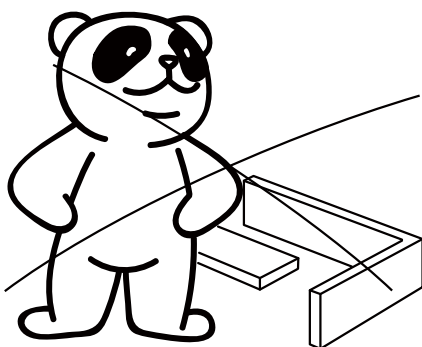


Multi-person cooperation is recommended


Assembly Instruction

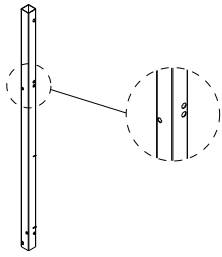


1
X1

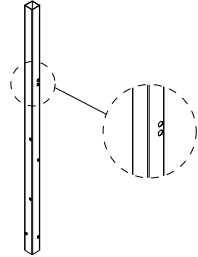

2
X1

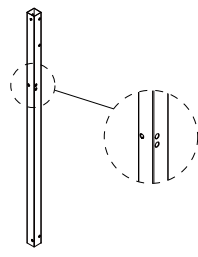

3
X1

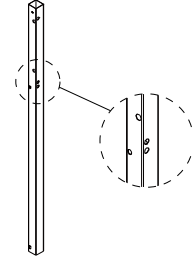

4
X1




5
X1




6
X1




7
X1

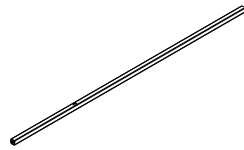


8
X2

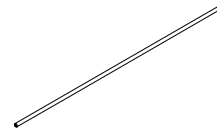


9
X2

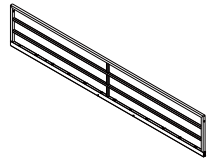


10
X1

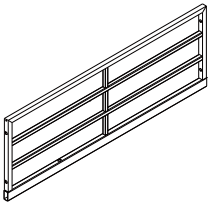


11
X1

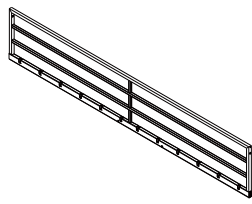


12
X1

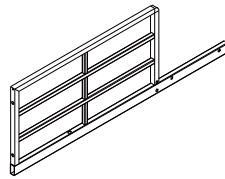


13
X1

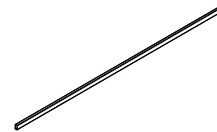


14
X12



15
X4

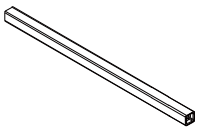

16
X2

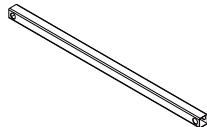

17
X1



18
X1



19
X1



20
X1



21
X1



22
X1



23
X1



24
X1




25
X1


Assembly Instruction




26
X2

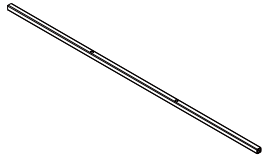


27
X2

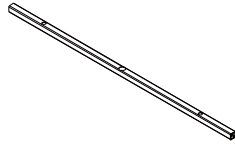


28
X2

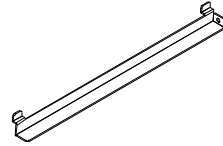


29
X7

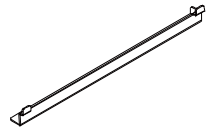


30
X7



31
X2

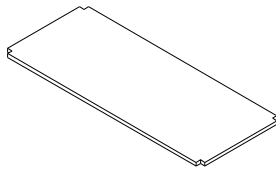


32
X1

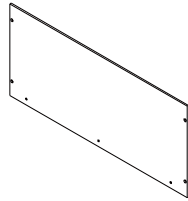


33
X1




34
X1

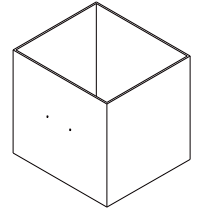


35
X4

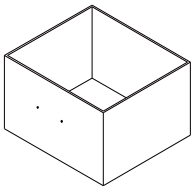


36
X3

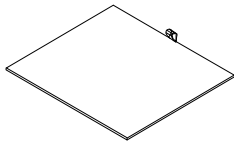


37
X7




38
X7

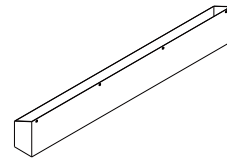


39
X1

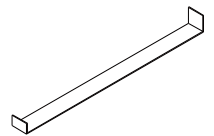


40
X1

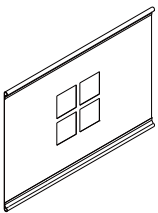


41
X1

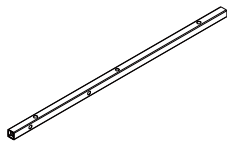


42
X2

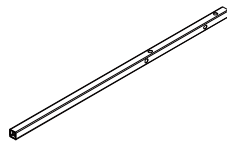


43
X2




44
X1




45
X1

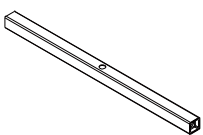


46
X4

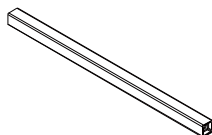


47
X1

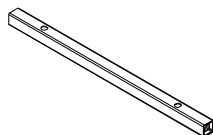

48
X2

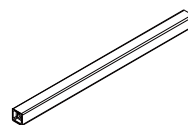

49
X1

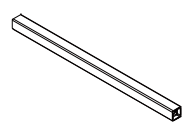


50
X4


Assembly Instruction




51
X1

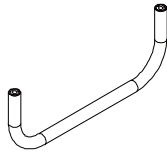


52
X1

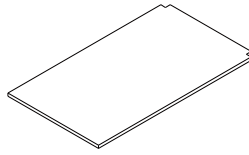


53
X1

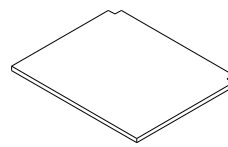

54
X1

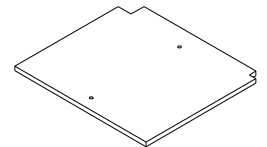

55
X1




56
X1



57
X2

Hardware parts 2




Q
Ø4*10
X14

Hardware parts 1



A
M8*55
X8



B
M8*35
X10



C
M6*55
X19



D
M6*45
X4



E
M6*35
X53



F
M6*28
X20



G
M6*20
X4



H
M6*15
X14



I
M6*10
X4



J
Ø5*35
X5



K
M6*50
X2



L
S4
X1



M
S3
X1



N
S10,S13
X1




O
X1




P
M6*28
X2

Assembly Instruction


LED light strip electronic accessories list

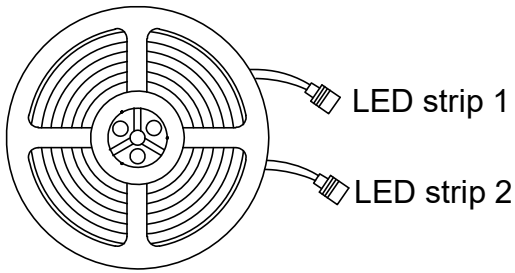

x1
light bar

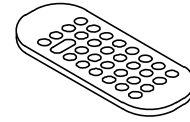


x1
Remote control

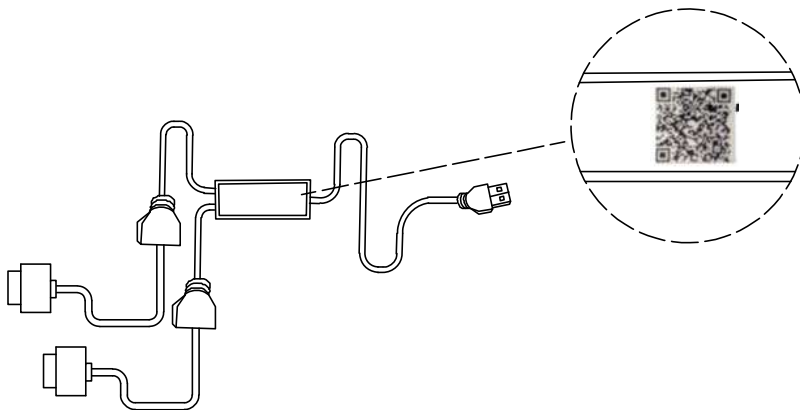


x1
Controller wire

There is a two-dimensional code at the position of the power line. Scanning can download the APP for the control light

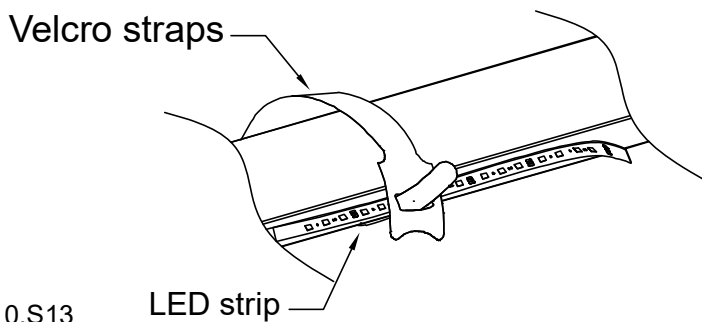

S10,S13

When the wire is disturbed, place the wire inside the velcro and thread the small end of the strap through the strip hole in the head and gently pull it tight

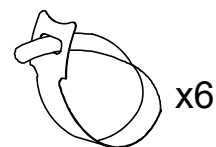


x6
Velcro straps


Assembly Instruction

Note:


- 1.should be assembled on flat ground to keep balance.
- 2.Before completing the installation,do not tighten the screws.

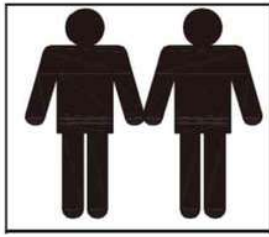

It needs at least
two people to install.

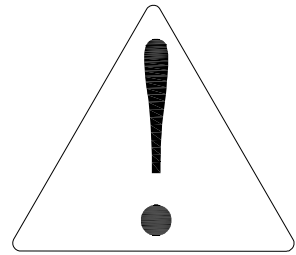


Before starting the
assembly,you must
read the whole
manual and follow
the instructions

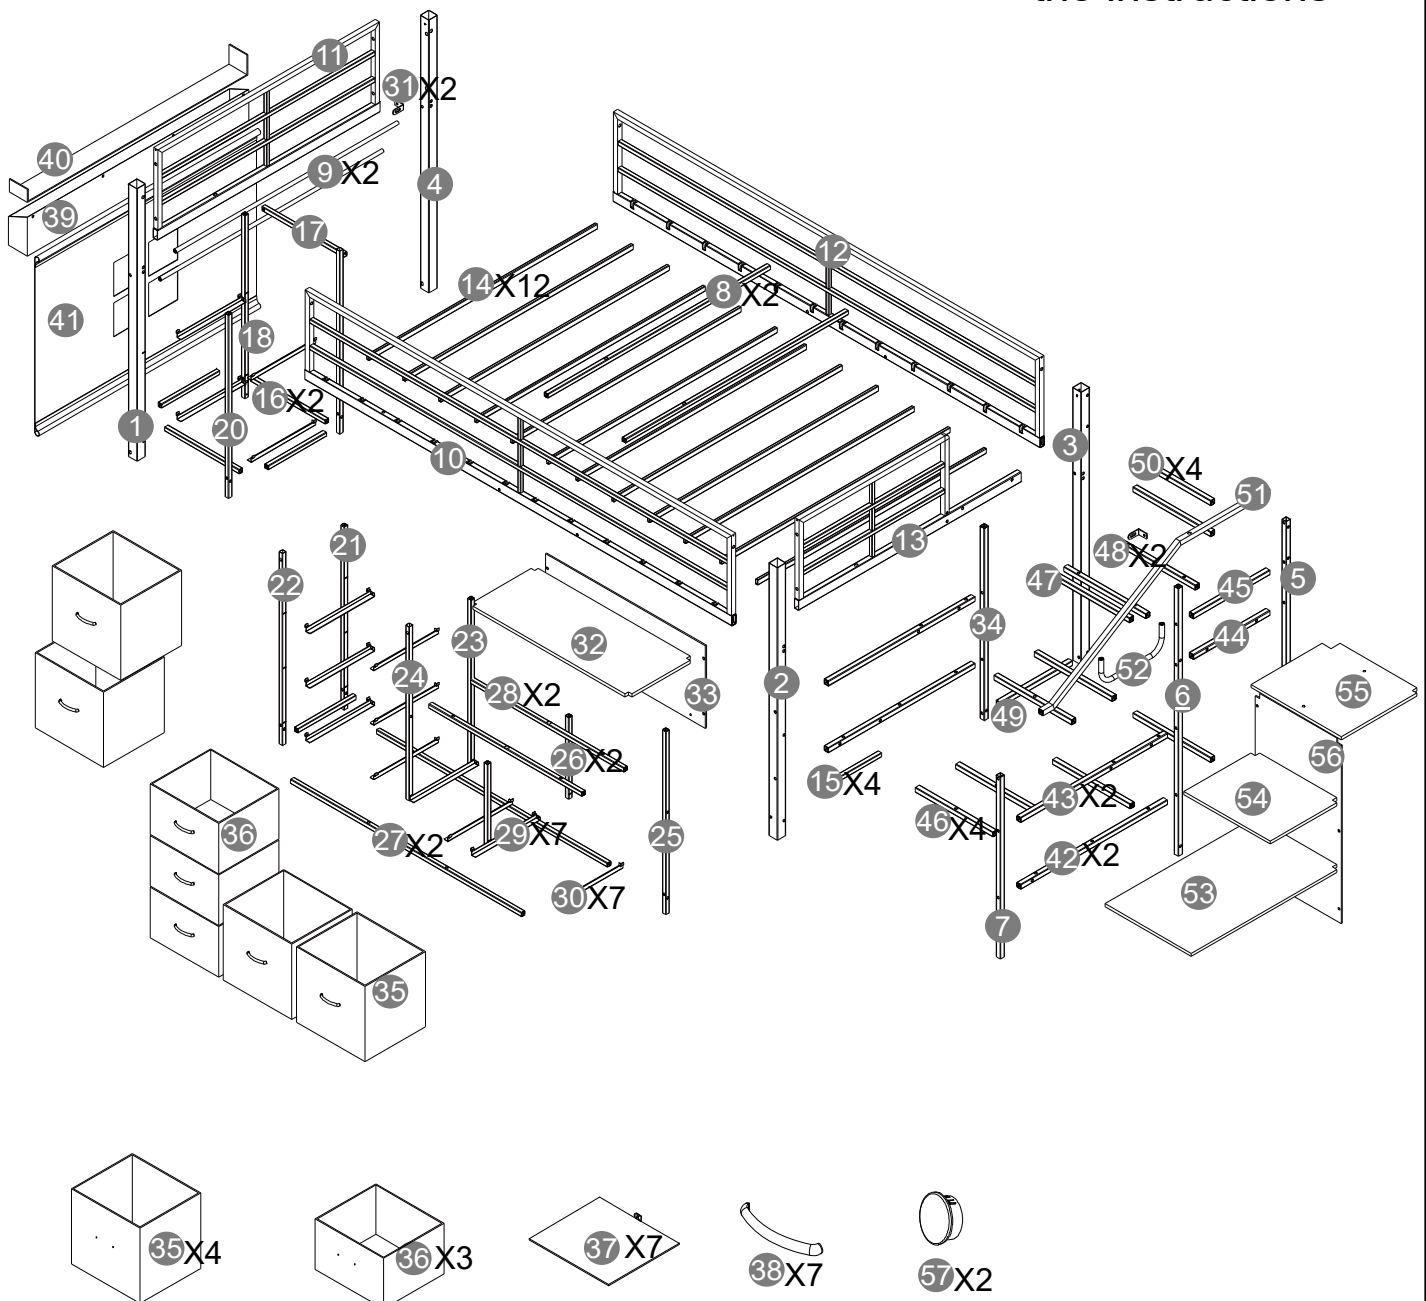


Assembly Instruction

1

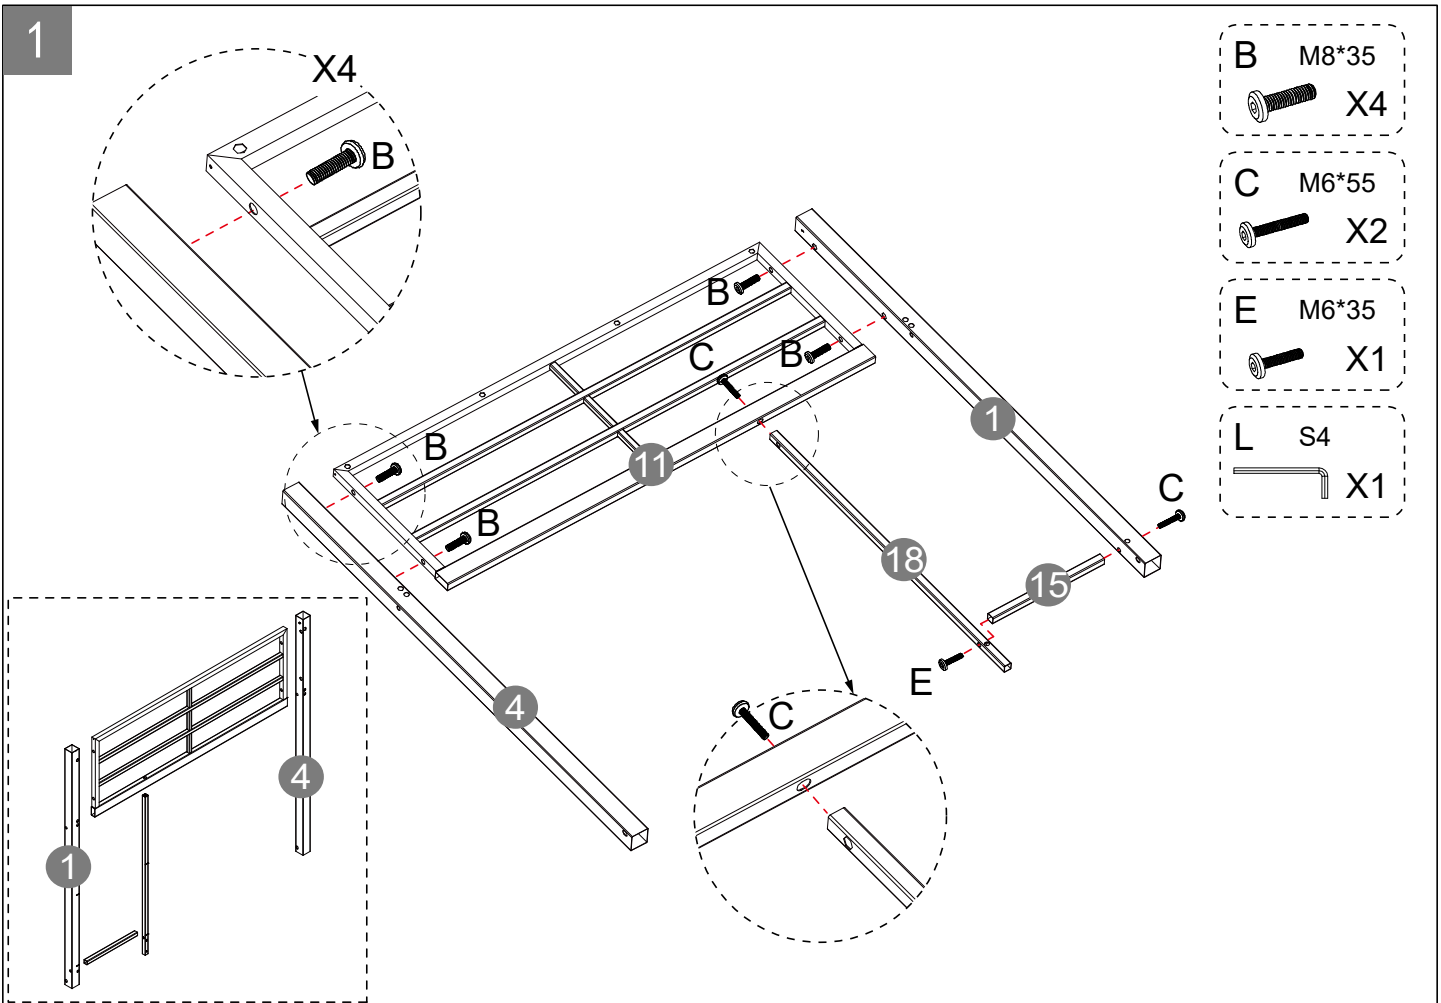


2

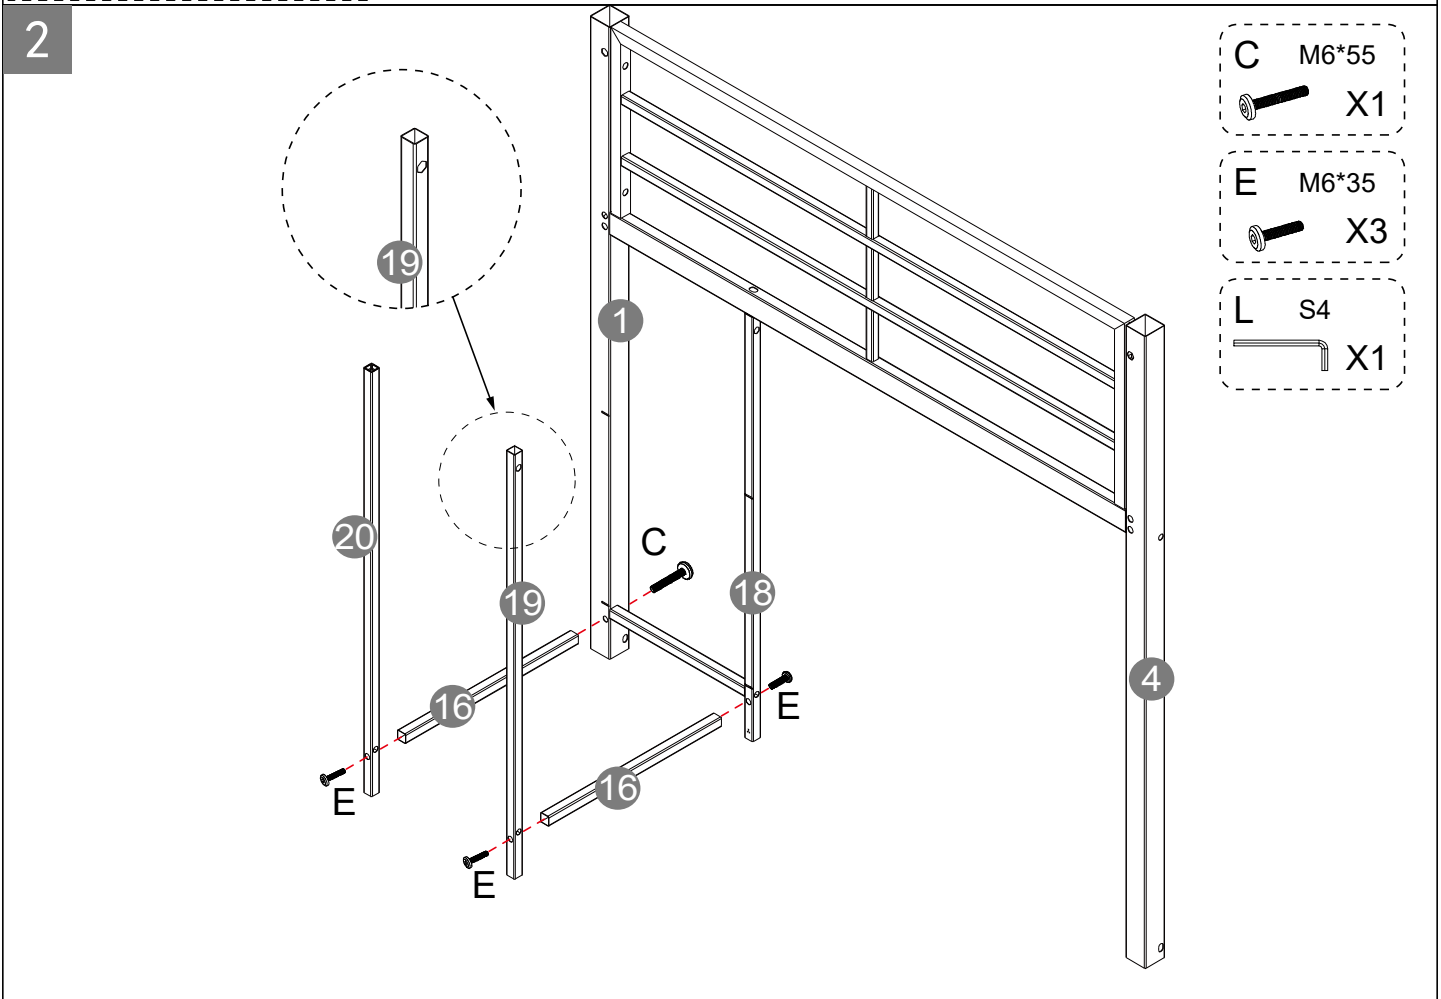

Assembly Instruction

3

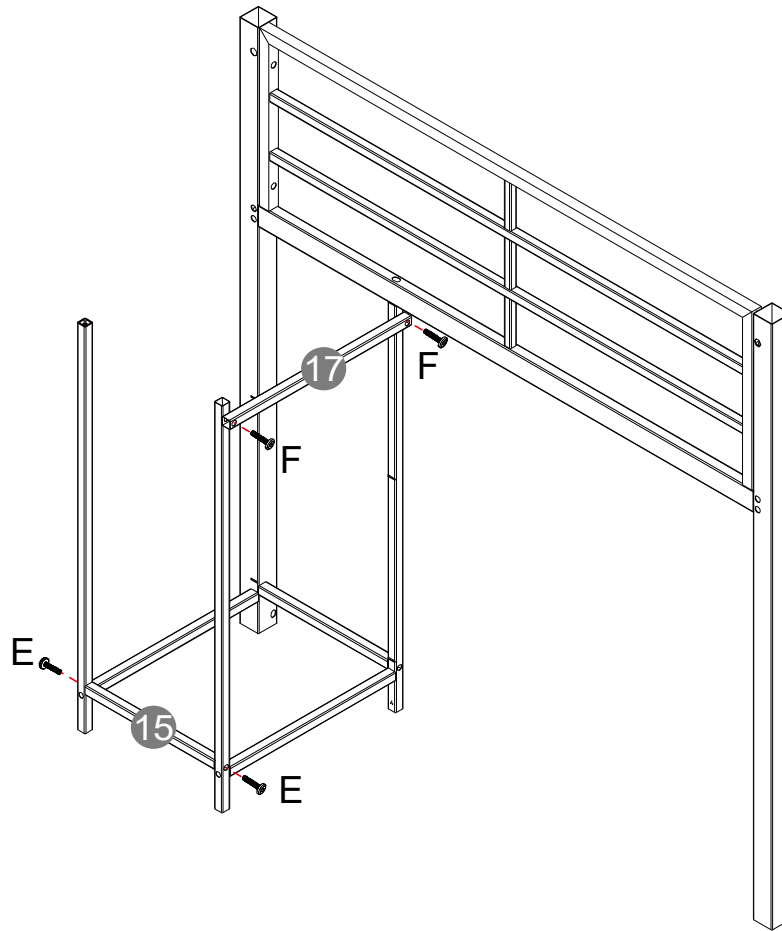


E M6*35 X2

F M6*28 X2

L S4 X1

4

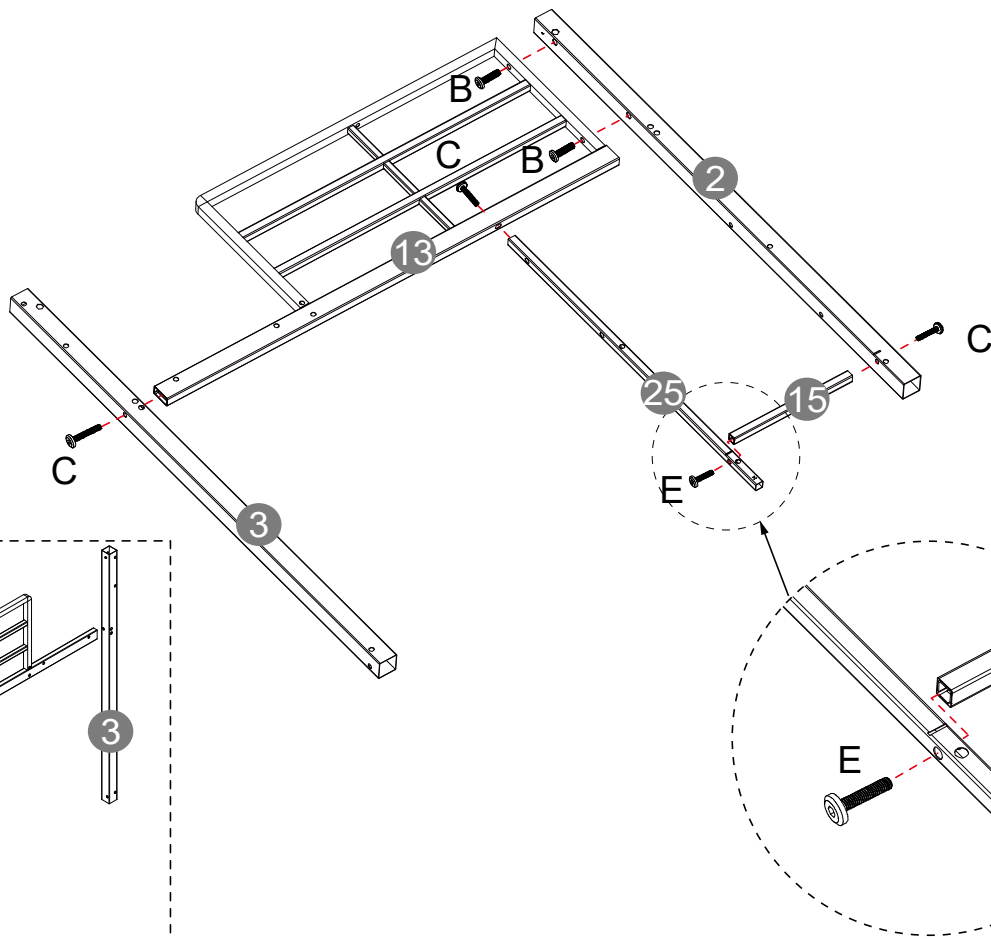

B M8*35 X2

C M6*55 X3


E M6*35 X1

L S4 X1

Assembly Instruction


5

This step requires two people to install

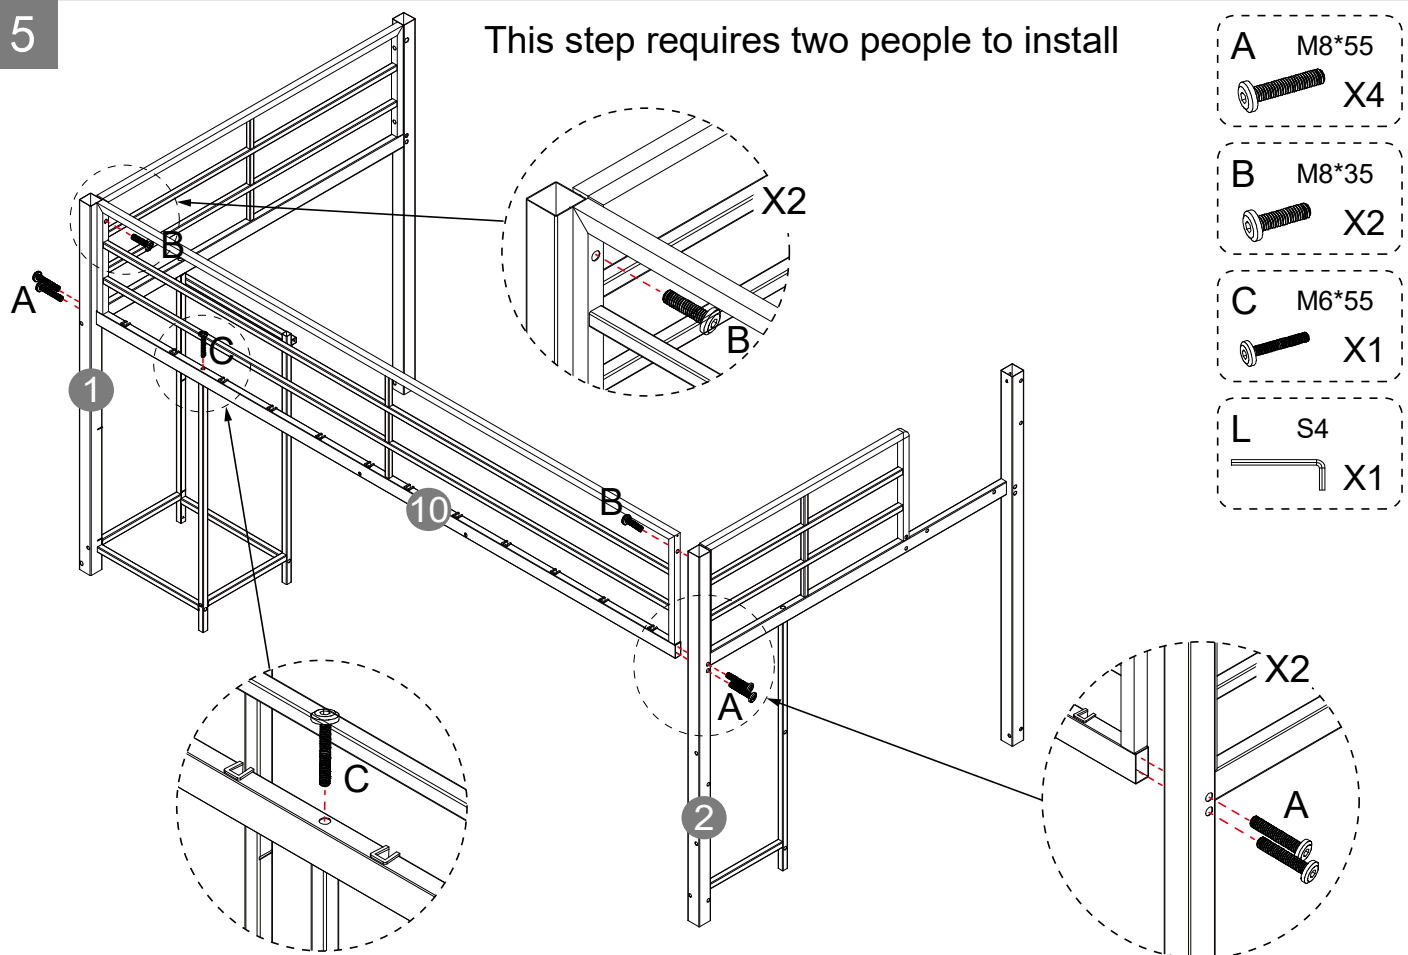

6



This step requires two people to install

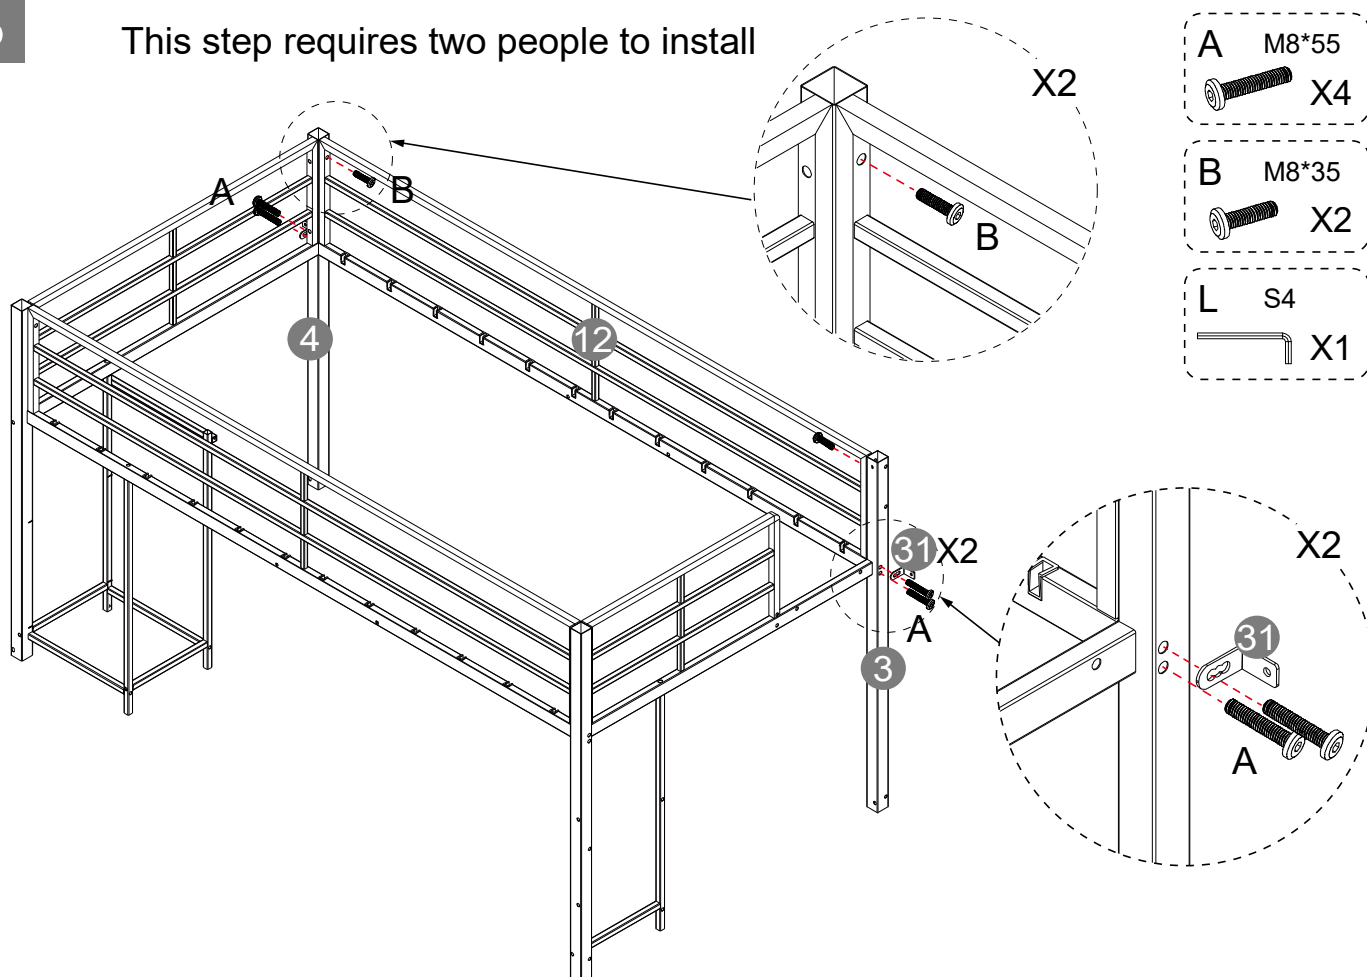

Assembly Instruction

7

If the wall nalls are not locked, there is a risk of the bed overturning

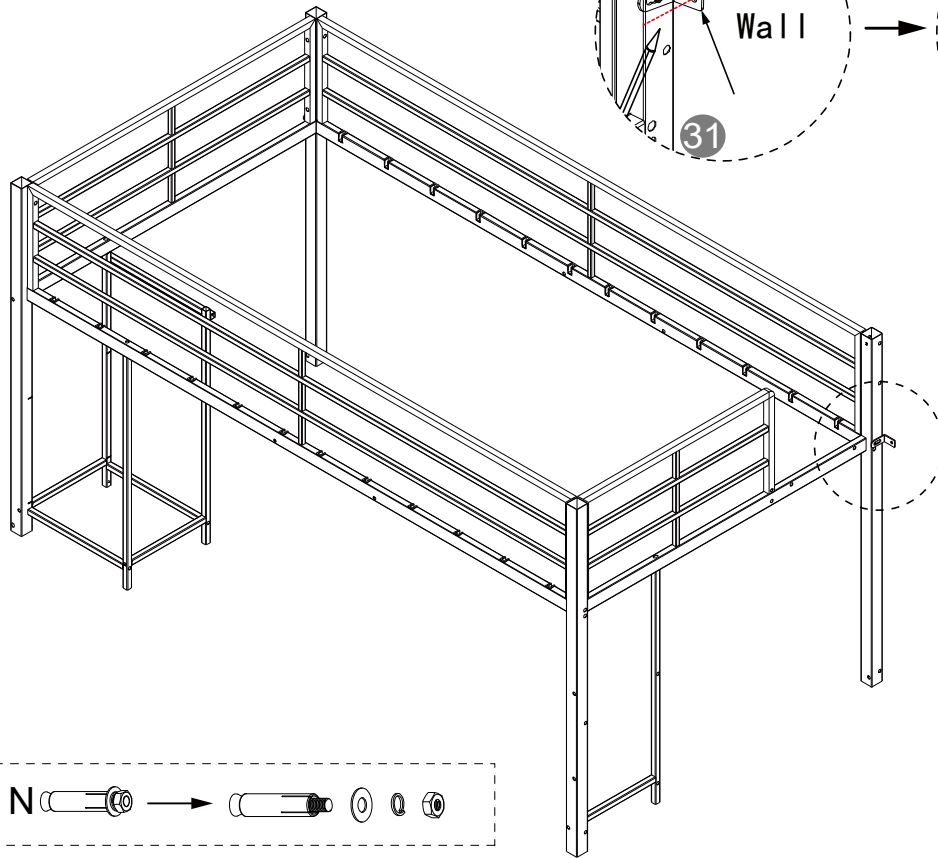

K M6*50
X2

N S10,S13
X1

Wall

Wall

31

Wall


N

X2

Wall

8

Please pay attention to the direction of the hole position.

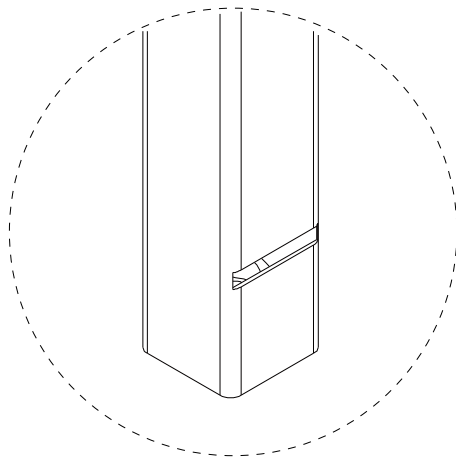

22

24

G

Large circular hole

G

26

27

E

E

E M6*35
X3

G M6*20
X2


L S4
X1

Assembly Instruction

9





Be careful not to overtighten the screws.

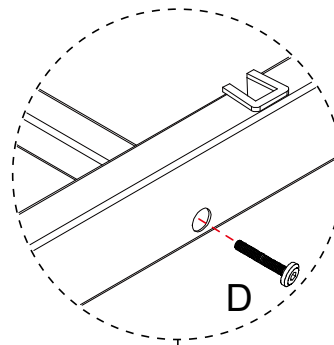

C M6*55
X2

D M6*45
X4


L S4
X1

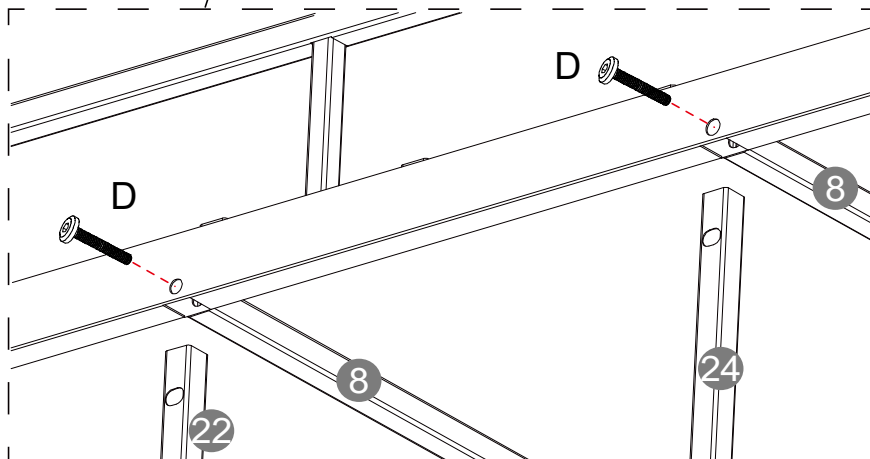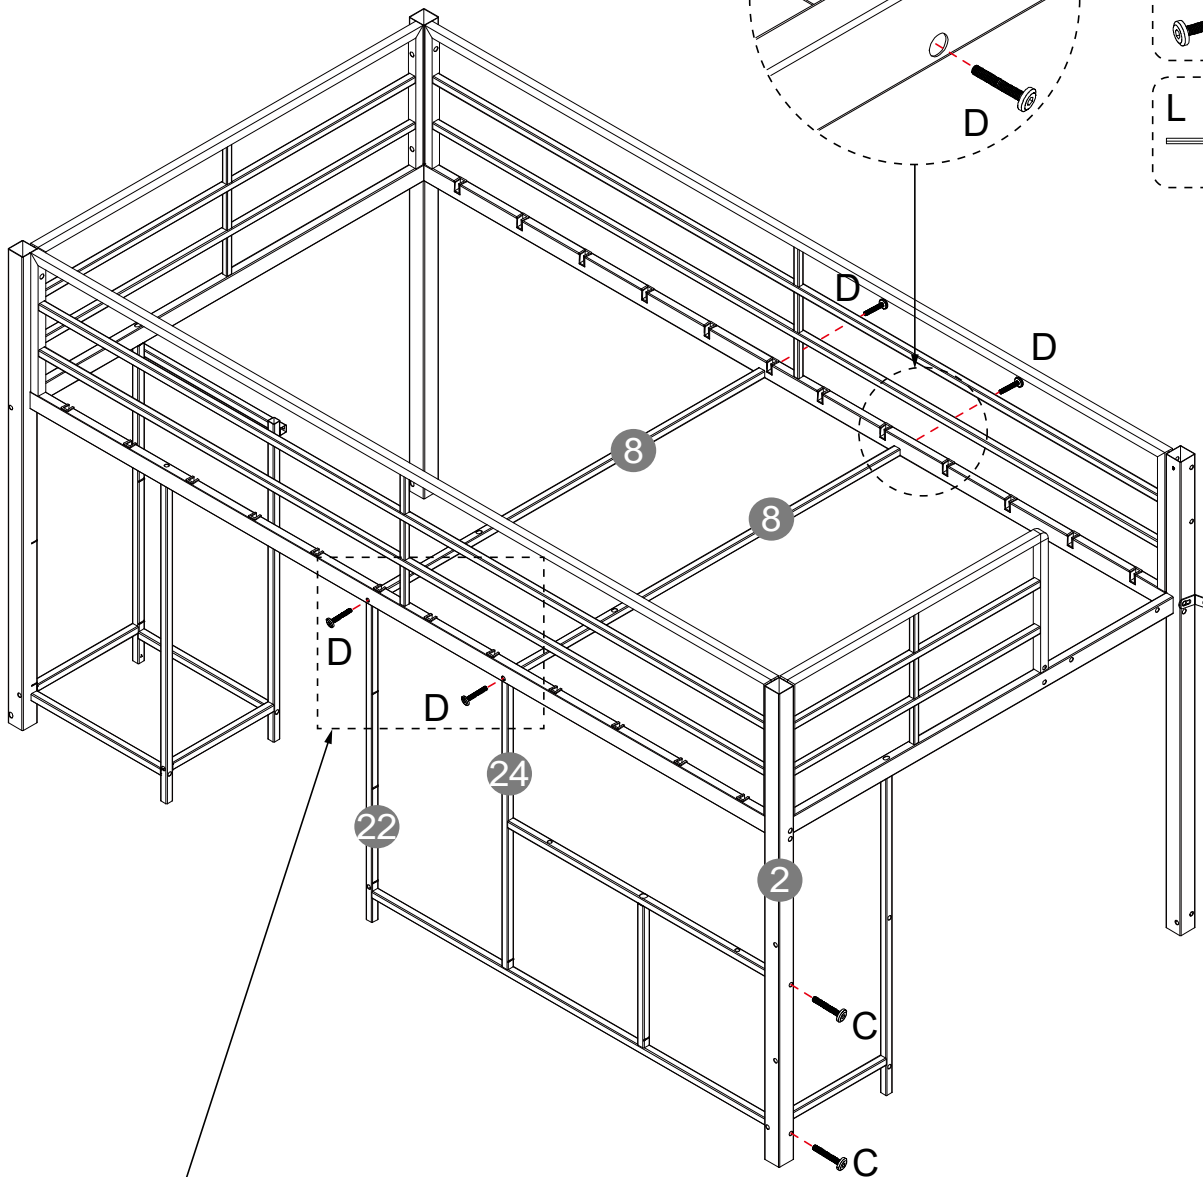


Please pay attention to the direction of the hole position.

Assembly Instruction

10

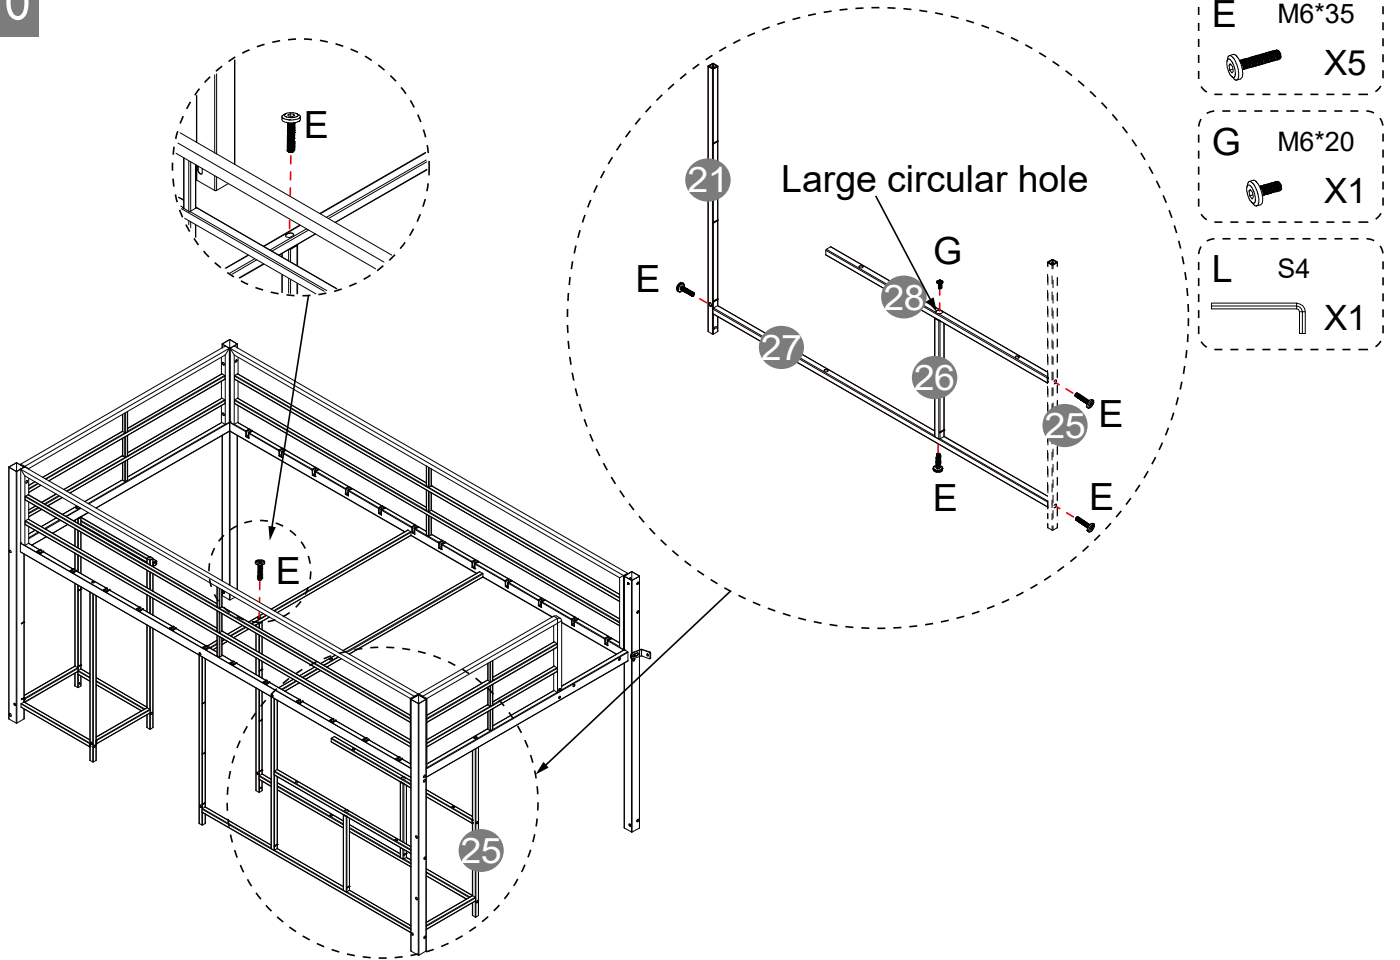


11

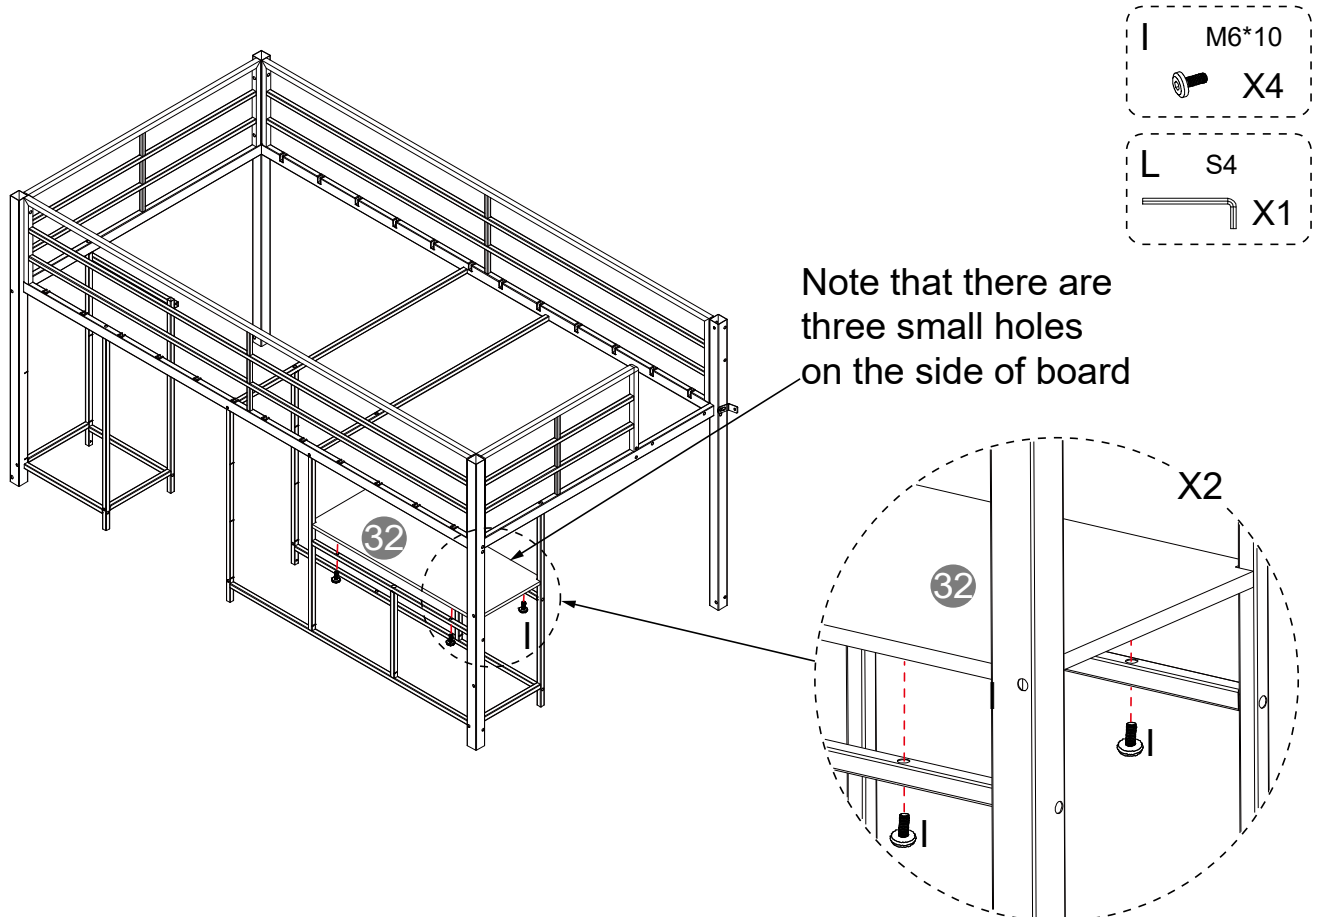

Assembly Instruction

12


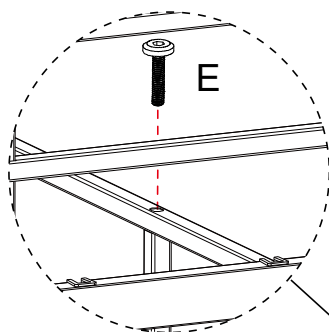


After locking the screws,
plug the circular hole with
a plastic pipe plug


E M6*35
X4

G M6*20
X1

L S4
X1

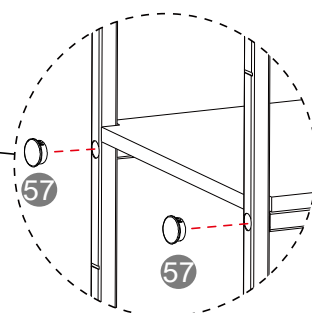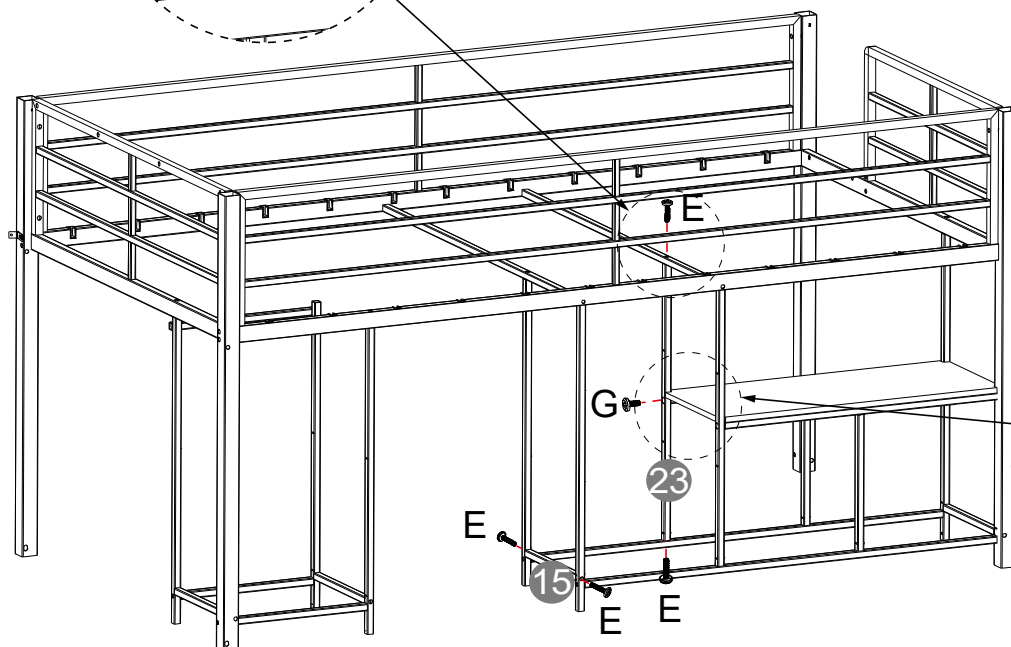

13

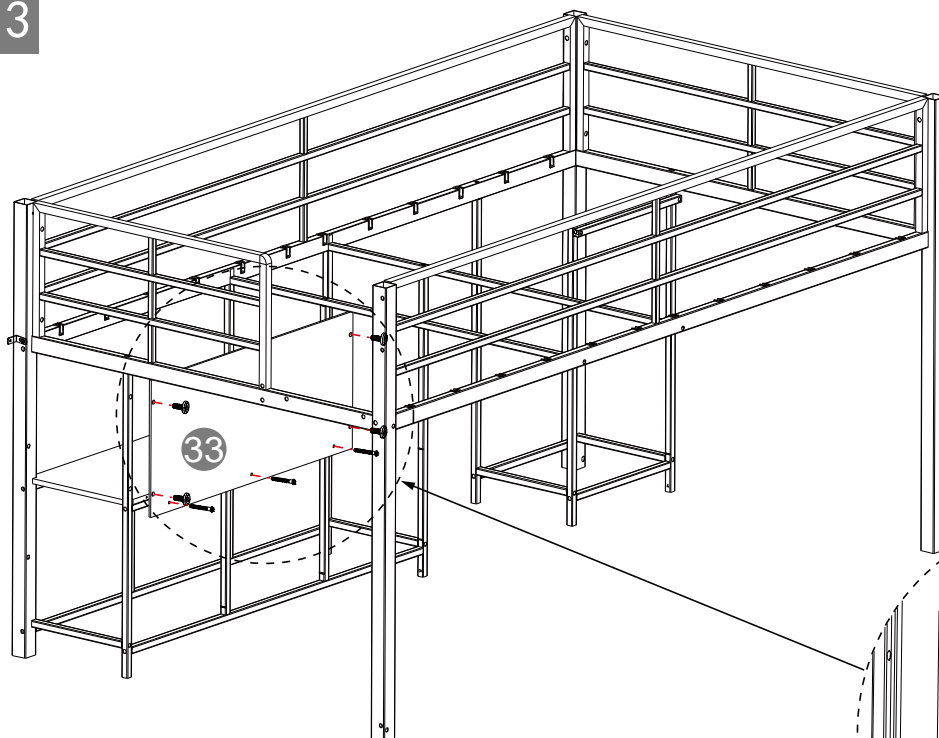


H M6*15
X4

J Ø5*35
X3

L S4
X1


M S3
X1

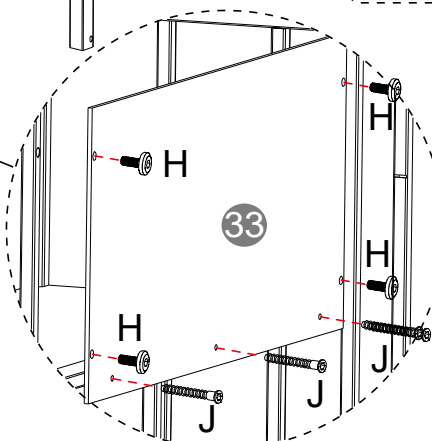


After aligning the hole bits, it is locked.

Assembly Instruction

14

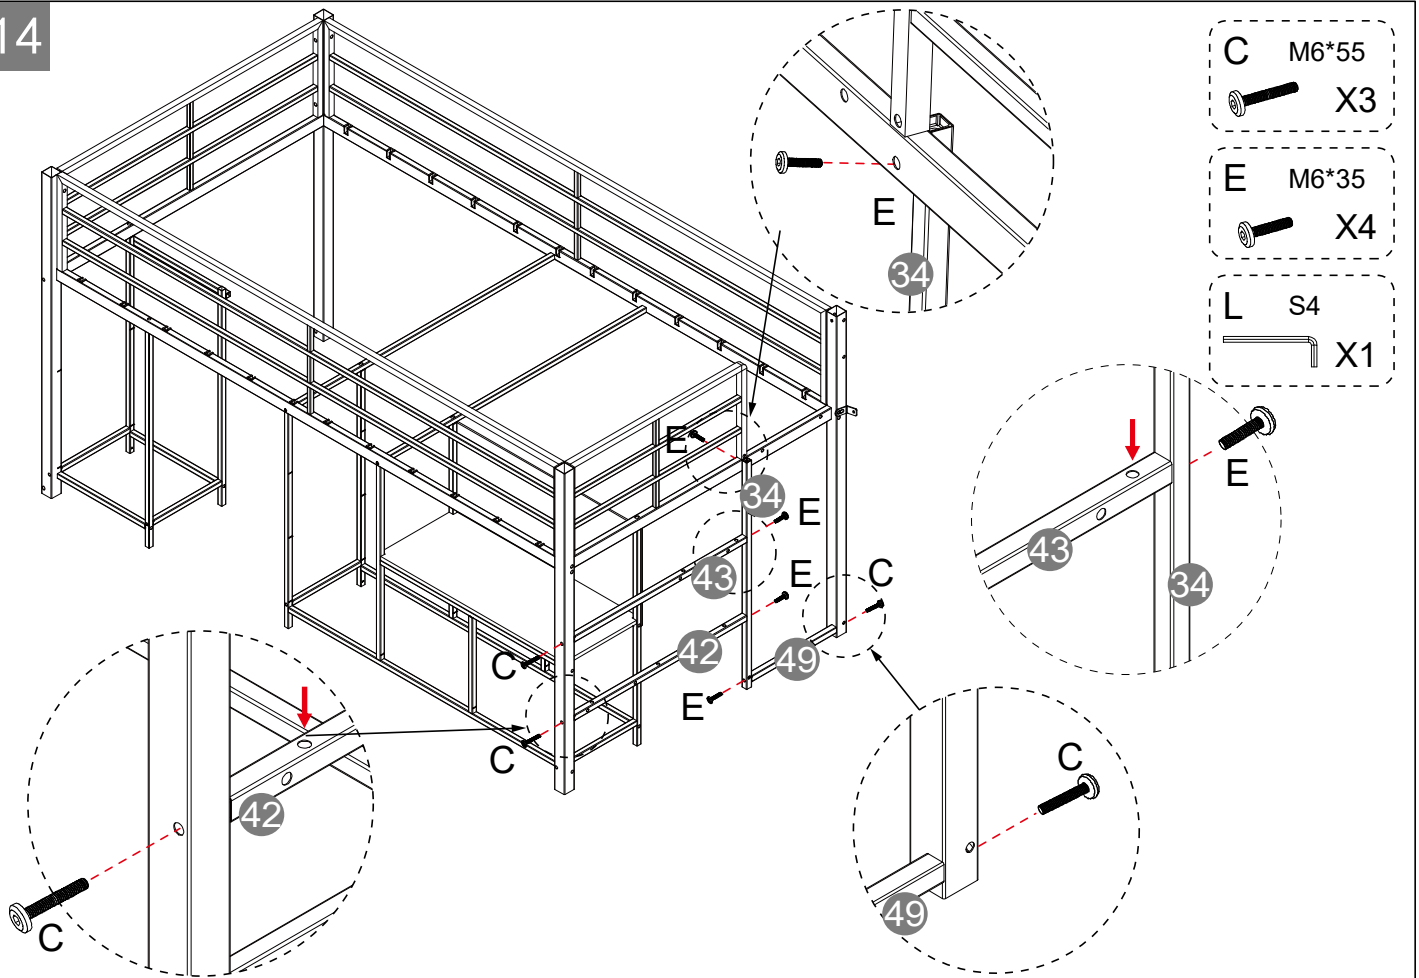


15

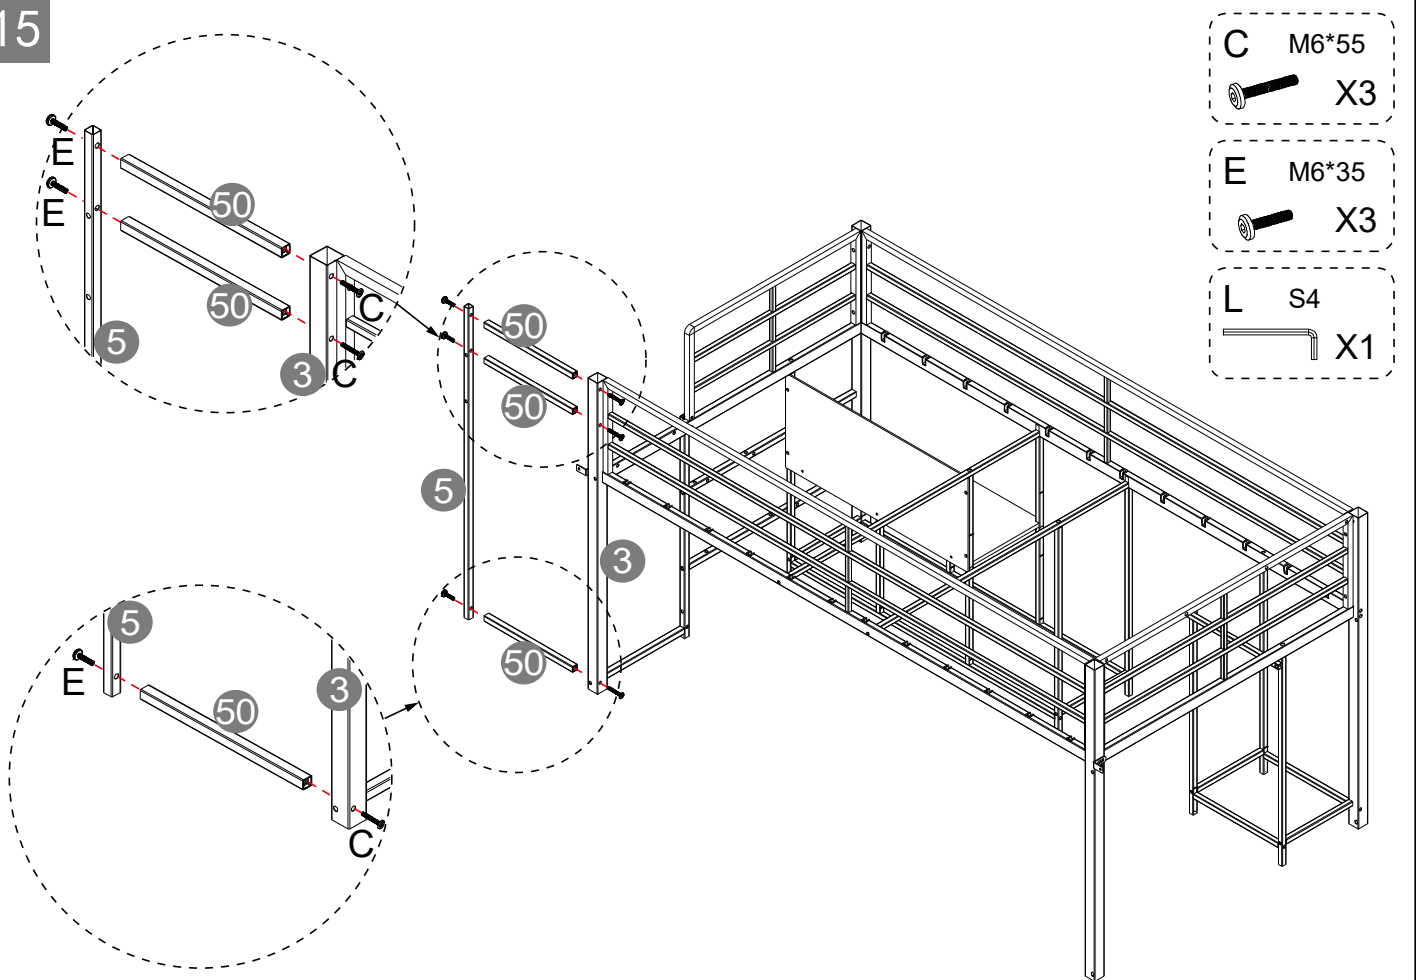


Assembly Instruction

16

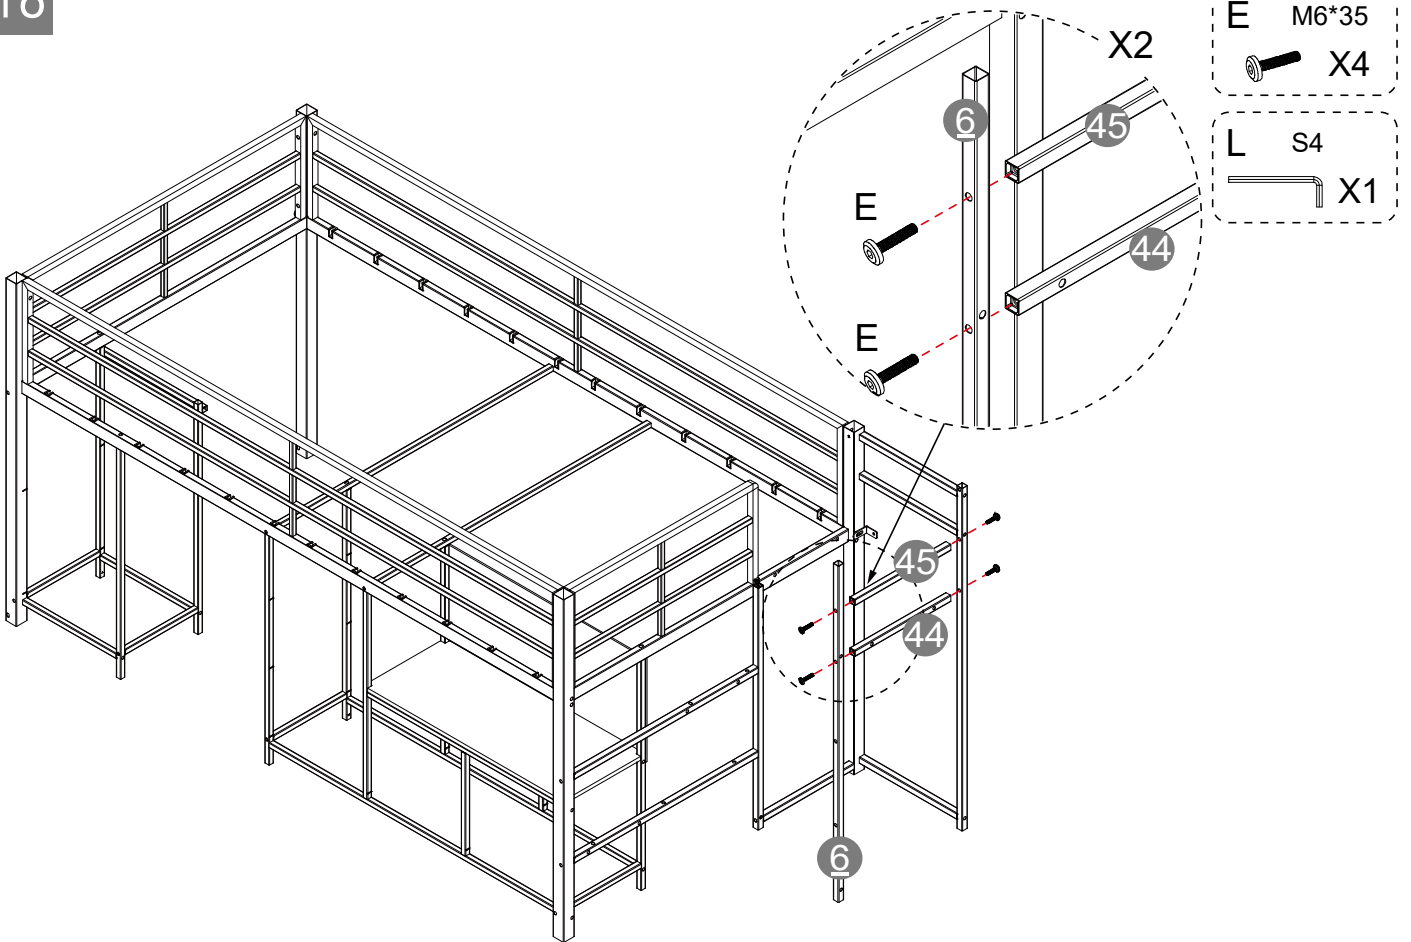


17

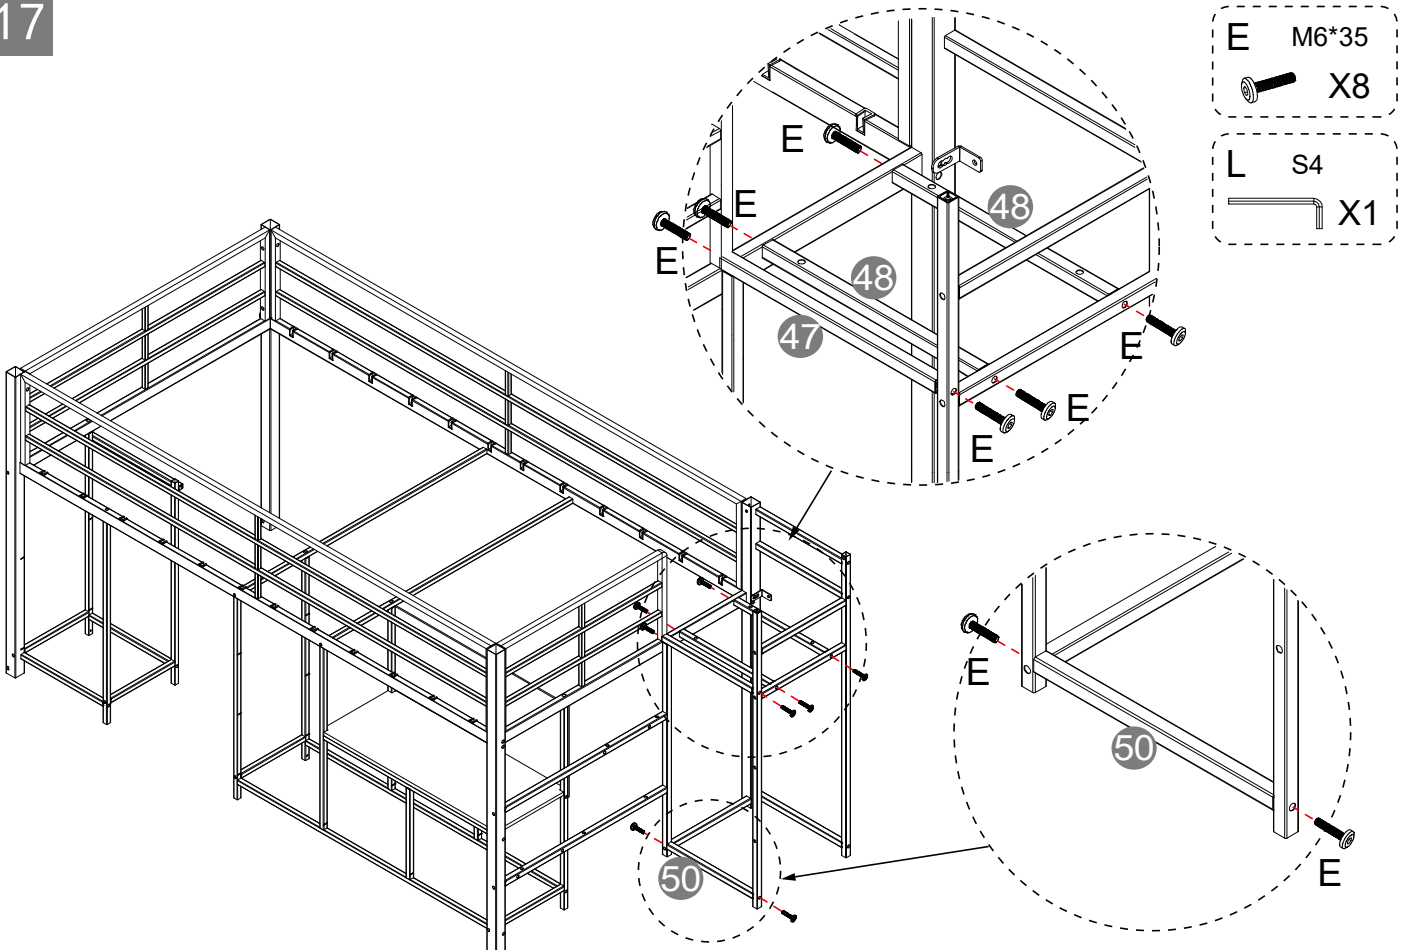


Assembly Instruction

18

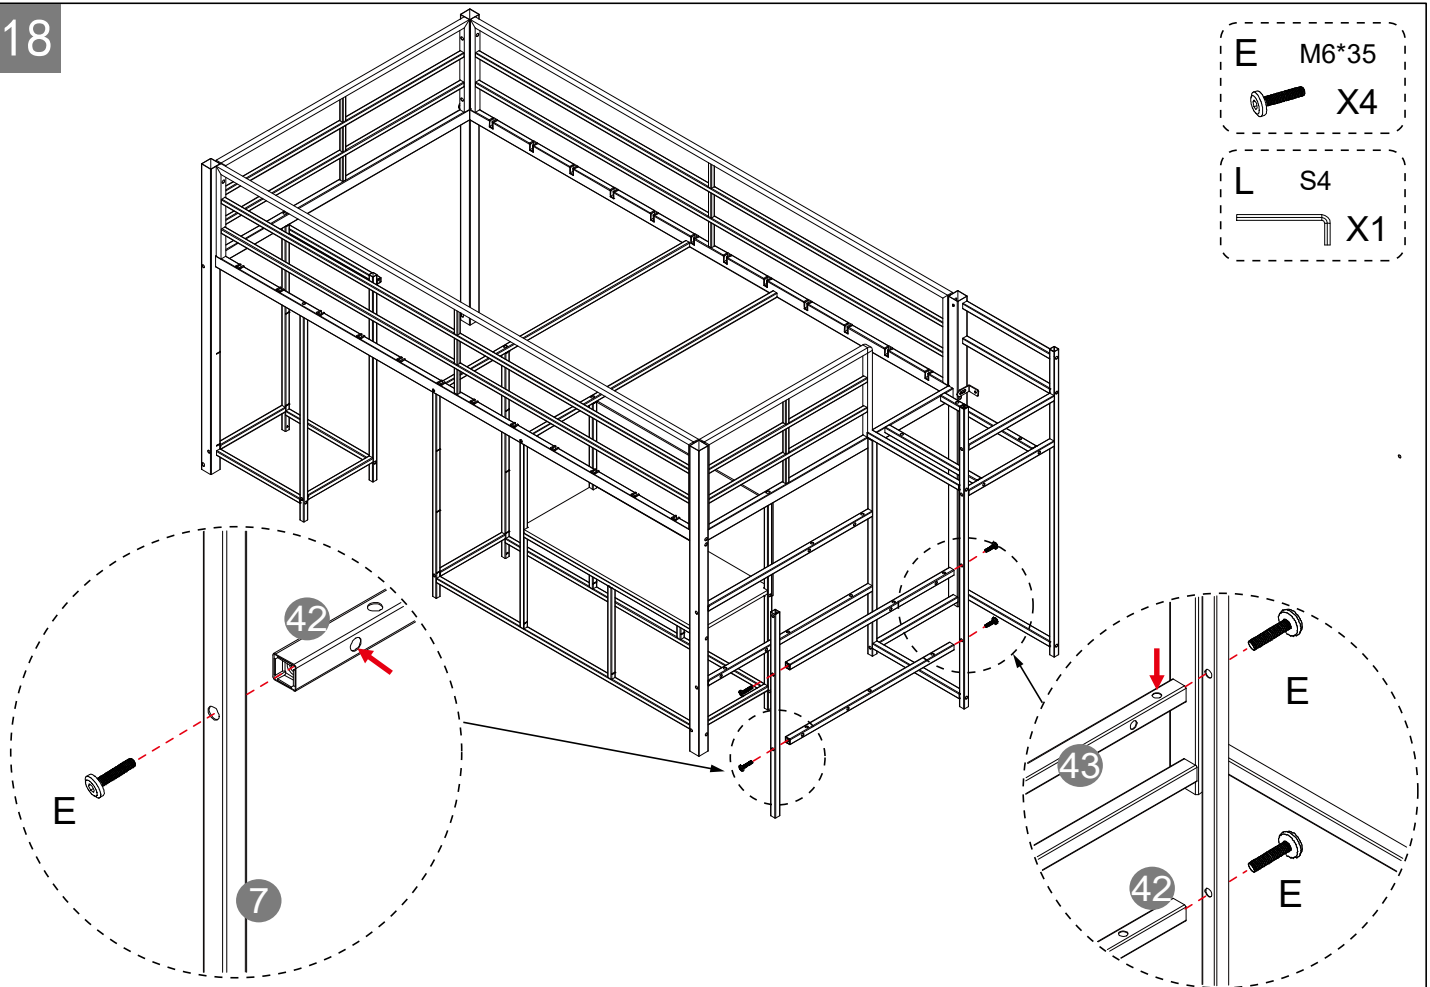


19

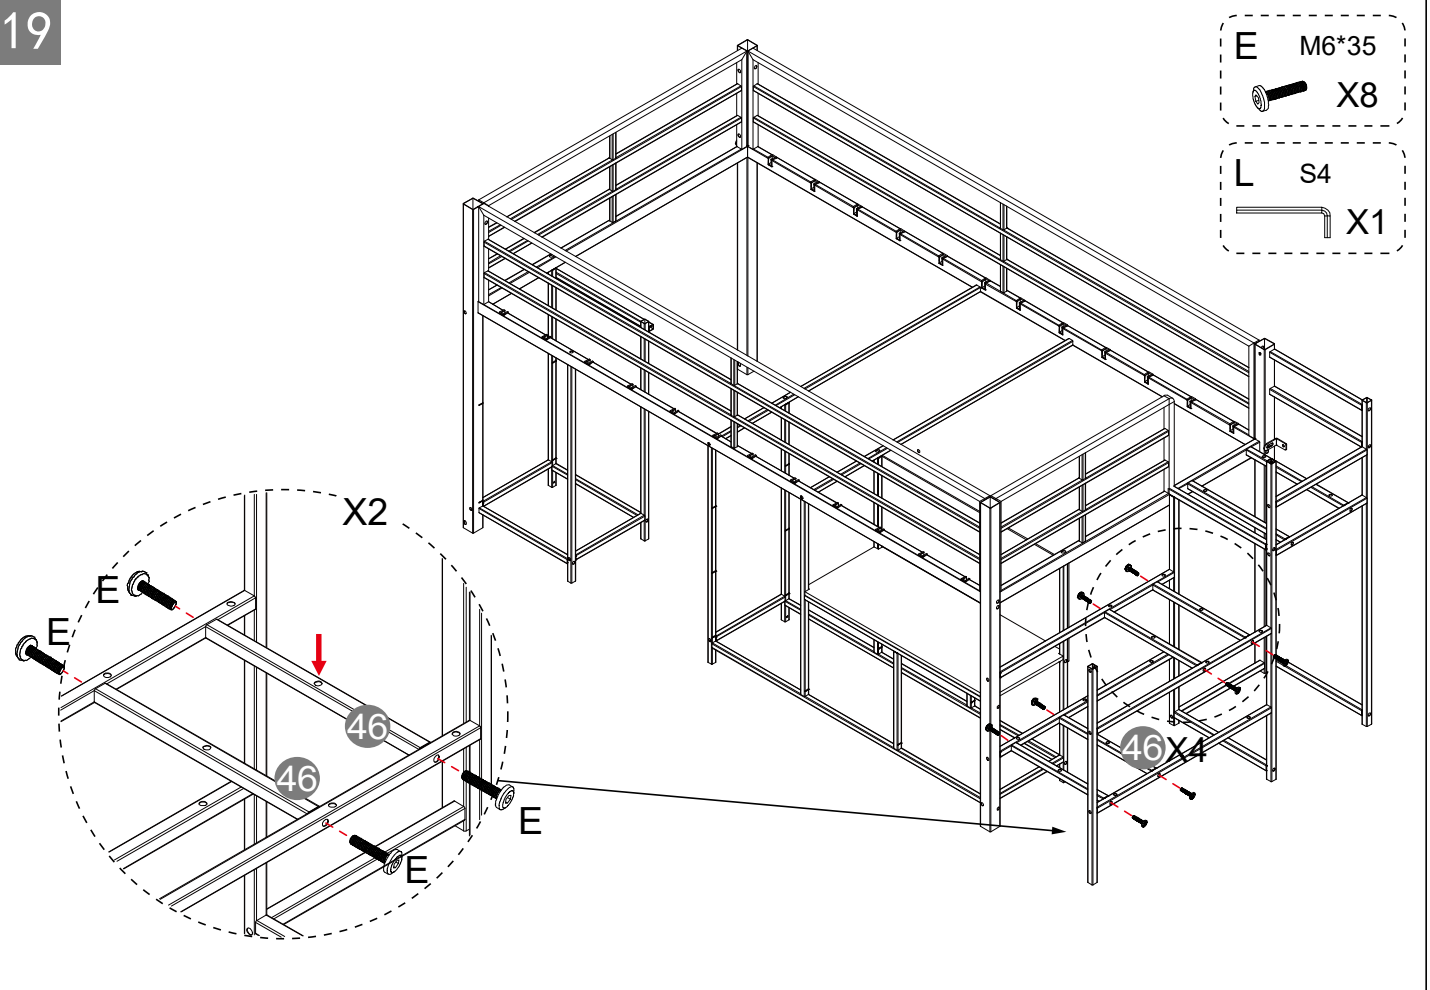


Assembly Instruction

20

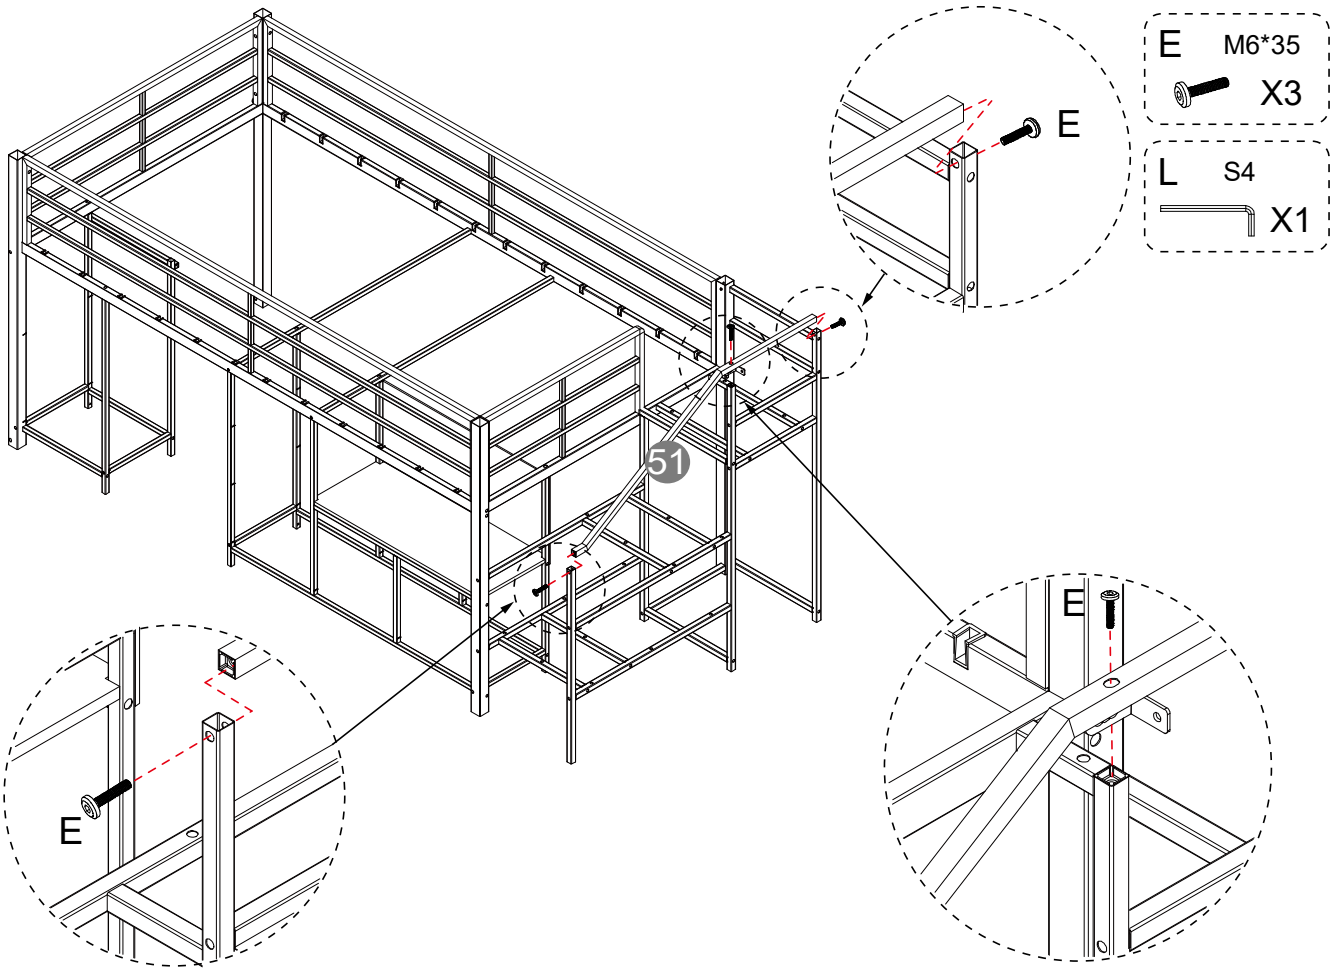


21

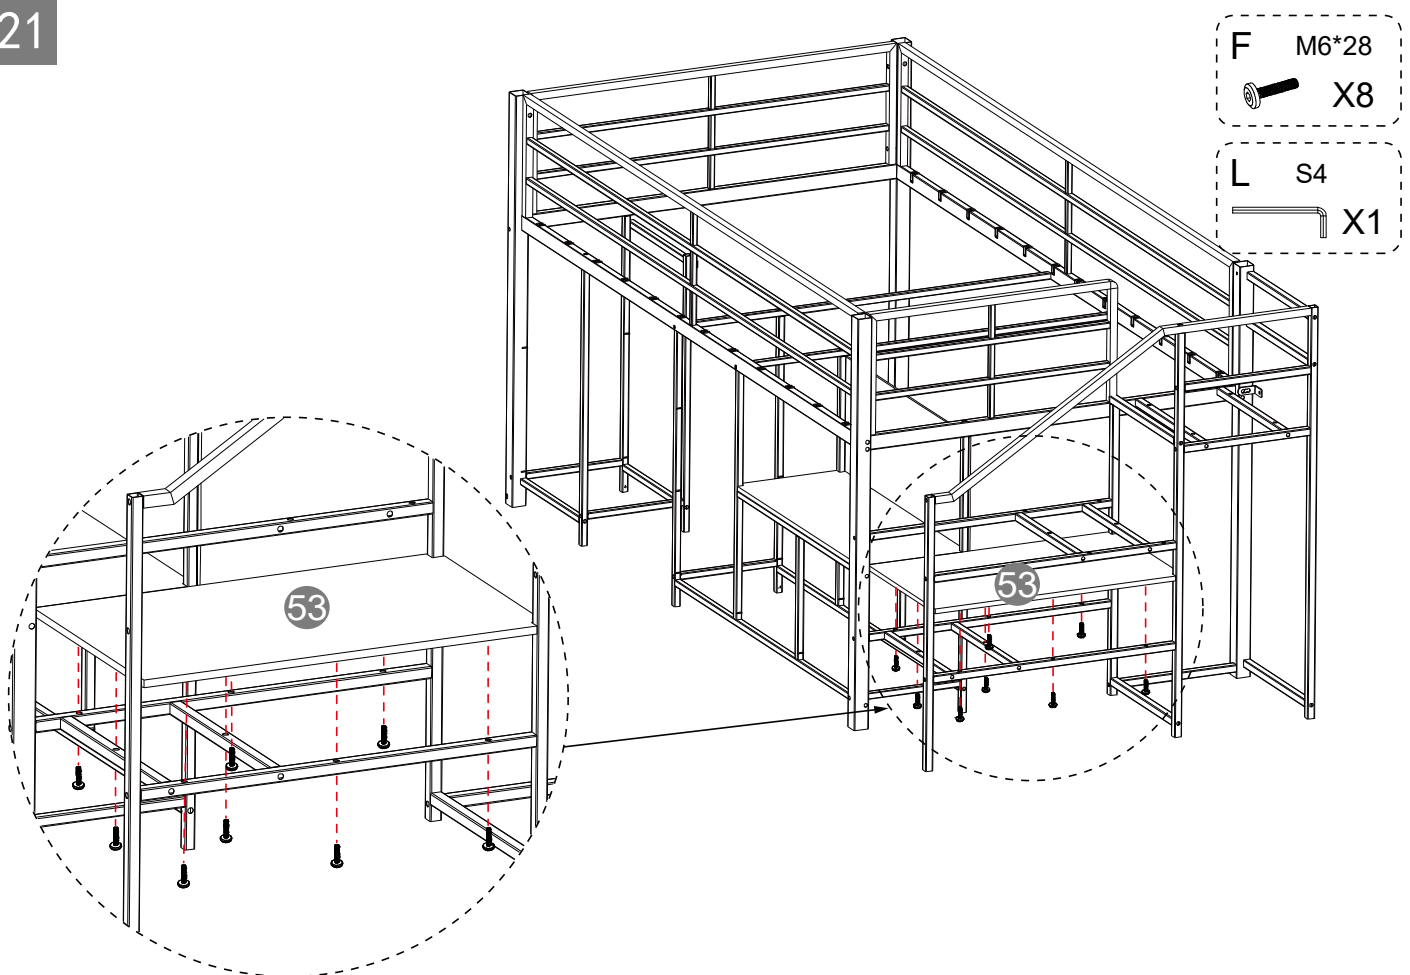


Assembly Instruction

22

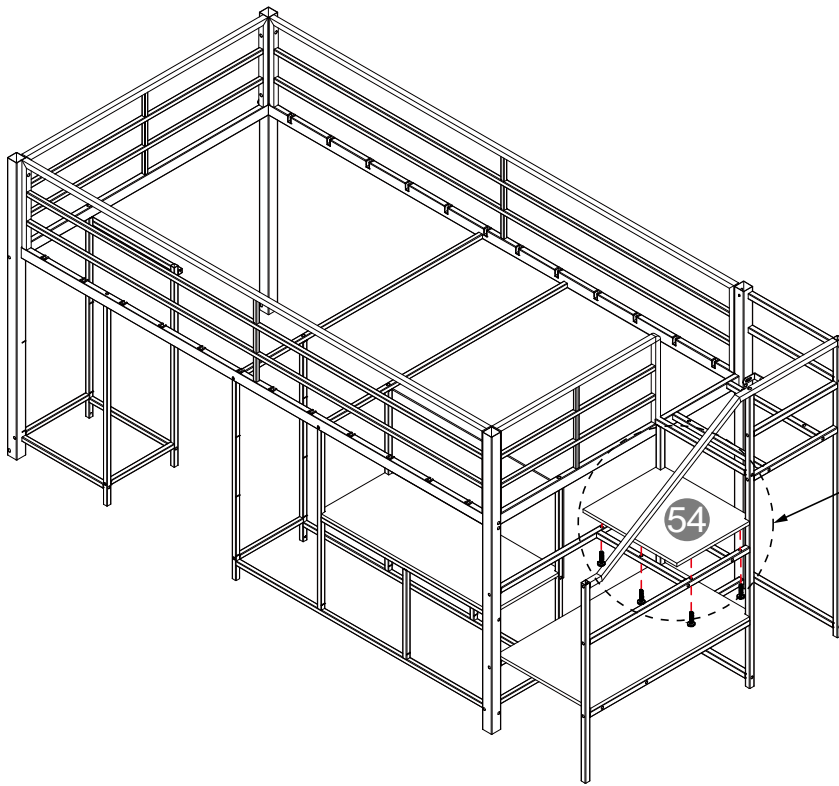


F M6*28
X6

L S4
X1

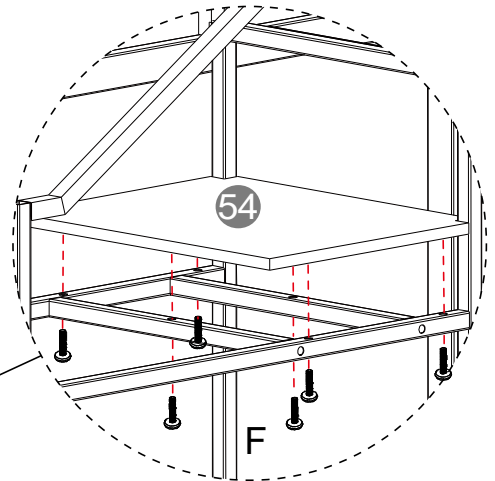

23

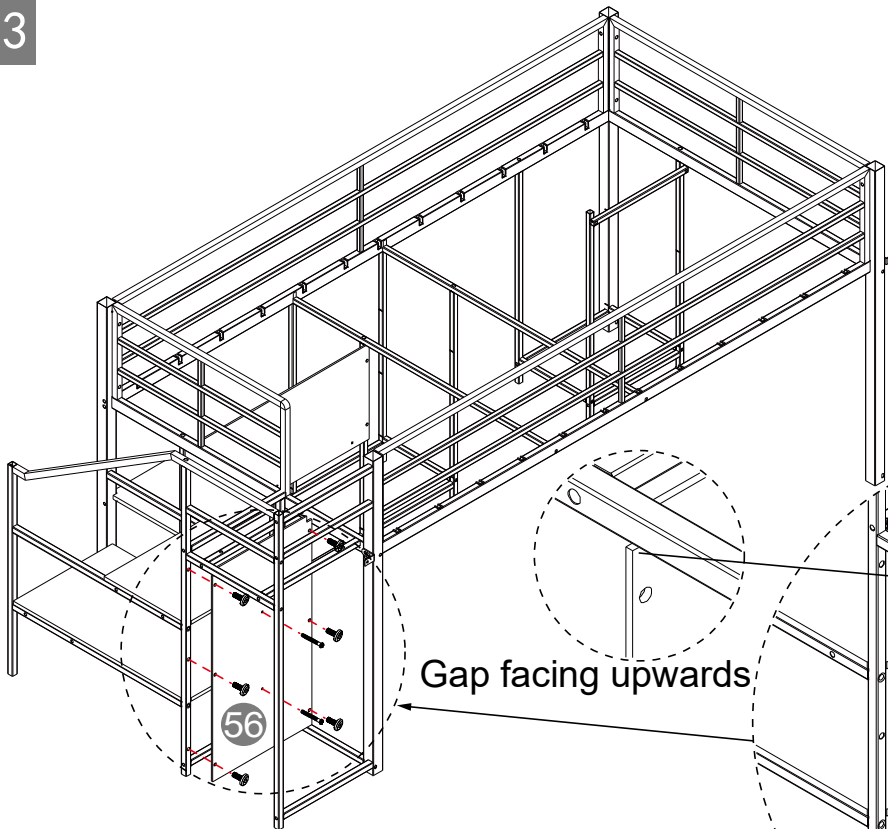


H M6*15
X6

J Ø5*35
X2

L S4
X1


M S3
X1

Gap facing upwards

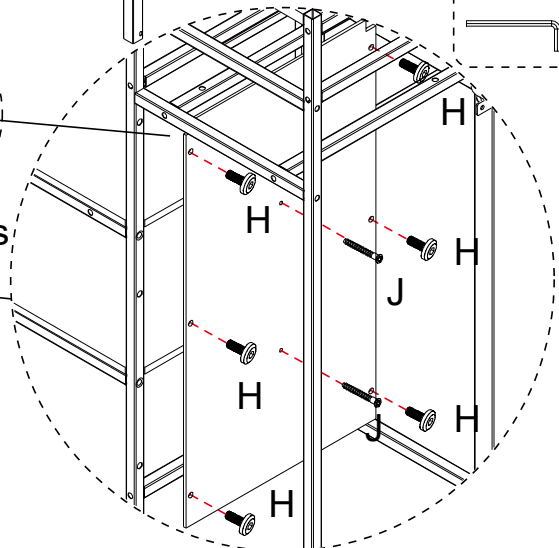


Assembly Instruction

24

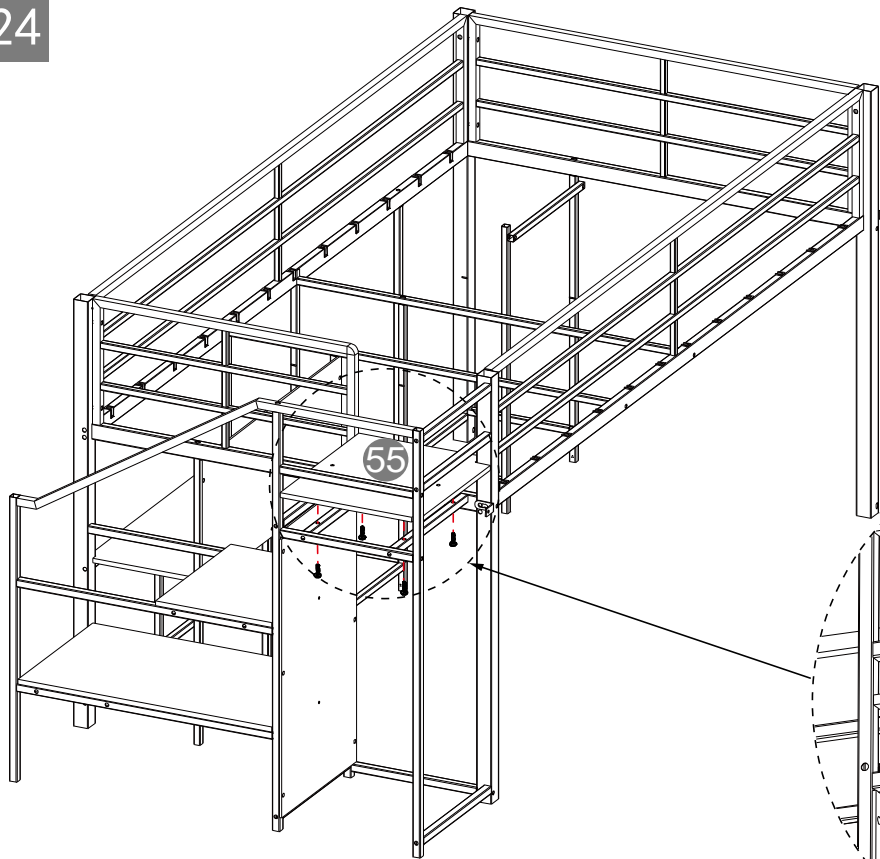


F M6*28
X4

L S4
X1

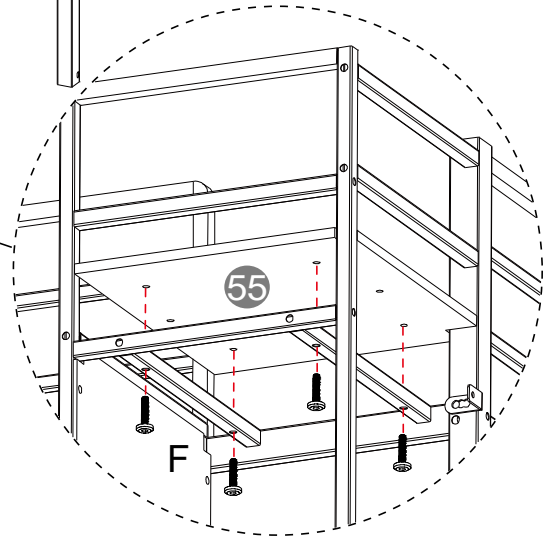


25

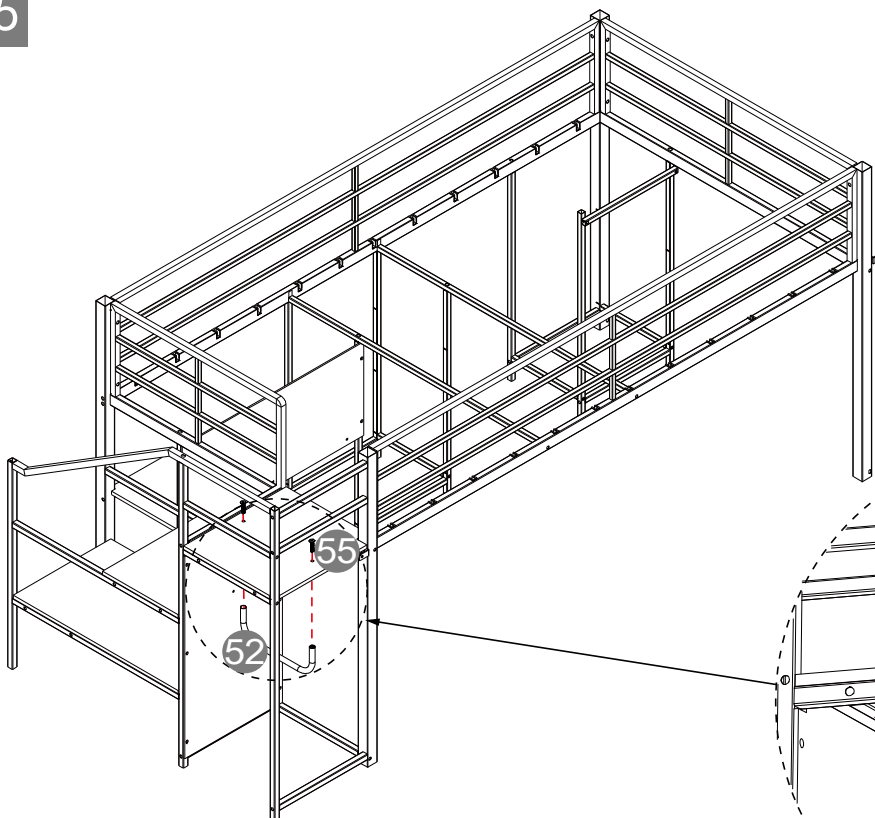

P M6*28
X2


L S4
X1

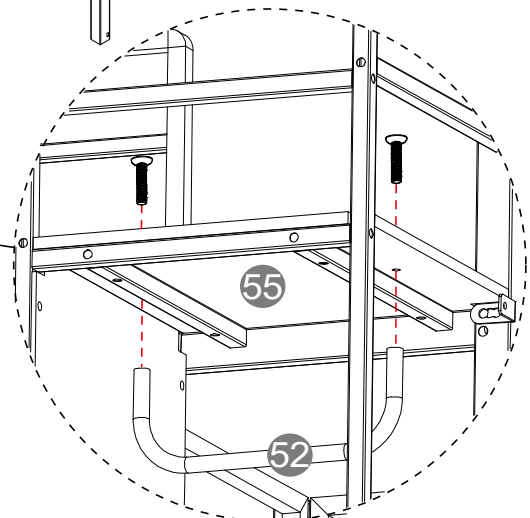


Assembly Instruction

26

Tighten the screws (Dx4) after installing the rest of the support slat.

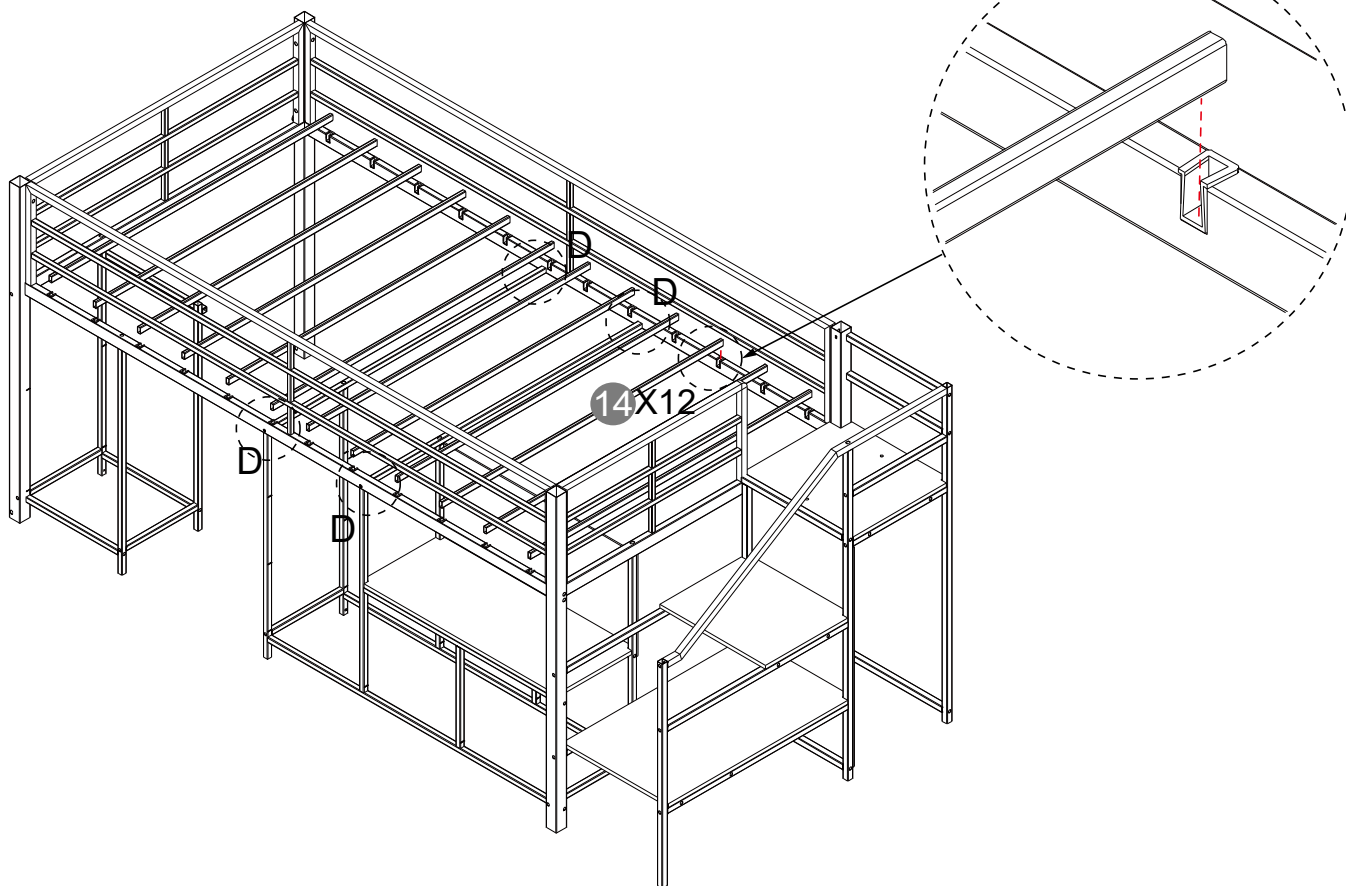


27

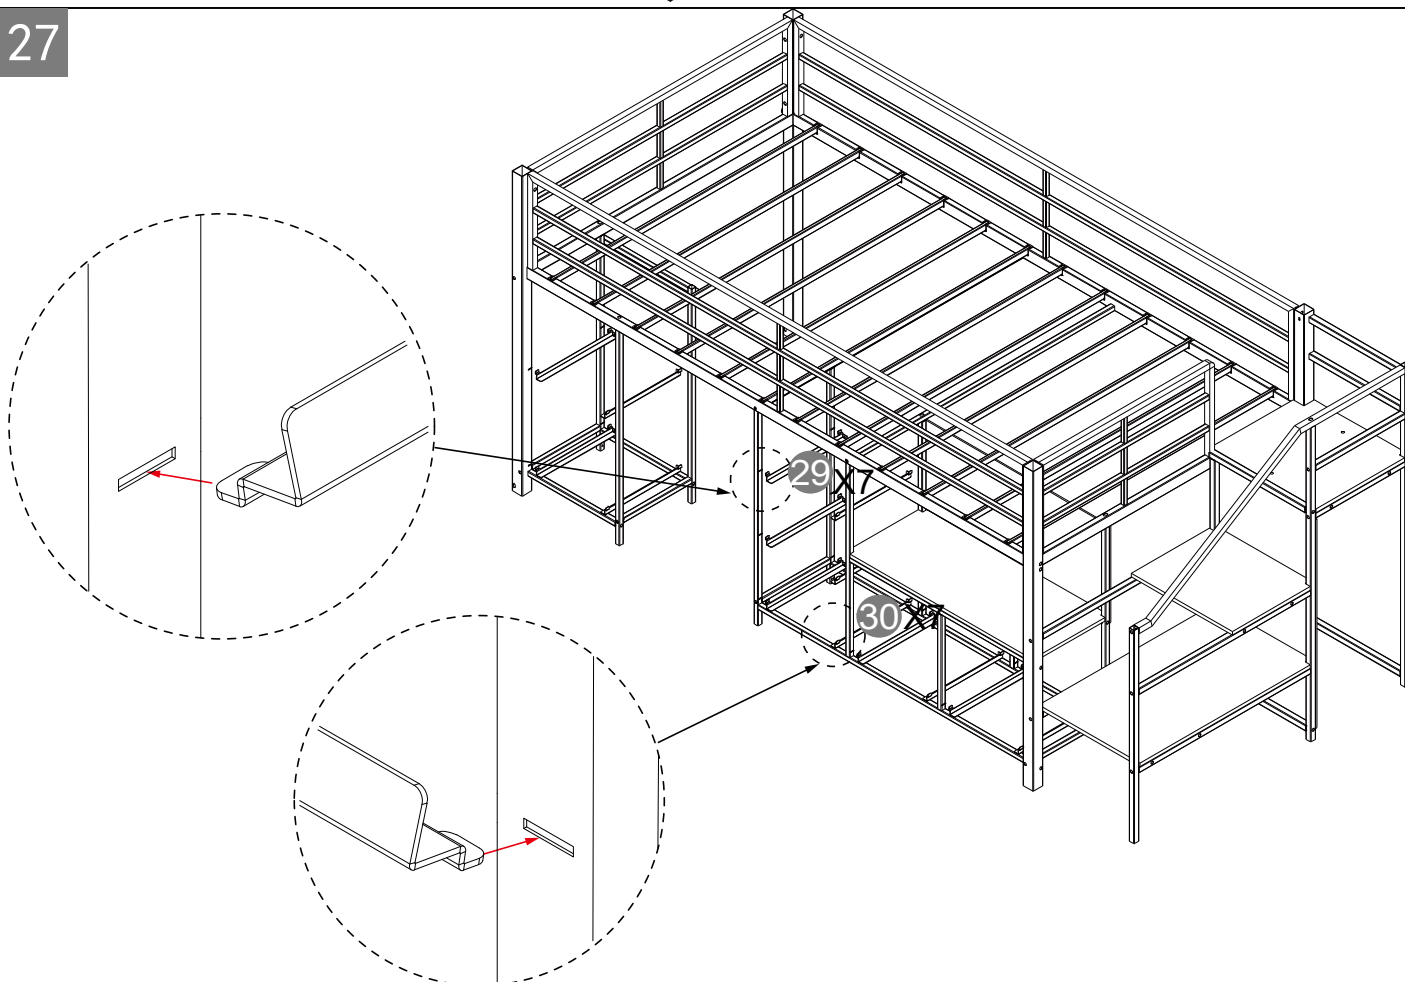


Assembly Instruction

28

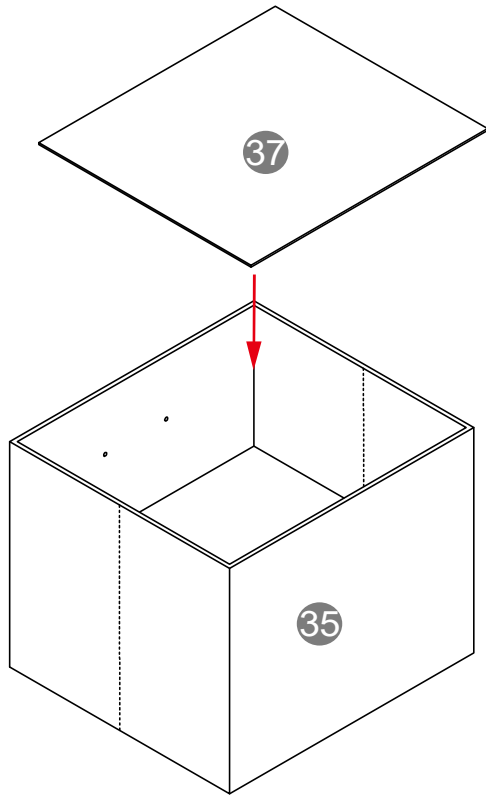


Q Ø4*10
X6

O
X1

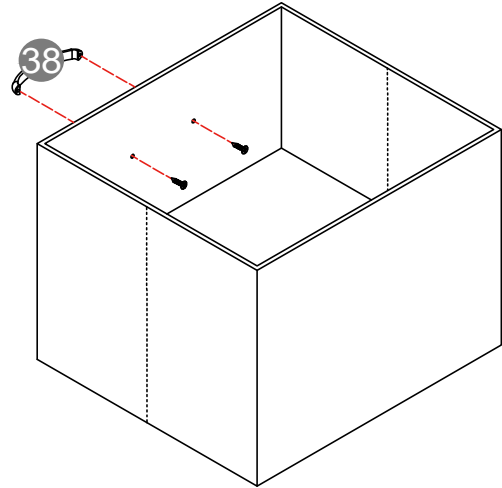


X3

29

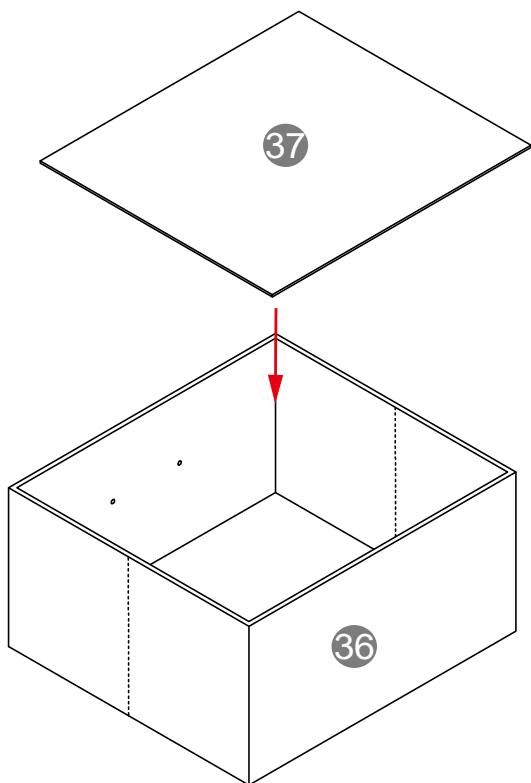

Q Ø4*10
X8


O
X1

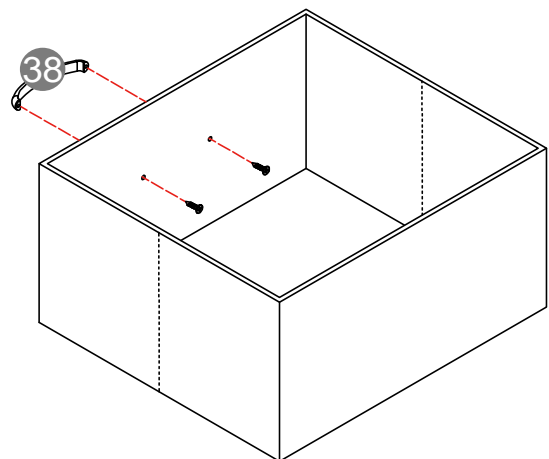


X4

Assembly Instruction

30

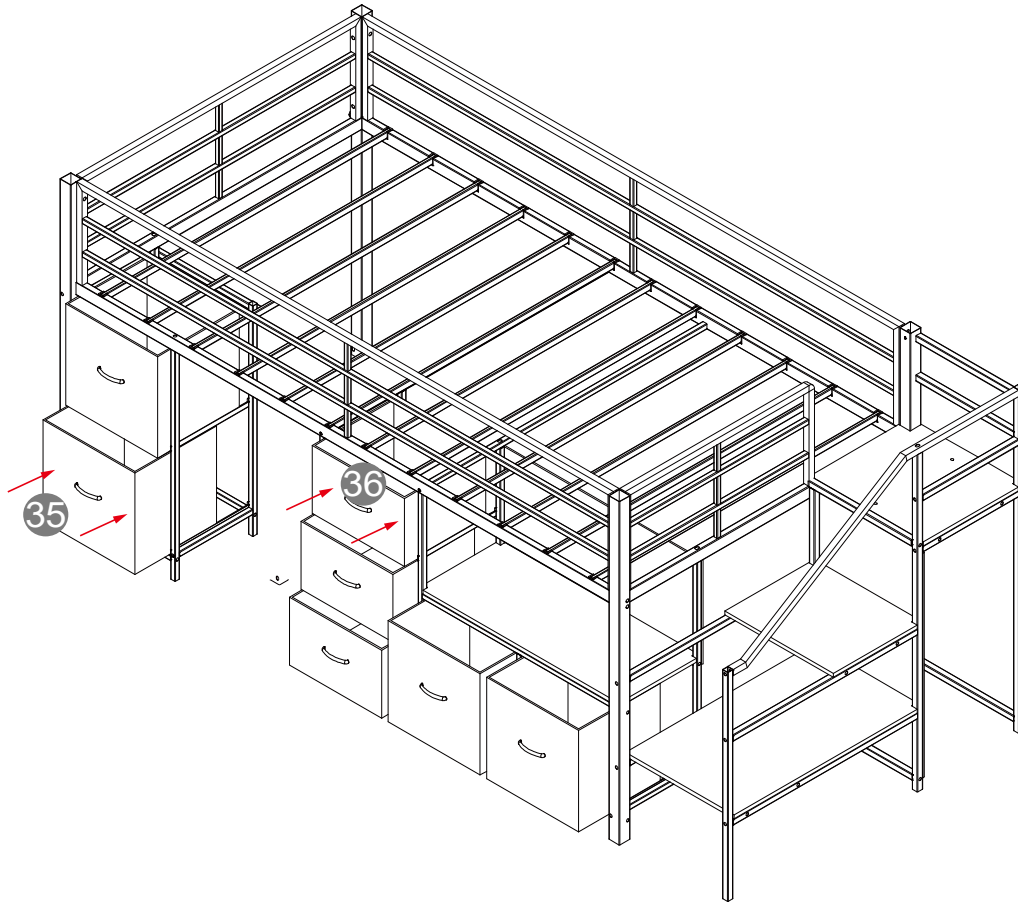


31

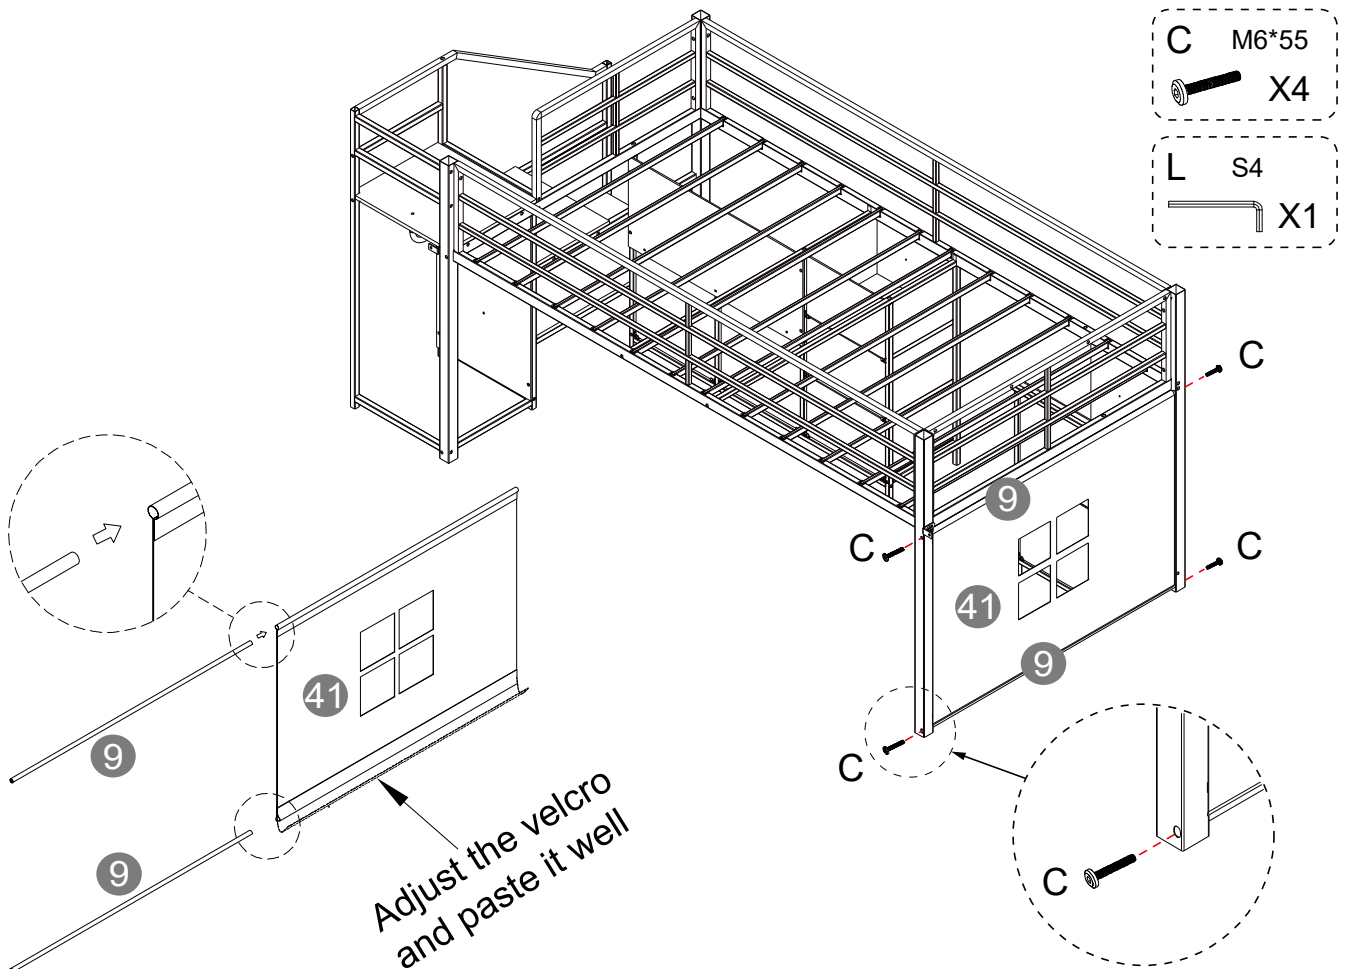


Assembly Instruction

32

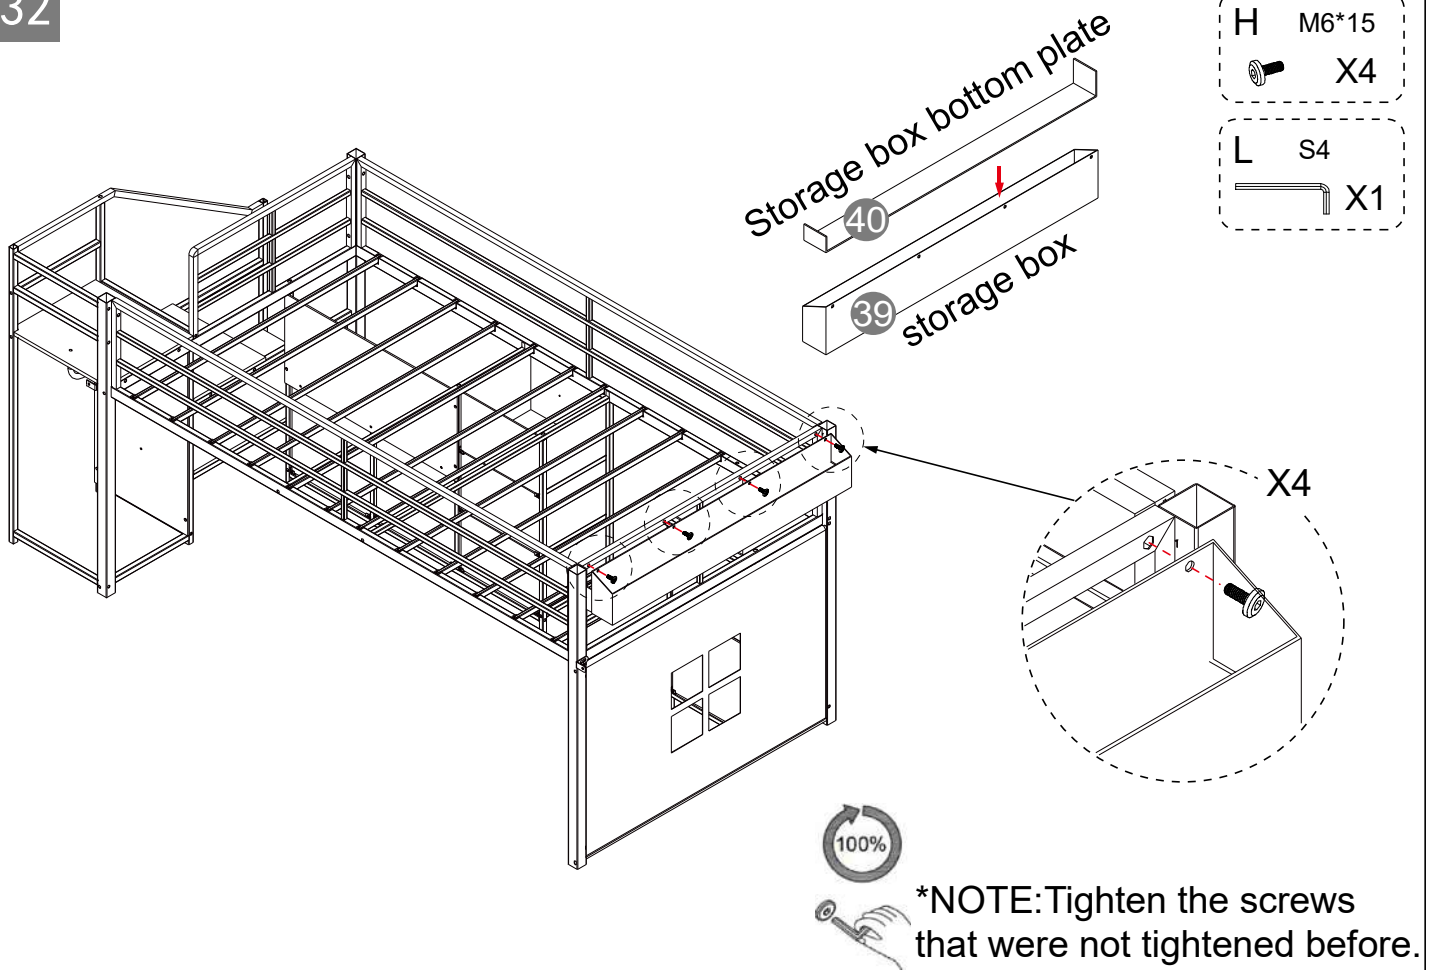

33

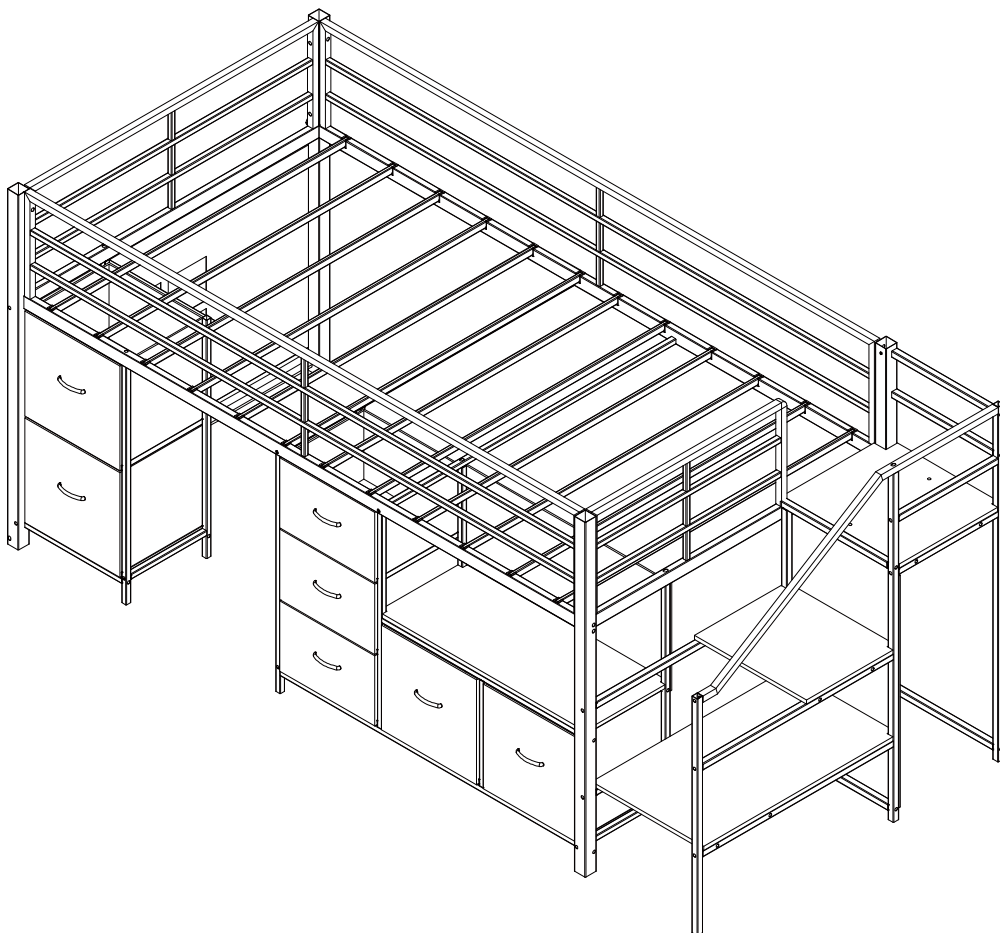

Assembly Instruction

34

DIY LED

