


HW-AM557837


CUSTOMER MANUAL

-V0.1

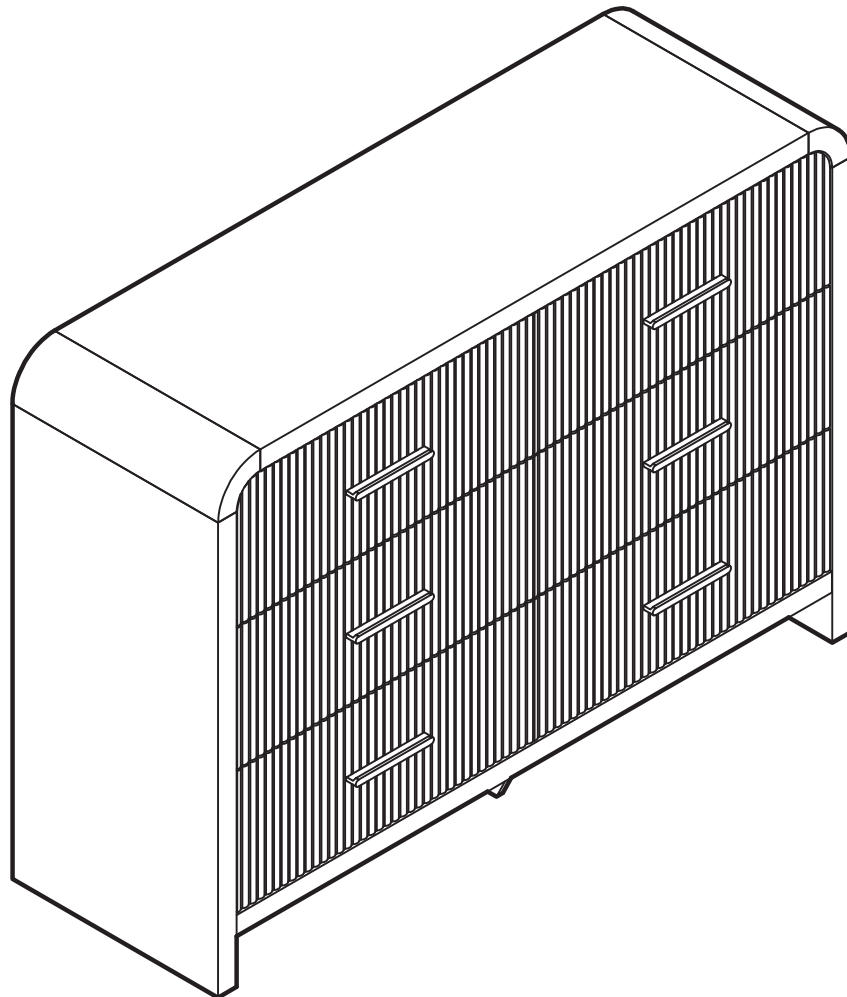

If you have any questions,
please contact us.

ASSEMBLY STRUCTURE REFERENCE DIAGRAM

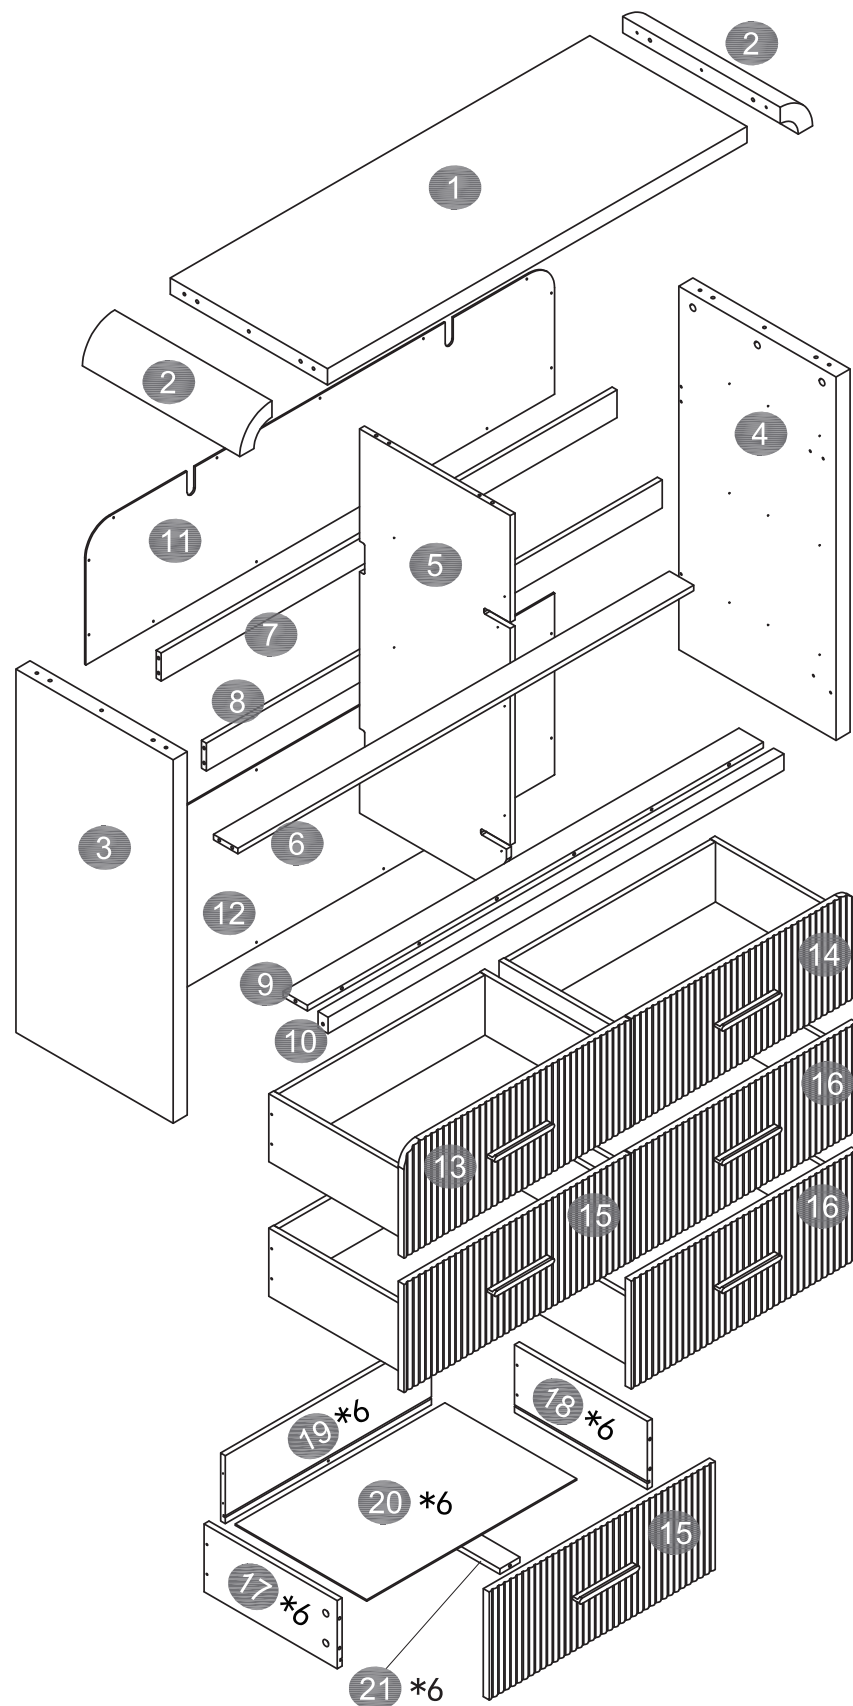


PARTS

A




φ 6x36mm
X **64+2**

B

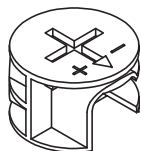

φ 15x10mm
X **64+2**

C



φ 5x45mm
X **2**

D



φ 6x30mm
X **4+2**

E




φ 8x30mm
X **8+2**

F



150x18x11mm
X **6**

G




M4x19mm
X **12+2**

H



φ 3x12mm
X **75+5**

I




φ 3x14mm
X **25+2**

J



φ 4x35mm
X **32+2**

K




X **2**

L




M8x37mm
X **2**


M



X **2**

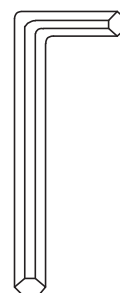

M4
X **1**

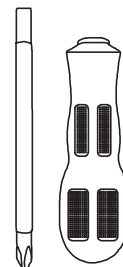

X **1**


PARTS




CL X 6



CR X 6







DL X 6




DR X 6

Attention: there are 4 kinds of slides in our product, in which 2 are Boards slides which marked as CL & CR and contains 6 pieces respectively, and the other 2 are the Drawer slides, which marked as DL & DR and contains 6 pieces respectively.

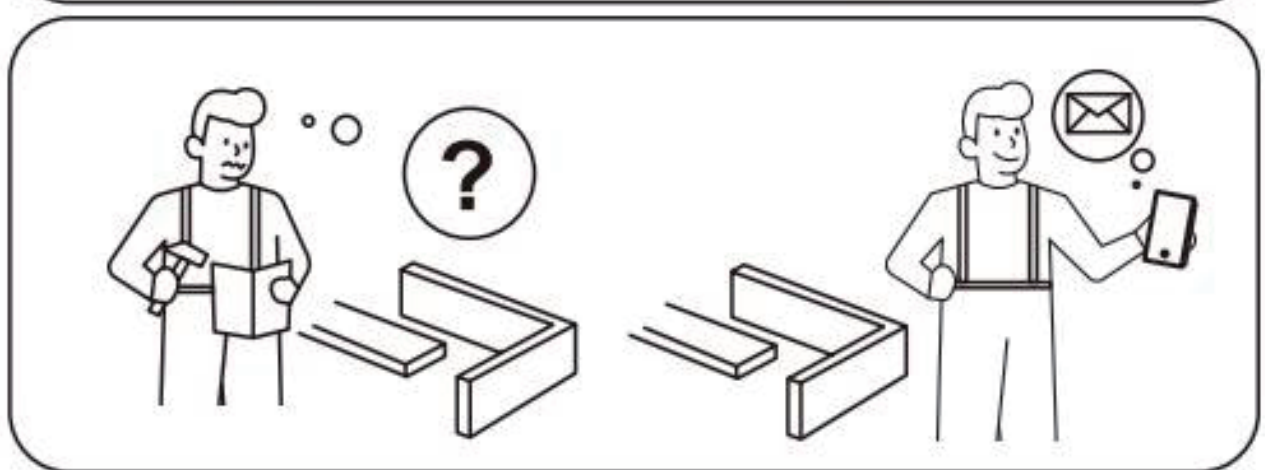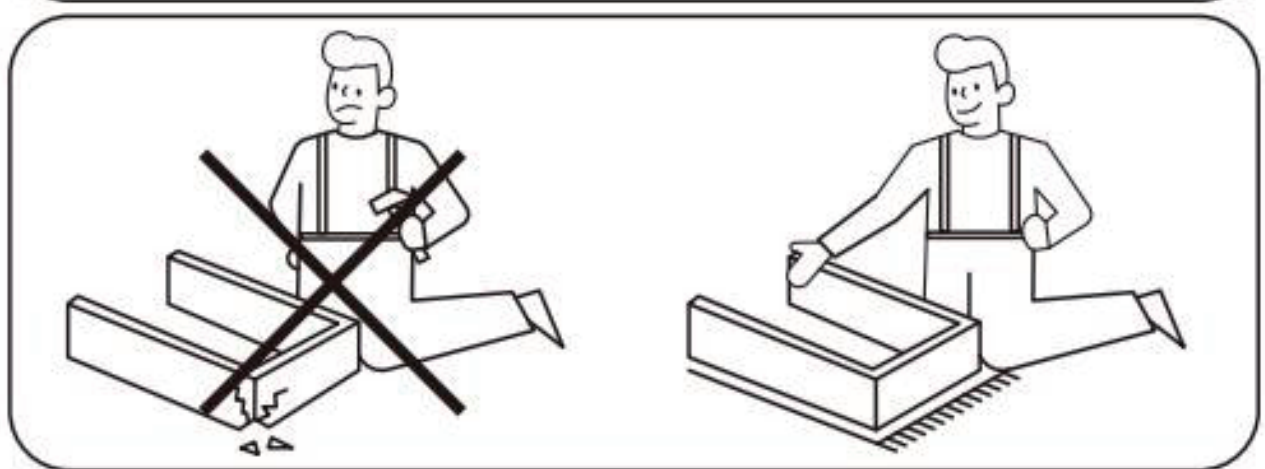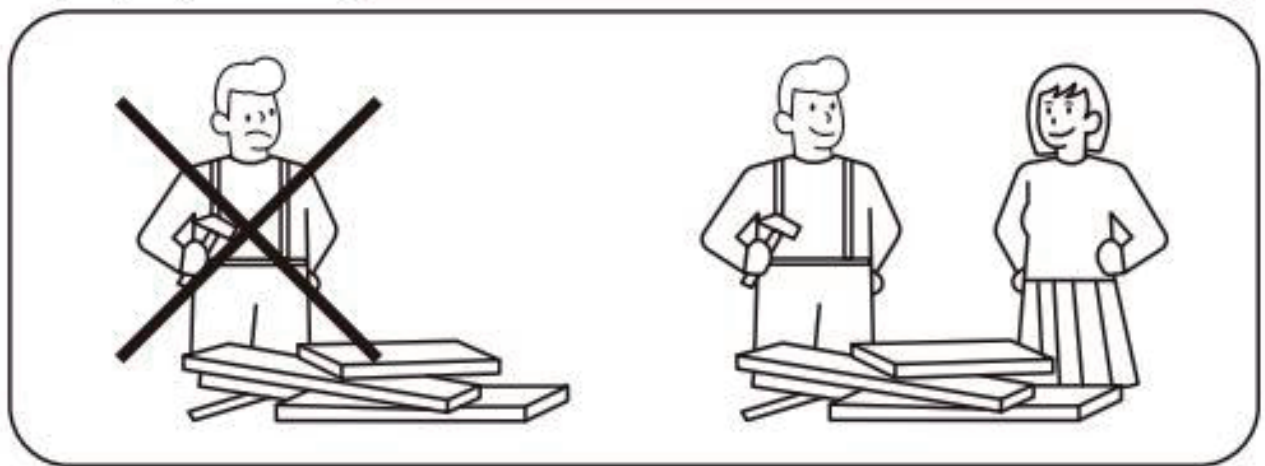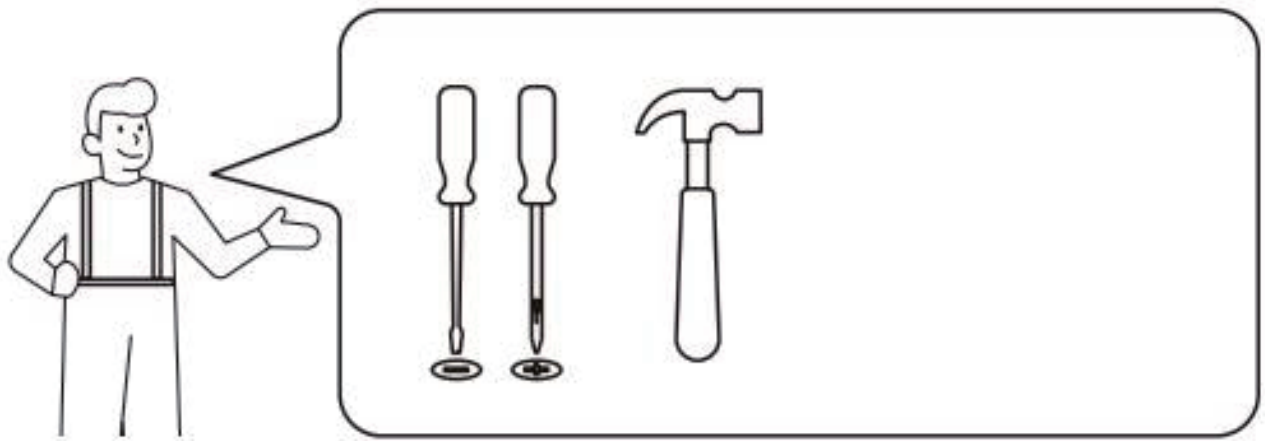


How to work the Knock Down (kd) assembly system

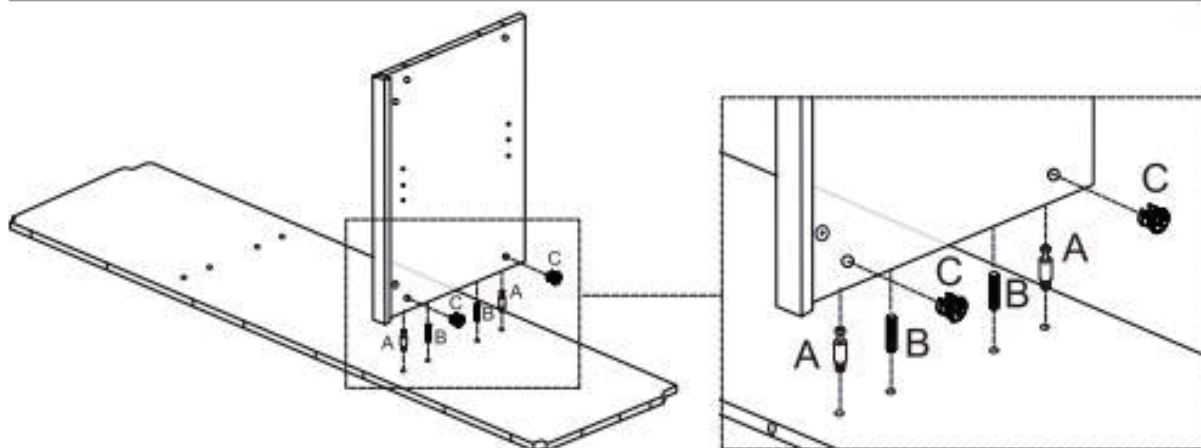


How to install Wood Dowel


Insert the wood dowel [B] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

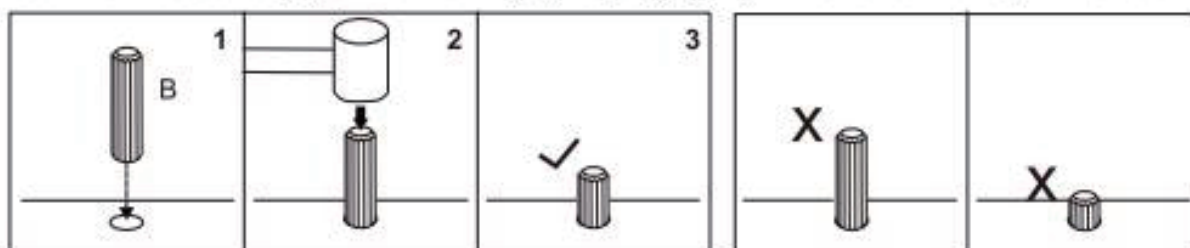









How to use the Cam Lock system

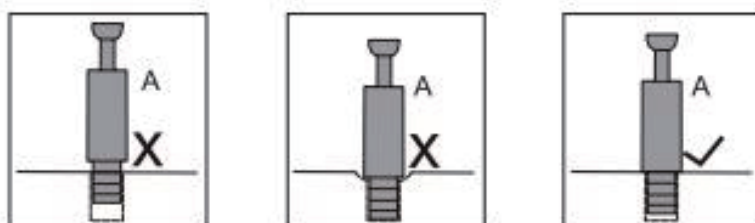









1. Screw the cam bolt [A] into the threaded insert on the panel.
2. Connect both panels together making sure cam bolt [A] goes into the pre-drilled large hole on the end of panel for cam lock [C].
3. Insert the cam lock [C] into the pre-drilled large hole on the panel. **Make sure the cross slot of cam lock [C] faces out.**
4. Rotate the cam lock [C] **clockwise** with a self-supplied philips screwdriver to lock the cam bolt [A] in place.

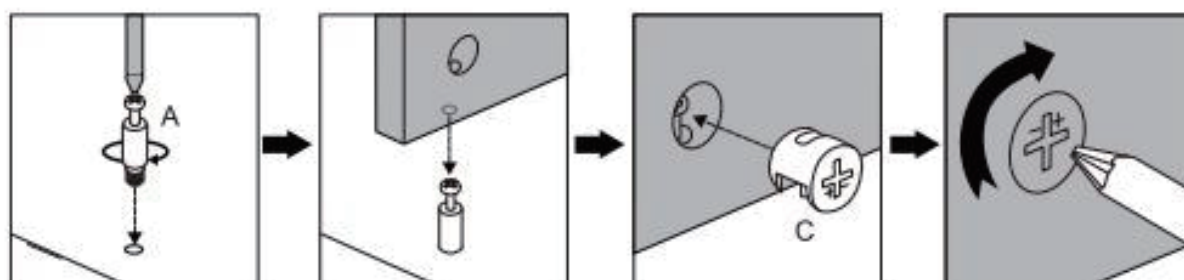

Parts Ldentification

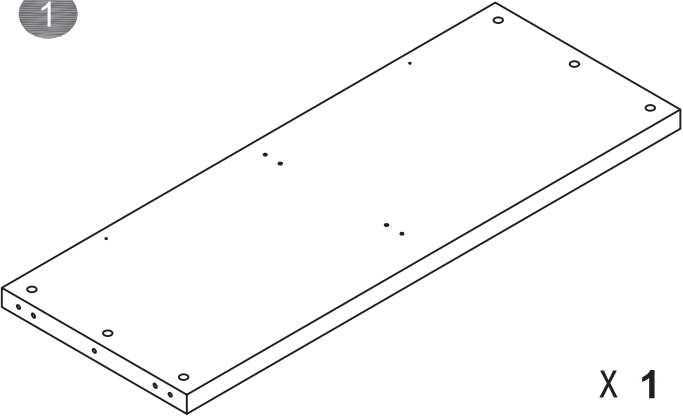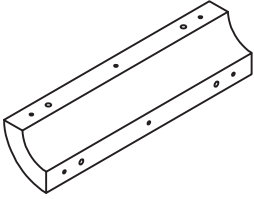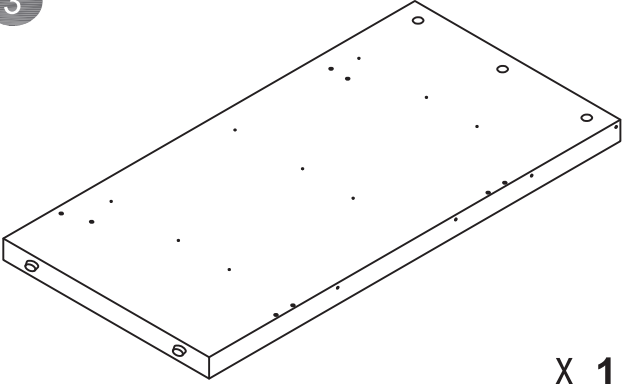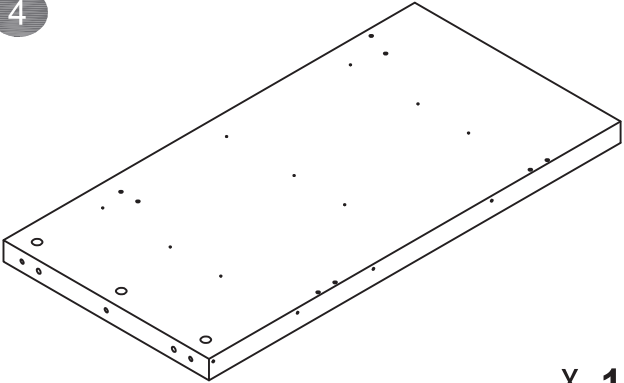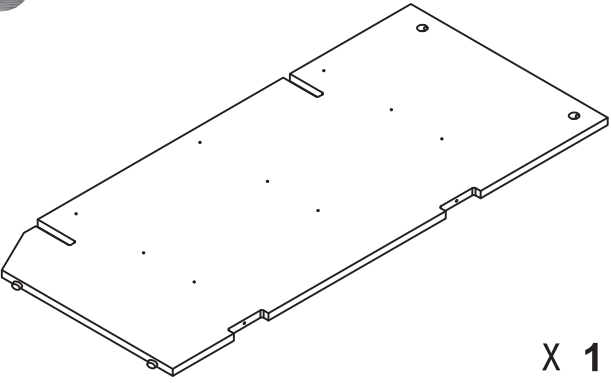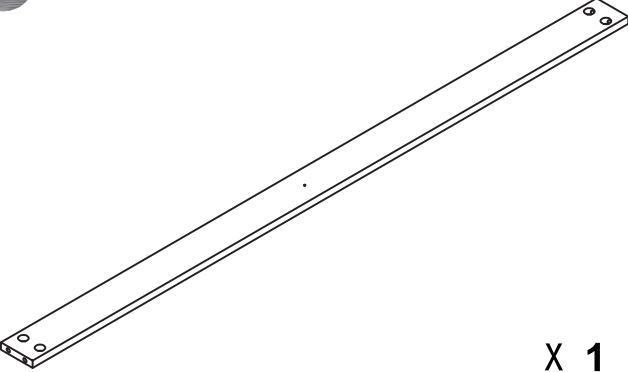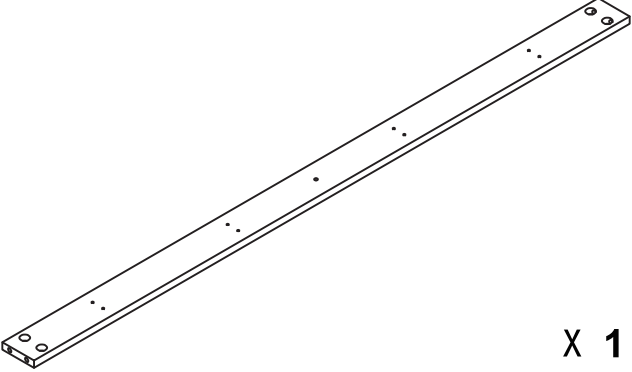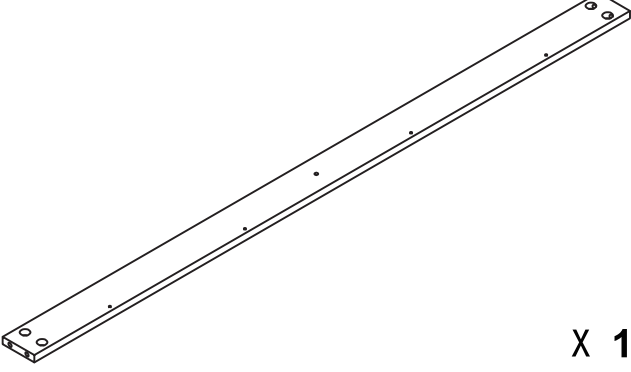
1  X 1	2  X 2
3  X 1	4  X 1
5  X 1	6  X 1
7  X 1	8  X 1

Parts Ldentification

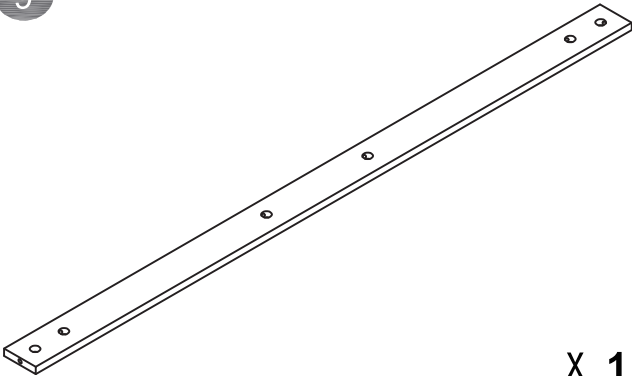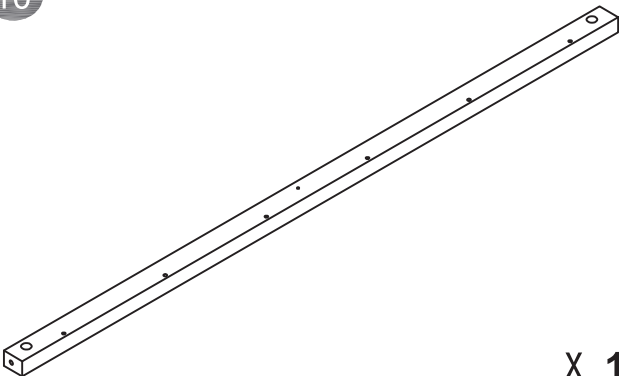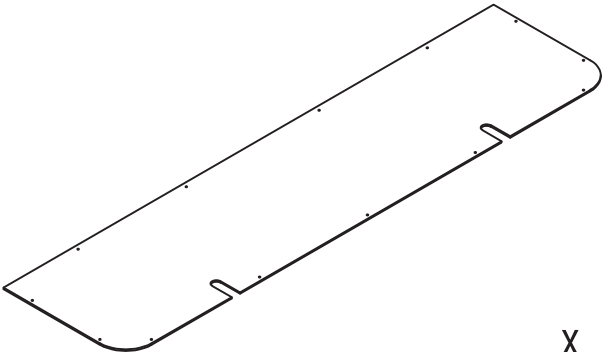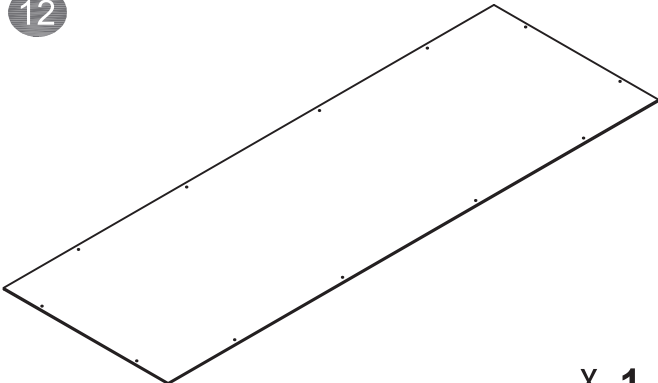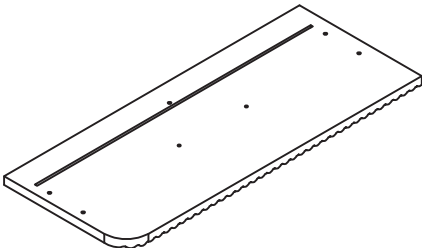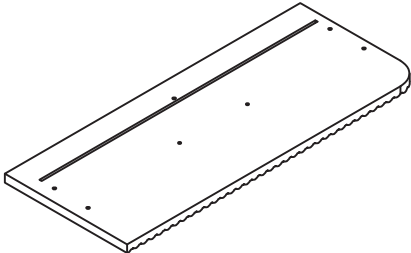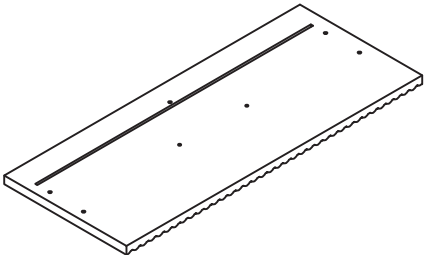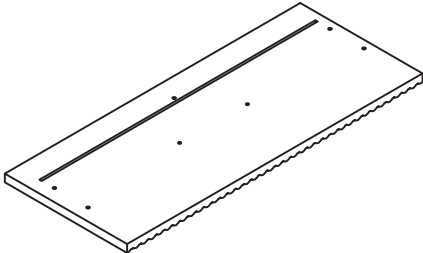9  X 1	10  X 1
11  X 1	12  X 1
13  X 1	14  X 1
15  X 2	16  X 2


Parts Ldentification

17

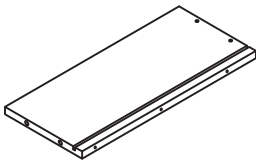


X 6

18

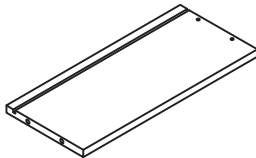


X 6

19

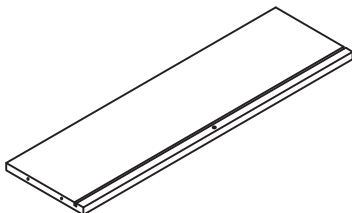


X 6

20

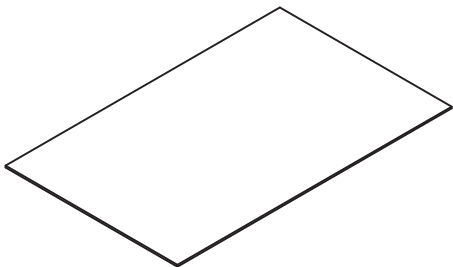

X 6

21

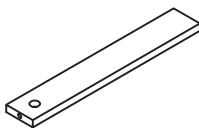


X 6

Step 1

Using Screws (H) to assemble Slide (CL) to Board (③).

TIP: The screws for the slide must be tightened very tightly and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.

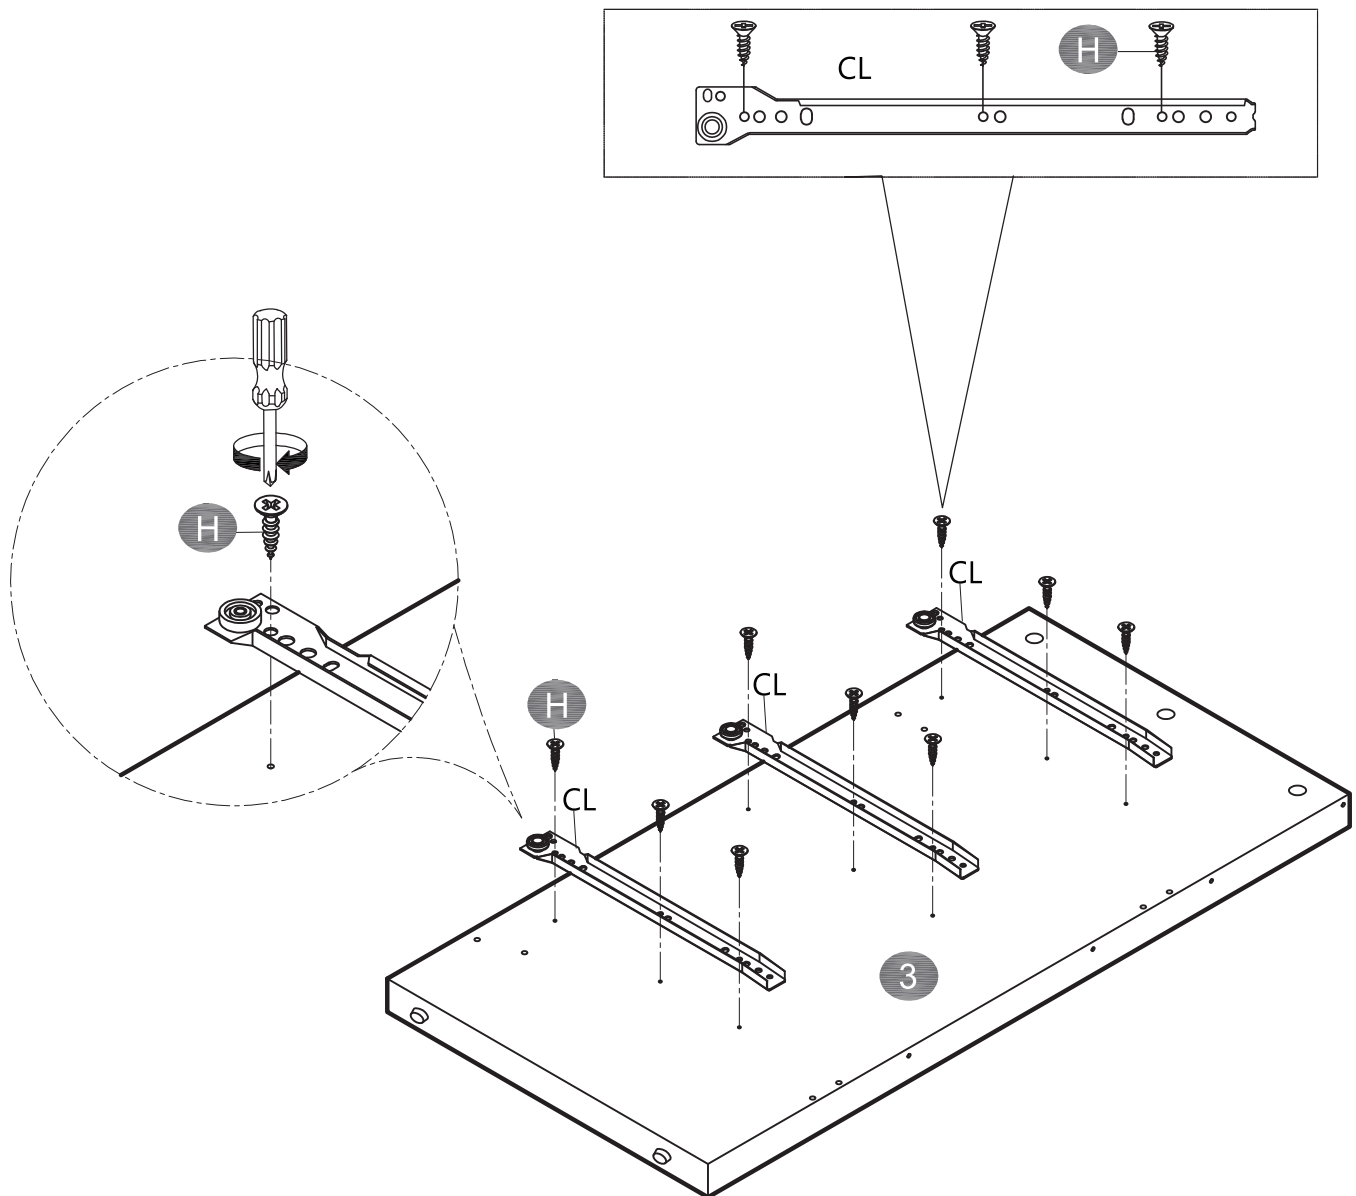


H		x 9
CL		x 3

Step 2

Using Screws (H) to assemble Slide (CR) to Board (④).


TIP: The screws for the slide must be tightened very tightly and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.

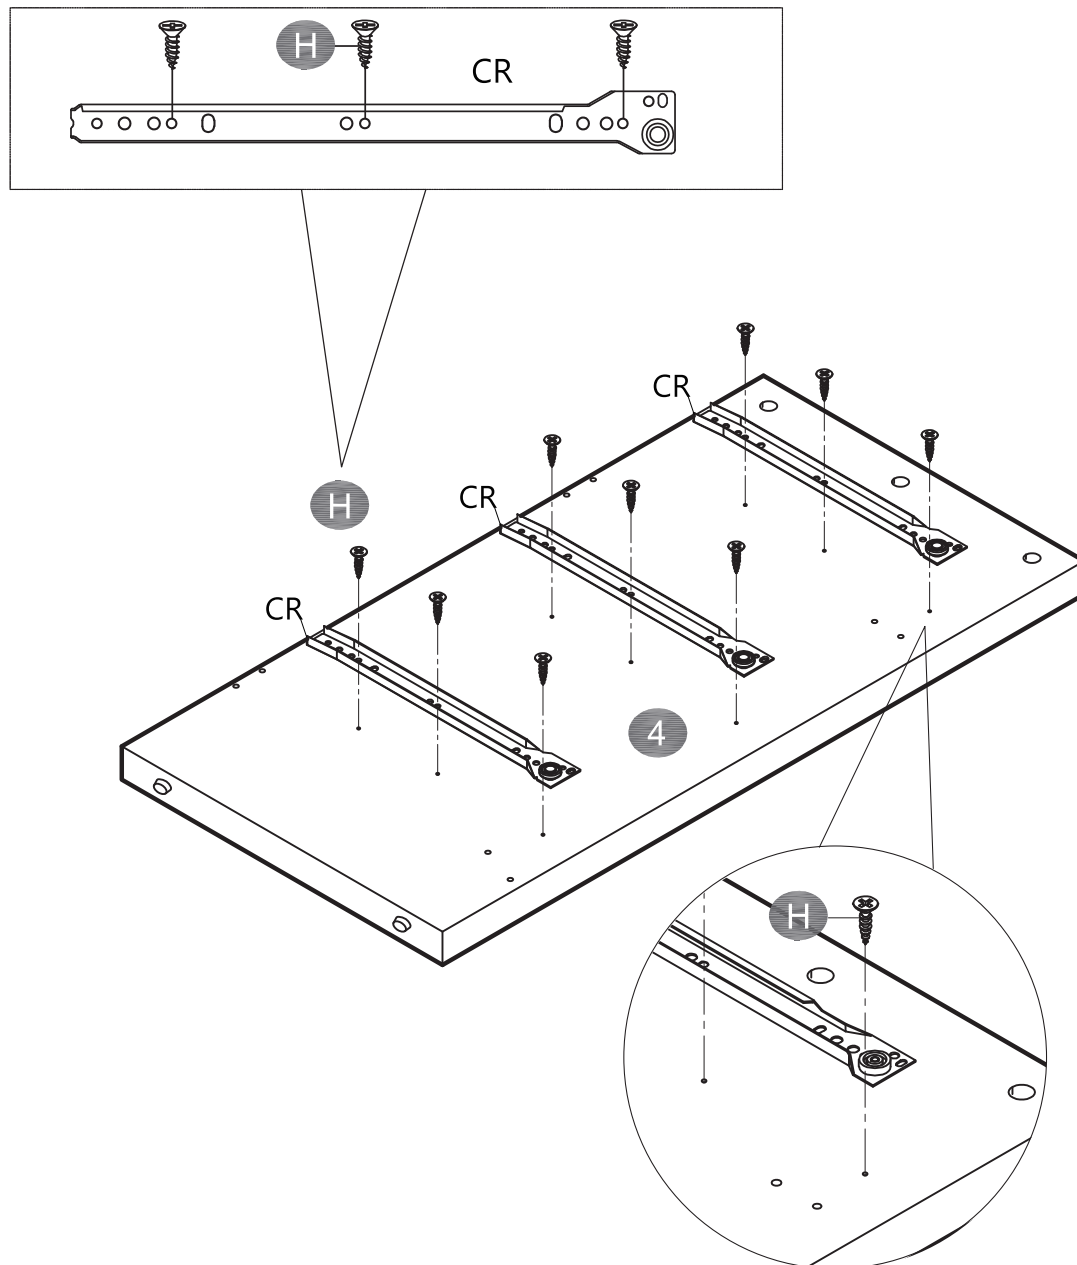

		x 9
CR		x 3


Step 3

Securing Cam Bolt (A) into Board (③).

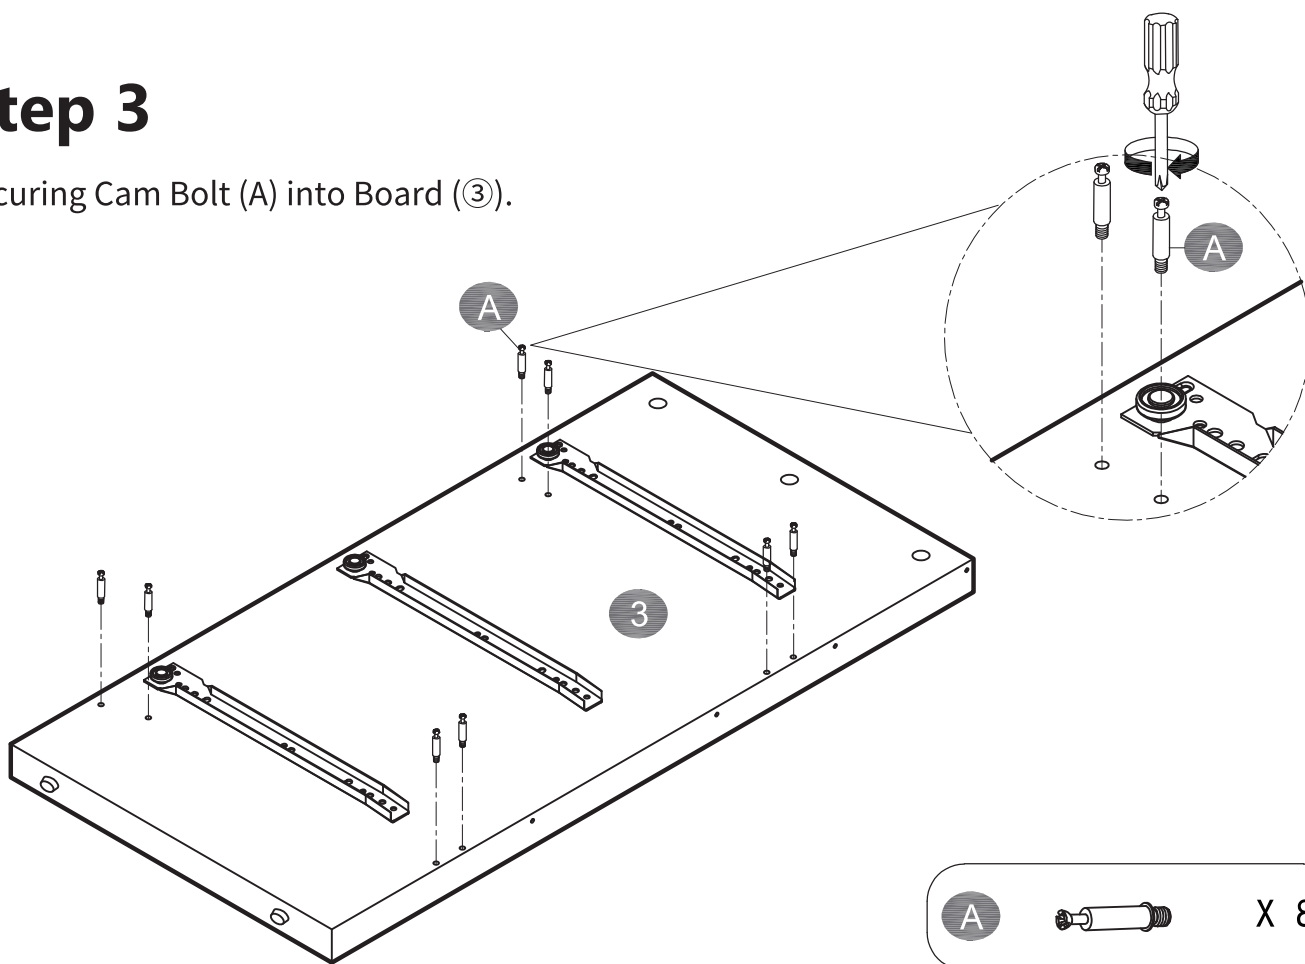

Step 4

Securing Cam Bolt (A) into Board (④).

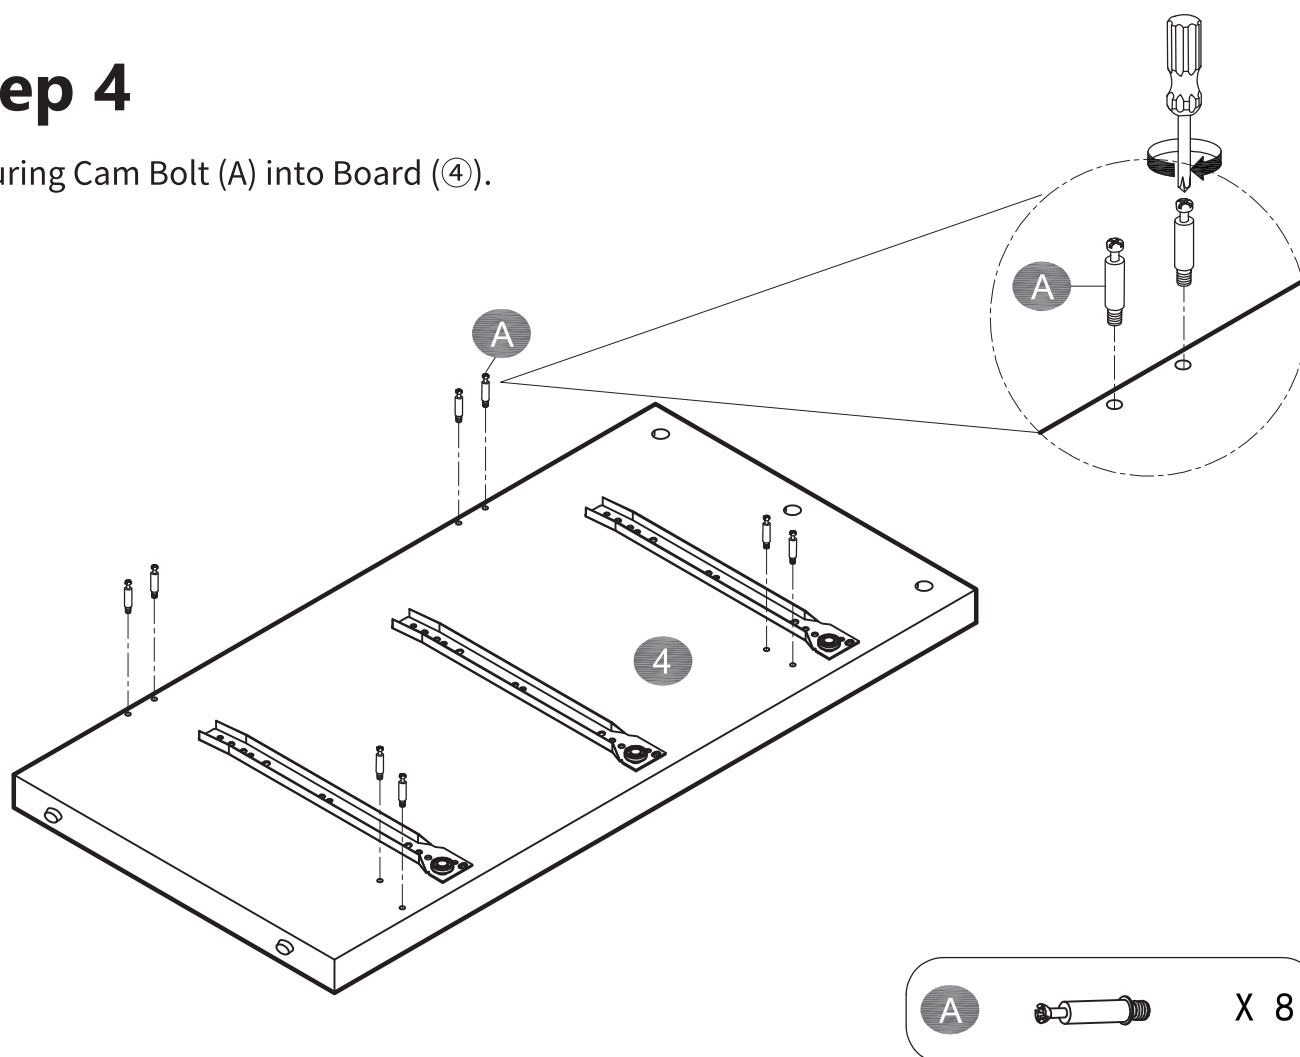


Step 5

Using Screws (H) to assemble Slide (CL) to Board (⑤).


Then Flip the board 180°, Using Screws (H) to assemble Slide (CR) to Board (⑤).

TIP: The screws for the slide must be tightened very tightly and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.

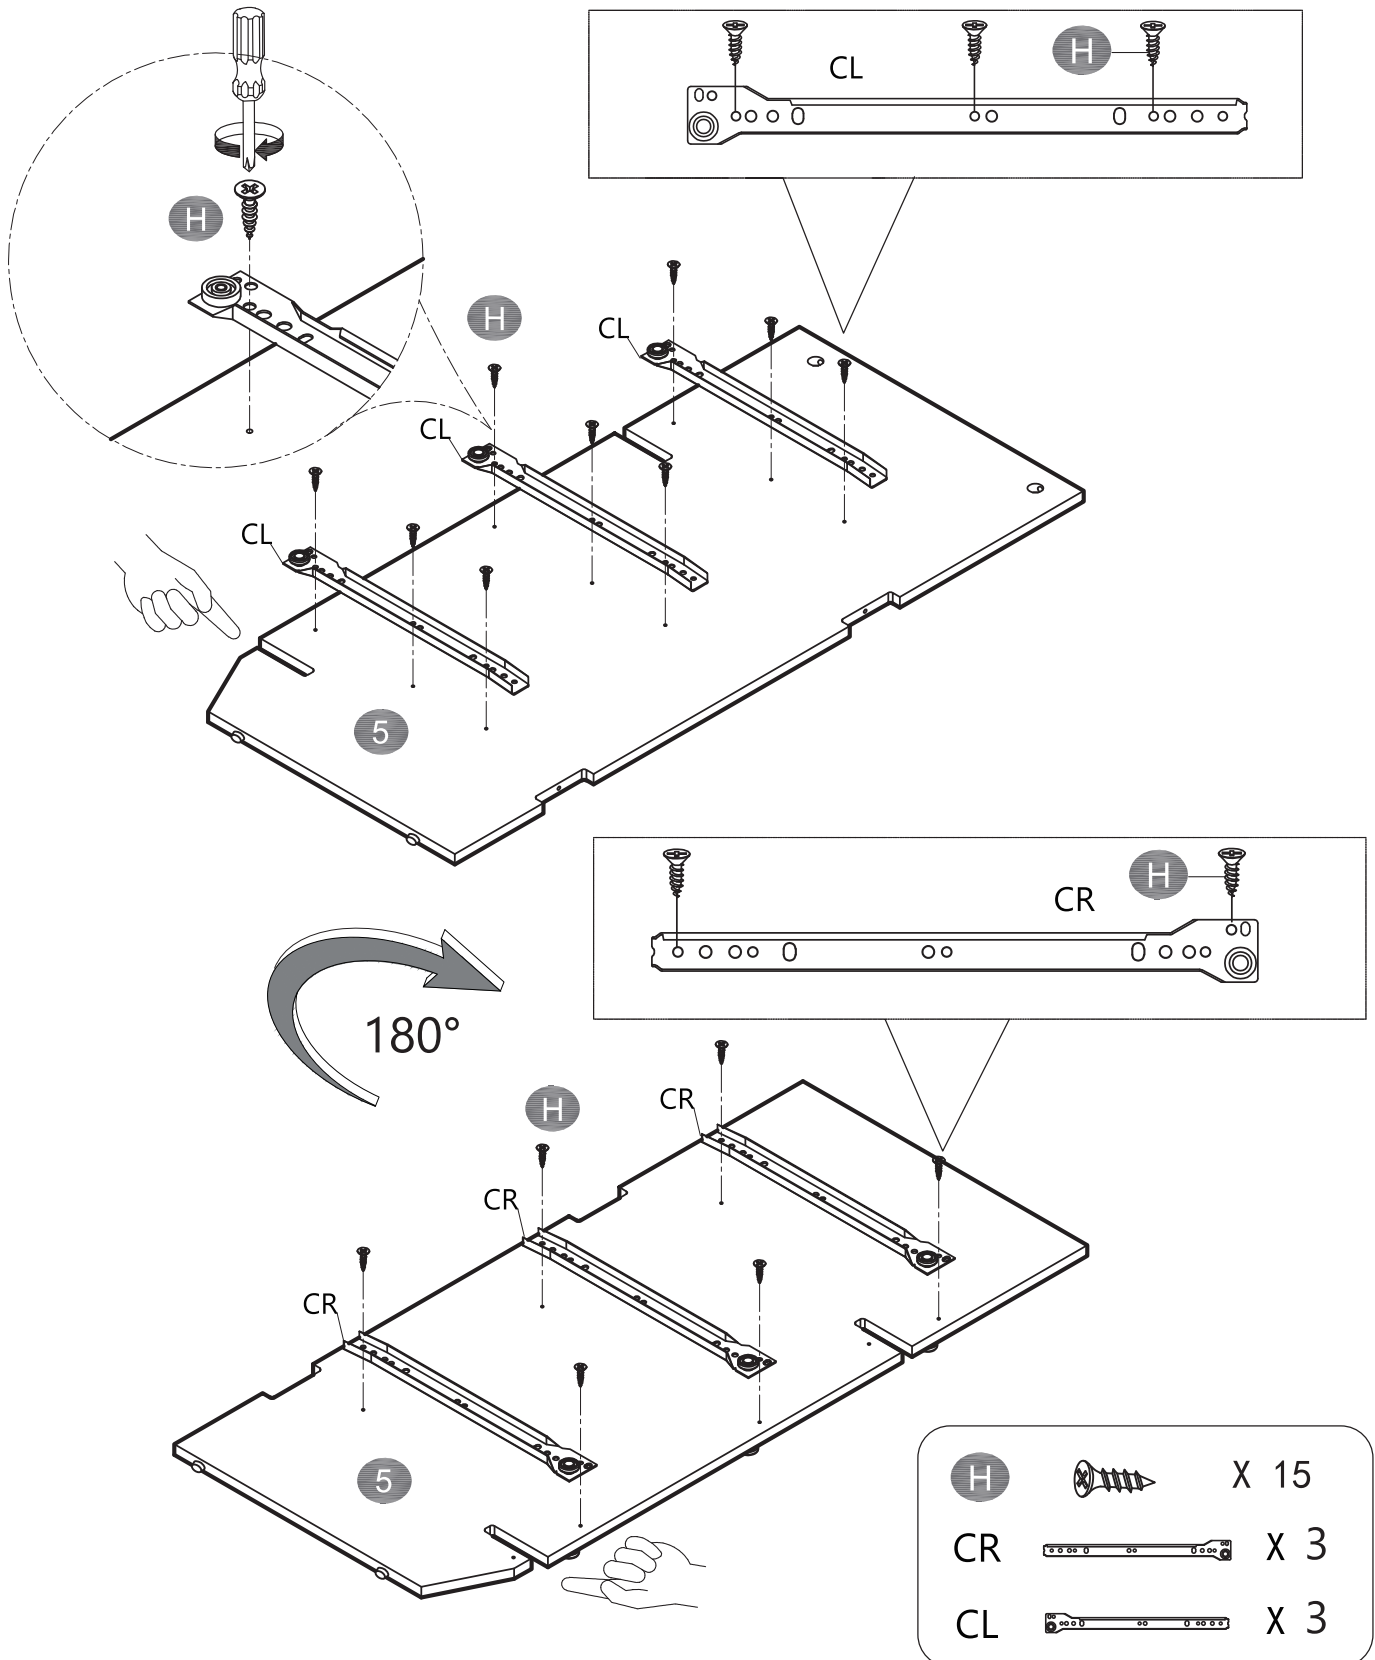

Step 6


Using Screws (H) secure Support Lock (M) to the Board (⑤)

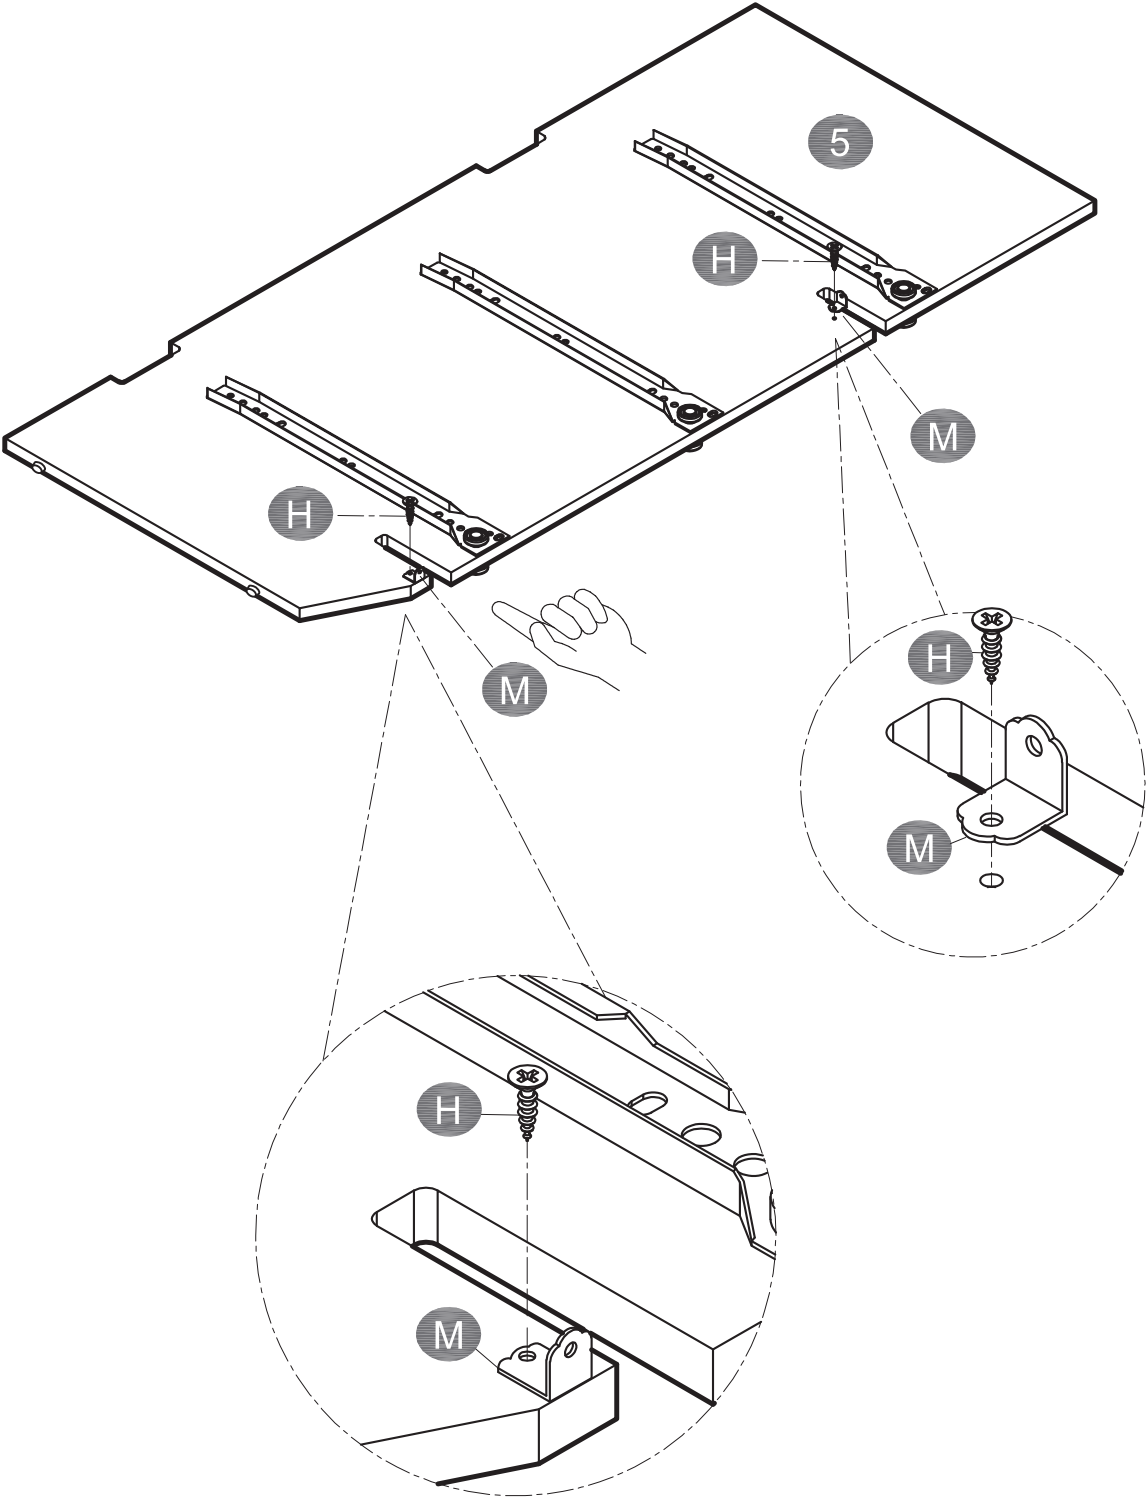

H		X 2
M		X 2



Step 7

Securing Cam Bolt (A) into Board (10). Inserting Wooden Dowel (D) into Board (10).

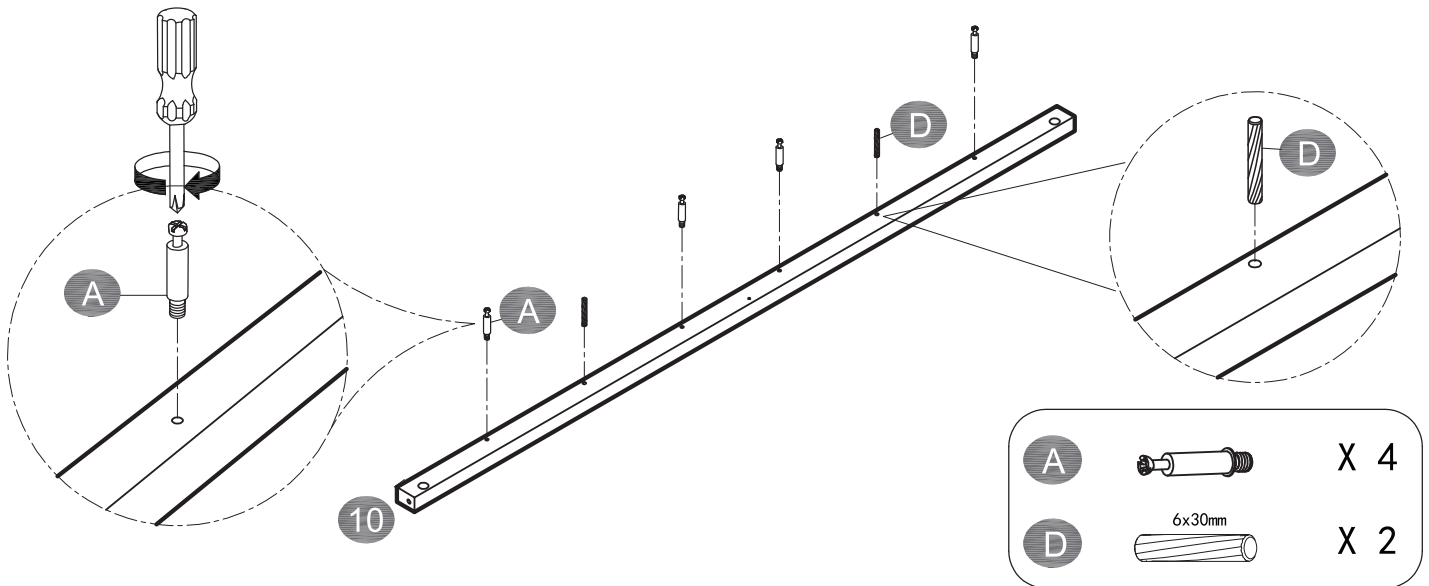

Step 8


Attach Board (9) to Board (10). Using Cam Lock (B) secure Board (9) to Board (10).

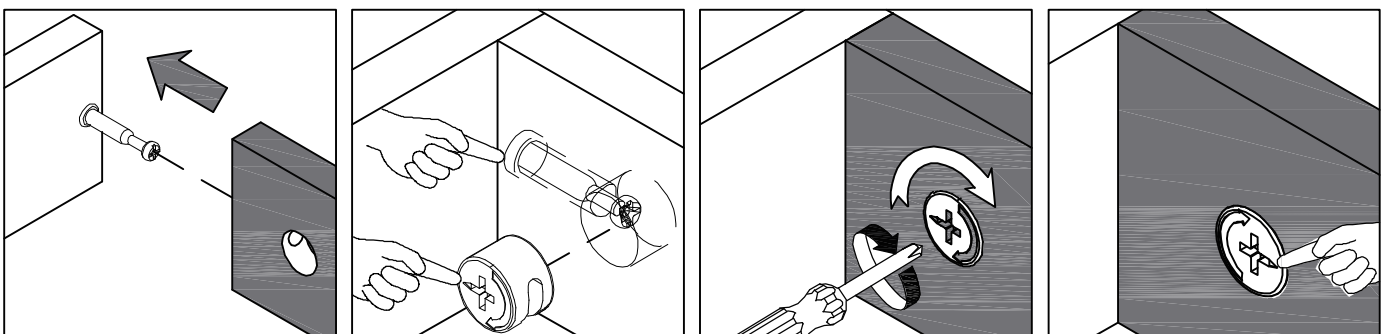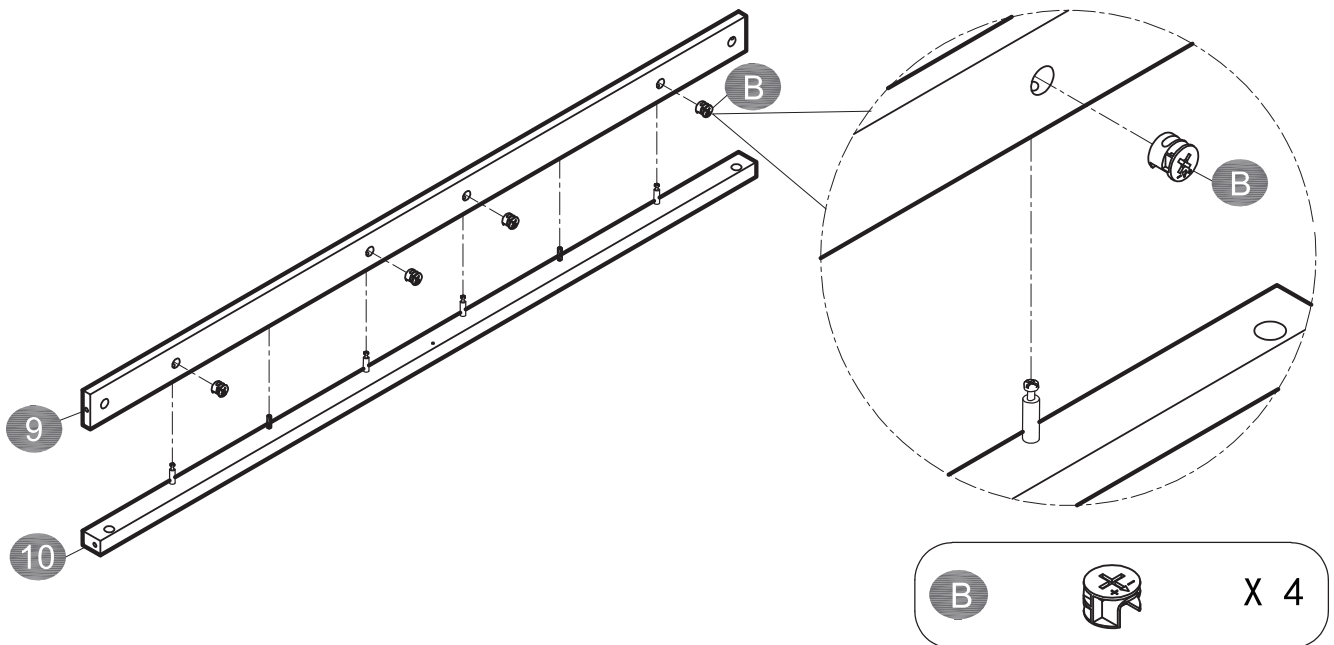

Step 9

Attach Board (⑥&⑨&⑩) to Board (⑤).

Using Screws (H) secure Support Lock (M) to the Board (⑥&⑩)

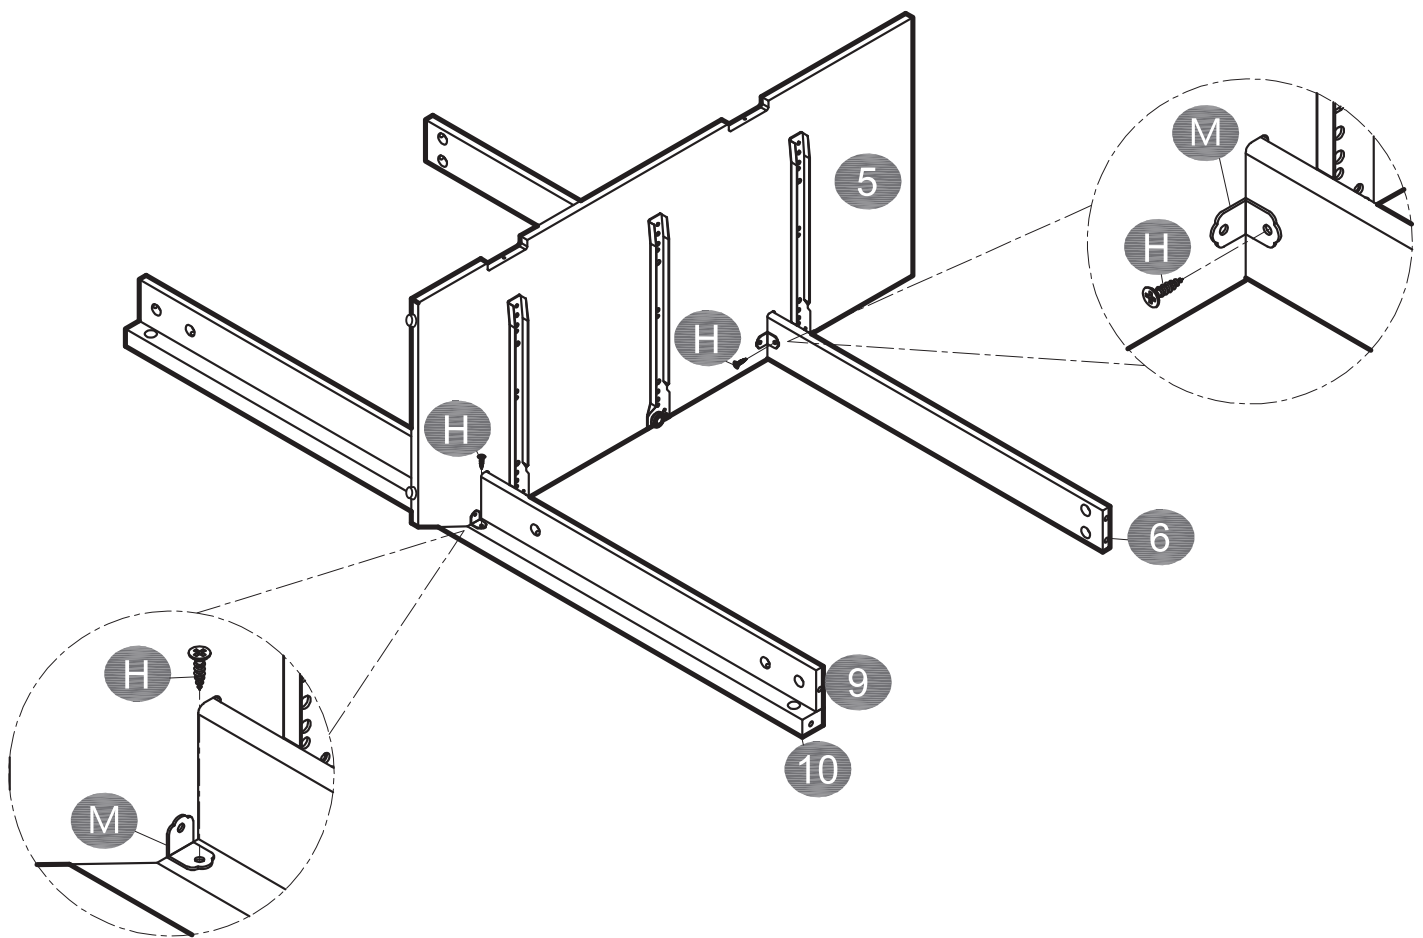



H



X 2


Step 10

Using Screws (C) and a 7-Shaped Wrench secure Board (7&8) to Board (5).
Using Cam Lock (B) secure Board (4) to Board (6&7&8&9&10).

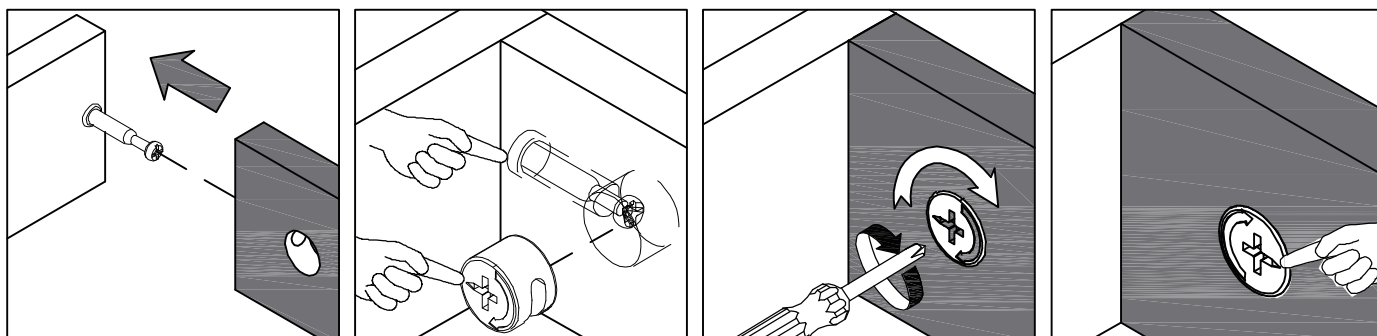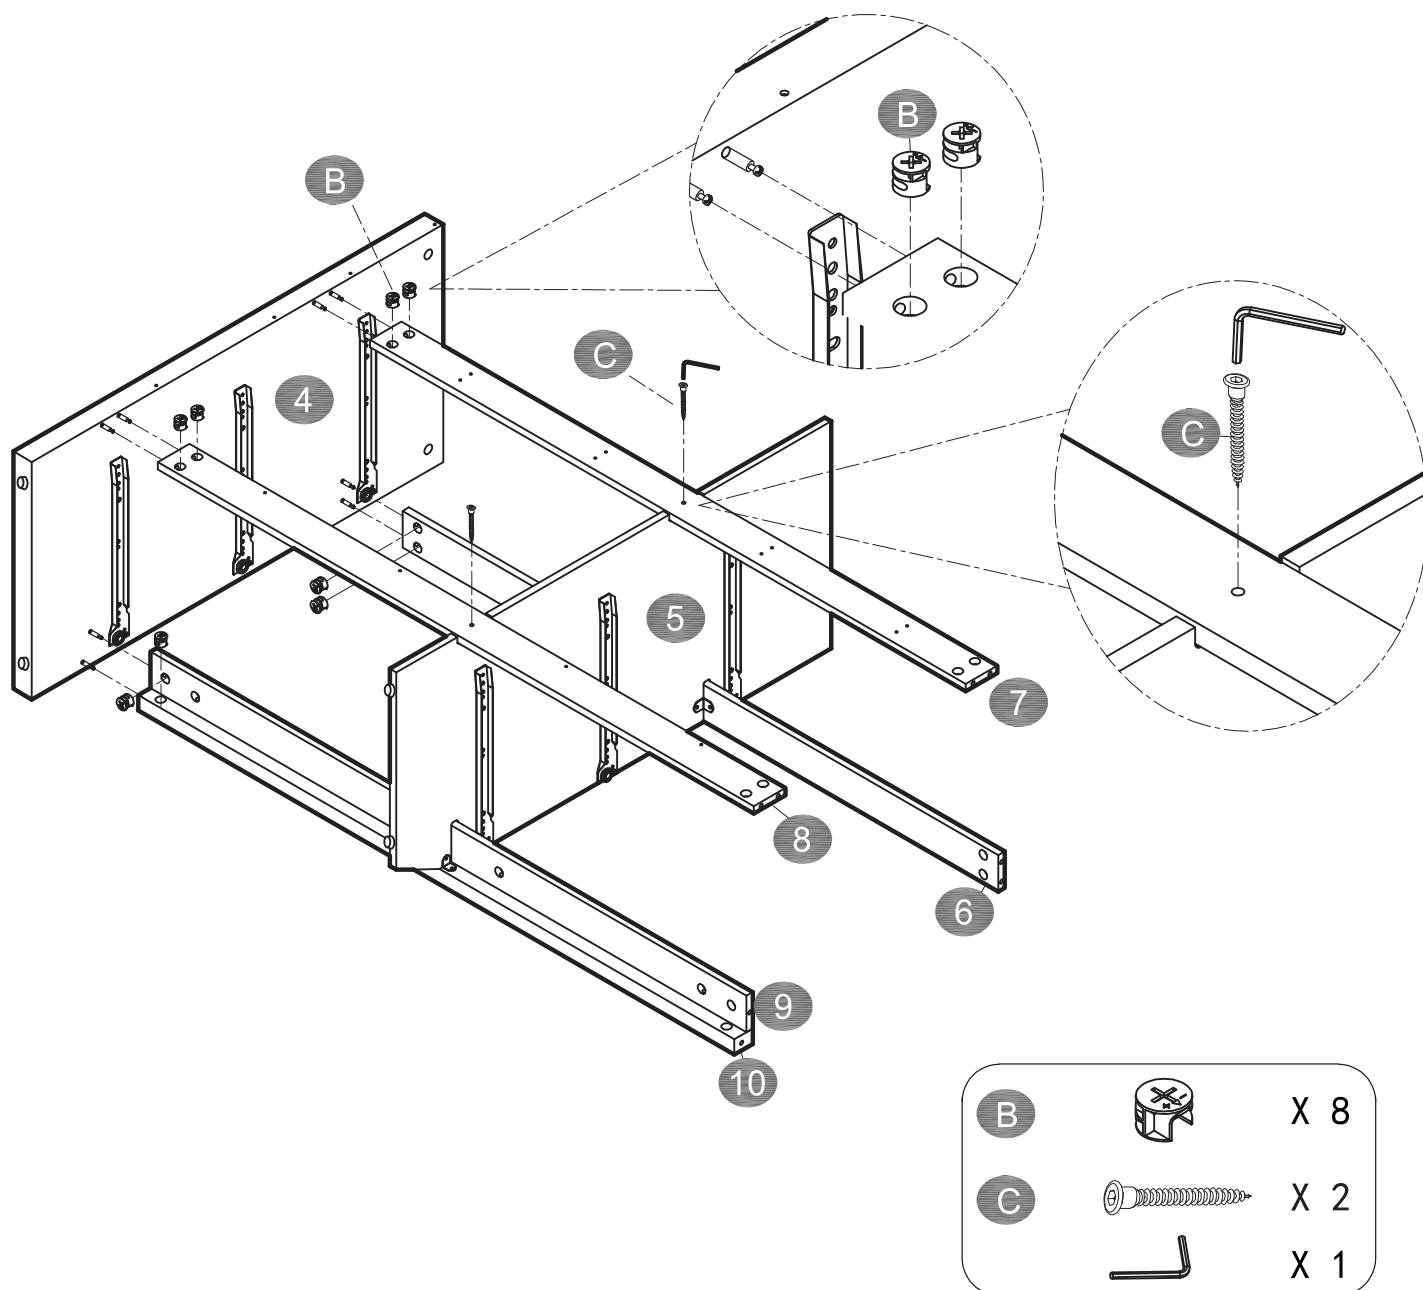

Step 11


Using Cam Lock (B) secure Board (3) to Board (6&7&8&9&10).

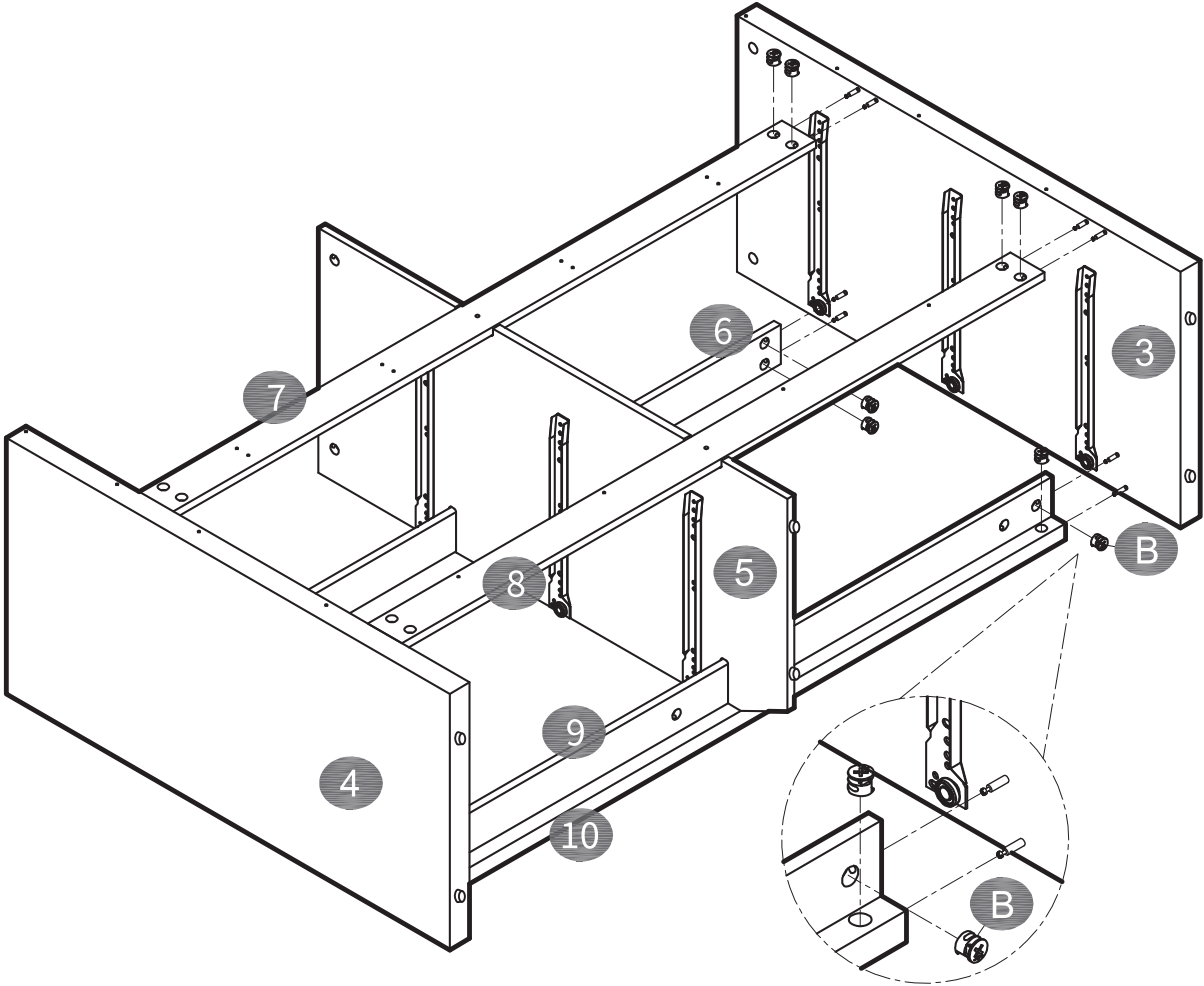

B




X 8

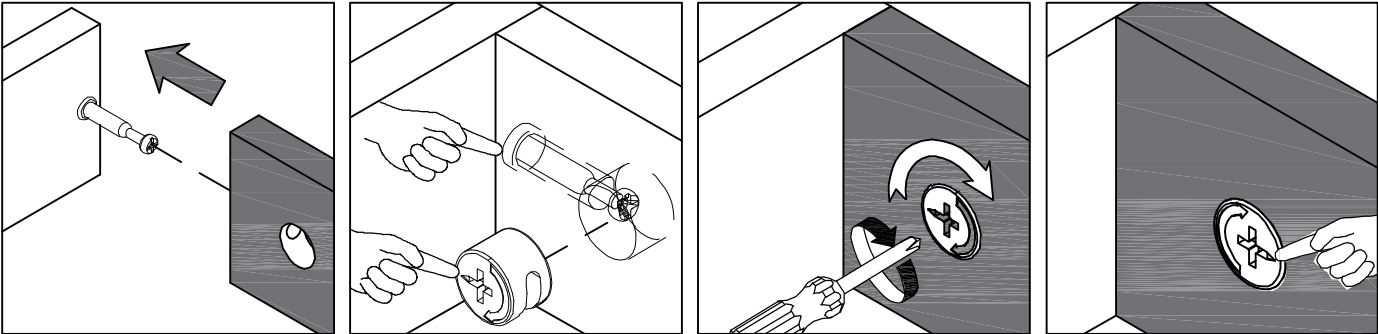

Step 12

Securing Cam Bolt (A) into Board (2).

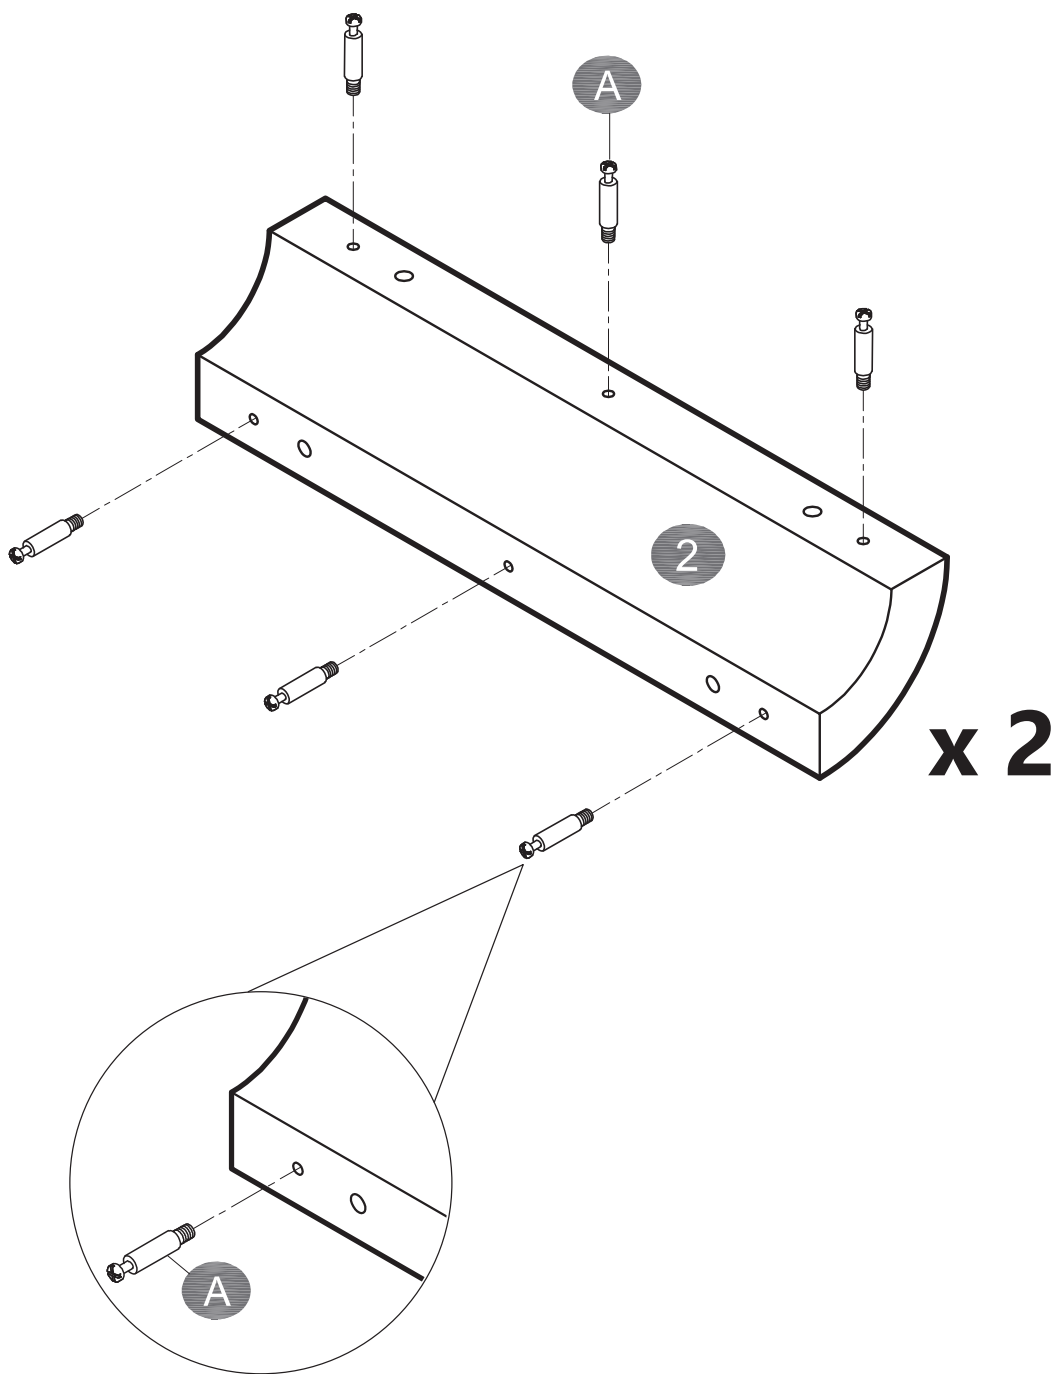


A

X 12

Step 13


Securing Cam Bolt (A) into Board (①).
Using Screws (H) secure Anti-tip Kit (K) to the Board (①).

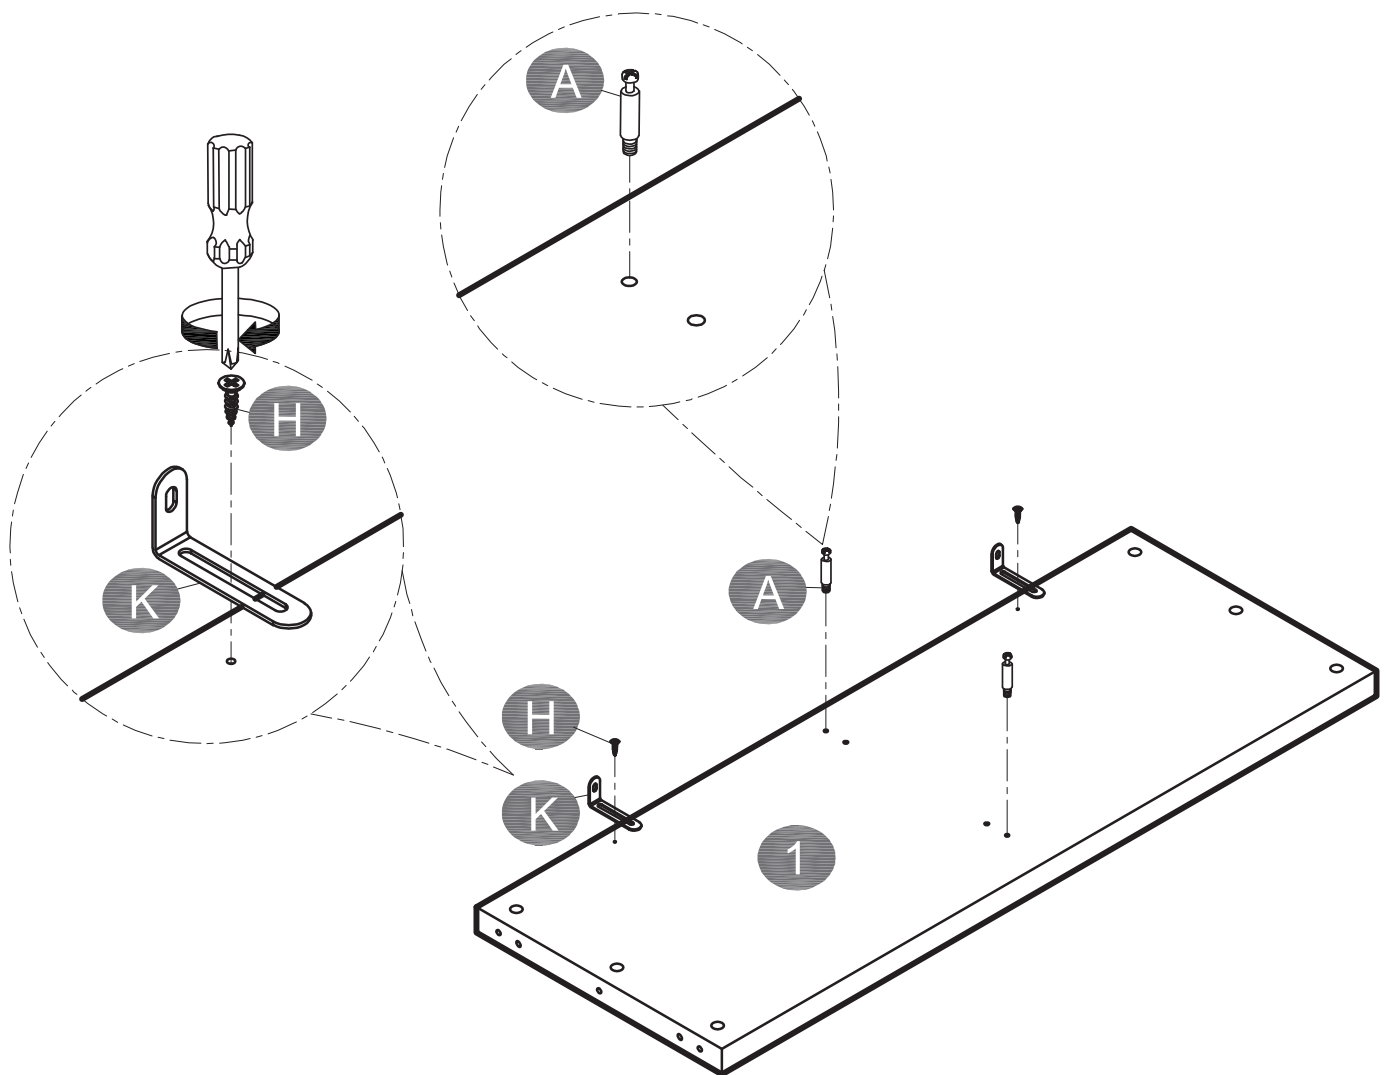






A		X 2
H		X 2
K		X 2

Step 14

Inserting Wooden Dowel (E) into Board (①).
Using Cam Lock (B) secure Board (②) to Board (①).

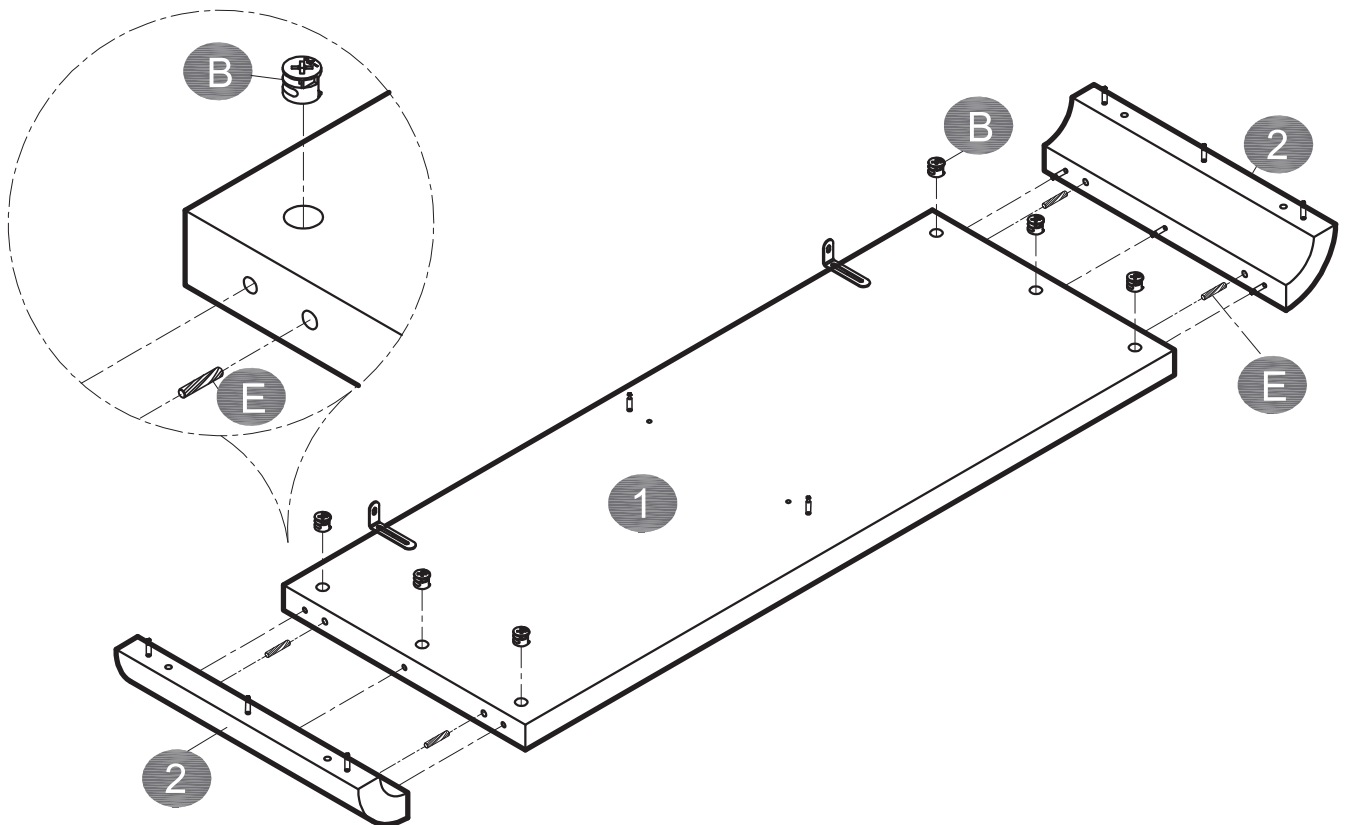

B		X 6
E	 8x30mm	X 4


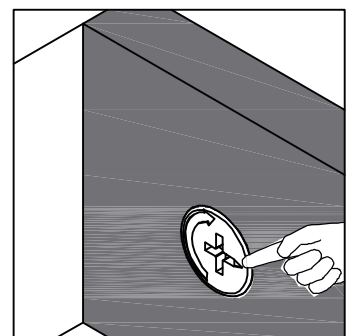
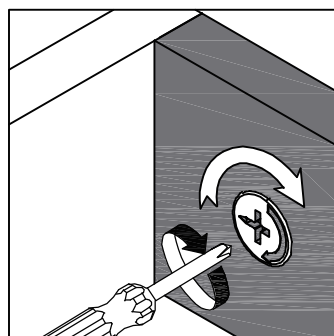
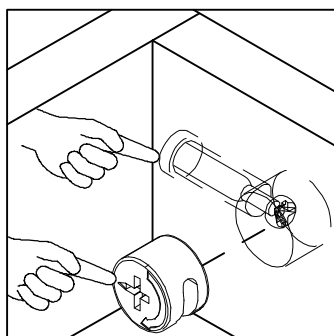
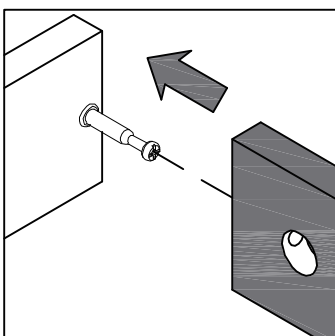


Step 15

Inserting Wooden Dowel (E) into Board (③&④).



Inserting Wooden Dowel (D) into Board (⑤).

Using Cam Lock (B) secure Board (①&②) to Board (③&④&⑤).

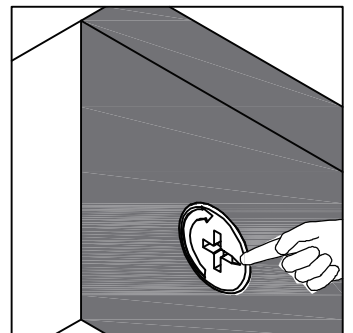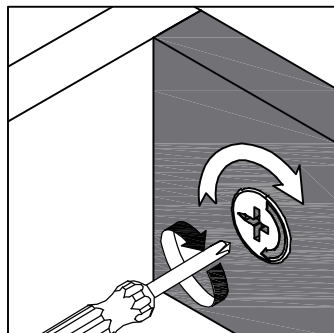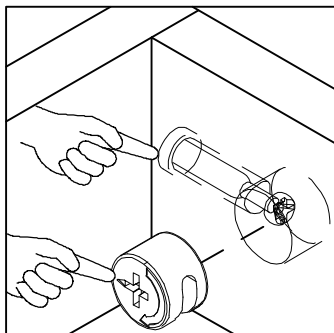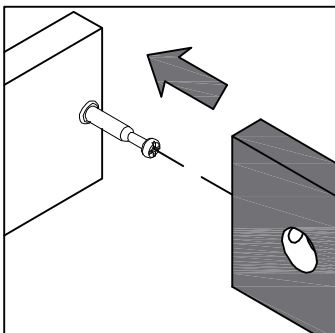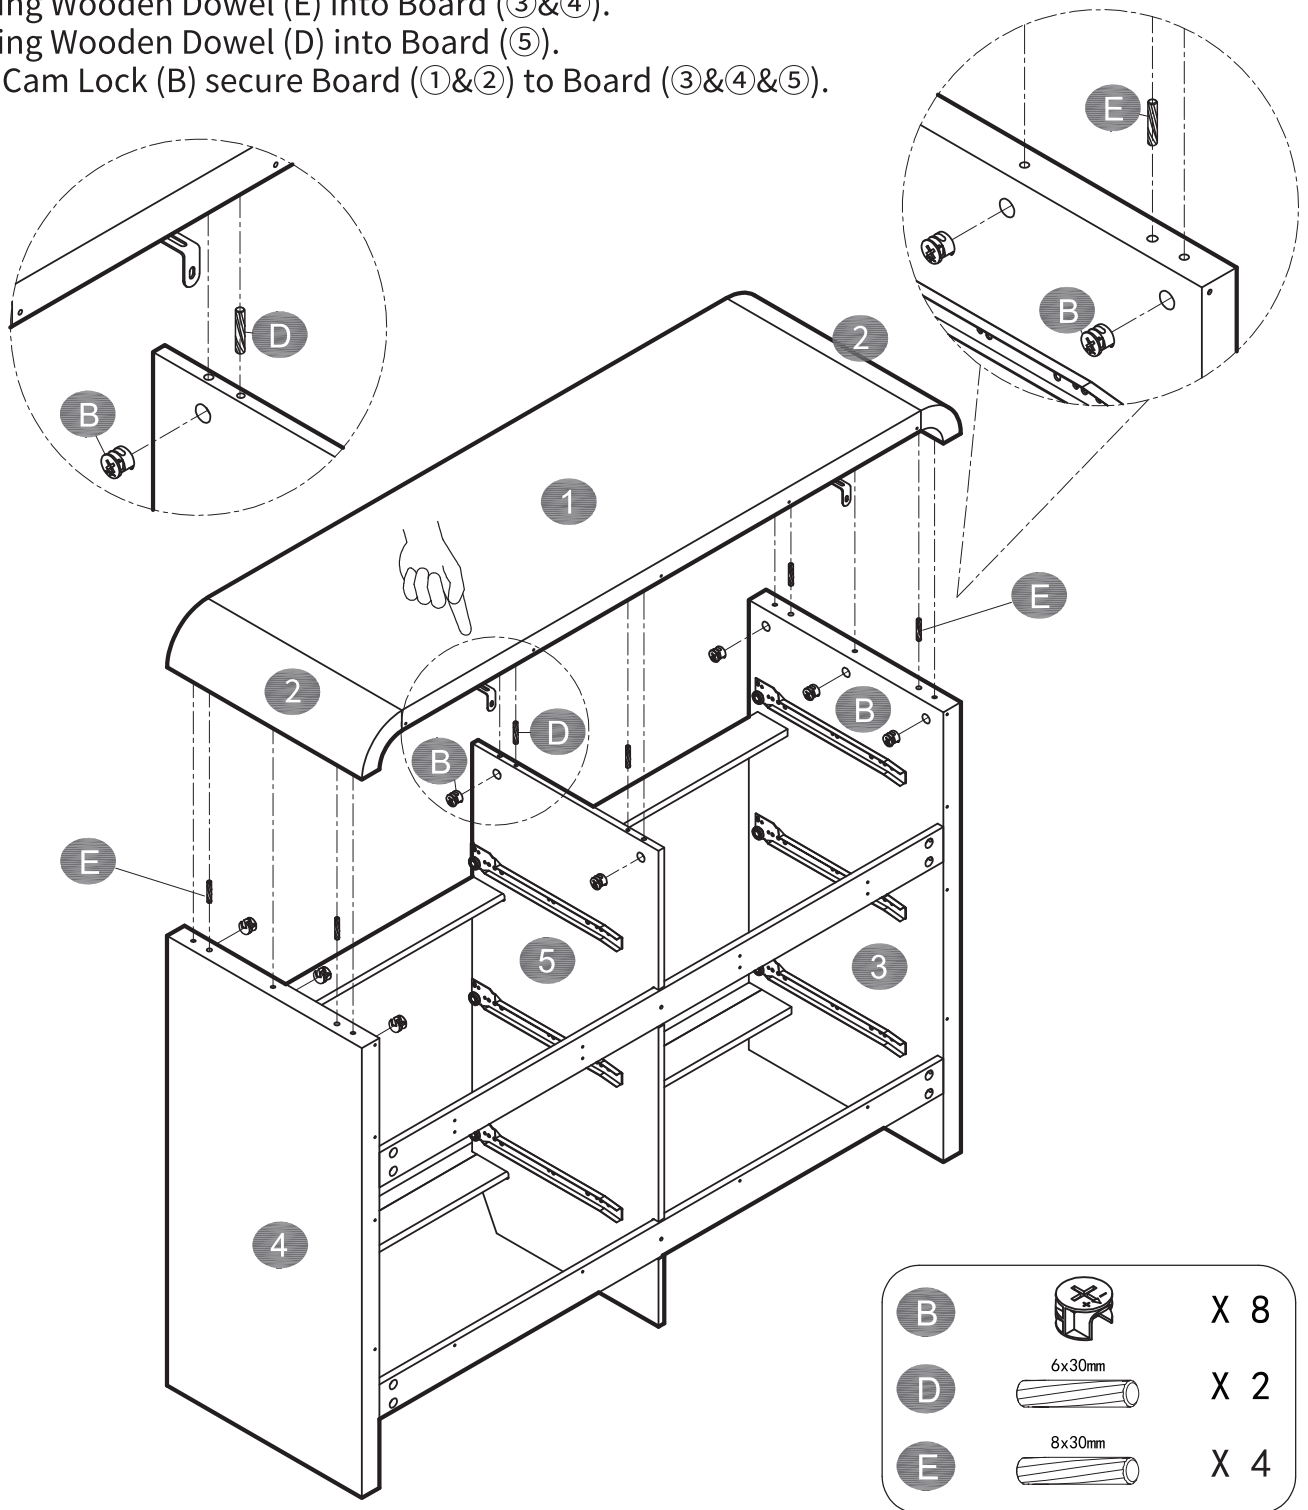


Step 16

Using Screws (I) assemble Back Panels (11&12) to the main body.

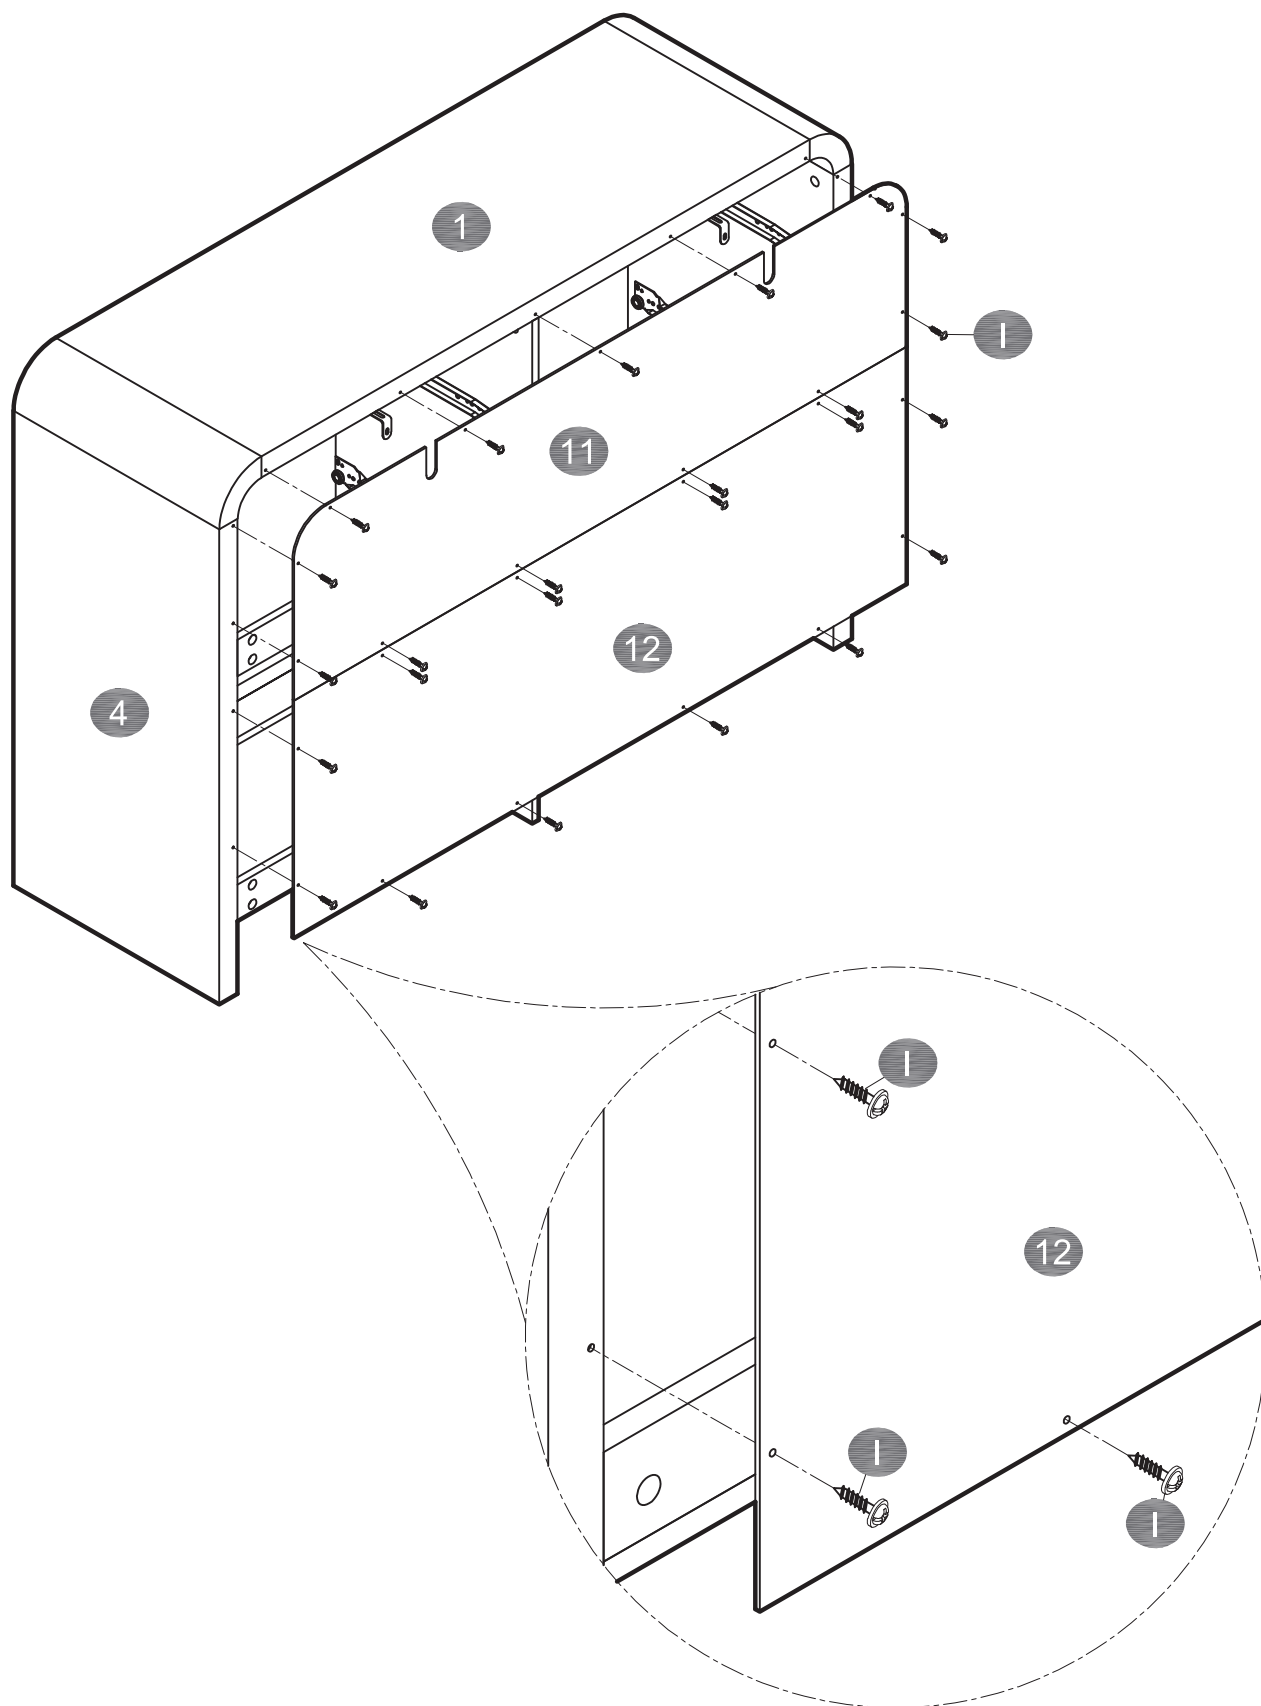


Step 17

Securing Cam Bolt (A) into Board (13).

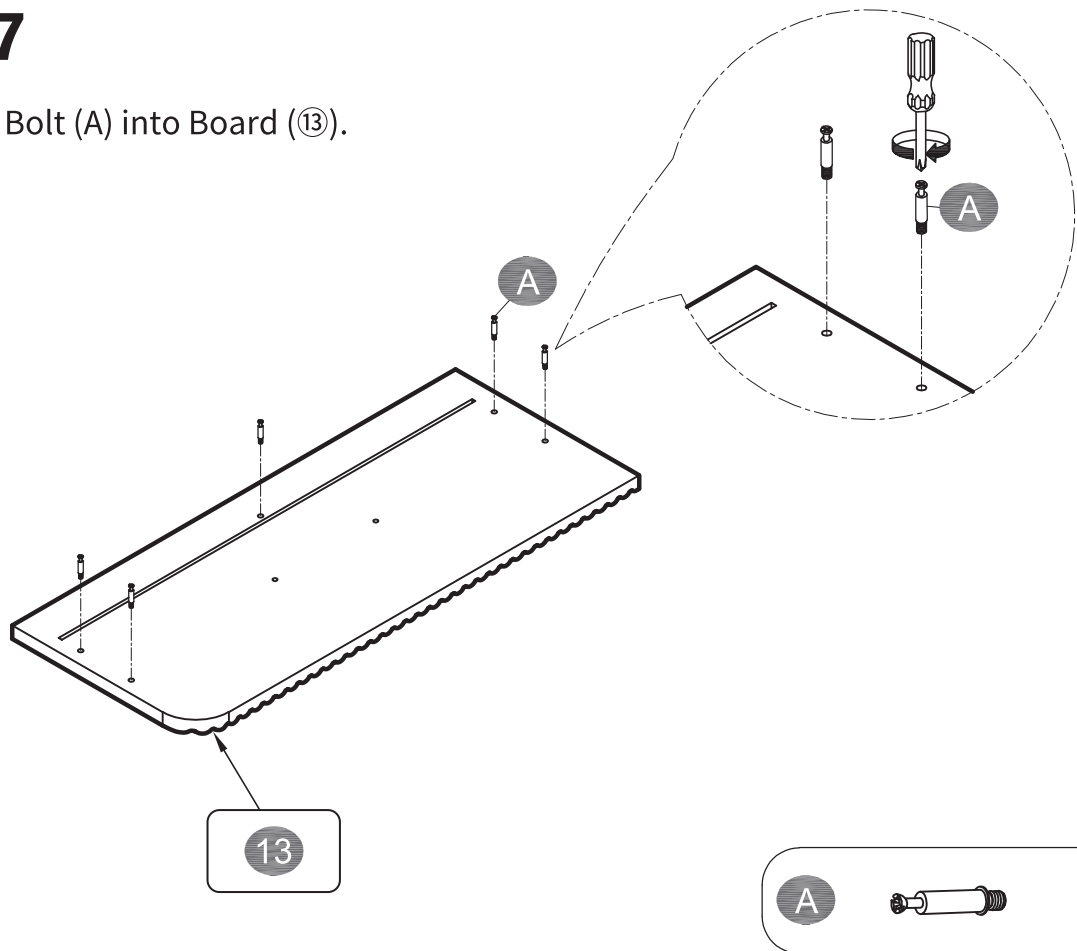


Step 18

Securing Cam Bolt (A) into Board (14).

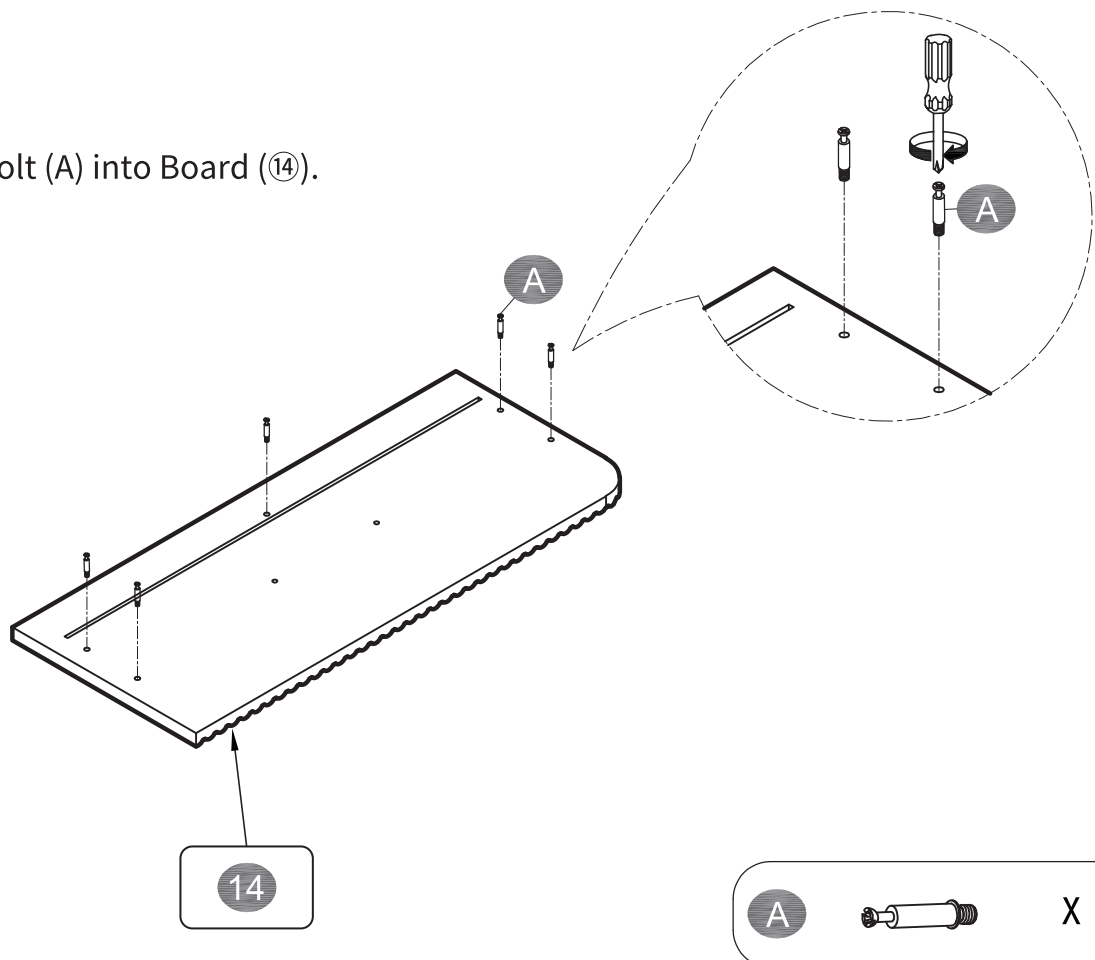

Step 19



Securing Cam Bolt (A) into Board (15&16).

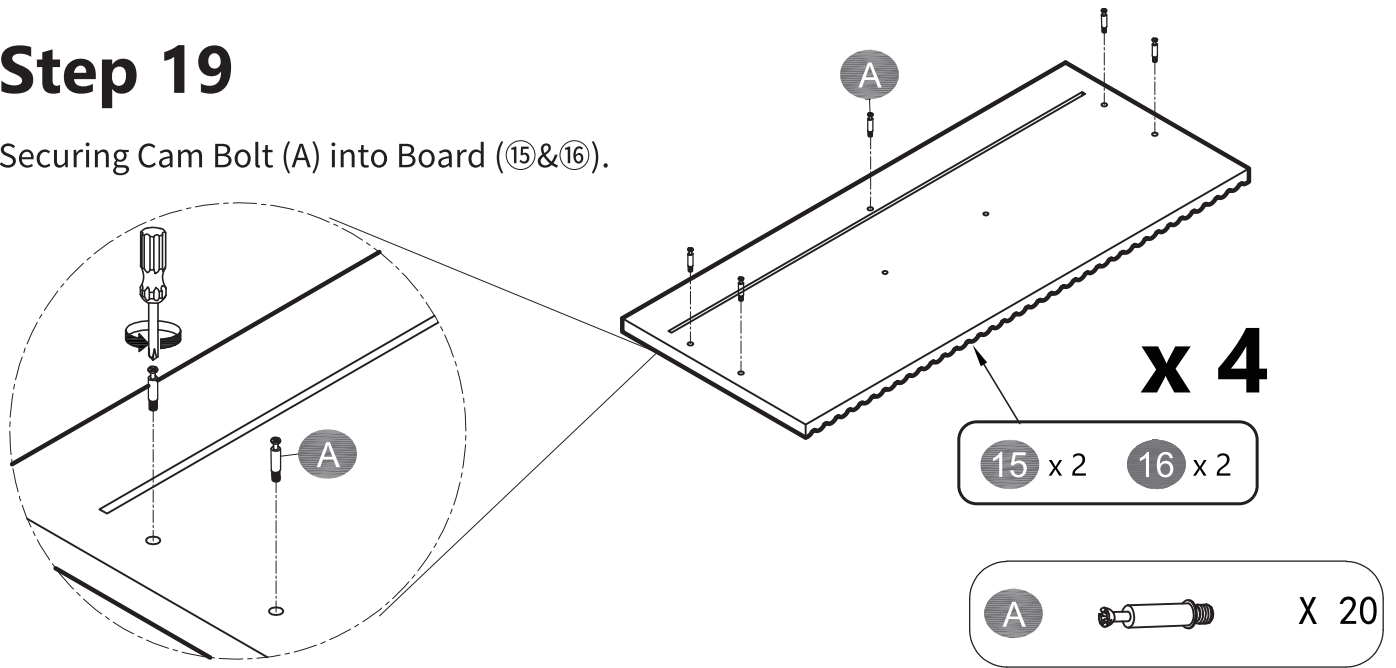

Step 20


Attach Board (17&18&21) to Board (13&14&15&16).

Using Cam Lock (B) secure Board (17&18&21) to Board (13&14&15&16).

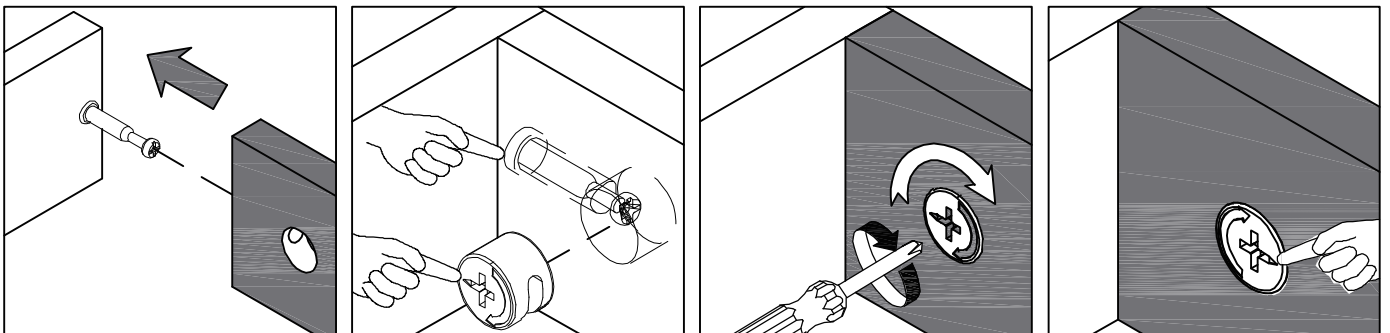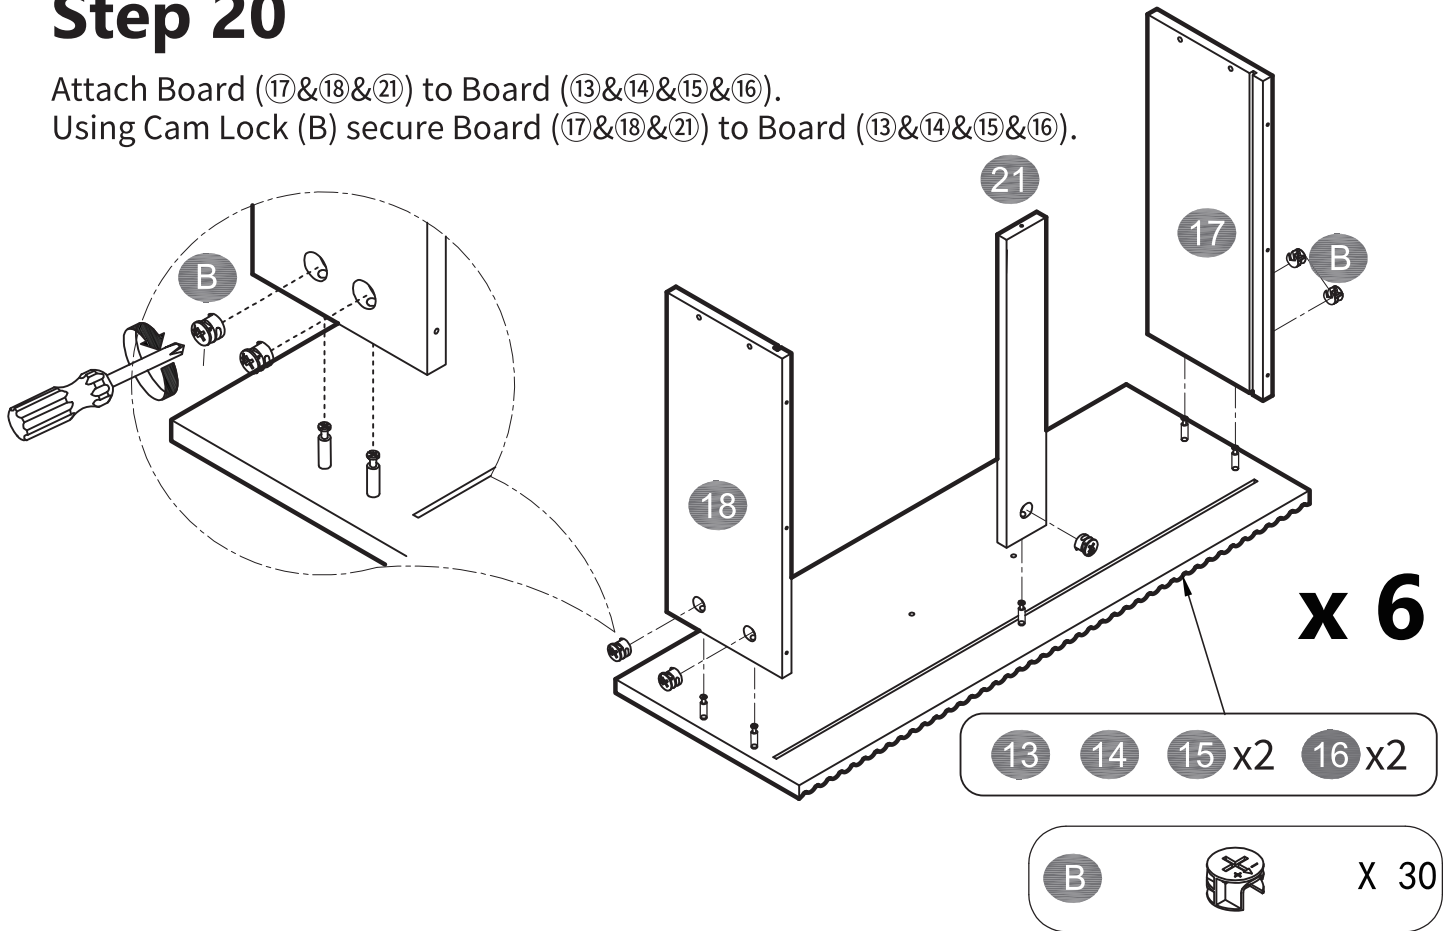


Step 21

Sliding drawer bottom panels (20) into grooves.

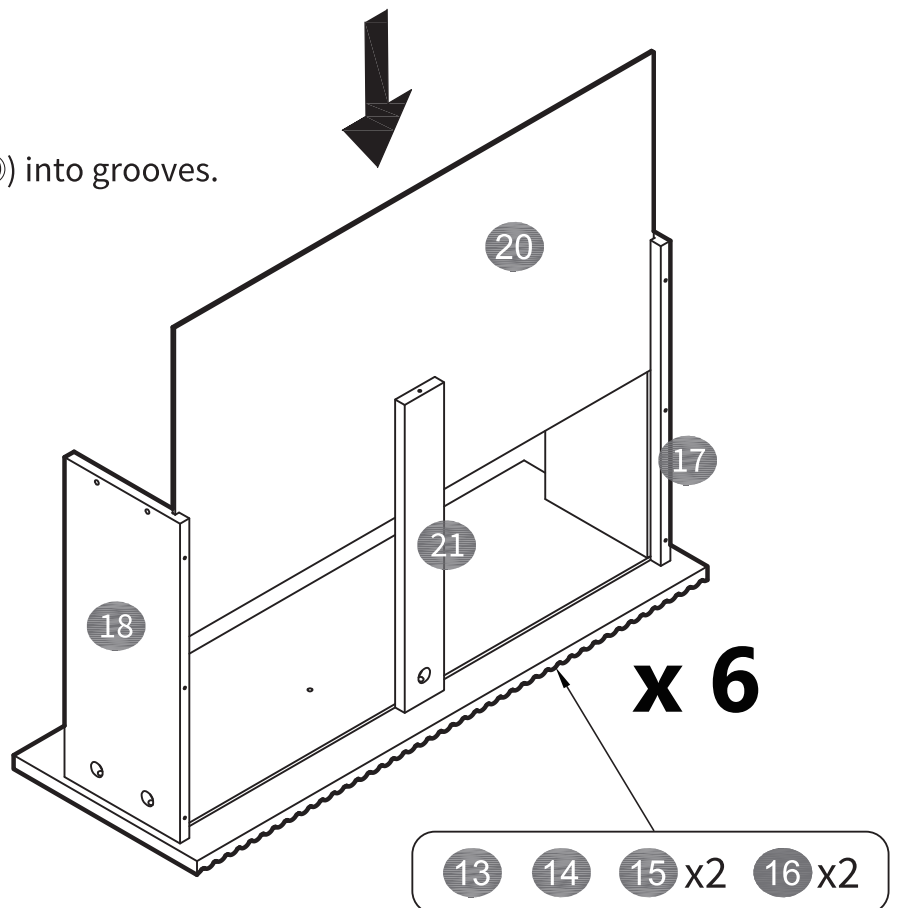

Step 22

Attach Board (19) to Board (17&18&21).
Using Screws (J) to assemble Board (19) to Board (17&18&21).

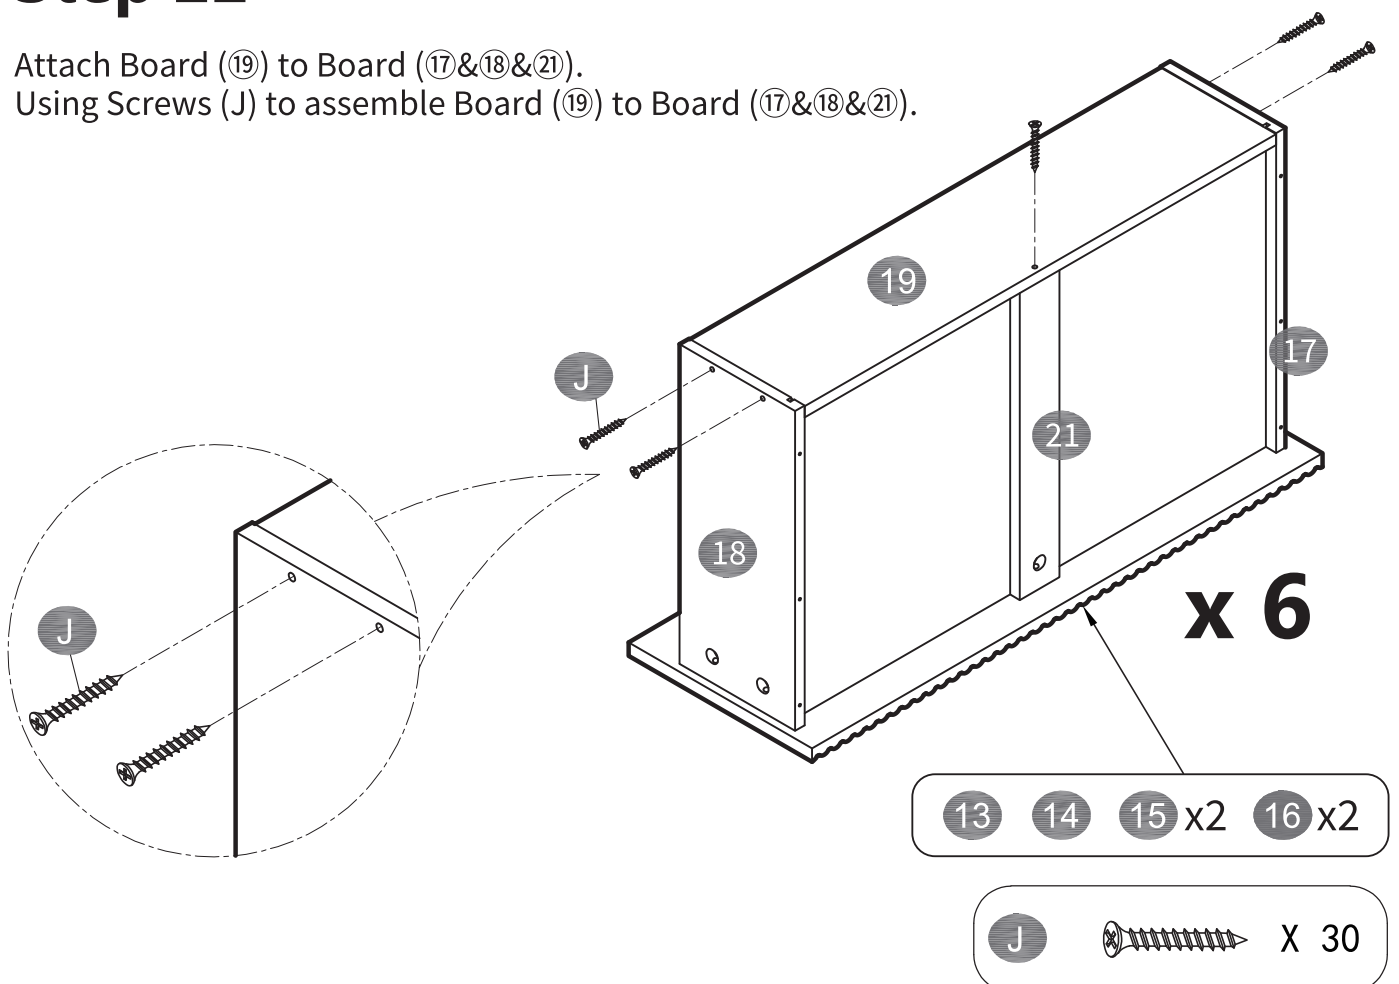


Step 23

Using Screws (H) to assemble Slide (DL) to Board (17).


Using Screws (H) to assemble Slide (DR) to Board (18).

TIP: The screws for the slide must be tightened very tightly, and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.

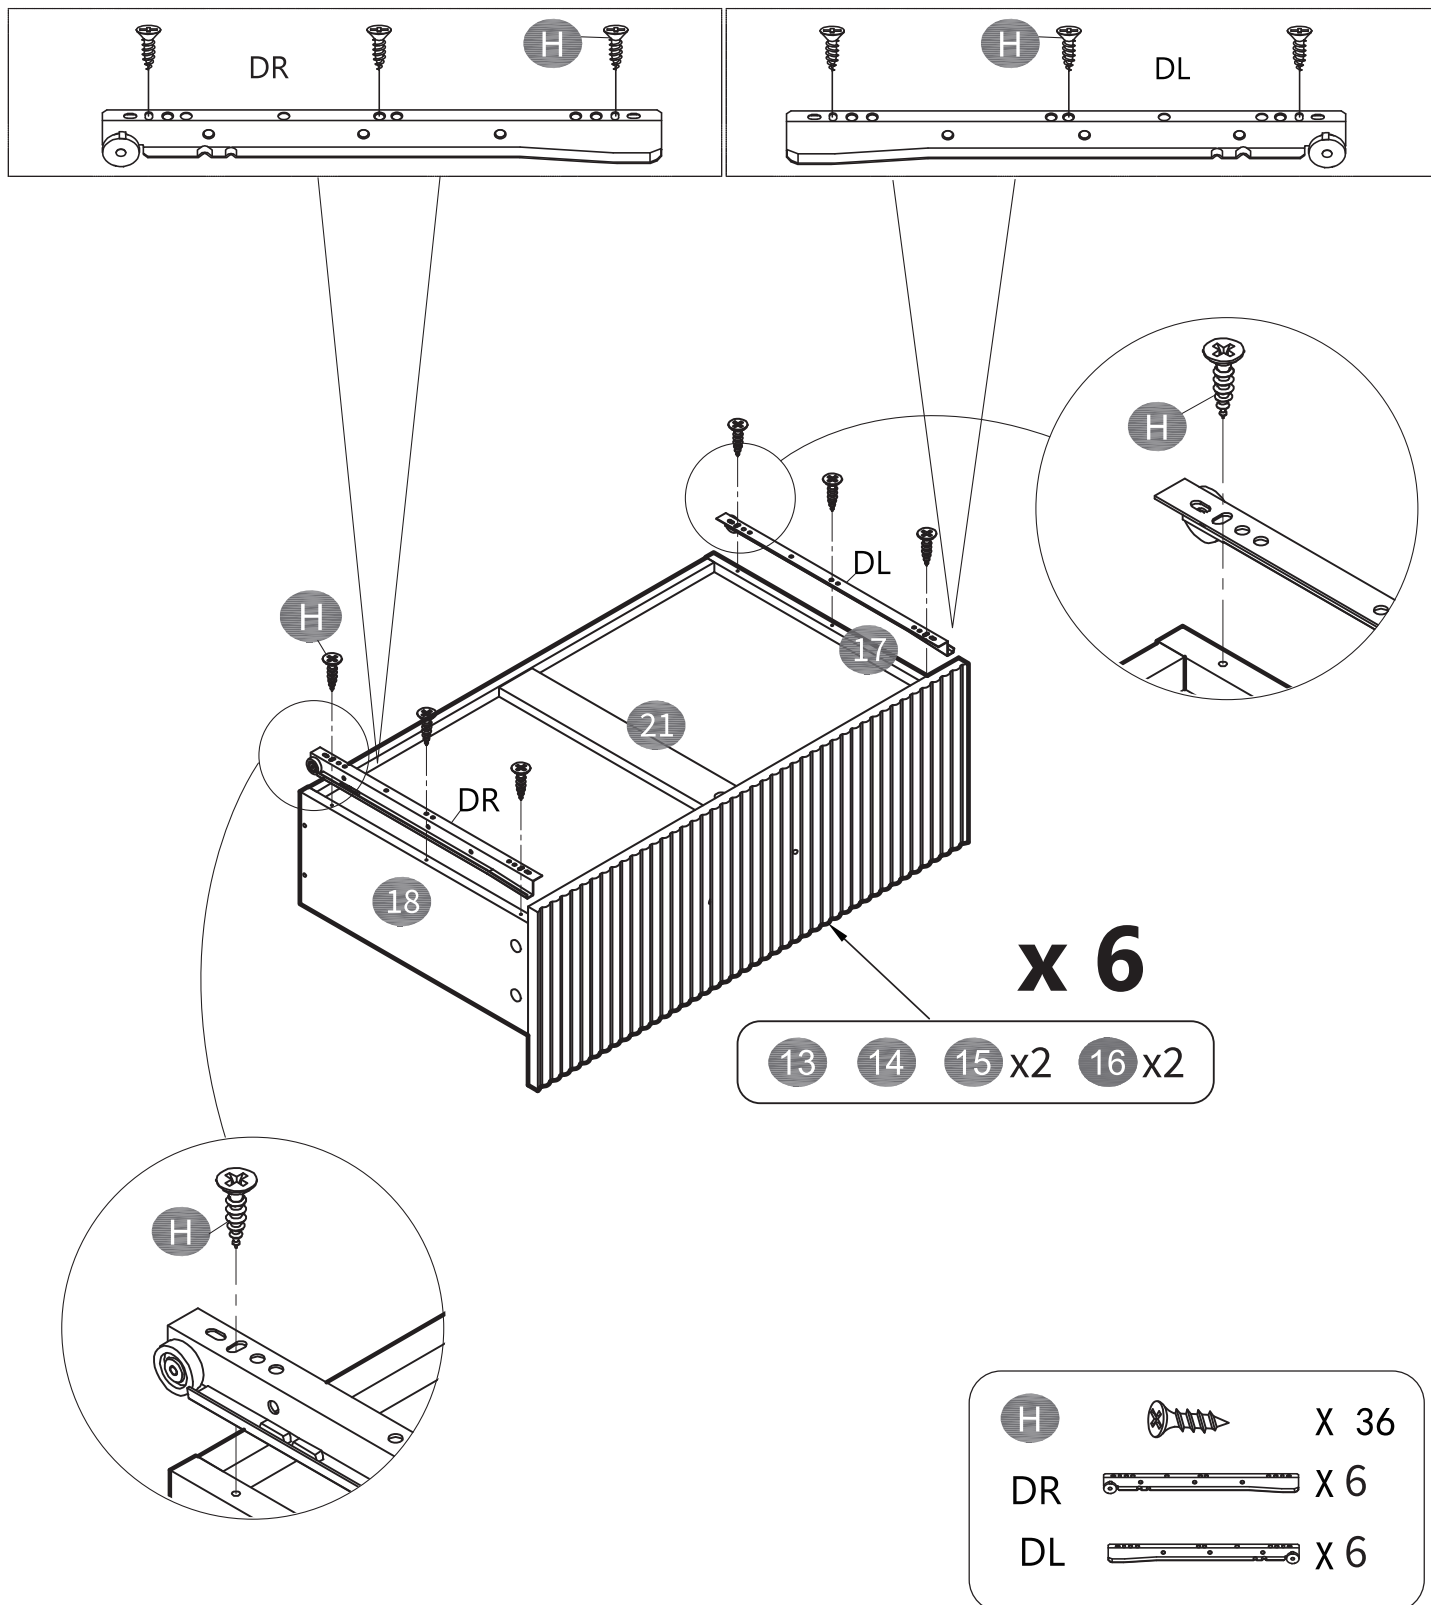

Step 24

Using Screws (G) to assemble Handle (F) to the Board (13&14&15&16).

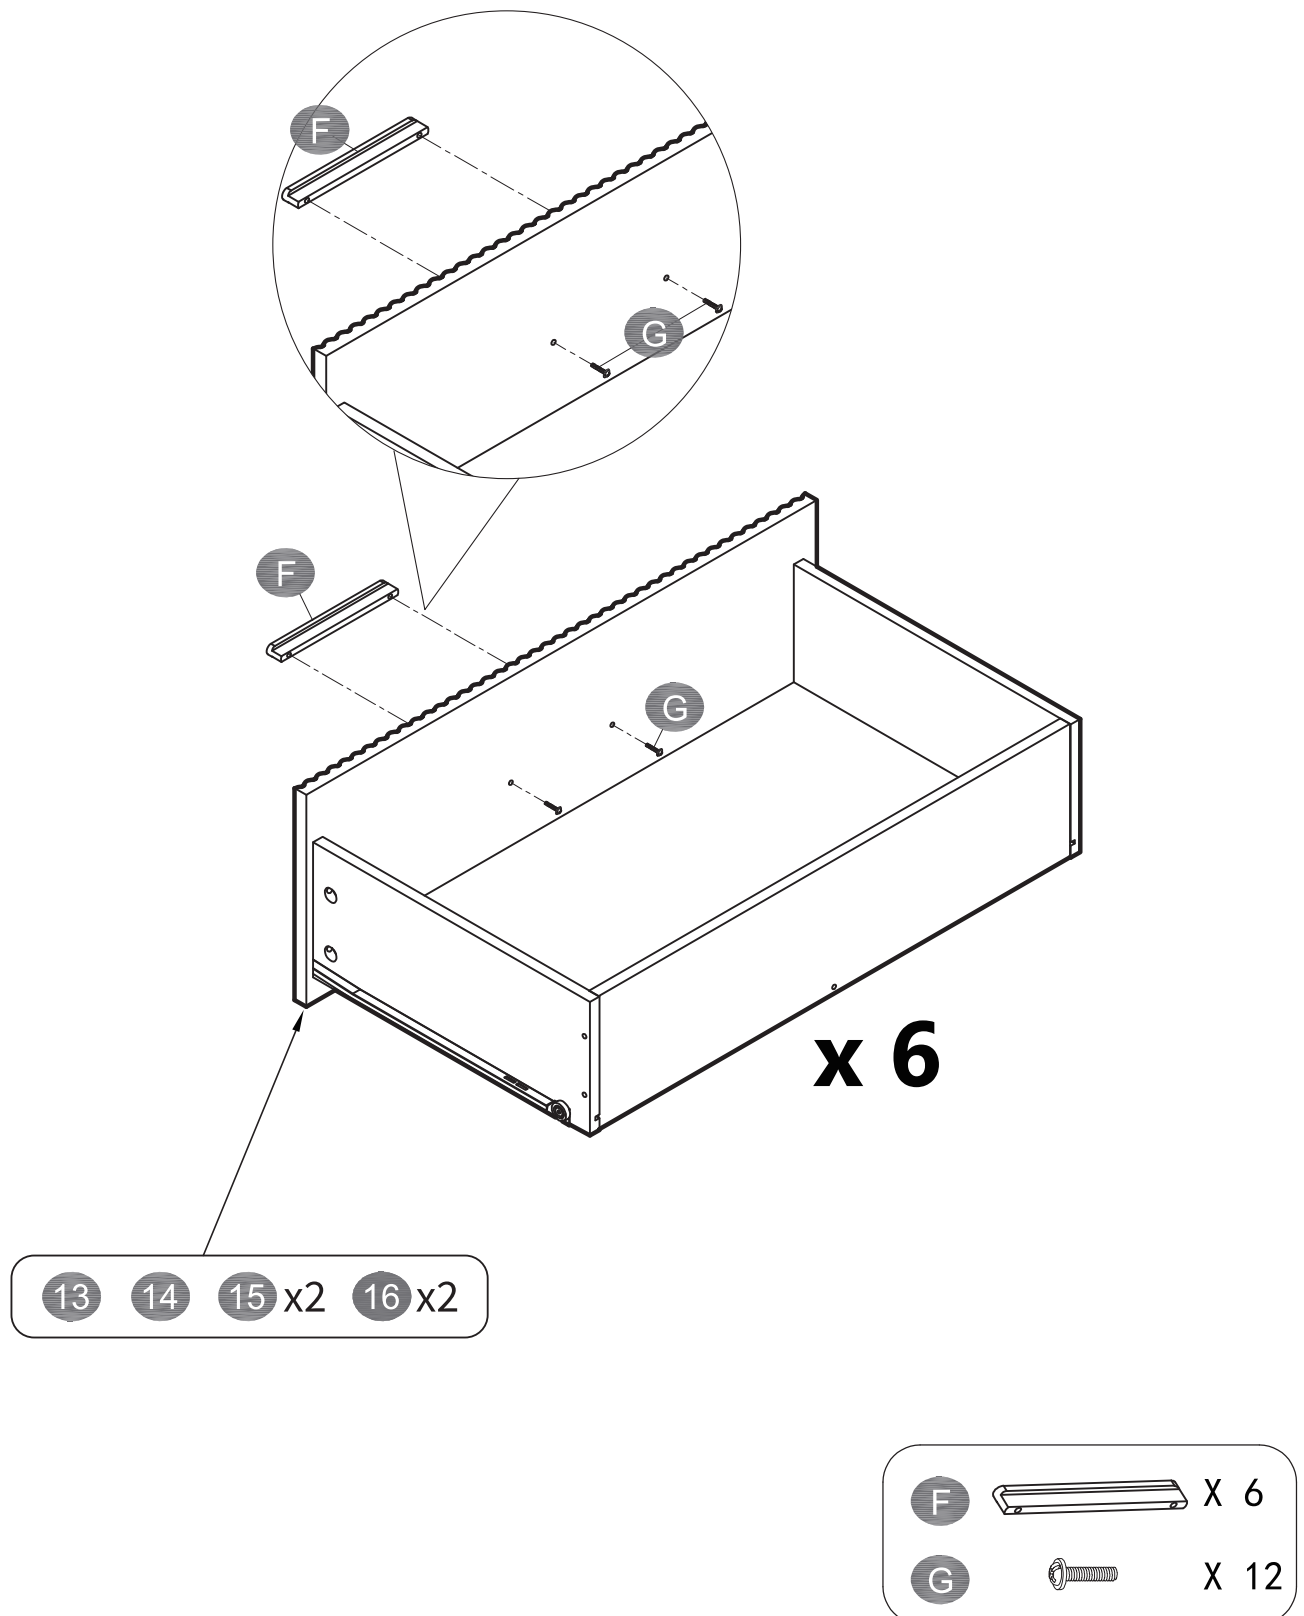


Step 25

Method 1: For solid or concrete wall.


Step 1

Measure and Mark: Ensure you measure the correct distance between the two anti-tip kit (K) and the appropriate height from the floor where the anti-tip kit (K) will be mounted on the wall. Use a pencil to mark where the anchors will go.

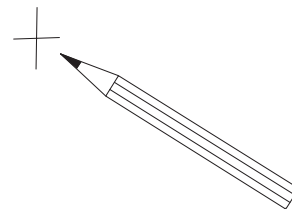


Step 2

Pre-drill 2 holes: Using a drill bit that is slightly larger than the diameter of the wall anchors (L), pre-drill two holes at the marked positions on the wall.

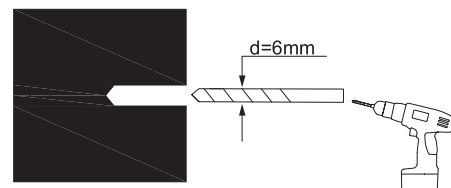

Step 3

Use Hammer Gently insert the wall anchor (L) into the pre-drilled hole.

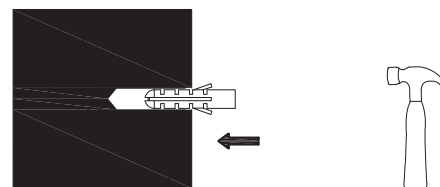



L




x 2

Step 26

Using Screw (J) attach Anti-tip
Kit (K) into Wall Anchors (L) to wall.

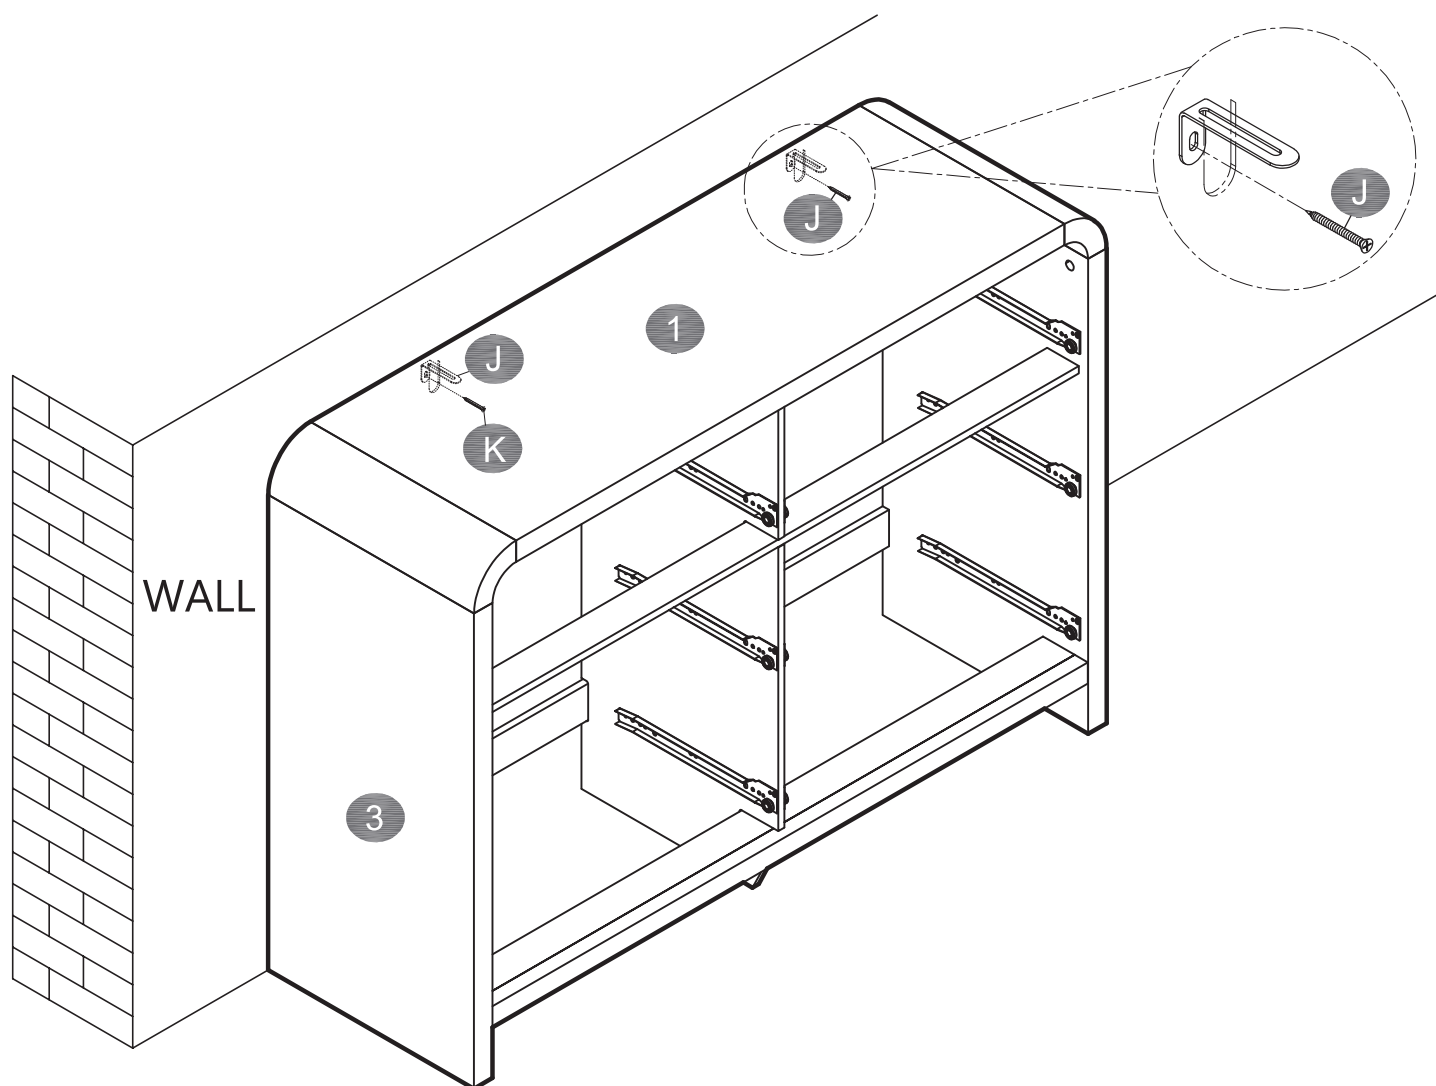


Step 27

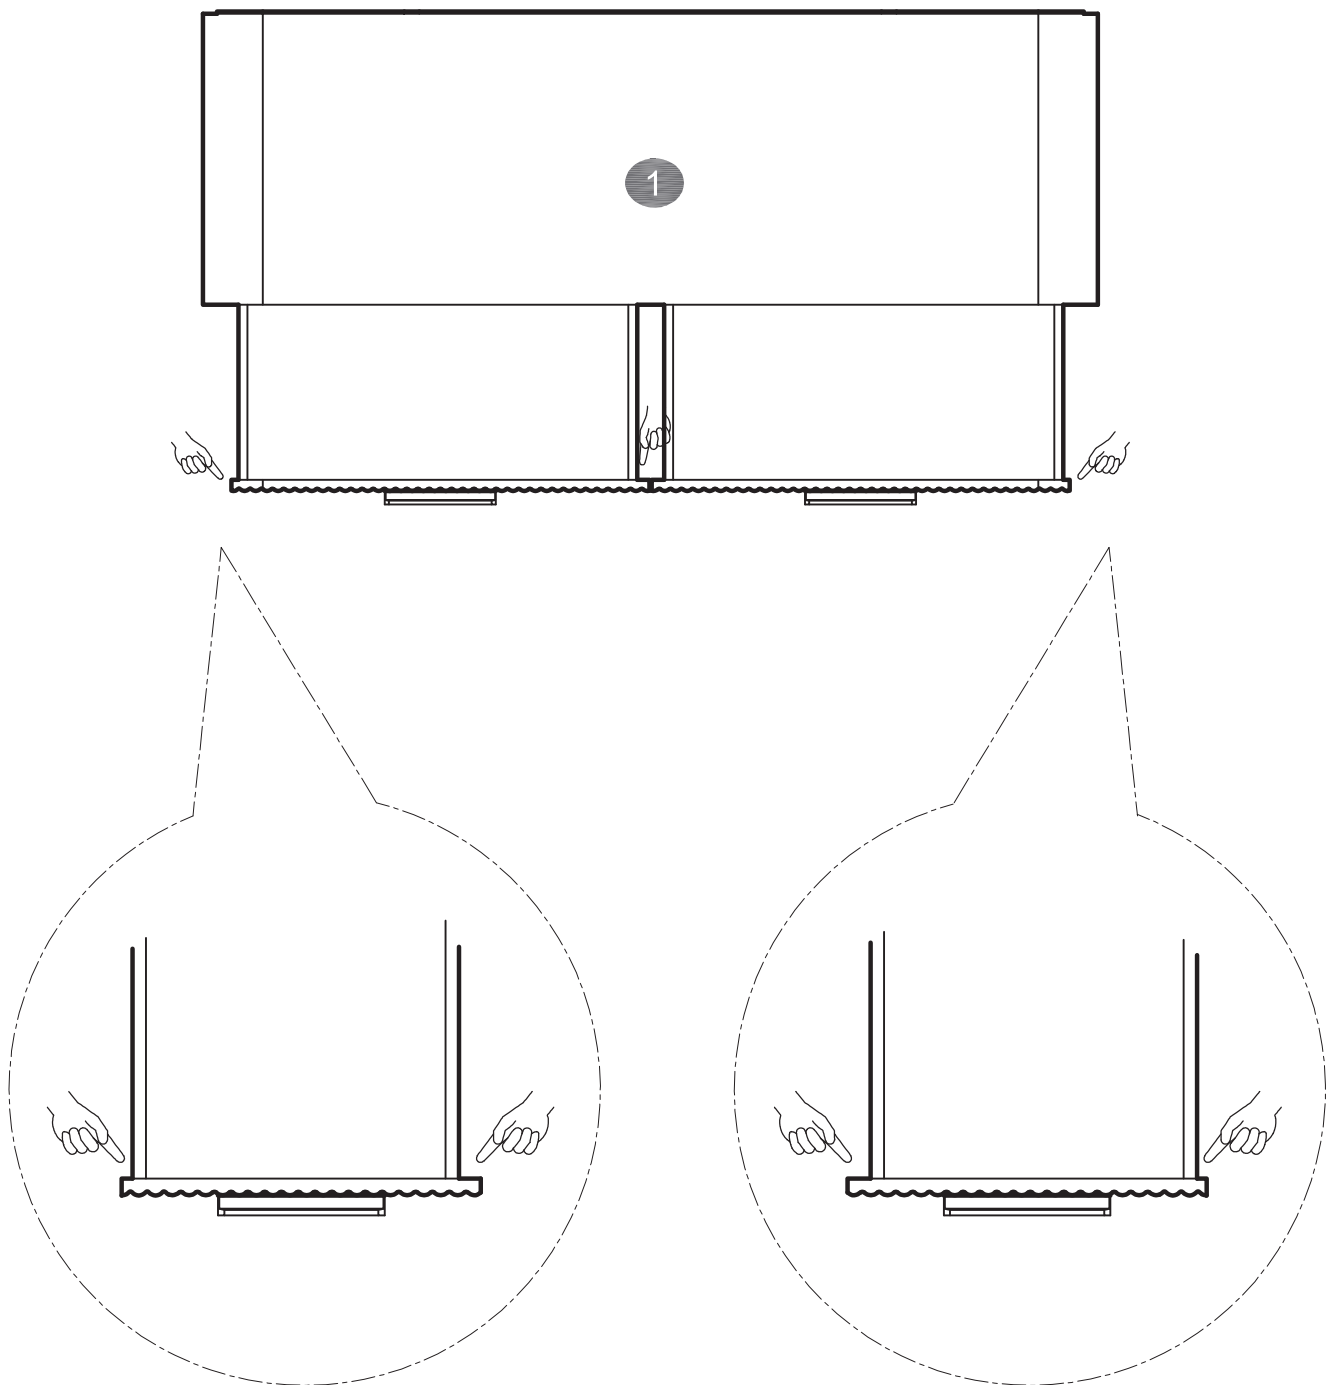

Attention: The different length of each side of the drawer helps to identify if the drawers should be installed on the right side or left side.

Step 28

The drawers are not the same for different codes, please put them in the correct position, otherwise the drawers will not be aligned or remain open.

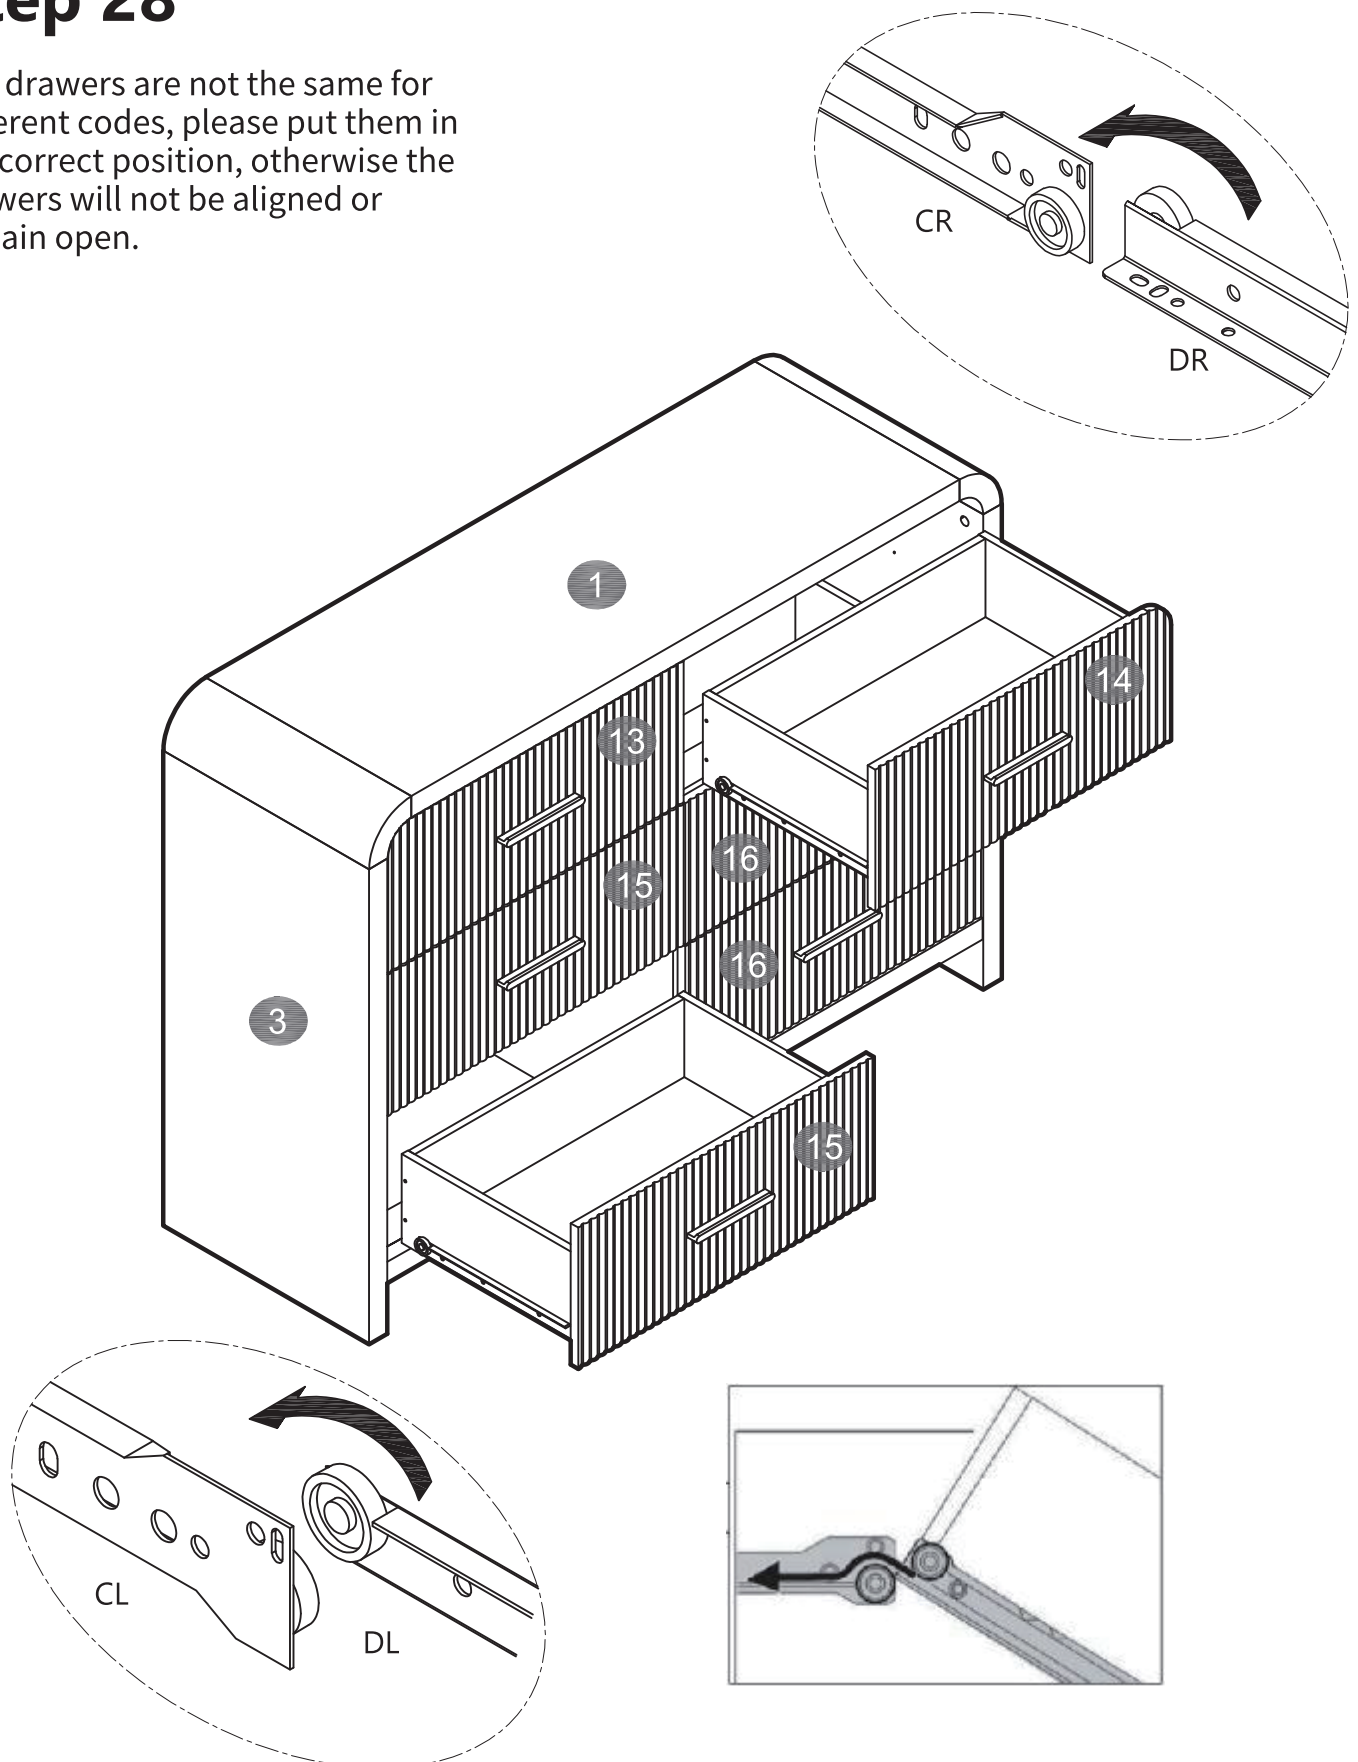

When you put the drawer, please note that the drawer wheels on top of the wheels of the slide, then check whether the drawer is smooth when pulled out. Otherwise, the drawer will not be aligned with other drawers.

**Congratulations, you've completed the installation
and got a 6 Drawer Dresser!**

