

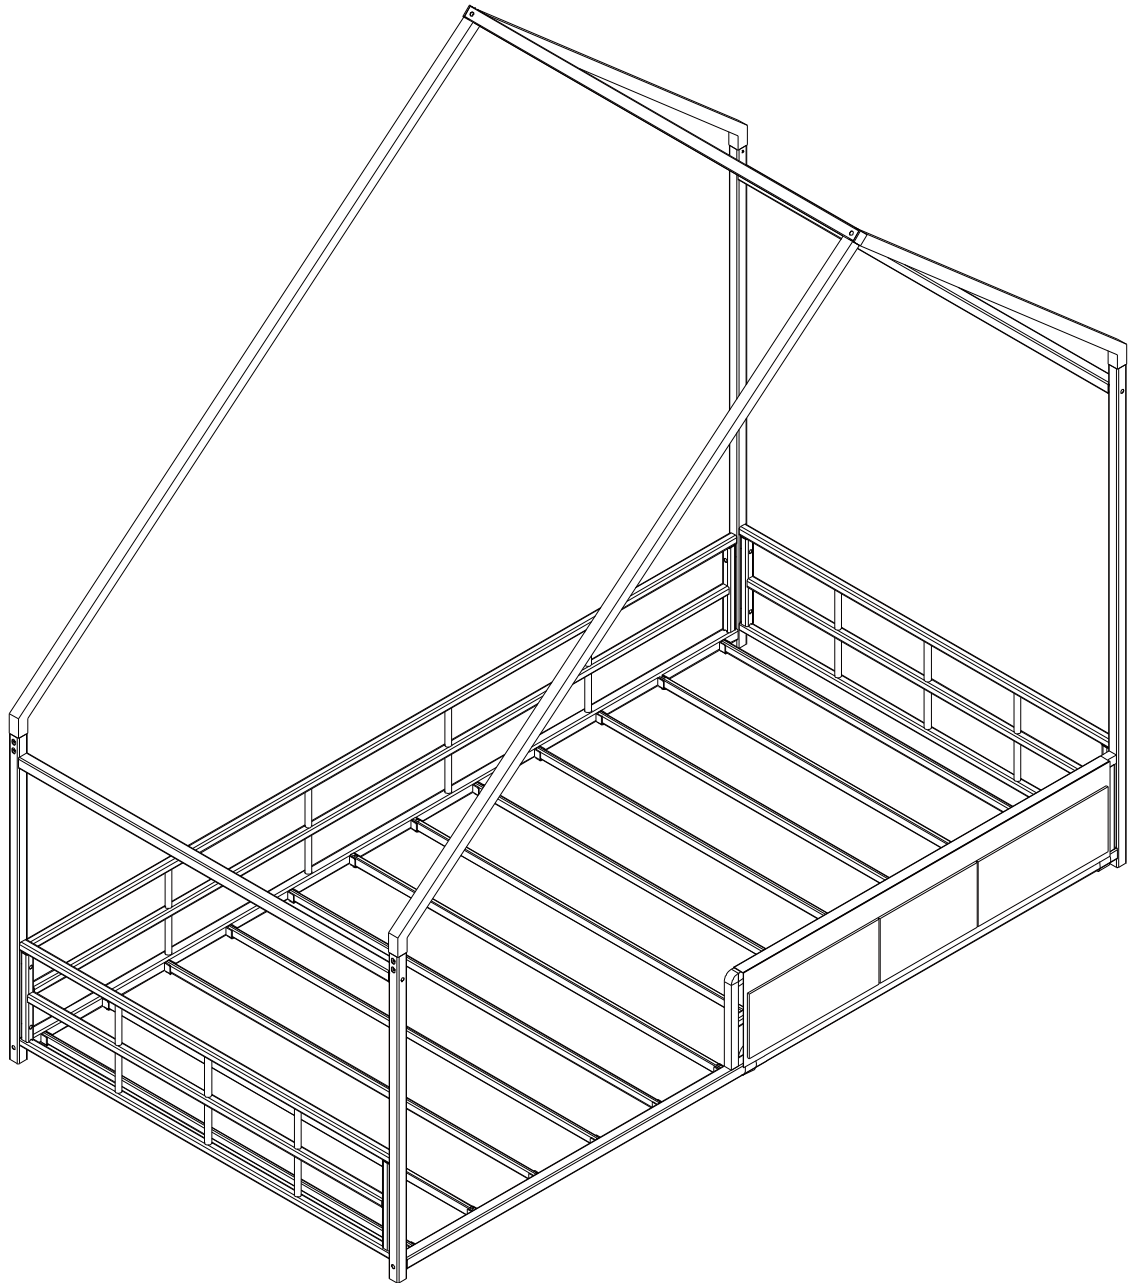
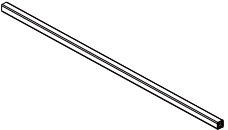
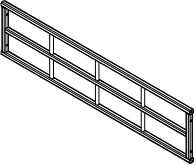
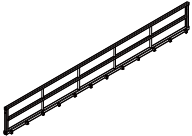
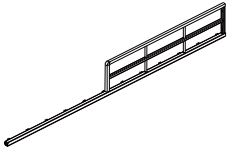
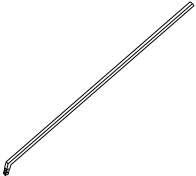

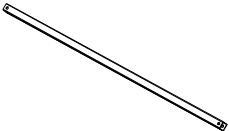
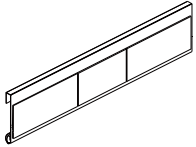


INSTRUCTION MANUAL

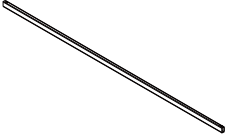



For easier and better assembly,
2 or more adults are required.

Parts

				
1 1PC	2 1PC	3 1PC	4 1PC	5 2PCS
				
6 2PCS	7 1PC	8 1PC	9 2PCS	10 2PCS
				
11 8PCS	12 1PC	13 1PC	14 4PCS	15 2PCS

Hardware List

				
M6*45	M6*35	M6*15	M5*25	ø6
A 10PCS	B 13PCS	C 8PCS	D 8PCS	E 8PCS
				
S4	ø8			
F 1PC	G 2PCS			

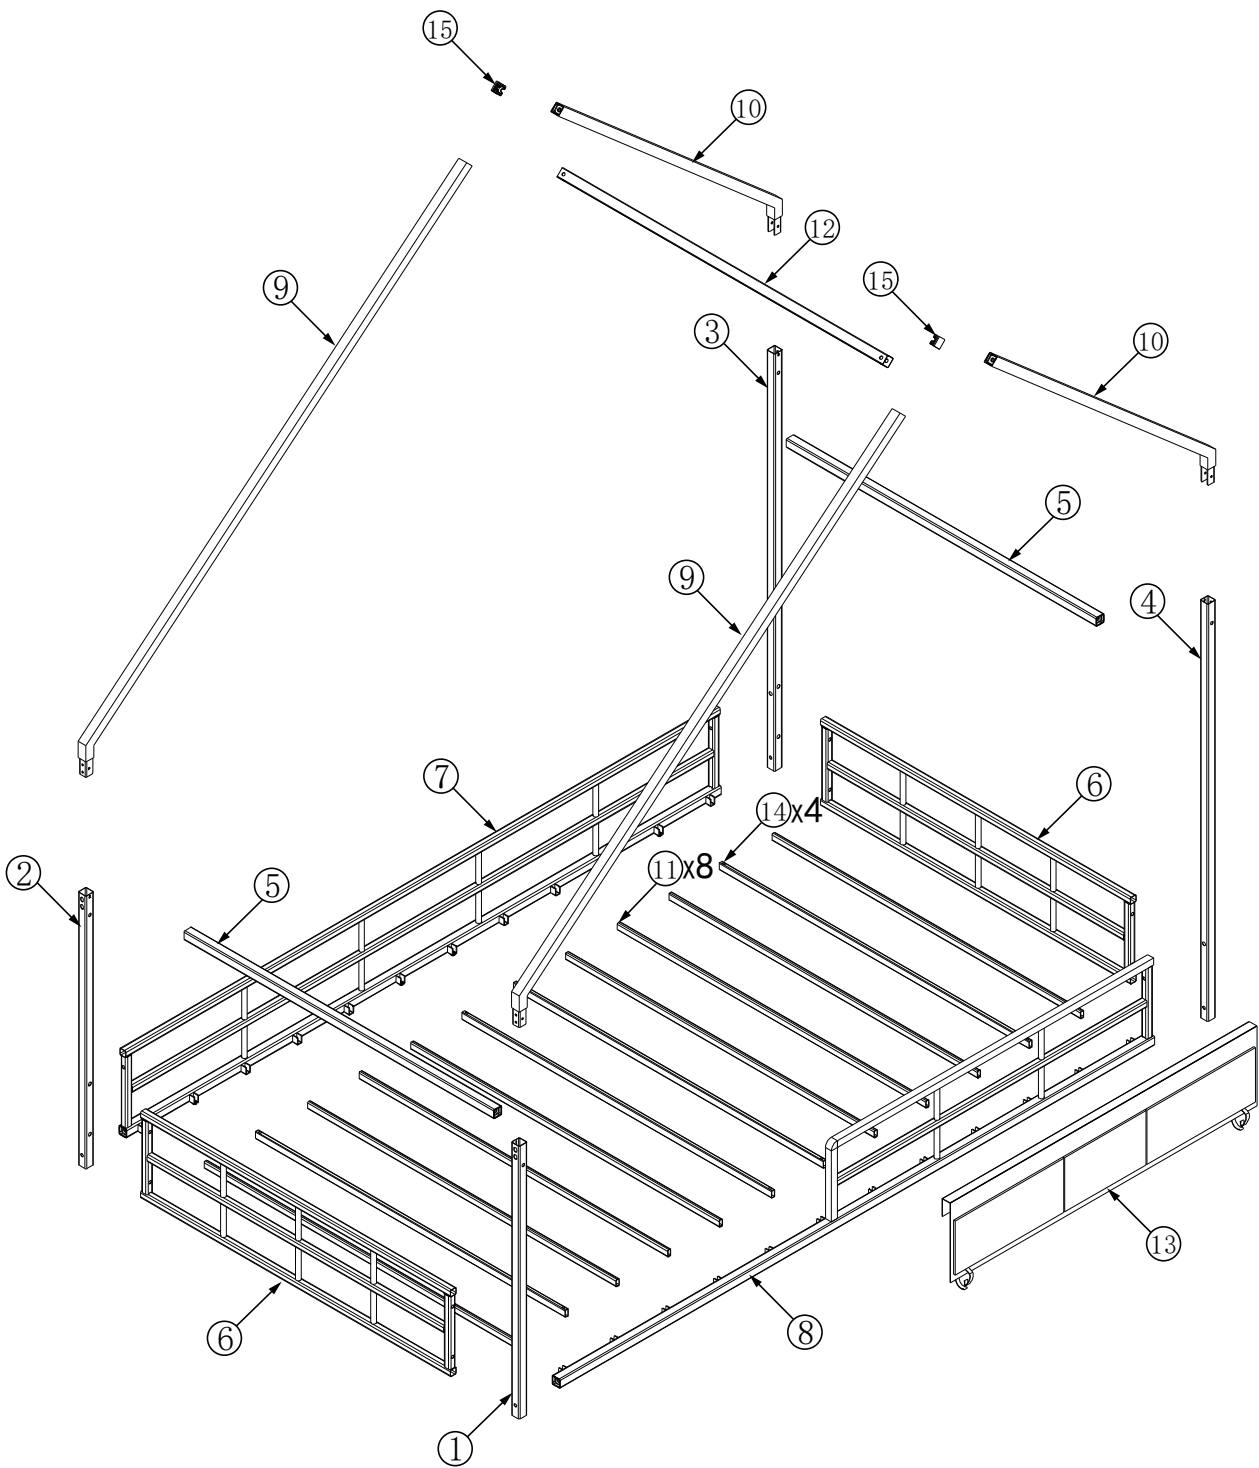

Step1



M6*35


B

4PCS



S4

F

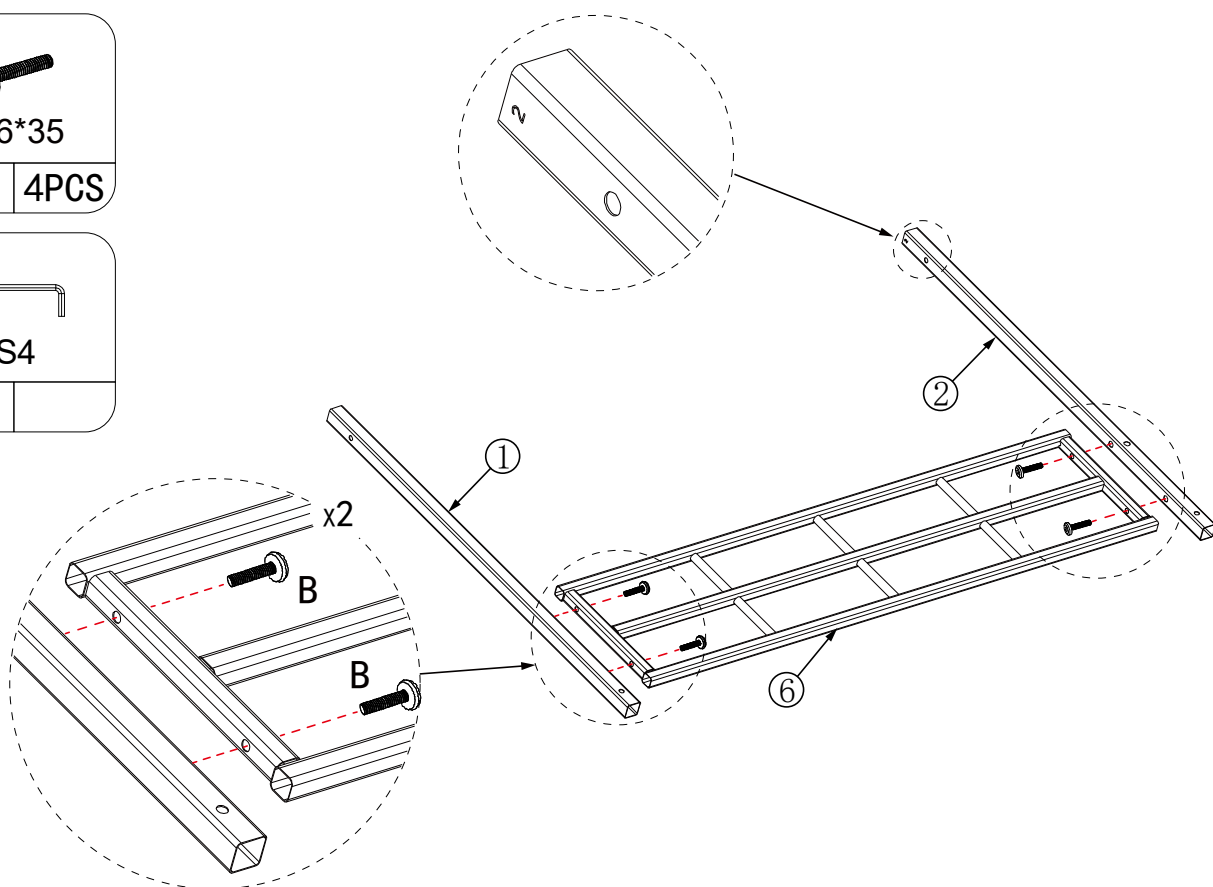

Step2



M6*35


B

4PCS








S4






F

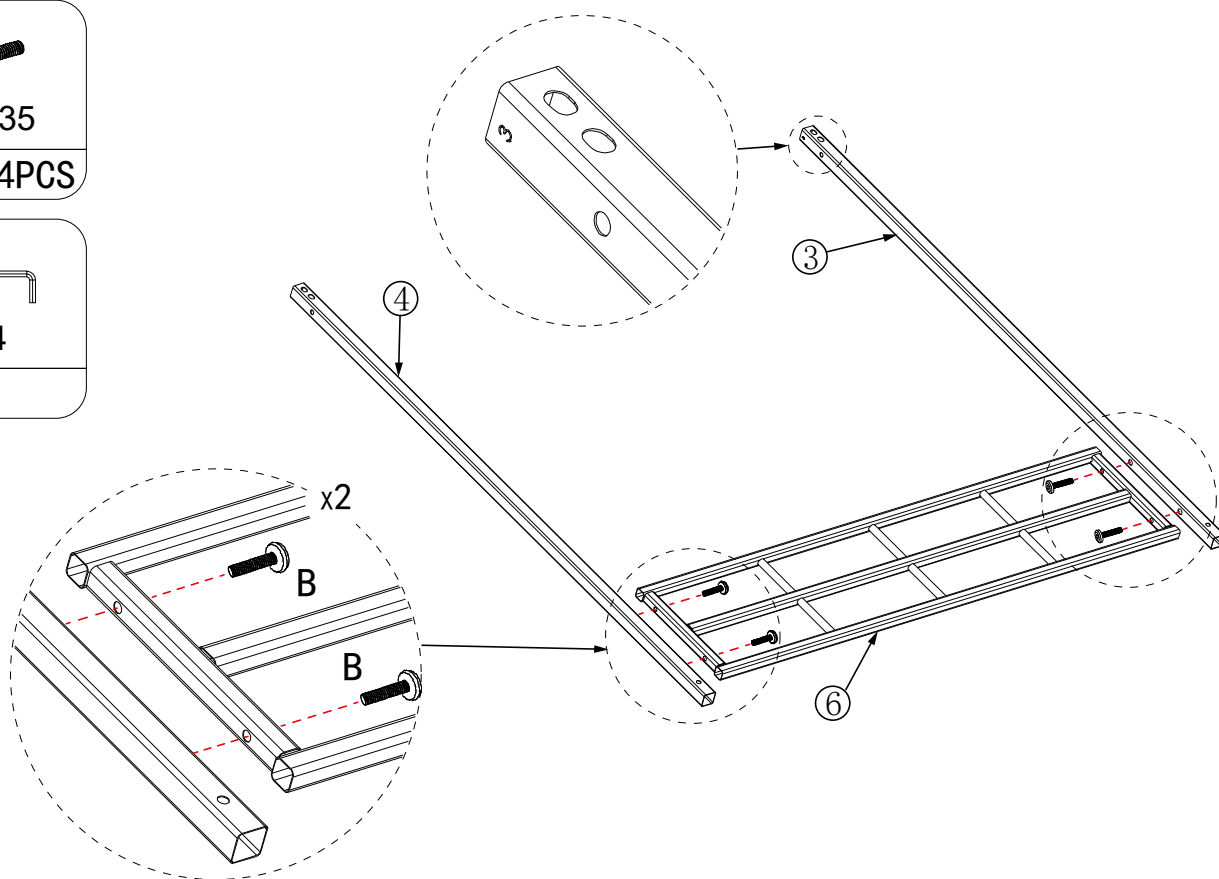

Step3

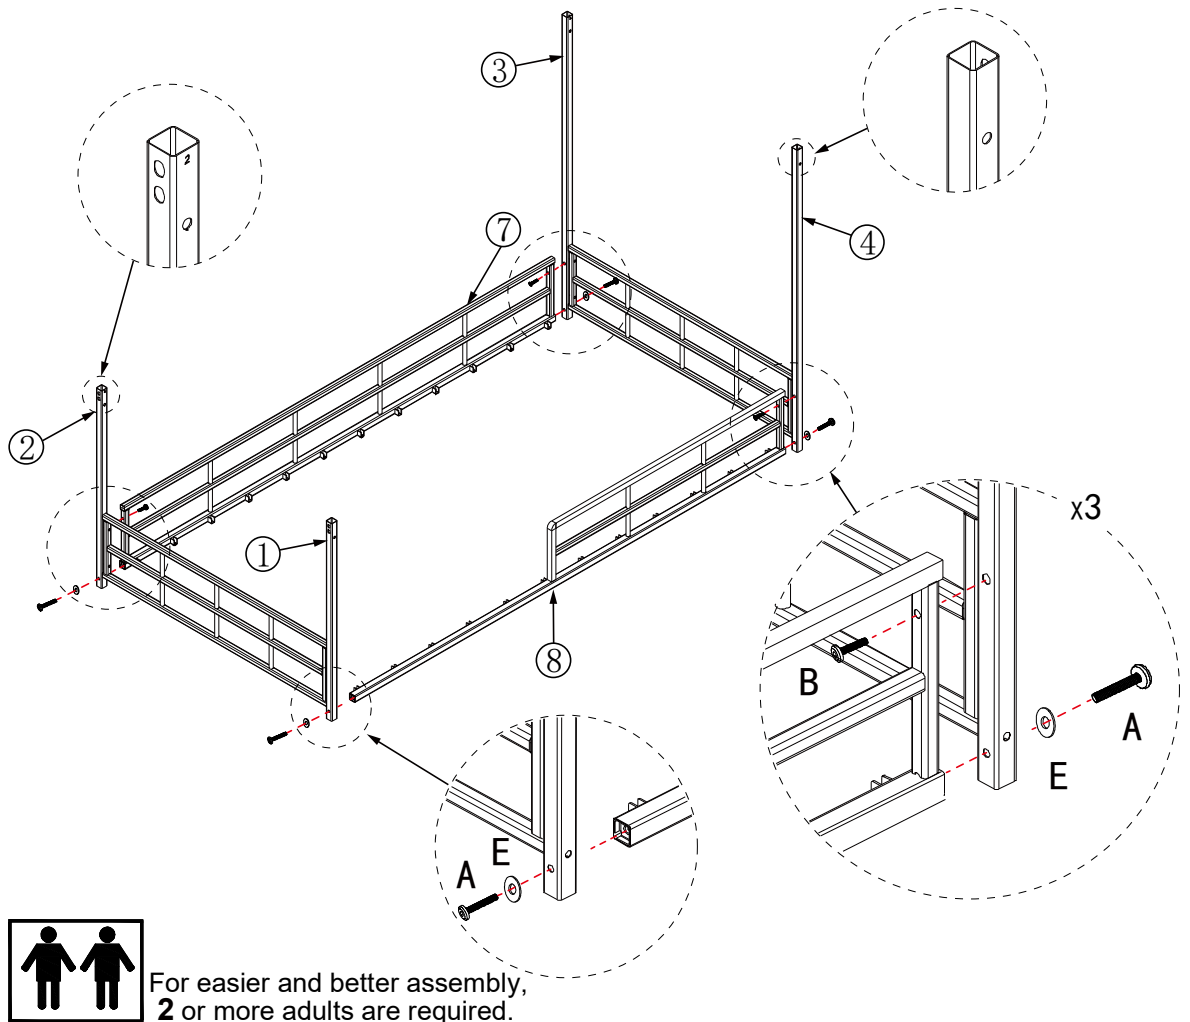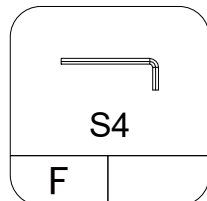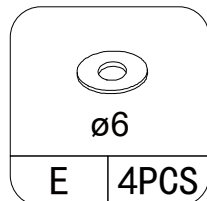
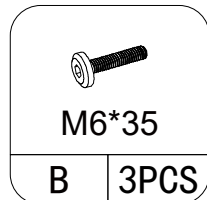
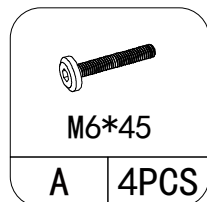


Step4

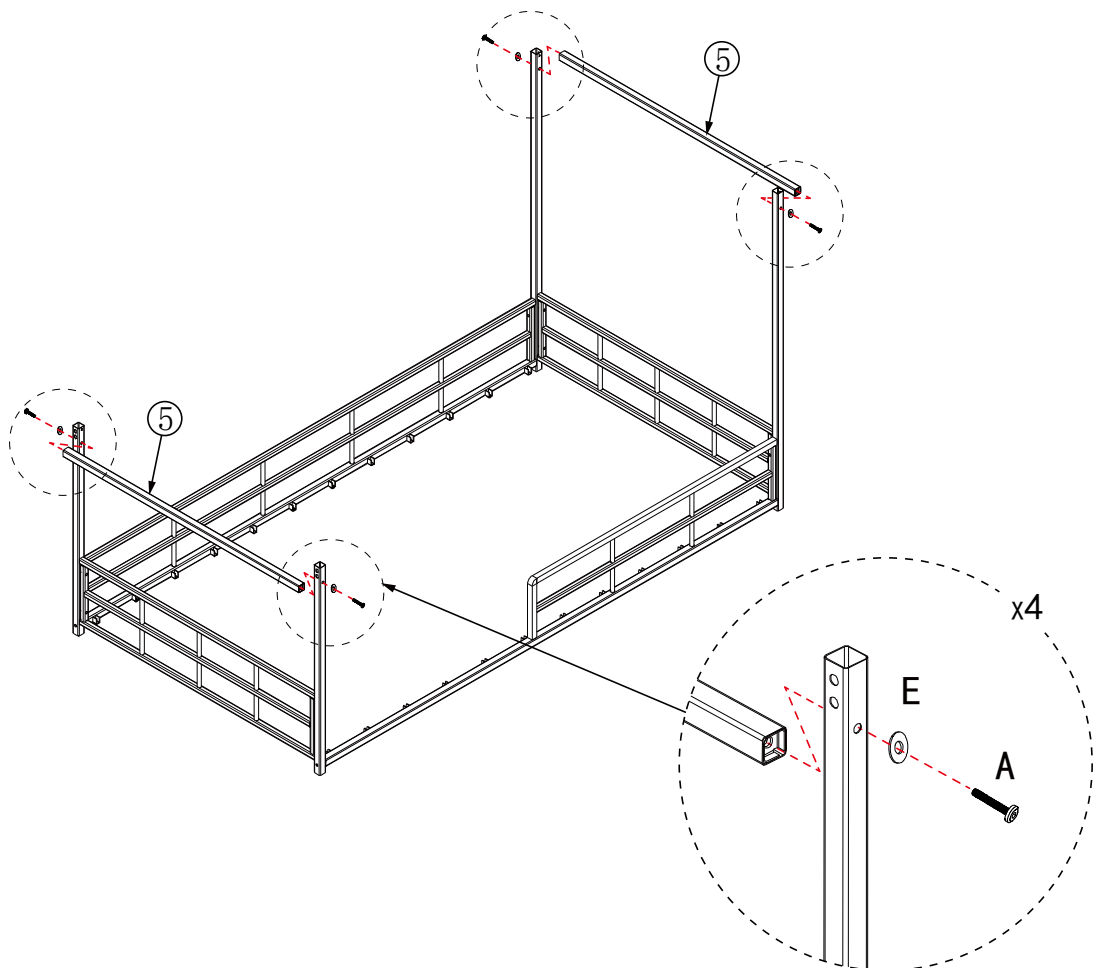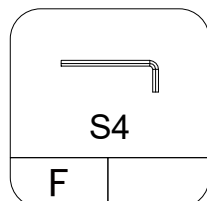
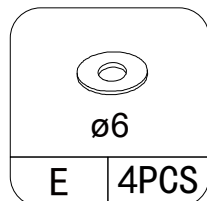
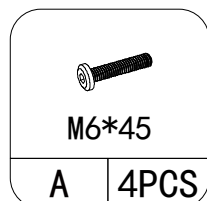


For easier and better assembly,
2 or more adults are required.

Step5

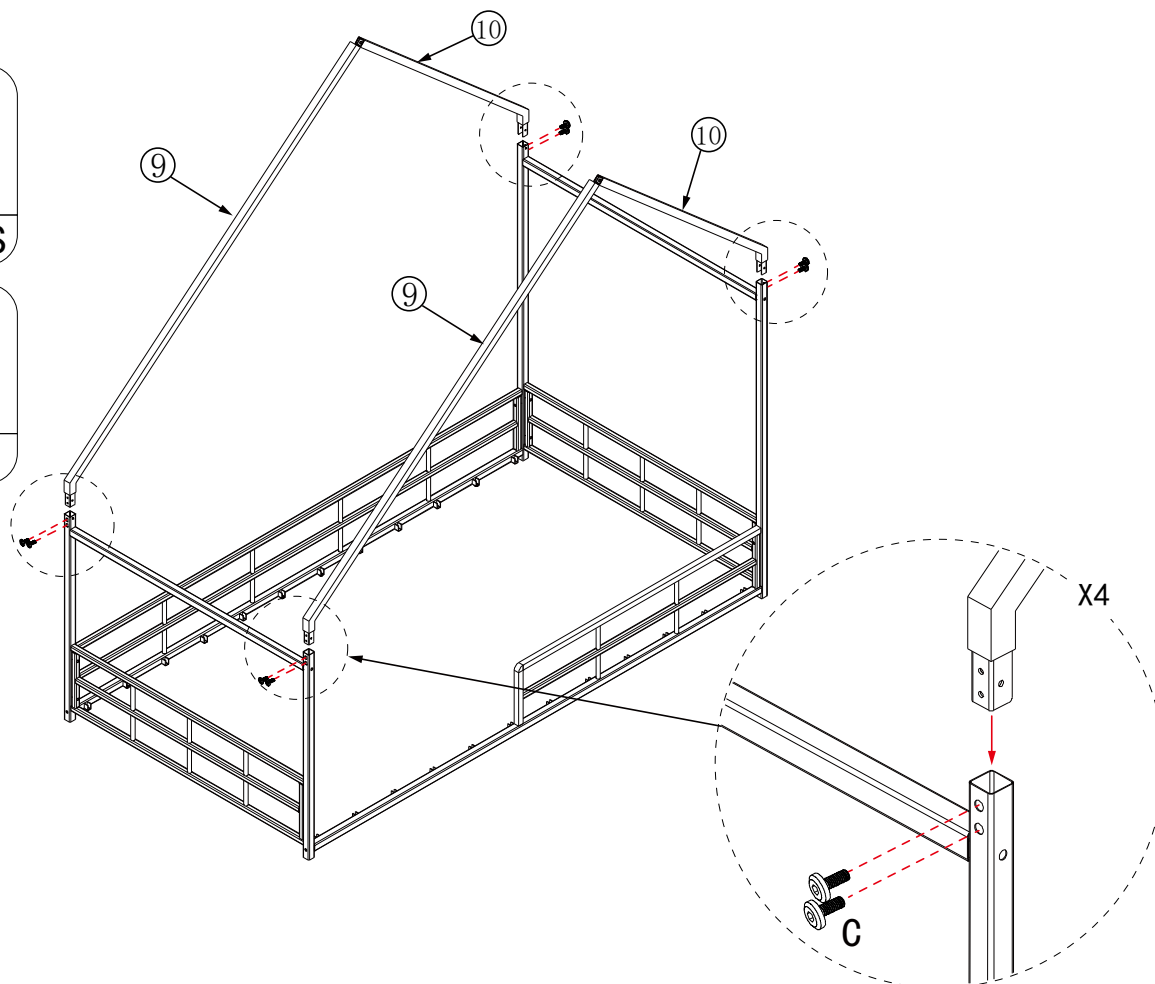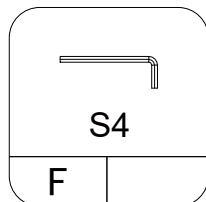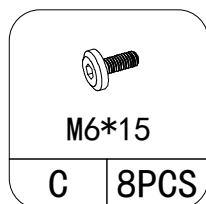





Step6

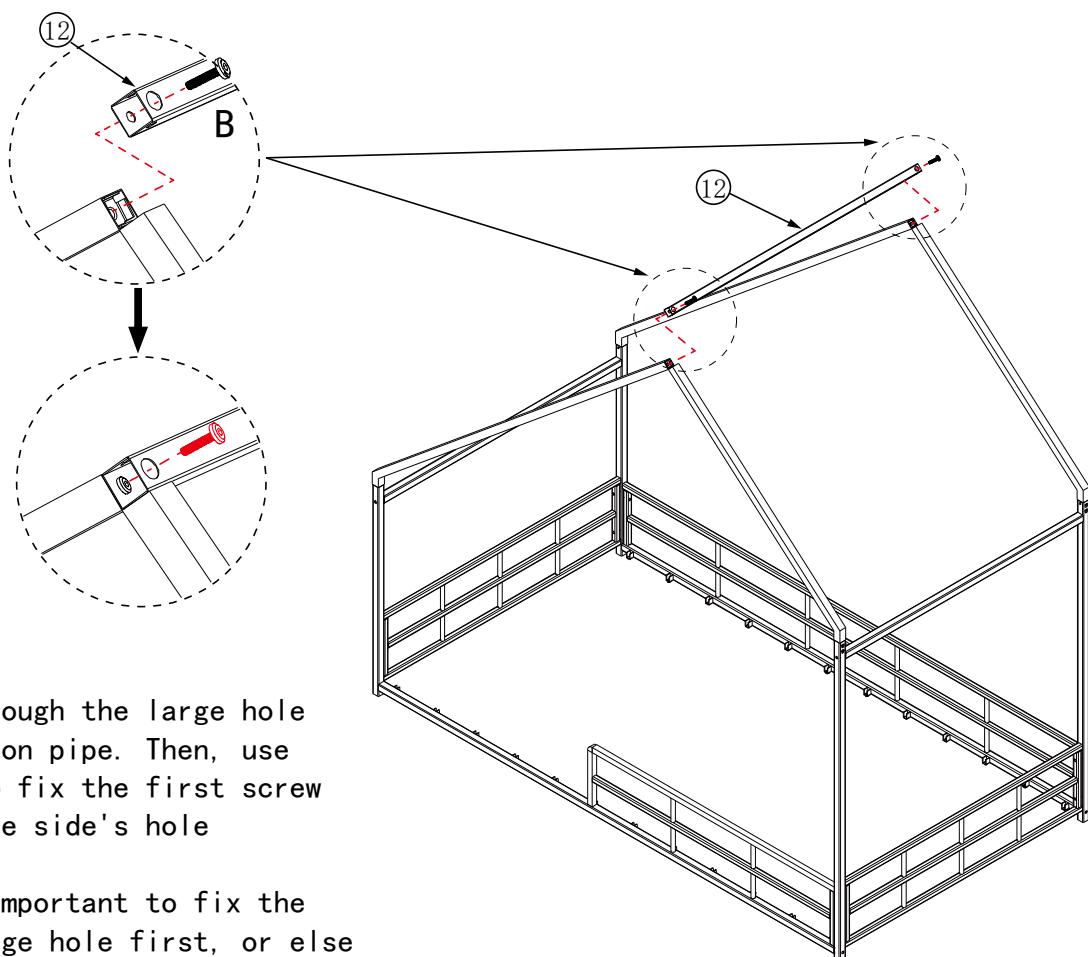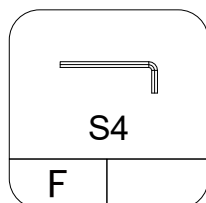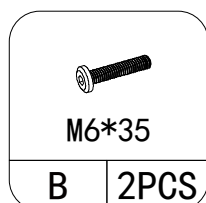



Pass a screw through the large hole to secure the iron pipe. Then, use another screw to fix the first screw from the opposite side's hole

Note that it's important to fix the screw in the large hole first, or else it will block the passage.





Step7

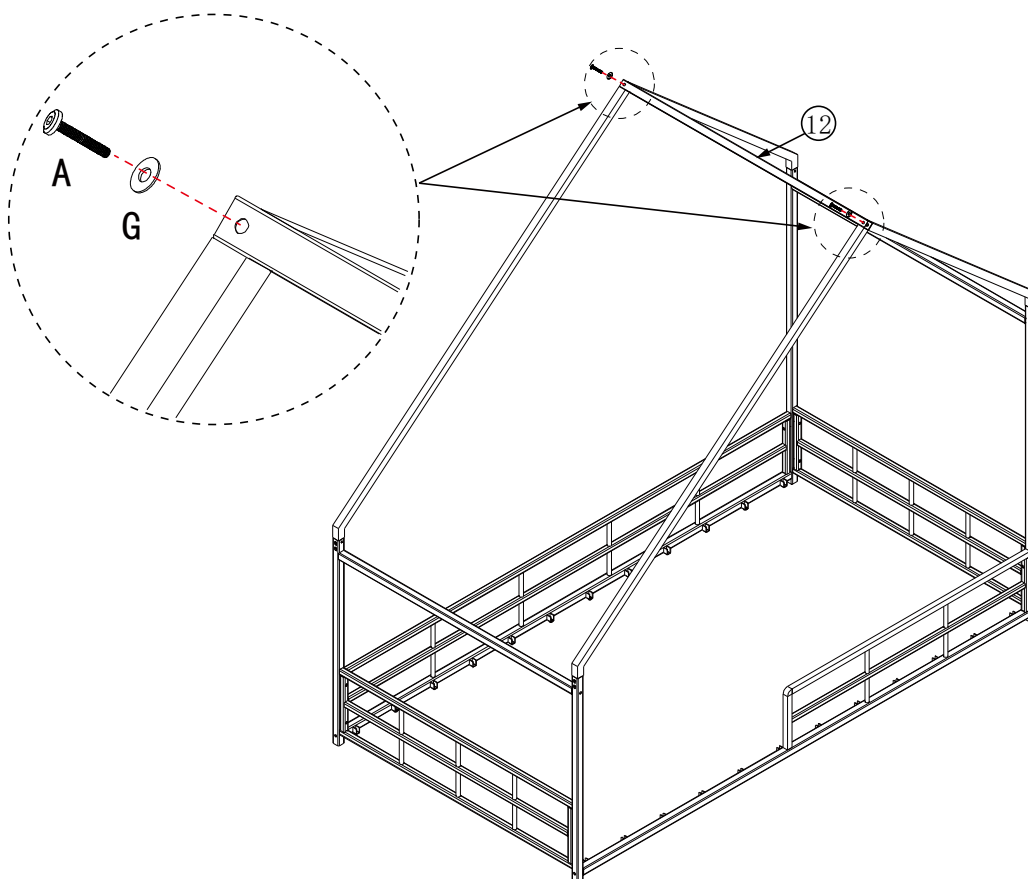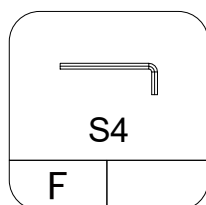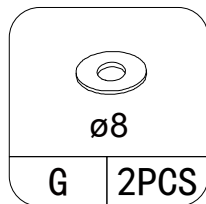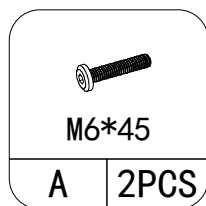



Step8

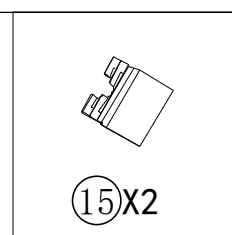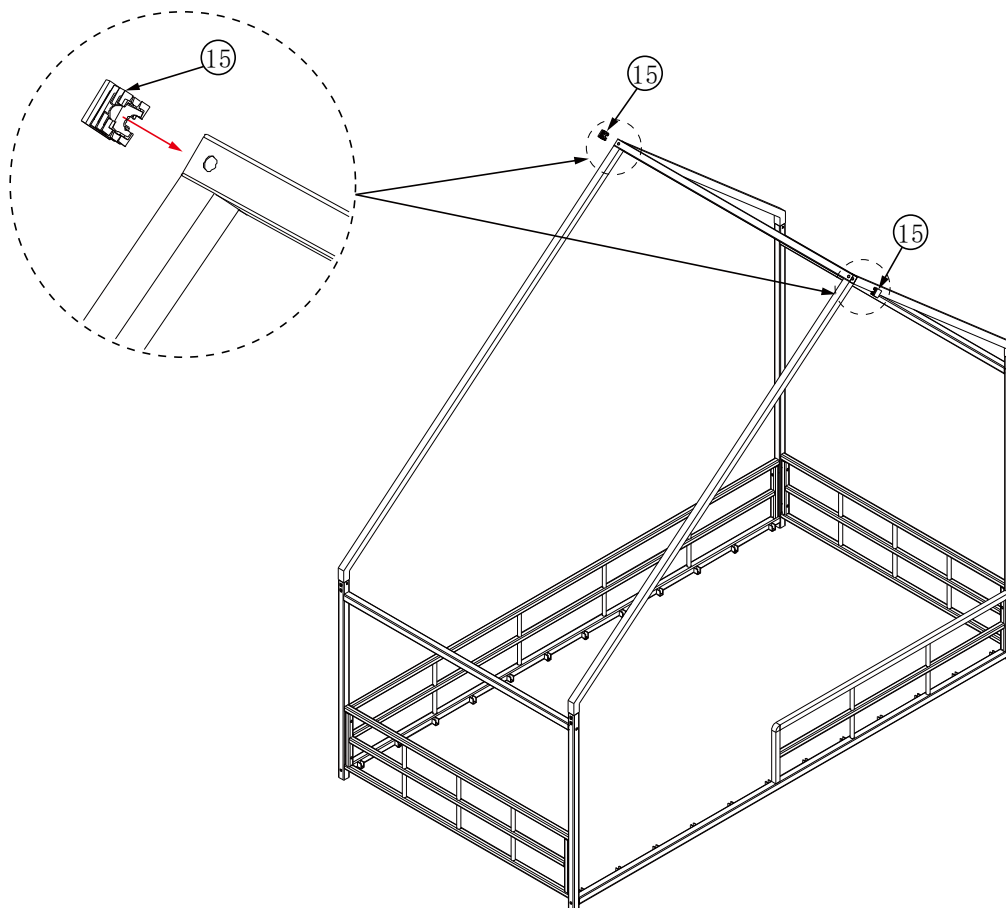


Step9

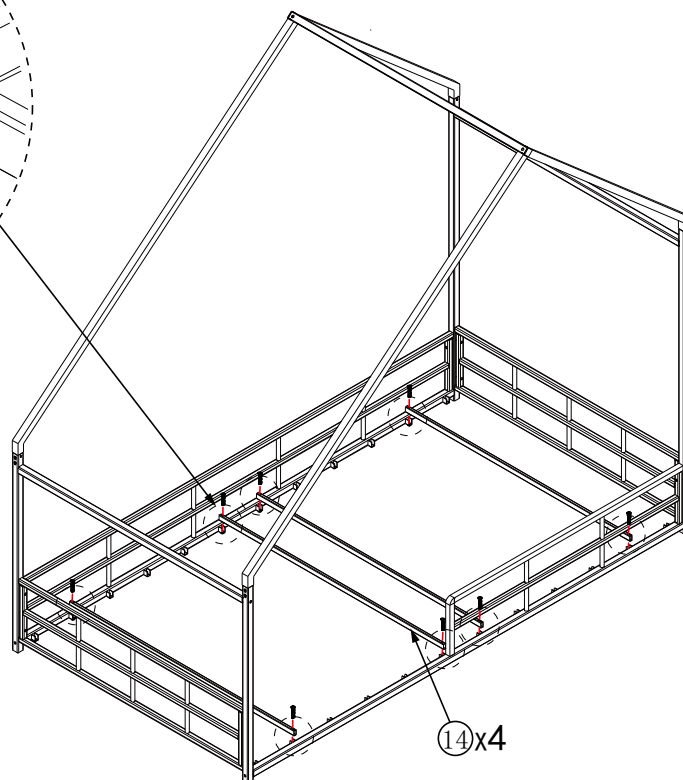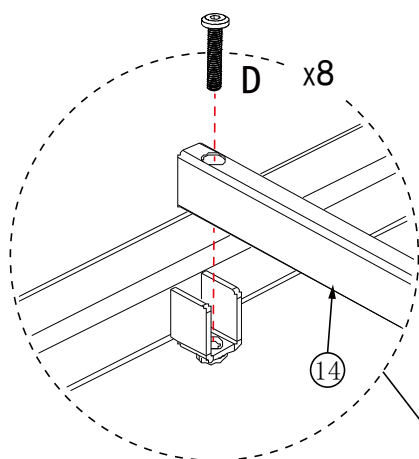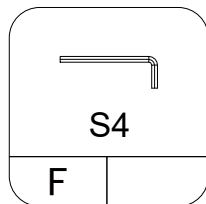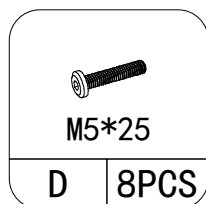

Step10

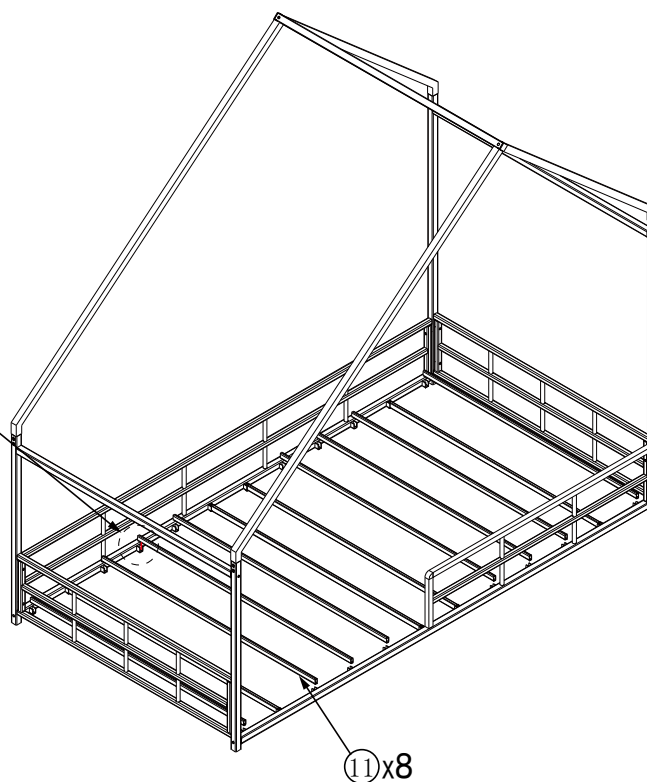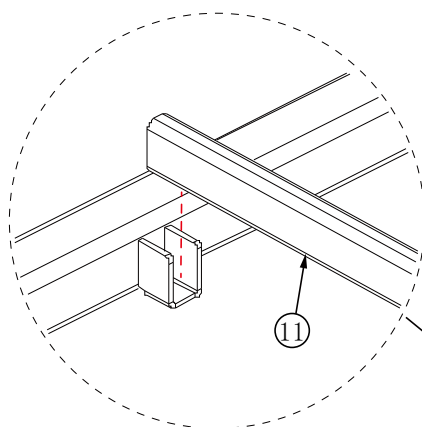

Step11

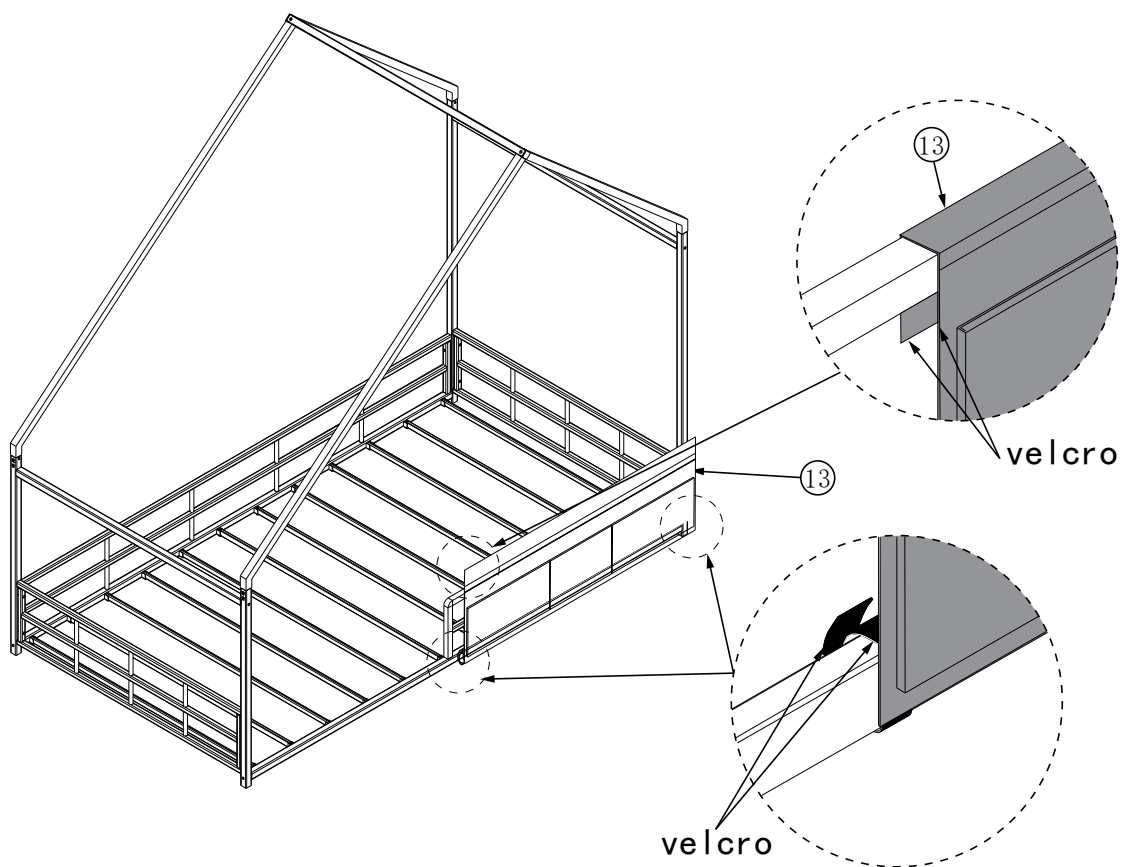

Step12

