

ASSEMBLY INSTRUCTION















TIPS

1. This bed fit standard twin mattress 75" L x 39" W.
2. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
3. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
4. Do not use substitute part. Contact the manufacture or dealer for replacement part.



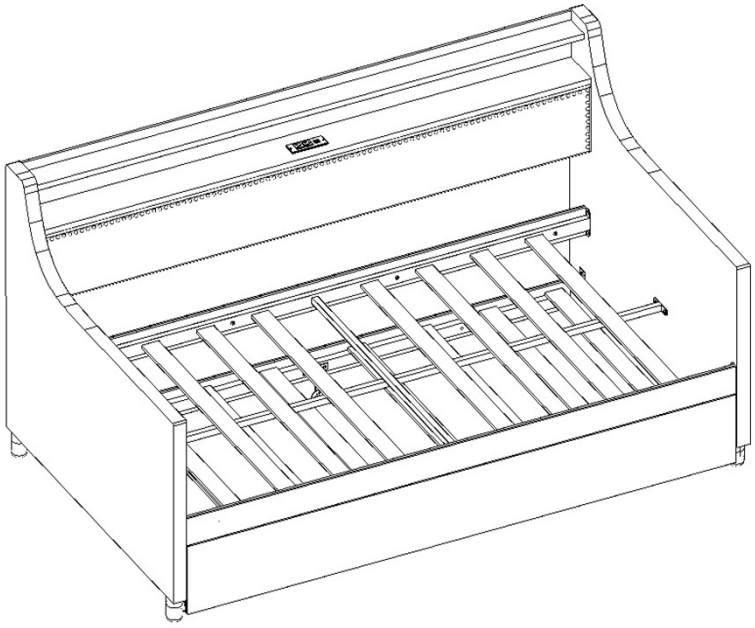


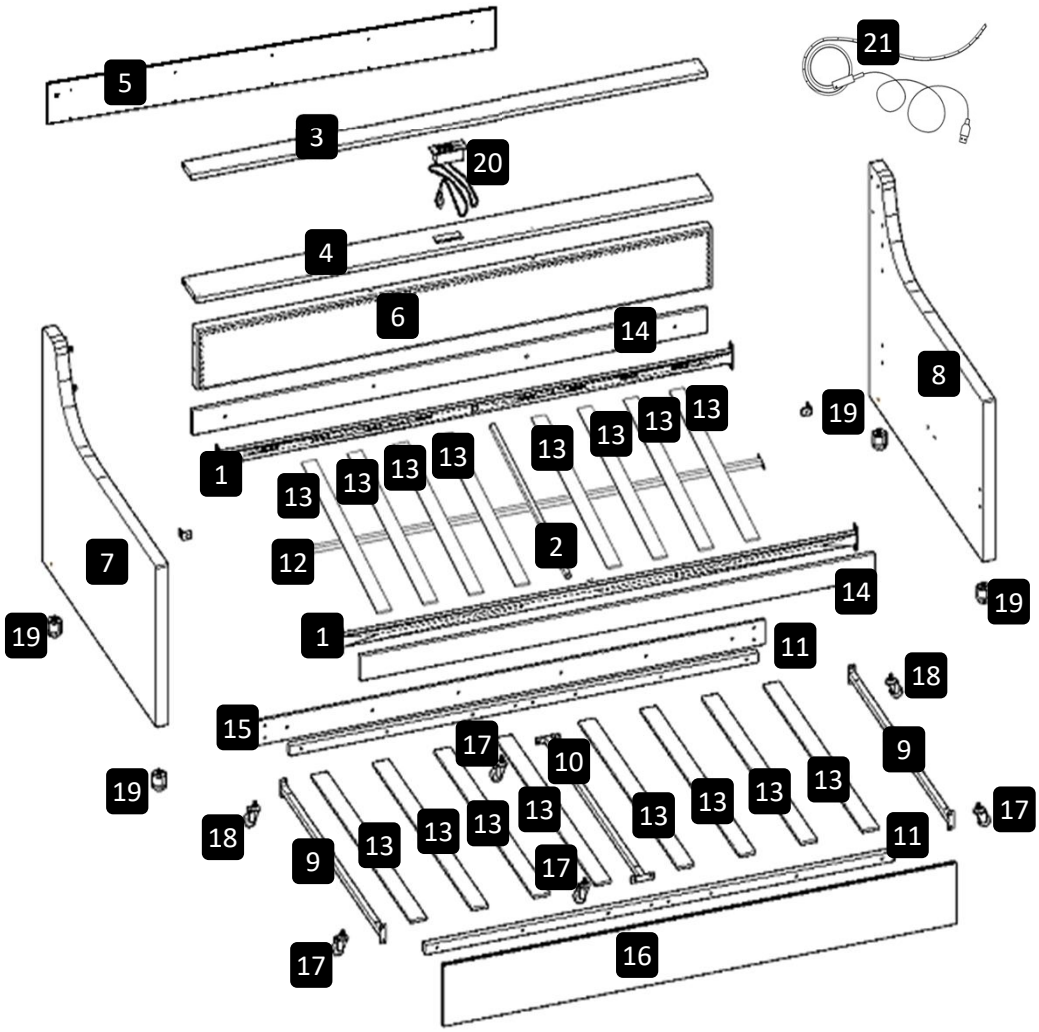



Part List

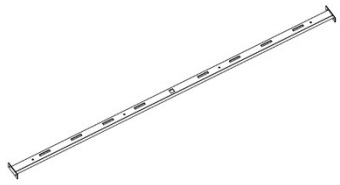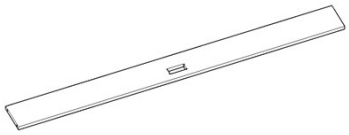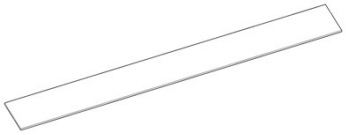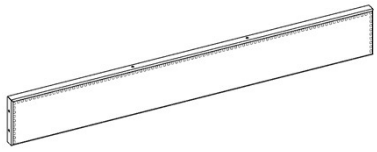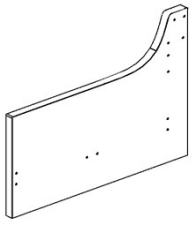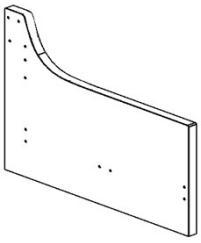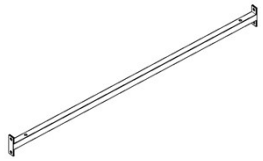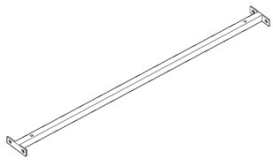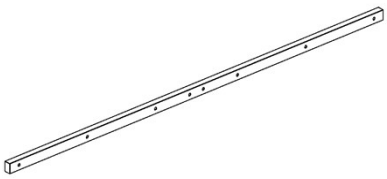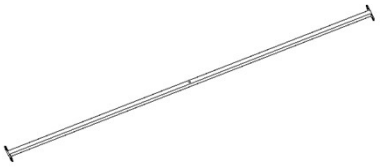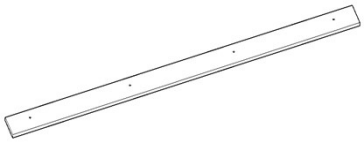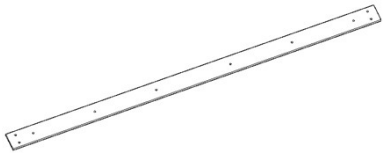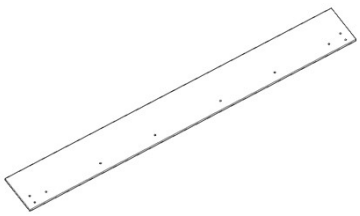1  Metal Slat Frame x2	2  Rail x1	3  Panel x1
4  Panel x1	5  Backboard x1	6  Headborad x1
7  Left Handrail x1	8  Right Handrail x1	9  Side Support Iron x2
10  Middle Support Iron x1	11  Support Slat x2	12  Long Support Iron x1
13  Slats x16	14  Panel x2	15  Back Trundle Panel x1
16  Front Trundle Panel x1	17  Caster x4	18  Brake Caster x2

Part List

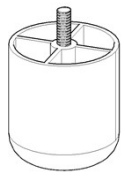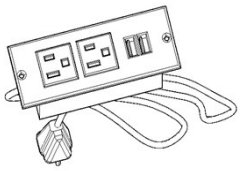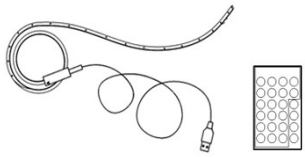19	20	21
		
Plastic Feet x4	Socket X1	Lamp Strip Kit x1


Hardware List

A	B	C
		
Bolts(M6X10mm) X8	Bolts(M6X16mm) X32	Bolts(M6X30mm) X8
D	**E**	**F**
		
Bolts(M6X35mm) X17	Angle iron x2	Angle iron x8
G	**H**	**I**
		
Allen Key X1	Flat Gasket X16	Screws (M3X12mm) X9
J	**K**	**L**
		
Screws (M4X25mm) X10	P-Shaped Iron Sheet x3	Foam Pad X8

Step1


Attention: Do not tighten the screws before completing the entire installation.If you have any difficulty with the installation process, please feel free to contact us.

B	F
Bolts(M6X16mm) X2	Angle iron x2

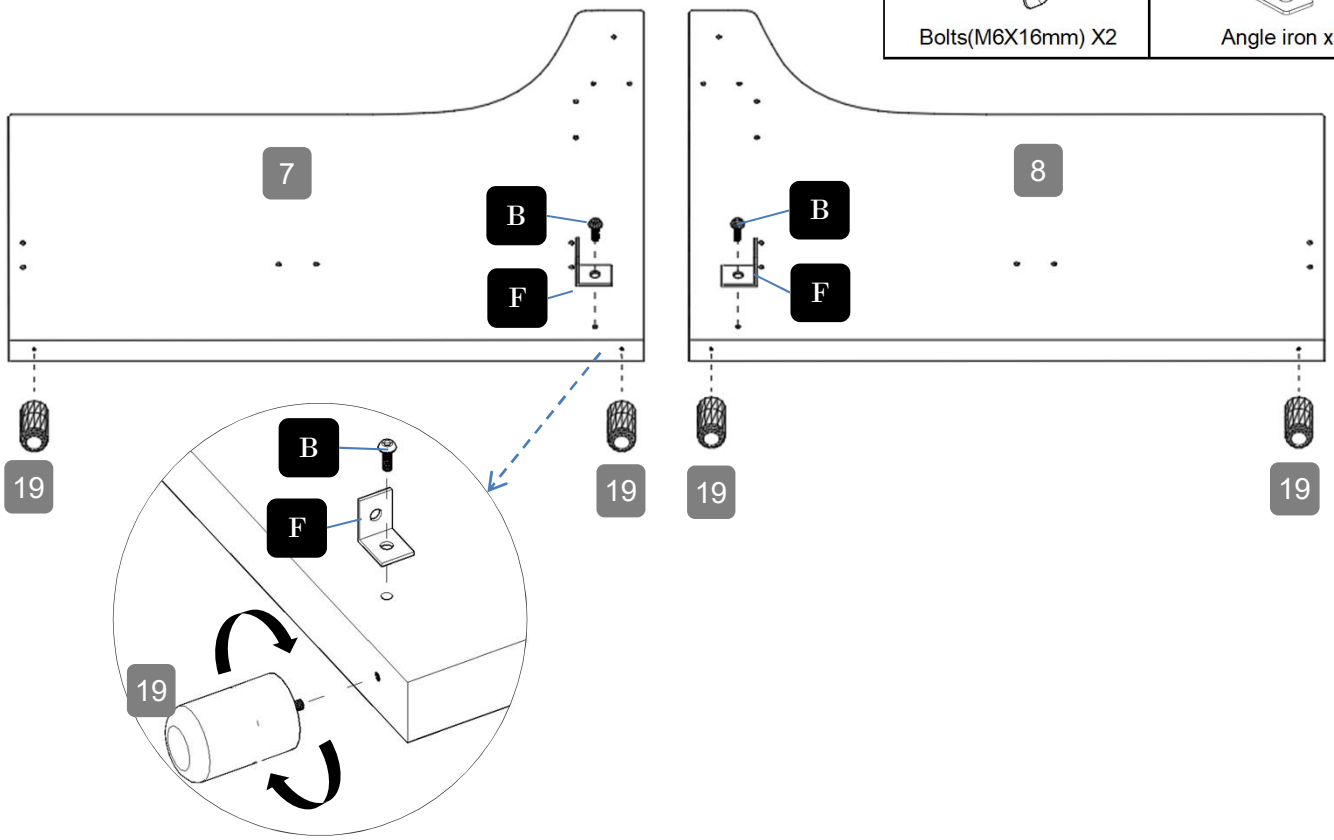


Step2

B	D	H
Bolts(M6X16mm) X8	Bolts(M6X35mm) X4	Flat Gasket X4

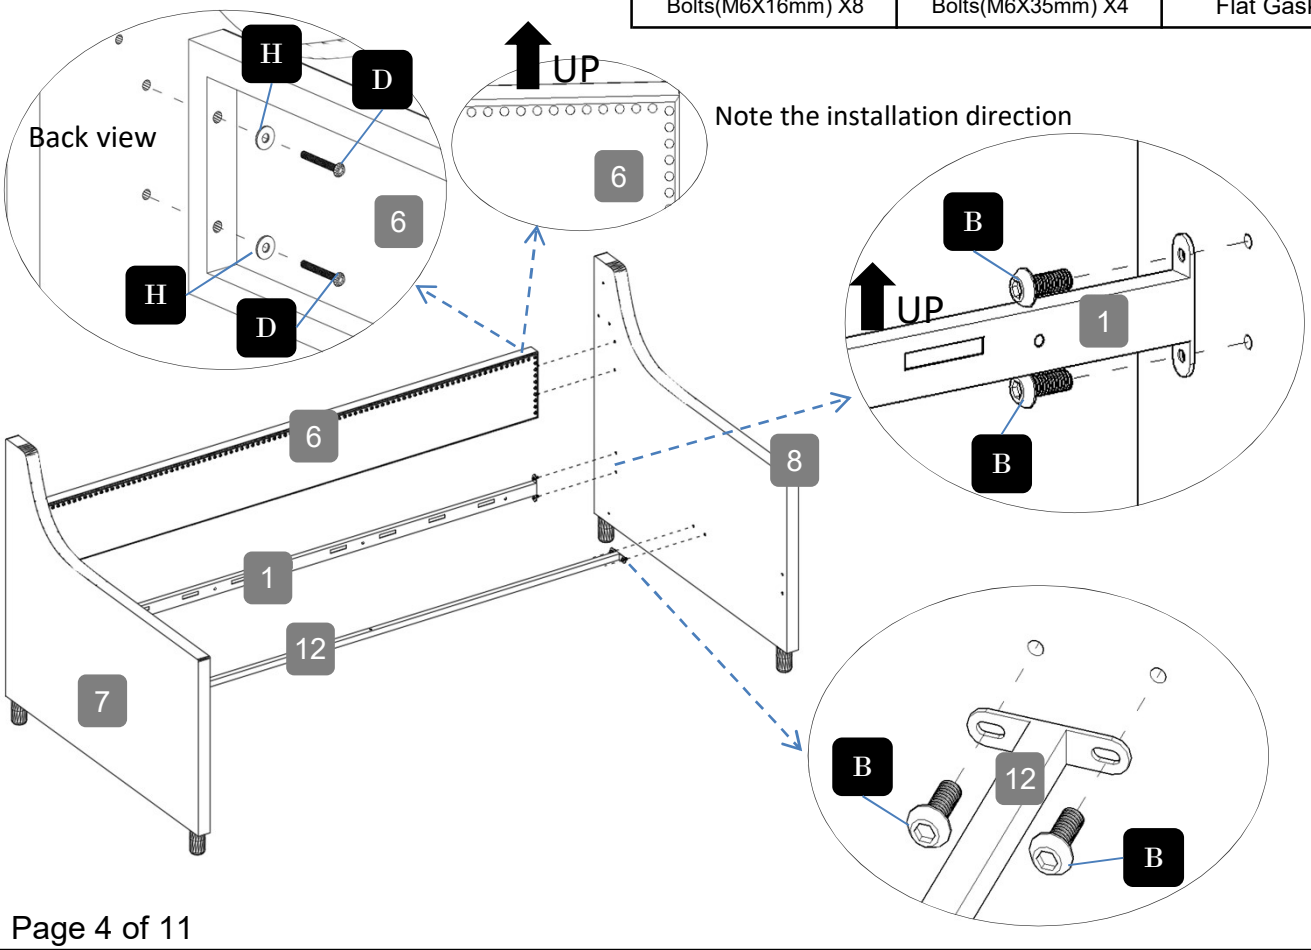


Step3


B	F	I	K
Bolts(M6X16mm) X2	Angle iron x2	Screws (M3X12mm) X3	P-Shaped Iron Sheet x3

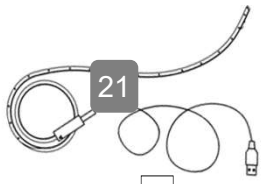


1

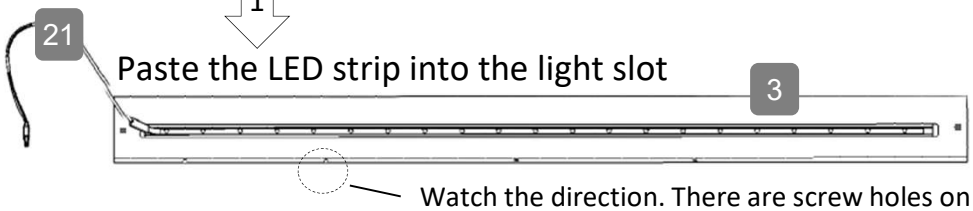


Watch the direction. There are screw holes on the edge of the board

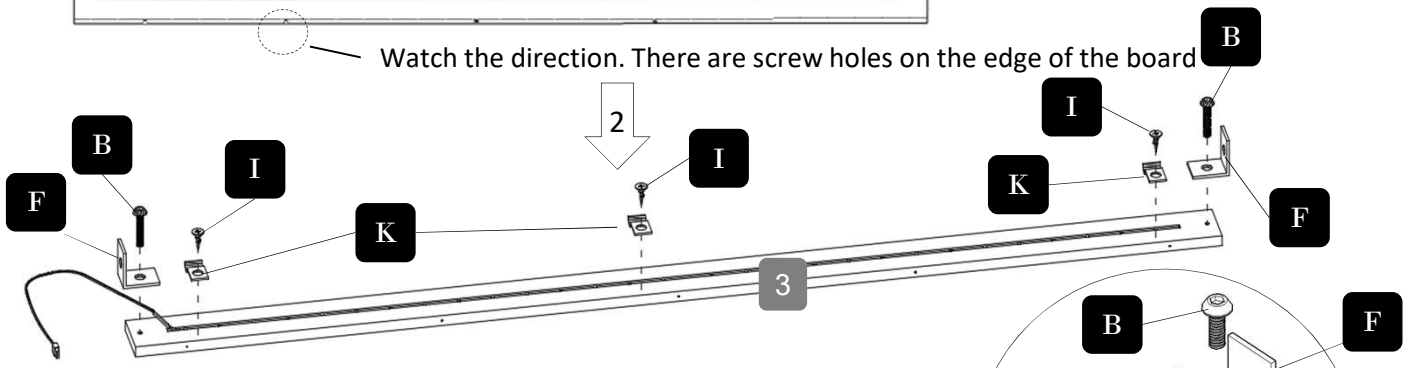

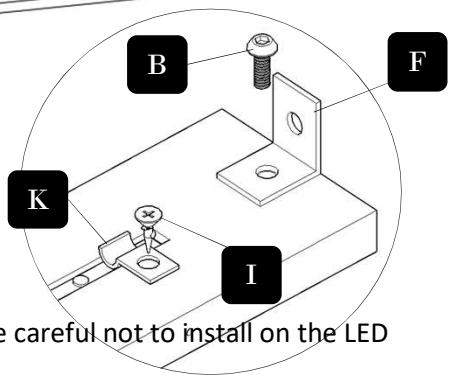


Be careful not to install on the LED





Assembly Tools Required(Not Included)


Step4

B	F	I
Bolts(M6X16mm) X4	Angle iron x4	Screws (M3X12mm) X2

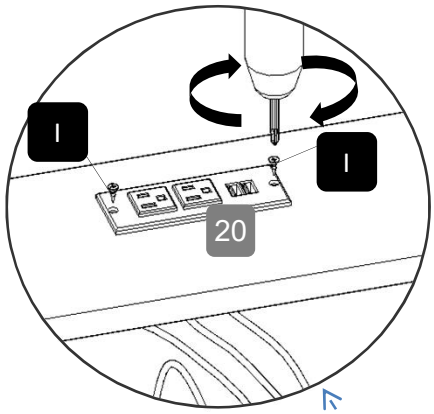

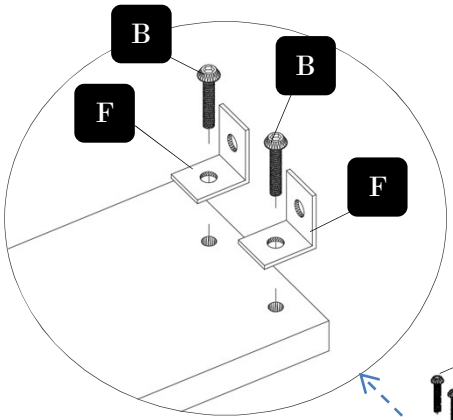

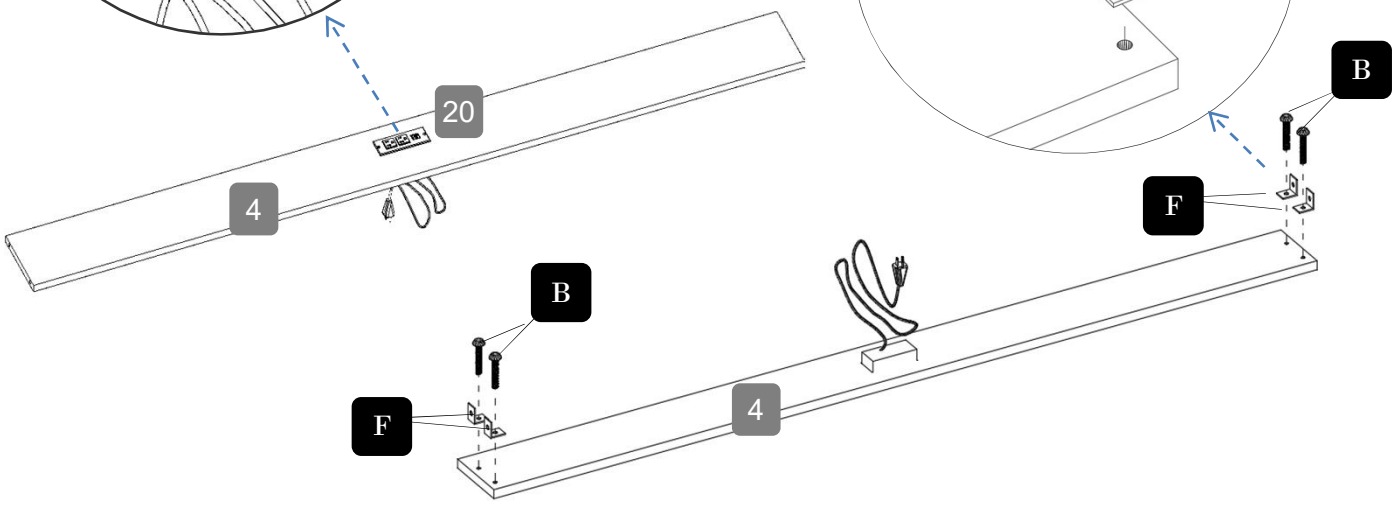




Assembly Tools Required(Not Included)

Step5


B	E	I
Bolts(M6X16mm) X6	Angle iron x2	Screws (M3X12mm) X4

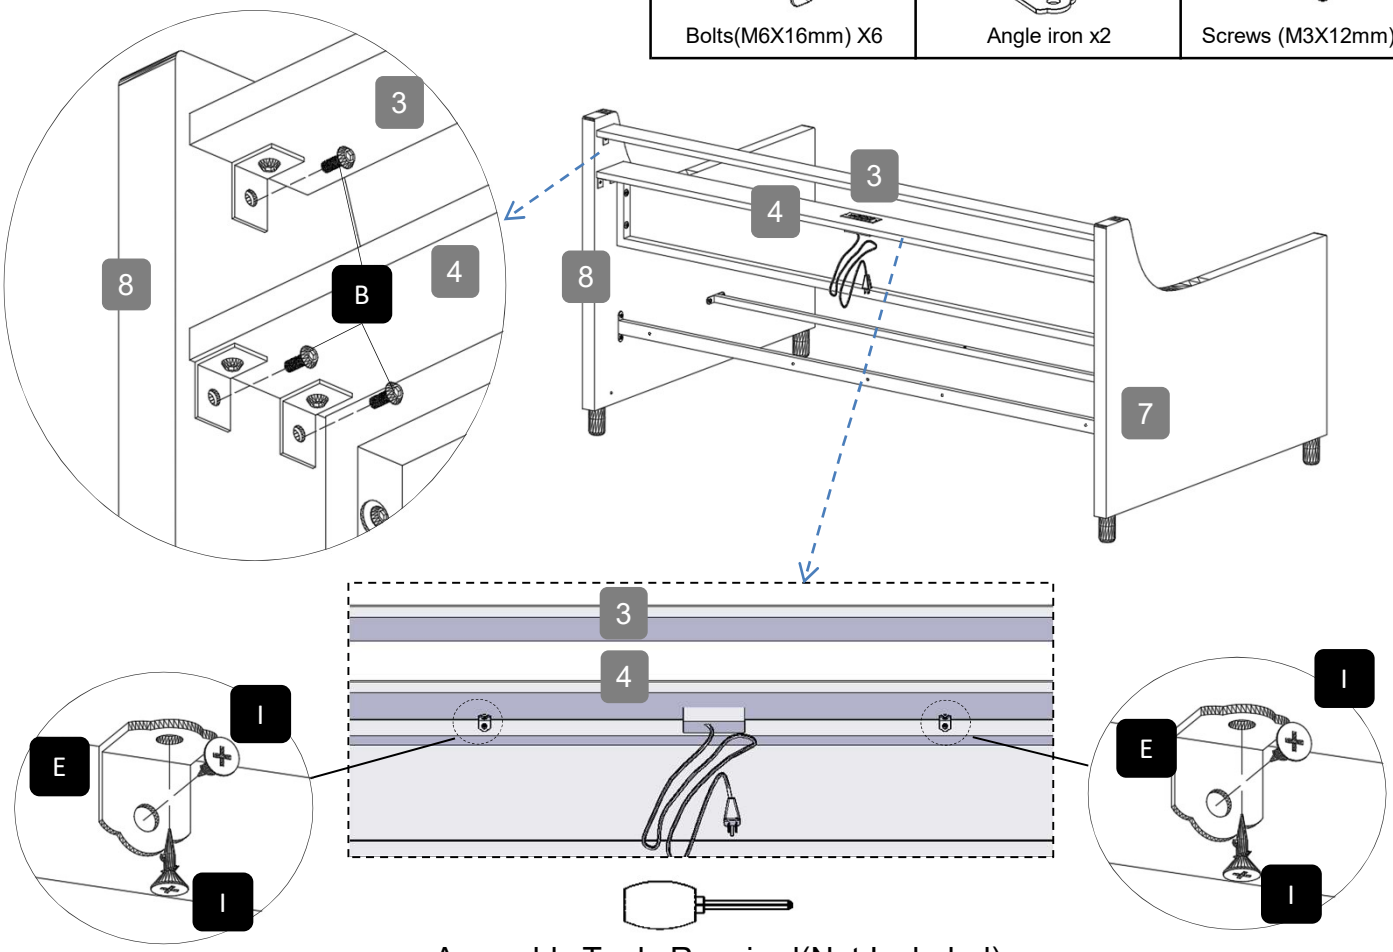

Assembly Tools Required(Not Included)

Step6


J
Screws (M4X25mm) X10

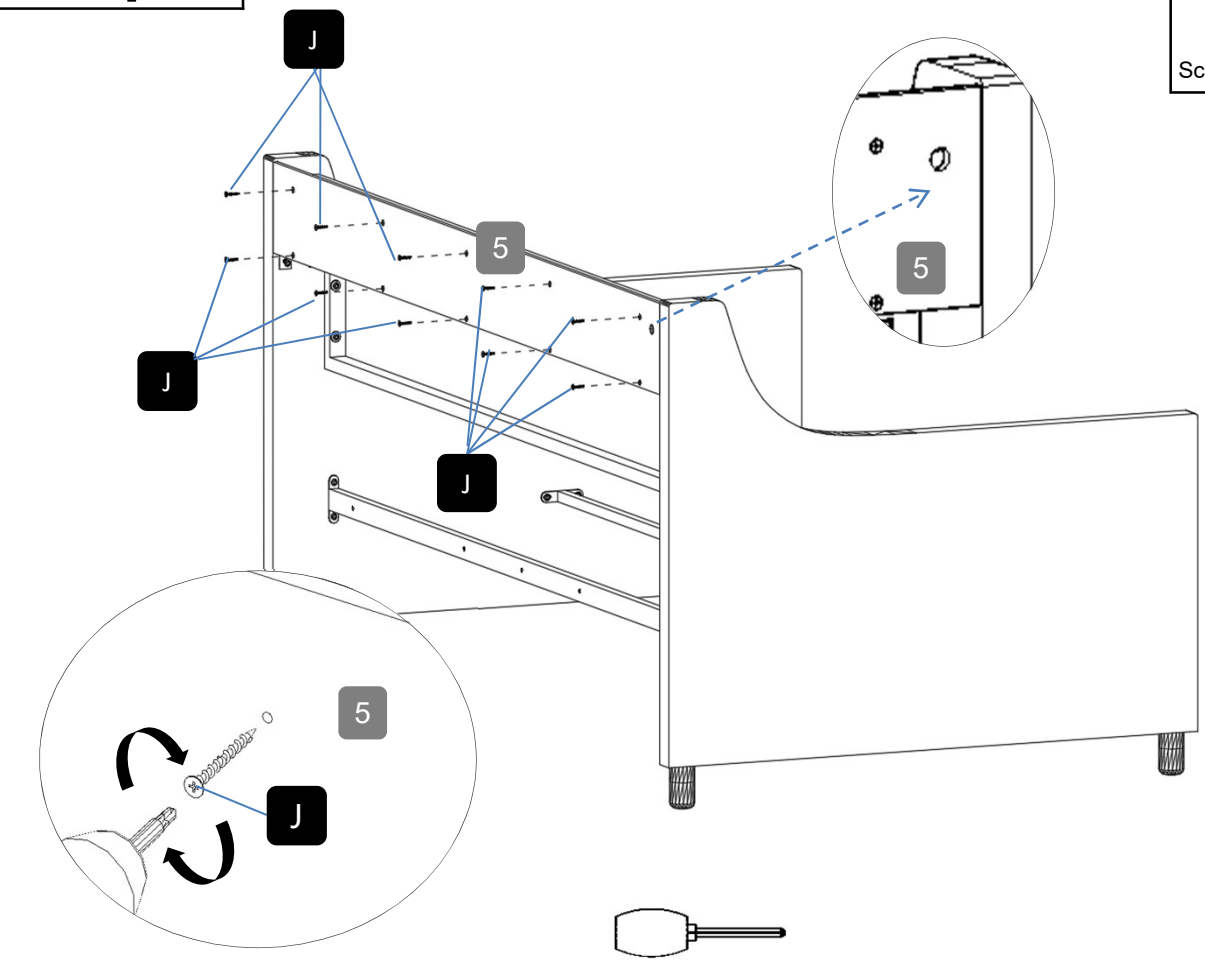


Assembly Tools Required(Not Included)


Step7

B	D
	
Bolts(M6X16mm) X1	Bolts(M6X35mm) X1

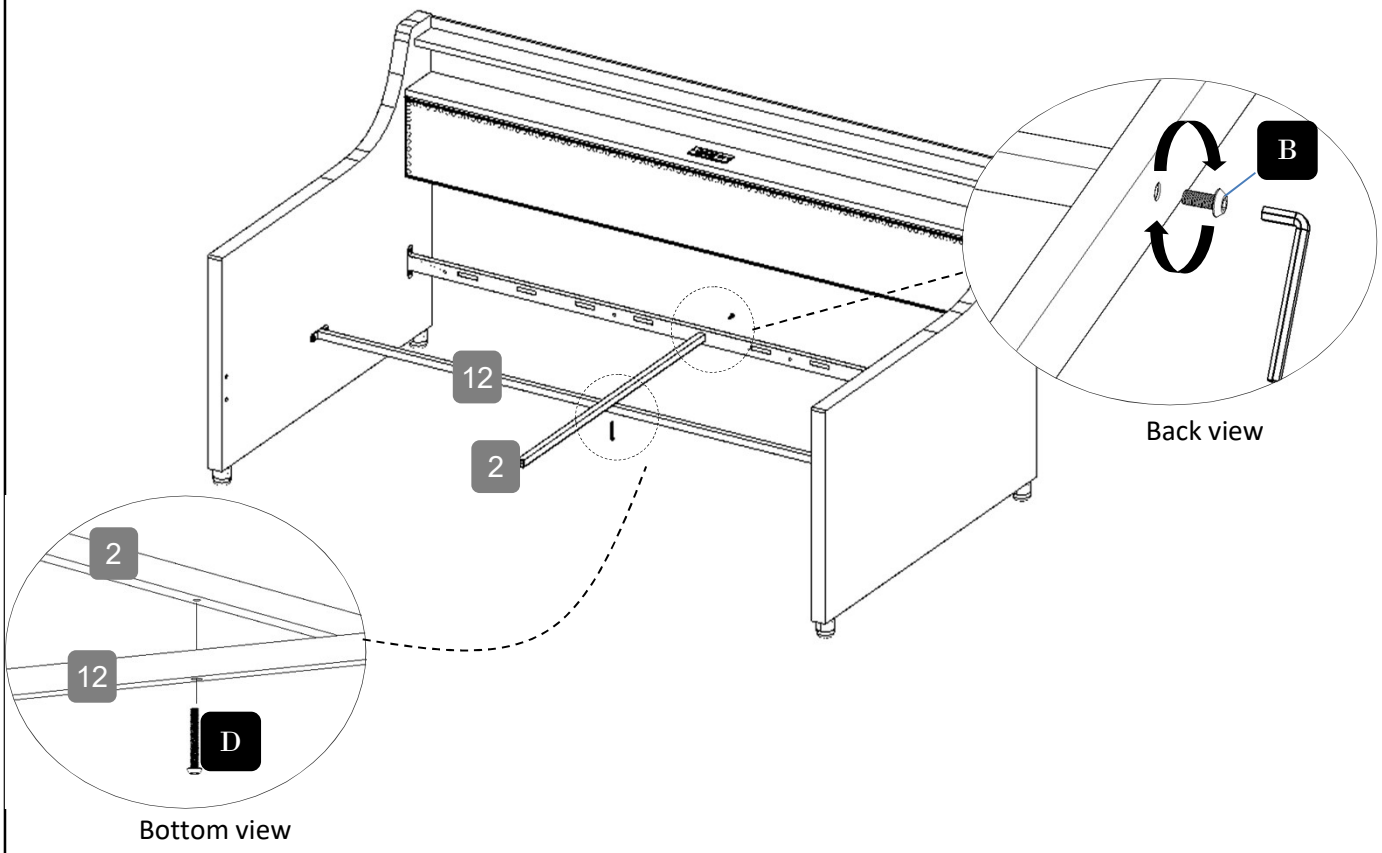

Step8

L

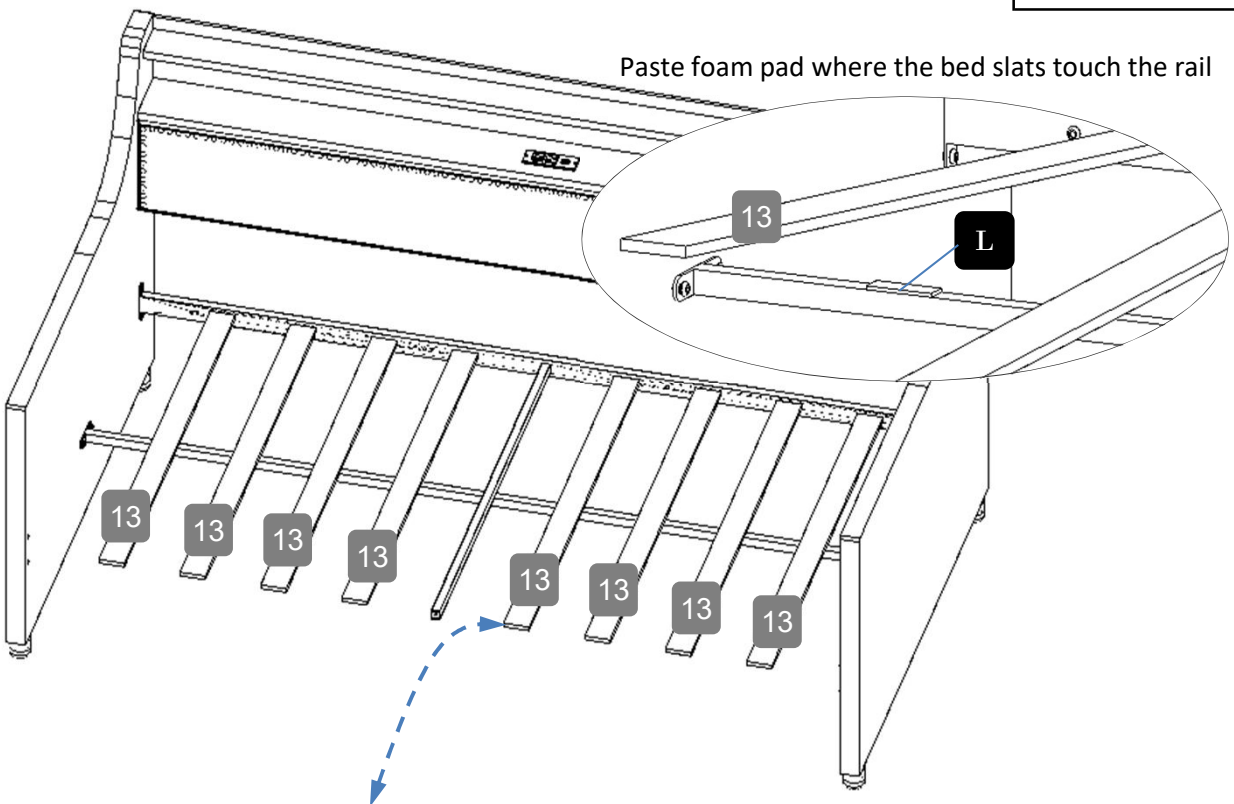Foam Pad X8




Please note that the bottom of these 8 slats is without felt,
and the bottom of the other 8 slats with felt is used in step 14 of the installation diagram

Step9

B



Bolts(M6X16mm) X5

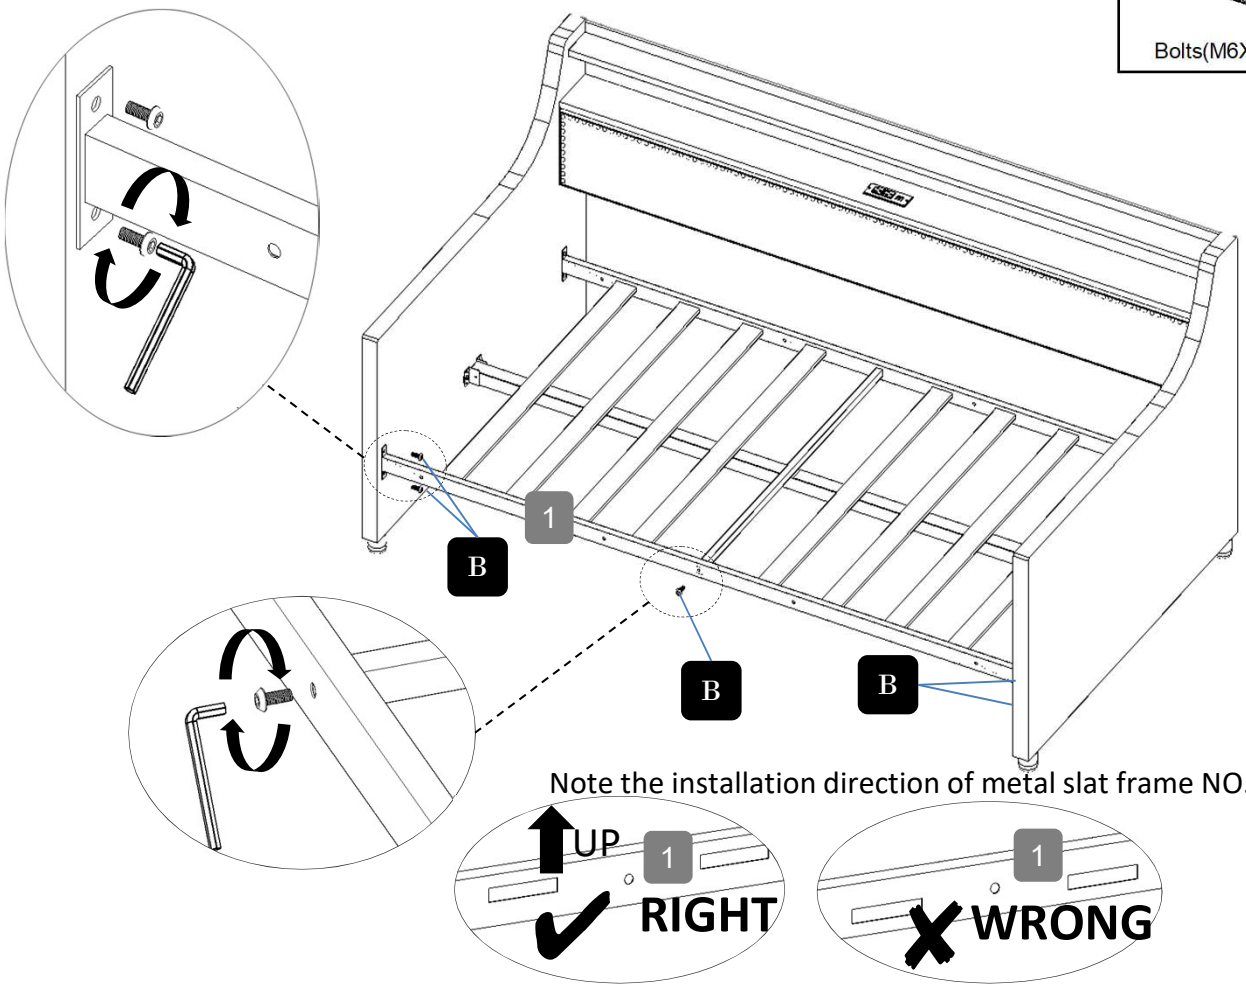


Note the installation direction of metal slat frame NO.1

Step10

C




Bolts(M6X30mm) X8

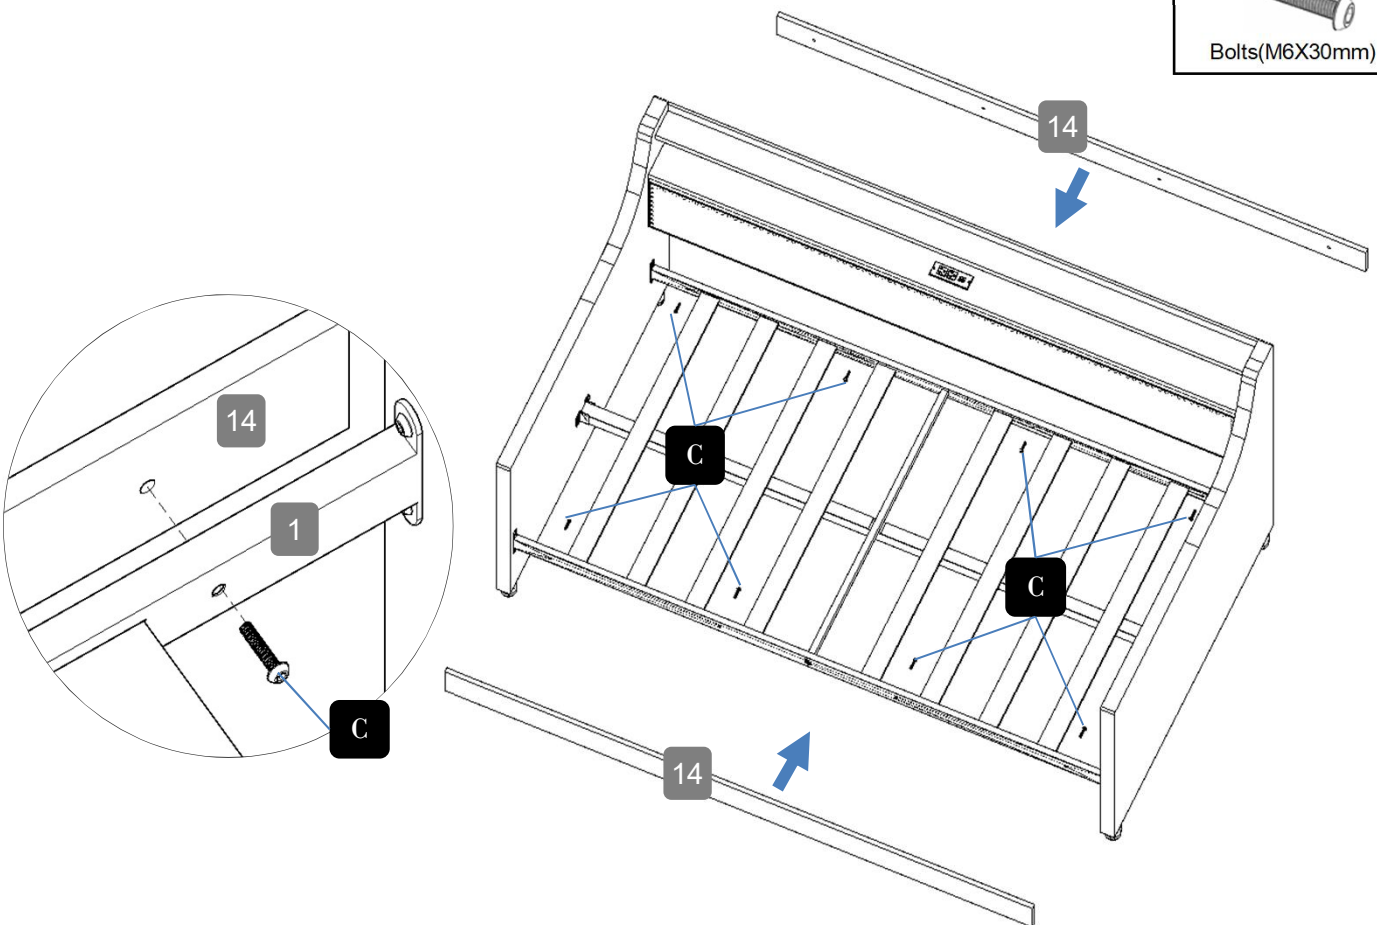

After this step, you can lock the other bolts tightly


Step11

D	H
Bolts(M6X35mm) X12	Flat Gasket X12

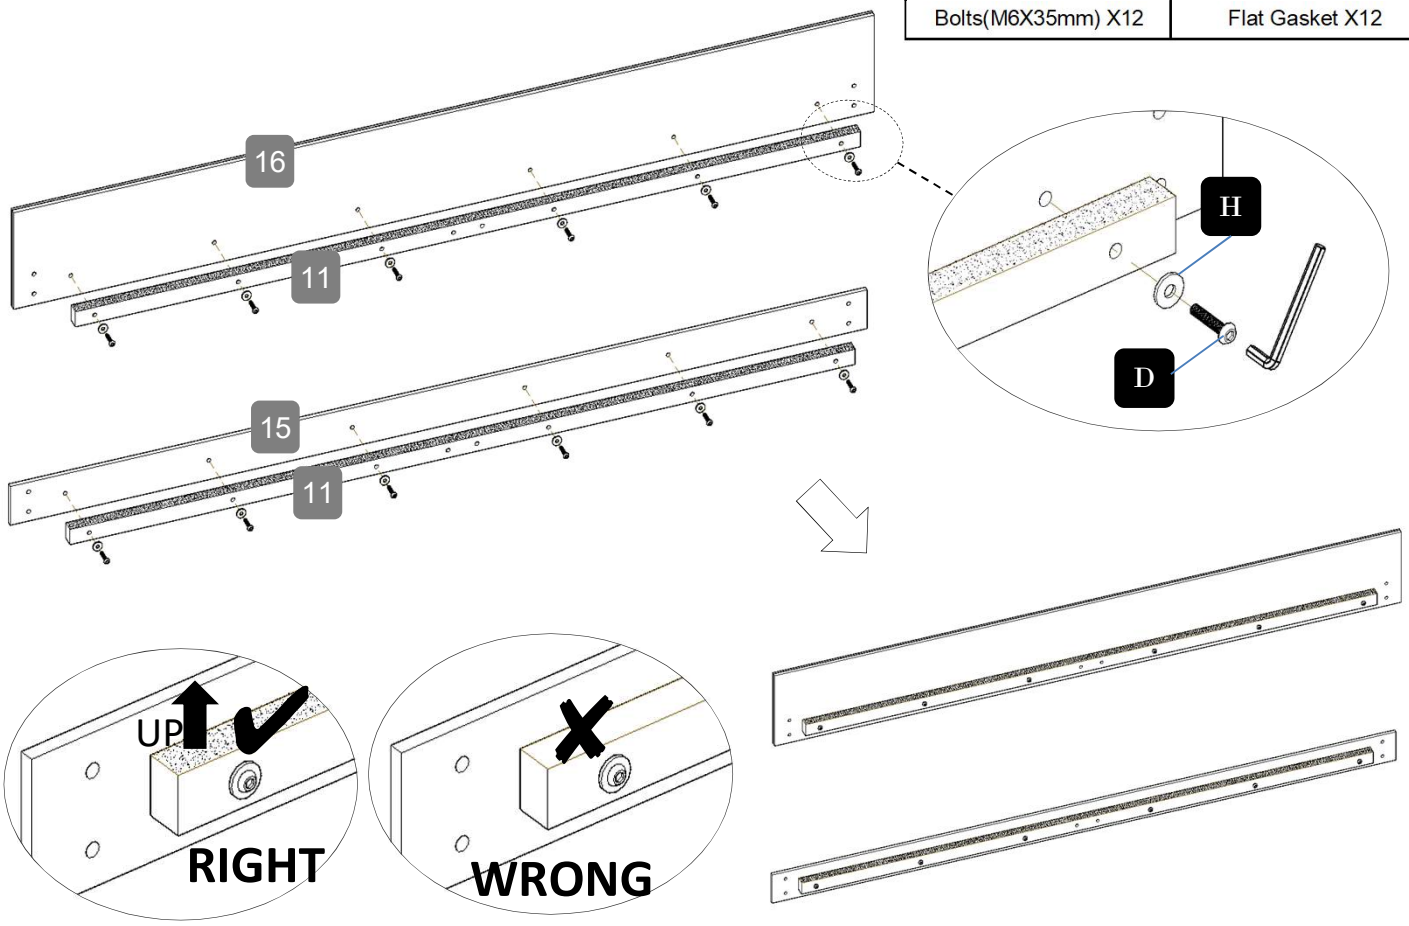


Step12

A	B
Bolts(M6X10mm) X8	Bolts(M6X16mm) X4

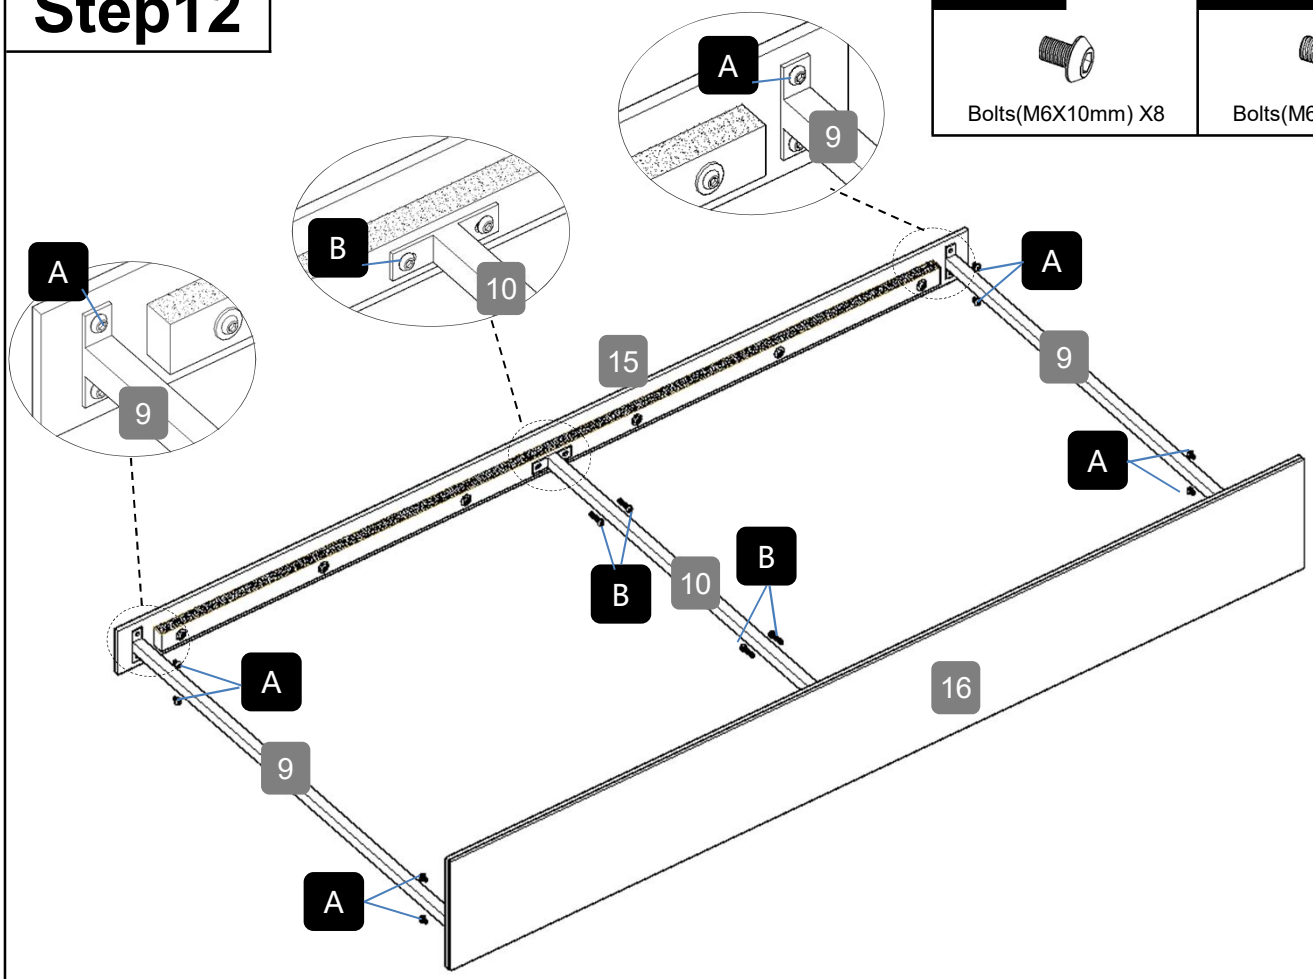


Step13

Tip: You can press and hold the brake of part18 to keep the bed in place

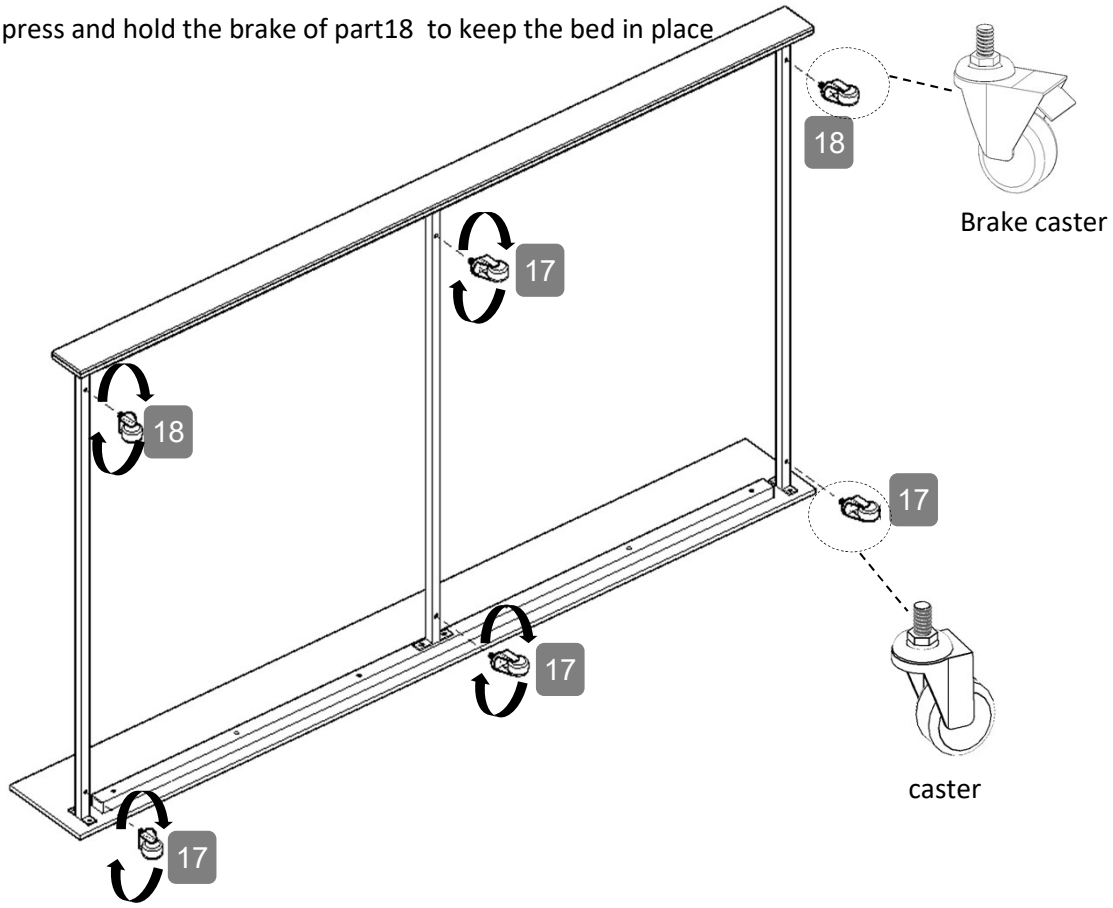


Step14


Please note that these 8 slats have felt on the bottom

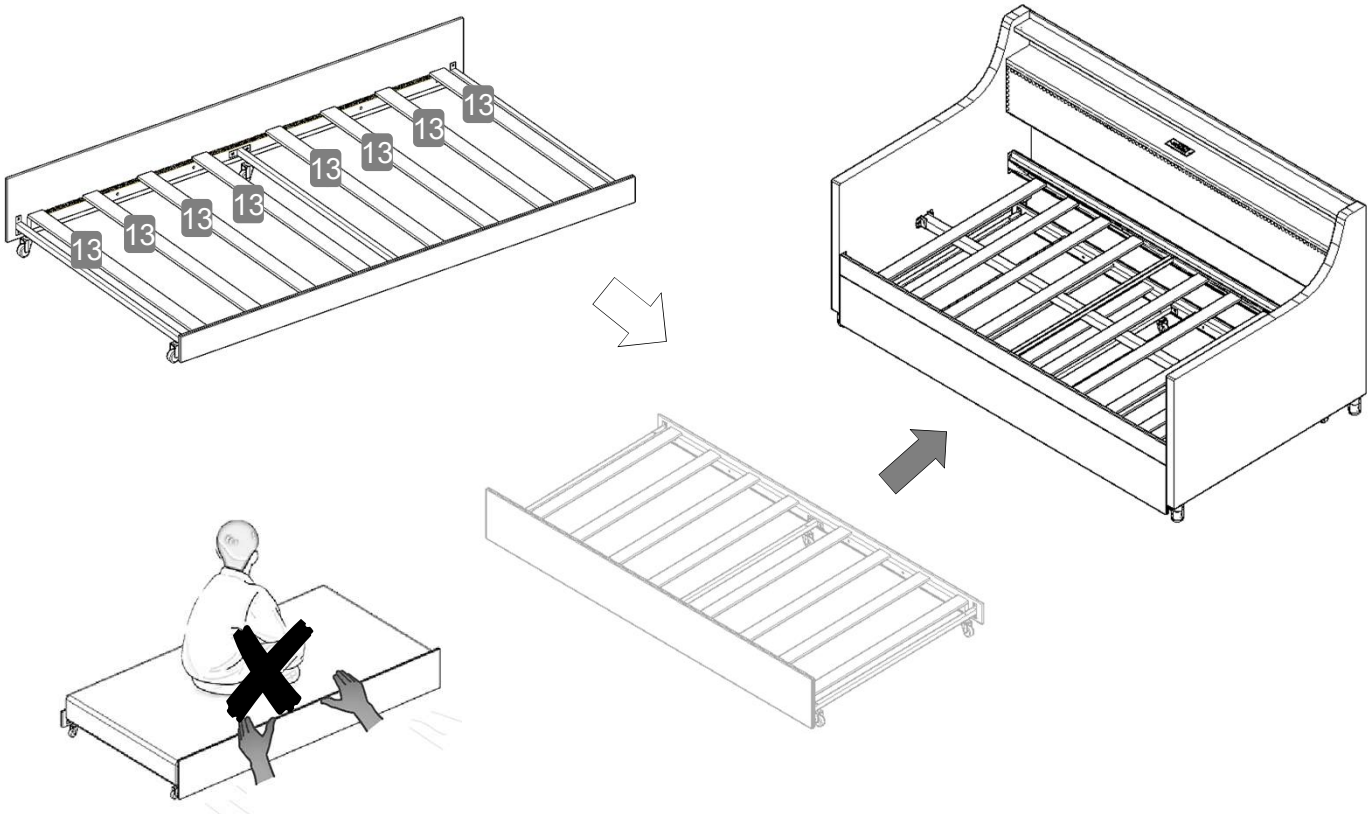

Note：Please don't move the bed when someone is in it

Step15

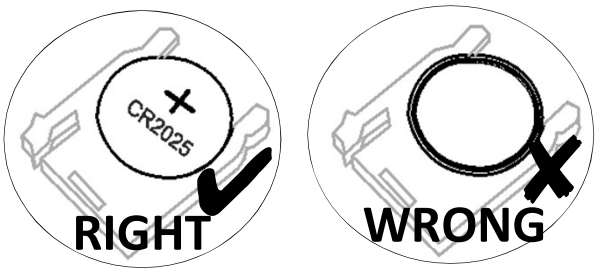

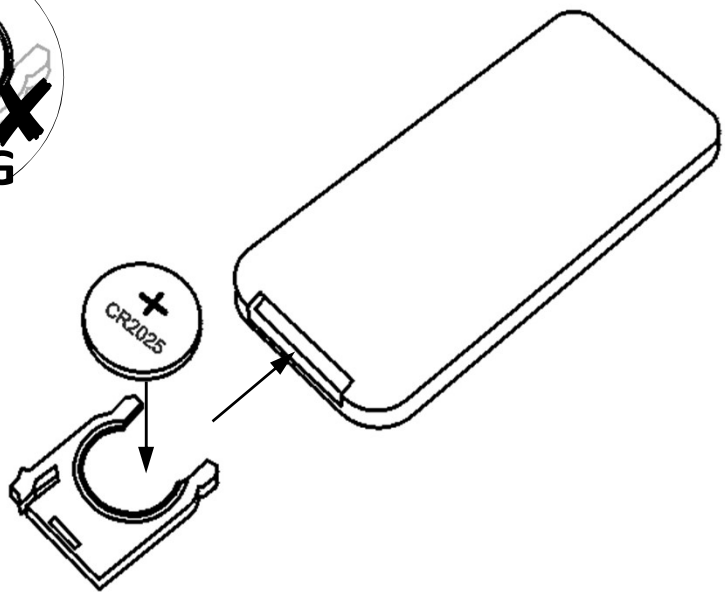

Remote control does not contain batteries, please buy your own a CR2025 button battery installed into the remote control