

## IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY


## Notice:


- 1. Follow the installation instructions. Please confirm all accessories are preset before installation.
- 2.Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
- 3.If you encounter any problems during installation, refer to two solutions: Follow the installation video tutorial on the product page or contact our customer service.


Item no.	Reference Image	Qty	Item no.	Reference Image	Qty
A	M6*12mm	X16			X1
B	M6*16mm	X40			
C	M6*35mm	X6			

Item no.	Reference Image	Qty	Item no.	Reference Image	Qty
1		X1	6	ARANA JAWA MARA	X4
2		X1	7		X8
3		X1	8		X8
4		X1	9		X4
5		X1			

## **Explosion Diagram**

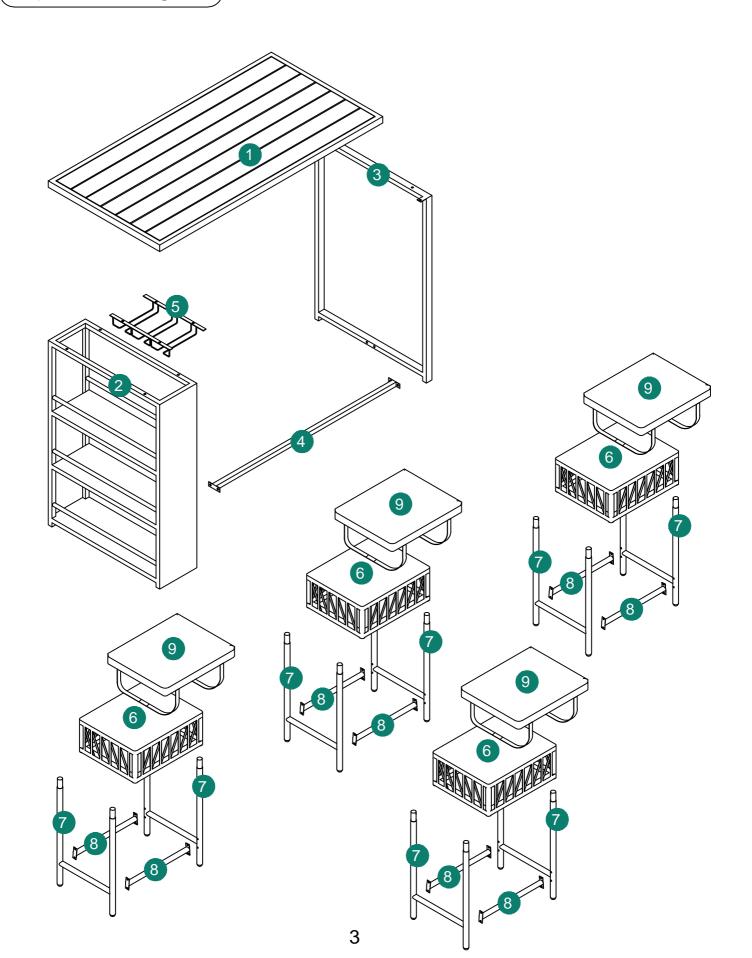





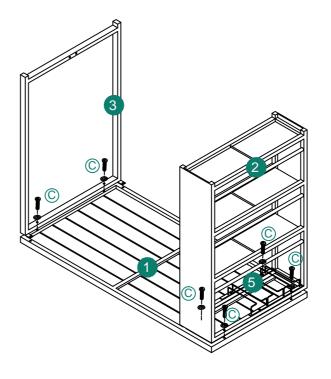



-----

2 B 4pcs

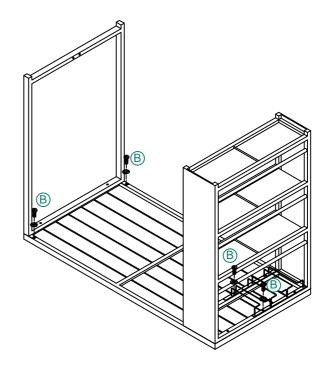





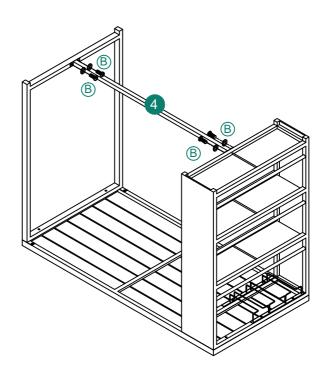




Repeat step 4 twice

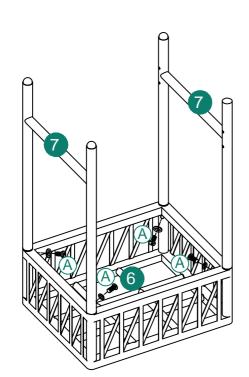

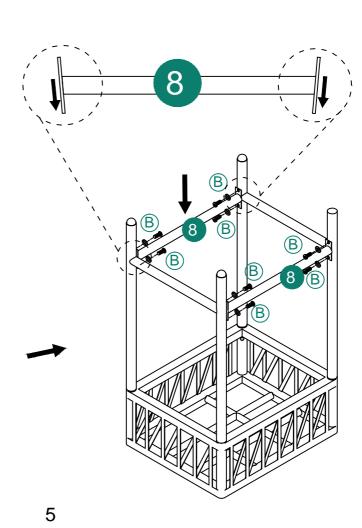



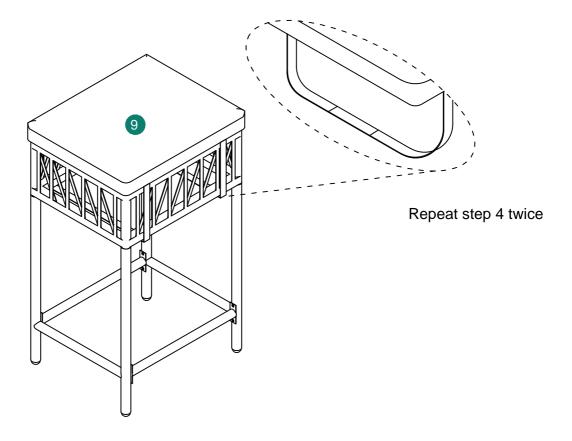

-----

