

Kitchen Island Carts

Assembly Instructions - Please keep for future reference

SKU: N707P452596/N707P452597



Dimensions

Width-58.2inch

Depth-22.4inch+10inch

Height-42.9inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


















Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type


Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

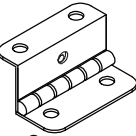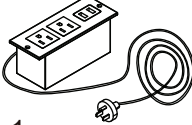(A)  Cam Bolt x 70+2	(B)  15x9.5mm Cam lock x 70+2	(C)  6*40mm Dowel x 26+2	(D)  3.5*30mm Screw x 16+1
(E)  3*12mm Screw x 122+4	(F)  Hold hands + 4*16mm Screw x 2	(G)  7x40mm Screw x 8+1	(H)  6*45mm Screw x 8
(I)  6*25mm Screw x 24+2	(J)  Iron bar x 1	(K)  Caster x 3	(L)  Locking caster x 2
(N)  hinge x 3	(M)  Cabinet hinge x 8	(O)  Pivot 30mm x 8	(U)  Cross nut x 8
(P)  Angle iron x 4	(Q)  Stemware rack x 2 6x16mm Screw x 4	(R)  Pulley x 4	(S)  Pulley x 1
(V)  Pivot 30mm x 4	(T)  Screwdriver x 1	(X)  Allen Wrench x 1	(Y)  x4
(W)  3*16mm Screw x 12			
(CR)  Runner 300mm x 3	(CL)  Runner 300mm x 3	(DR)  Runner 300mm x 3	(DL)  Runner 300mm x 3

Ruler - Use this ruler to help correctly identify the screws

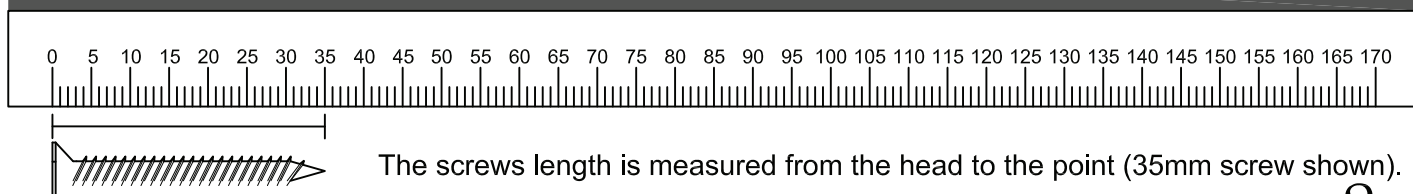


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

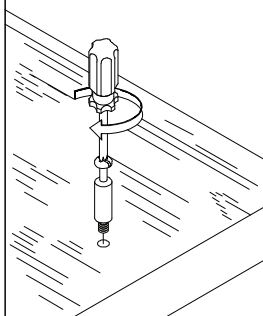

Step 2

Push the male camlock into the entry hole.

2

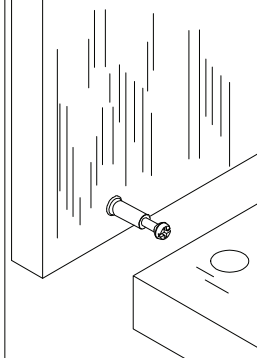


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

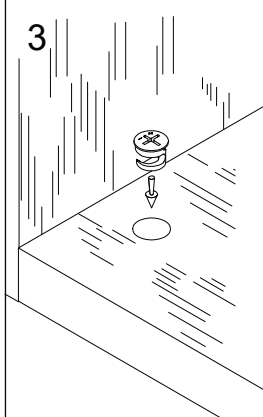


Step 4

Turn the female camlock clockwise with a screwdriver.





You should feel a click when the camlock is locked in place.

The joint is now secure.

4

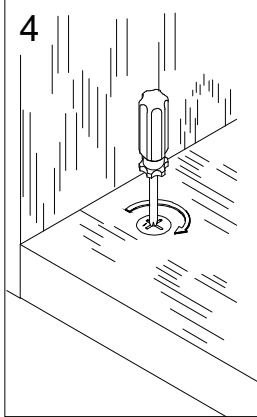


Tools required

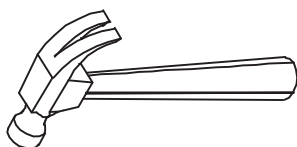














Phillips screwdriver
(medium & large)

Assembly Instructions






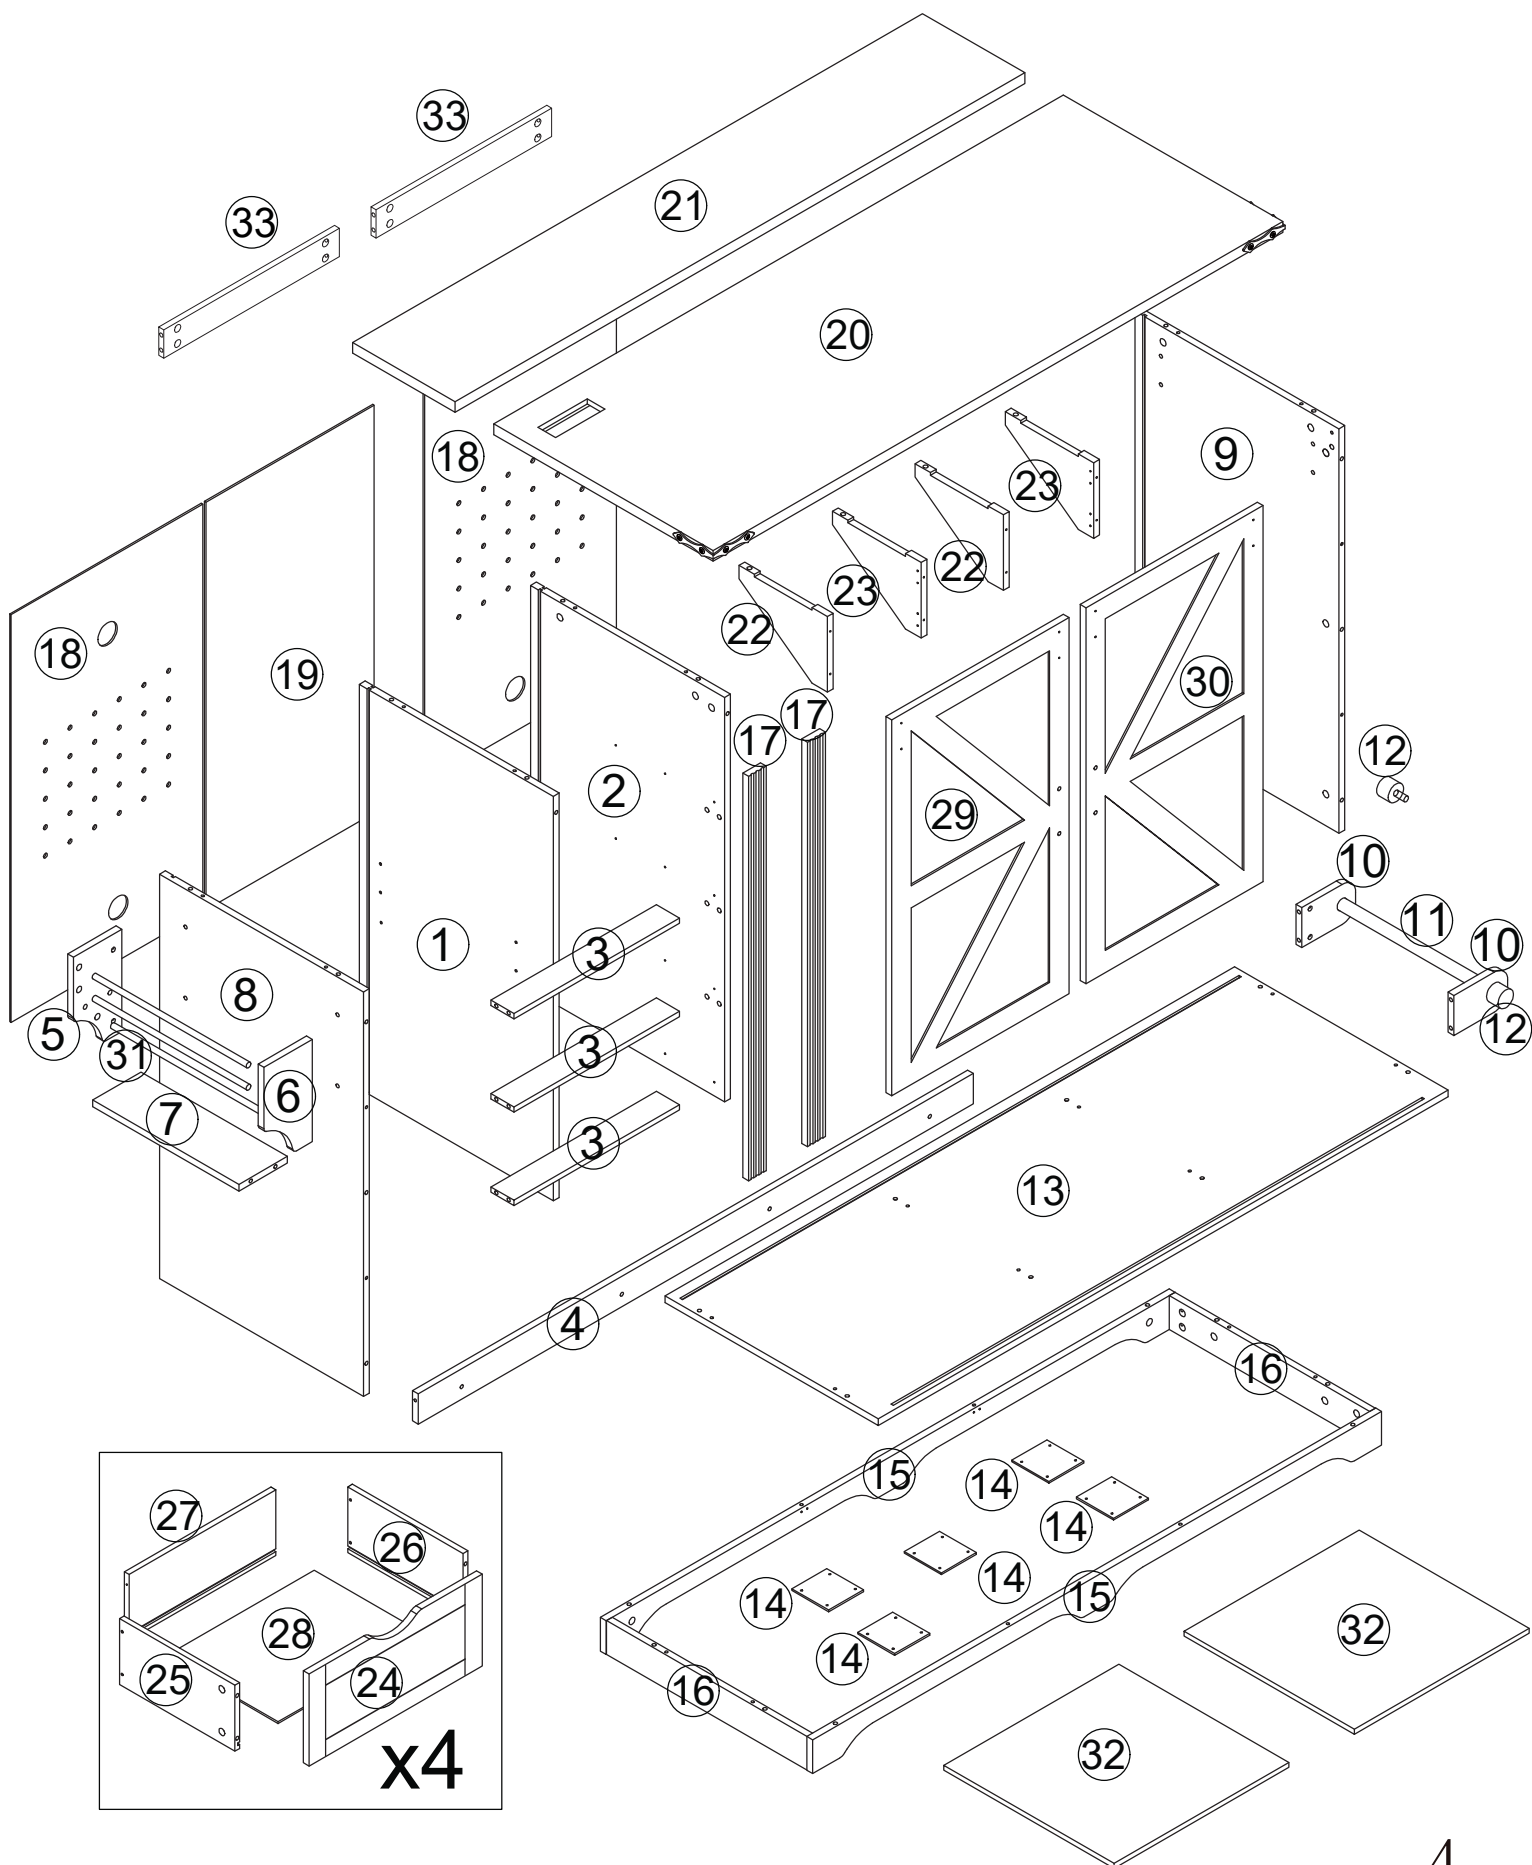


Assembly Instructions

BOX A - N707P452596



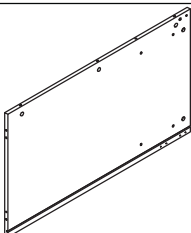

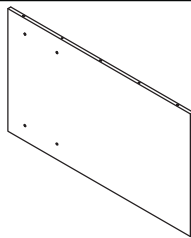
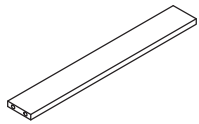
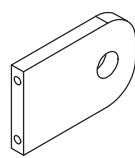
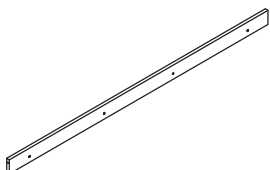
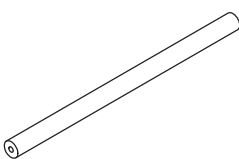
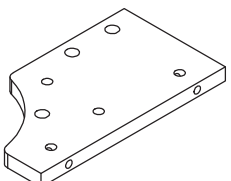
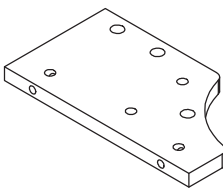
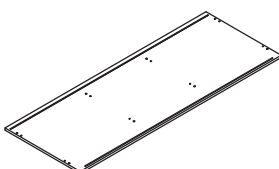
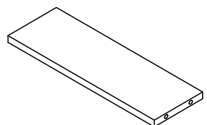
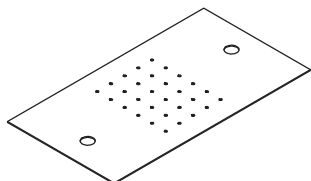
①  910x504x15mm	1PC	⑧  910x530x15mm	1PC
②  910x504x15mm	1PC	⑨  910x530x15mm	1PC
③  430x60x12mm	3PCS	⑩  140x90x15mm	2PCS
④  1442x68x15mm	1PC	⑪  ∅25x410mm	1PC
⑤  230x126x15mm	1PC	⑫  40x30mm	2PCS
⑥  230x126x15mm	1PC	⑬  1470x538x15mm	1PC
⑦  380x126x15mm	1PC	⑮  917x498x4mm	2PCS

Assembly Instructions

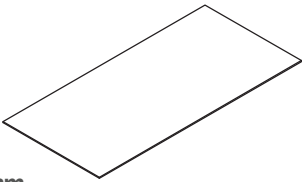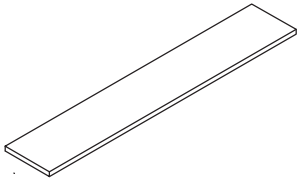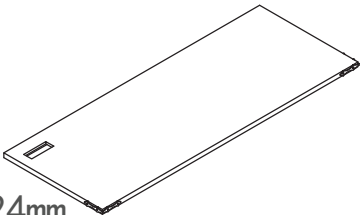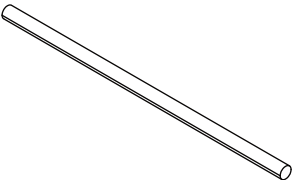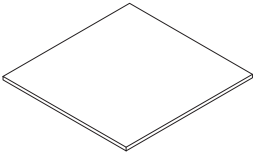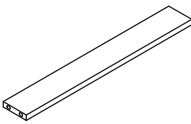①9  1PC 917x437x4mm	②1  1PC 1480x266x24mm
②0  1PC 1480x570x24mm	③1  3PCS 308x16mm
③2  2PCS 491x475x12mm	③2  2PCS 491x60x15mm


Assembly Instructions

BOX B - N707P452597

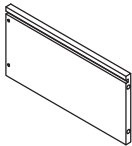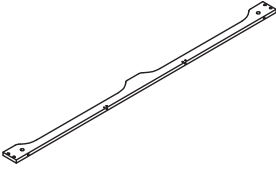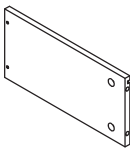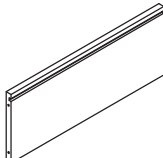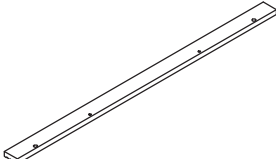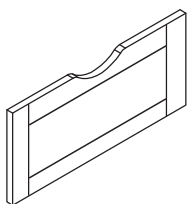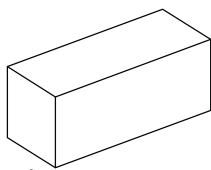⑭  94x80x15mm	5PCS	⑮  300x148x12mm	4PCS
⑮  1478x76x15mm	2PCS	⑯  300x148x12mm	4PCS
⑰  521x76x15mm	2PCS	⑰  381x148x12mm	4PCS
⑰  910x46x15mm	2PCS	⑳  338x294x4mm	4PCS
㉒  230x170x15mm	2PCS	㉓  615x300x15mm	1PC
㉓  230x170x15mm	2PCS	㉔  956x380x15mm	1PC
㉔  450x207x15mm	4PCS	Hardware kid x1 	1PC

Assembly Instructions

Step 1

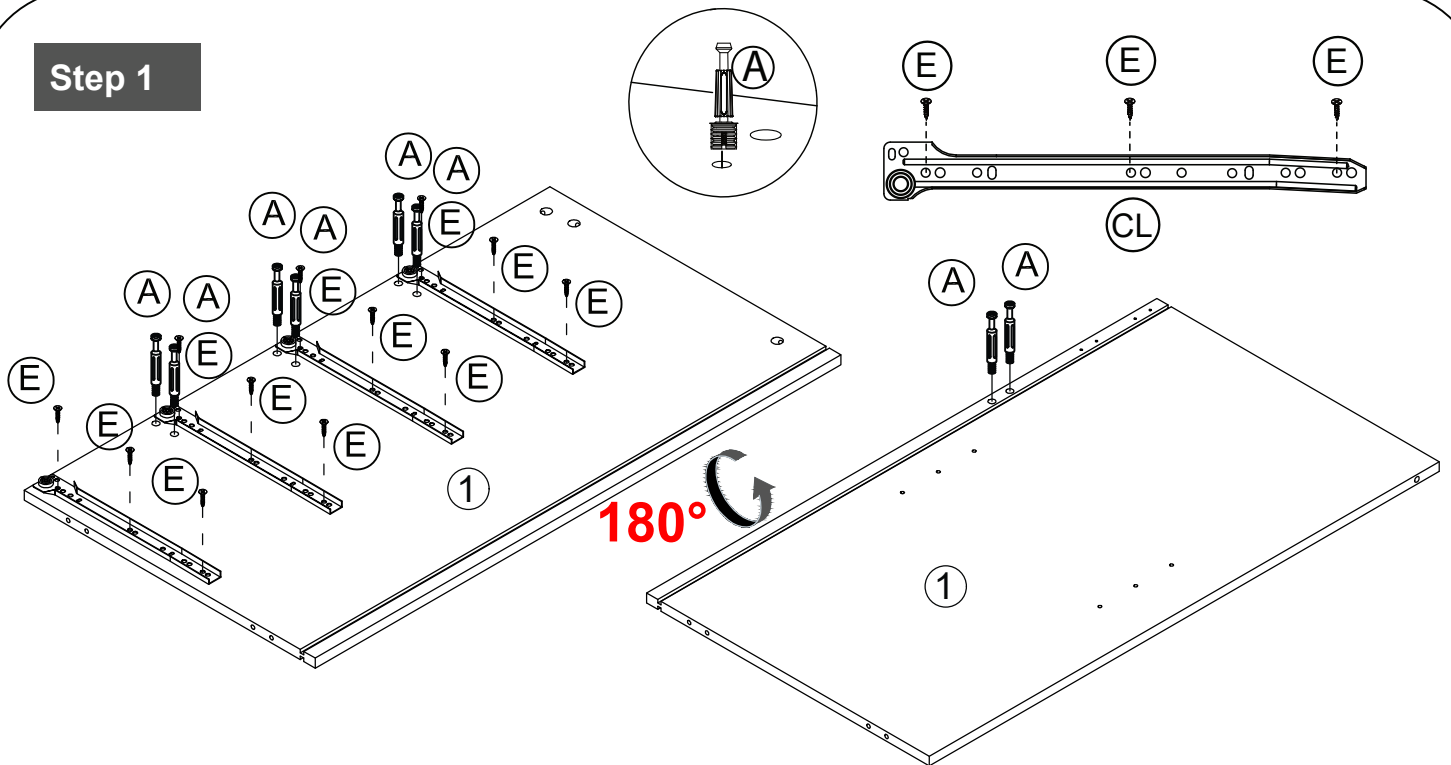

(A)



Cam Bolt x 8

(E)




3*12mm Screw x 12

(CL)



Runner 300mm x 4

Step 2

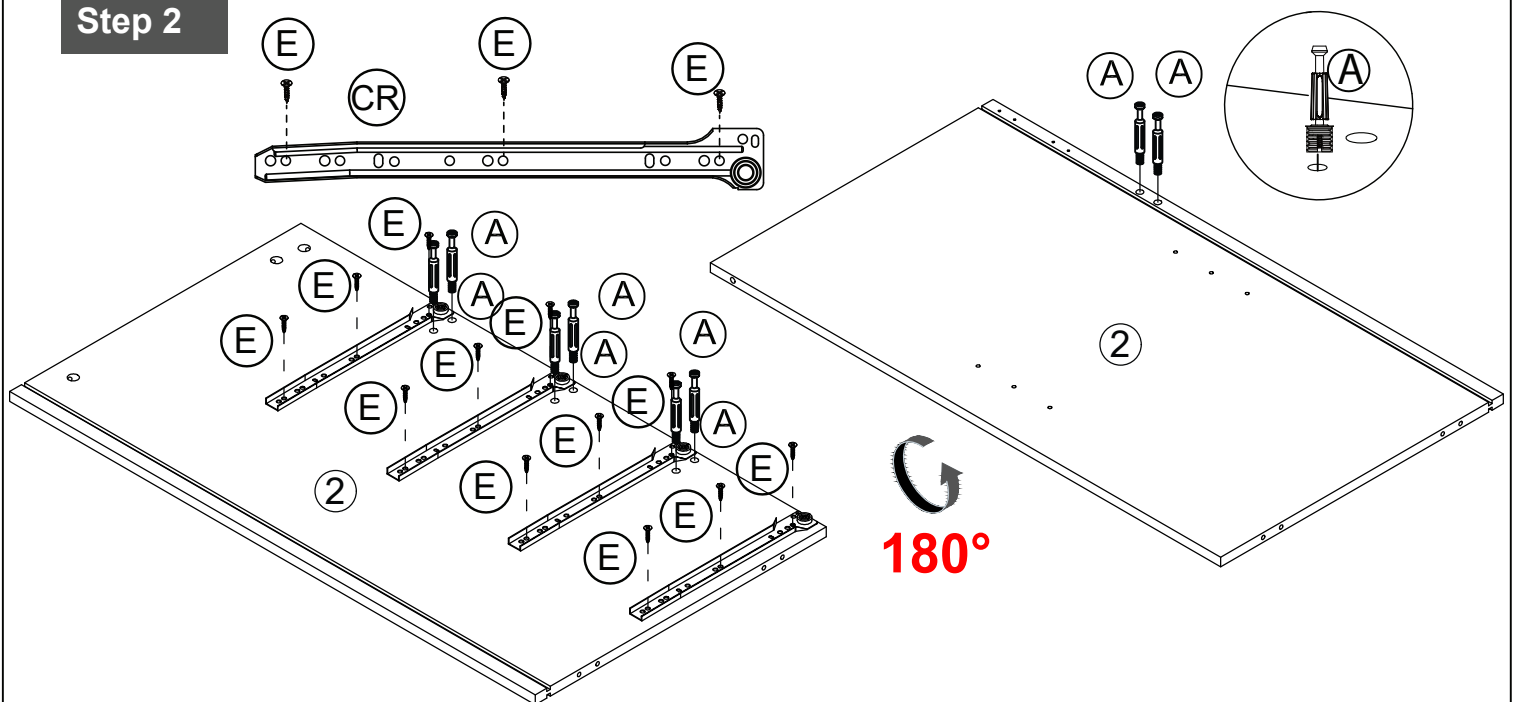

(A)




Cam Bolt x 8

(E)



3*12mm Screw x 12




(CR)



Runner 300mm x 4

Assembly Instructions

Step 3

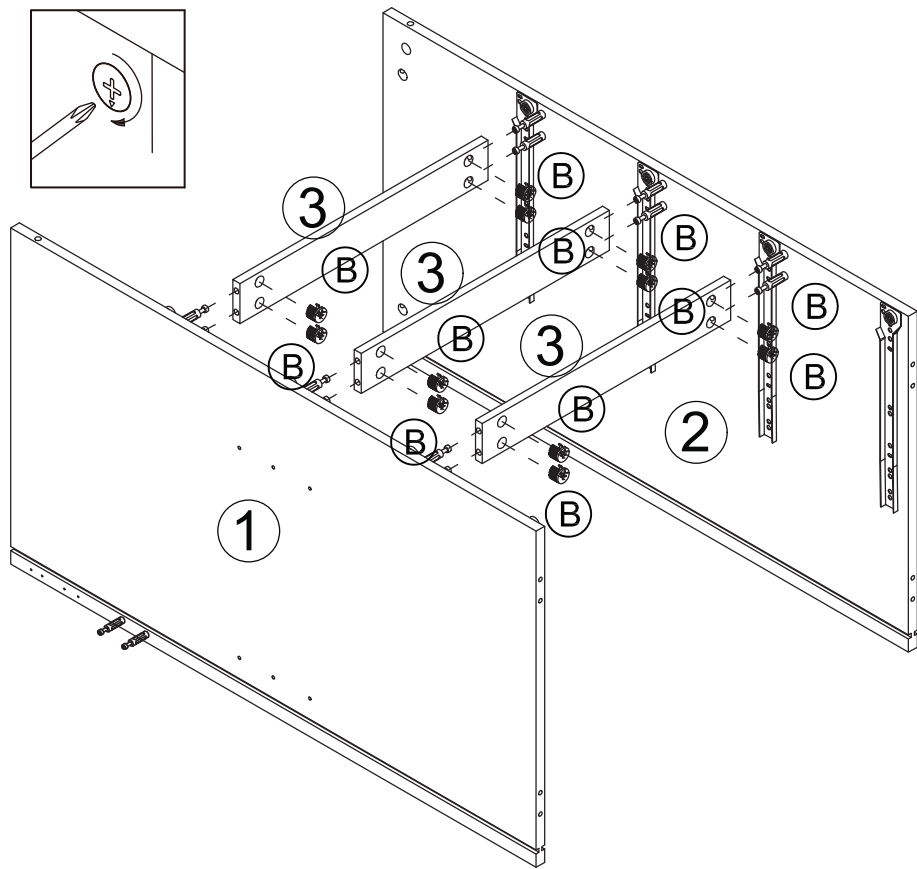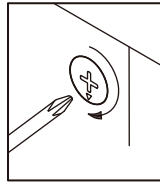
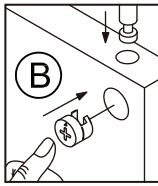


(B)



Cam lock x 12

Step 4

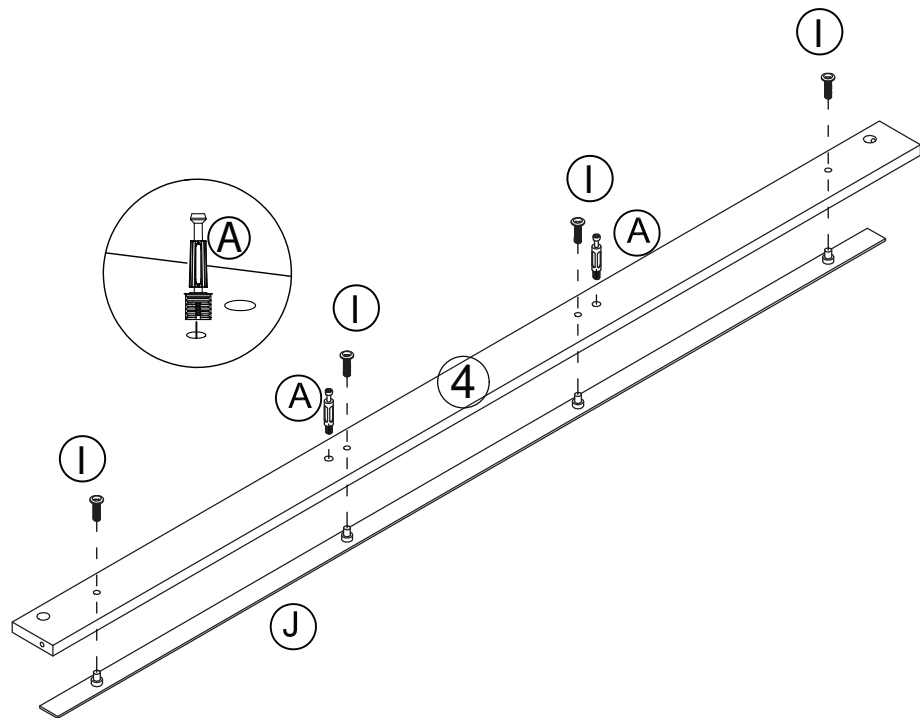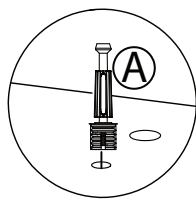


(A)



Cam Bolt x 2

(J)



Iron bar x 1



(I)



6*25mm Screw x 4

Assembly Instructions

Step 5

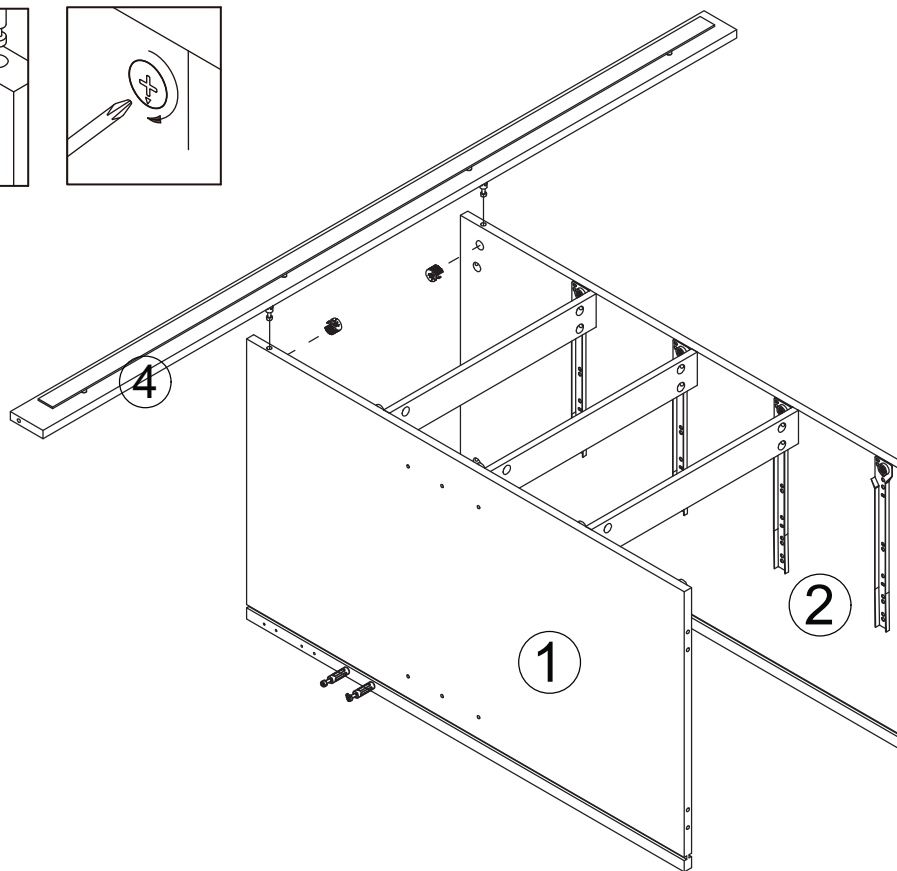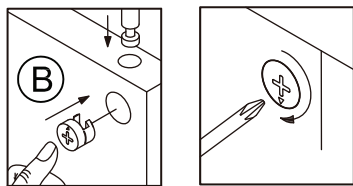


(B)



Cam lock x 2

Step 6

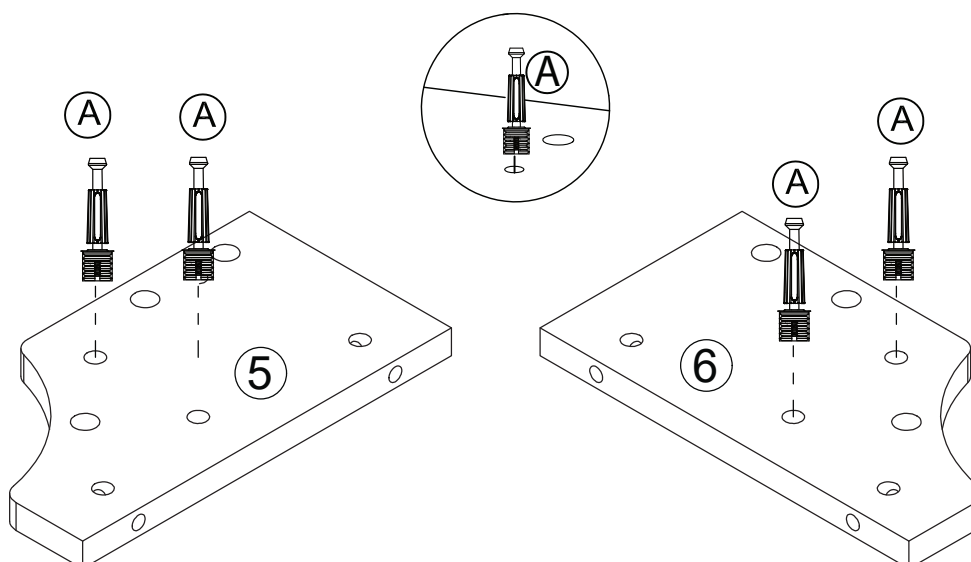


(A)



Cam Bolt x 4

Assembly Instructions

Step 7

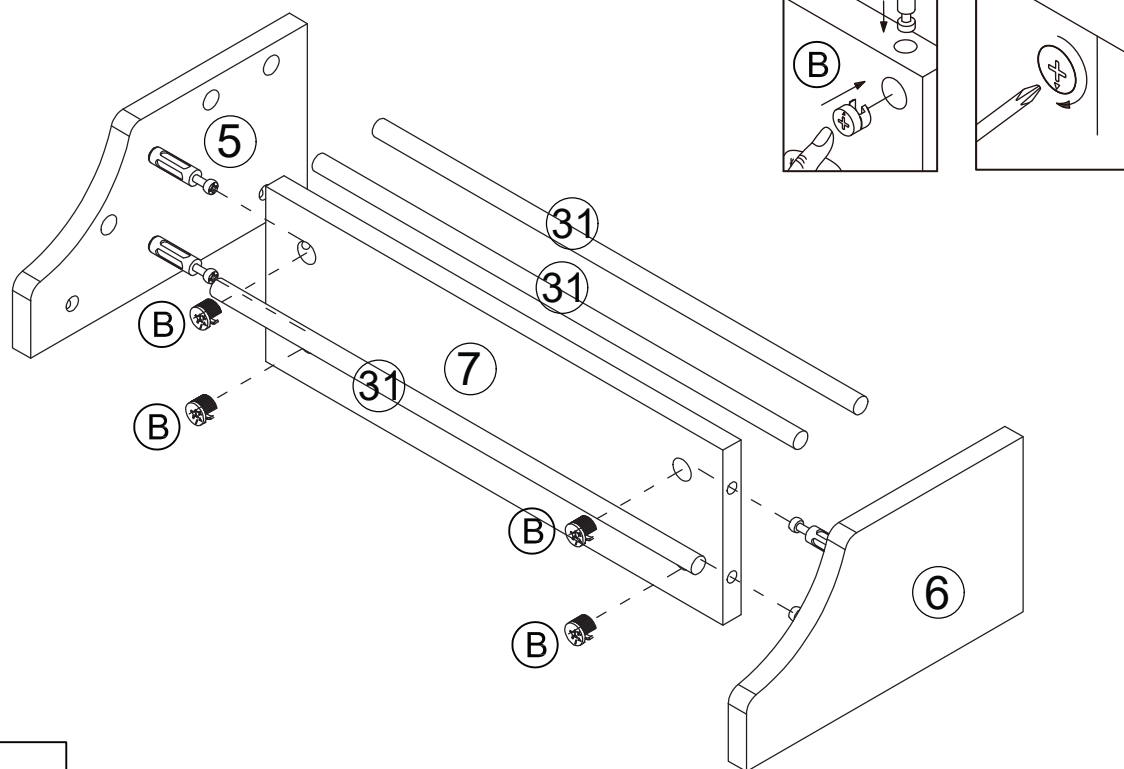


(B)



Cam lock x 4

Step 8

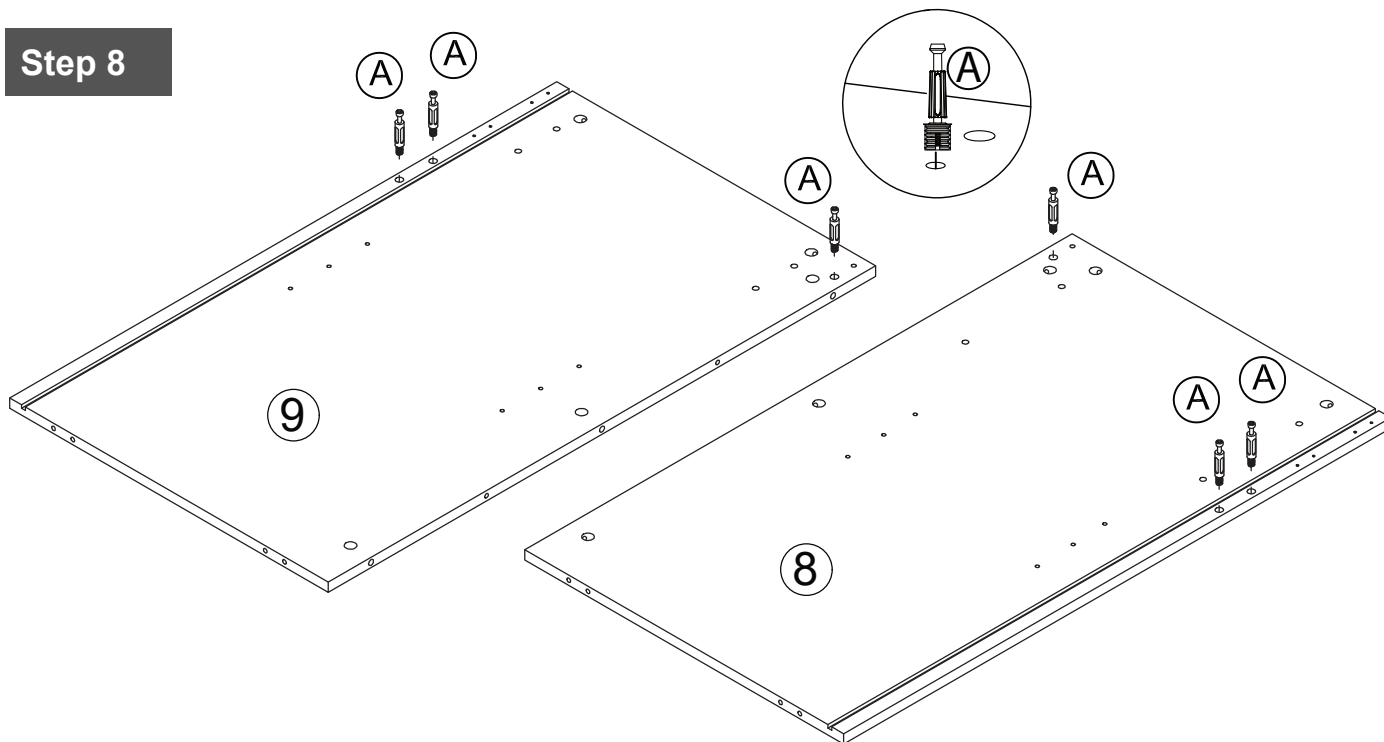



(A)



Cam Bolt x 6

Assembly Instructions

Step 9

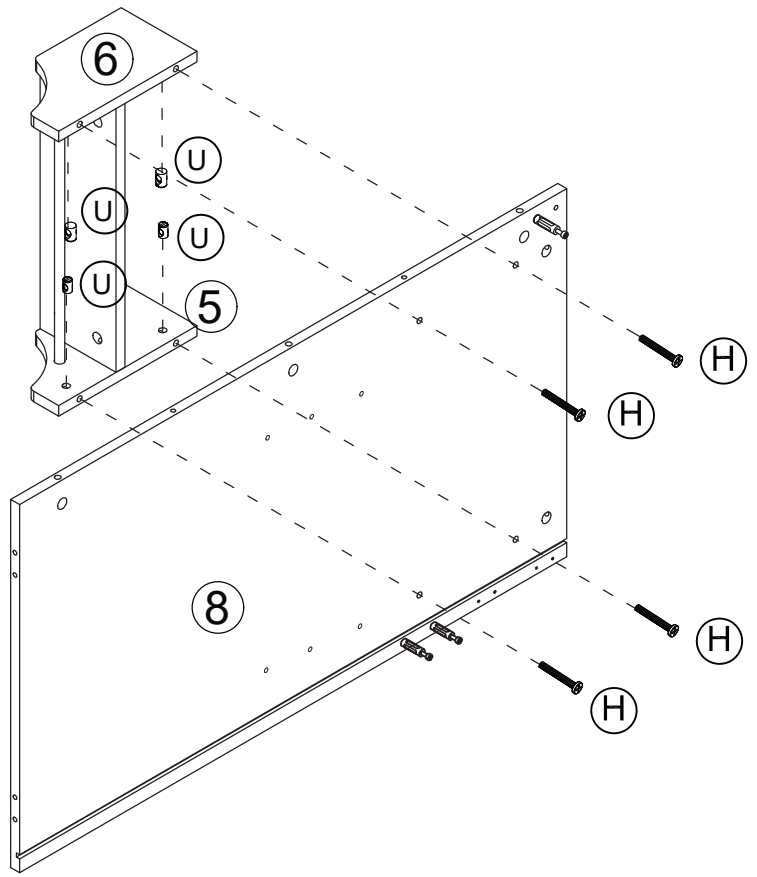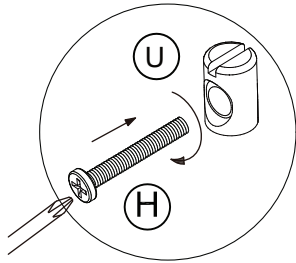


(U)






Cross nut x 4

(H)



6*45mm Screw x 4

Step 10

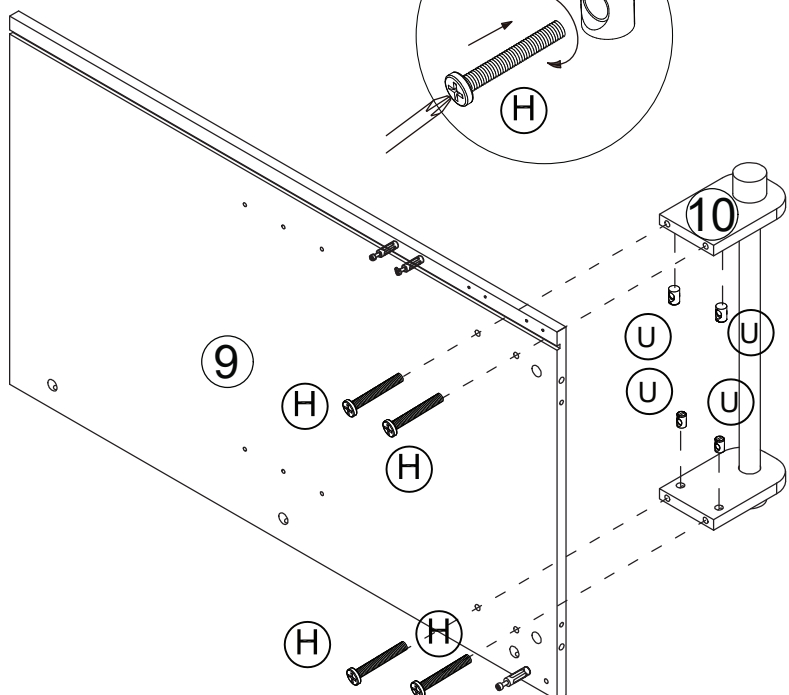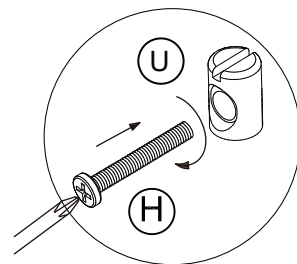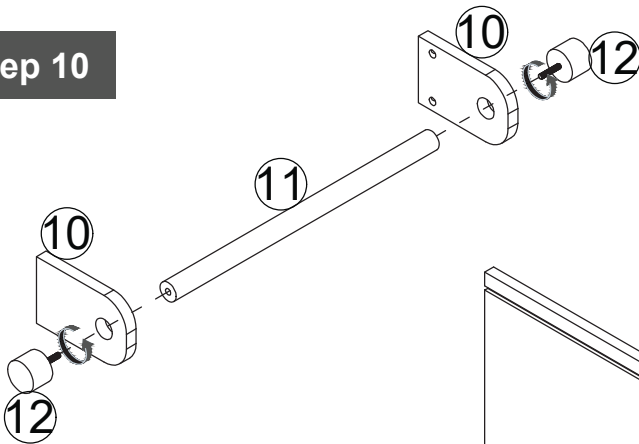


(U)



Cross nut x 4




(H)



6*45mm Screw x 4

Assembly Instructions

Step 11

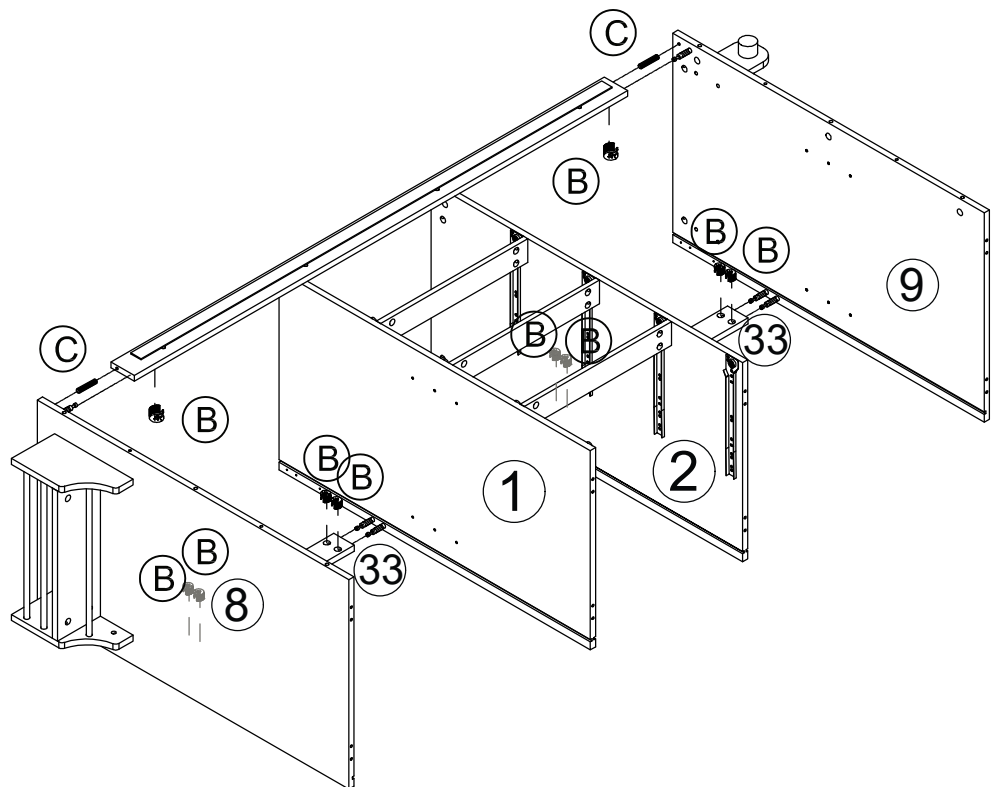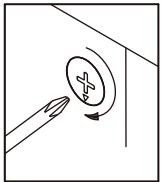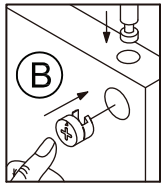

(B)




Cam lock x 2

(C)



6*40mm Dowel x 2

Step 12

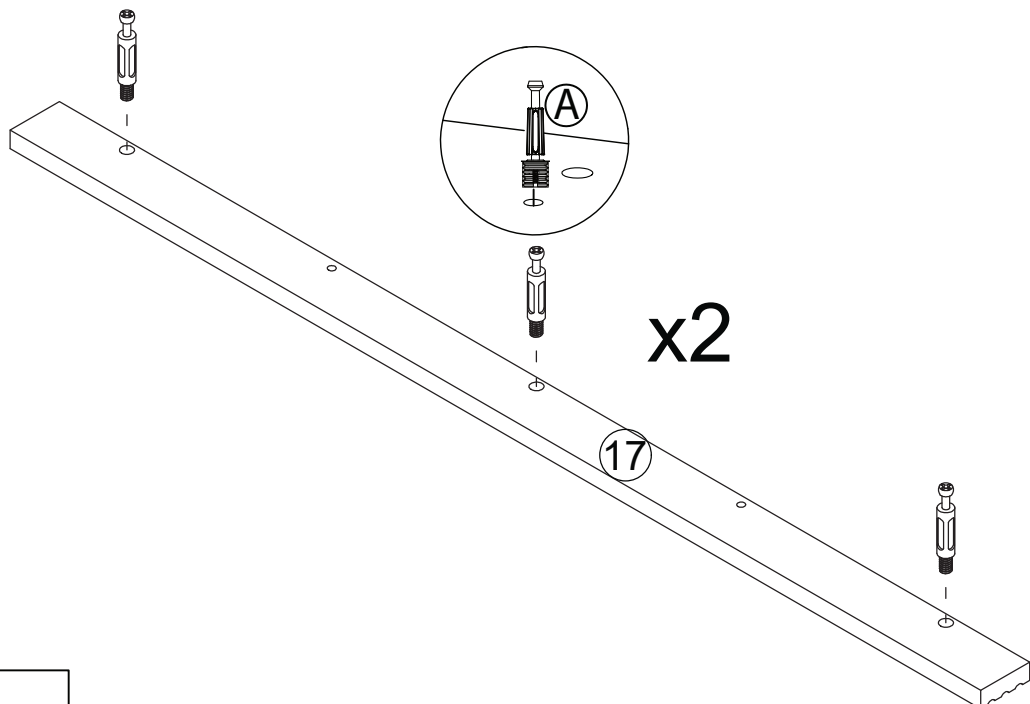


(A)



Cam Bolt x 6

Assembly Instructions

Step 13

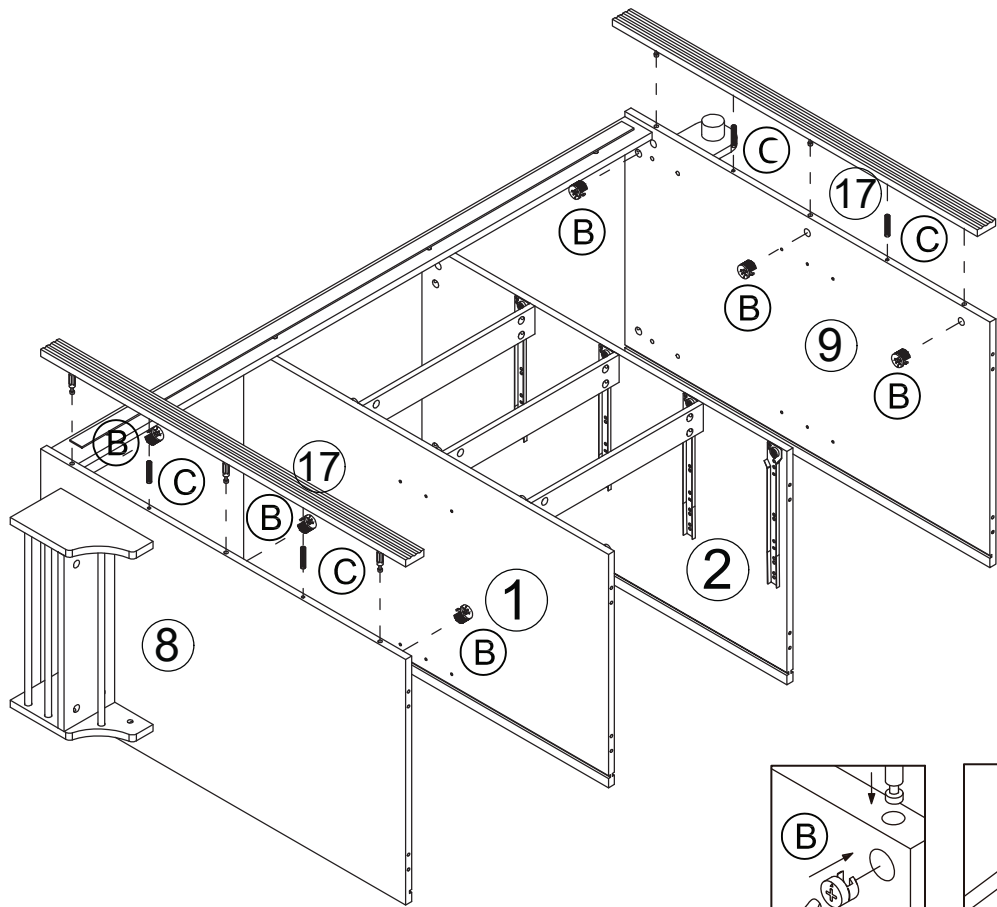

(C)





6*40mm Dowel x 4

(B)



Cam lock x 6

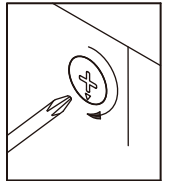
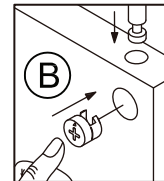


Step 14

(A)




Cam Bolt x 8

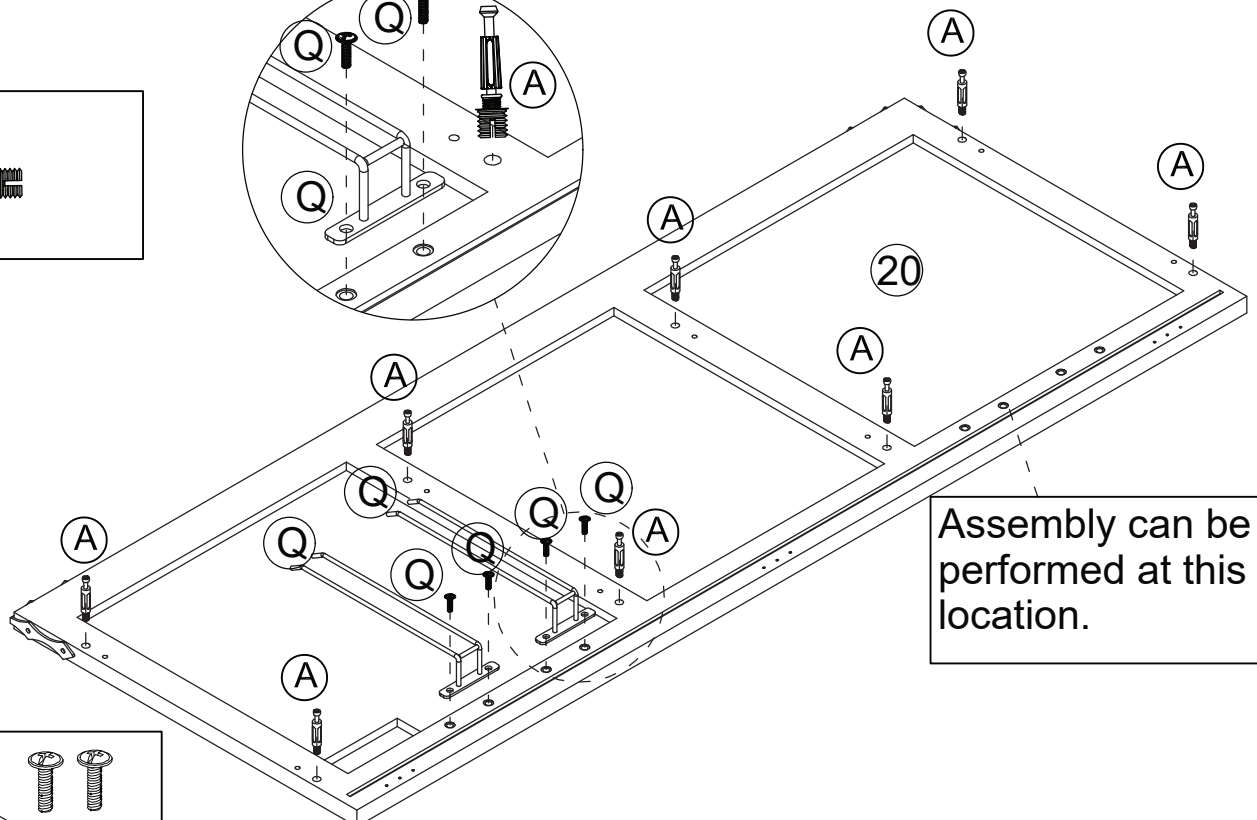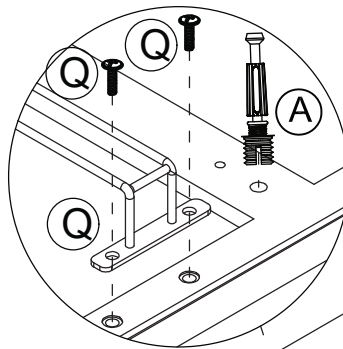

Assembly can be performed at this location.

(Q)




Stemware rack x2

Assembly Instructions



Step 15



During the assembly process, pay attention to the tabletop tipping over.

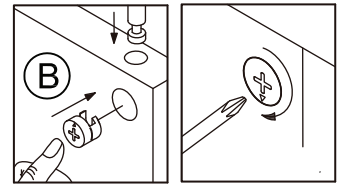

Step 13

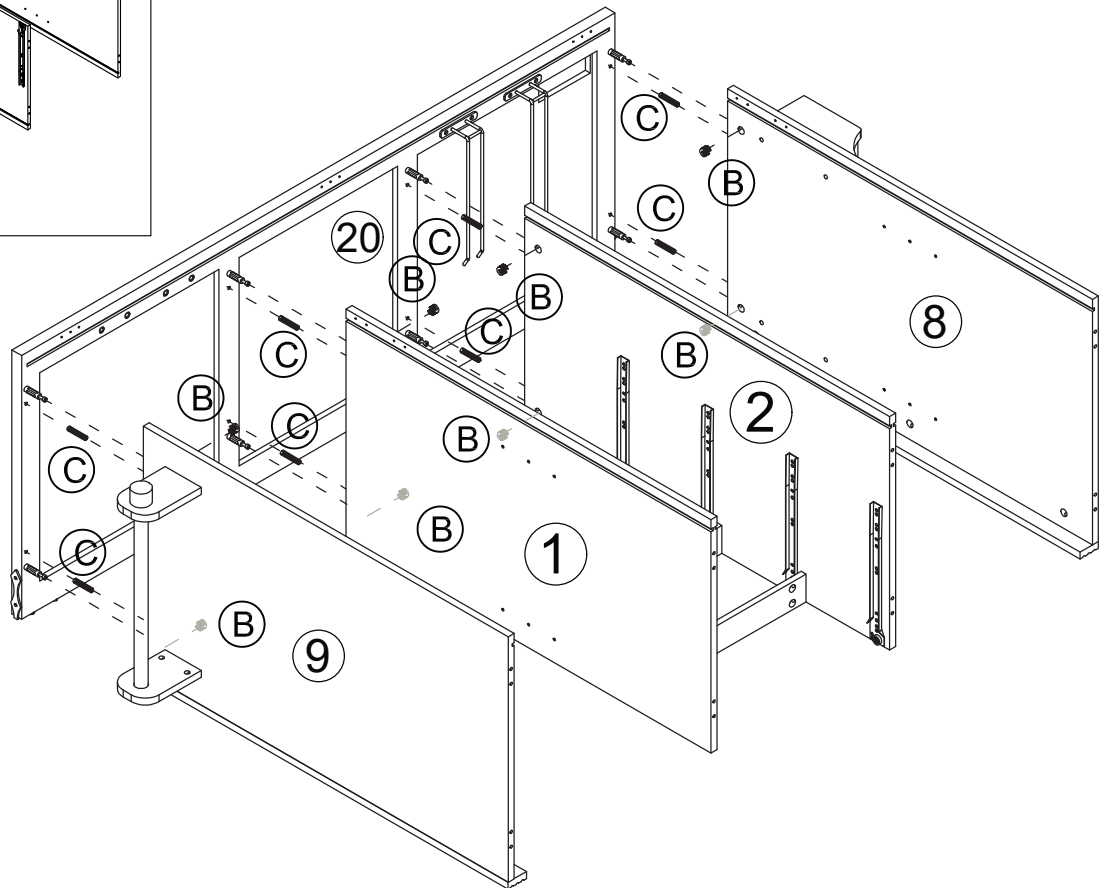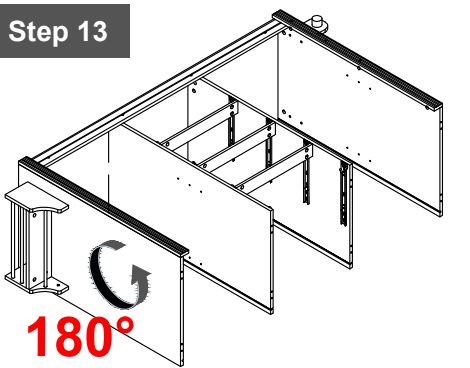

(C)




6*40mm Dowel x 8

(B)




Cam lock x 8

Step 16

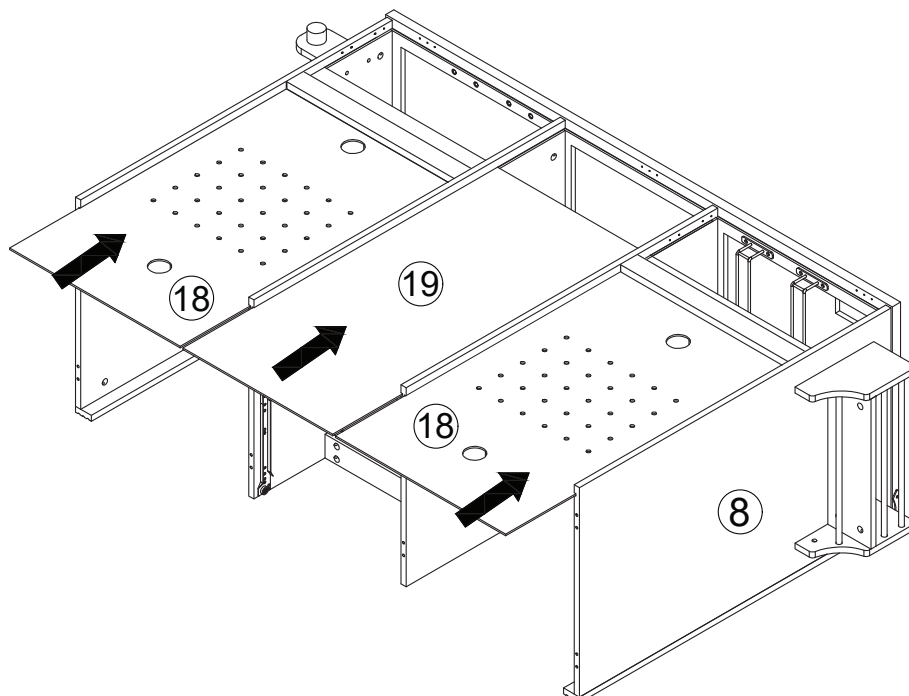

Assembly Instructions

Step 17

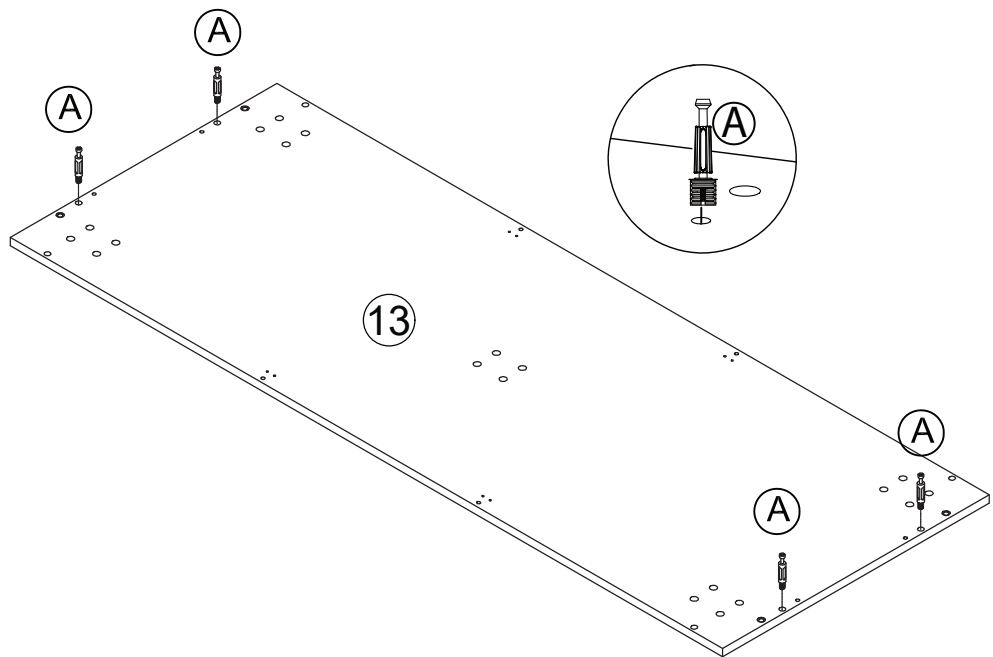

(A)




Cam Bolt x 4

Step 18


(C)



6x40mm Dowel x 8

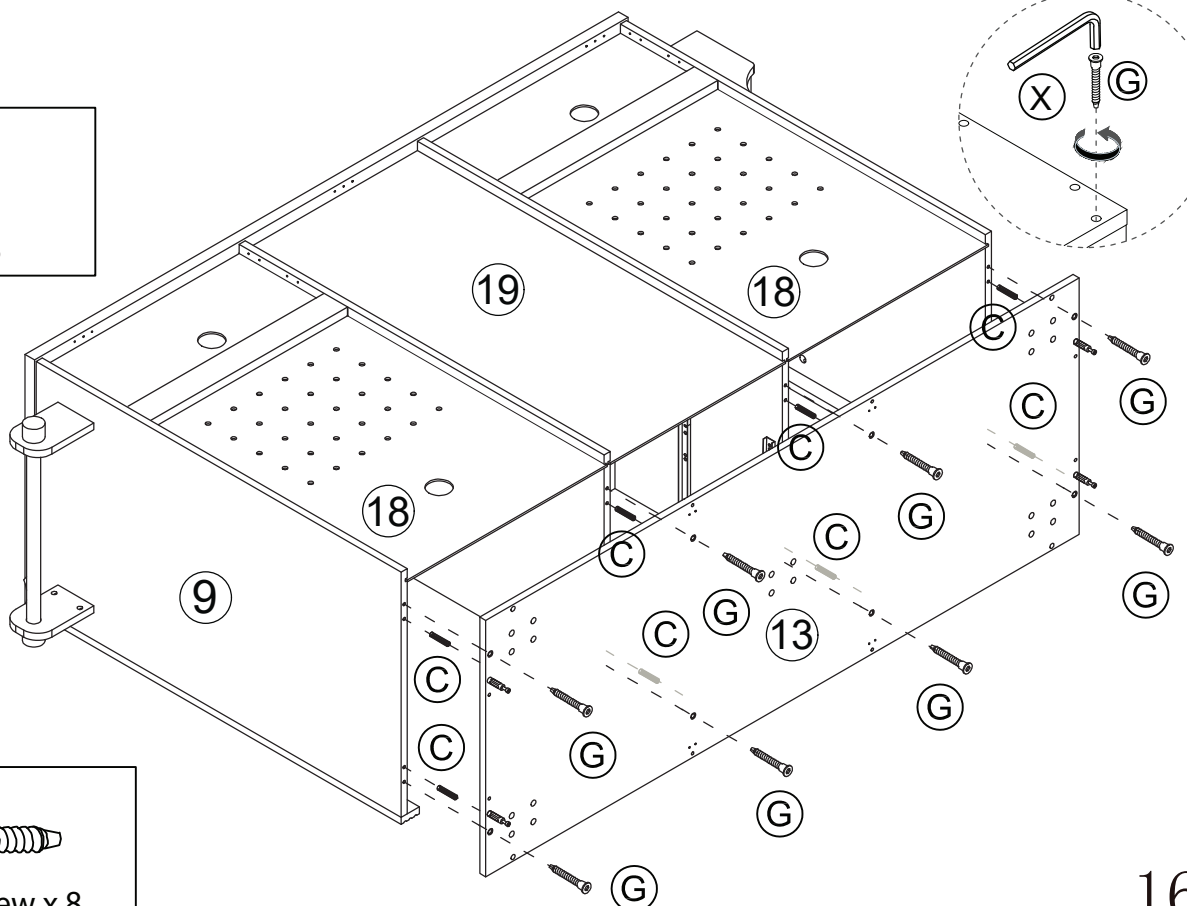


(G)



7x40mm Screw x 8

Assembly Instructions

Step 19

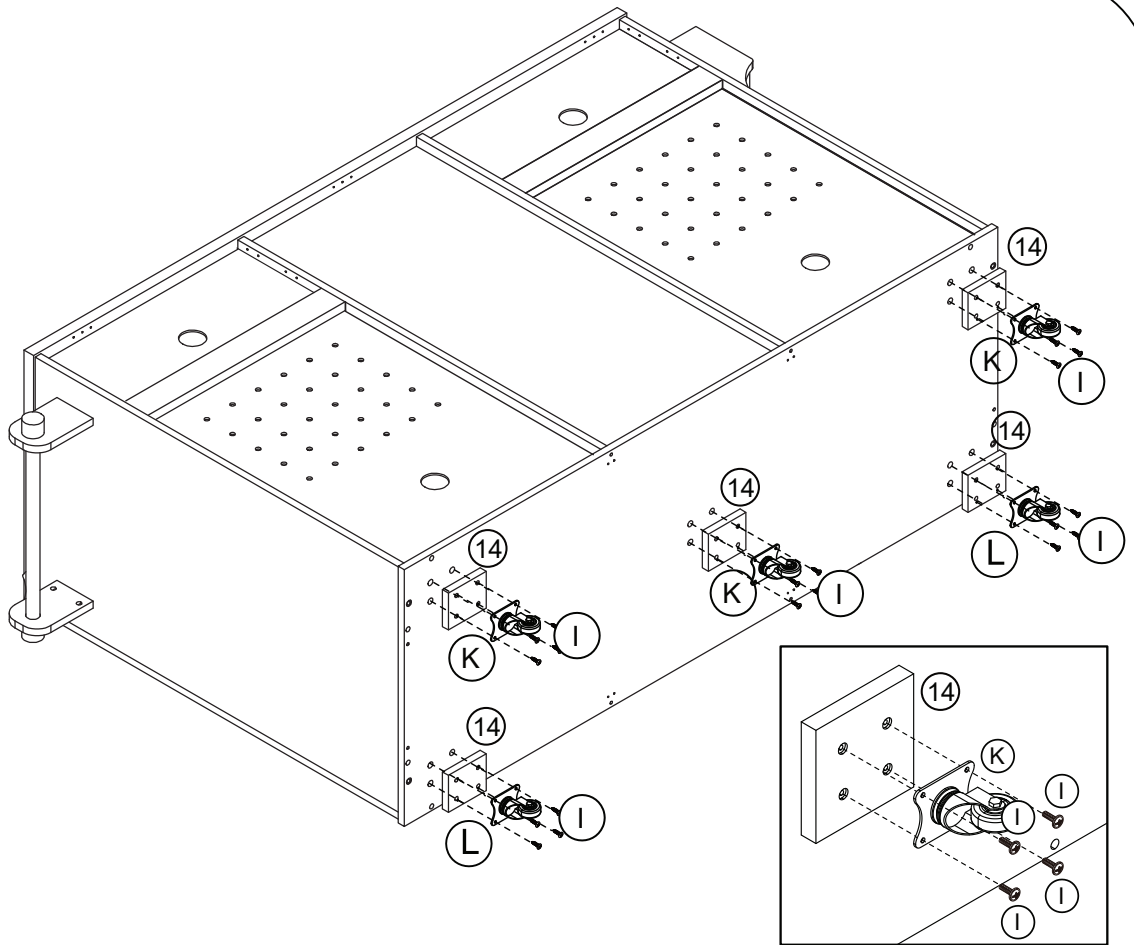


I




6*25mm Screw x 20

L




Locking caster x 2

K



Caster x 3

Step 20

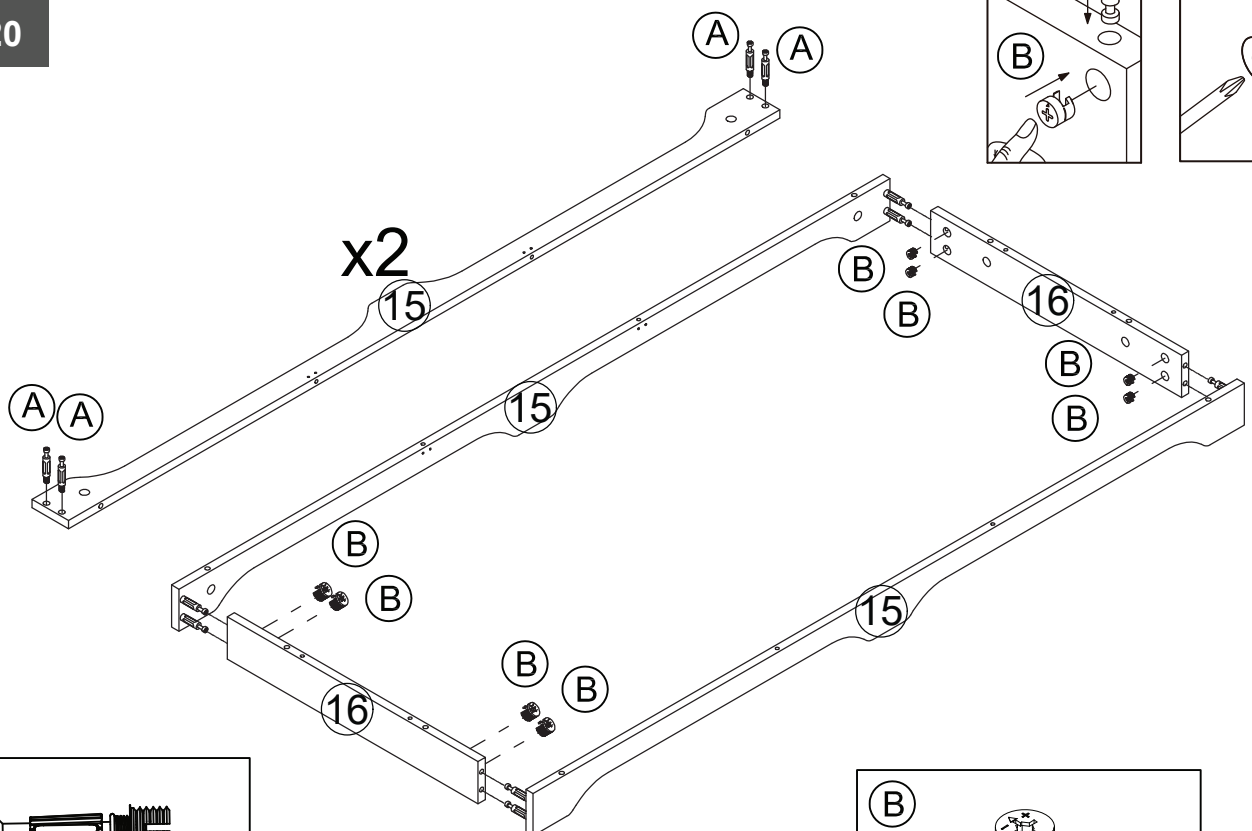

A



Cam Bolt x 8


B



Cam lock x 8

Assembly Instructions

Step 21

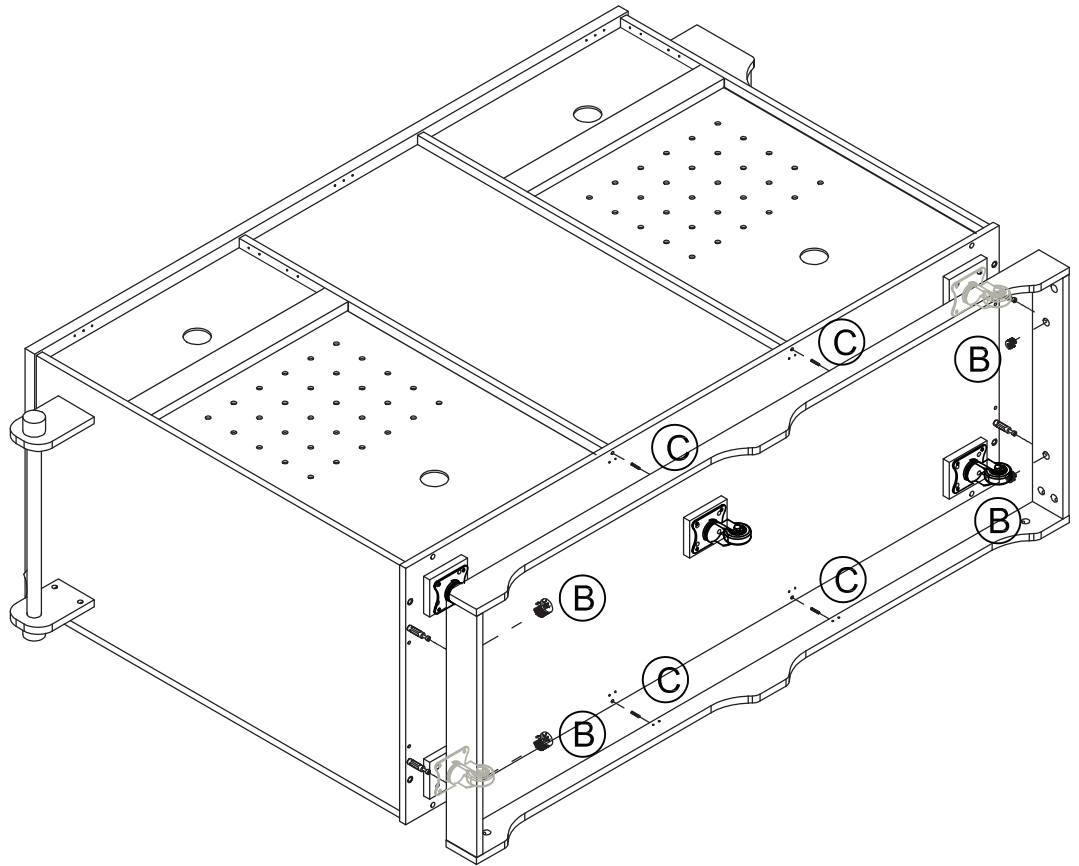

(C)



6*40mm Dowel x 4


(B)




Cam lock x 4

Step 22

(P)

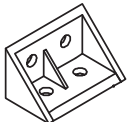


Angle iron x 4

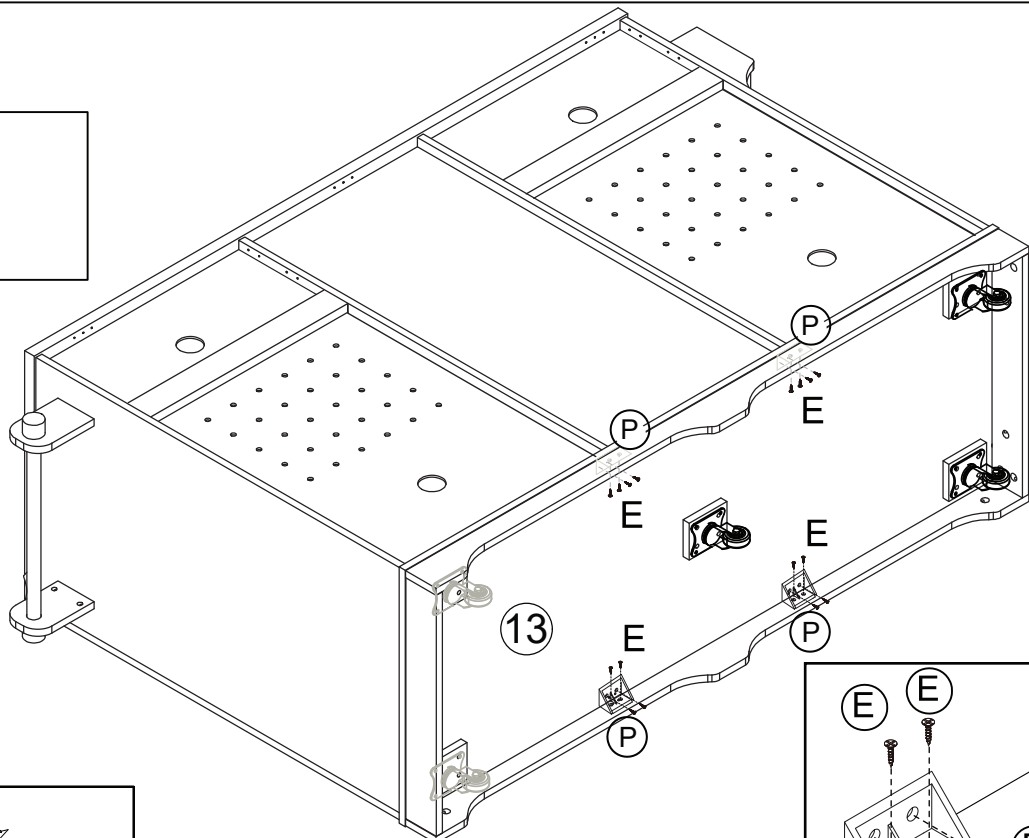

(E)




3*12mm Screw x 16

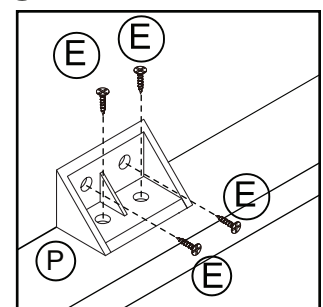

Assembly Instructions

Step 23

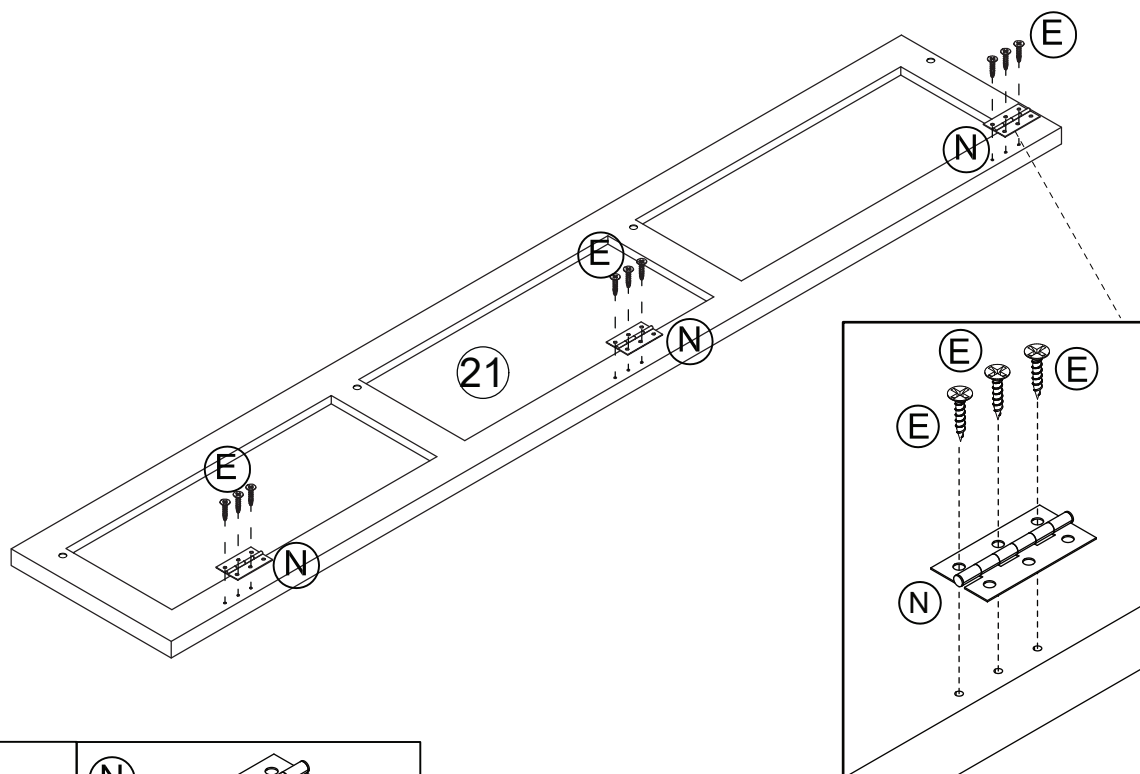


(E)




3*12mm Screw x 9

(N)



hinge x 3

Step 24

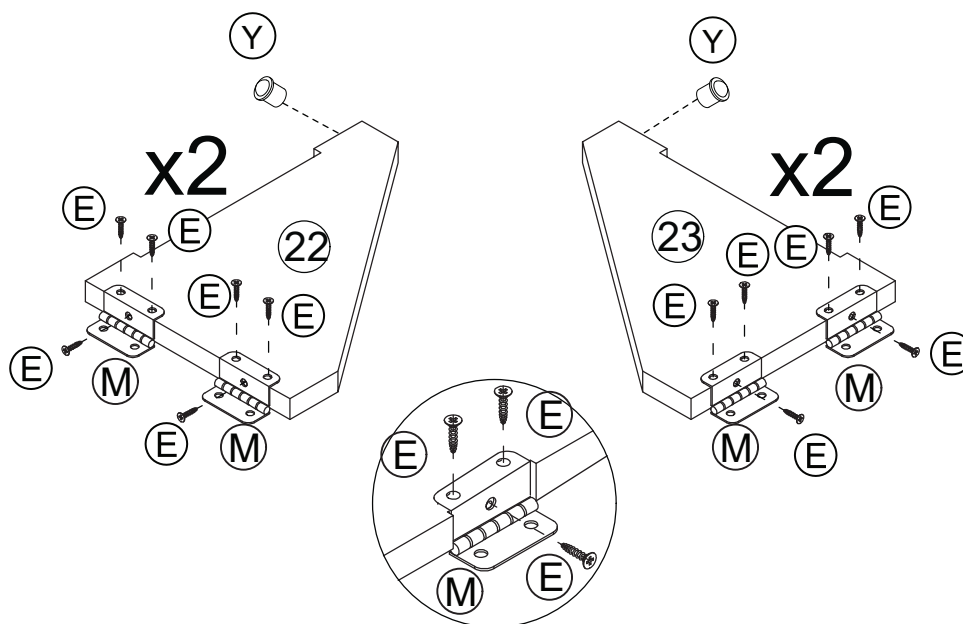


(E)



3.5*12mm Screw x 24

(M)

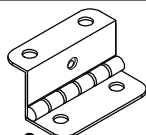

Cabinet hinge x8



(Y)



x 4

Assembly Instructions

Step 25

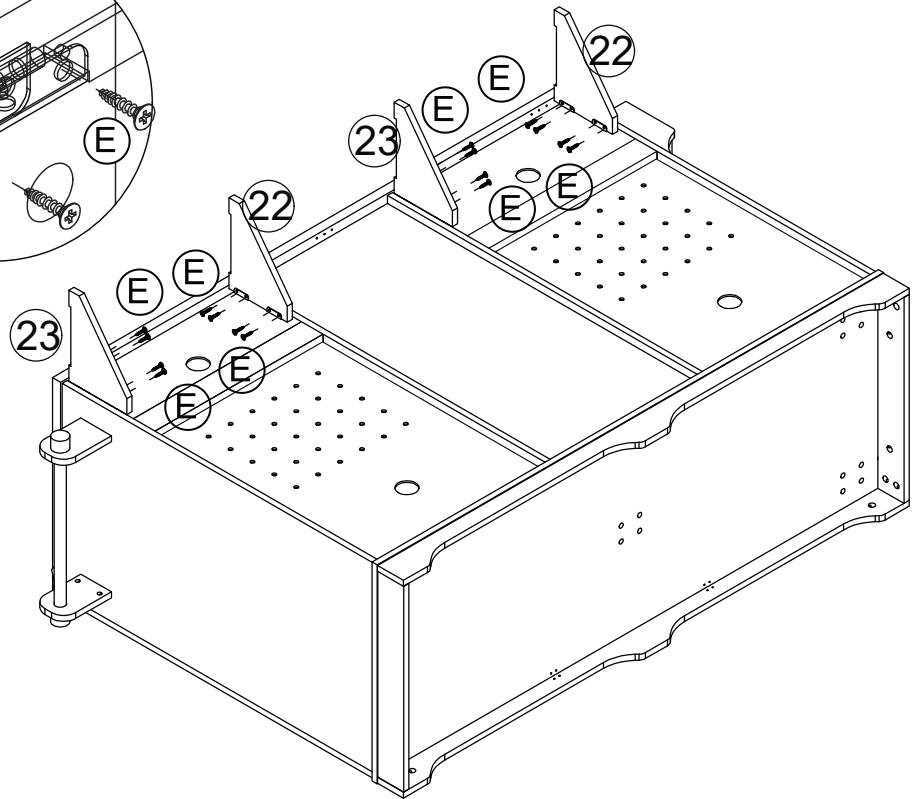
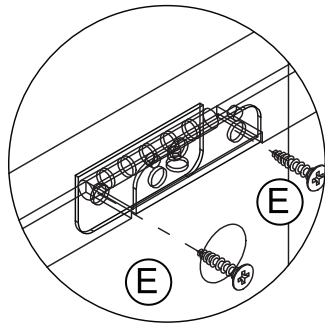


(E)



3*12mm Screw x 16

Step 26

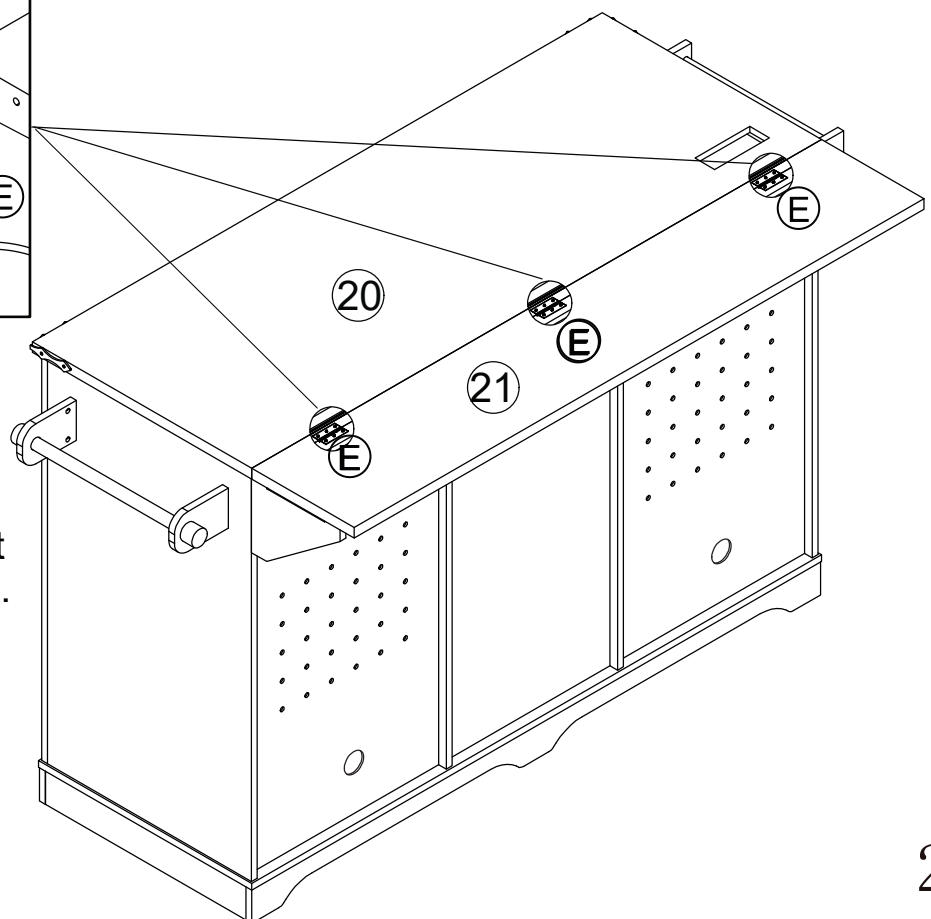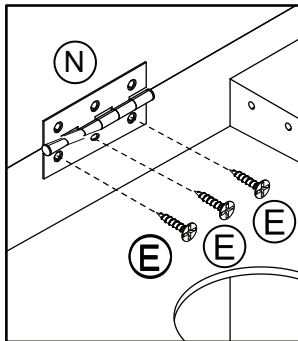

Both people lift the cabinet back to an upright position.


(E)





3*12mm Screw x 9

Assembly Instructions

Step 27



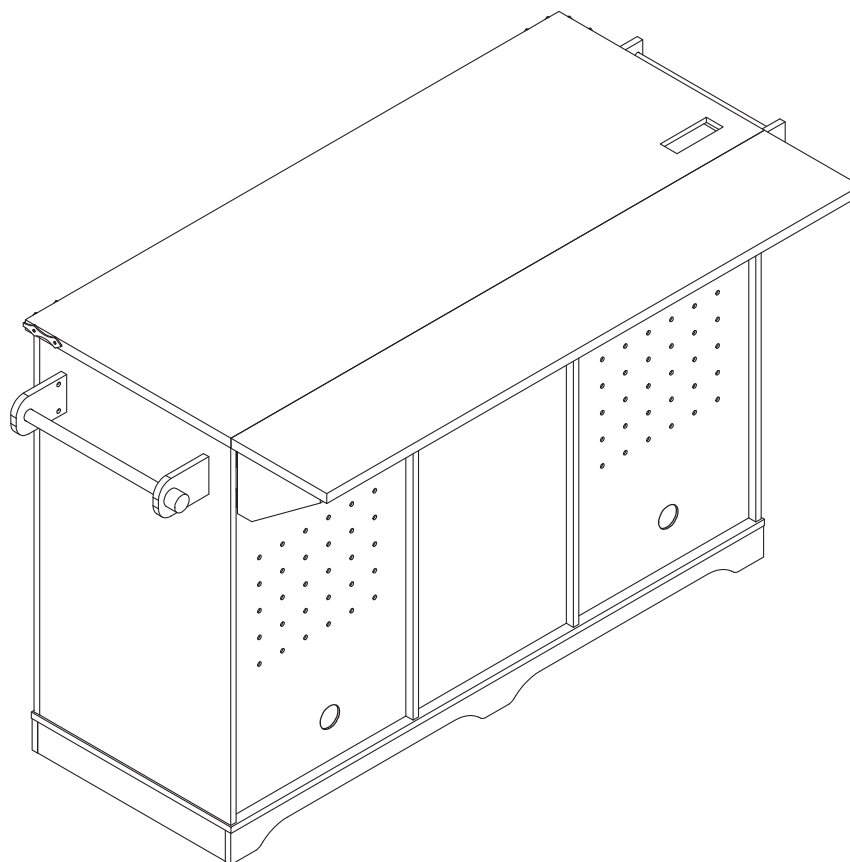


Step 28

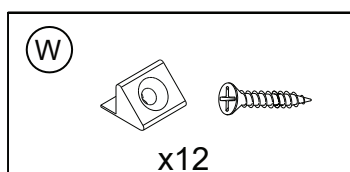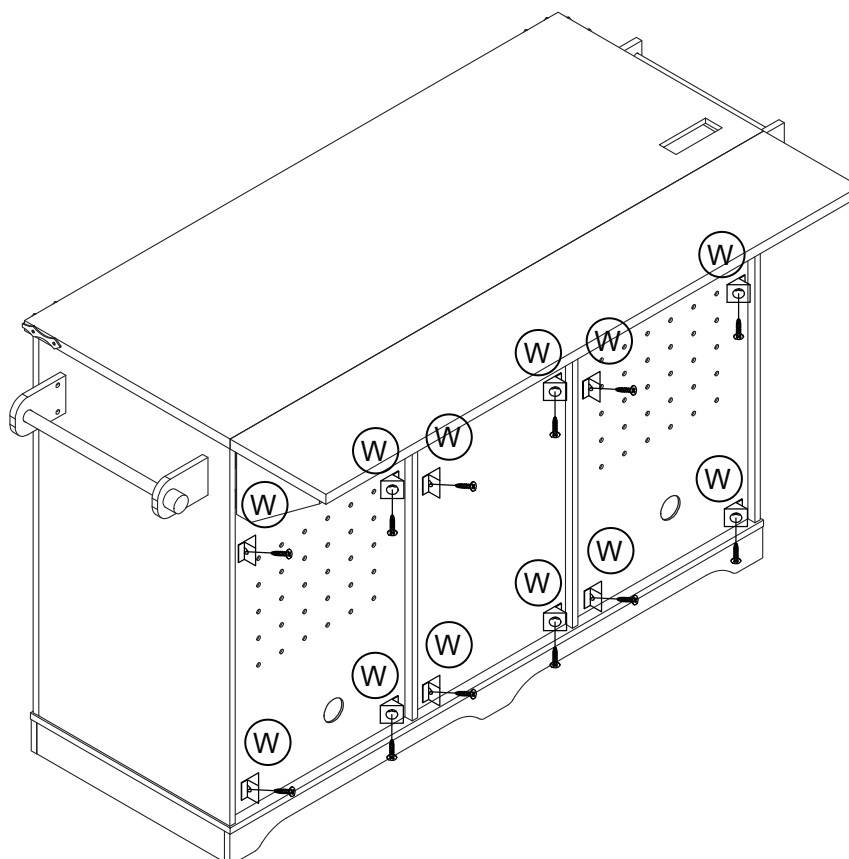



Assembly Instructions

Step 28

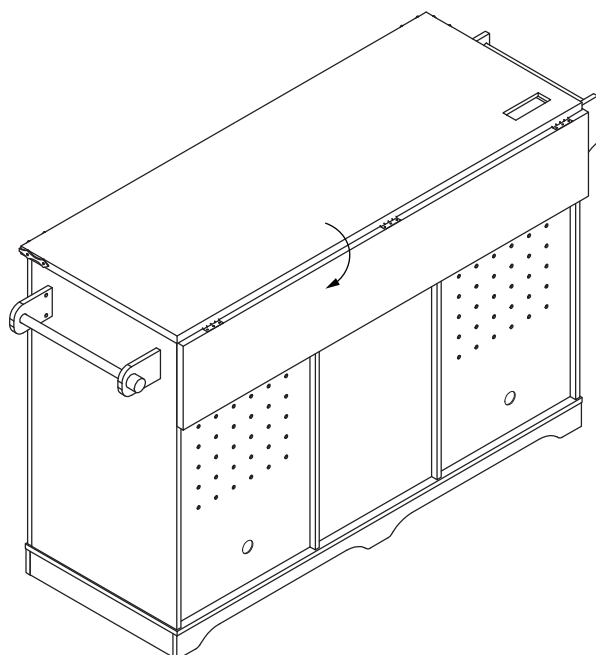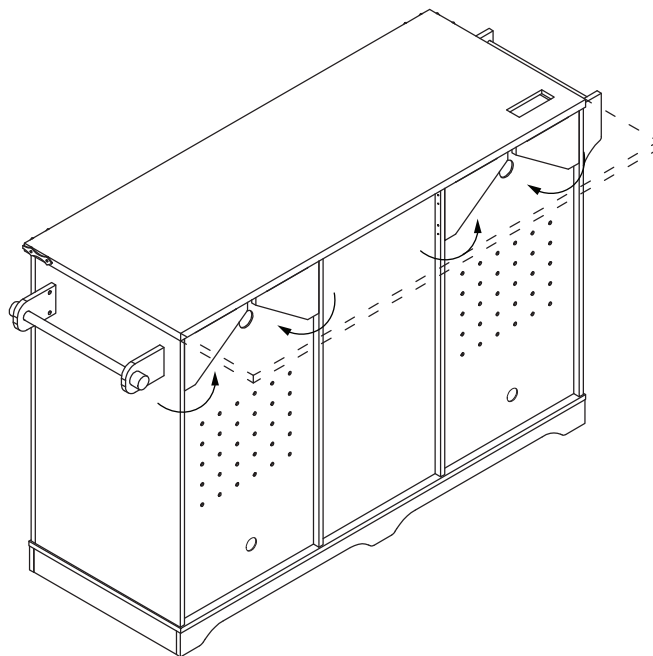
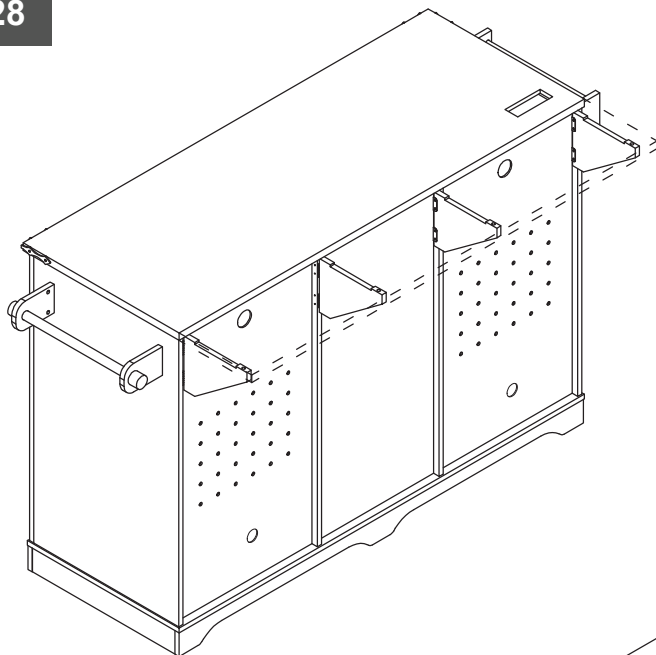


Assembly Instructions

Step 29

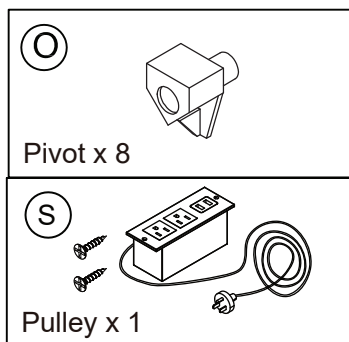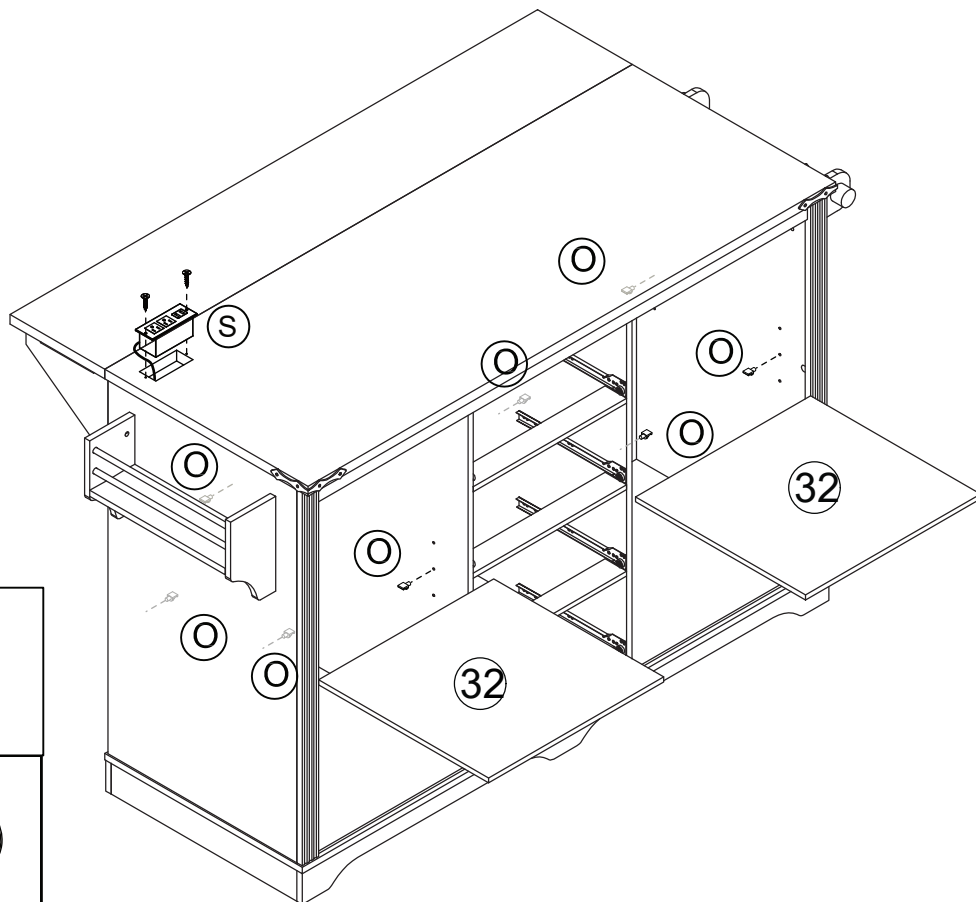


Step 30

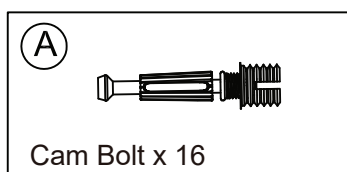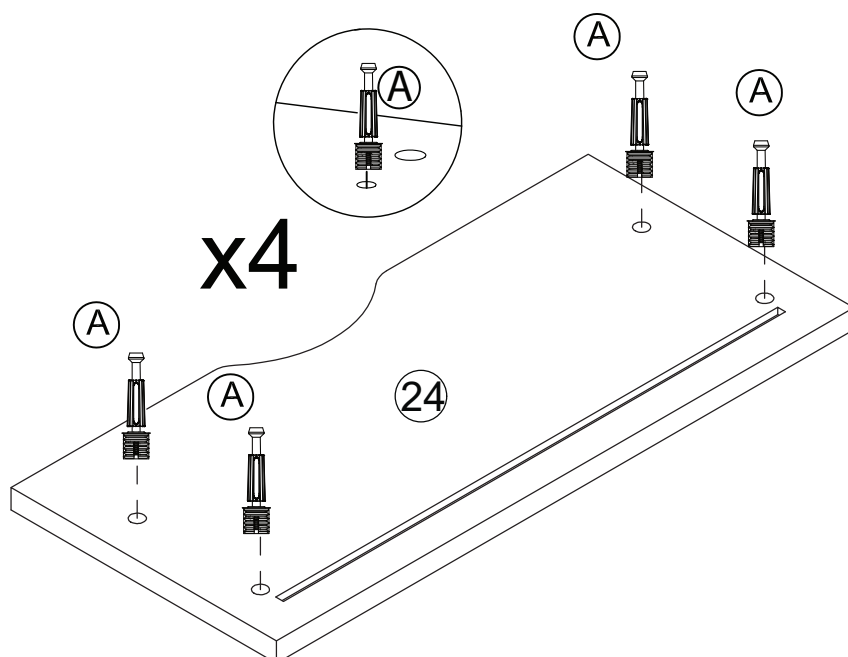

Assembly Instructions

Step 31

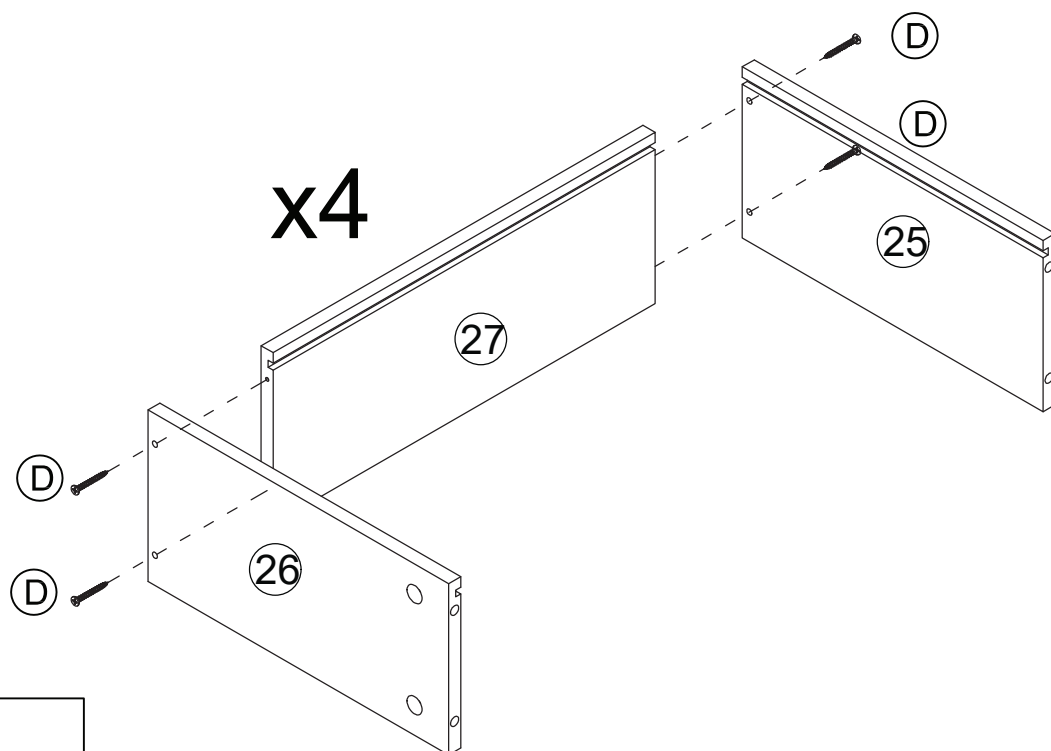


(D)



3.5*30mm Screw x 16


Step 32

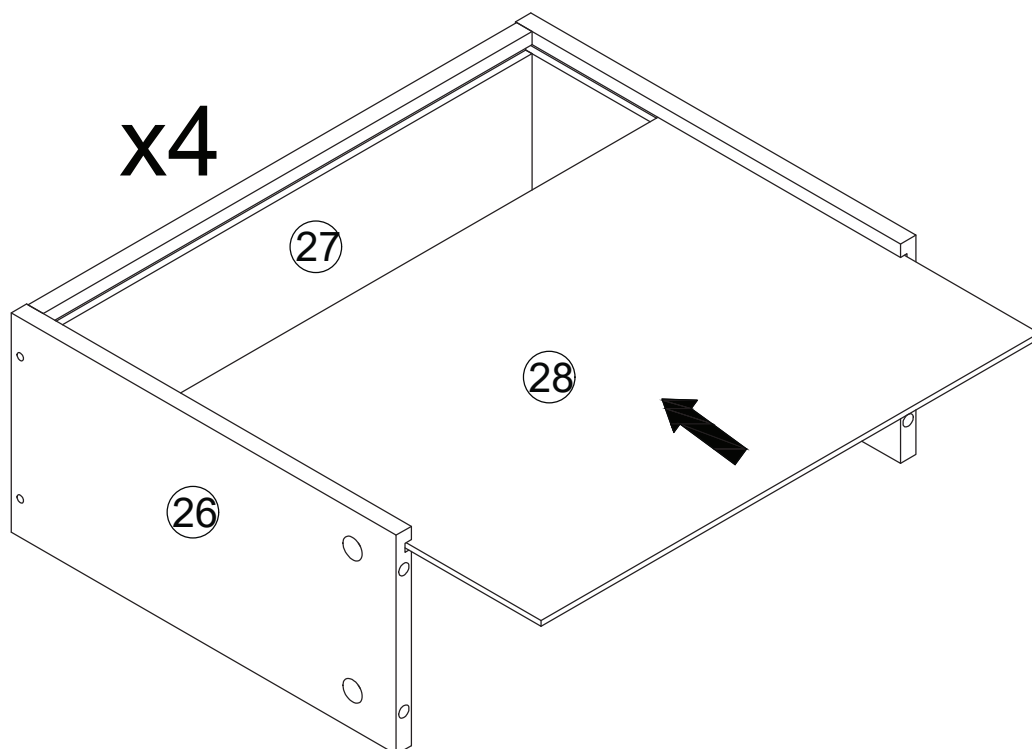

Assembly Instructions

Step 33



x4

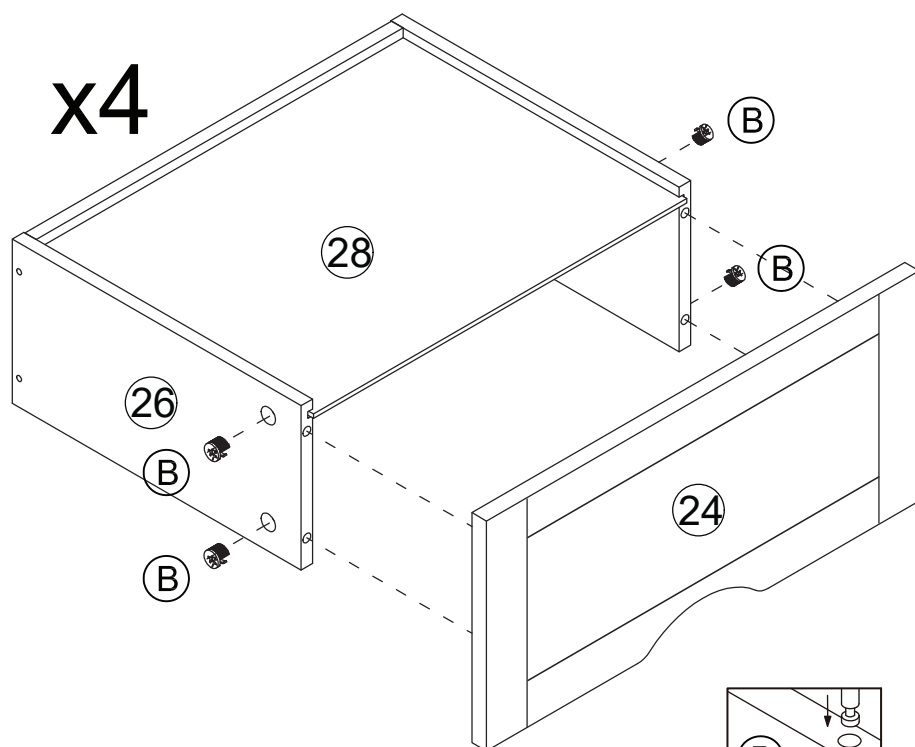

(B)




Cam lock x 16

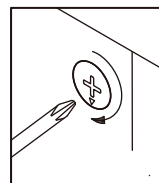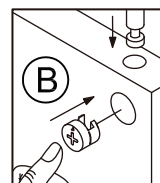

Step 34

x4

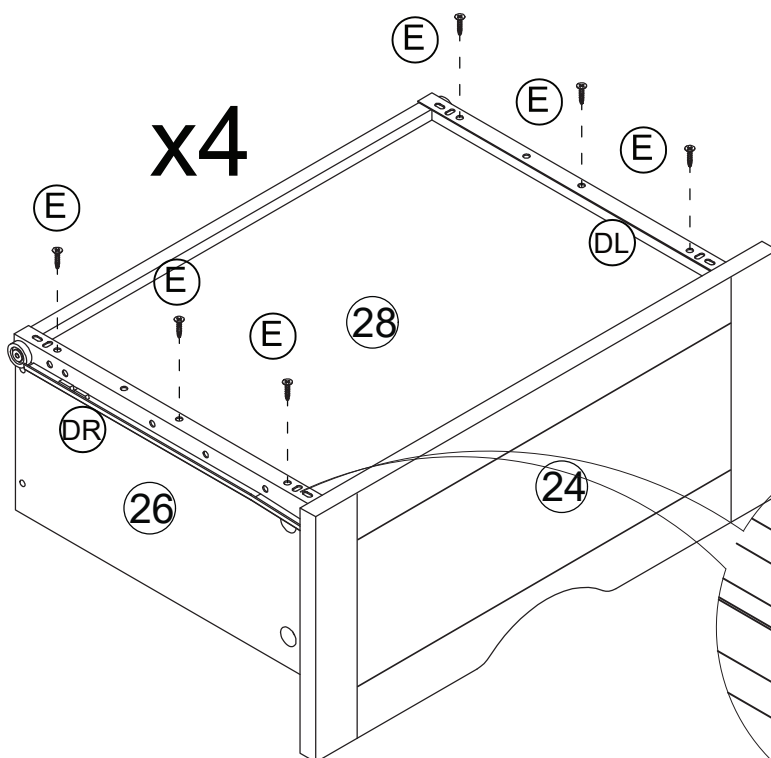


(E)




3*12mm Screw x 24

(DL)




Runner 300mm x 4

(DR)





Runner 300mm x 4


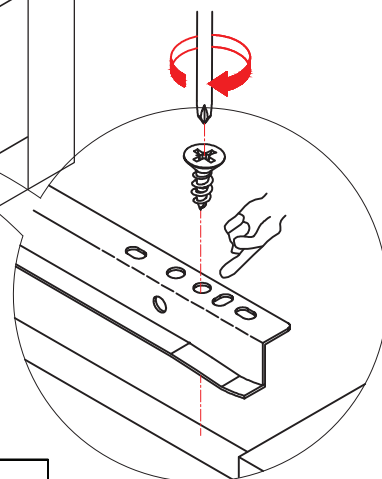


Assembly Instructions

Step 35

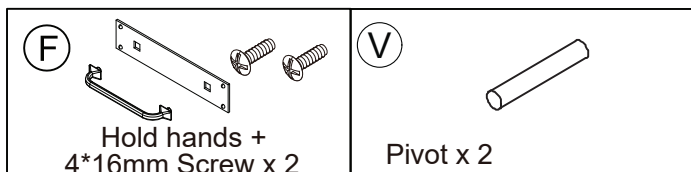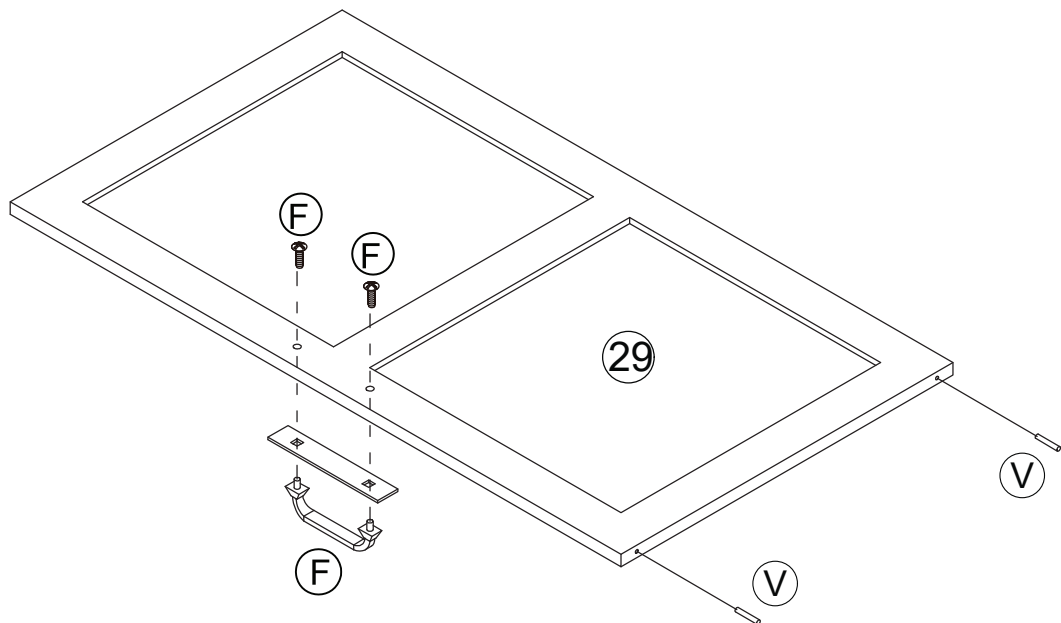


Step 36

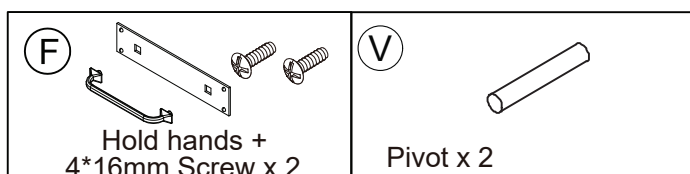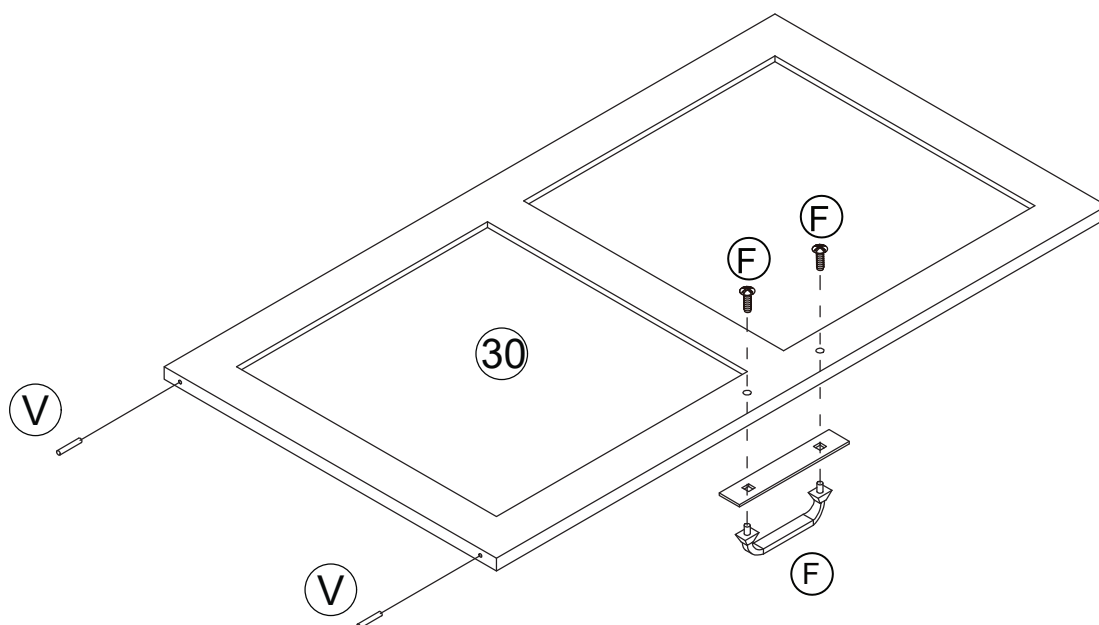


Assembly Instructions

Step 37

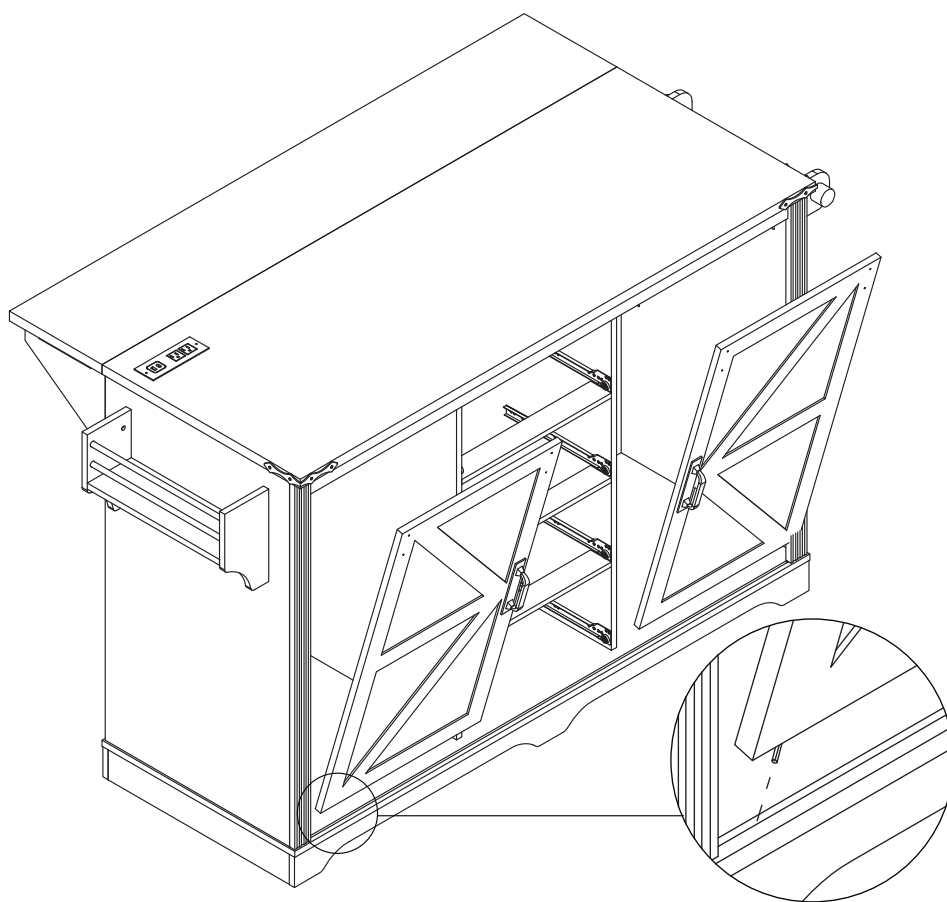


Step 38

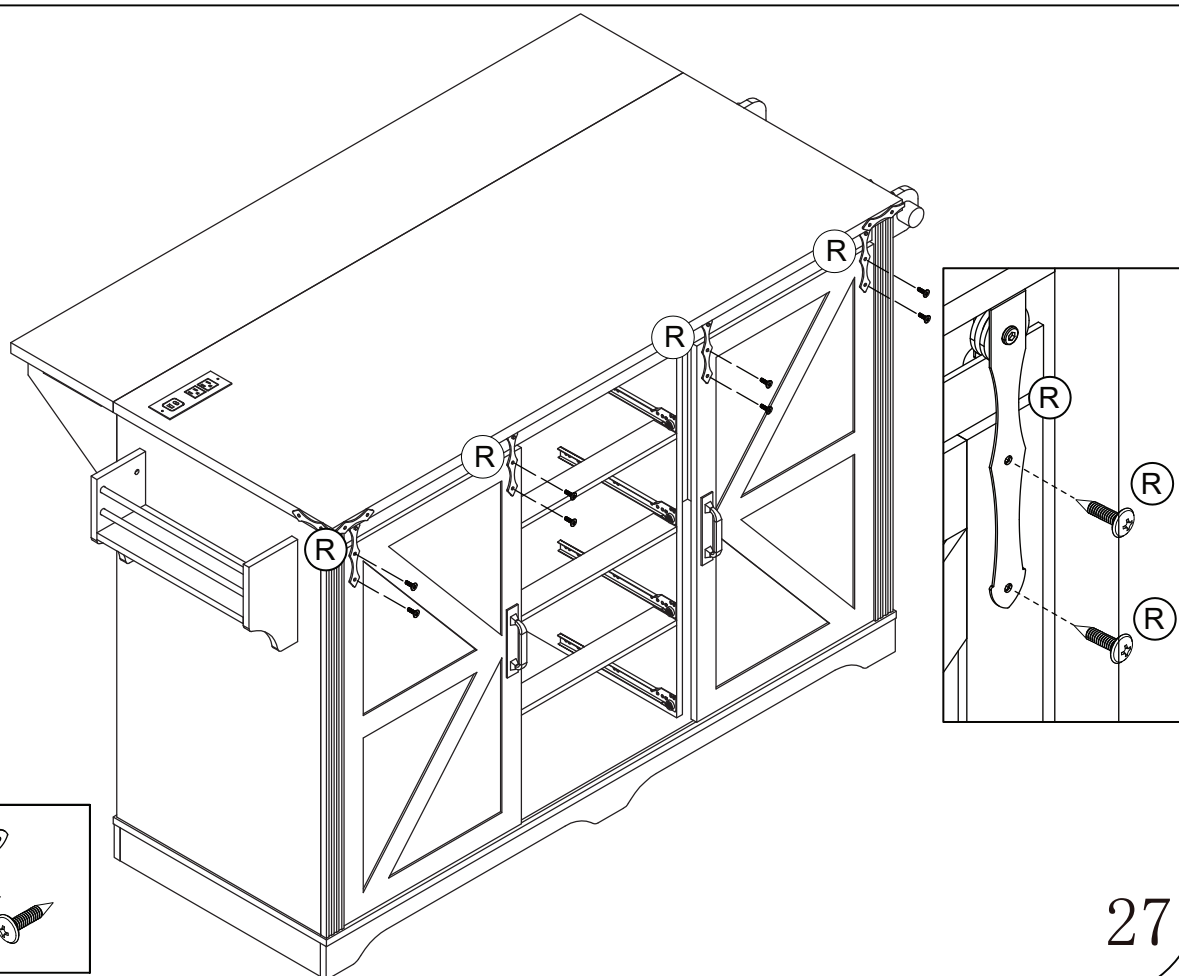


Assembly Instructions

Step 39

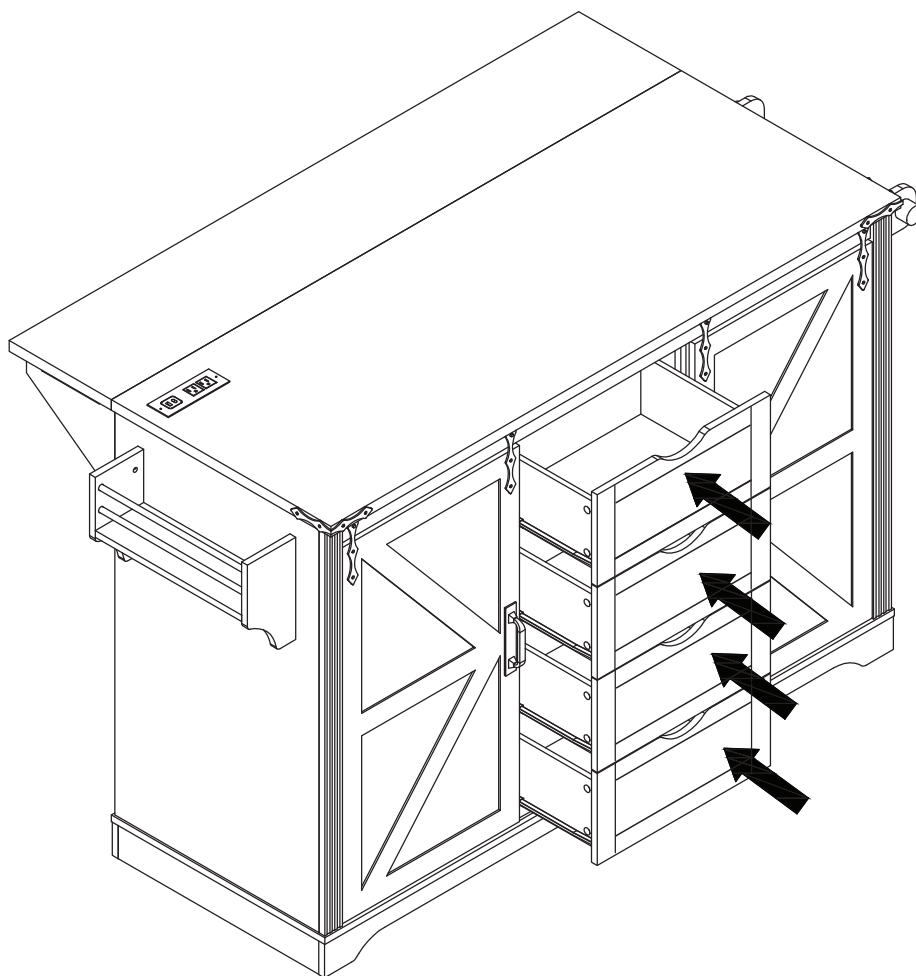


Step 40

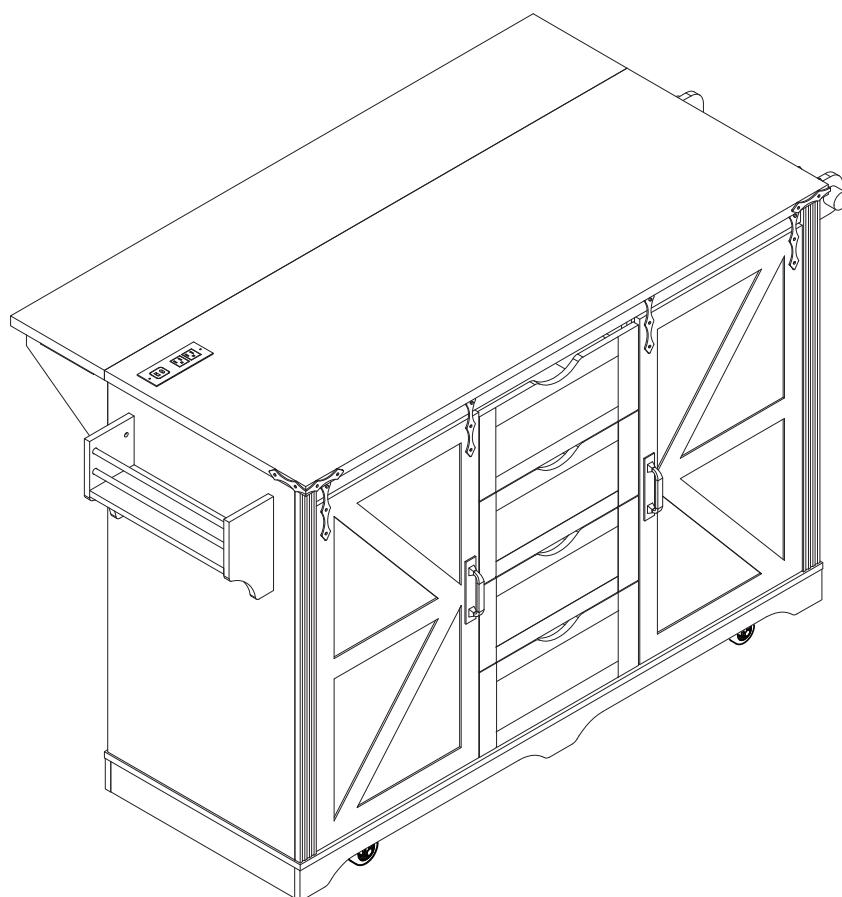

Assembly Instructions

Step 41

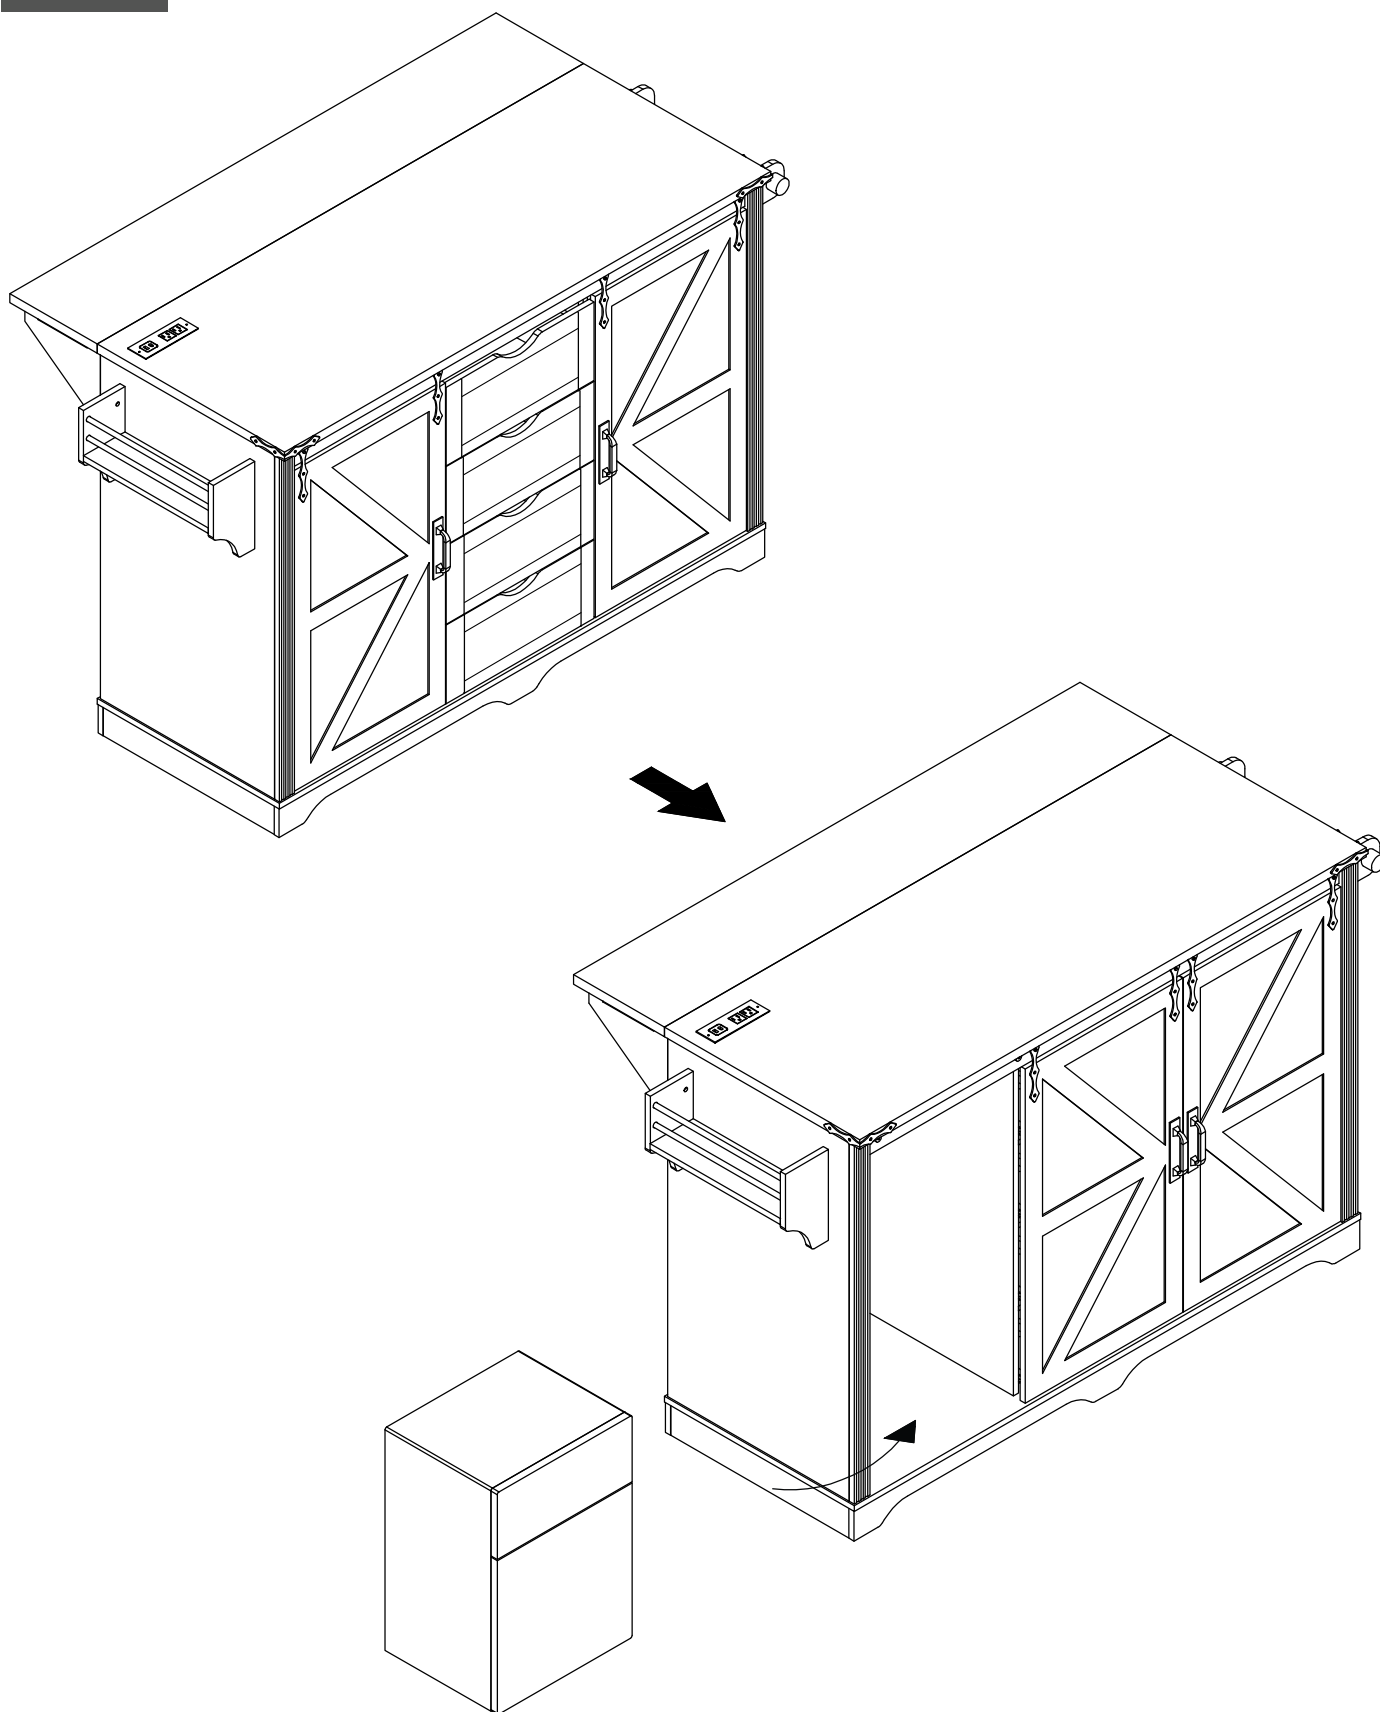

refrigerator