




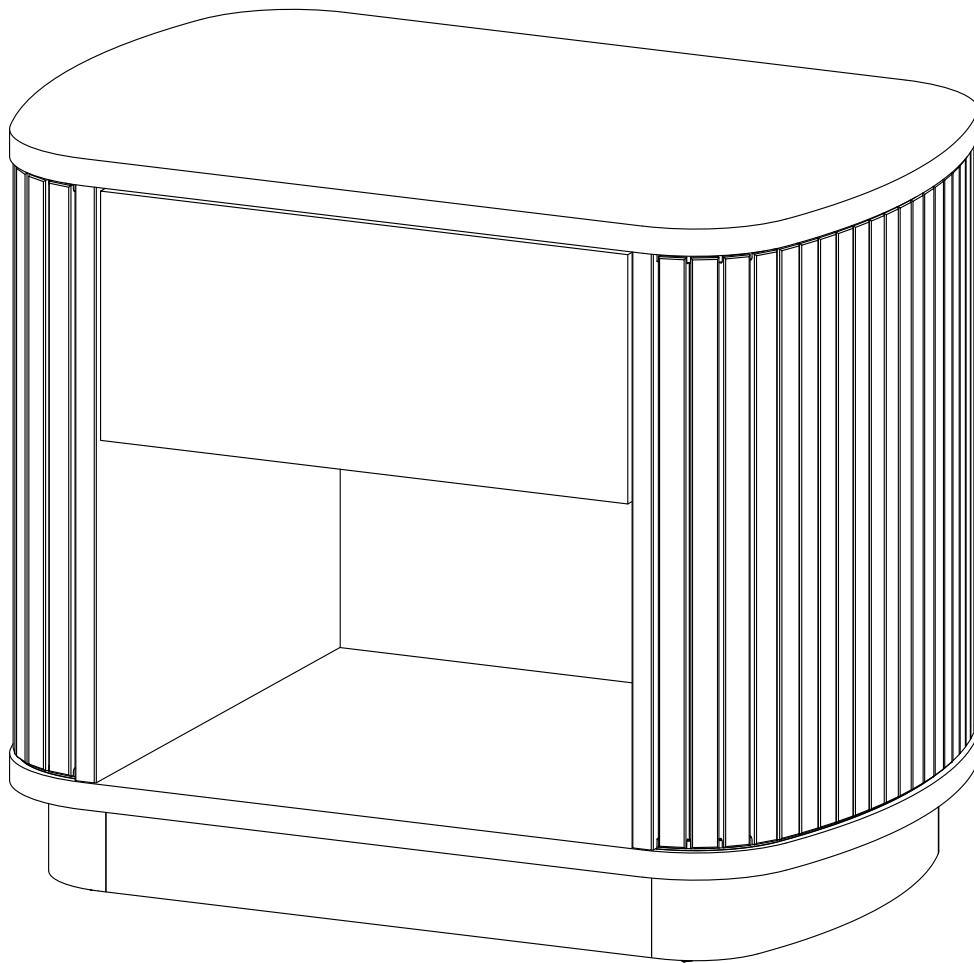


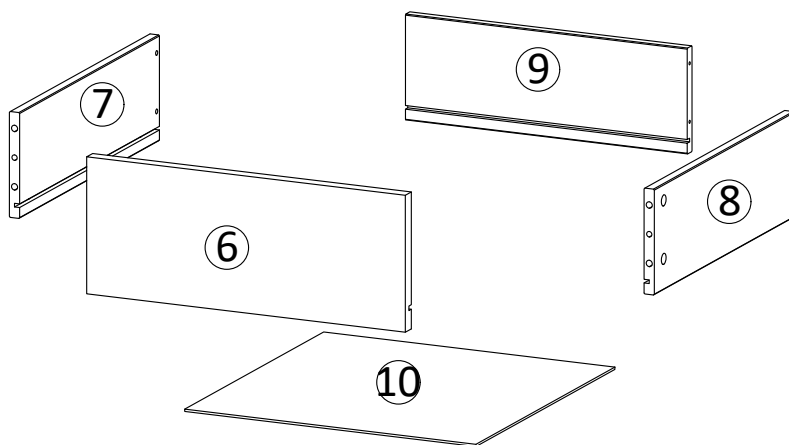

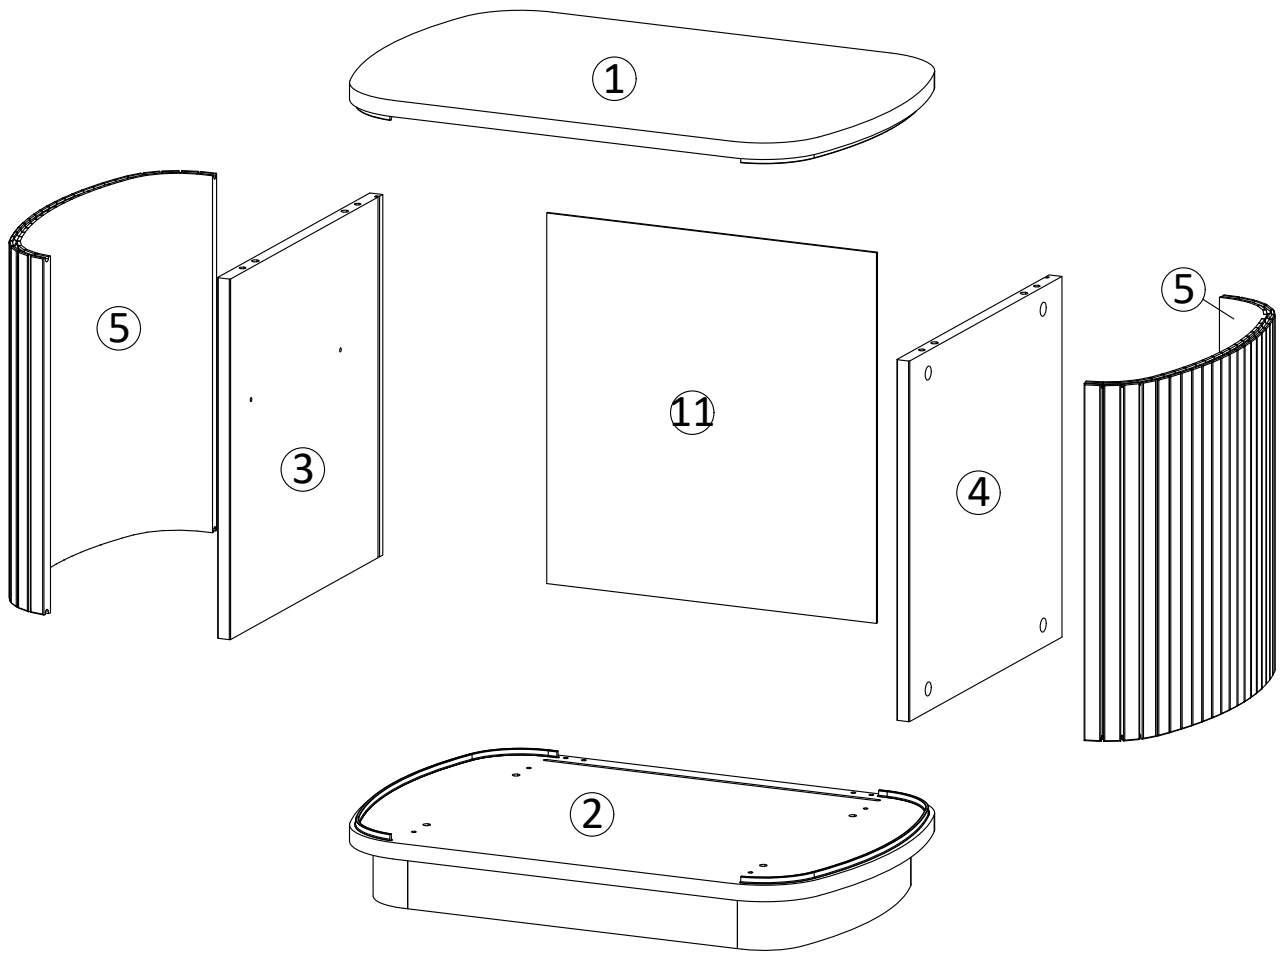







ASSEMBLY INSTRUCTIONS

1340031








Hardware



<p>A x 12</p>  <p>∅6 x 35 mm</p>	<p>B x 8</p>  <p>∅15 mm</p>	<p>C x 4</p>  <p>∅12 mm</p>	<p>D x 8</p>  <p>∅8 x 30 mm</p>
<p>E x 2</p>  <p>∅6 x 30 mm</p>	<p>F x 4</p>  <p>M 6 x 10.5 mm</p>	<p>G x 6</p>  <p>M 3.5 x 13 mm</p>	<p>H x 4</p>  <p>M 4 x 39 mm</p>
<p>I x 4</p> 	<p>J x 8</p> 	<p>K x 8</p>  <p>M 3.5 x 15.5 mm</p>	<p>L x 4</p> 
<p>RM35A x 1</p>  <p>350 mm</p>			


 <p>SET-UP TIME : 60 MINUTES</p>	 <p>NUMBER OF PERSONS : 02</p>	 <p>TOOLS : </p>
---	--	---




1

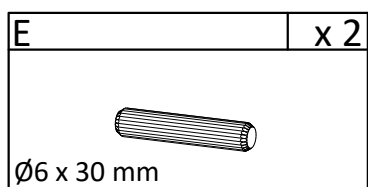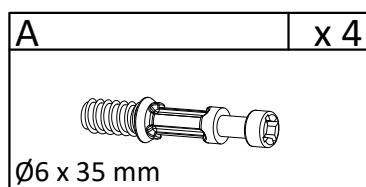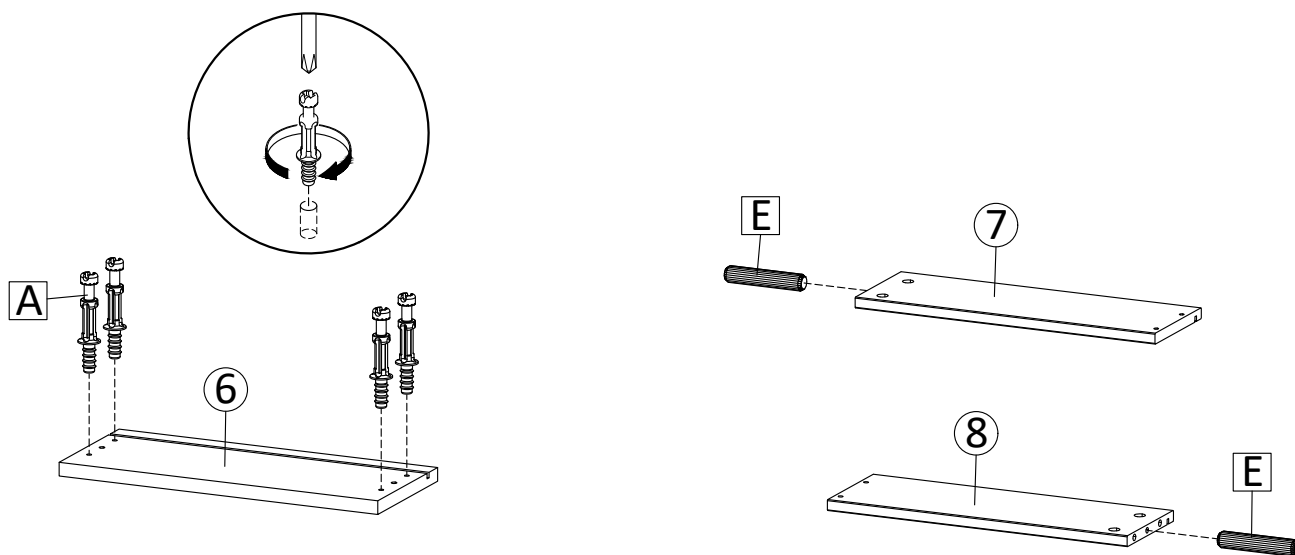




2

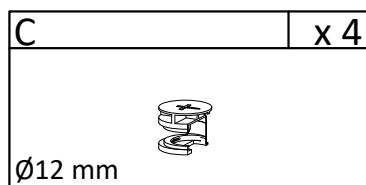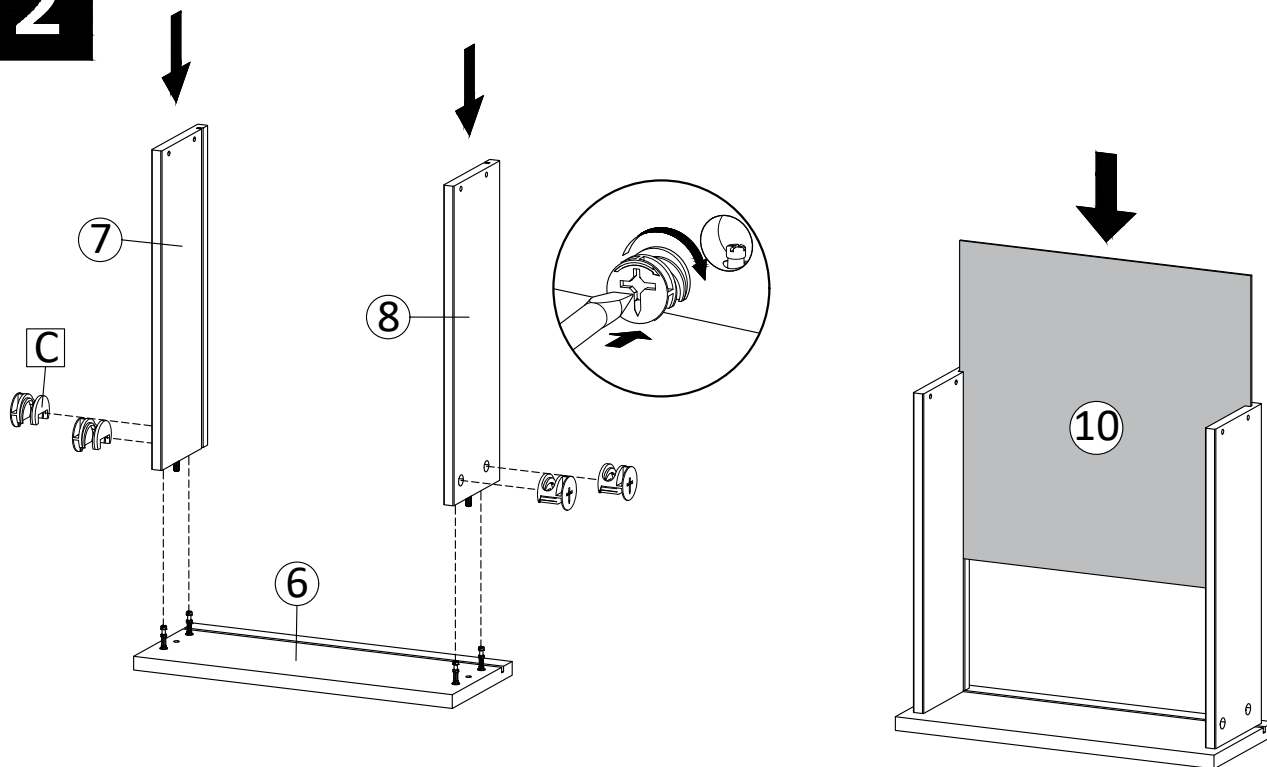



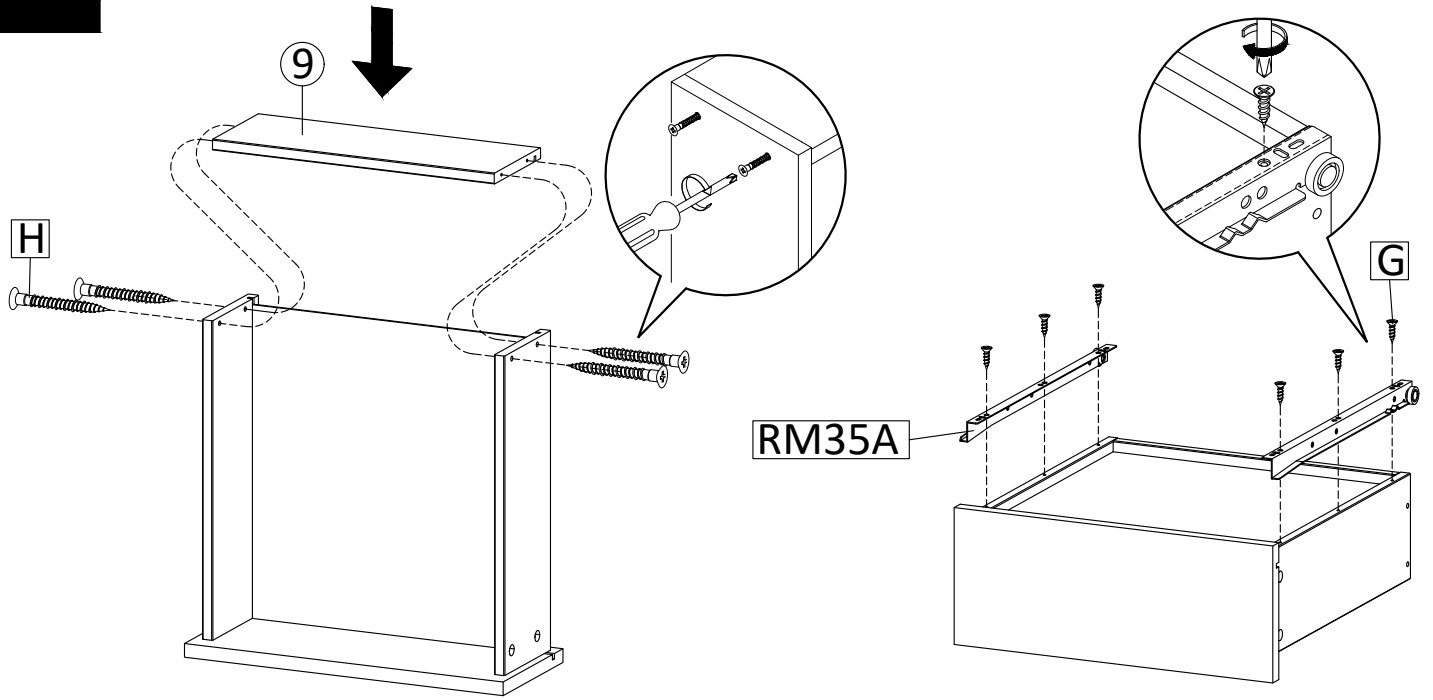
3

G	x 6	H	x 4	RM35A	x 1
 M 3.5 x 13 mm		 M 4 x 39 mm		 350 mm	


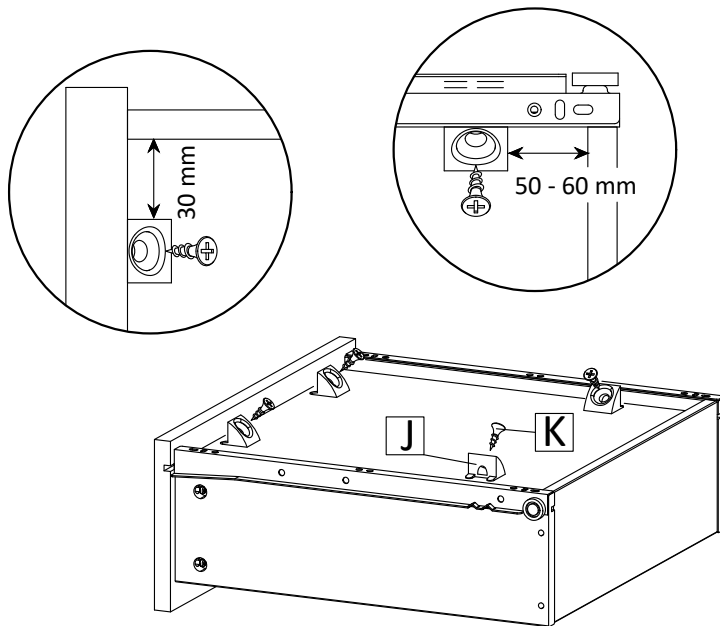
4

J	x 4	K	x 4
		 M 3.5 x 15.5 mm	


5

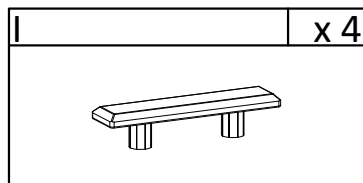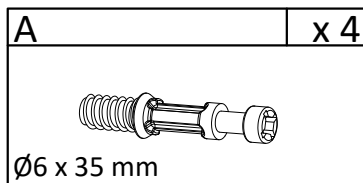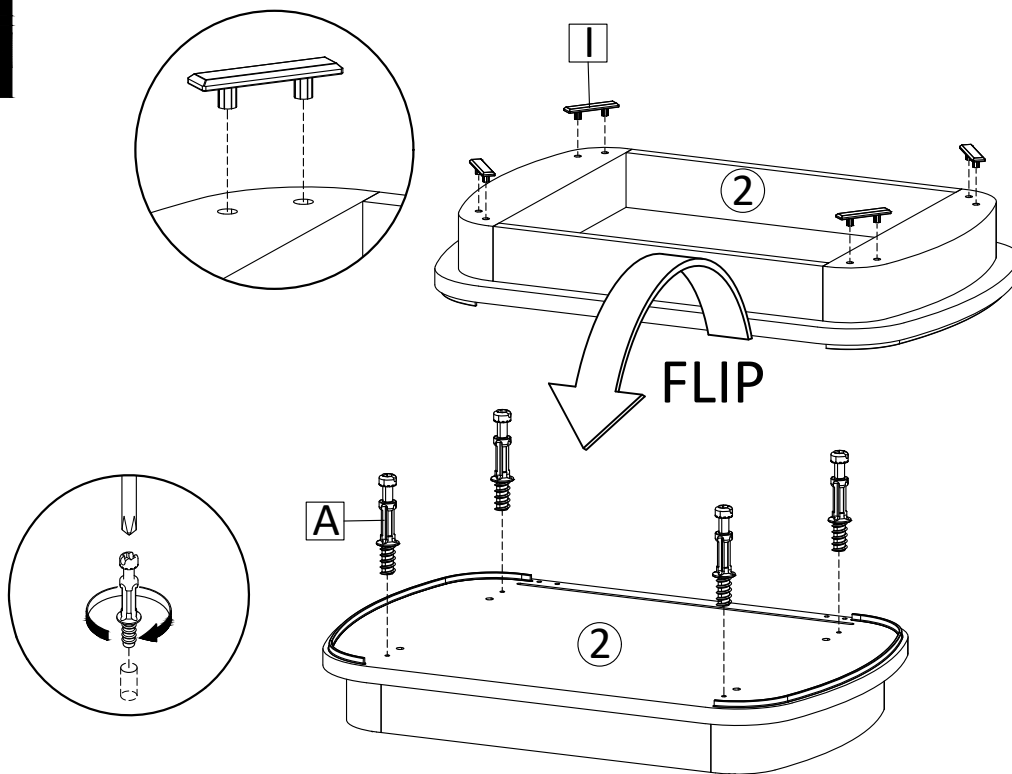

6

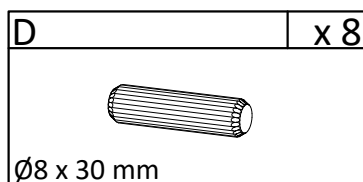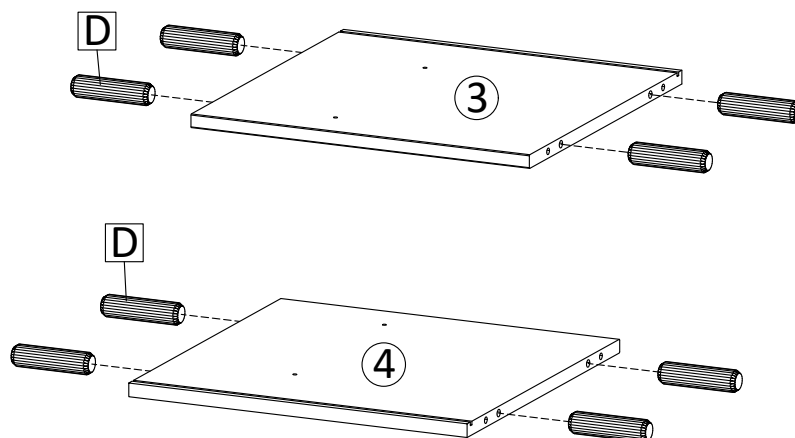



7

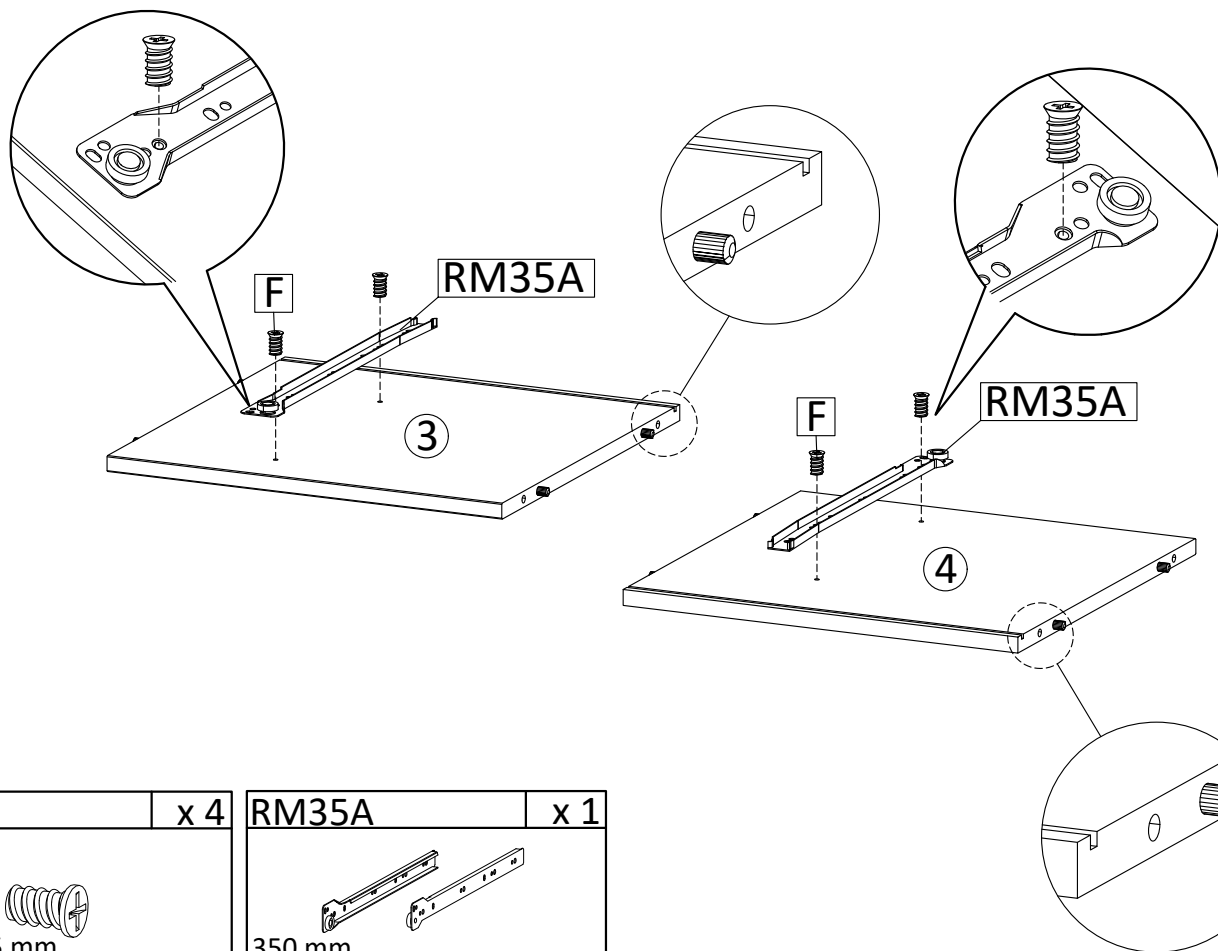



F	x 4	RM35A	x 1
 M 6 x 10.5 mm		 350 mm	

8


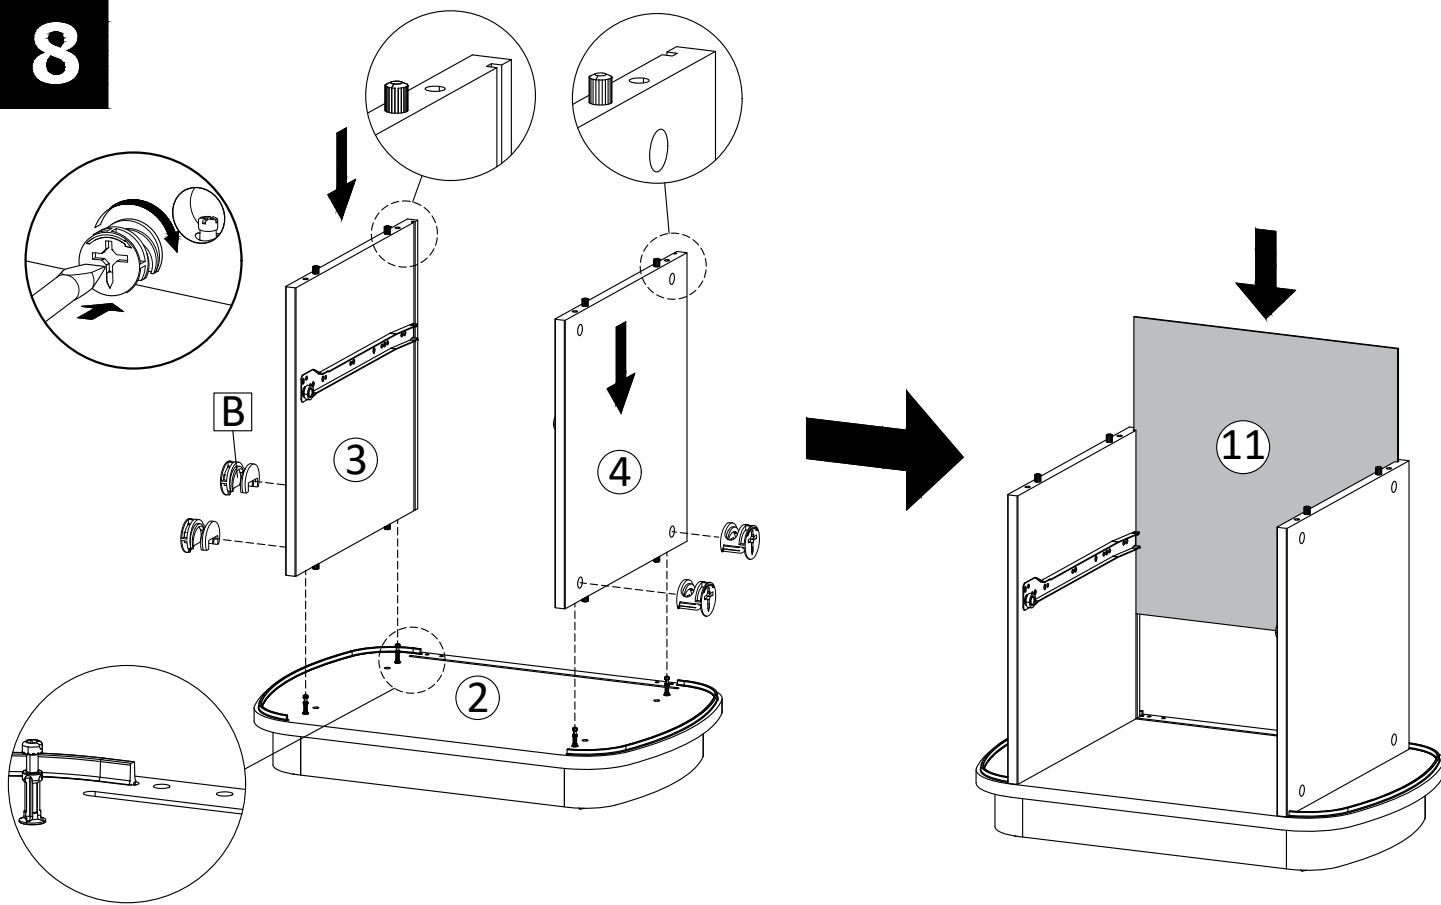


B	x 4
 Ø15 mm	


9

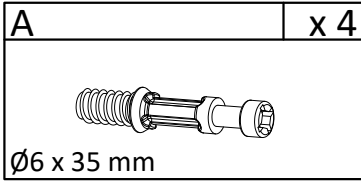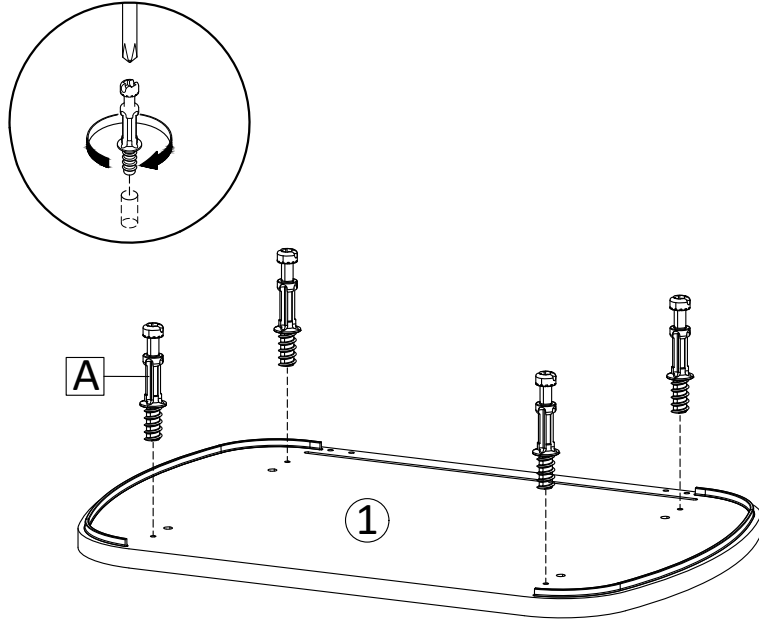


10

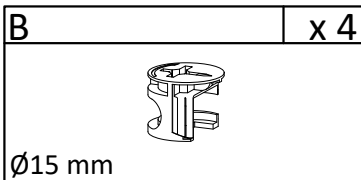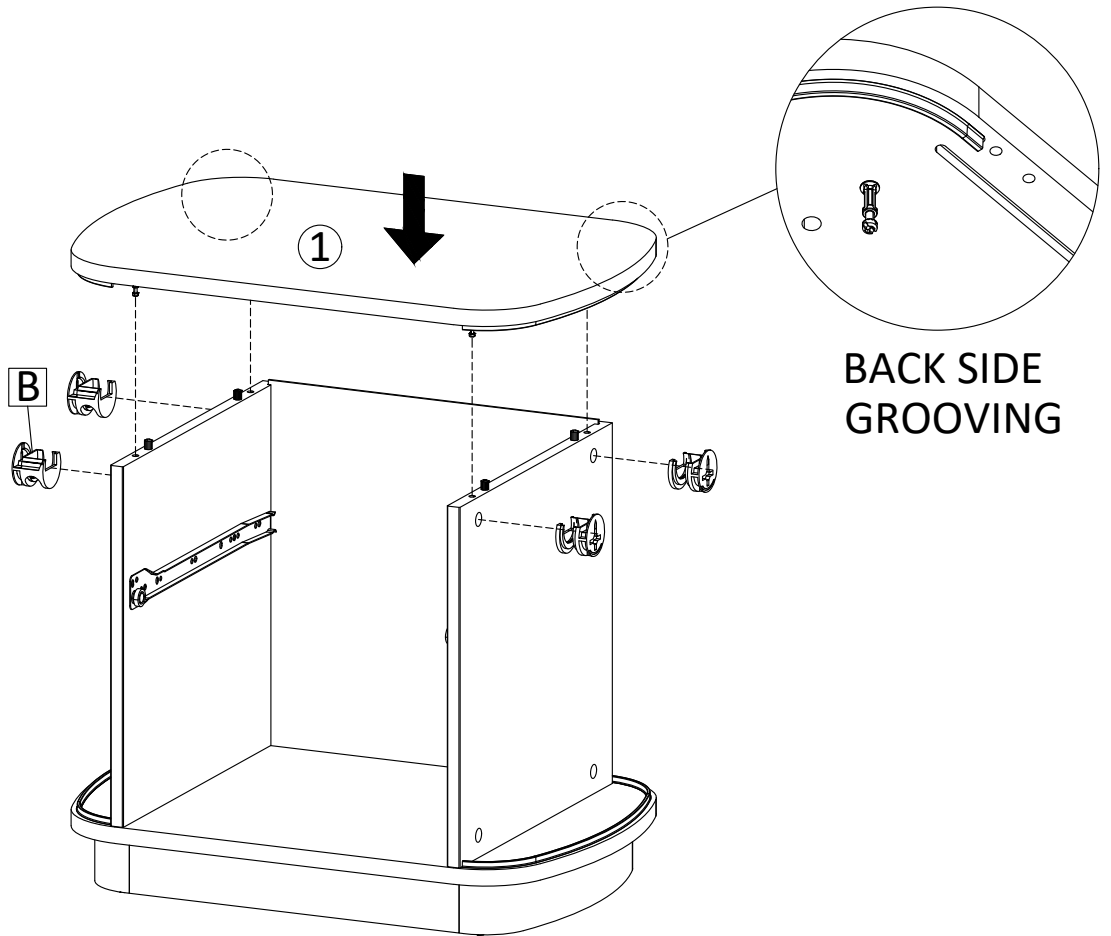





11

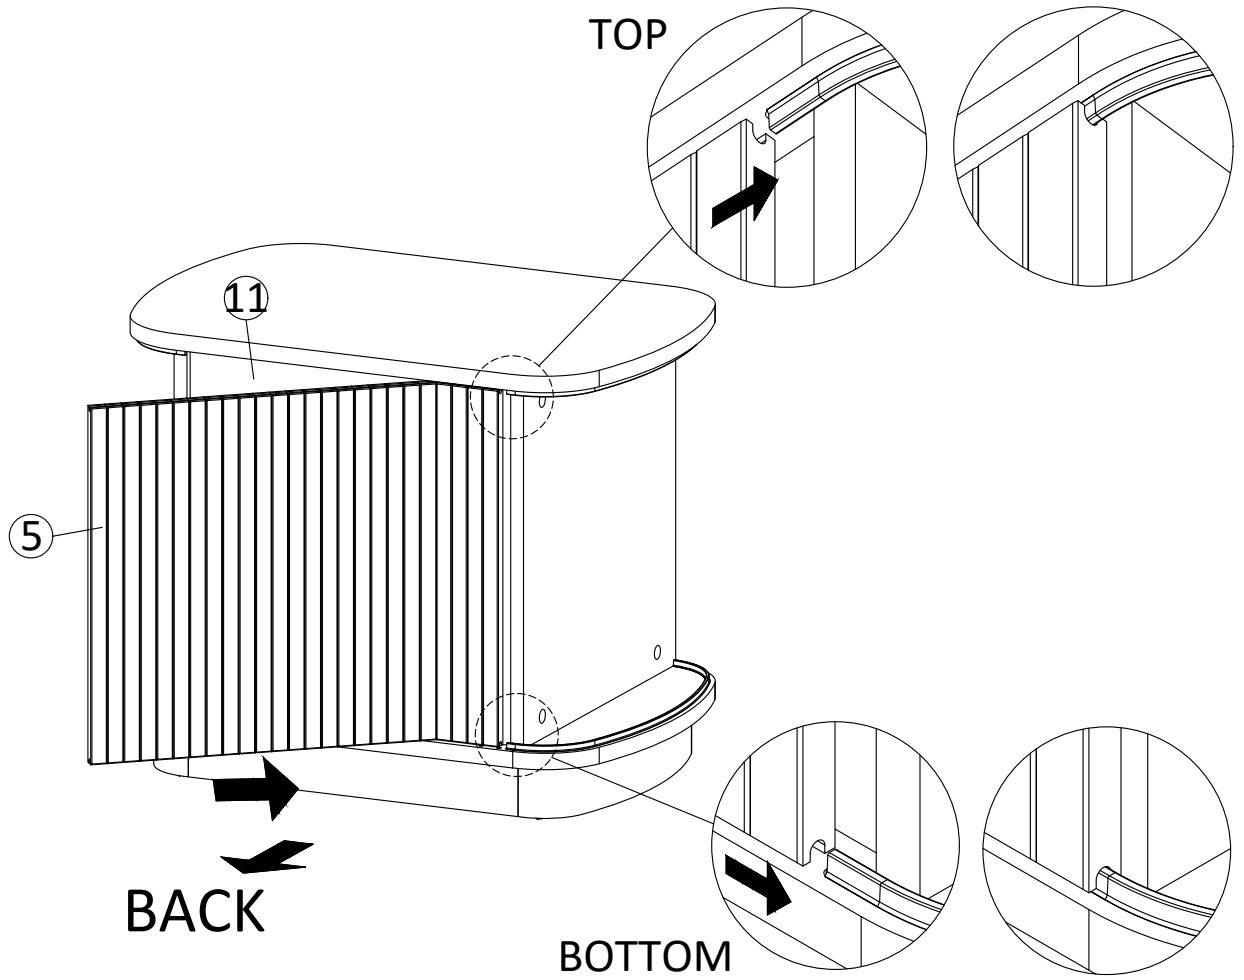





12

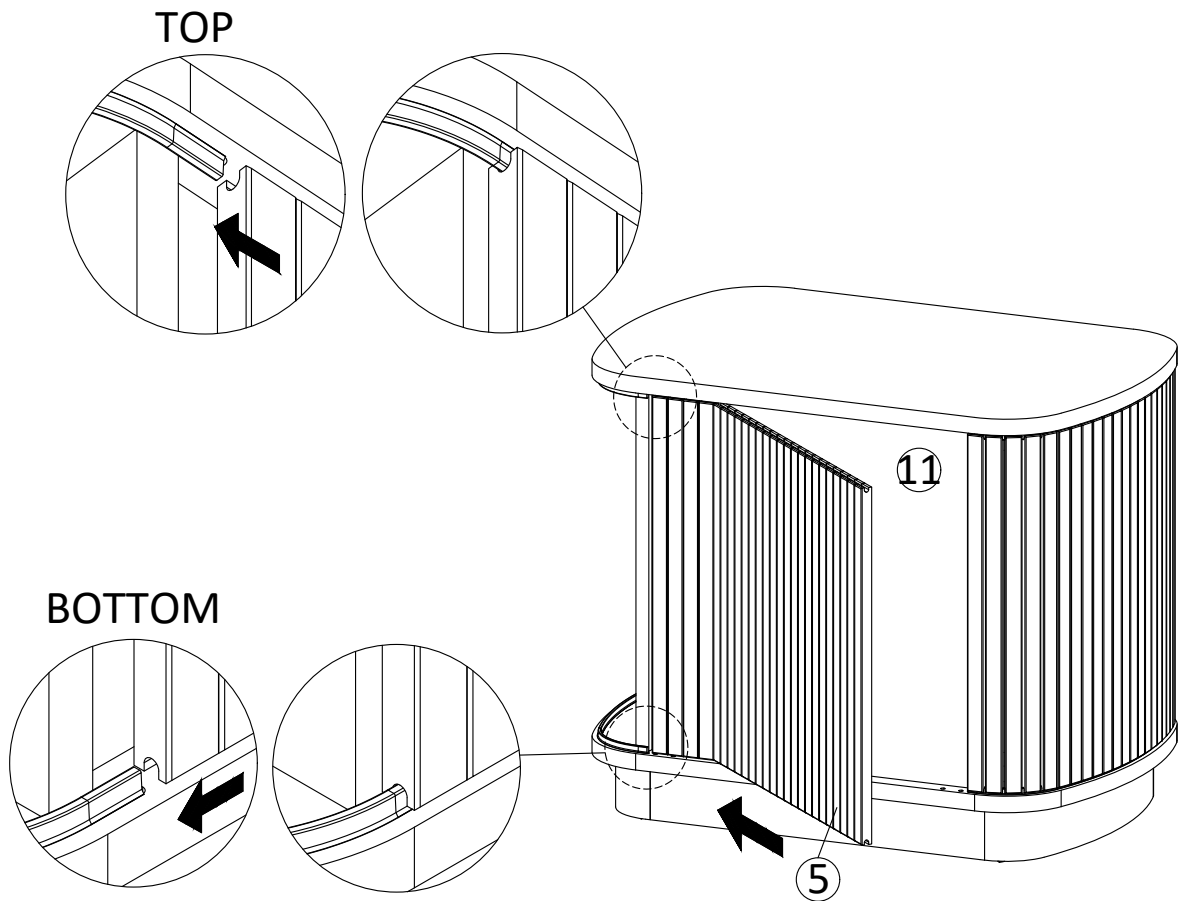



13

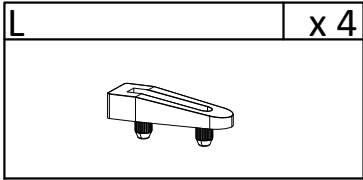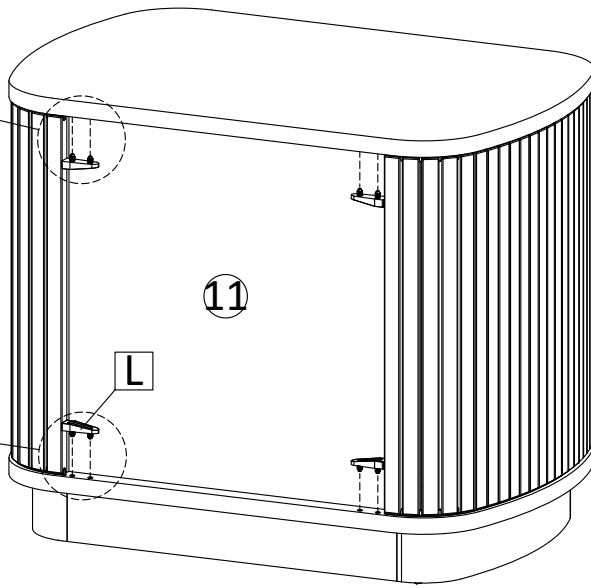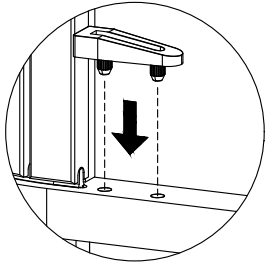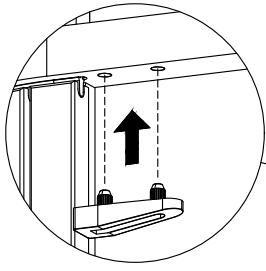

14

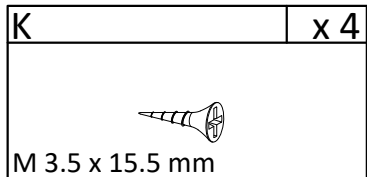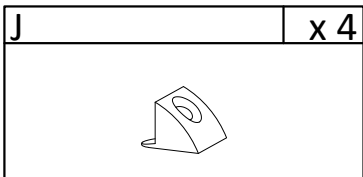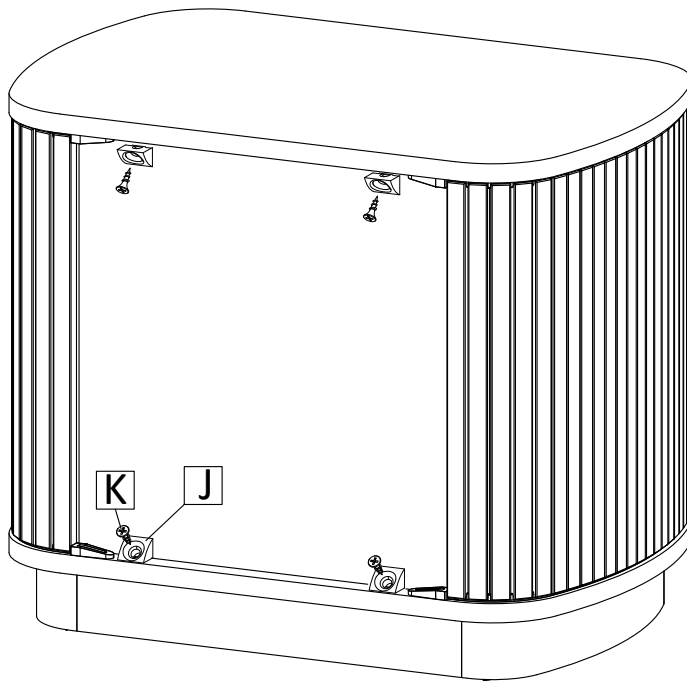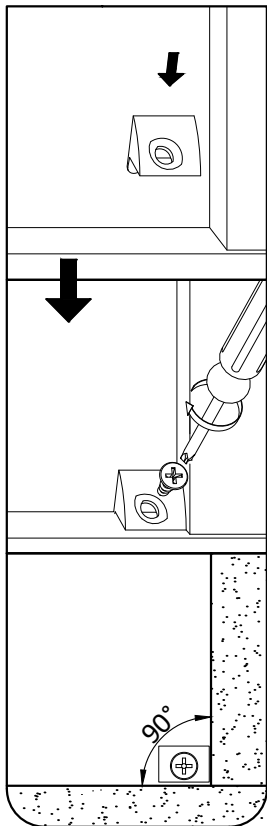

15

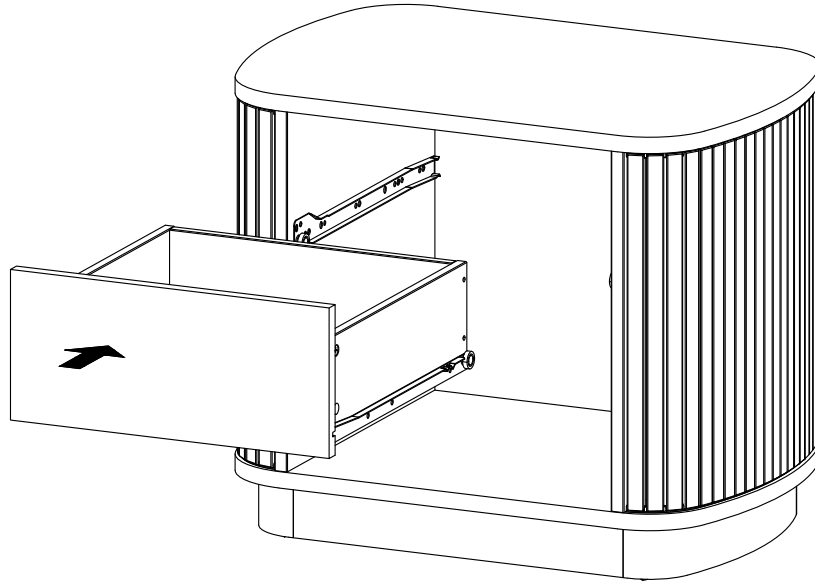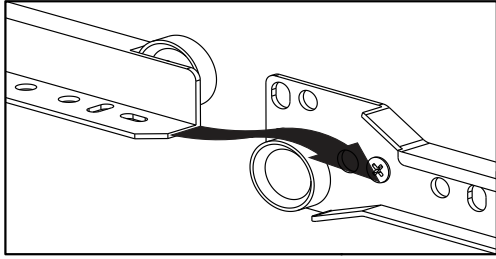

16

