




ASSEMBLY INSTRUCTIONS

V-WD26-1404


PF035

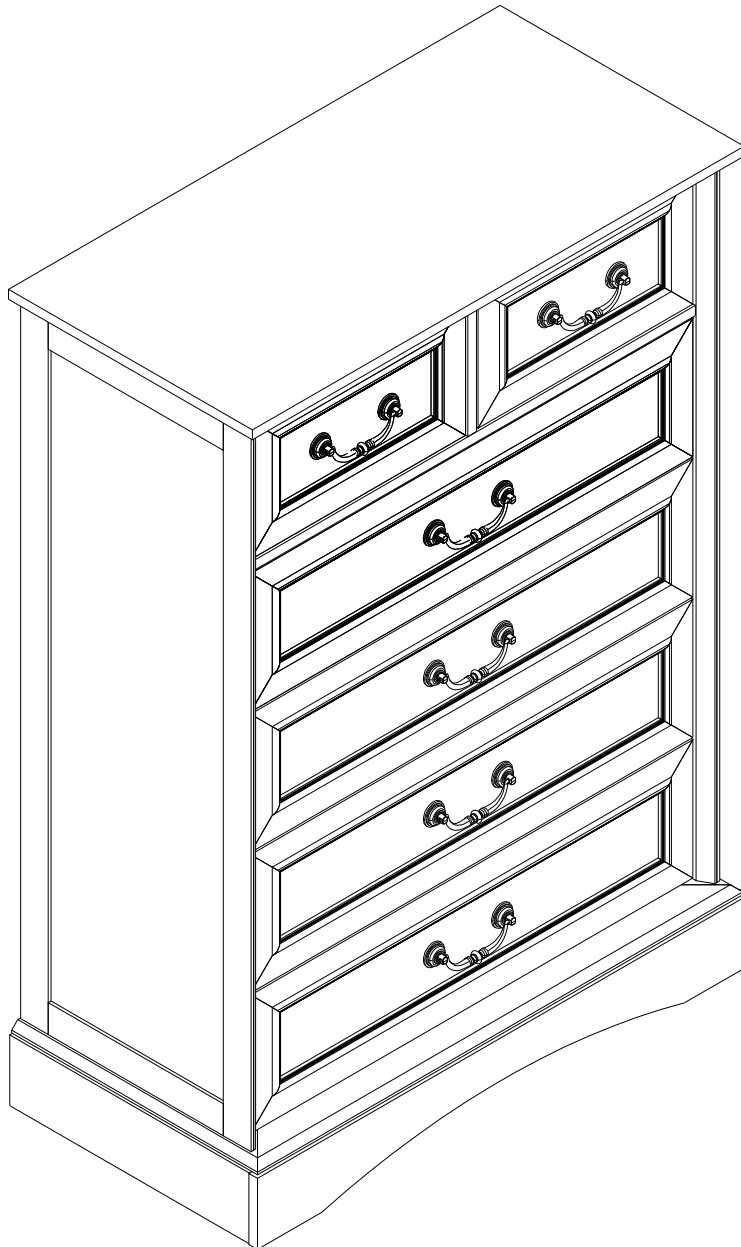

WARNING !

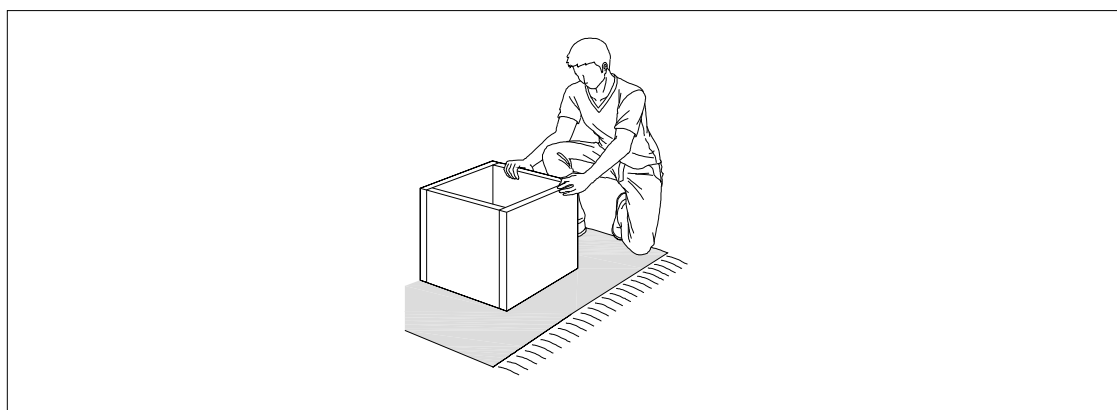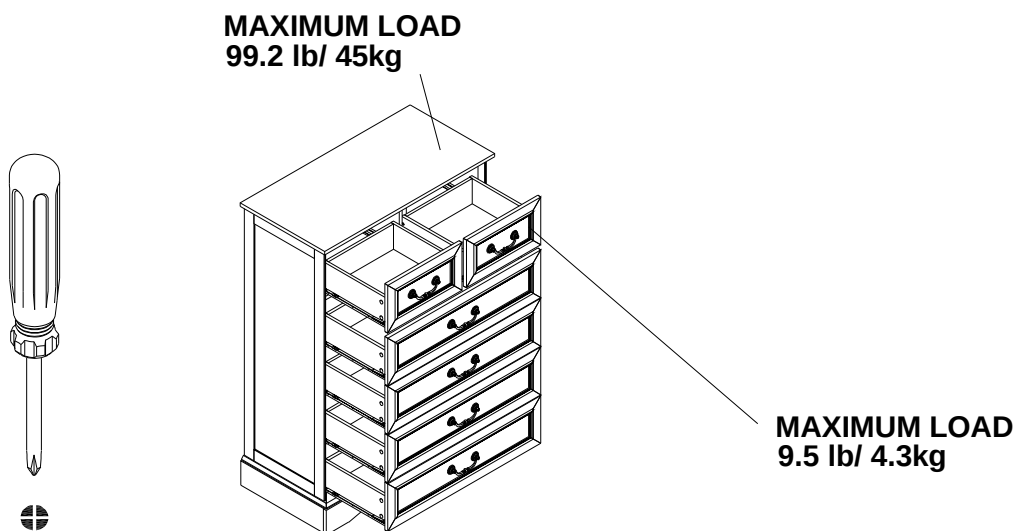

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

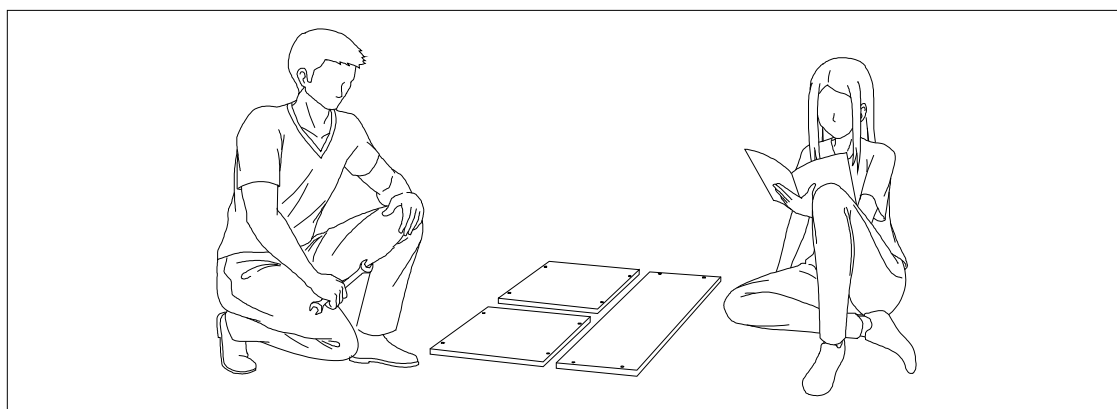



This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.


PACKAGE CONTENT

Board Identification

Not actual size

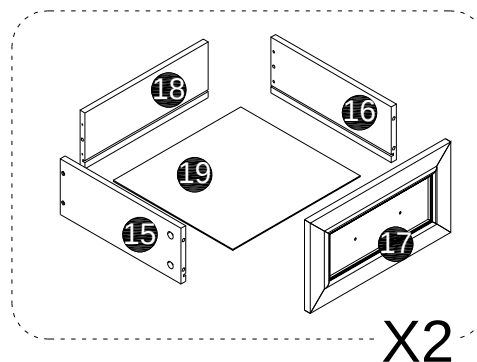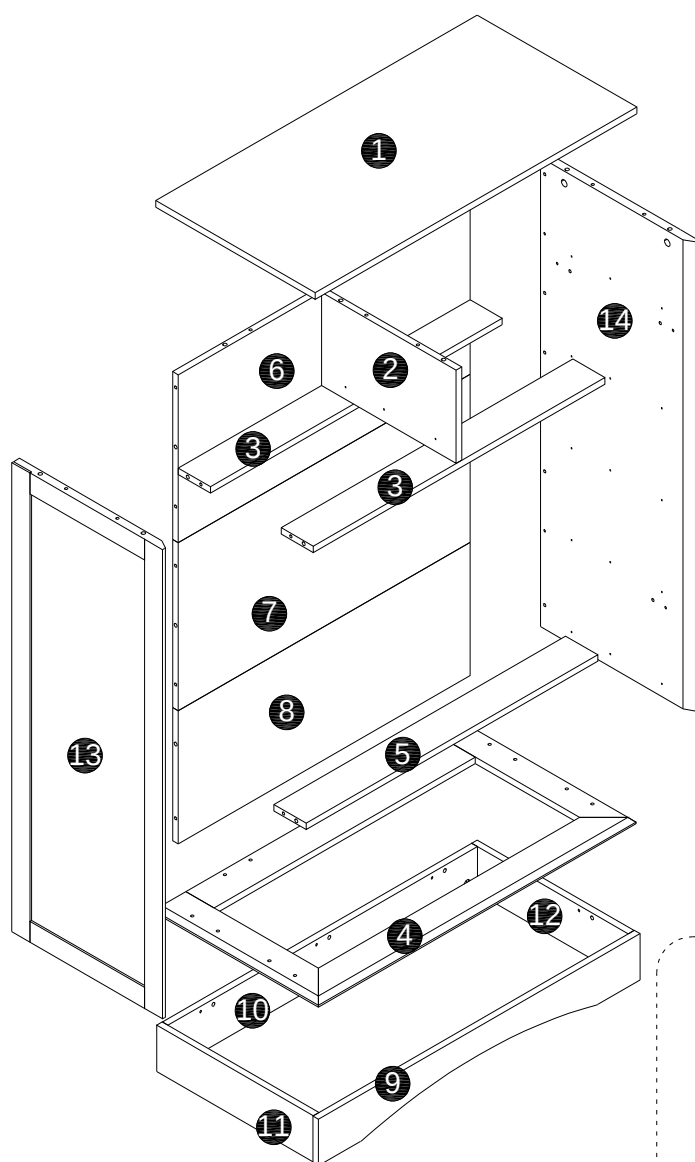


X2

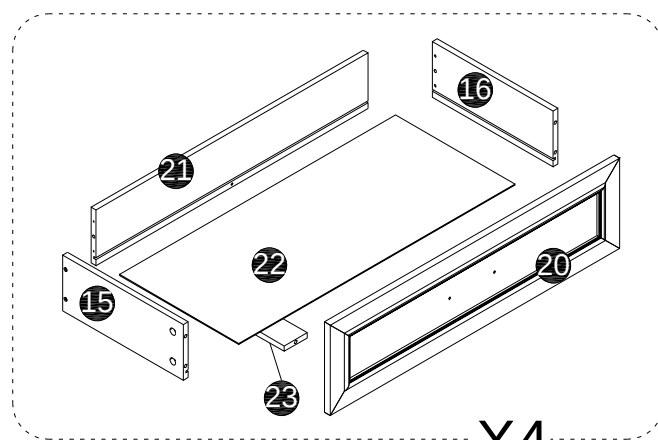


X4

BOARD IDENTIFICATION


Not actual size

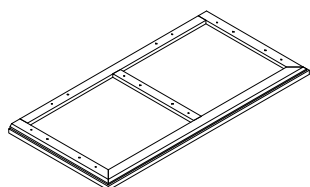


① x1

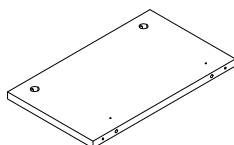


② x1

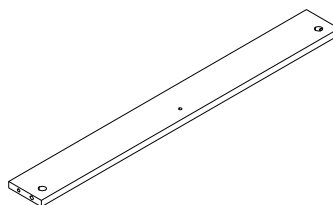


③ x2

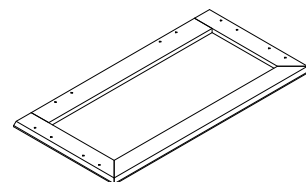


④ x1

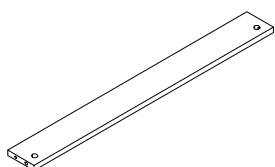


⑤ x1

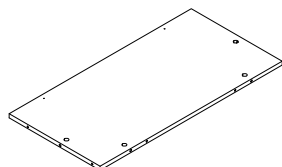


⑥ x1

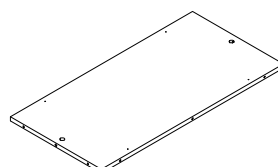


⑦ x1

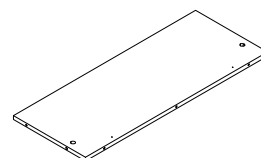


⑧ x1

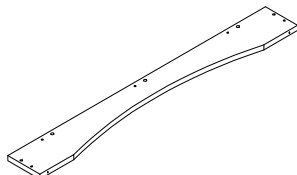


⑨ x1

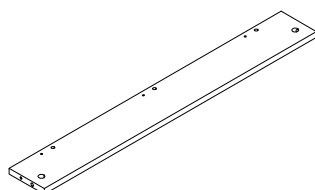


⑩ x1

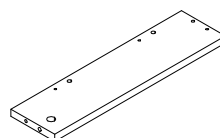


⑪ x1

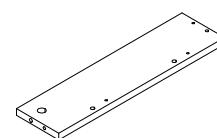


⑫ x1

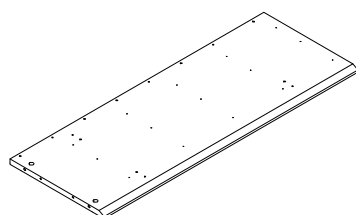


⑬ x1

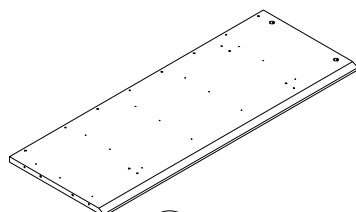


⑭ x1

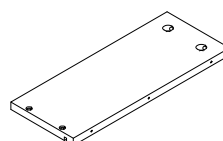


⑮ x6

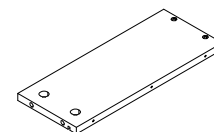


⑯ x6

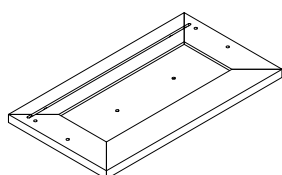


⑰ x2

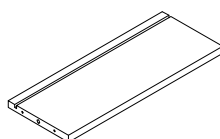

⑱ x2

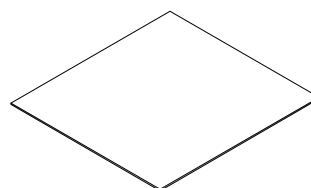


⑲ x2

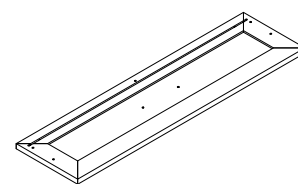


⑳ x4

BOARD IDENTIFICATION


Not actual size

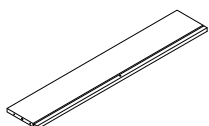

②1 x4









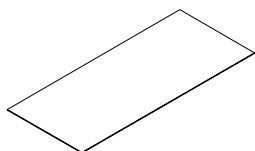


②2 x4

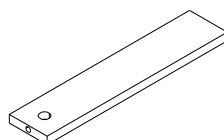


②3 x4

HARDWARE LIST

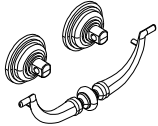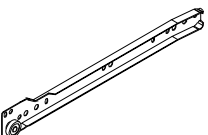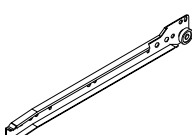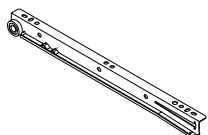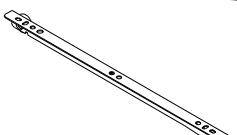 Ø6x33.5mm A x52+5	 Ø15x9.5mm B x52+5	 Ø6x30mm C x54+5	 Ø5x38mm D x8+1				
 Ø3.5x12mm E x79+7	 F x10	 Ø6x12mm G x20+2	 H x4				
 5/32x10mm I x12	 J x4	 K x6 SET	 Ø4x38mm L x28+2				
M1x2 140*19mm  M2x4 Ø16xØ6.5x1mm  M3x2 Ø4x16mm  M				N1x2 Ø6x30  N2x2 Ø4x35  N		 O x1	
 CL x6		 CR x6		 DR x6		 DL x6	


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

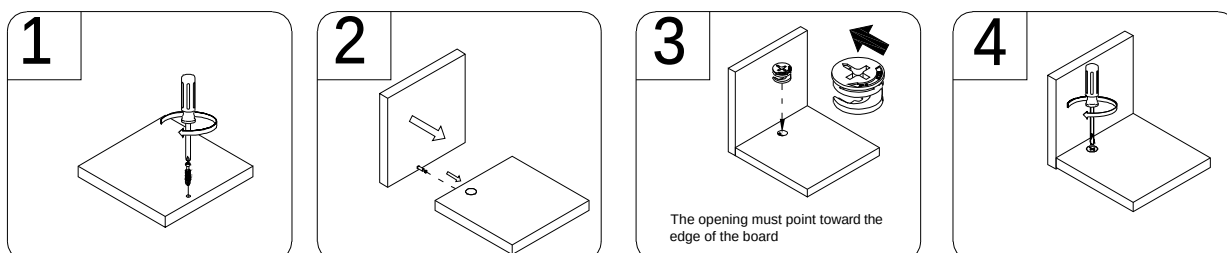


STEP 1

PF035


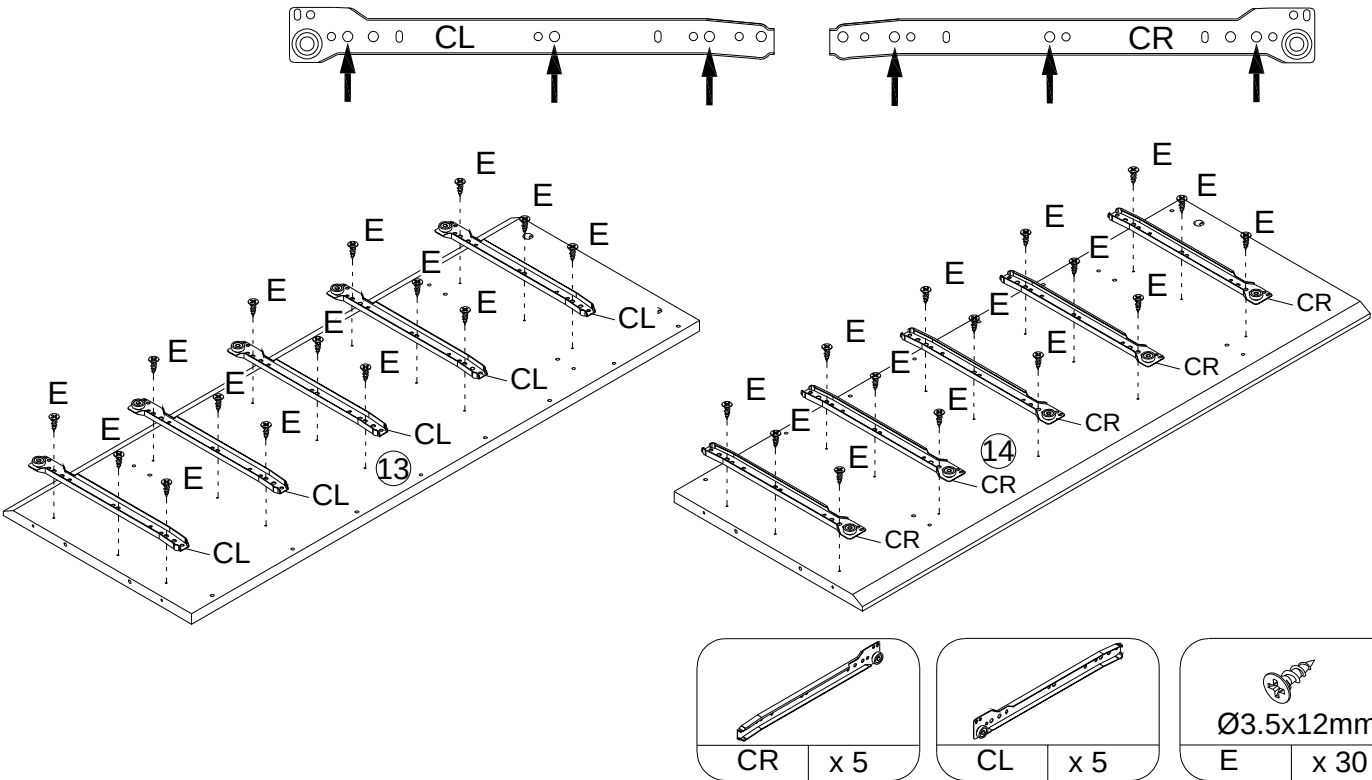


STEP 2



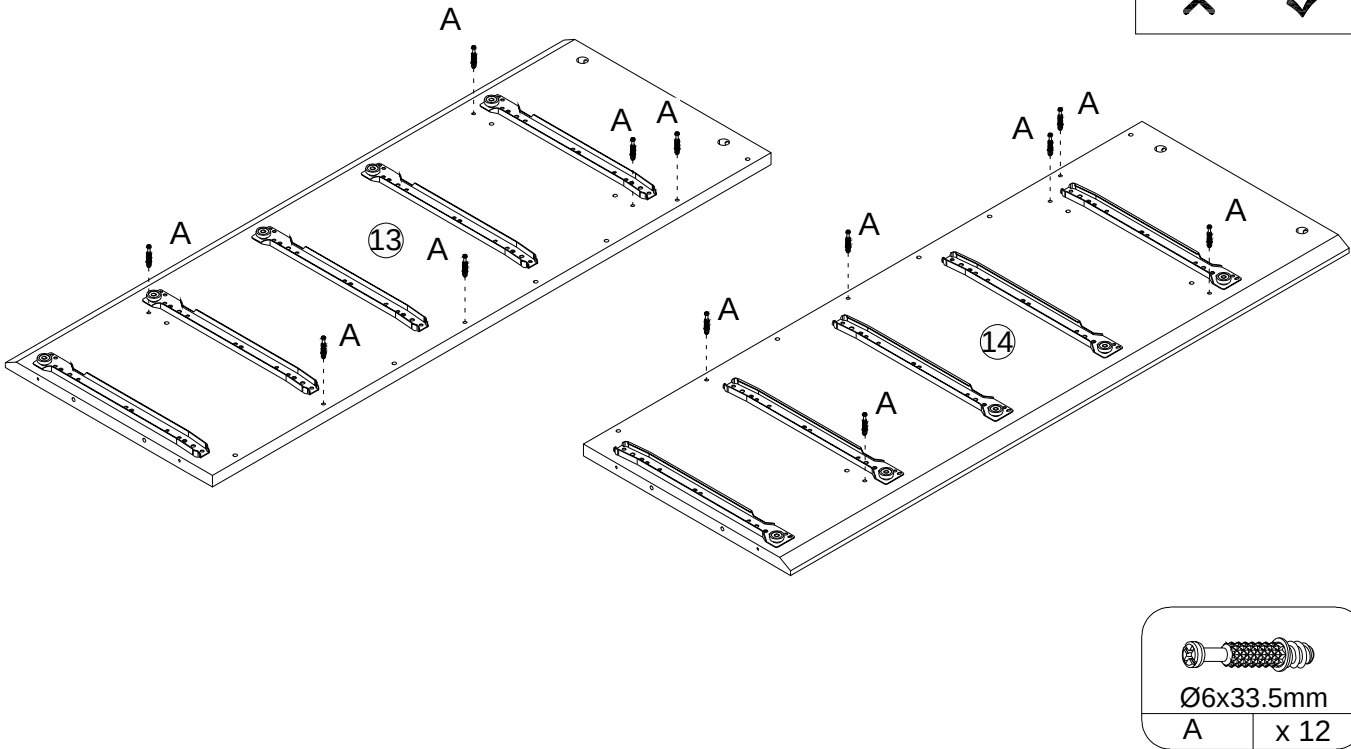


STEP 3

PF035



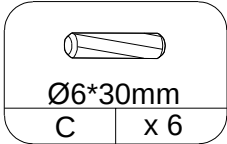
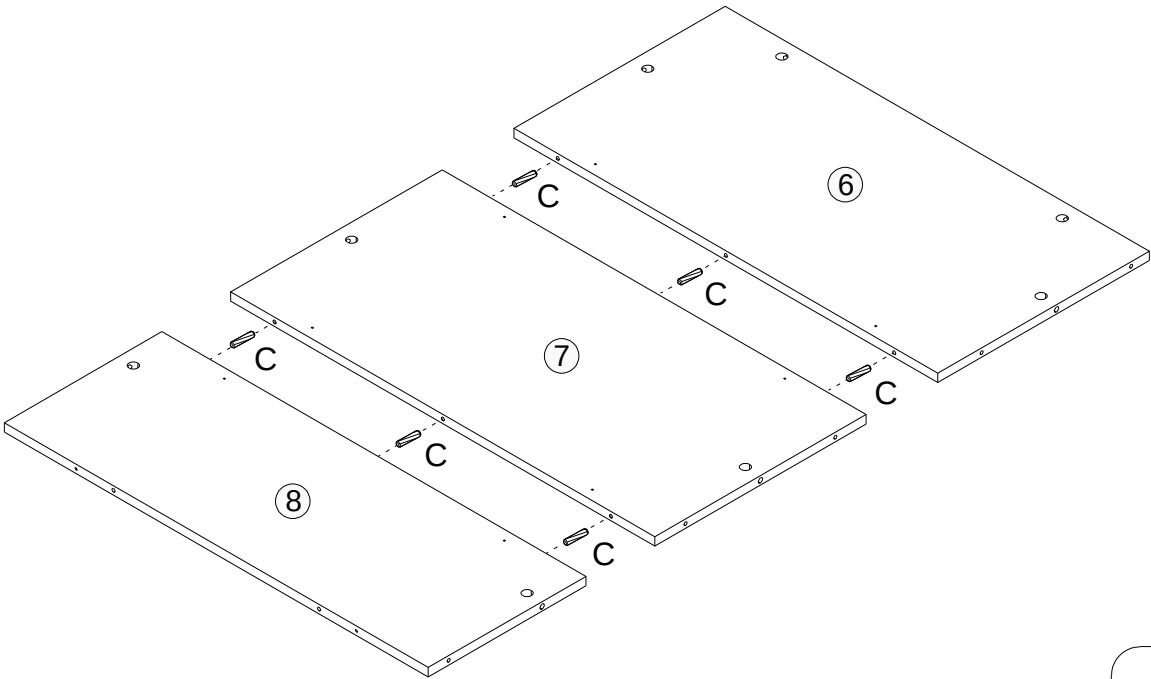


STEP 4


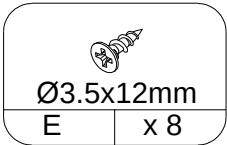
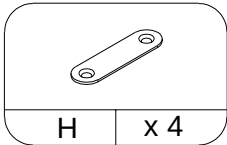
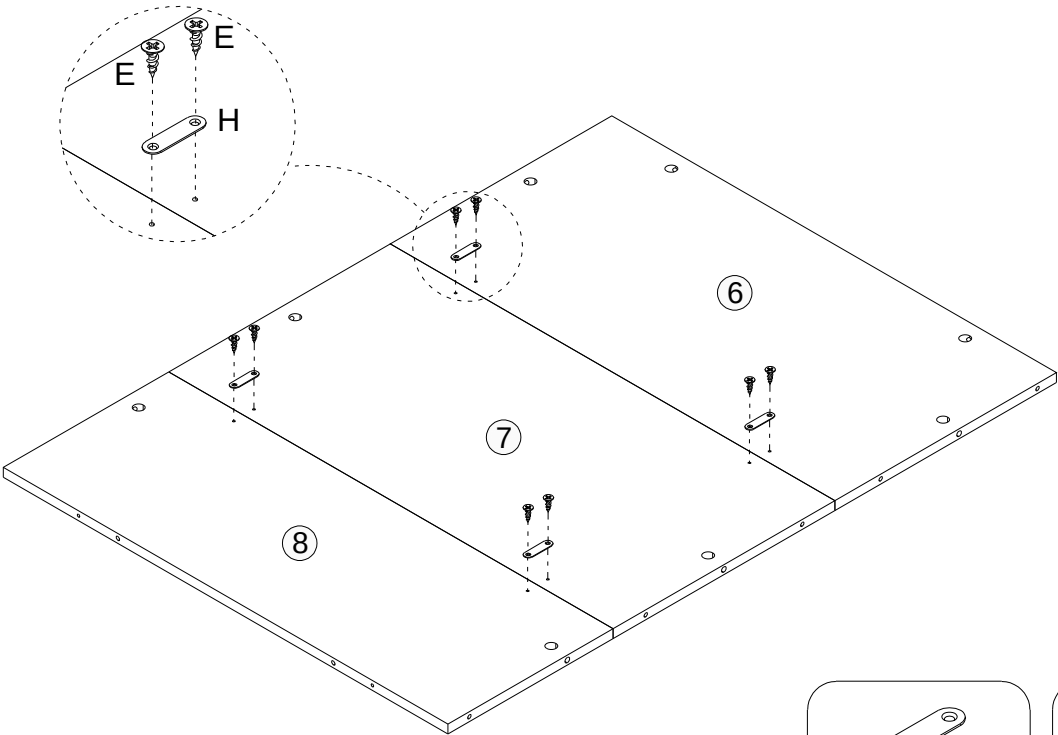


STEP 5

PF035

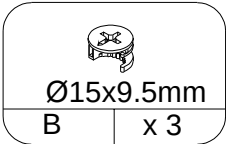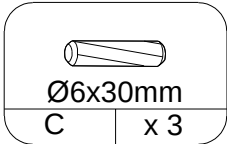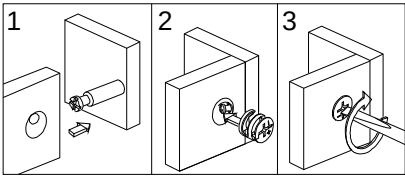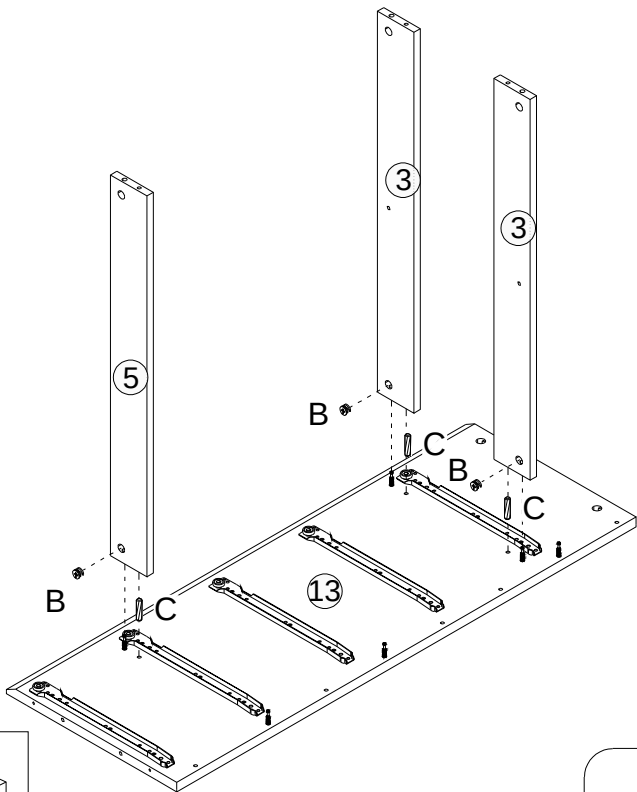


STEP 6

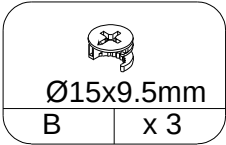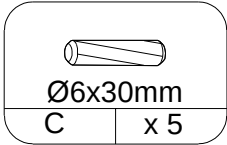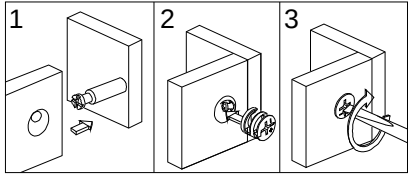
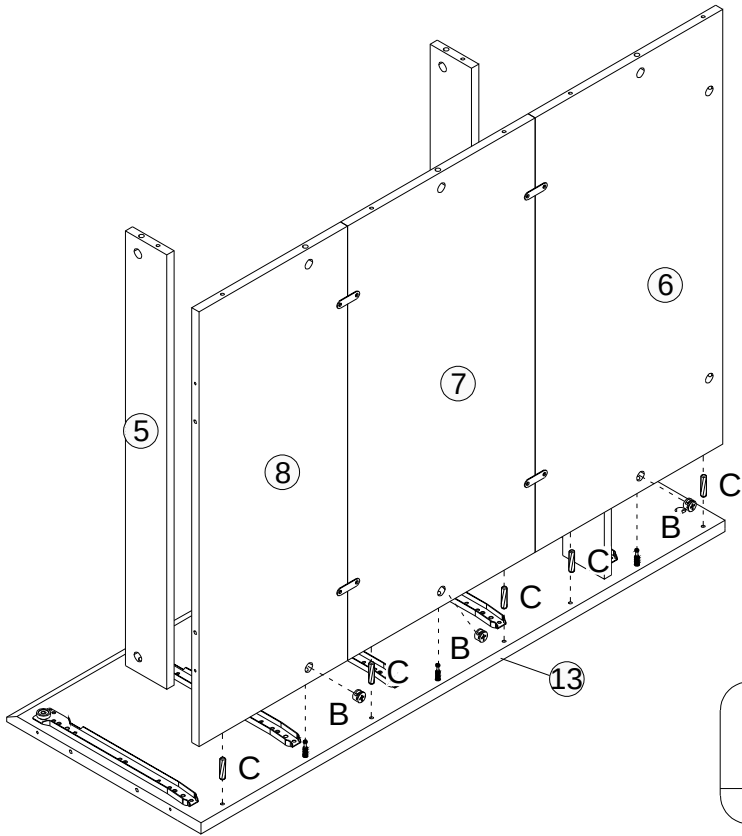


STEP 7




PF035

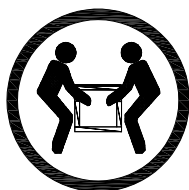




CAUTION: Heavy! You may need assistance with this step

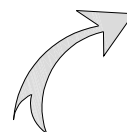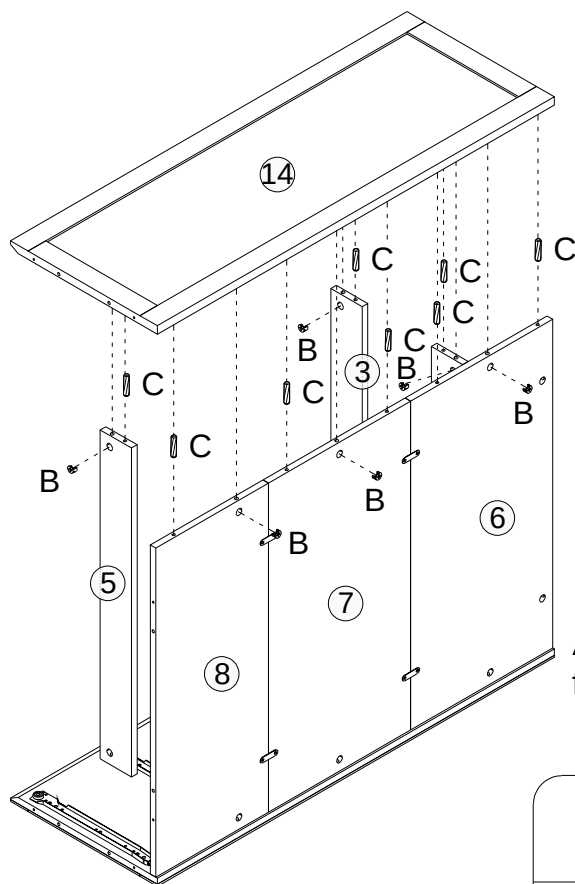

After this step is assembled, flip it 90 degrees(to next step)

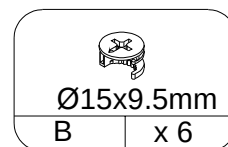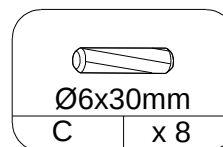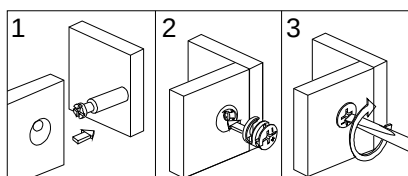


STEP 8

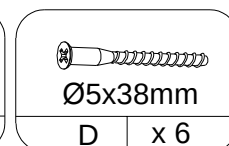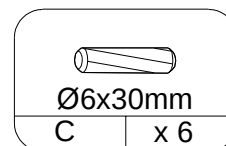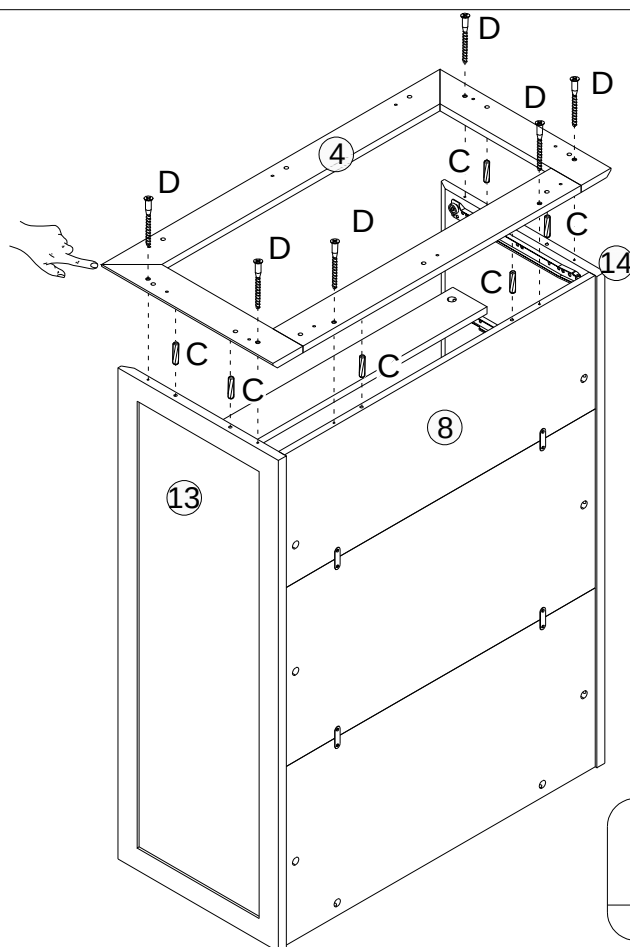


STEP 9

PF035

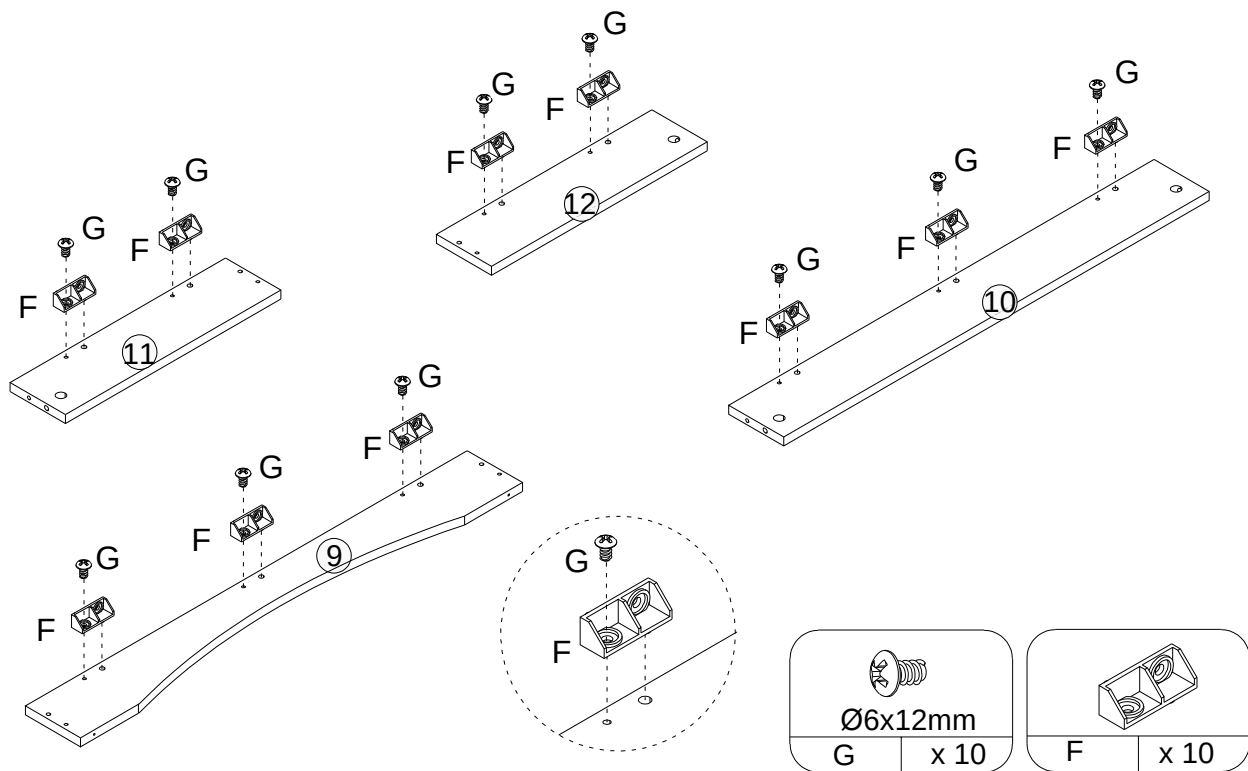


STEP 10


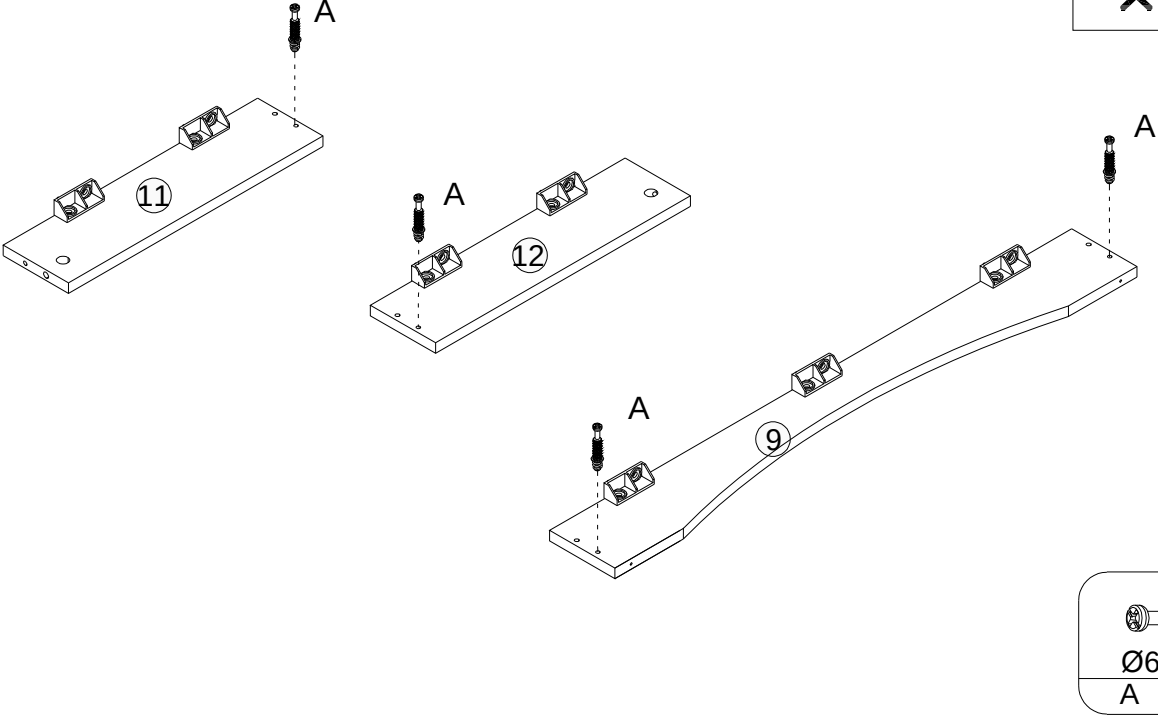


STEP 11

PF035


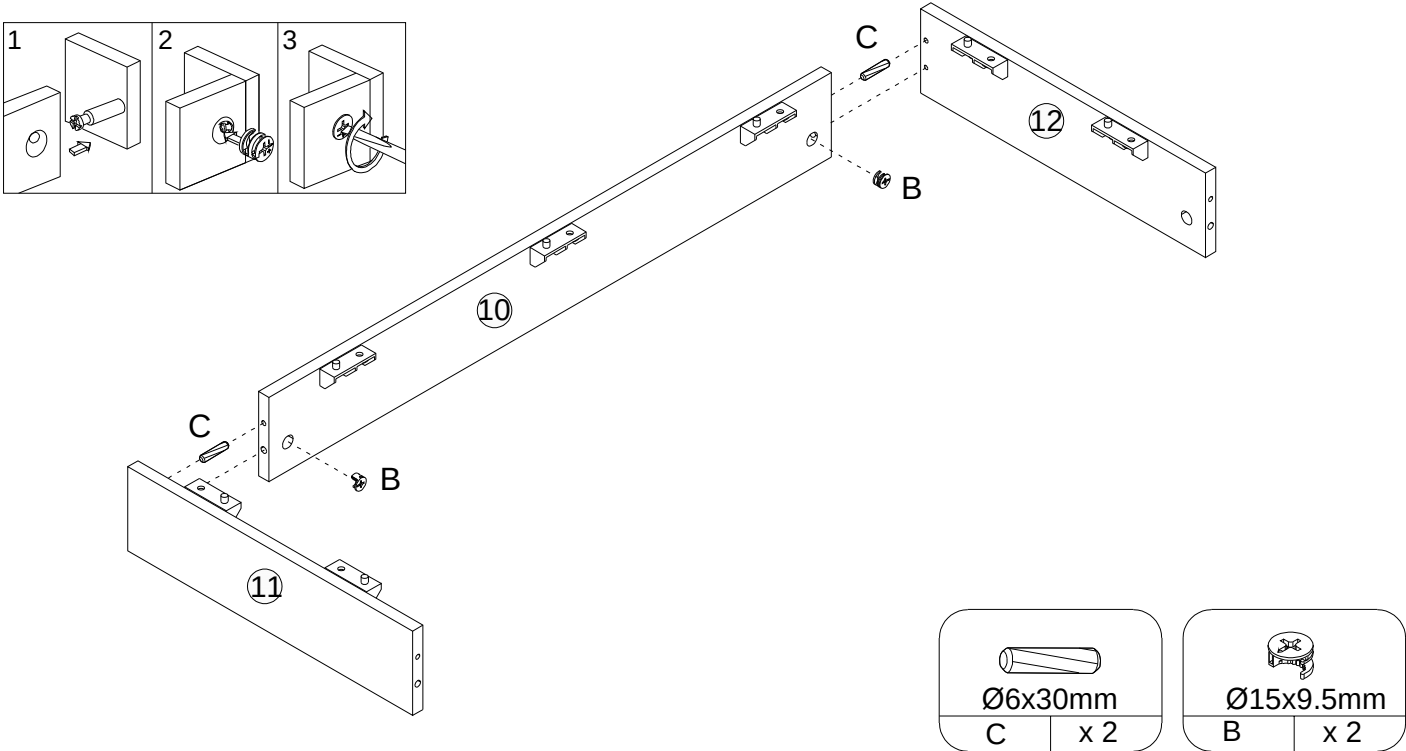


STEP 12

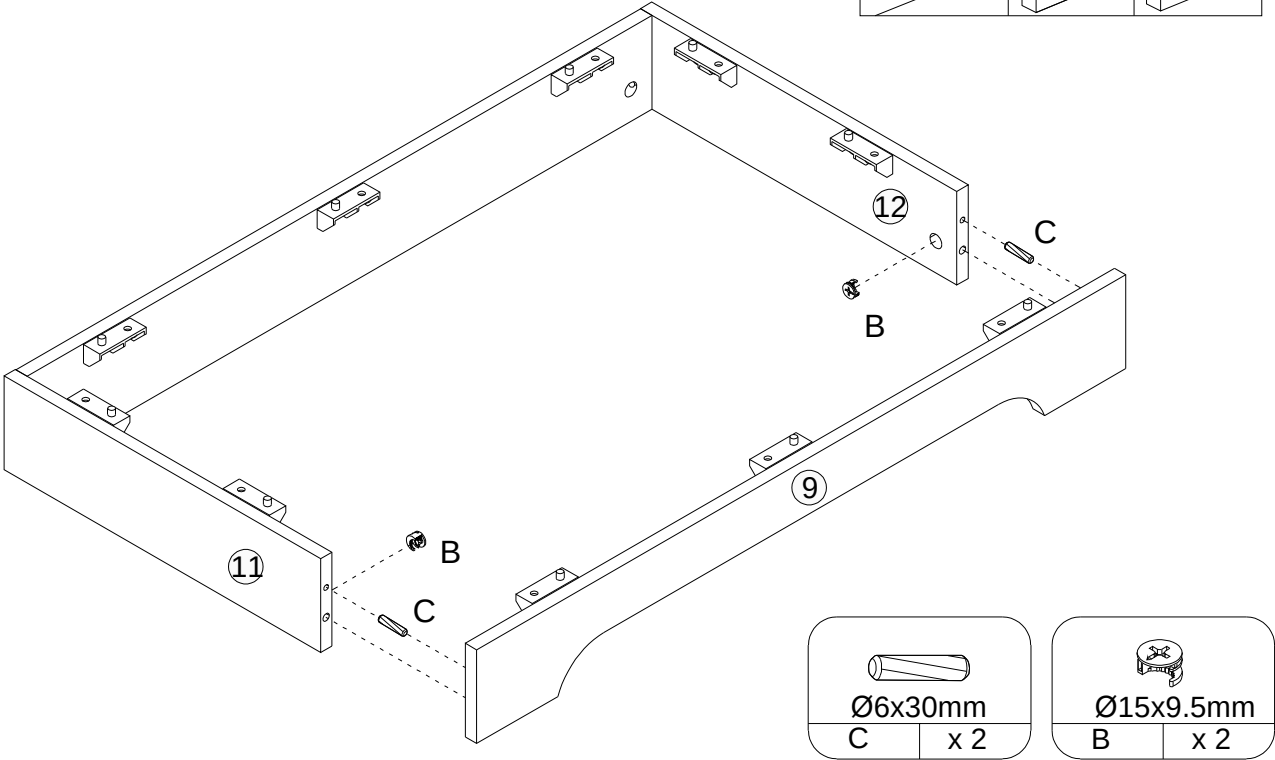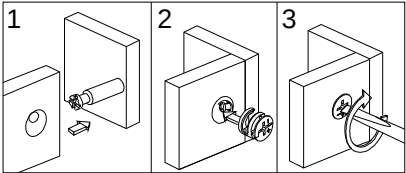



STEP 13

PF035

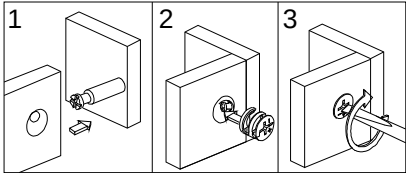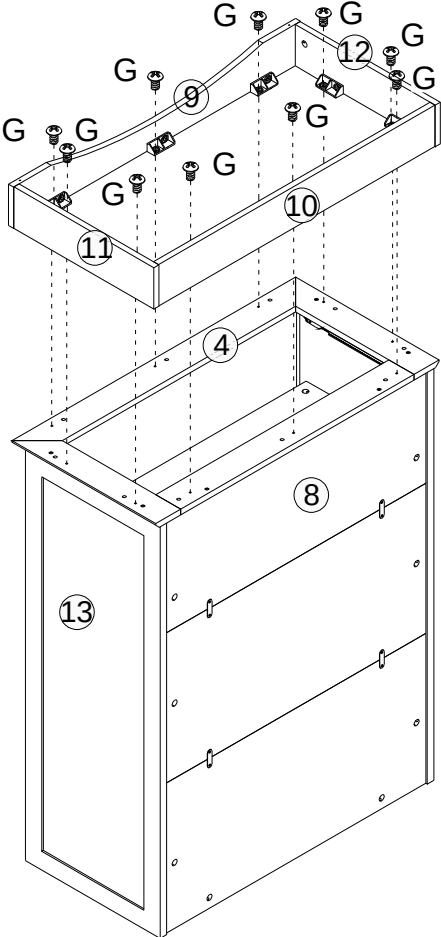


Ø6x12mm
G x 10

STEP 14

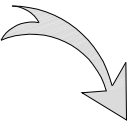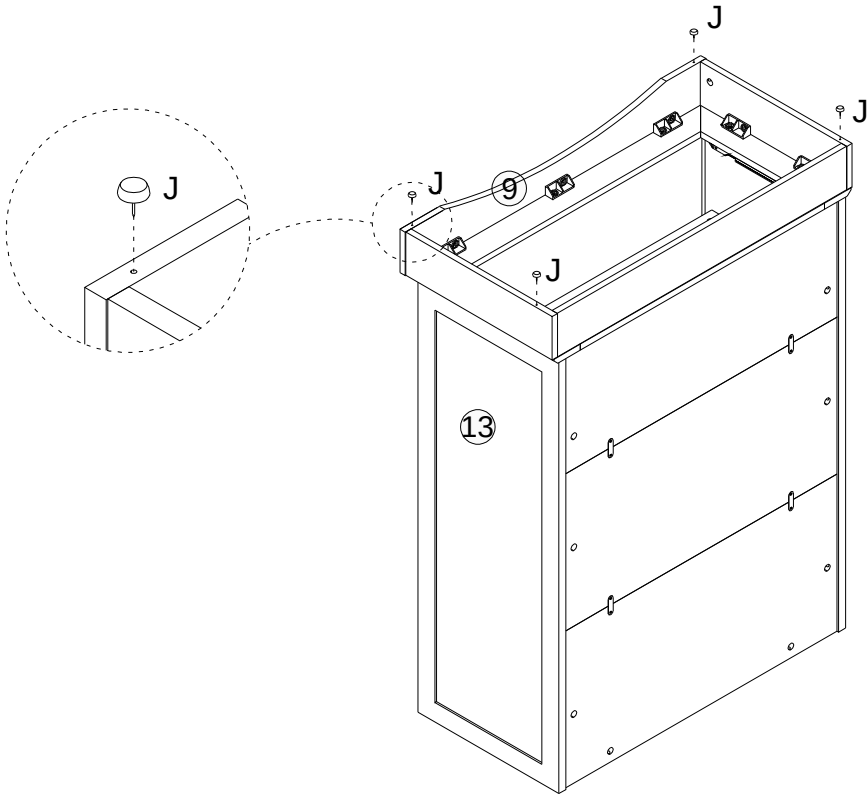


After this step is assembled,
flip it 180 degrees(to next step)



J x 4

STEP 15

PF035



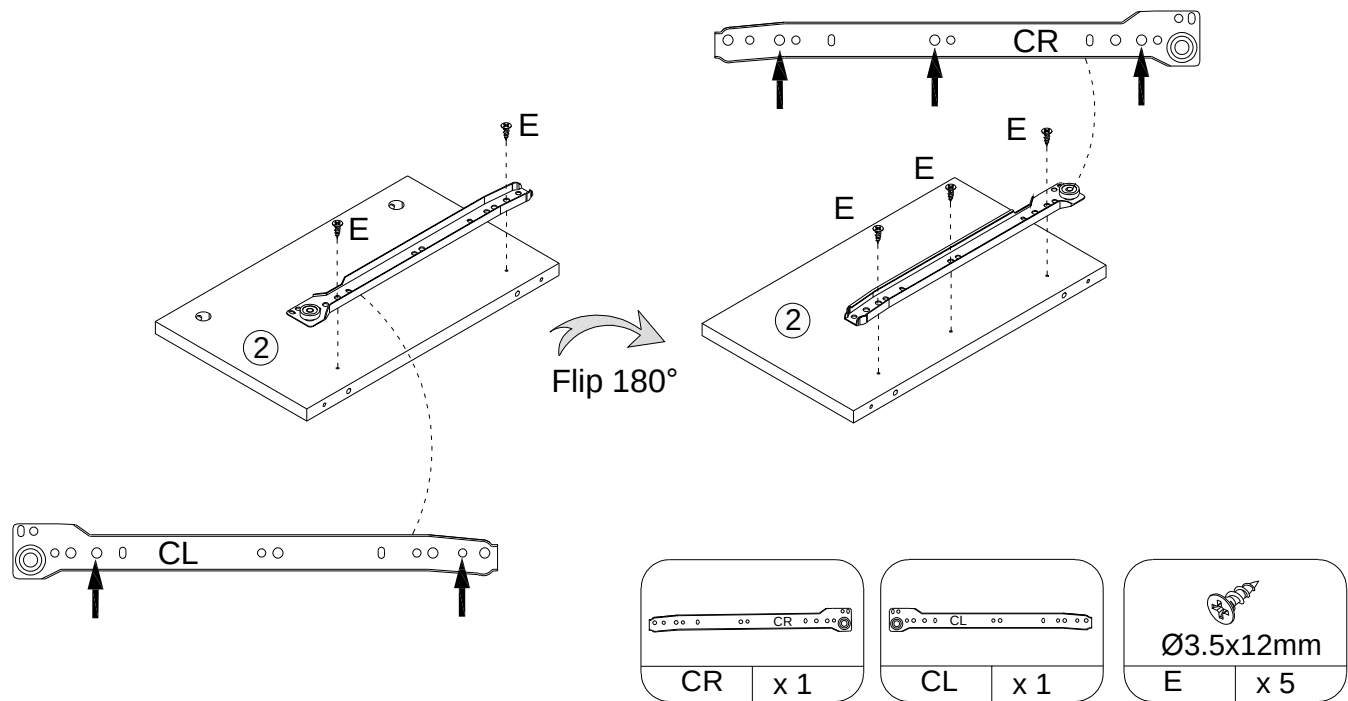


STEP 16



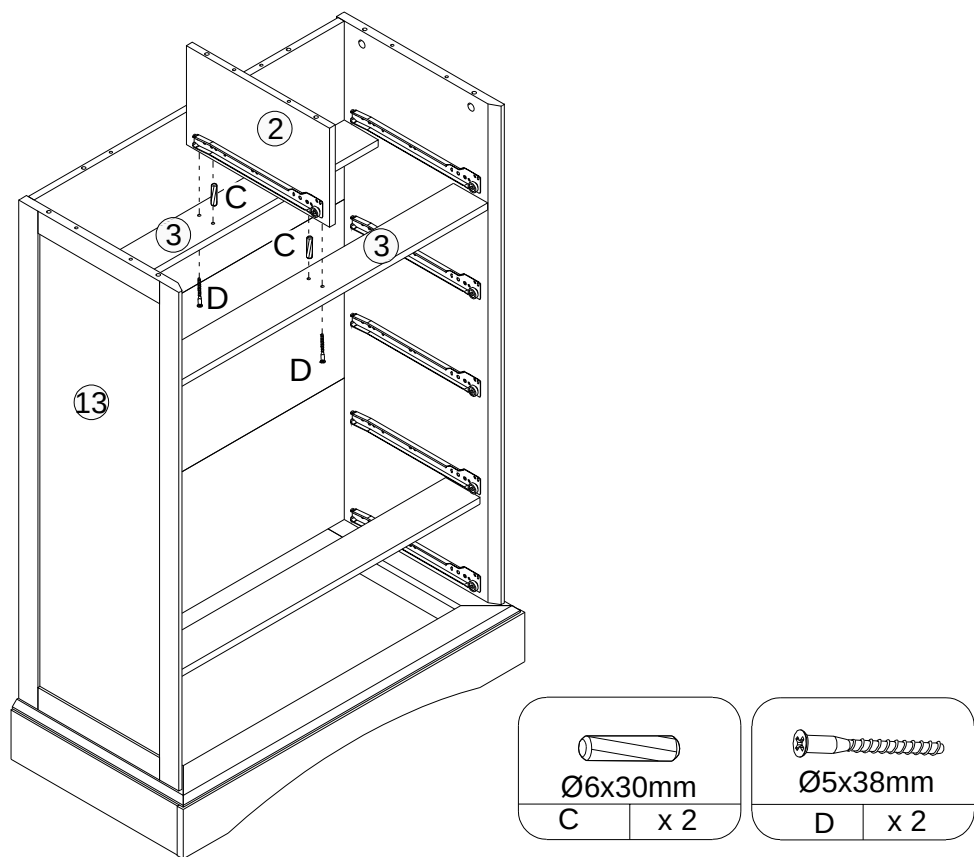


STEP 17

PF035

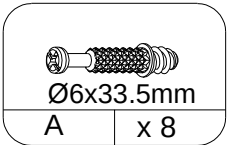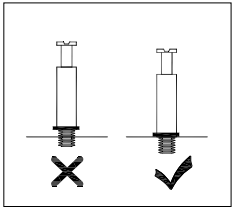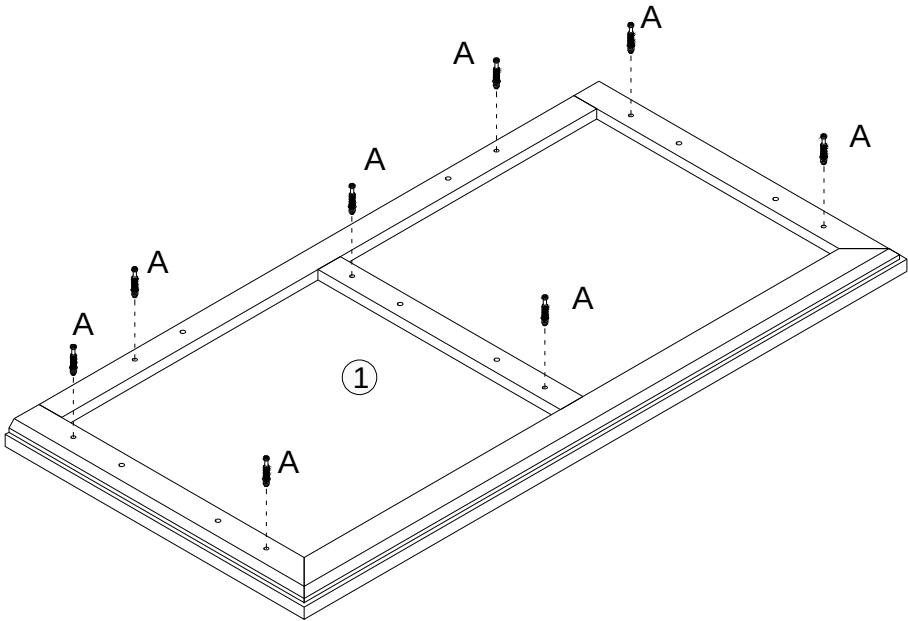


STEP 18

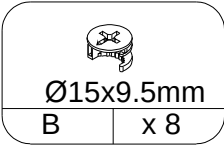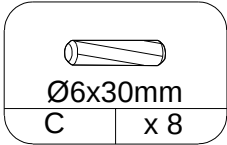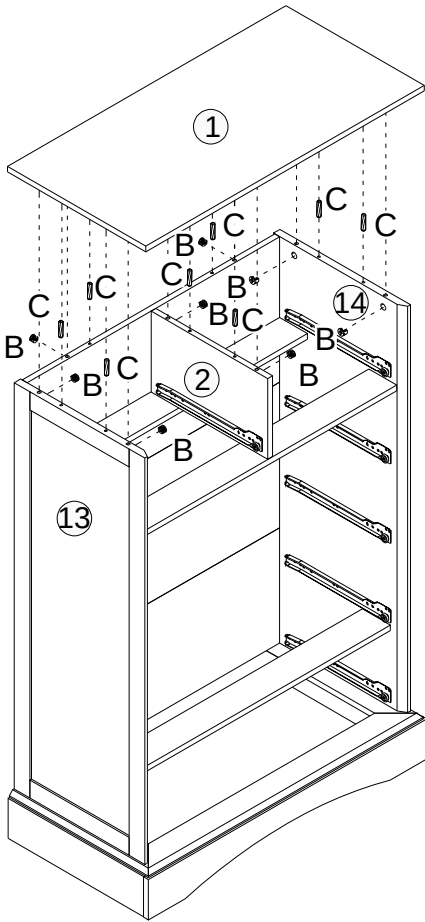


STEP 19

PF035

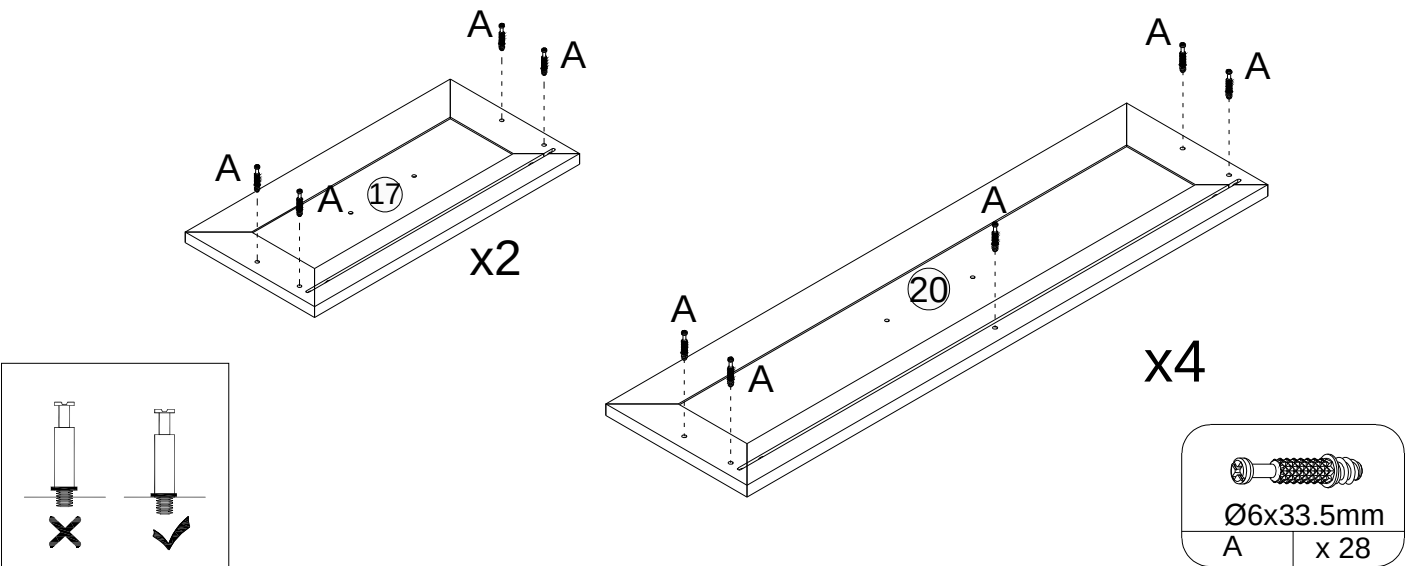


STEP 20




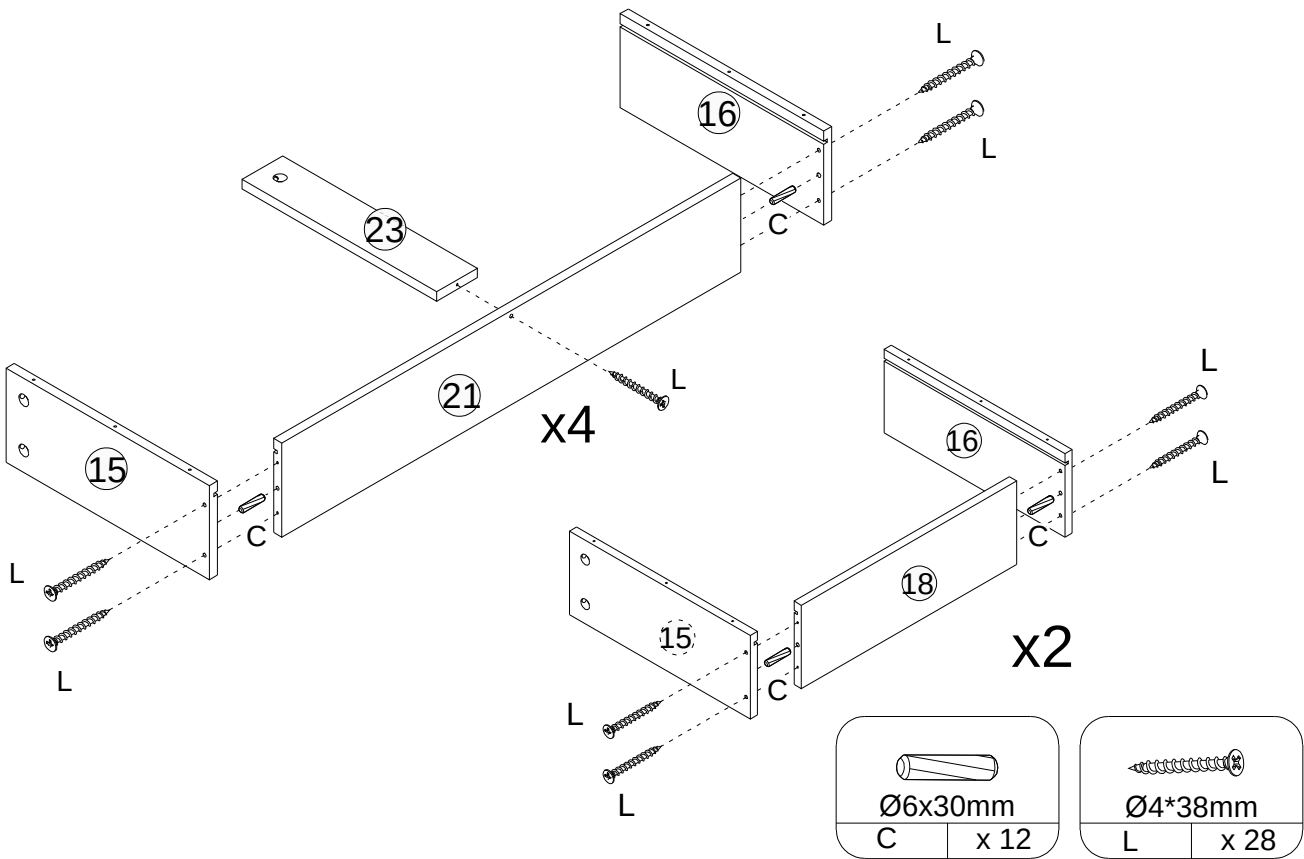


STEP 21


PF035


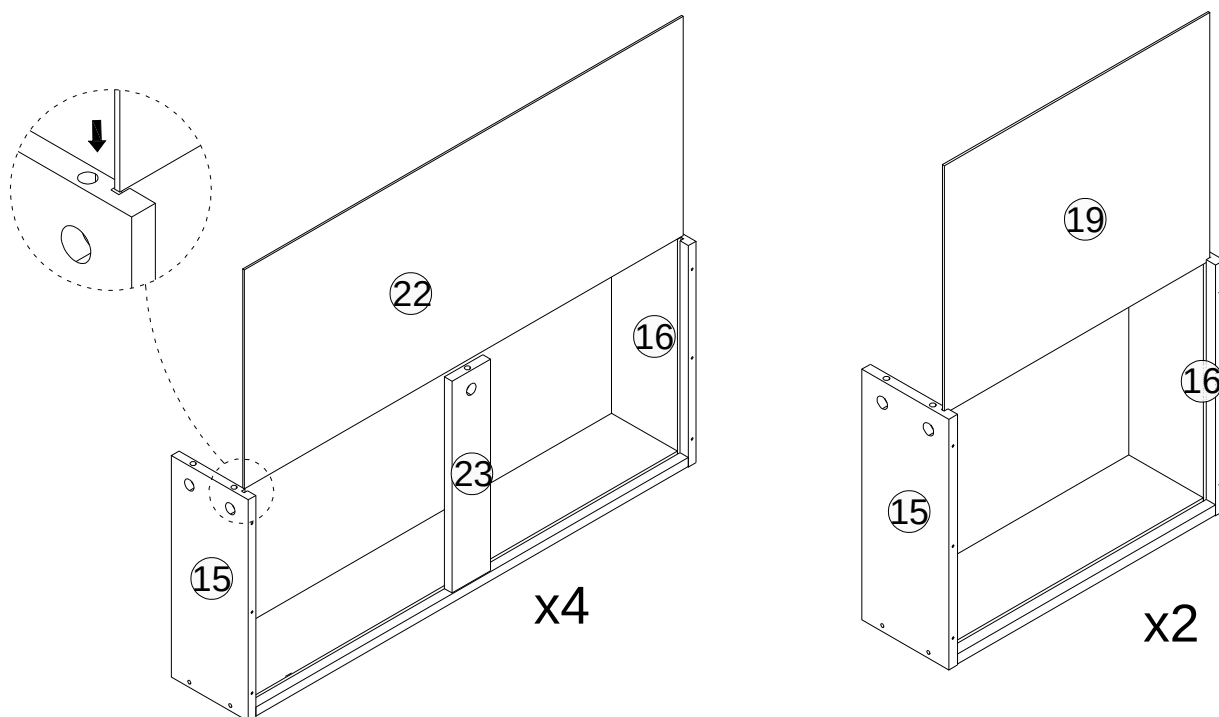


STEP 22

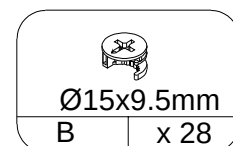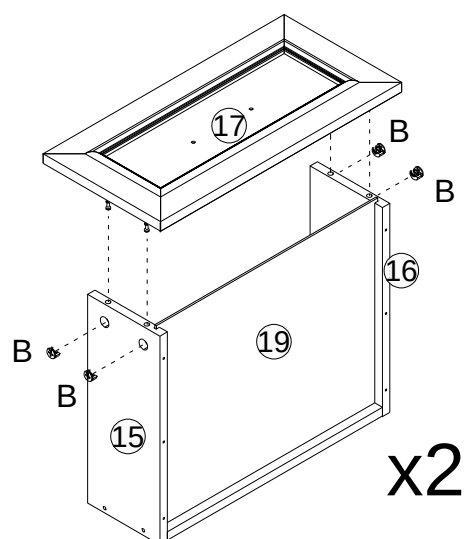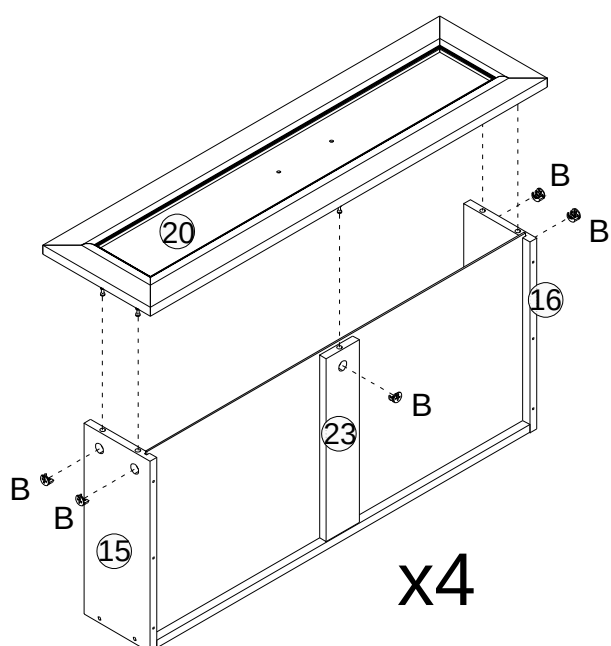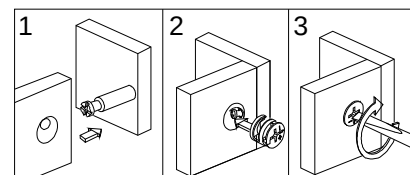


Ø15x9.5mm
B x 28

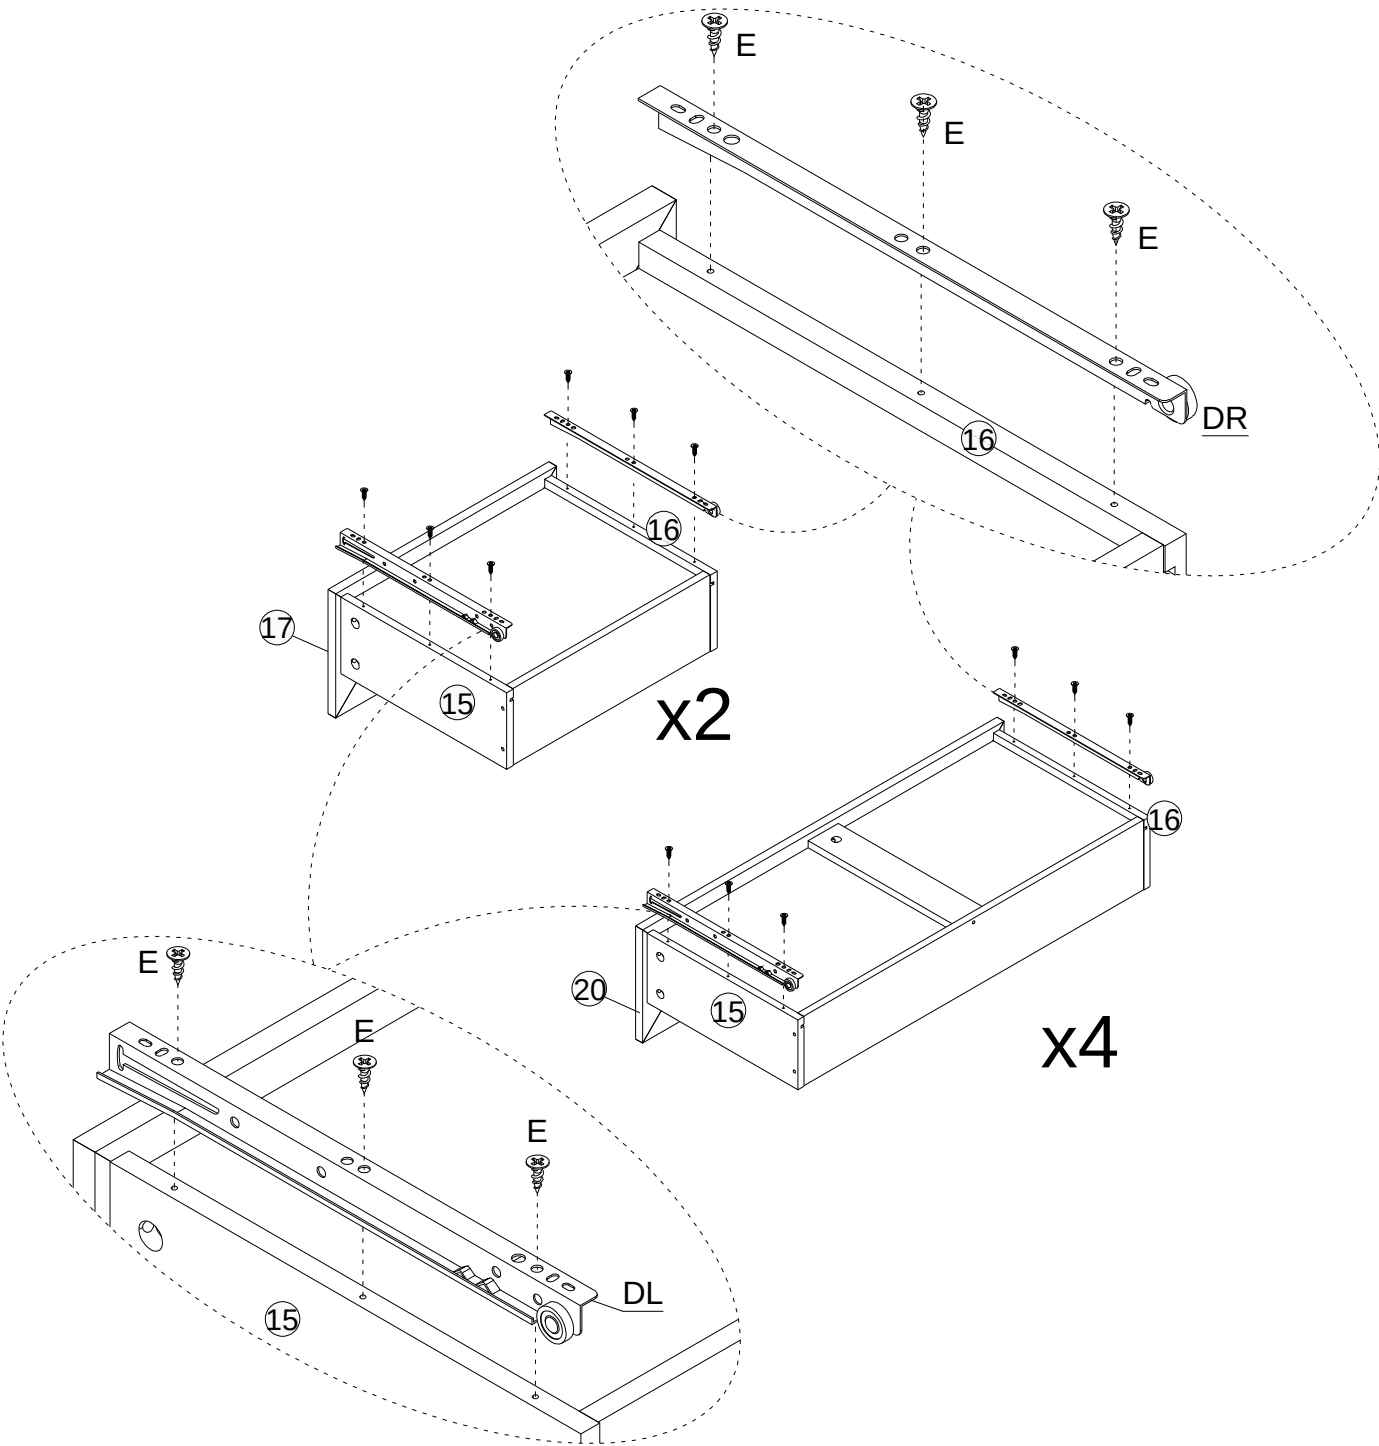


					
Ø3.5x12mm					
E	x 36	DR	x 6	DL	x 6

STEP 24




PF035

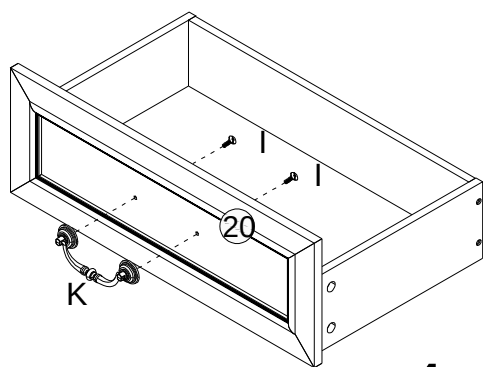


x4

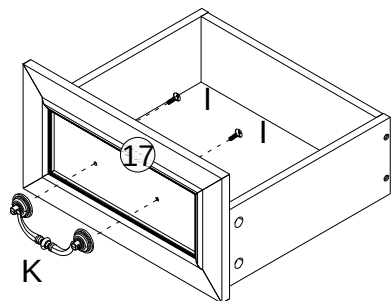


x2

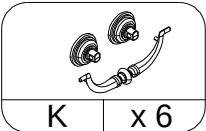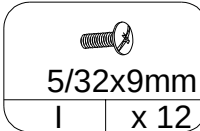
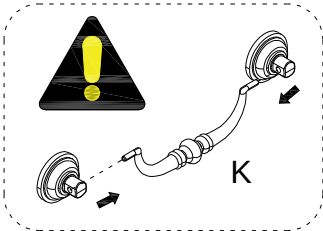




Cabinet Slide arms


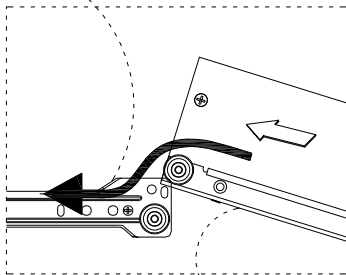


Drawer Slide brackets

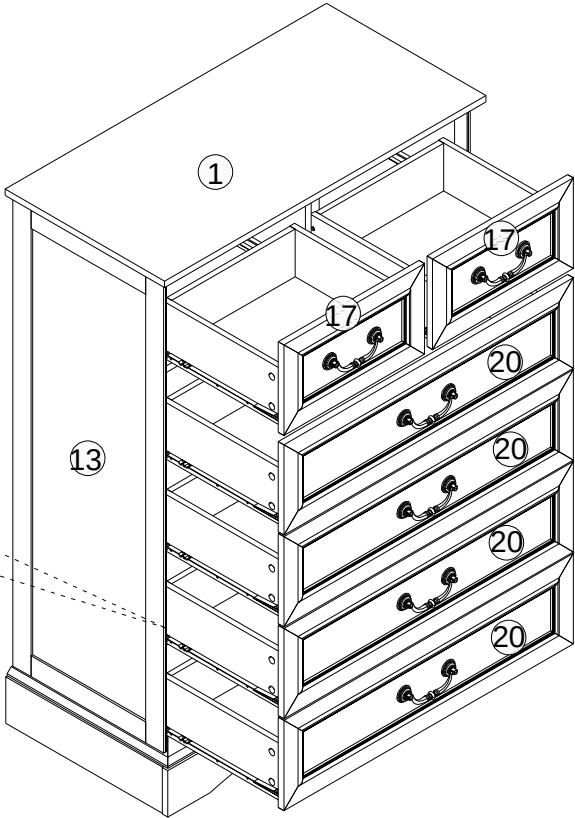

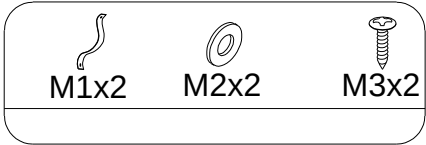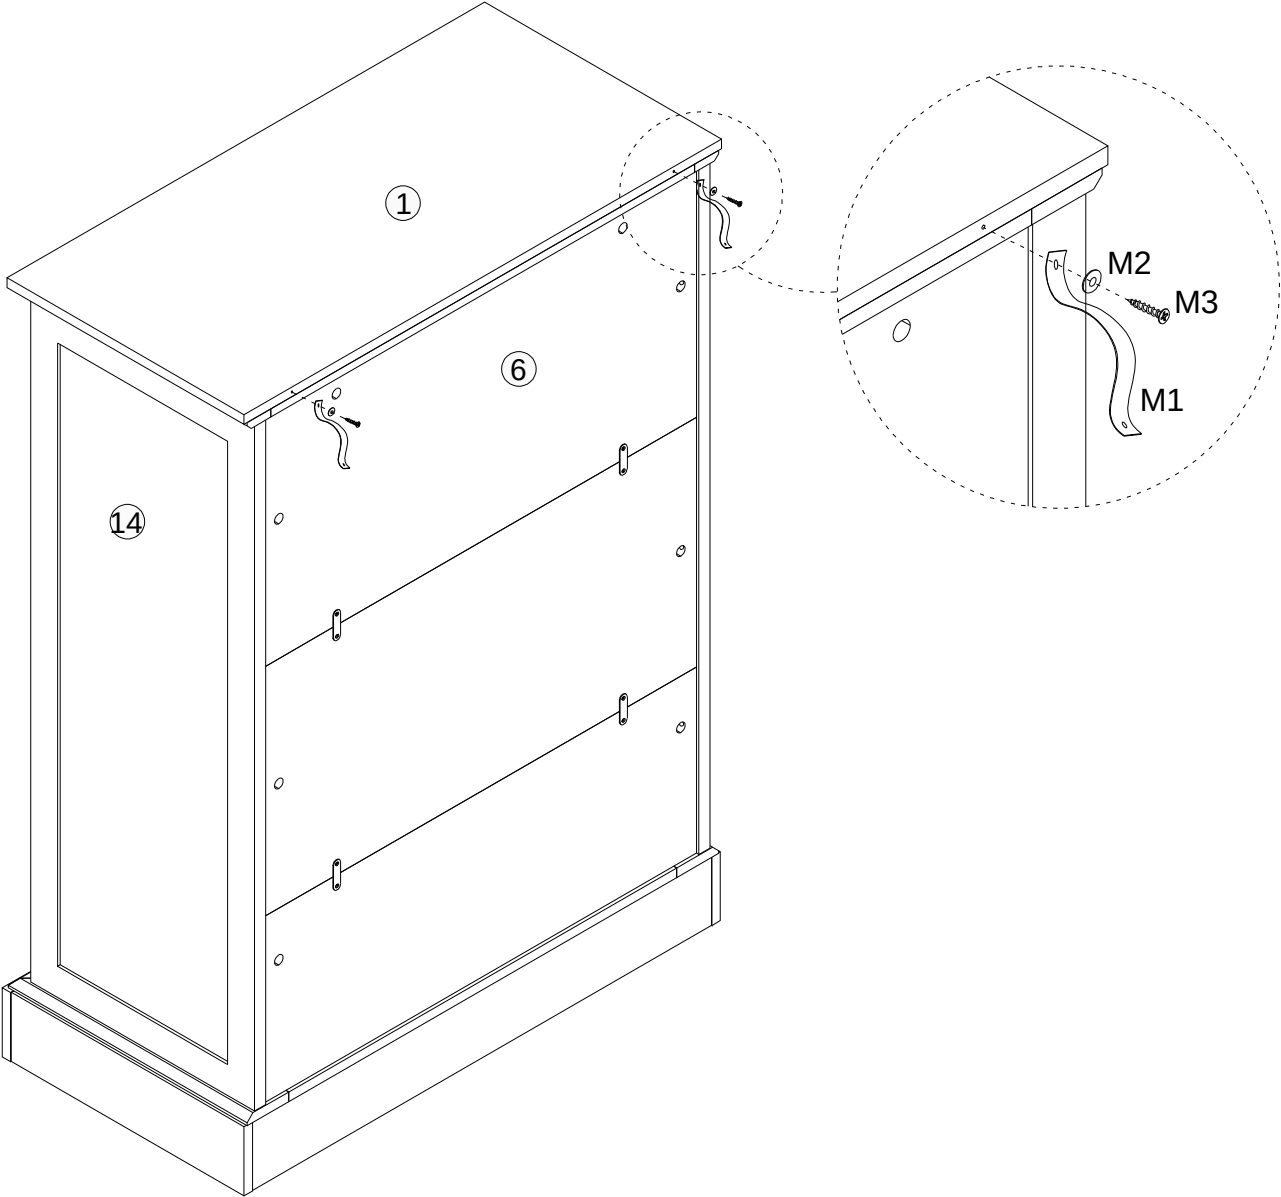

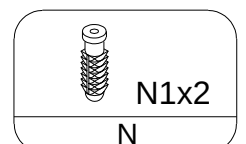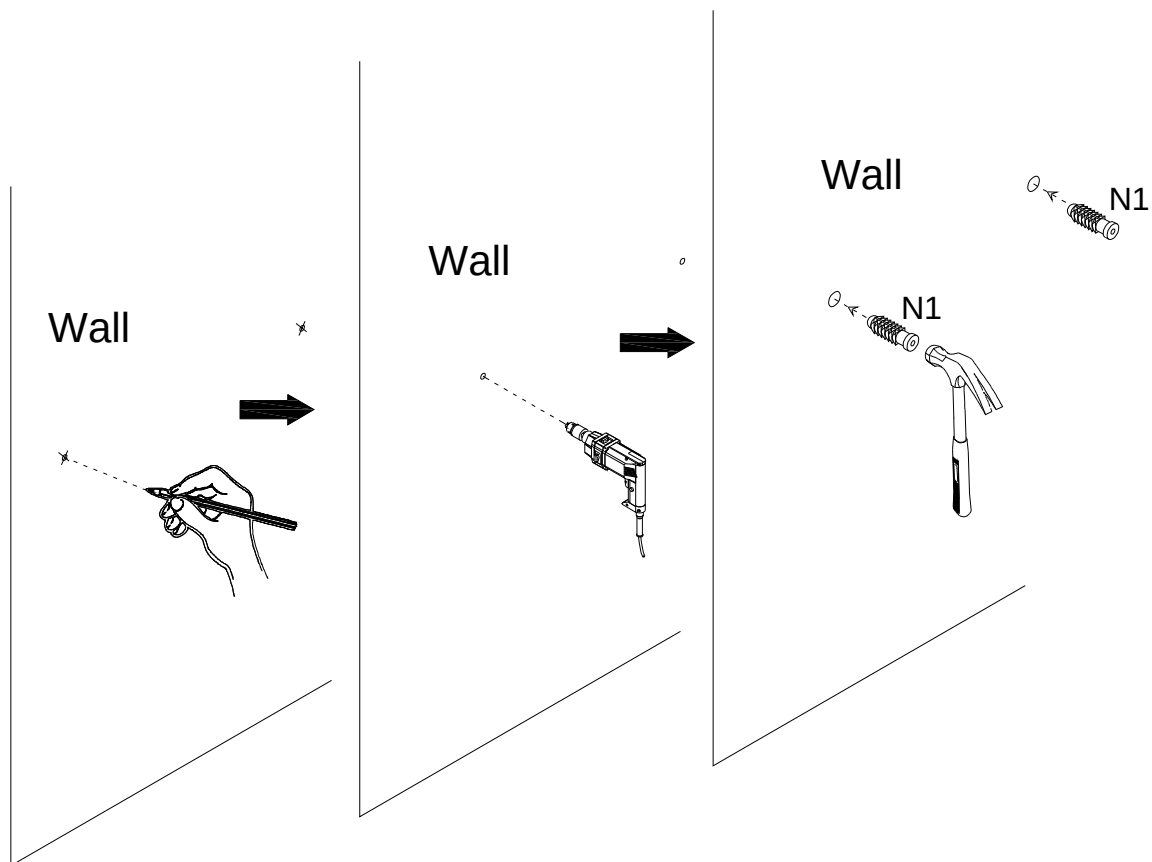

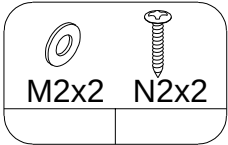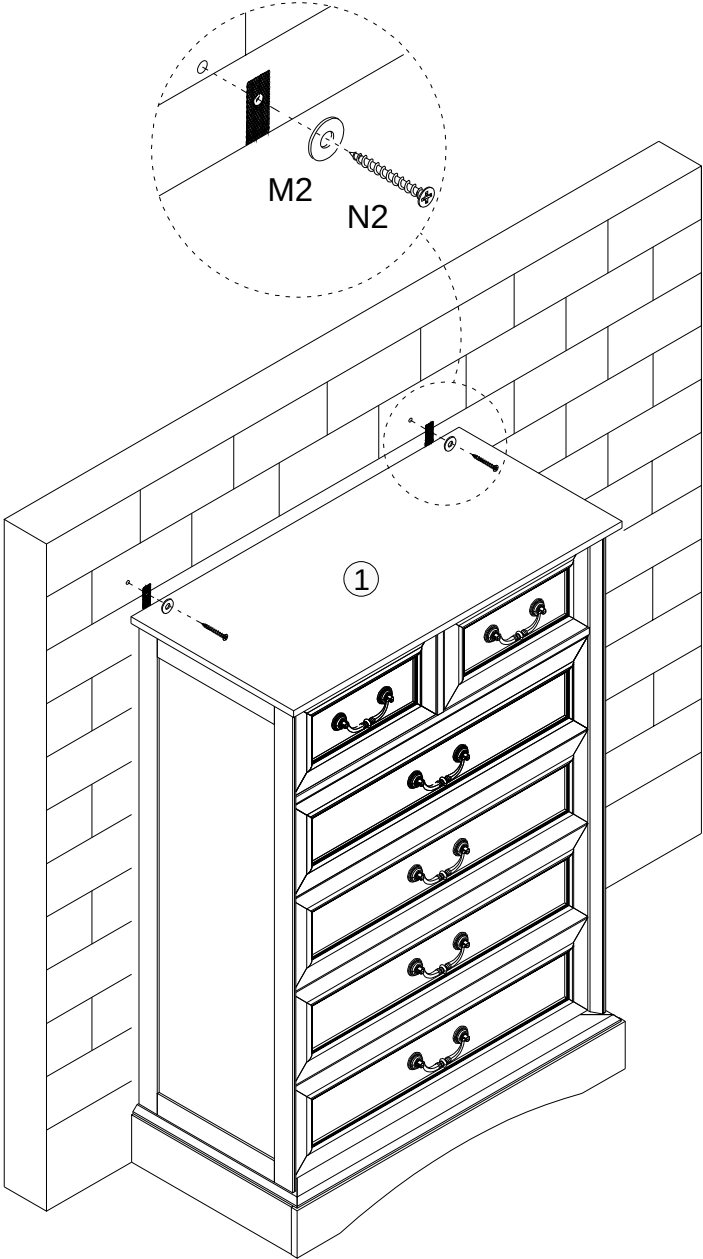

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly
- Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

- Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
- Small amount of mild soap can be used if necessary
- Dry the surface immediately after cleaning.

⚠ DO NOT use bleach or alcohol detergent to clean the surface.

⚠ DO NOT apply wood treatment on parts made with MDF and PB.

Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.

Make sure to dry the furniture immediately after cleaning