


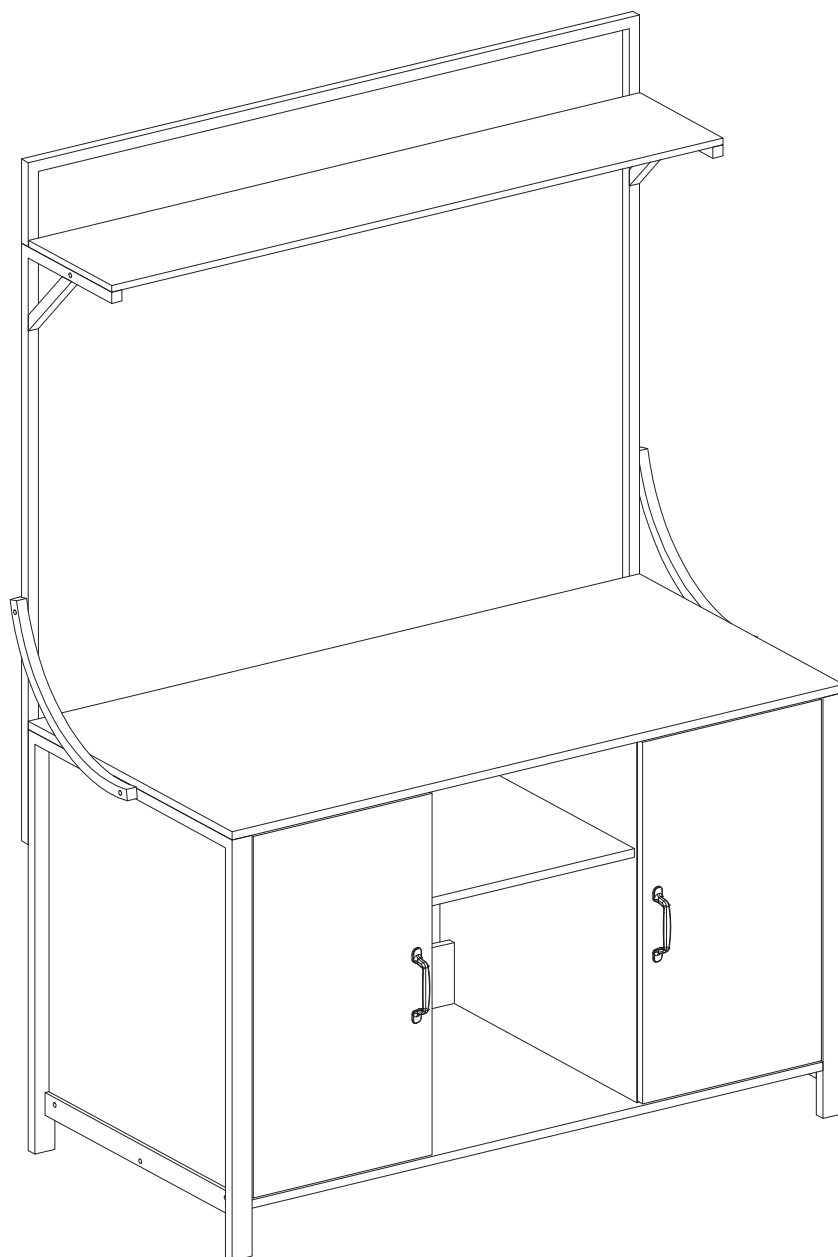


Assembly Instructions

PET788






















We come with the necessary tools for assembly
but for faster assembly, a power drill is recommended





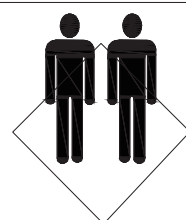



ASSEMBLED BY 2ADULTS






Parts List

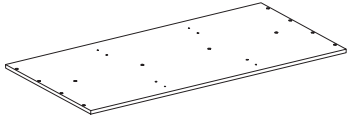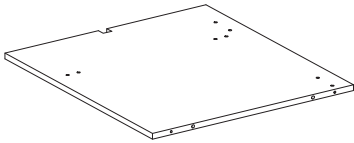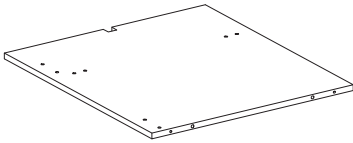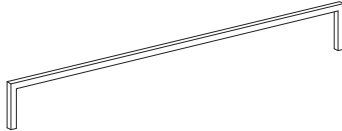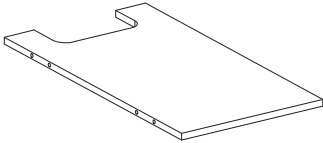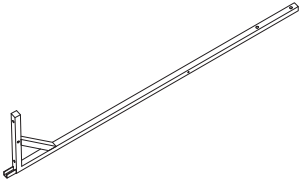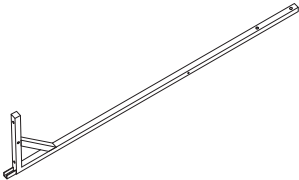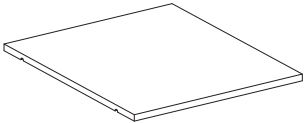ITEM	PART	QTY	ITEM	PART	QTY
①		1PC	⑪		1PC
②		1PC	⑫		2PCS
③	  3a3b	1PC	⑬		2PCS
④	  4a4b	1PC	⑭		1PC
⑤		1PC	⑮		1PC
⑥		1PC	⑯		1PC
⑦		2PCS	⑰		1PCS
⑧		1PC	⑱		1PCS
⑨		2PCS	⑲		2PCS
⑩		2PCS			

Hardware List

ITEM	PART	QTY	ITEM	PART	QTY
A		12+1PC	J		24+2PCS
B		12+1PC	K		2PCS
C		20+2PCS	L		4PCS
D		30+2PCS	M		8+1PCS
E		29+2PCS	N		2PCS
F		1PC	O		1PC
G		2PCS	P		4+1PCS
H		4PCS	Q		1PC
I		4PCS	R		6+1PCS

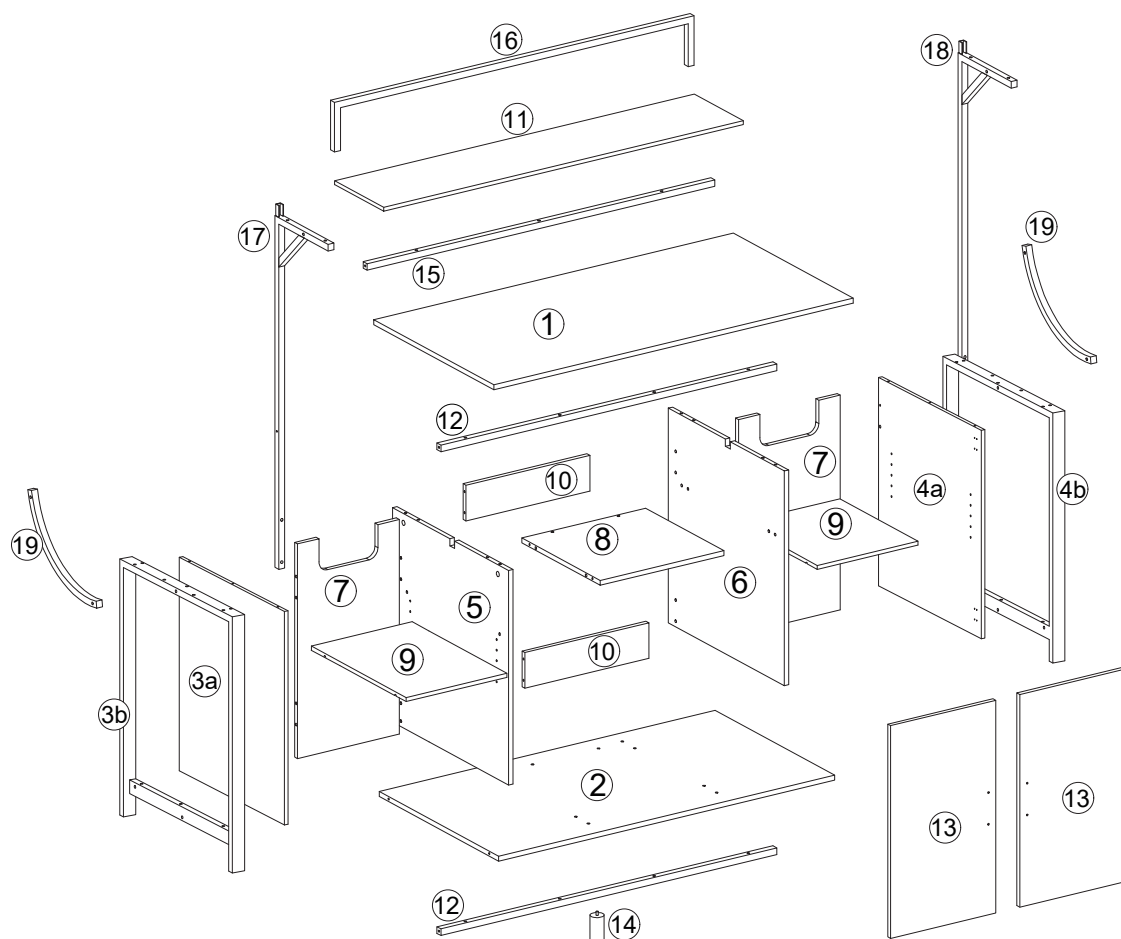

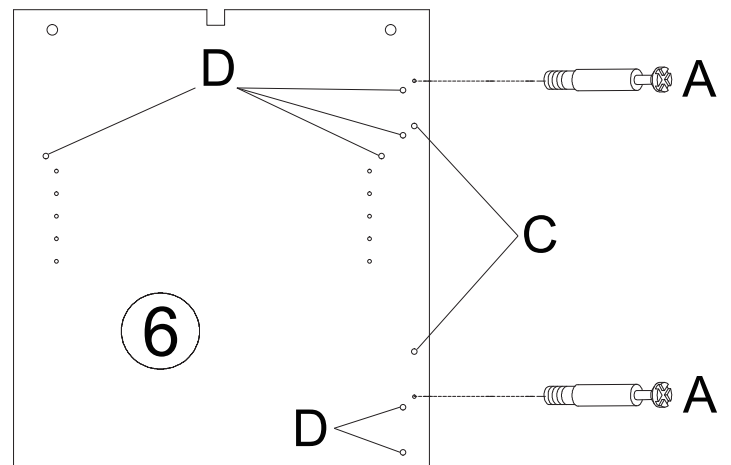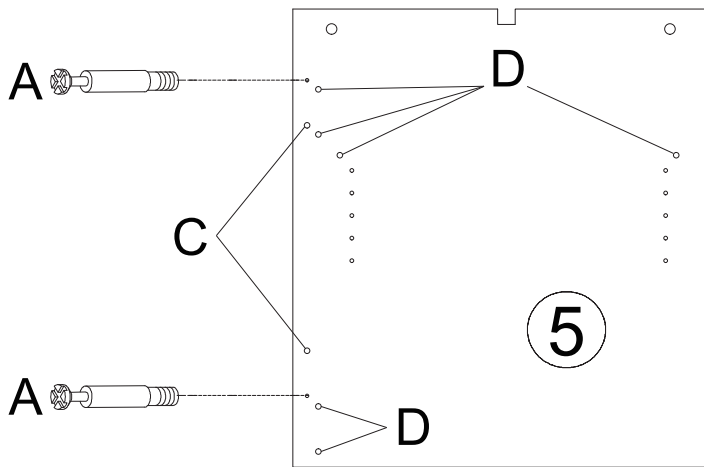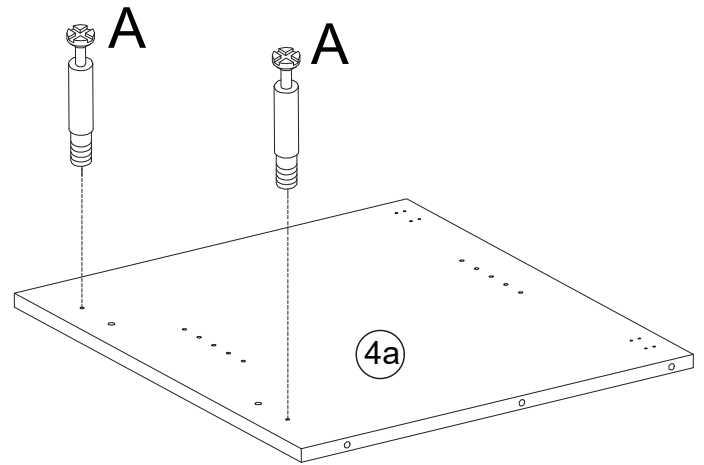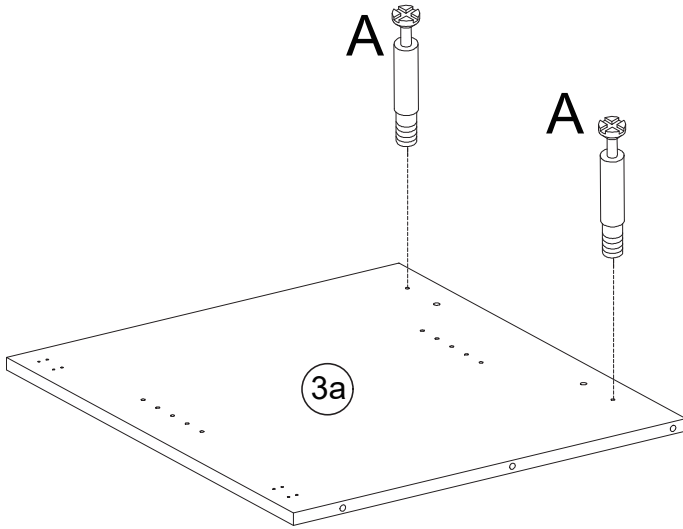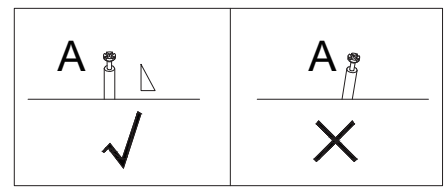


Install Cam Screws A*4 on Part #3a and Part #4a as shown.

Install Cam Screws A*4 on Part #5 and Part #6 as shown.

Parts #5& #6 have many holes. To avoid misalignment, we have provided a diagram guide for the type of screw to go in each hole (assembly will follow in next steps). Unmarked holes are for adjustable shelves.



1

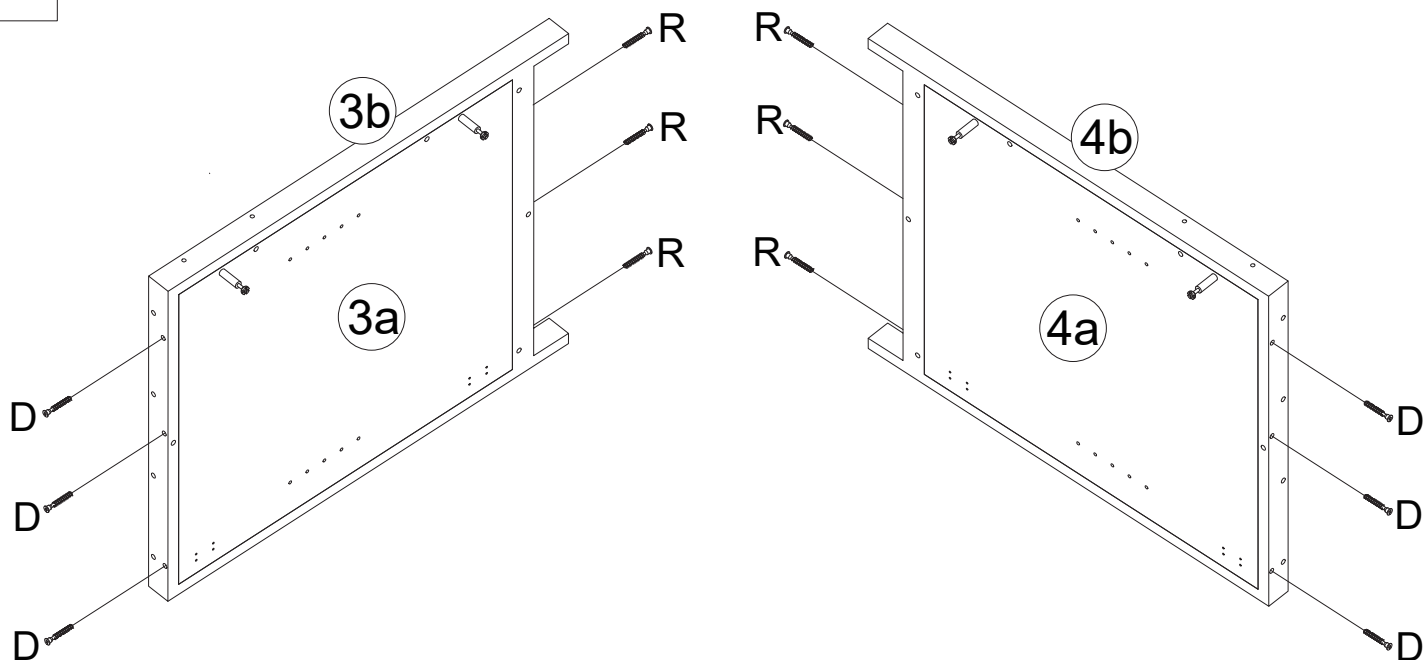


Install Part #3a to Part #3b with screws R*4 and D*7 as shown.
Same way to install Part #4a to Part #4b with screws R*4 and D*7 as shown.




2

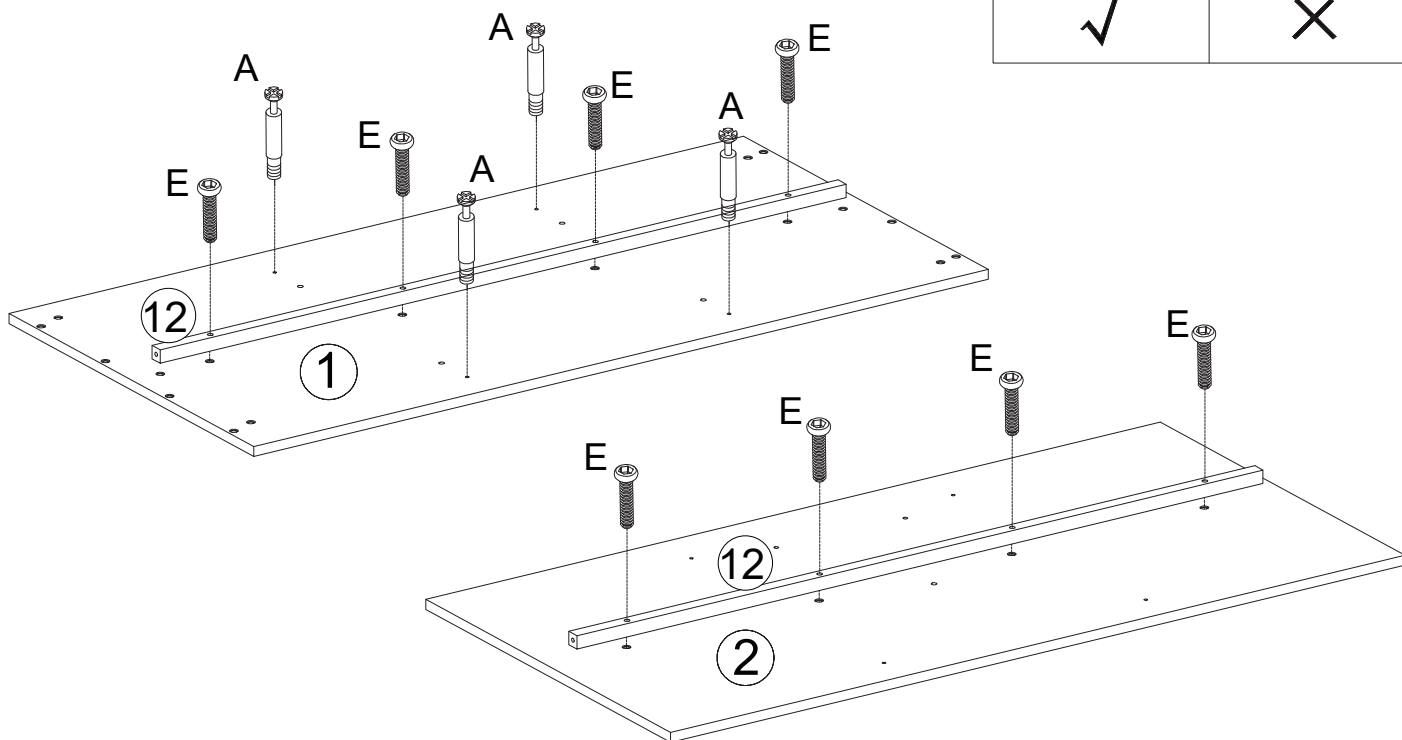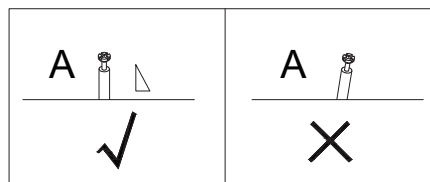

Install Cam Screws A*4 on Part #1. Tighten straight with provided tool Q
Install Rails Part #12 on Part #1 and Part #2 with screws E*4 each.



3

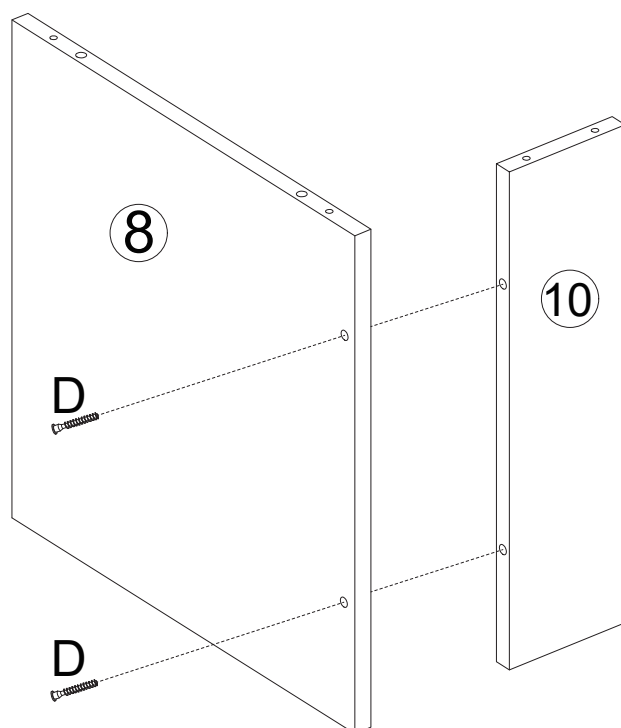

Attach Part #10 to Part #8 with screw D*2




Ox1



Dx2

4

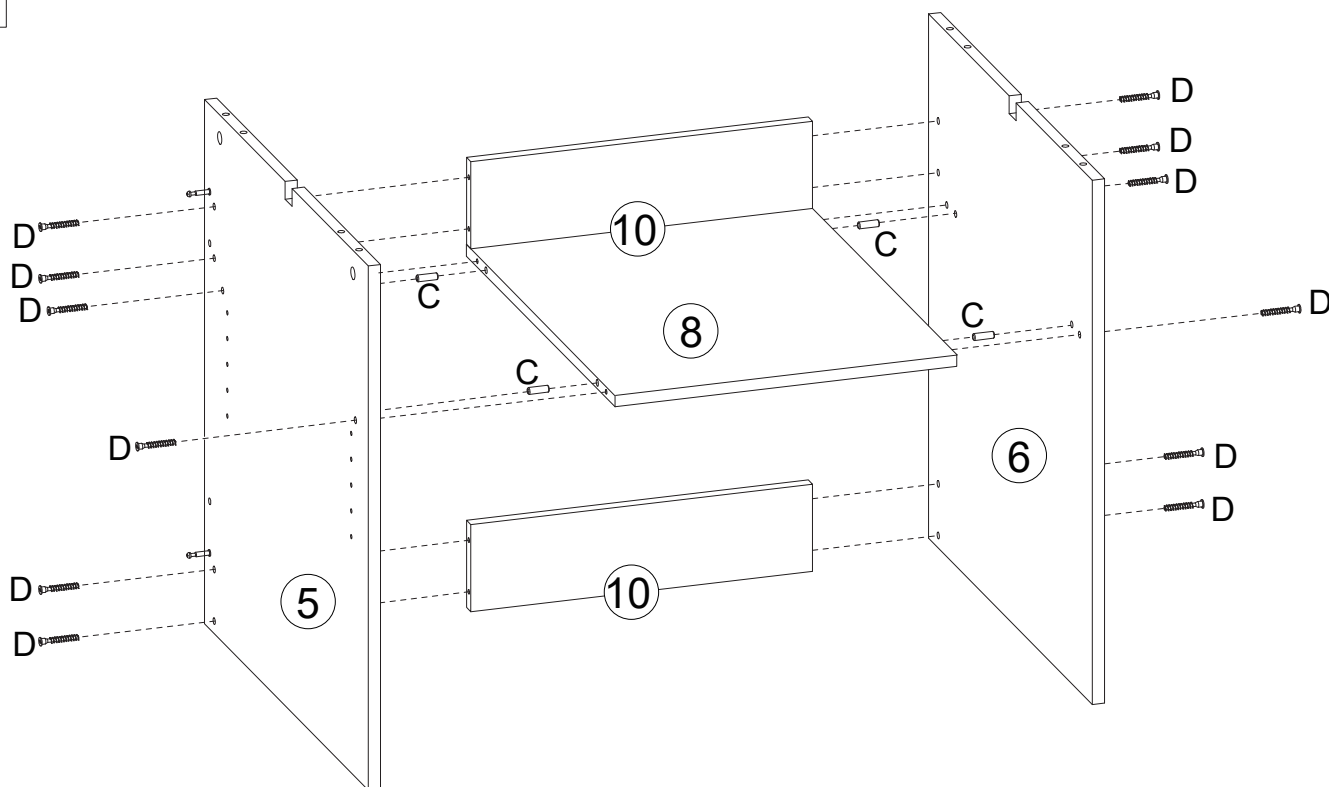

Attach part #5 and part #6 with part #10 and assembled part #8&10 with Dowel C*4 and D*12 as shown.
If you're not sure of the holes, pls refer to step 2 diagram.



Ox1






Dx12



Cx4

5


Backside View

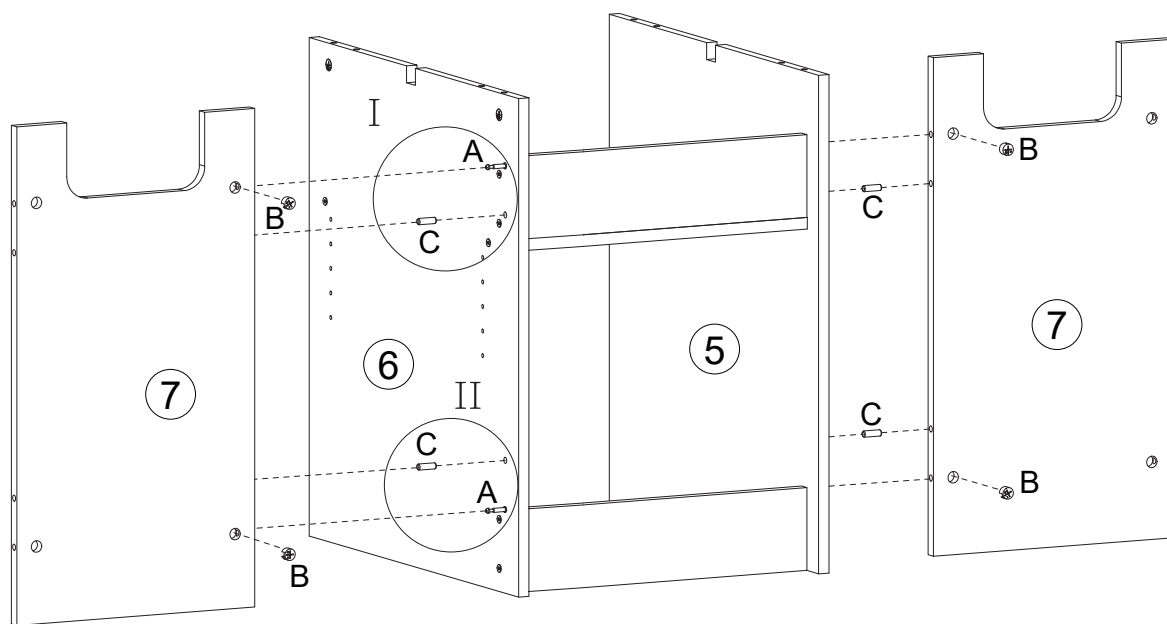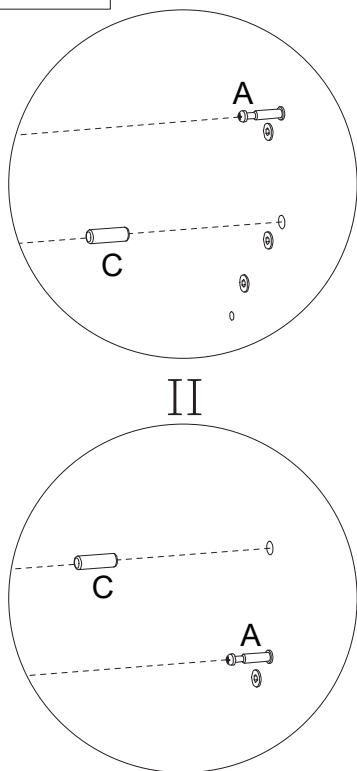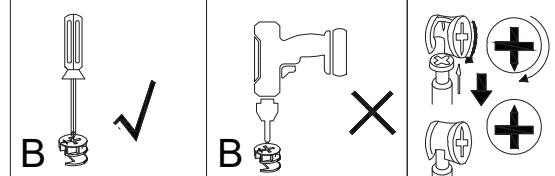

Put B*4 cam nuts into two back panels of part #7 . Put C*4 dowels on Part #5 and Part #6 as shown. Attach two back panels of Part #7 to the assembled unit as shown and tighten connector nuts B. Diagram is provided on how to properly secure cam nut connections. Turn clockwise until locked. Do not overtighten, use a hand screwdriver, not a drill.




6

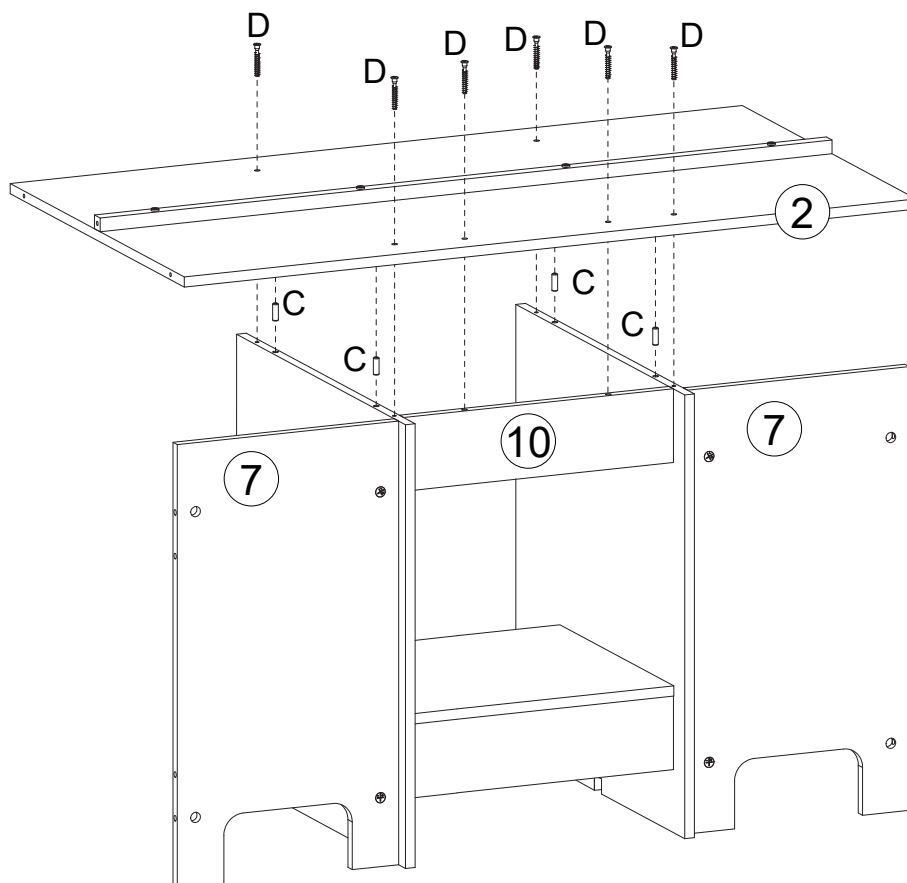


Put the assembled unit upside down. Attach bottom board part #2 on the assembled unit with Dowel C*4 and Screws D*6 as shown.



7

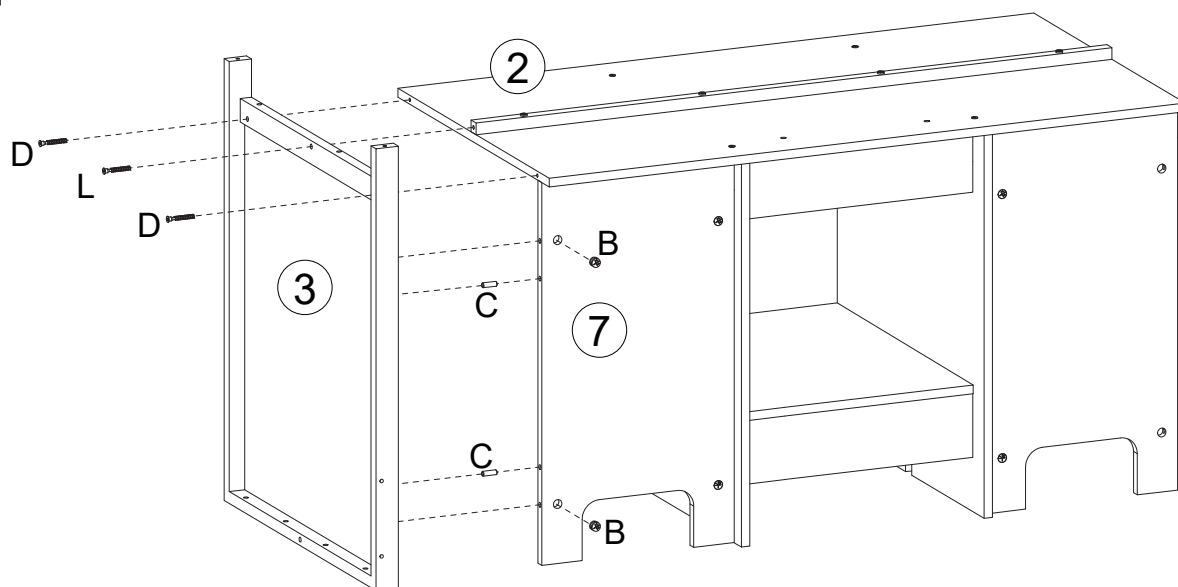


Attach Side panel Part #3 to the assembled unit with connector nuts B*2, Dowel C*2 and screws D*2, L*1. Tighten B with provided tool Q

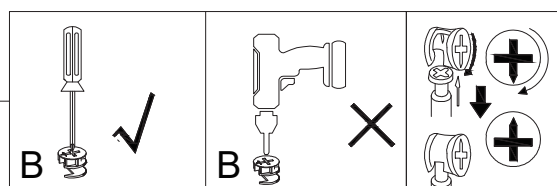

Qx1	Bx2	Lx1
Ox1	Cx2	Dx2


8

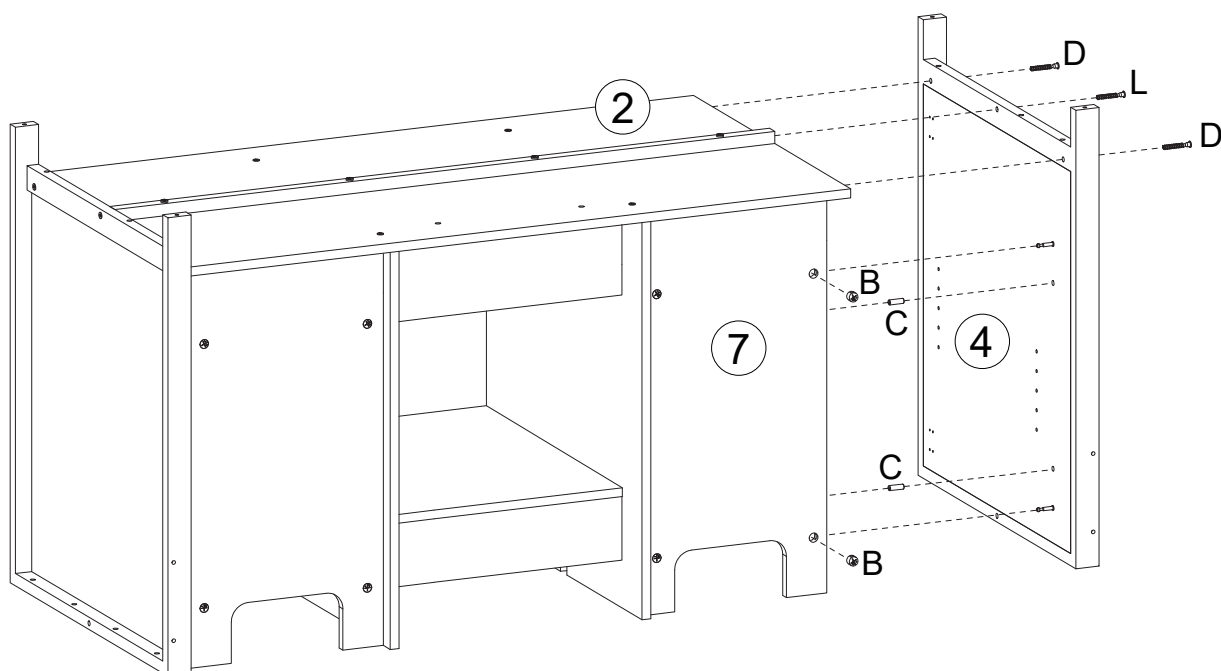

Attach Side panel Part #4 to the assembled unit with connector nuts B*2, Dowel C*2 and screws D*2, L*1. Tighten B with provided tool Q


Qx1	Bx2	Lx1
Ox1	Cx2	Dx2

9

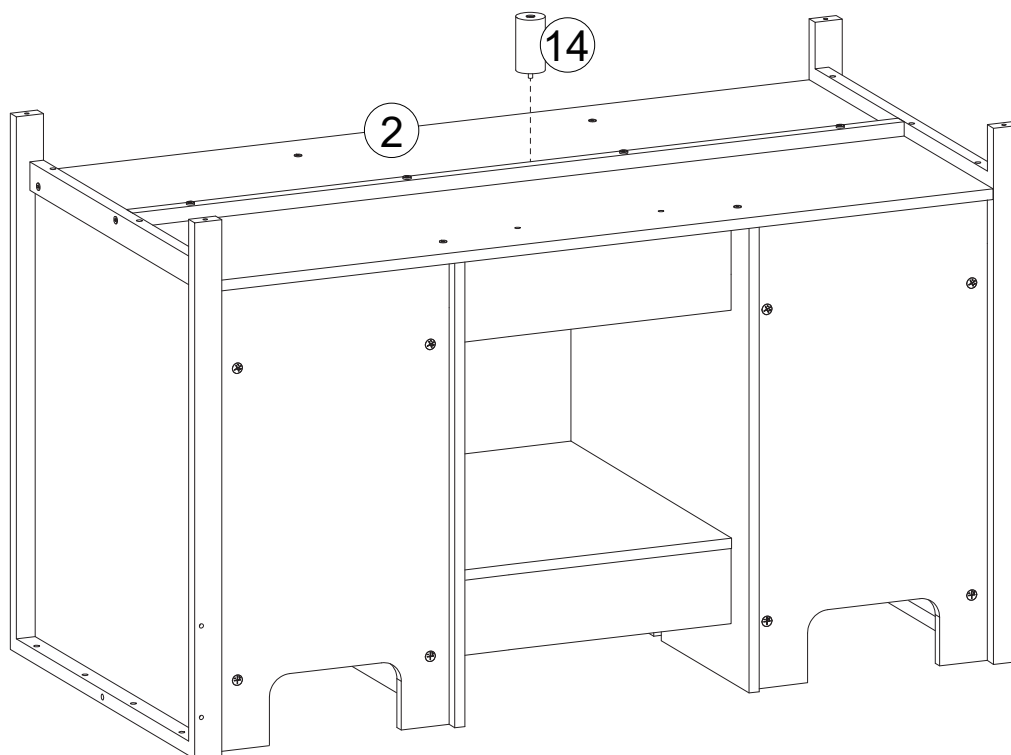

Rotate supporting foot Part #14 into the bottom of Part #2 as shown.

10

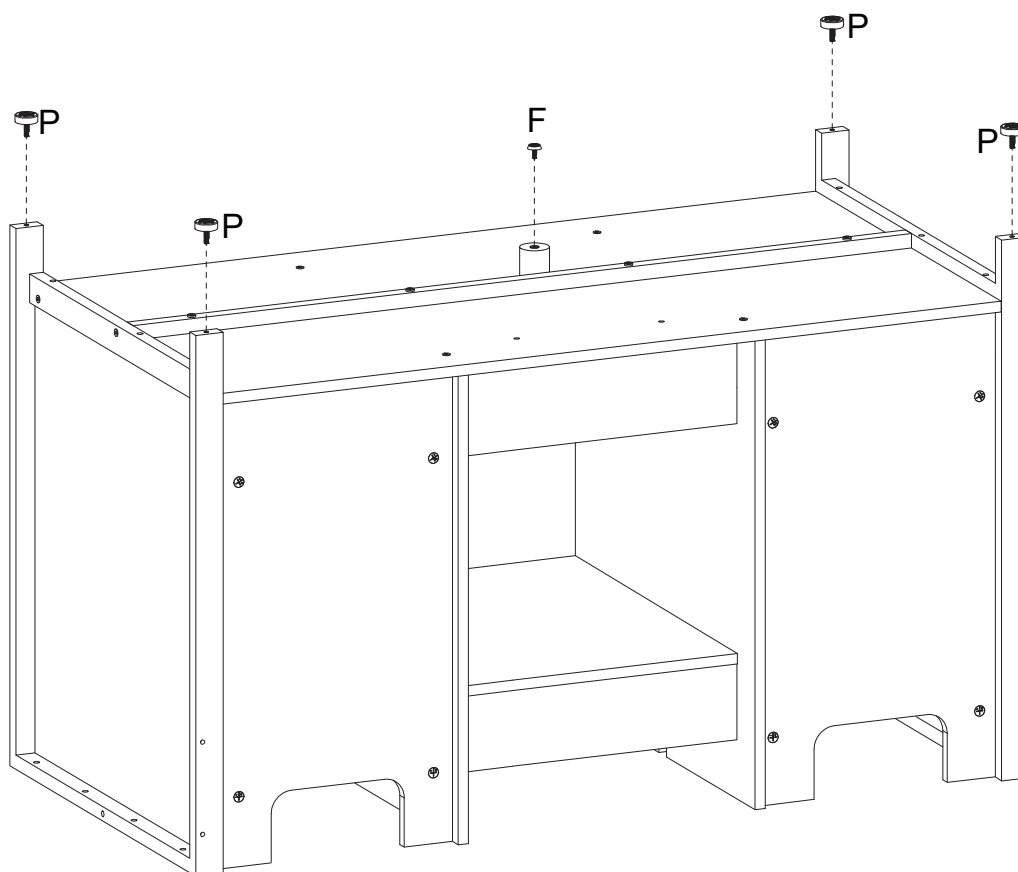

Attach adjustable feet P*4 and F*1 as shown





Px4



Fx1



11

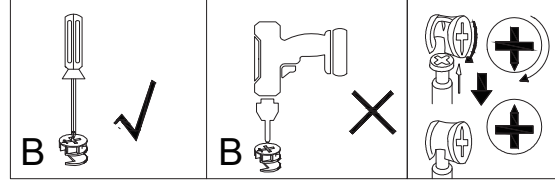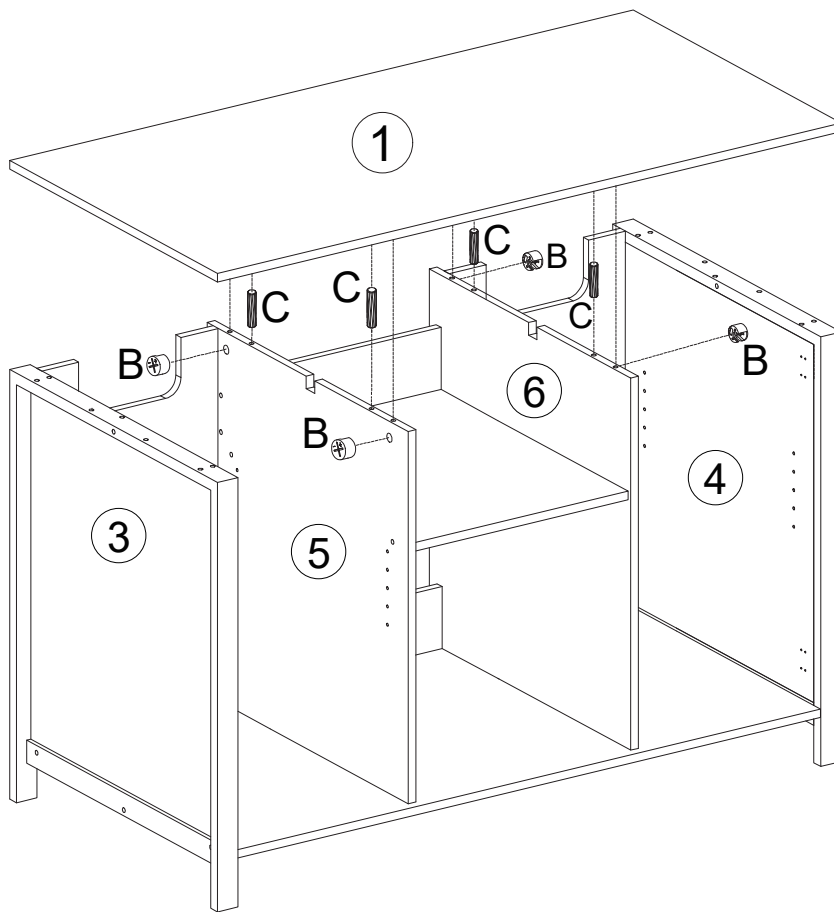


Turn unit back right side up. Attach the desktop part #1 to the assembled unit with B*4 and C*4 as shown (on part #5 and part #6)




12

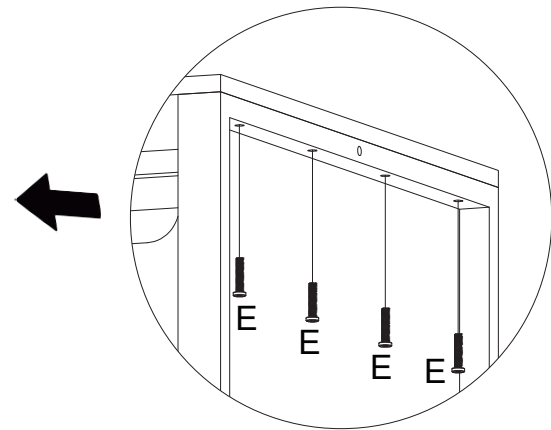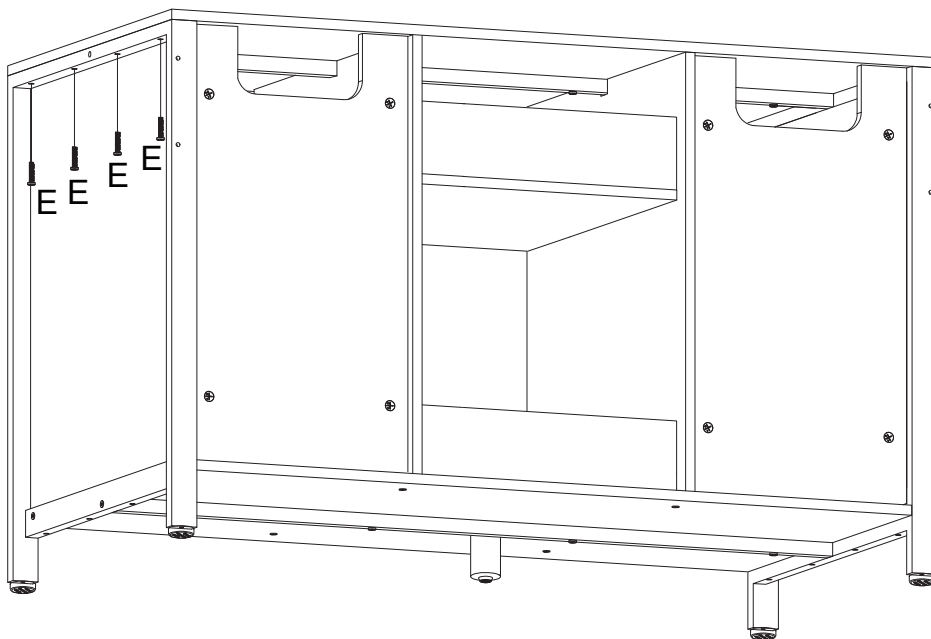

Tighten the tabletop with screws E*8 as shown.




13

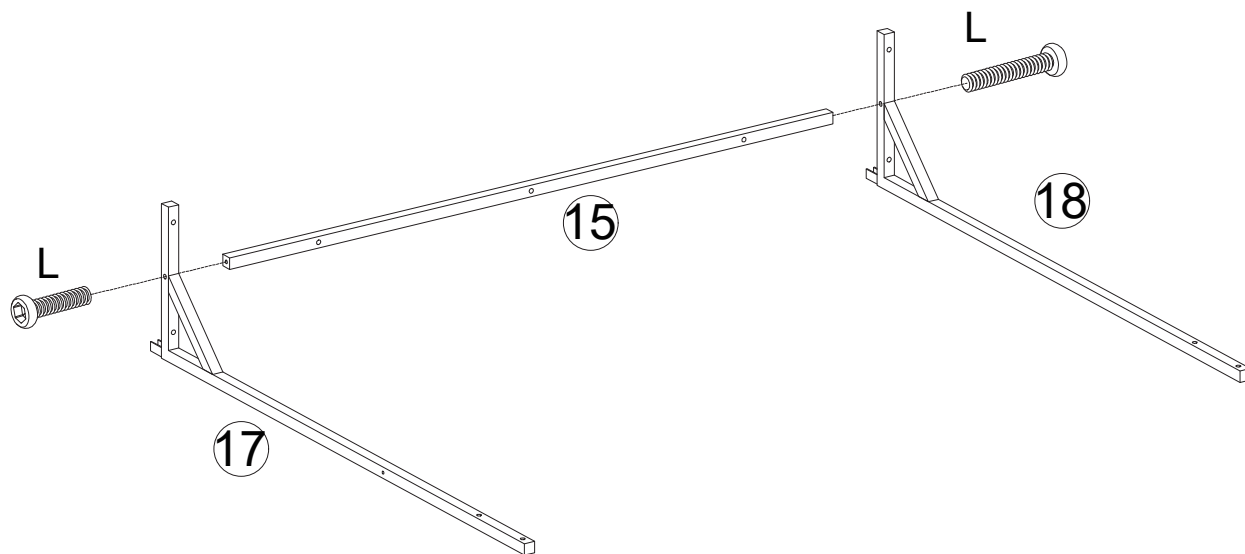

Attach part #15 to part #17 and part #18 with screws L*2

	Ox1		Lx2
---	-----	---	-----


14

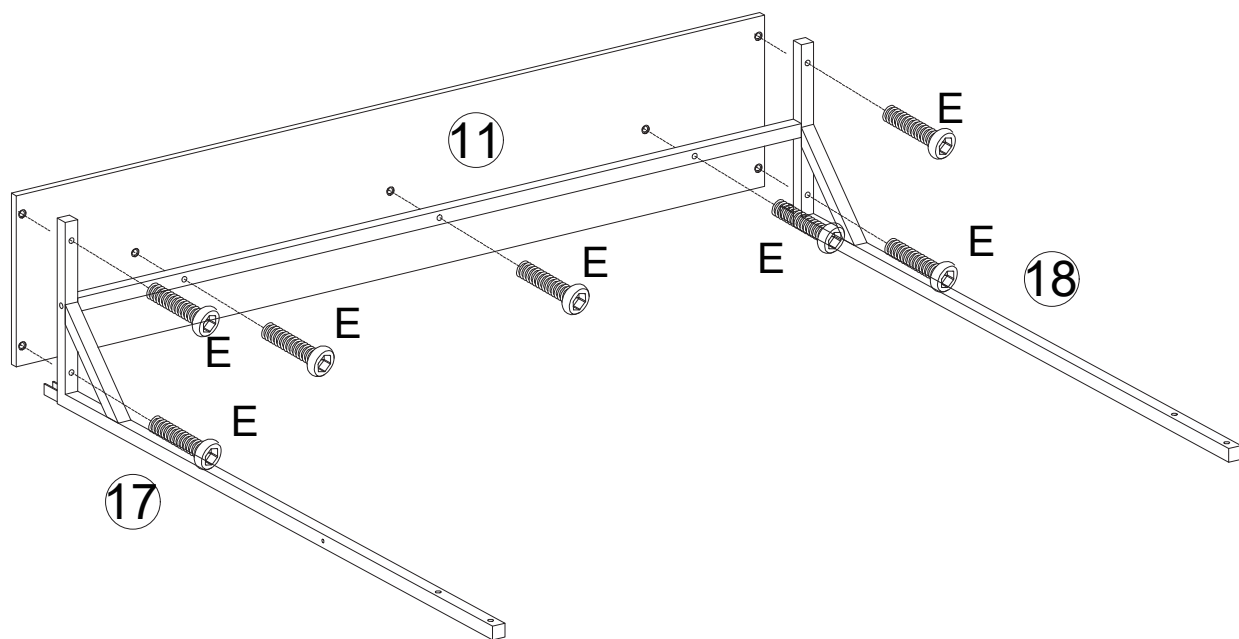

Attach top panel of part #11 with E*7 as shown.

	Ox1		Ex7
---	-----	---	-----


15

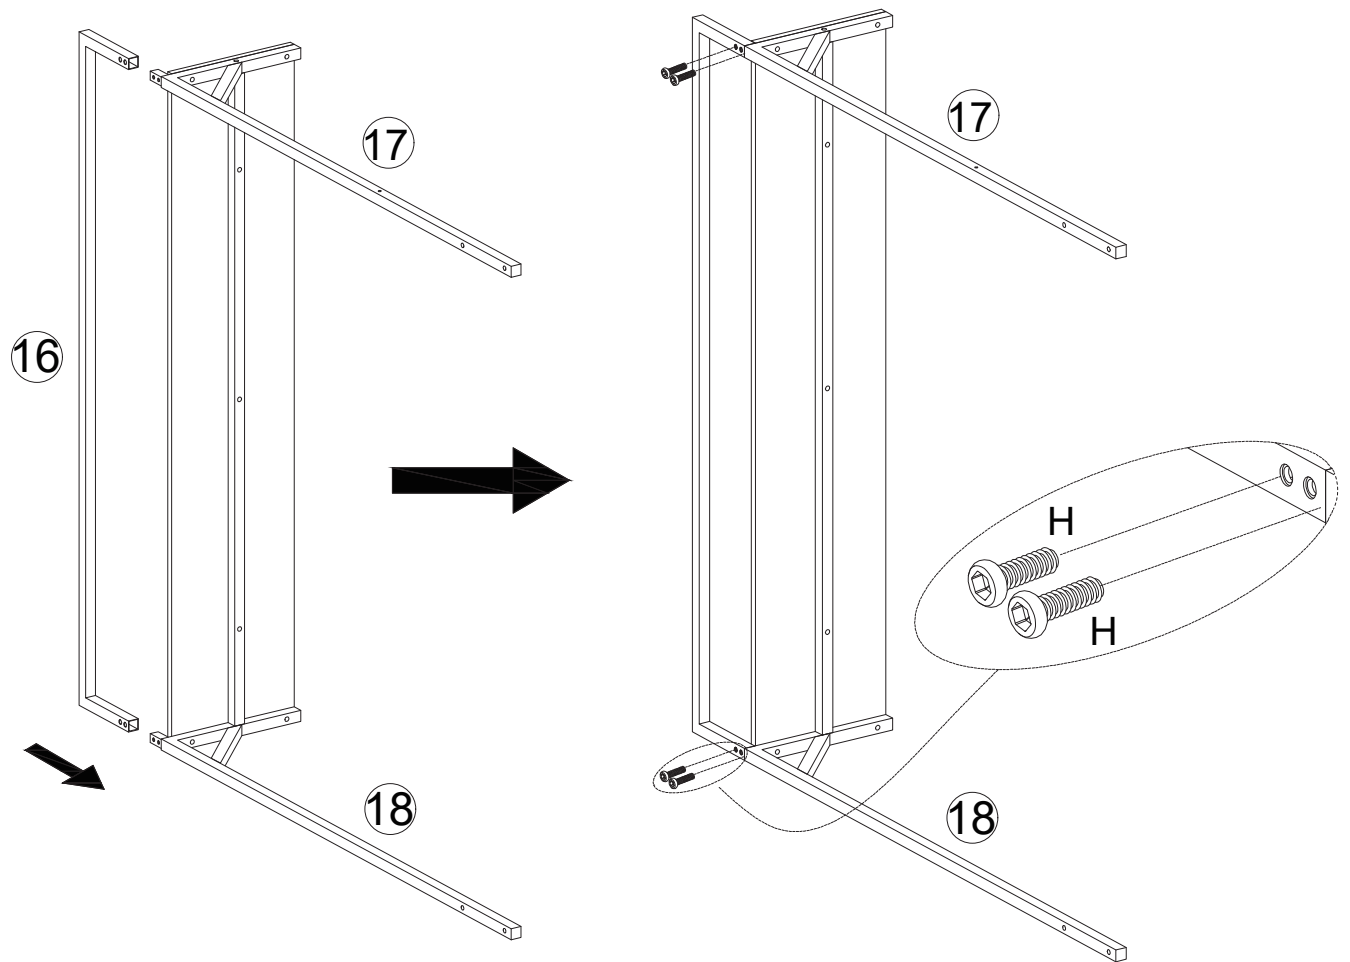

	Ox1
	Hx4

Attach part #16 with H*4 as shown


16

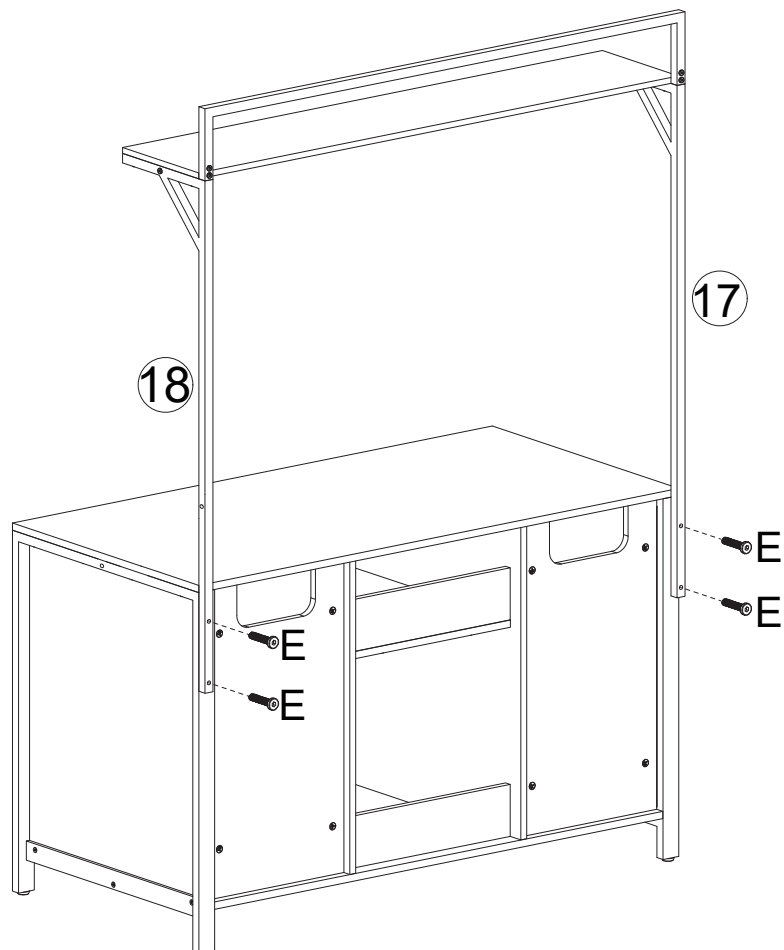


Attach the assembled top part to the main unit with screw E*4 as shown.

	Ox1		Ex4
--	-----	--	-----


17

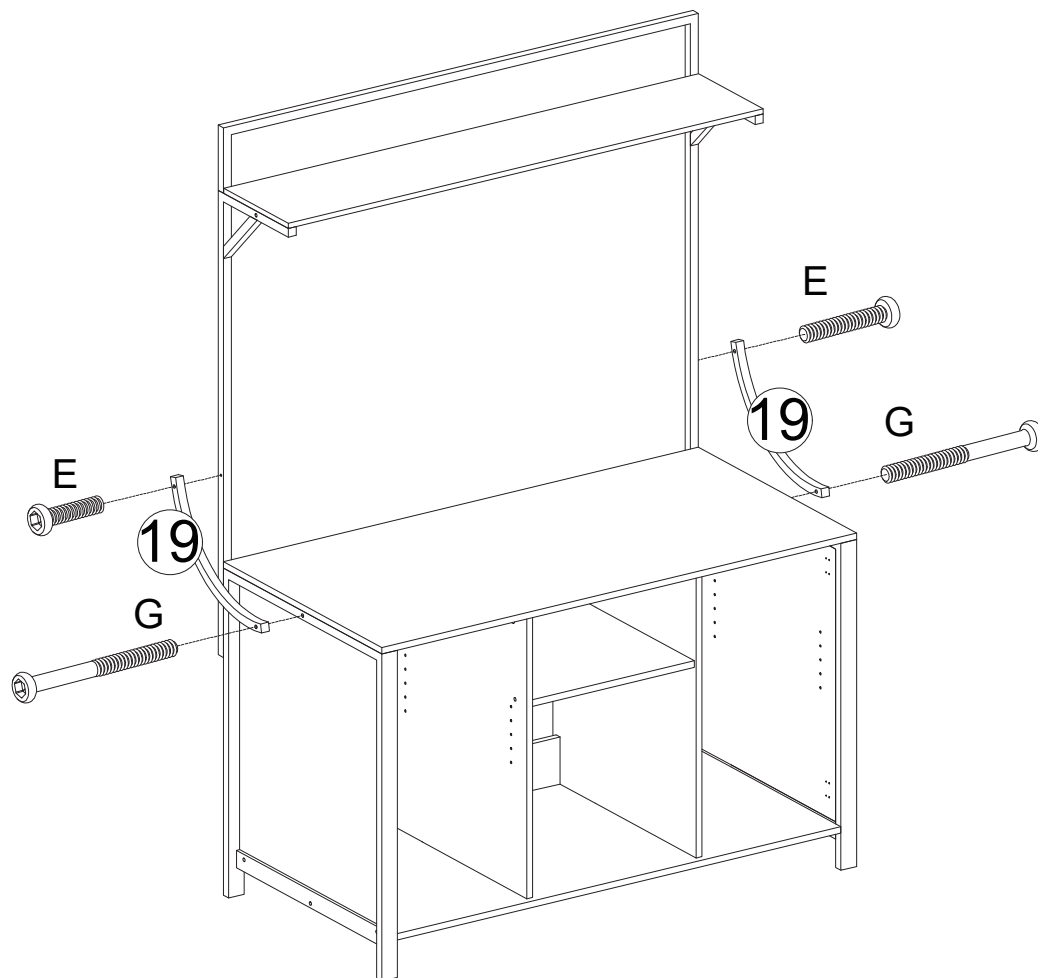

Attach parts #19 x2 to the assembled unit with G*2 and E*2 as shown








18

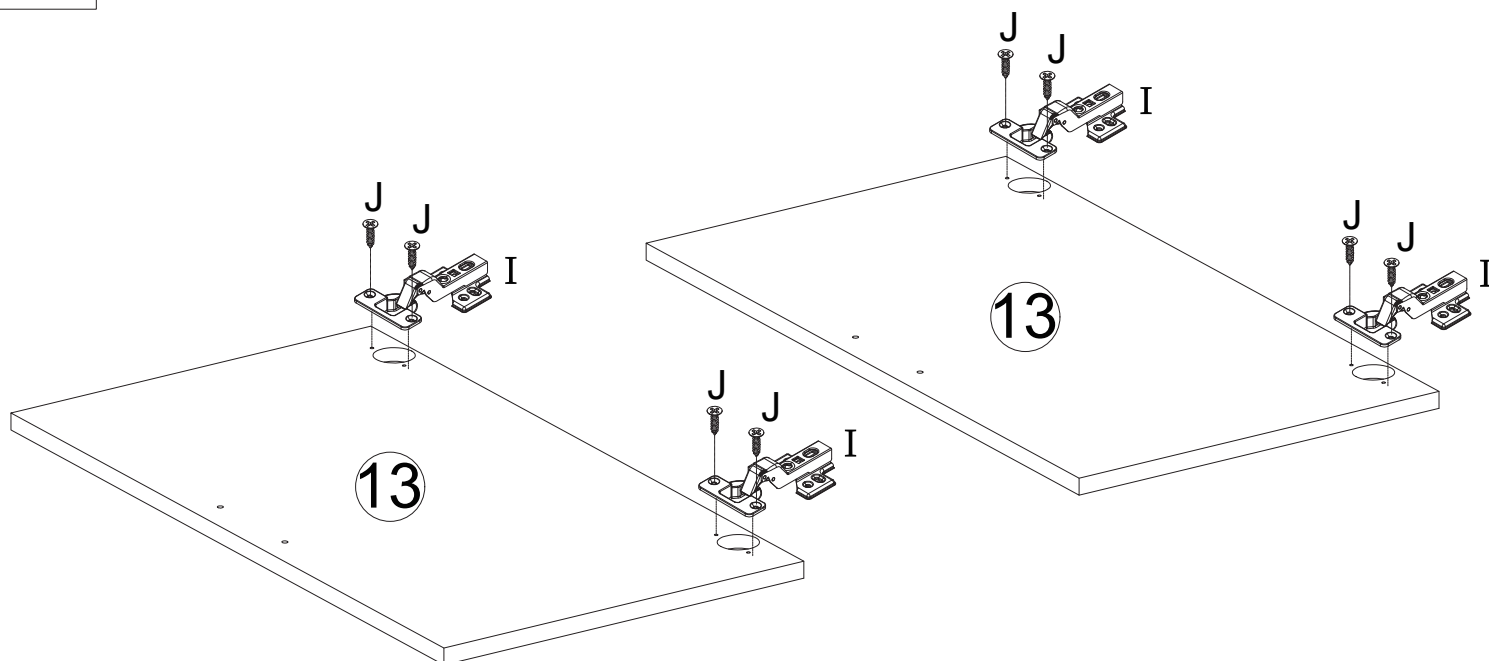

Install door hinges Part I on doors parts #13 as shown using screws J*8.



19

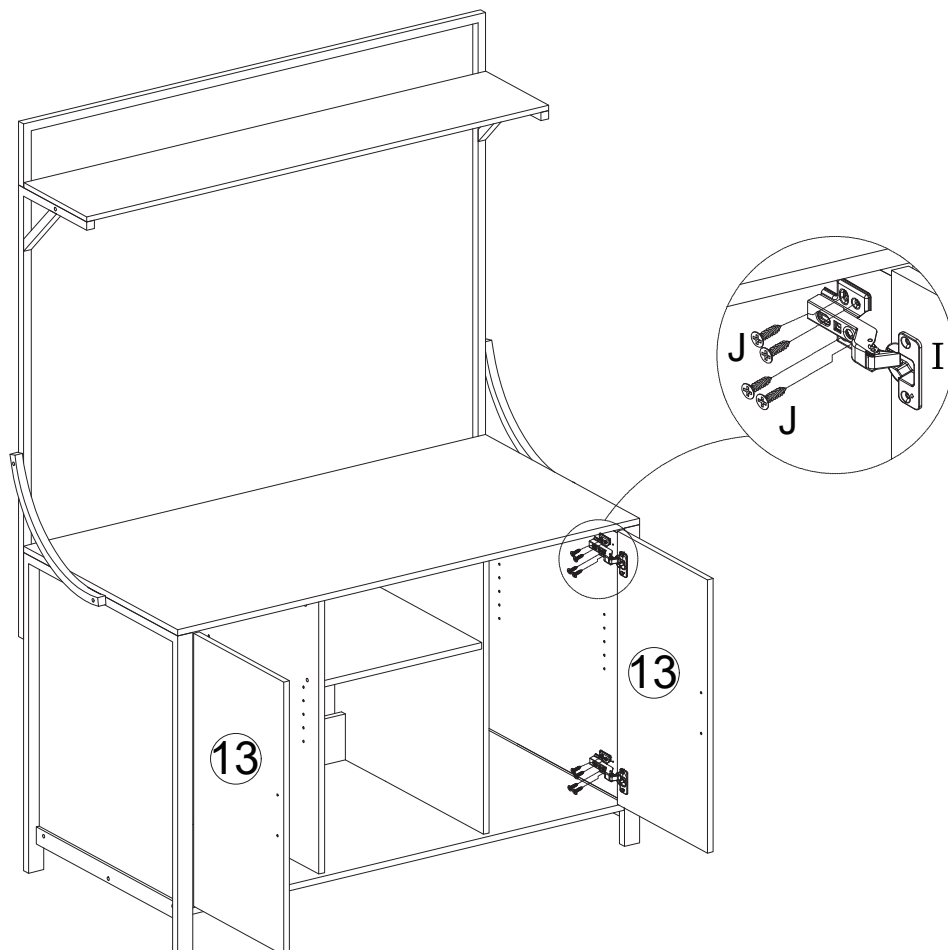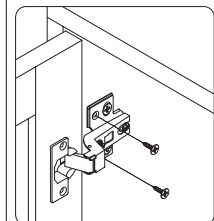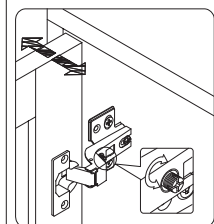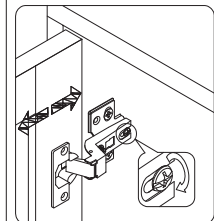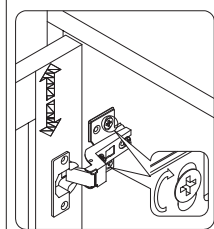


Attach each door as shown using screws Jx4 per hinge. You can make the door more compliant by adjusting the door hinges as the left picture shows.

 Qx1

 Jx16

20

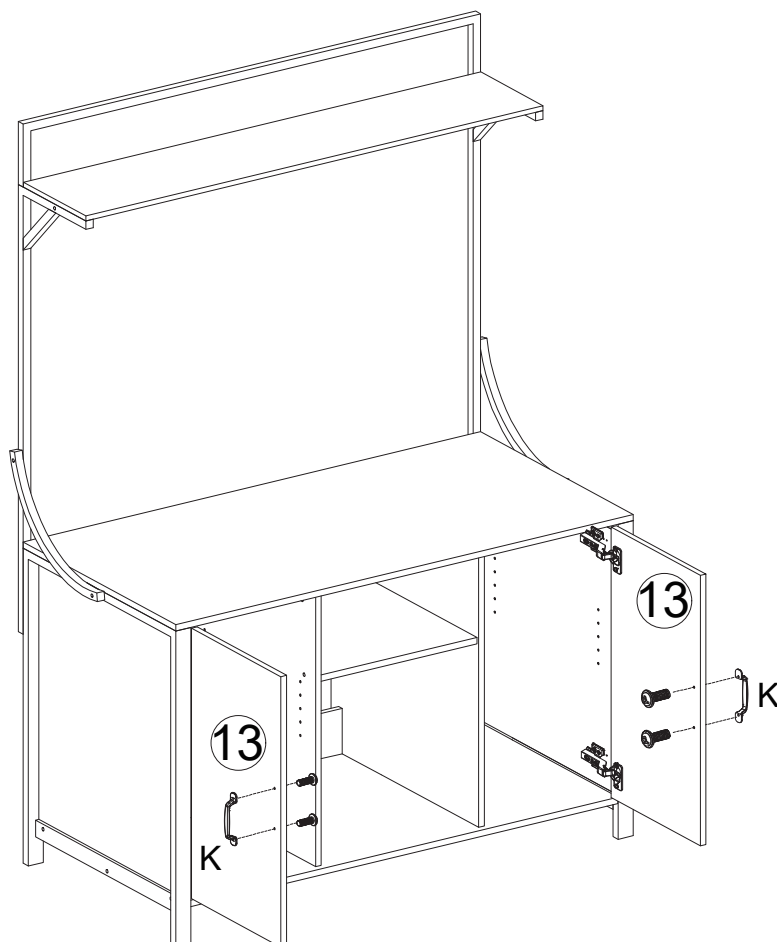


Attach each door handle using set K*2 as shown.

 Qx1

 Kx2

21

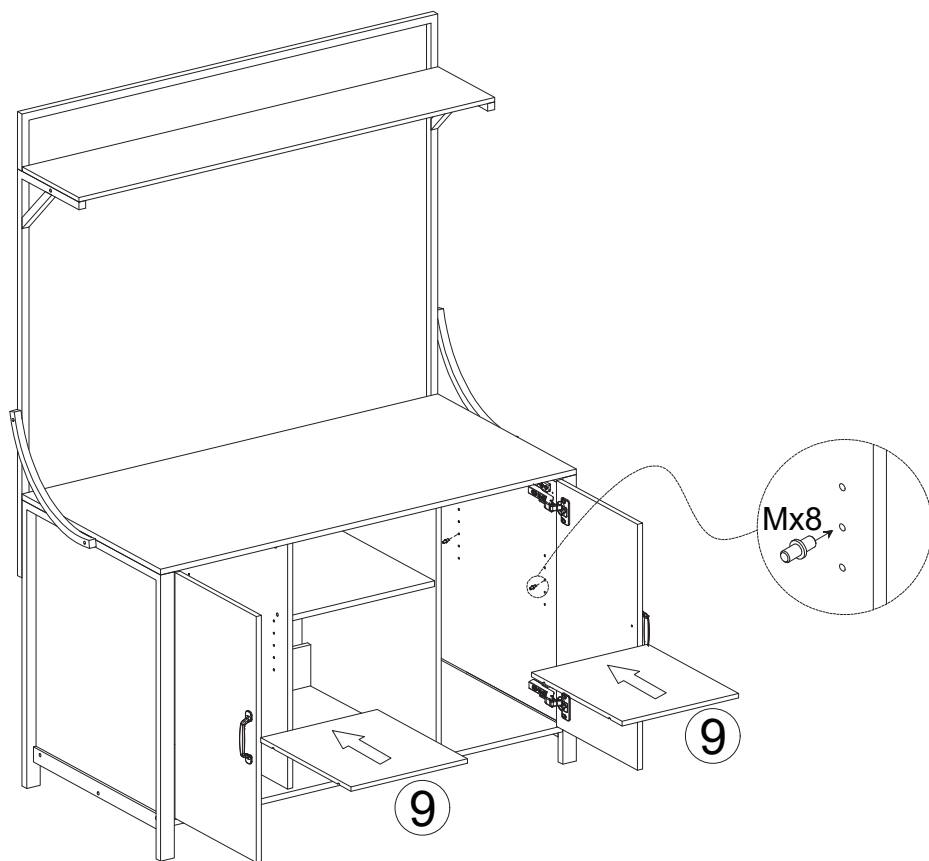


Attach adjustable shelf supports M*8 to both cabinets to your preference and then install the shelves (part #9). We set 5 different heights for your selection. Or you can leave the shelves out completely if you need to put bigger items in the cabinet.



Mx8

22

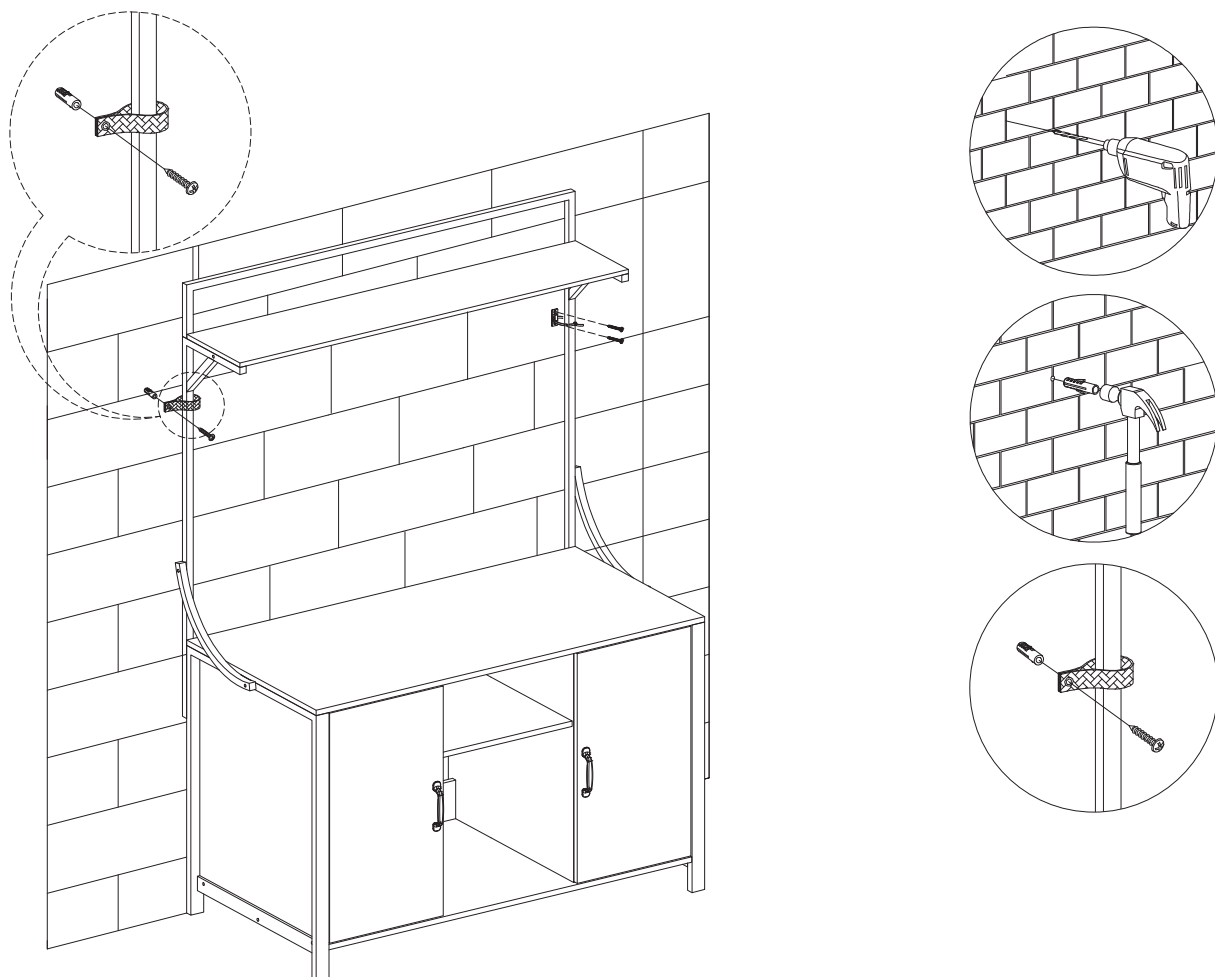

We have designed the product with anti-fall straps. Pls install N*2 as shown to the wall for security (if have children / pets at home)



Nx2