

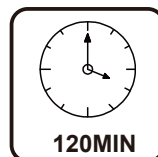
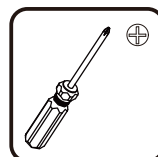
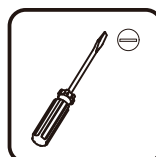


HLG0127


Version: 1.0

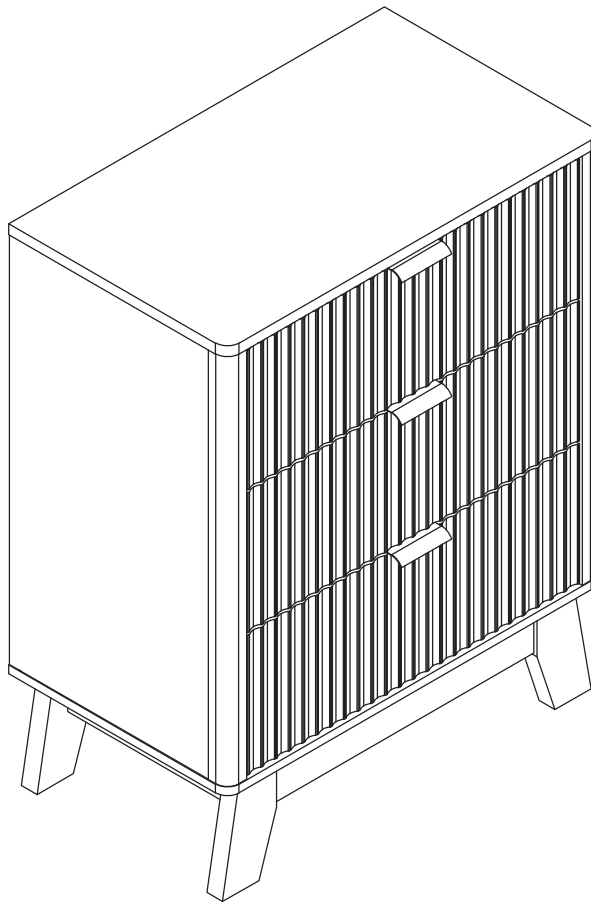


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

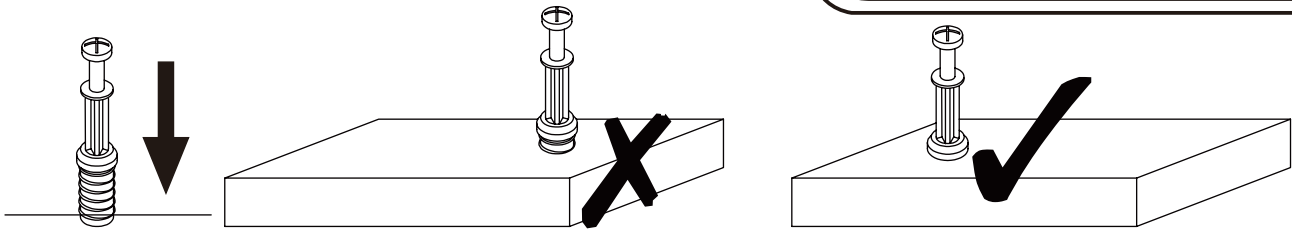


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

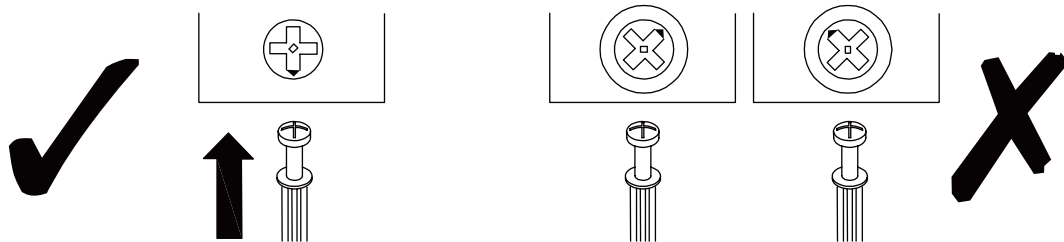











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.






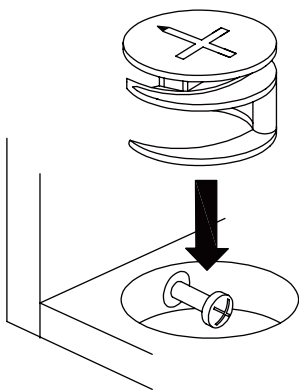



EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

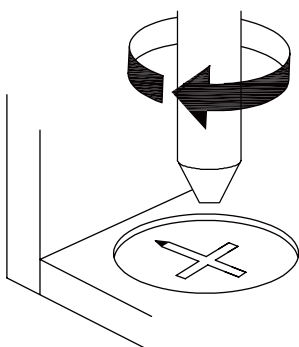


EN_Turn cam lock clockwise to tighten.

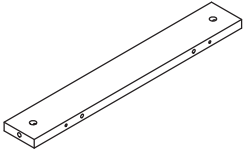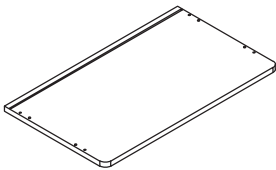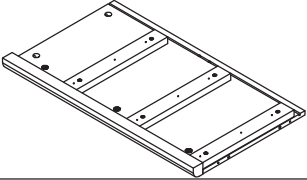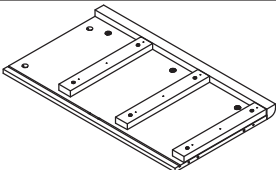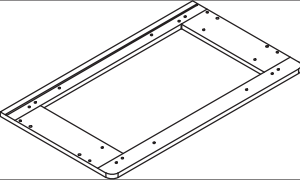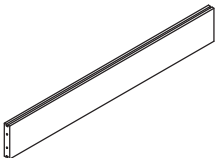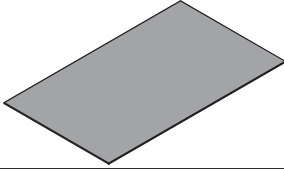NO.	PARTS	QTY	SPARE
1		x2	
2		x2	
3		x2	
4		x2	
5		x1	
6		x1	
7		x1	
8		x1	
9		x1	
10		x3	

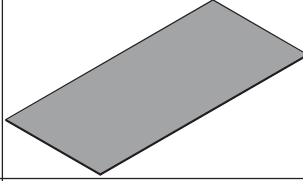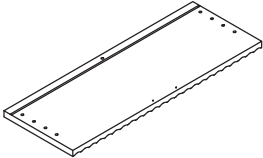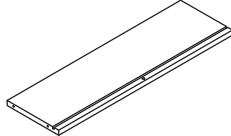NO.	PARTS	QTY	SPARE
11		x2	
12		x3	
13		x3	
14		x3	
15		x3	
16		x3	
	 Hardware Kit		

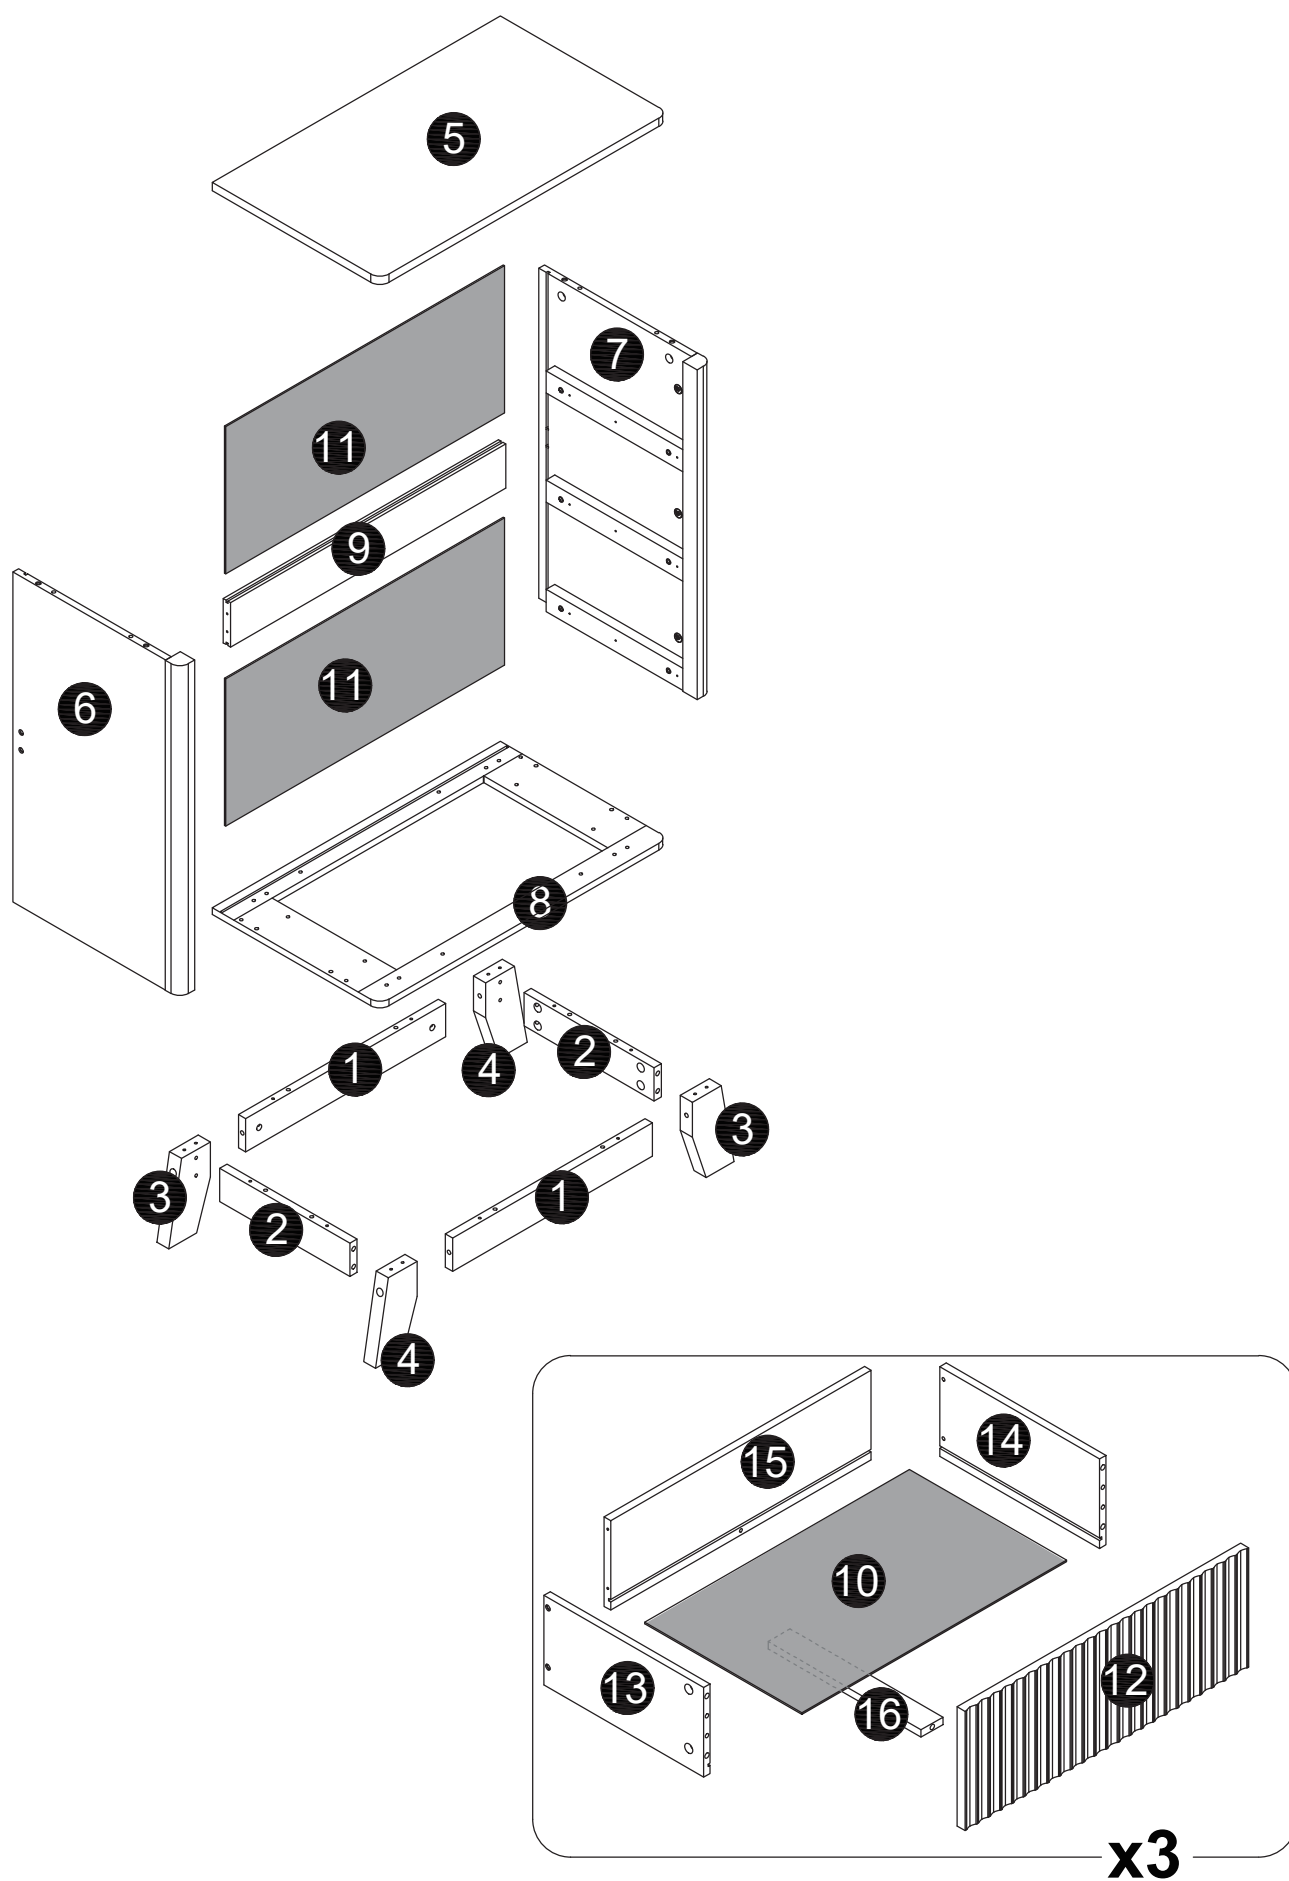




 A x27 Ø6x35mm +2(spare)	 B x27 Ø15x10mm +2(spare)	 C x28 Ø6x30mm +2(spare)	 D x25 Ø4x35mm +2(spare)	 E x36 Ø3.5x12mm +2(spare)	 F x3
 G1  G2 G x8 Ø3x16mm	 H x16 Ø5x35mm +1(spare)	 I x2 Ø6x30mm	 J x2	 K x2 Ø4x14mm	 L x8
 M x4 Ø6x80mm	 N x4 Ø10x10mm	 O x4	 CL x3 300mm	 CR x3 300mm	 DL x3 300mm
 DR x3 300mm					



 A x15	 C x12	 D x15
---	---	---

x3

01

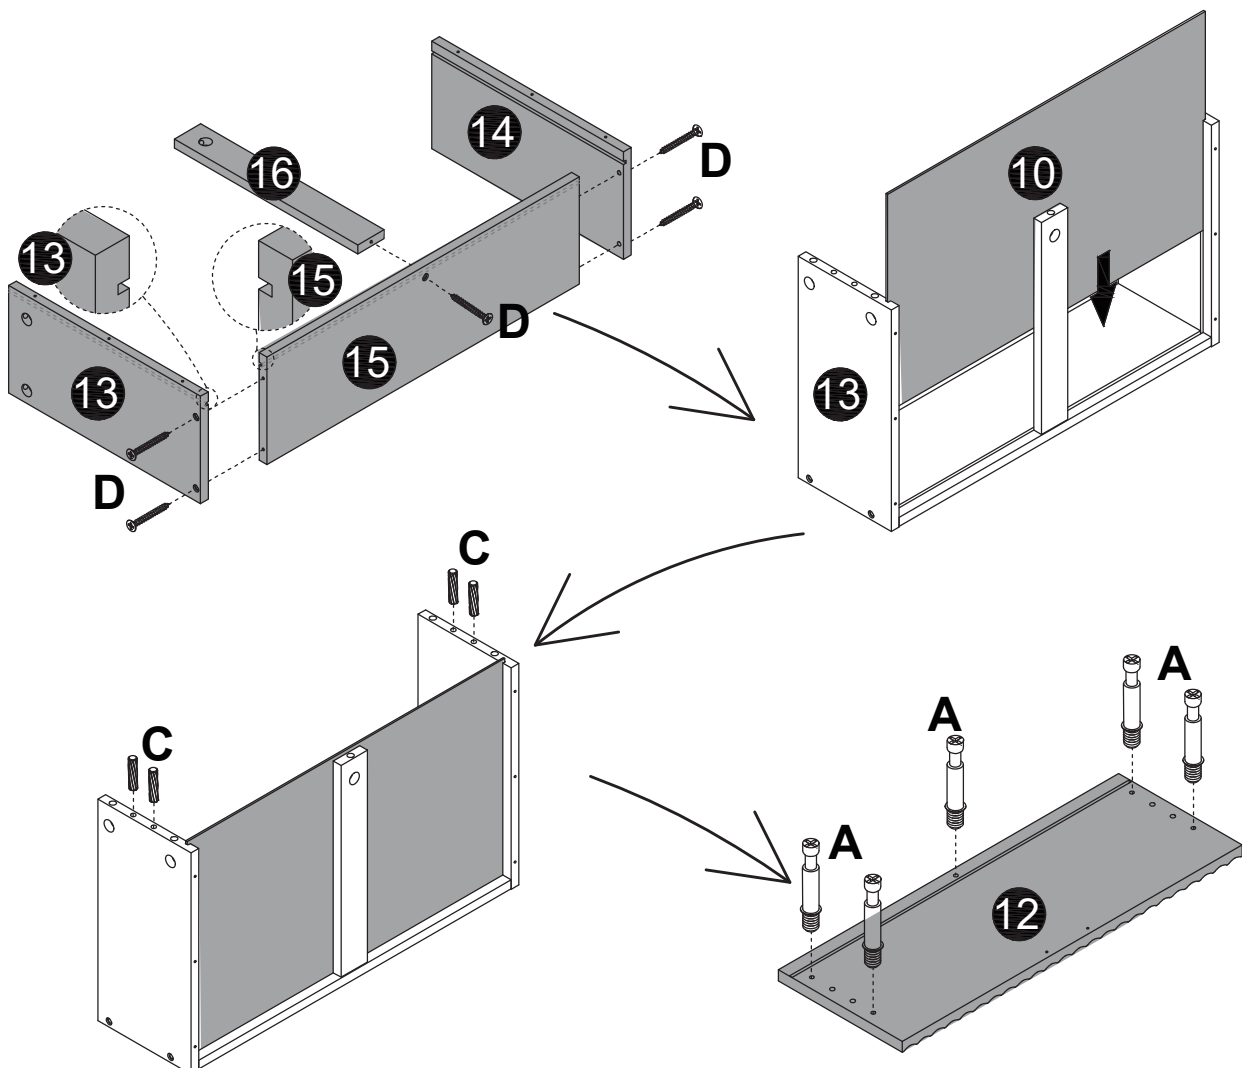

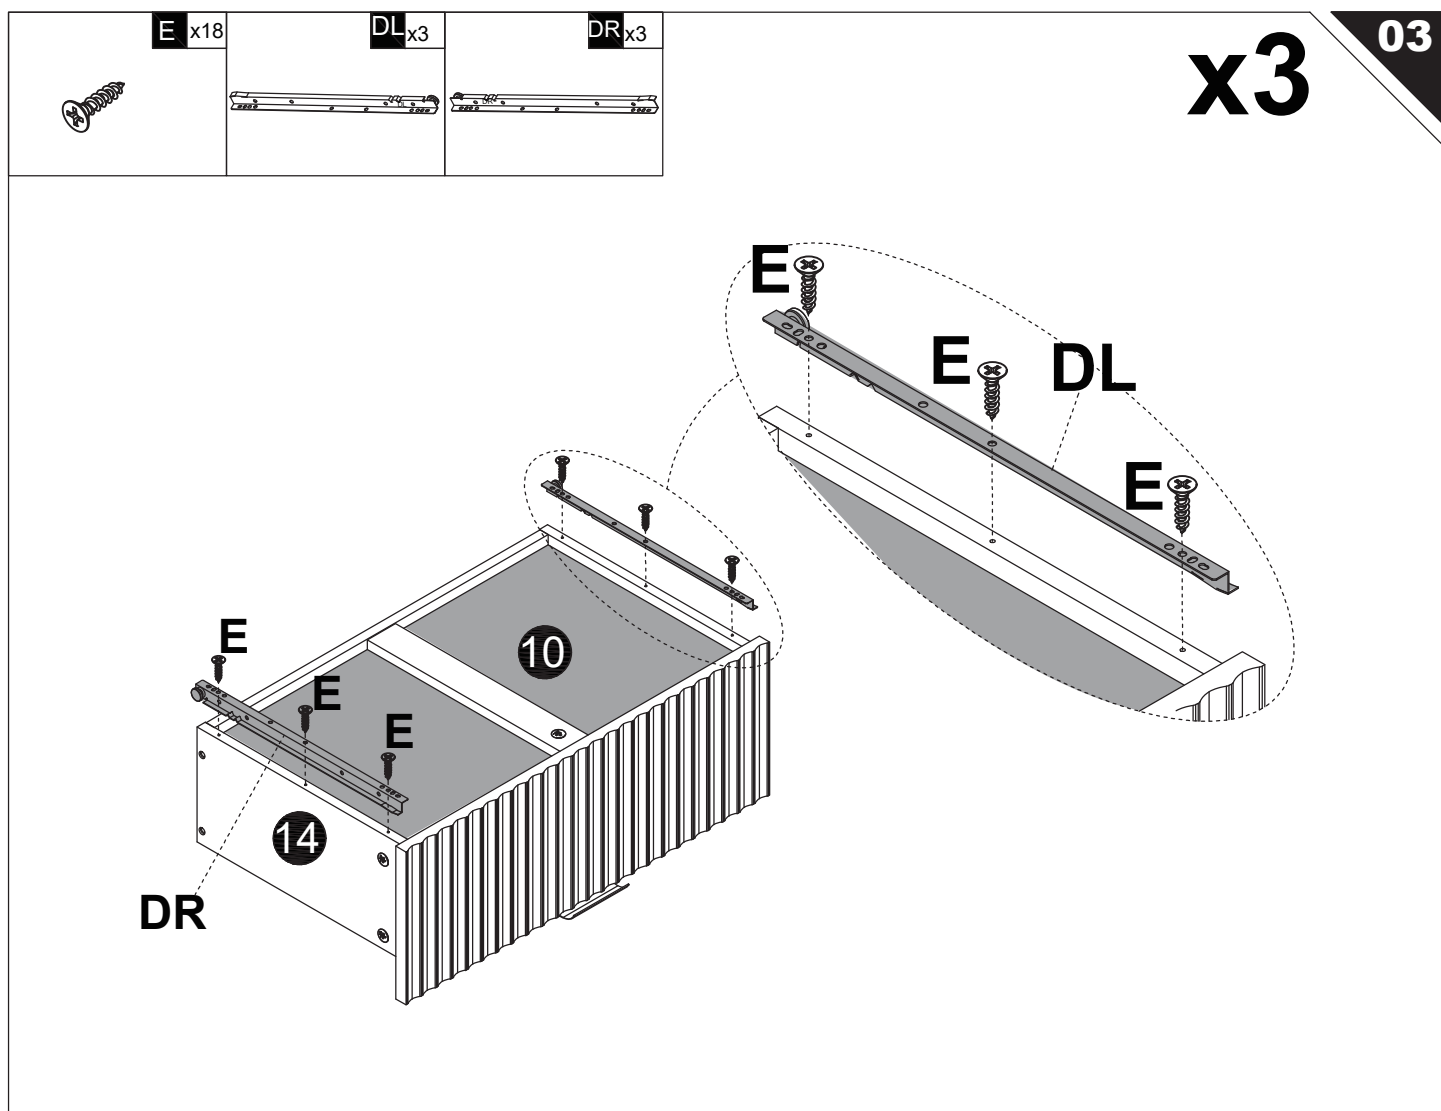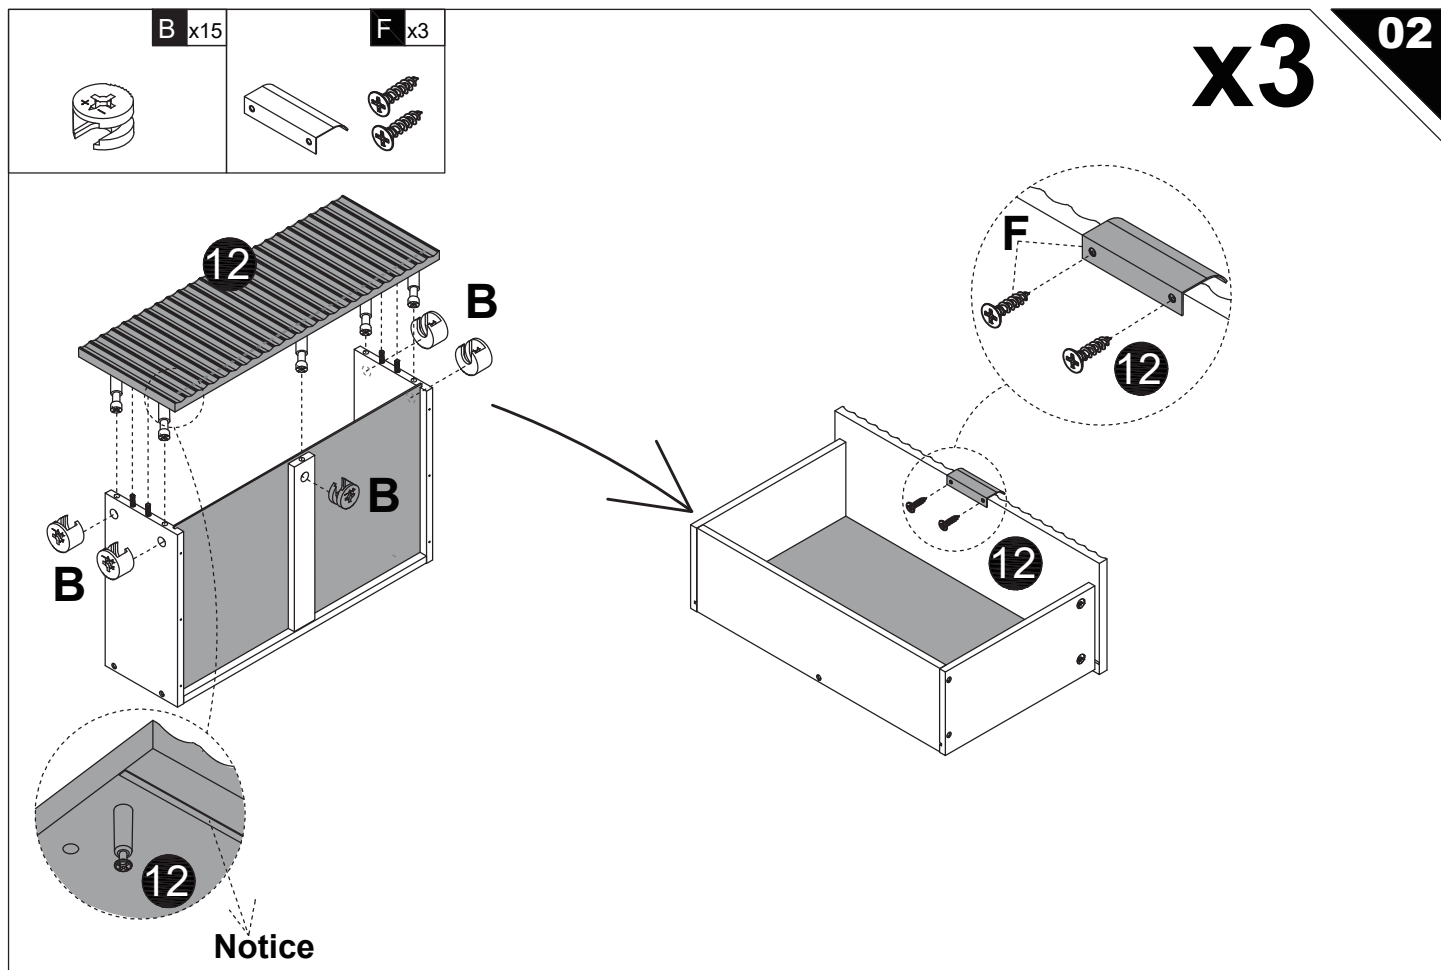

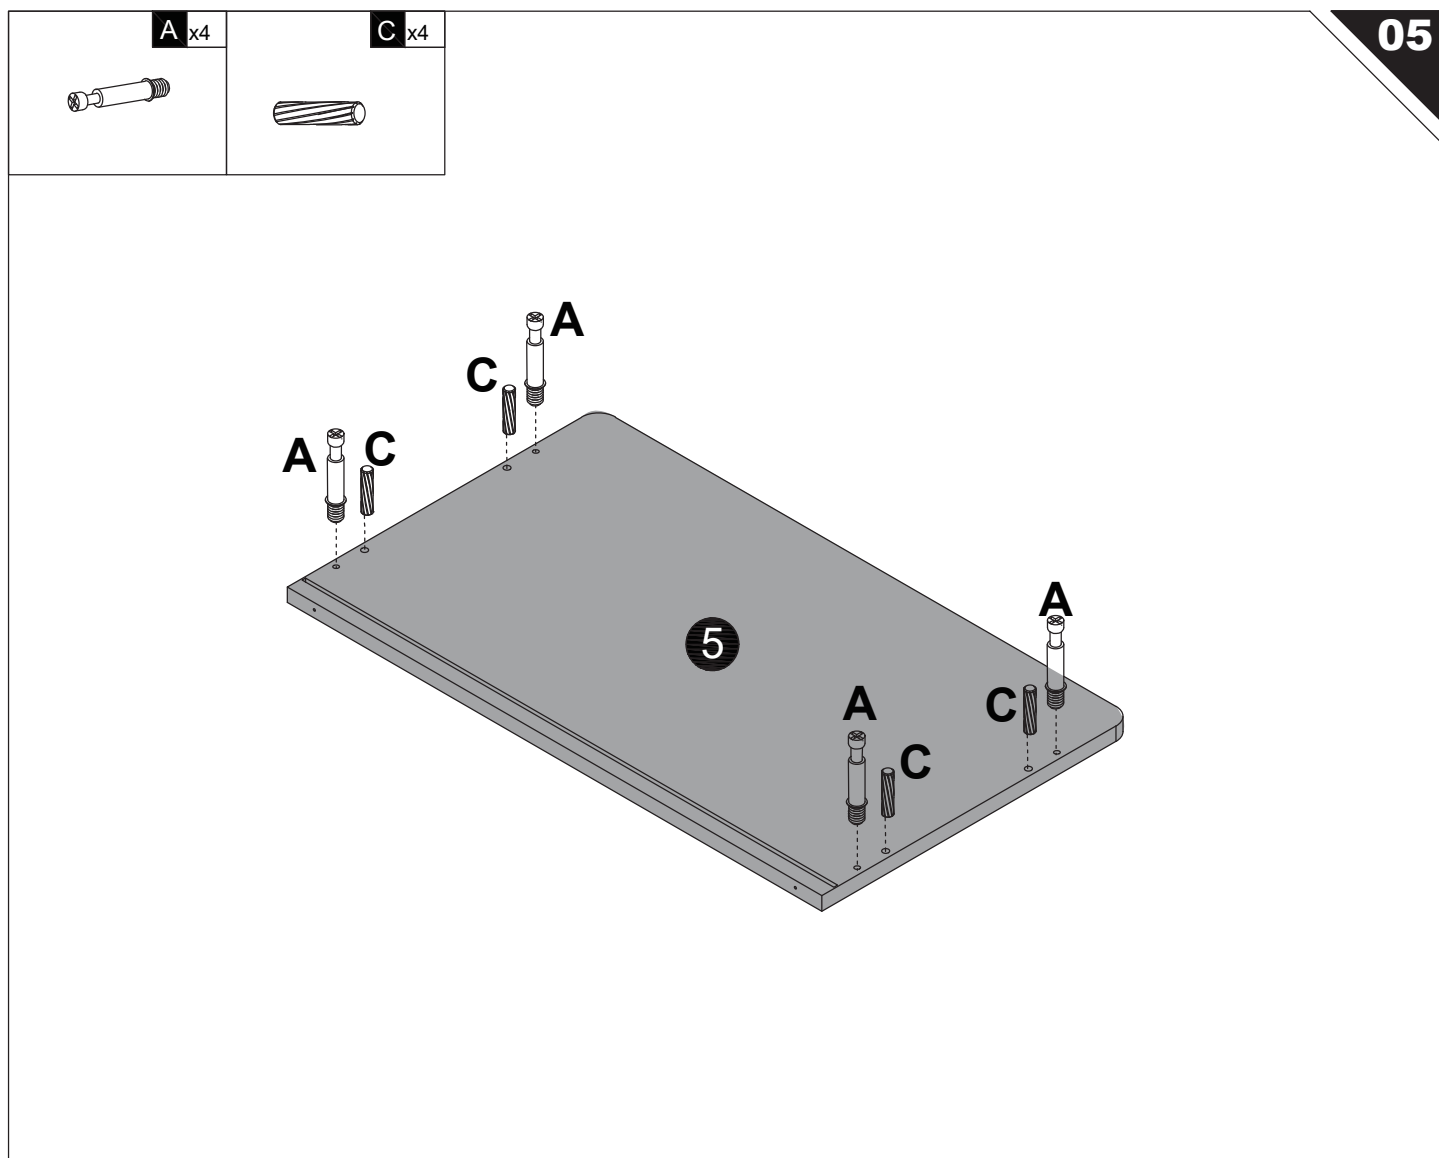
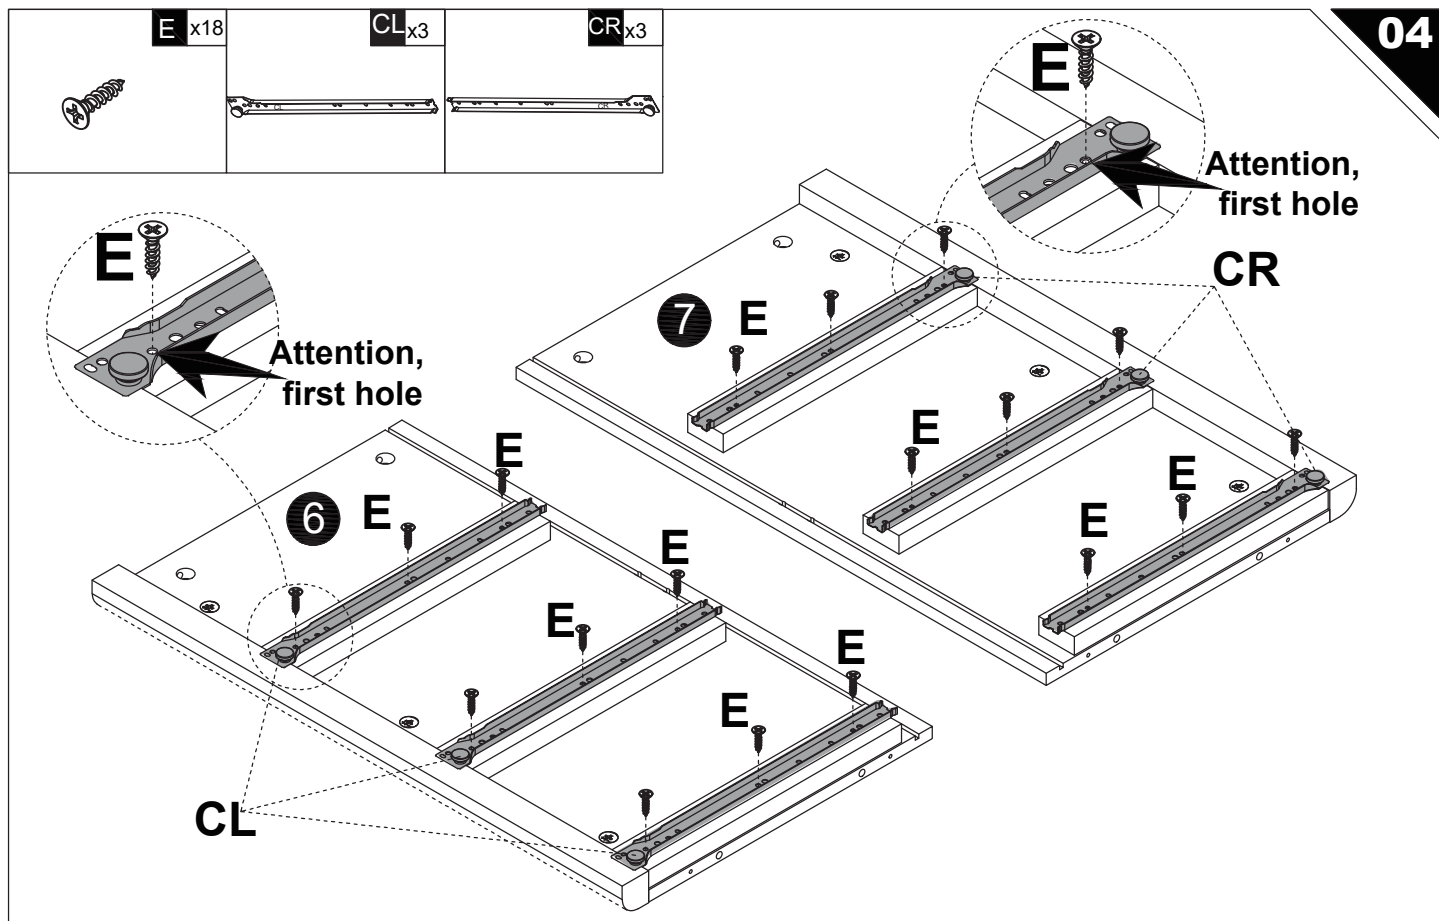


B x4



06


Notice

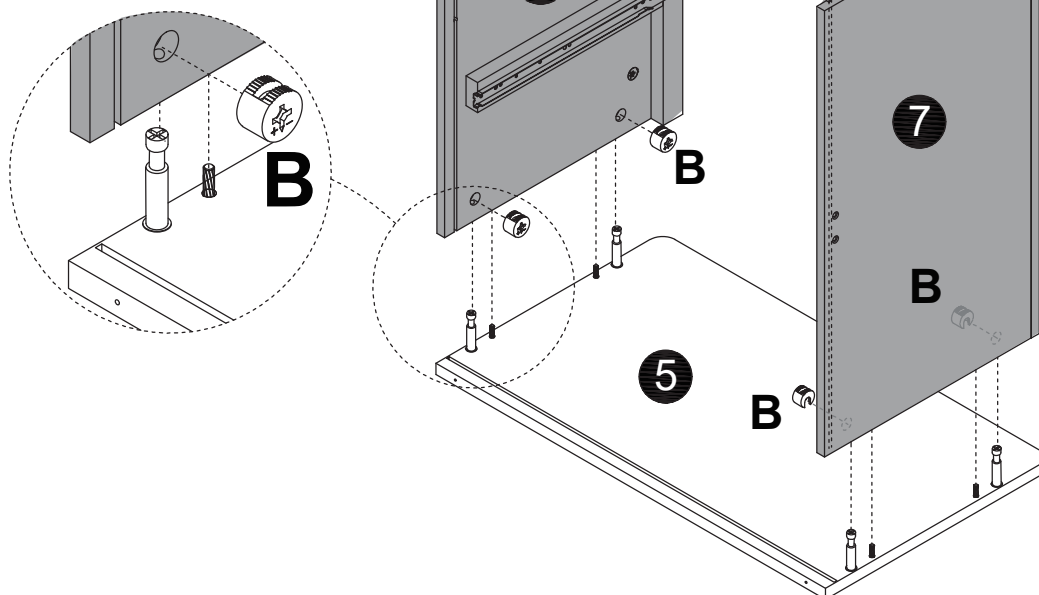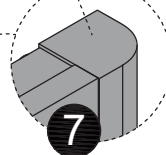

C x4





07

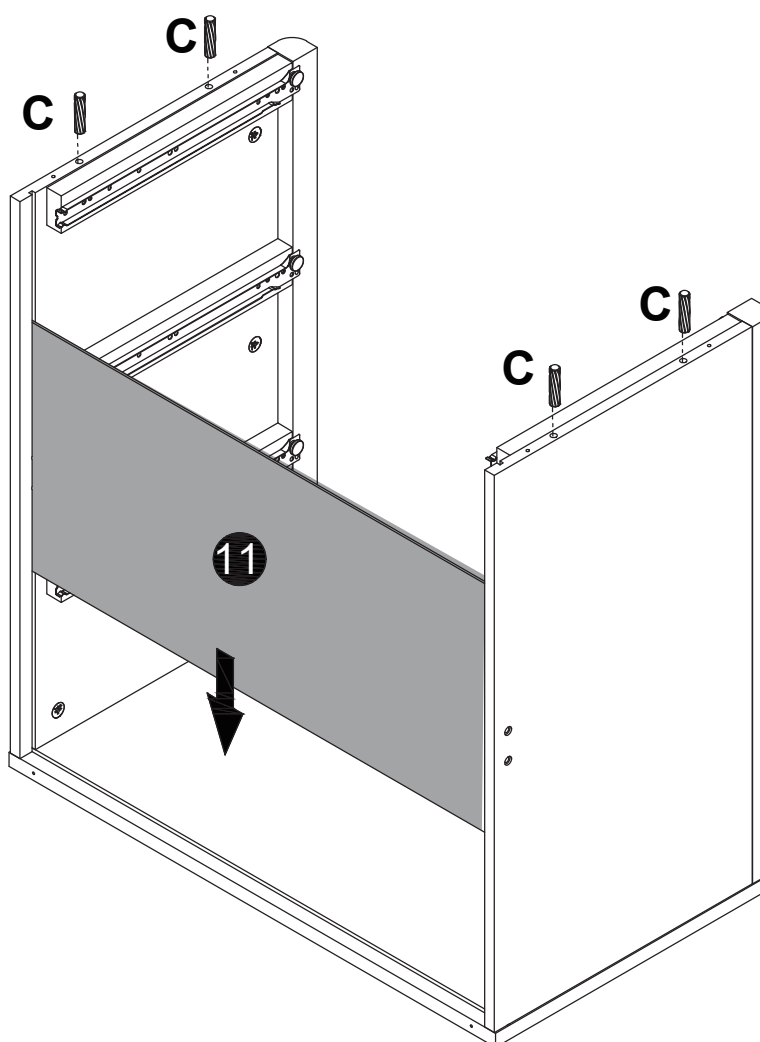


D x4





08

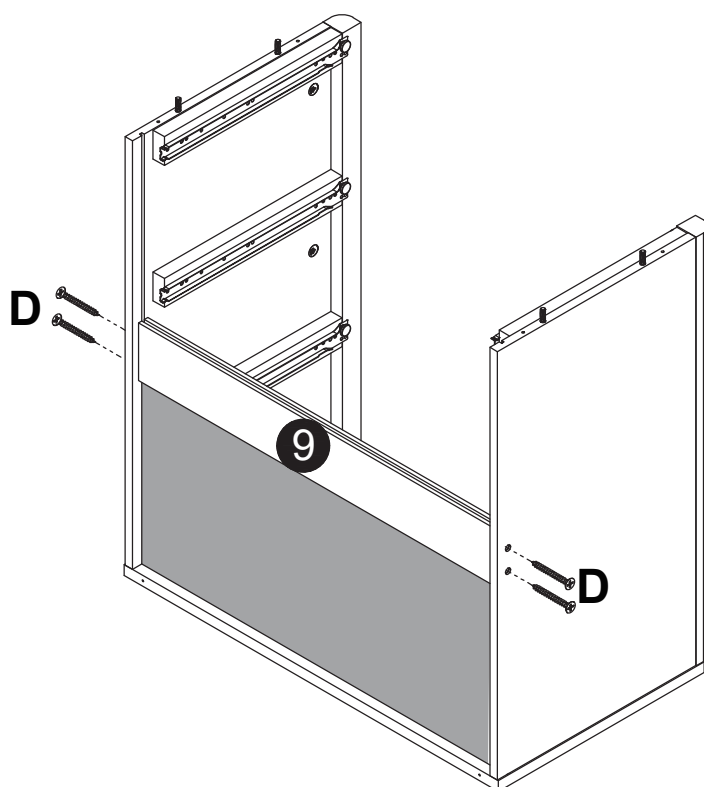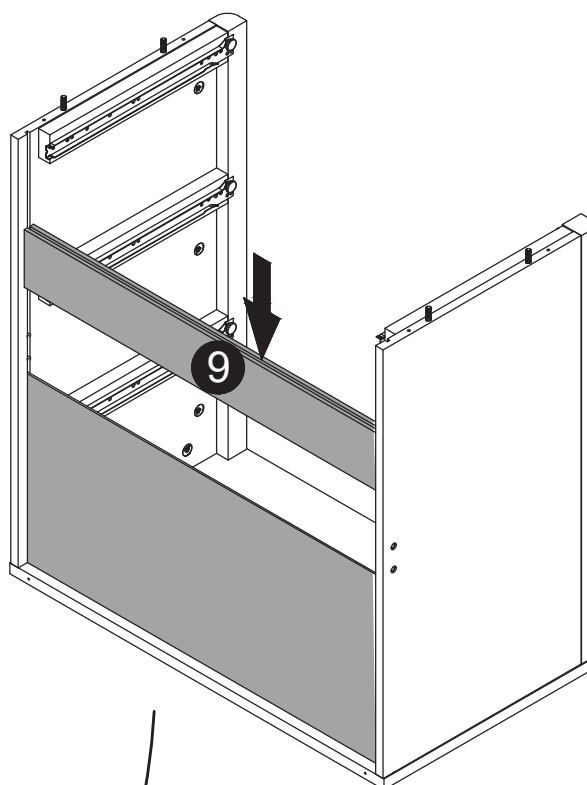

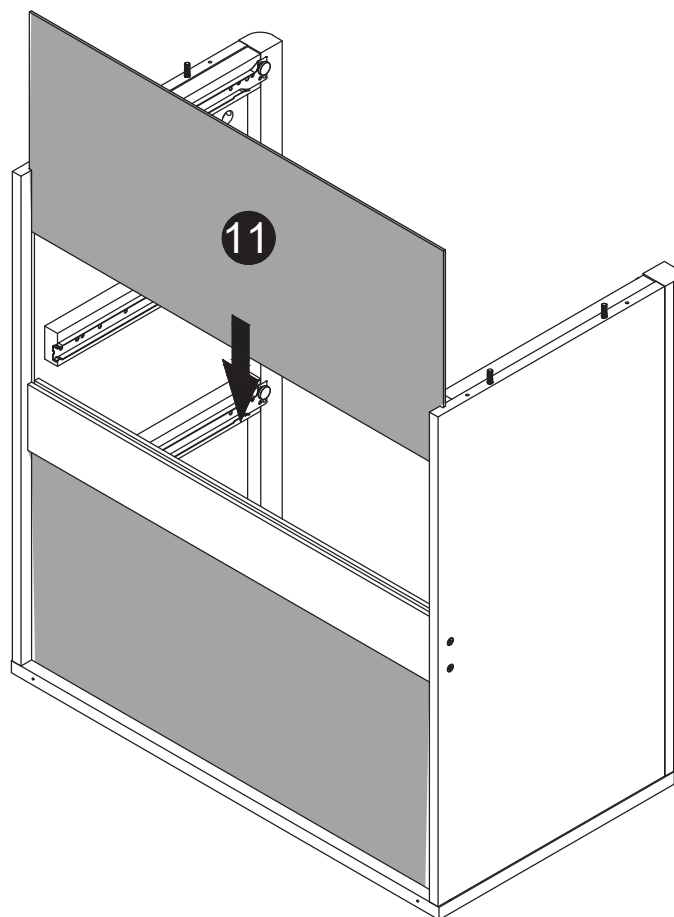


A x8

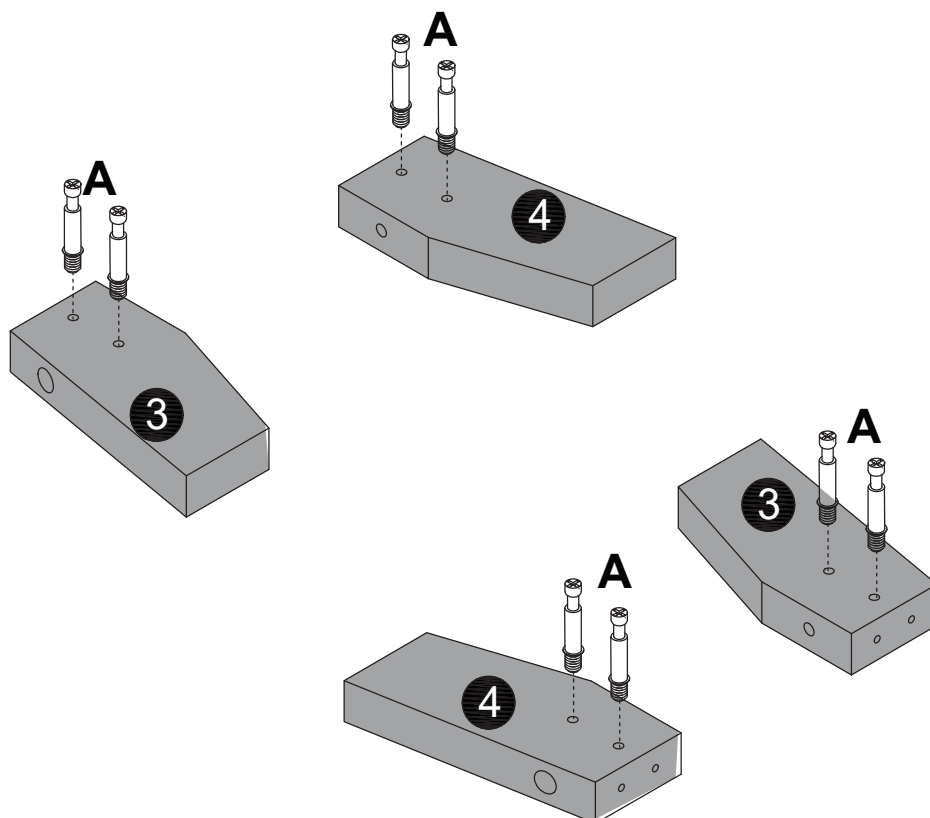

B x8



11

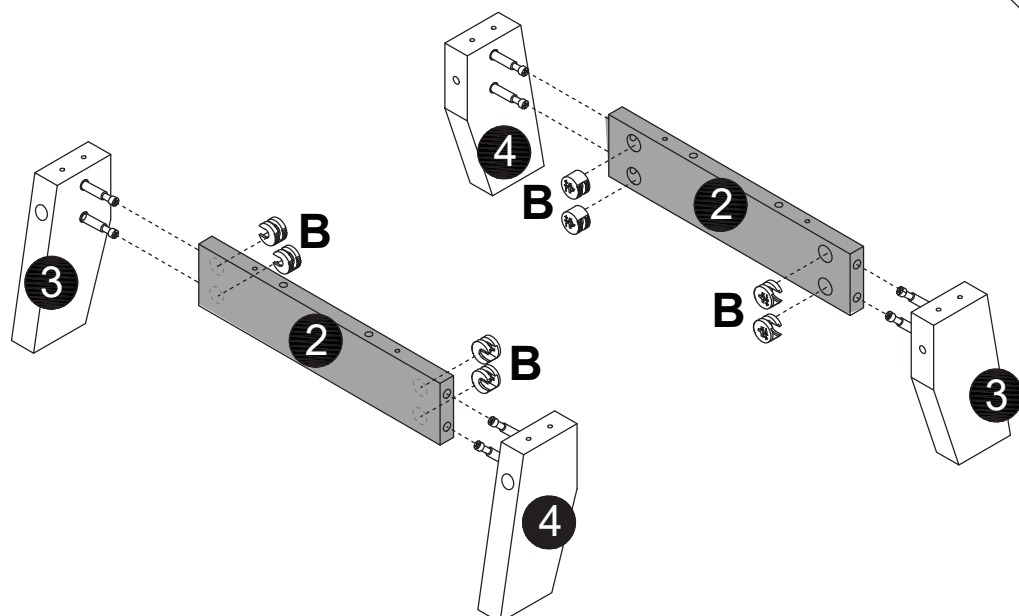


M x4
Ø6x80mm



N x4
Ø10x10mm




12

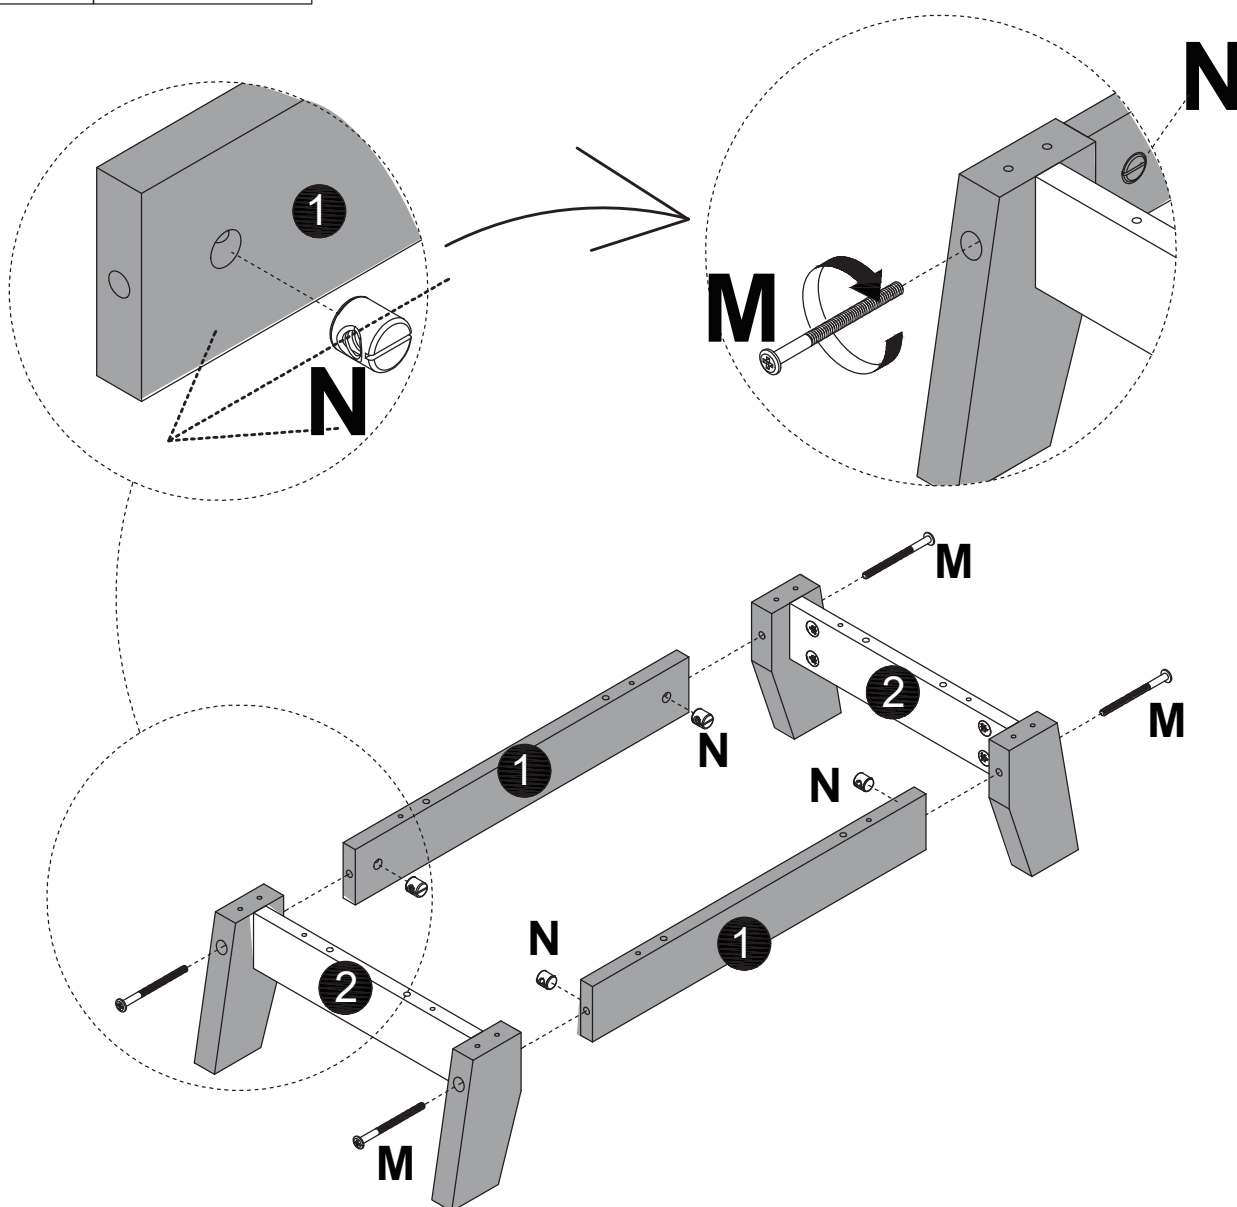

C x8

13

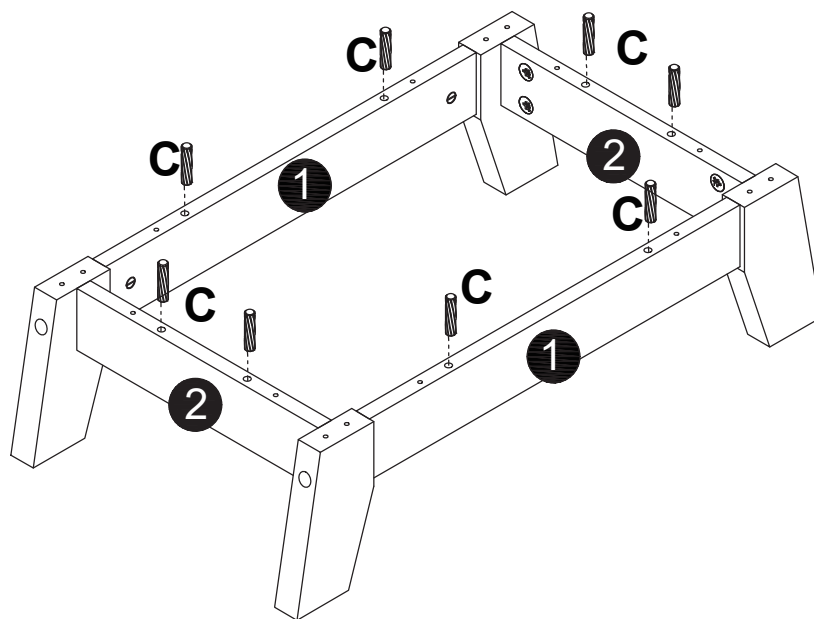


H x16



14



Notice



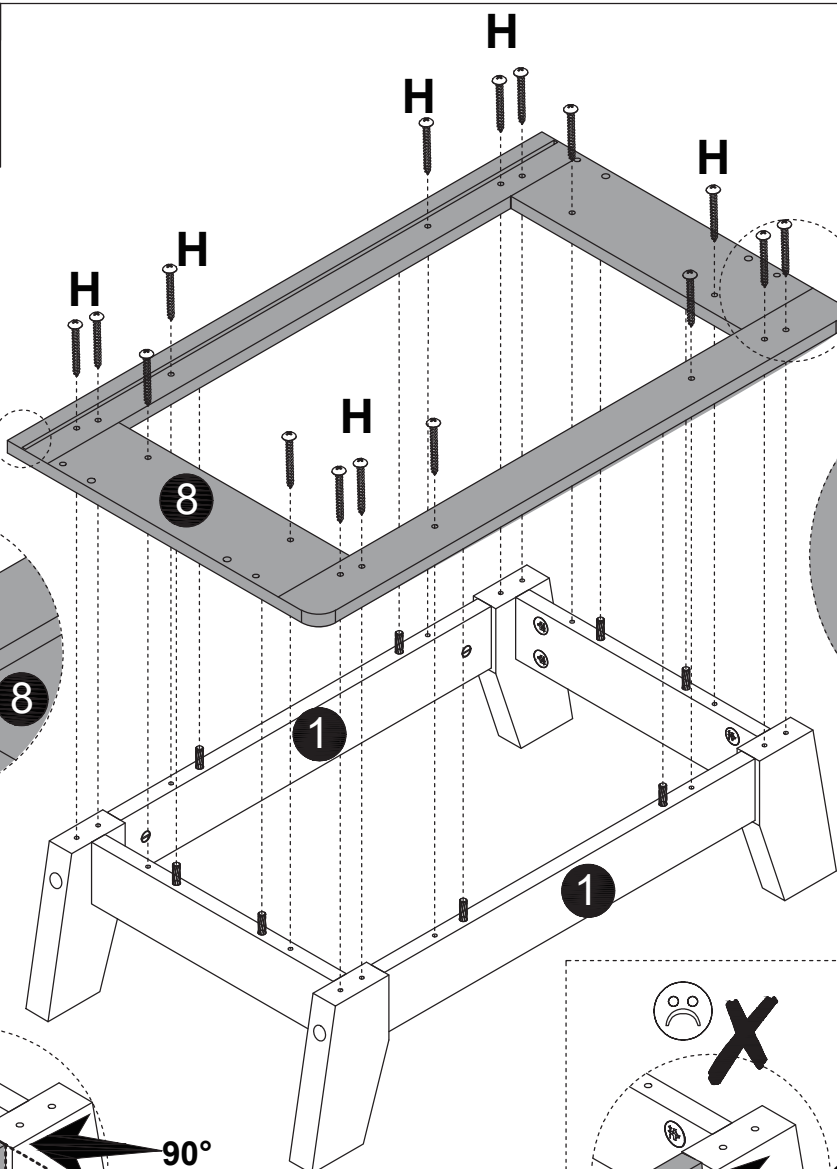


If board 1 does not have a 90 degree angle, please rotate board 1 90 degrees by hand.

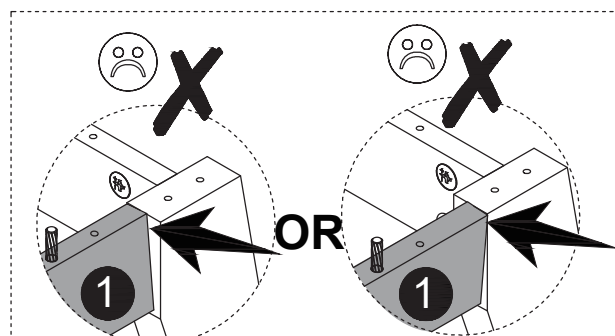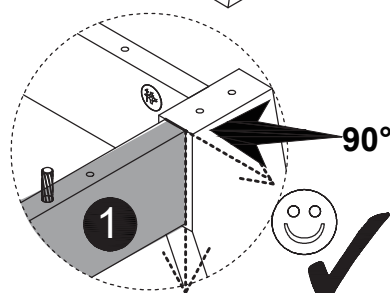




D x4



O x4

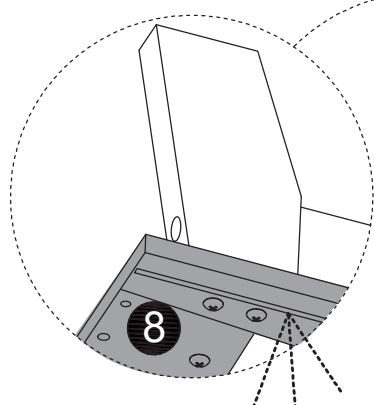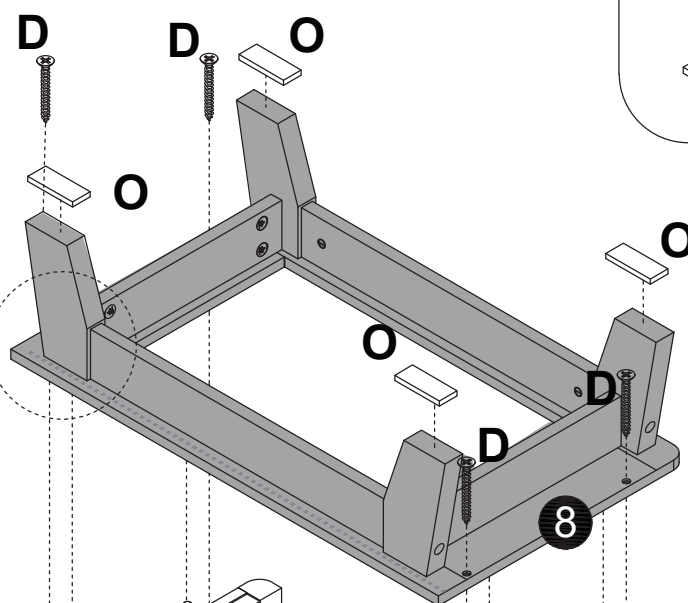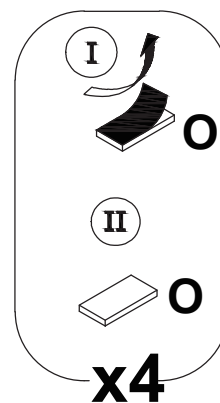

Notice

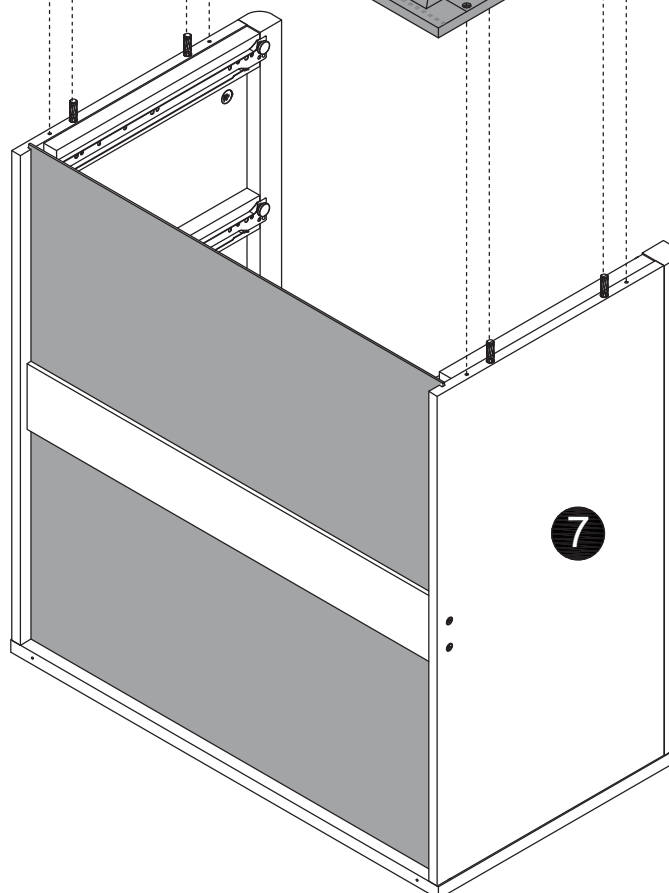

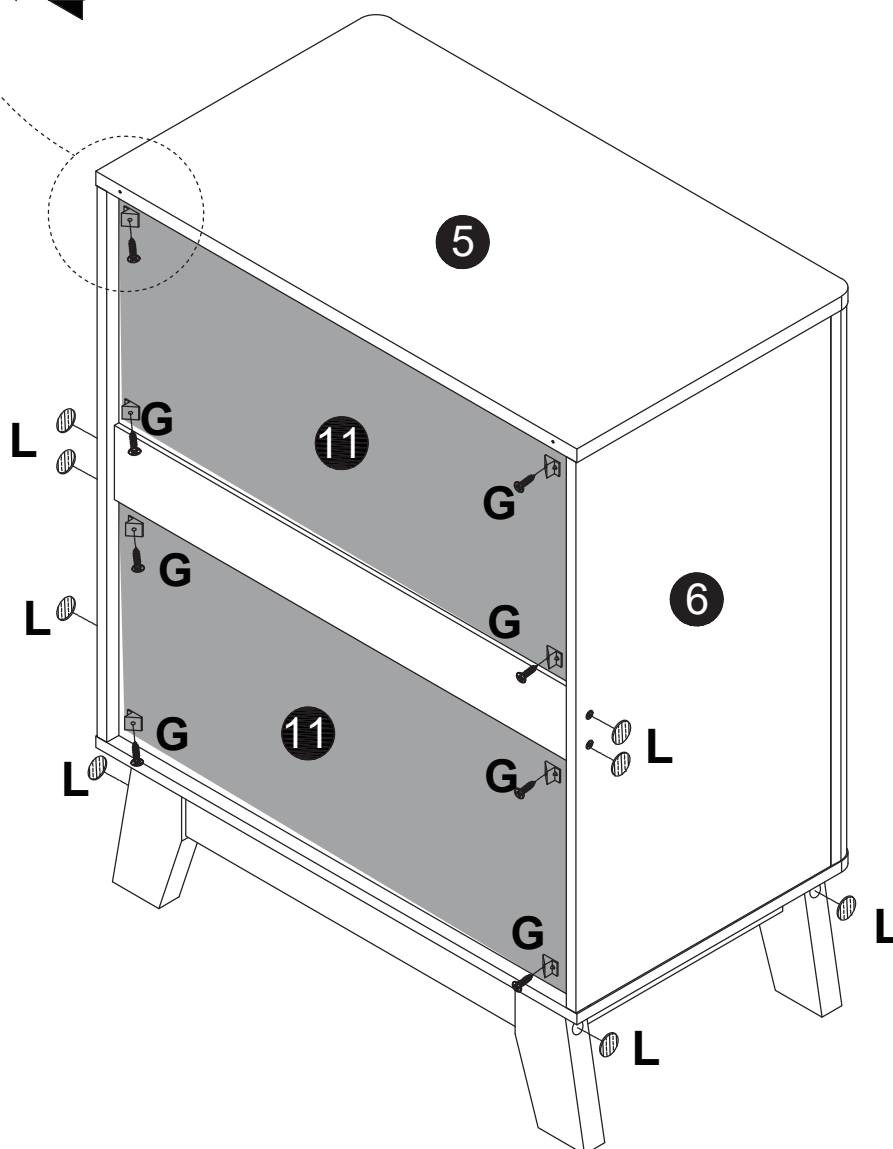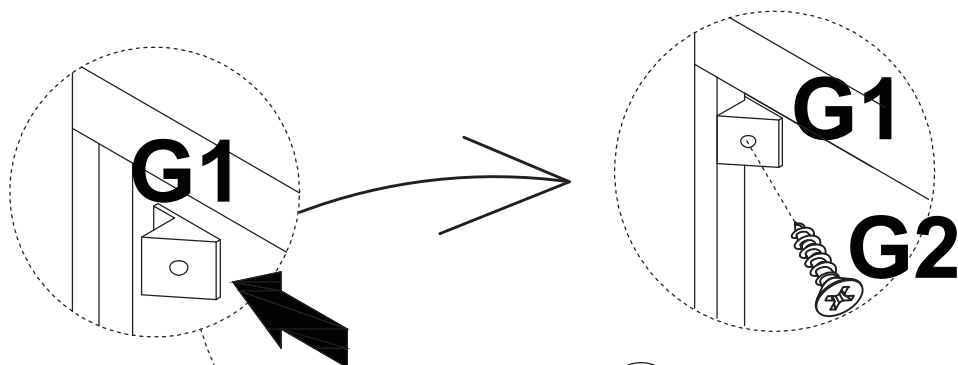

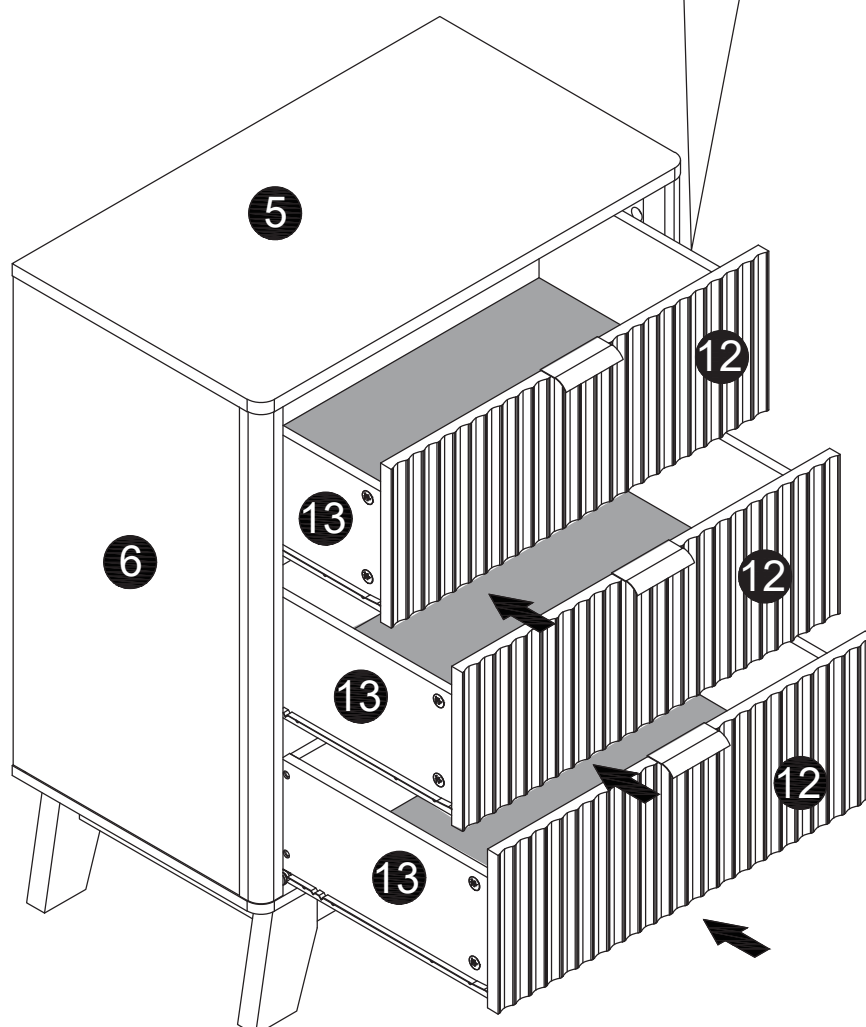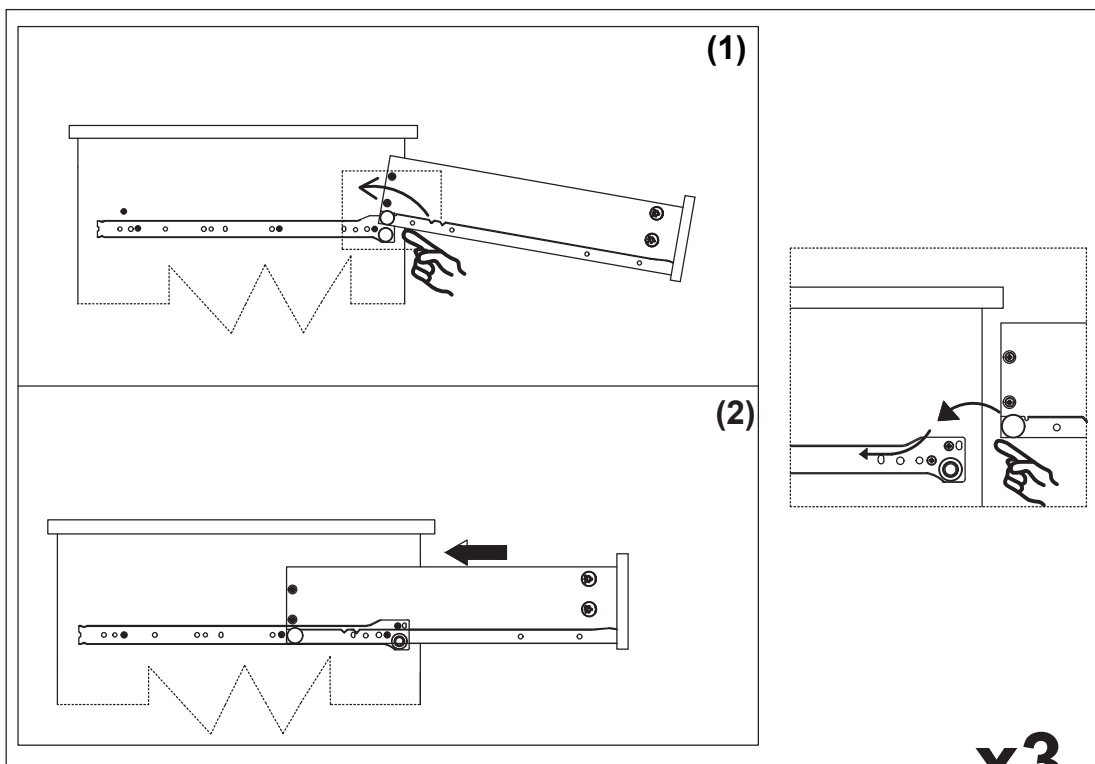

D x2



I x2




J x2




K x2




Done

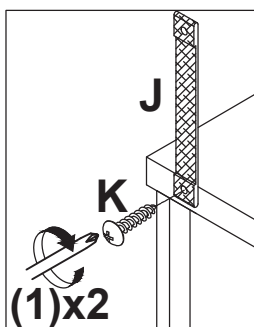


First fix the anti-rewind screw in the reserved hole of the product.

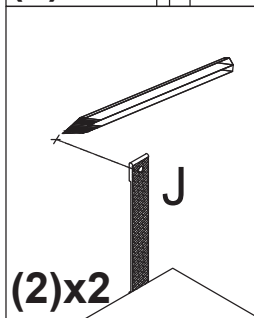


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

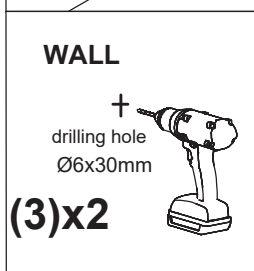

Then use a tape drill to make holes in the wall that are suitable for the product screws.

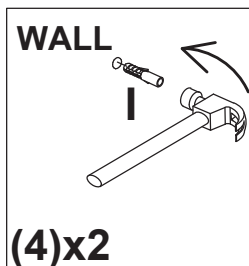

Then, put the expansion bolt into the hole

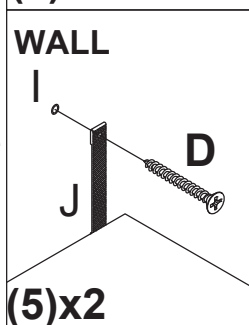

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

