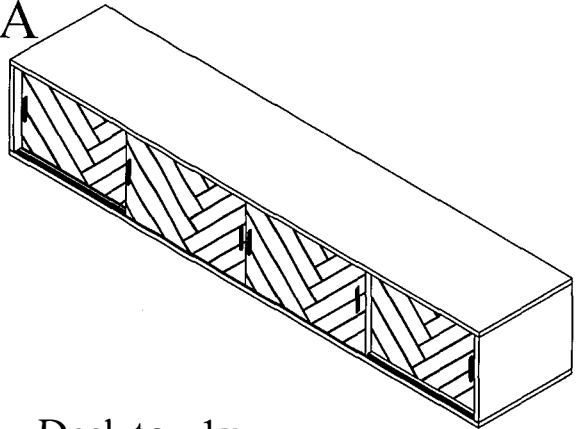




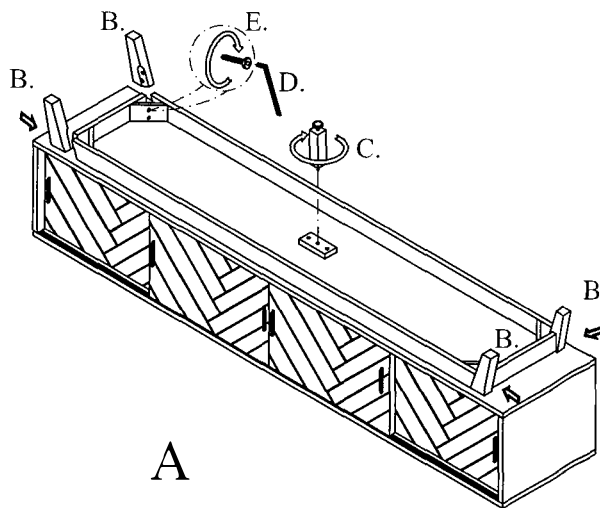


Assembly instructions

-TV (LOW) 2000x400x500

<p>A</p>  <p>Desk top 1x</p>	<p>B</p>  <p>Cabinet legs (angle) 4x</p>	<p>D</p>  <p>Allen key 1x</p>
	<p>C</p>  <p>Cabinet legs (Center) 1x</p>	<p>E</p>  <p>Bolt M6 x 60mm 8x</p>

STEP 1:



STEP 2: Finish.

