




aykah

EIRA STORAGE BED ASSEMBLY SHEET

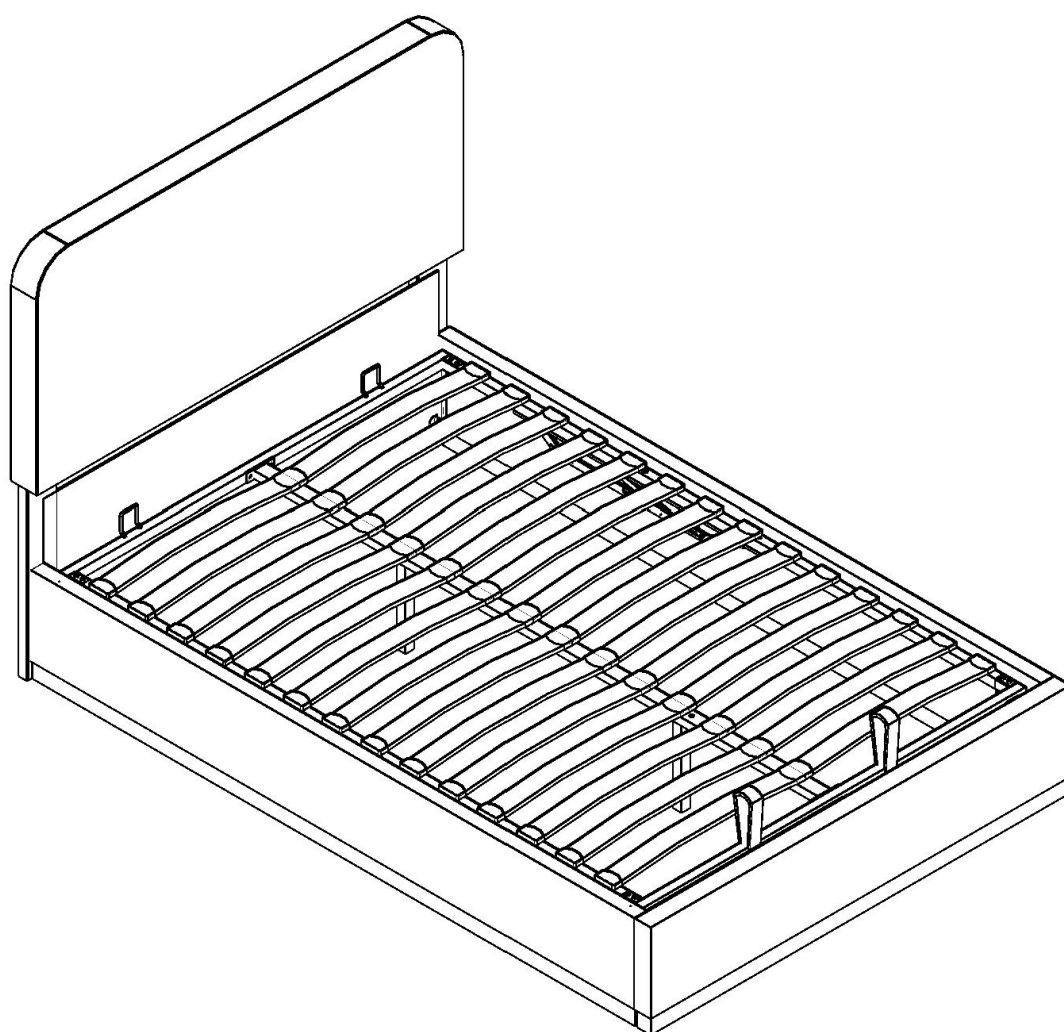




No. of People: 2

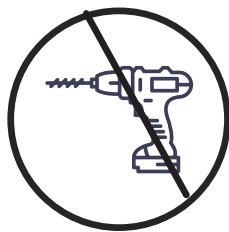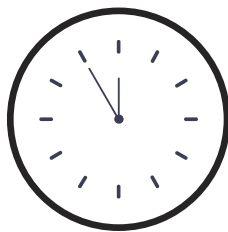
NO power tools
required.


Time: 2 hours

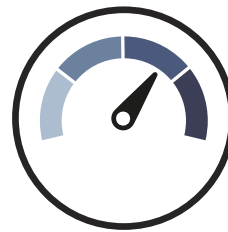
Use a damp
cloth to clean.

Level of
difficulty: 3/4

ASSEMBLY INSTRUCTIONS

Thank you for making a purchase with Aykah. The goal of this assembly sheet is to help you assemble the product in a safe and accurate way. Kindly follow all the instructions carefully to ensure a safe and accurate assembly process.









A few important things to note:

- Please do not use a power tool to assemble this product. Using one may hinder and/or damage the item and will invalidate any claims for warranty.
- Depending on the amount of use this product receives, it may be recommended to tighten up the fixings from time to time. This is completely normal!
- Do not drag the bed. Always lift with at least two people to avoid injury or damage.







PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	M8*20 BOLT 	18
B	M8*40 BOLT 	13
C	M6*16 BOLT 	12
D	M6*35 BOLT 	4
E	FLAT WASHER M8 	1
F	NUT M8 	6
G	M8*20 BOLT 	4
H	ALLEN KEY M5 M6 	2
I	OPEN SPANNER 	1
J	PROTECTIVE PAD 	3

PARTS INVENTORY		
ID	DESCRIPTION	QTY
K	MATTRESS STOPPER 	2
L	PROTECTIVE PAD 	2
M	PROTECTIVE PAD 	1
N	GAP NUT 	7
O	NUT M6 	4
P	M8*50 BOLT 	4


PARTS INVENTORY

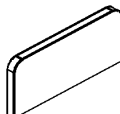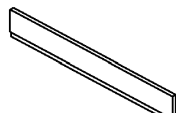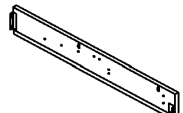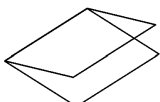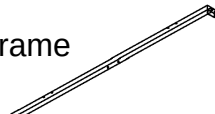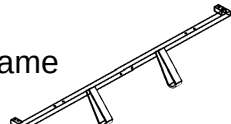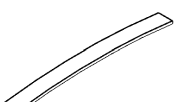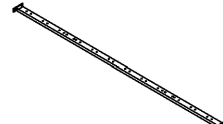ID	DESCRIPTION	QTY
1	Headboard 	1
2	Footboard 	1
3	Left Side Rail 	1
4	Right Side Rail 	1
5	Bottom Non-woven Cloth 	1
6	Upper Metal Frame 	1
7	Down Metal Frame 	1
8	Wood Slat 	30
9	Metal Frame 	2
10	Center Frame 	1
11	Side Rail Connector 	1
12	Center Floating Leg 	2

PARTS INVENTORY

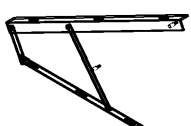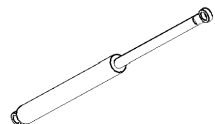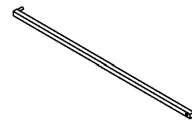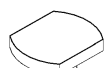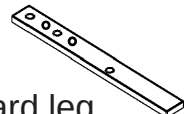
ID	DESCRIPTION	QTY
13	Left Hydraulic 	1
14	Right Hydraulic 	1
15	Gas Lift 	2
16	Strut 	1
17	Support 	1
18	Footboard Middle Bracket 	1
19	Corner Bracket 	2
20	Double Open-Ended Clip 	15
21	Single Close - Ended Clip 	30
22	Left Headboard leg 	1
23	Right Headboard leg 	1
24	 	1

STEP 1

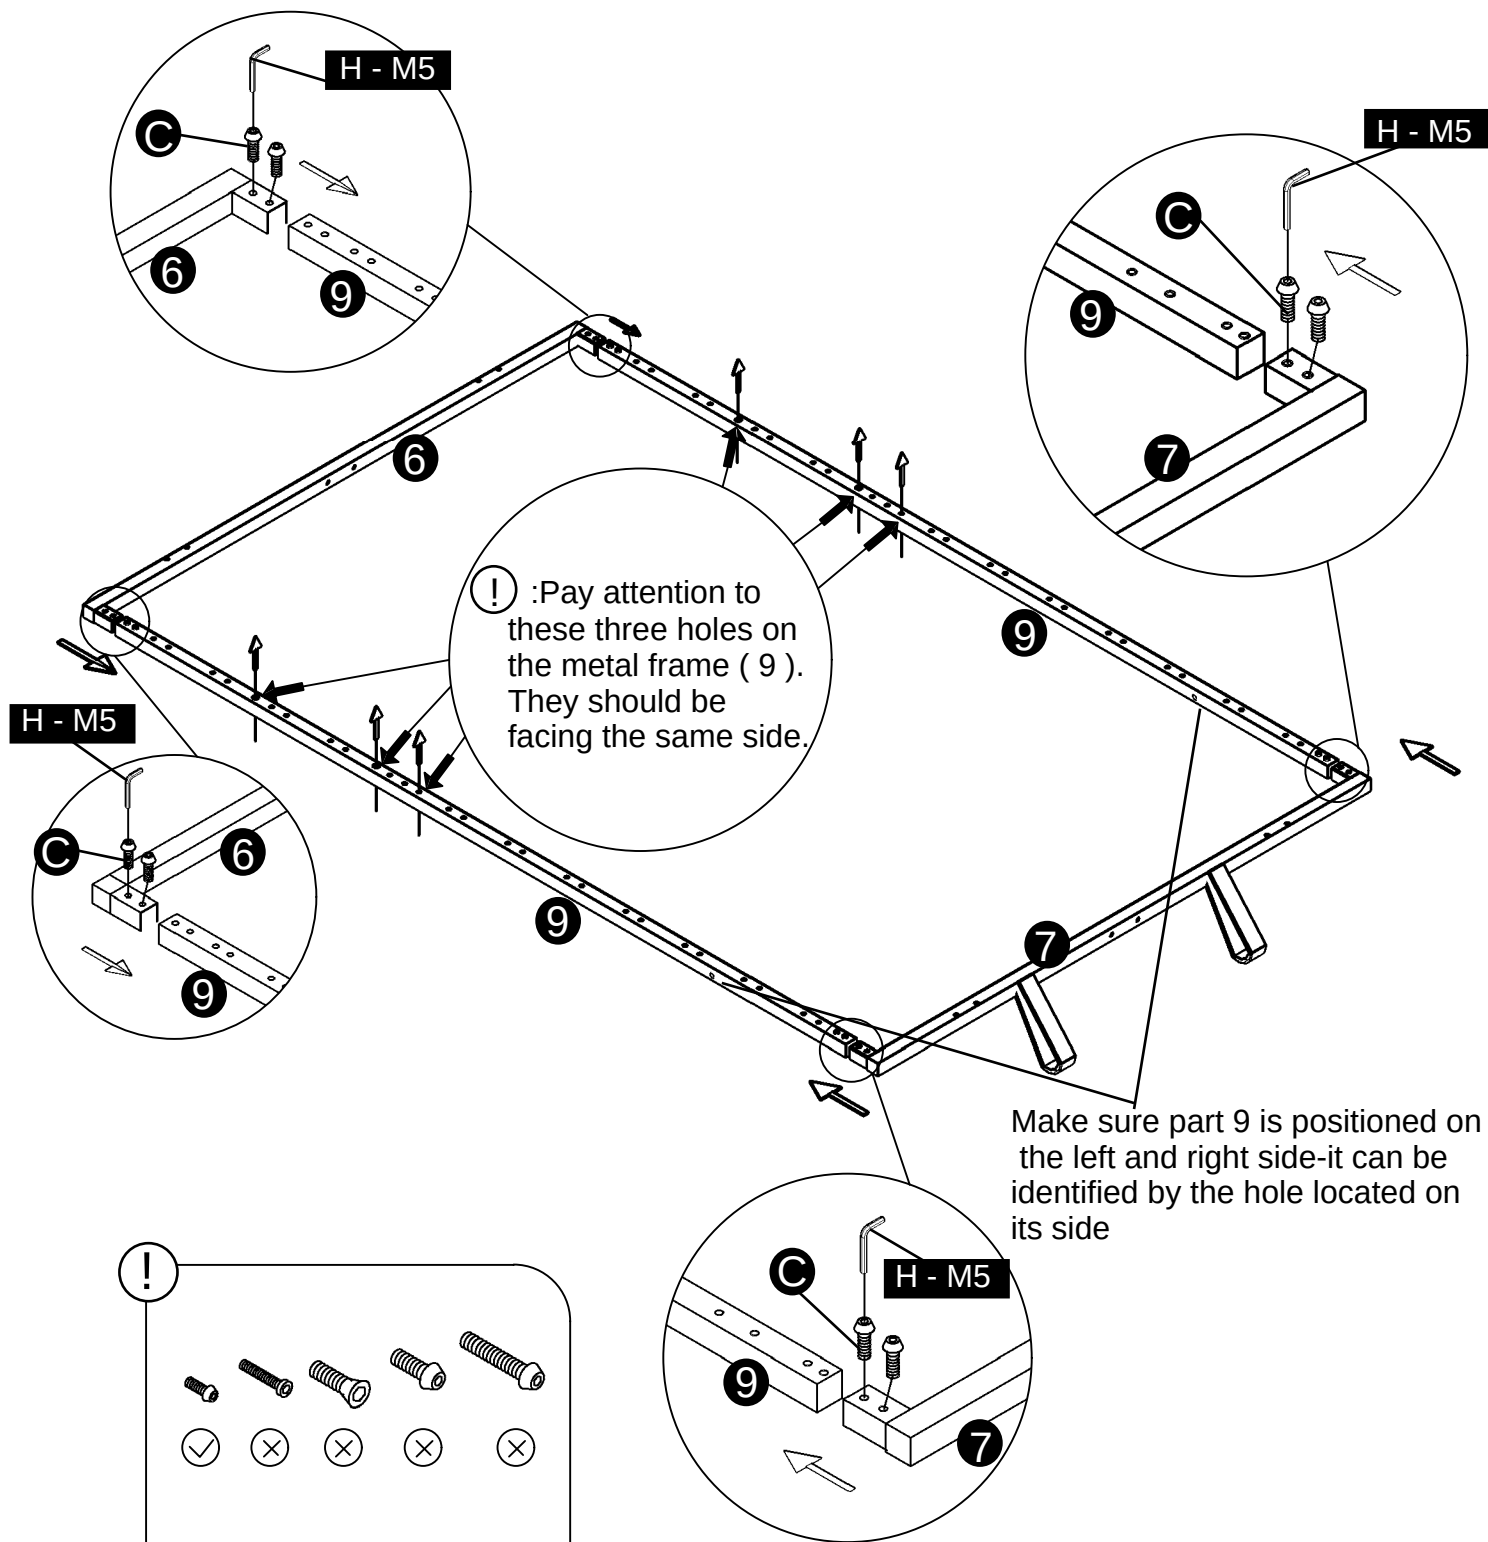

Step 1: Attach parts 9 and 6 / 7 using hardware C .


STEP 2

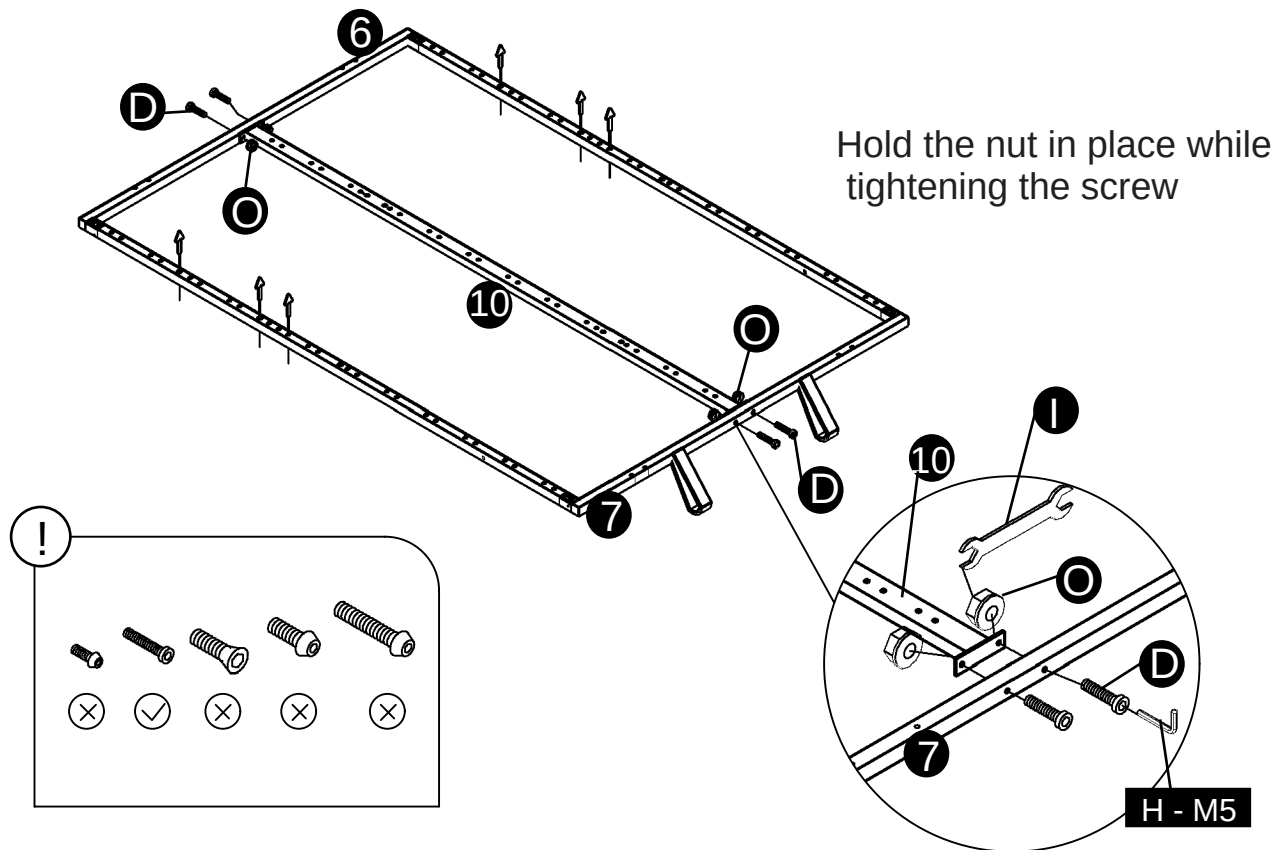

Step 2 : Attach part 10 to both sides of part (7 and 6) using hardware D and O


STEP 3

Step 3: Turn over the metal frame so the side with multiple holes is facing down. Align and attach the support legs (12), to part (10) using hardware C, as shown in the photo.

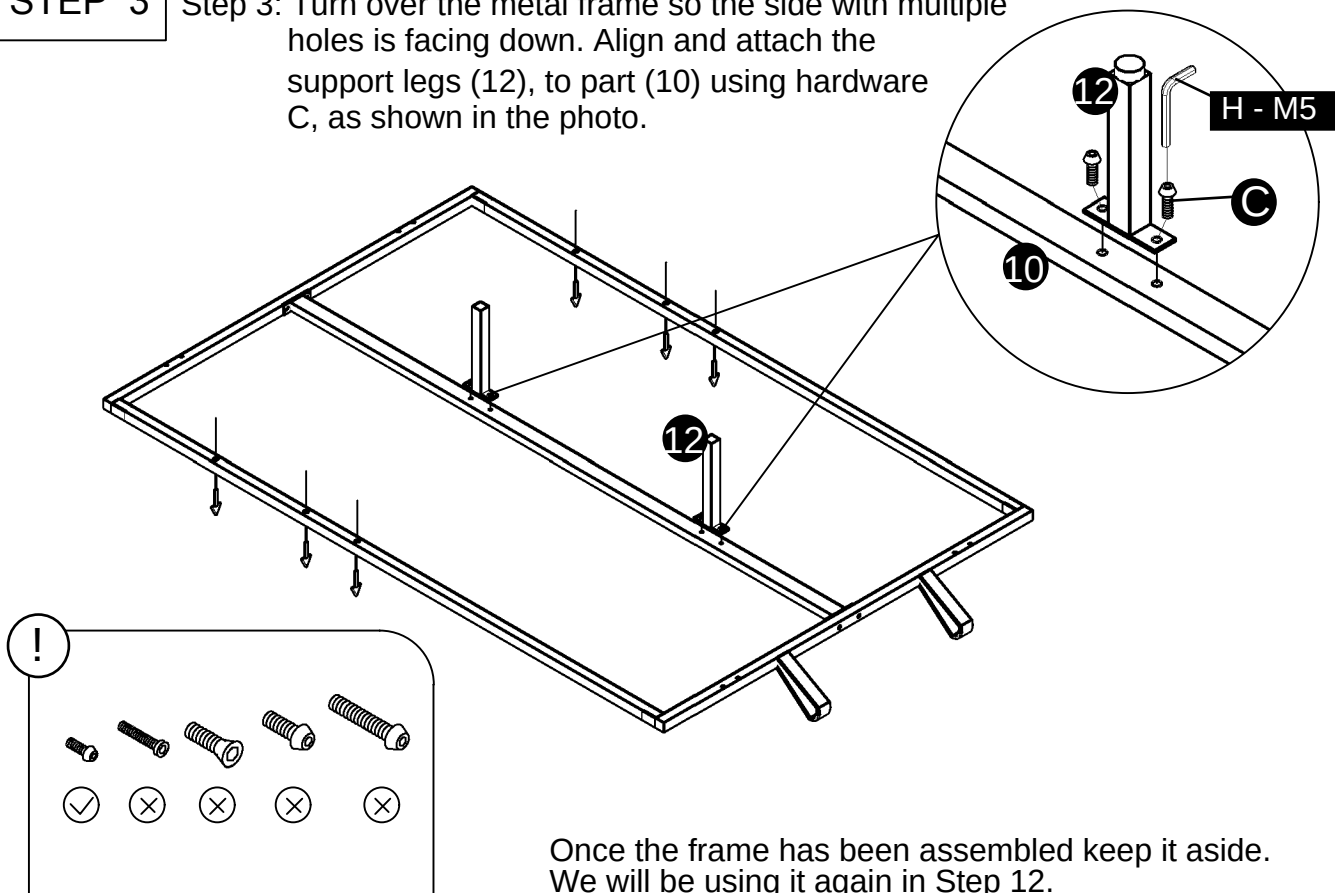

STEP 4


Step 4: Open the flap behind the headboard and attach the headboard legs (22 and 23) to the headboard (1) using hardware P.

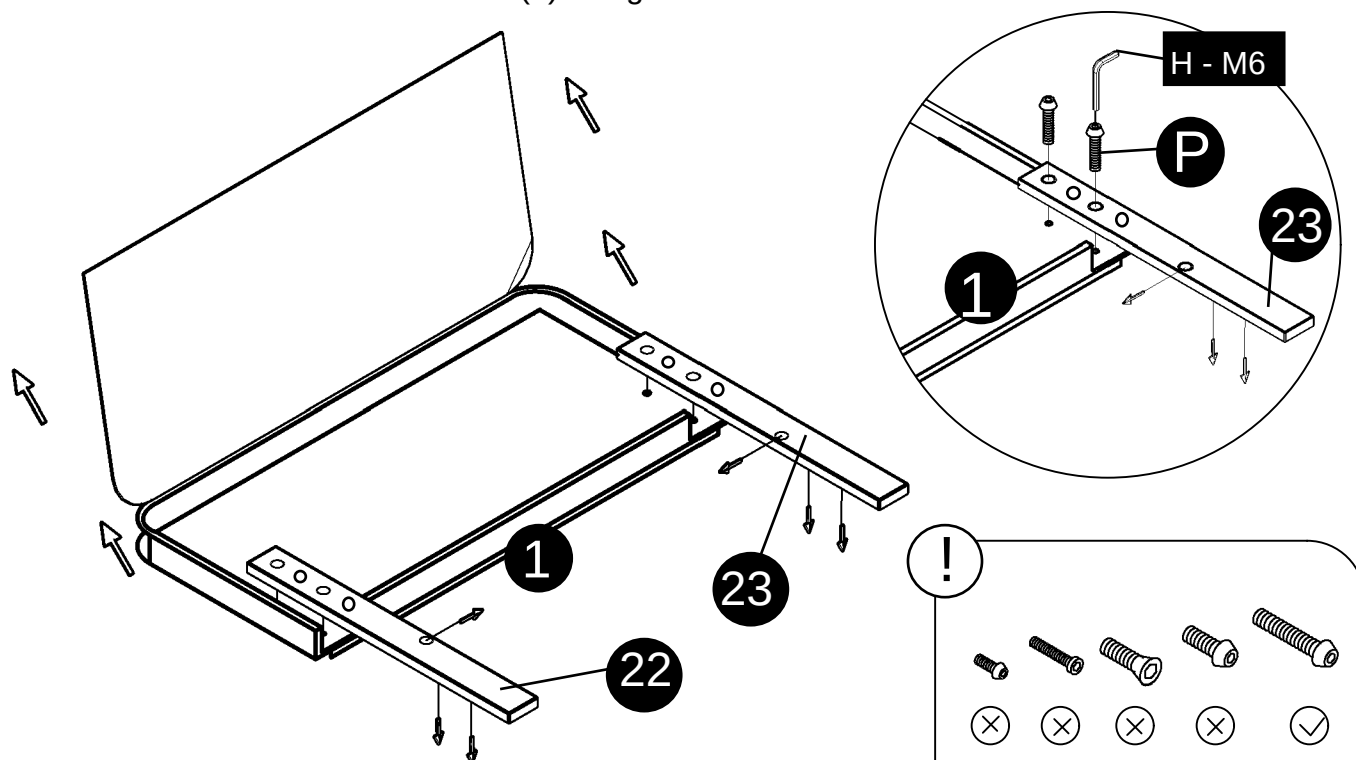

Note: This headboard is adjustable. You can change the height by selecting different mounting holes on the headboard legs. Use holes 1 and 3 to attach the headboard for a higher height, or holes 2 and 4 for a lower headboard position.


STEP 5

Step 5: Close the flap behind the headboard, then attach the headboard leg connector (24) to the headboard legs (22 and 23) using hardware A.

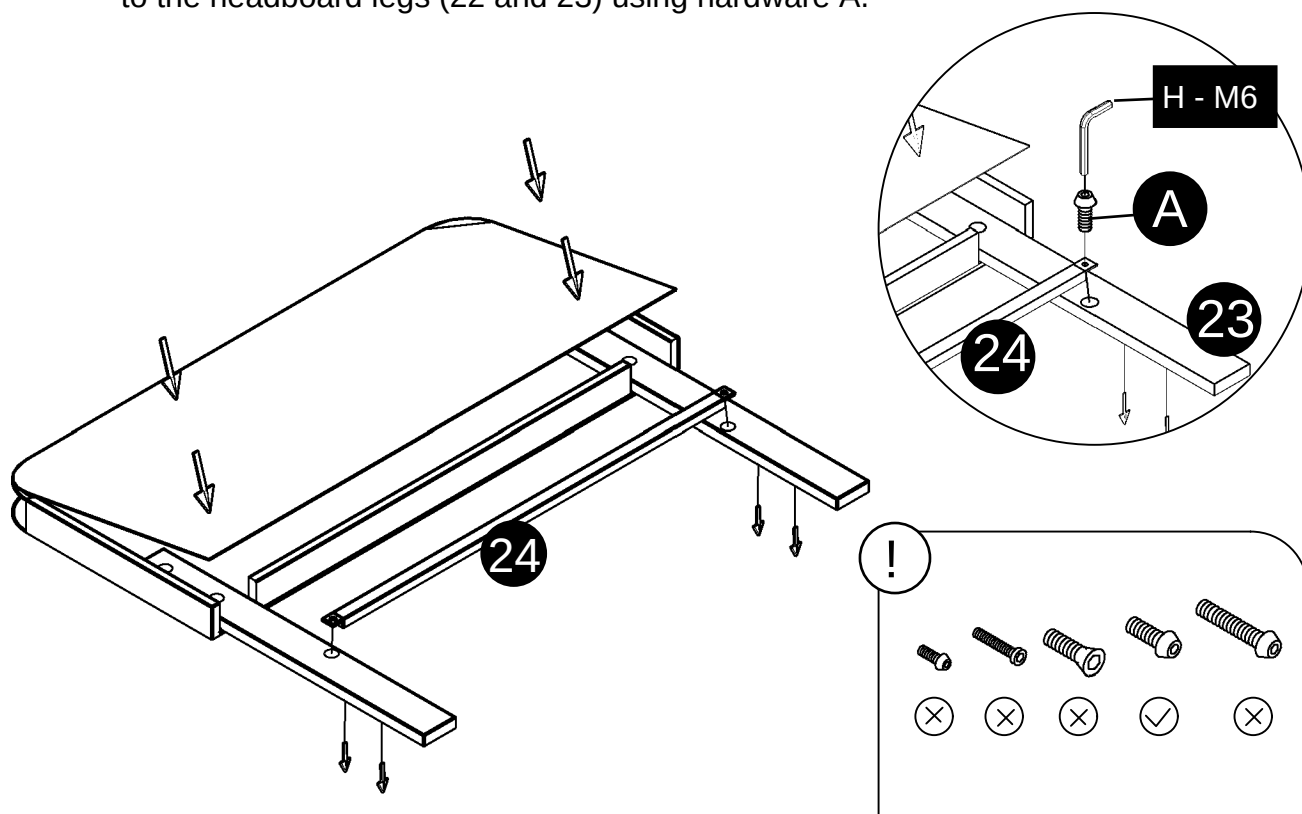


STEP 6

Open up the hydraulic part by lifting it up firmly, it may require some strength

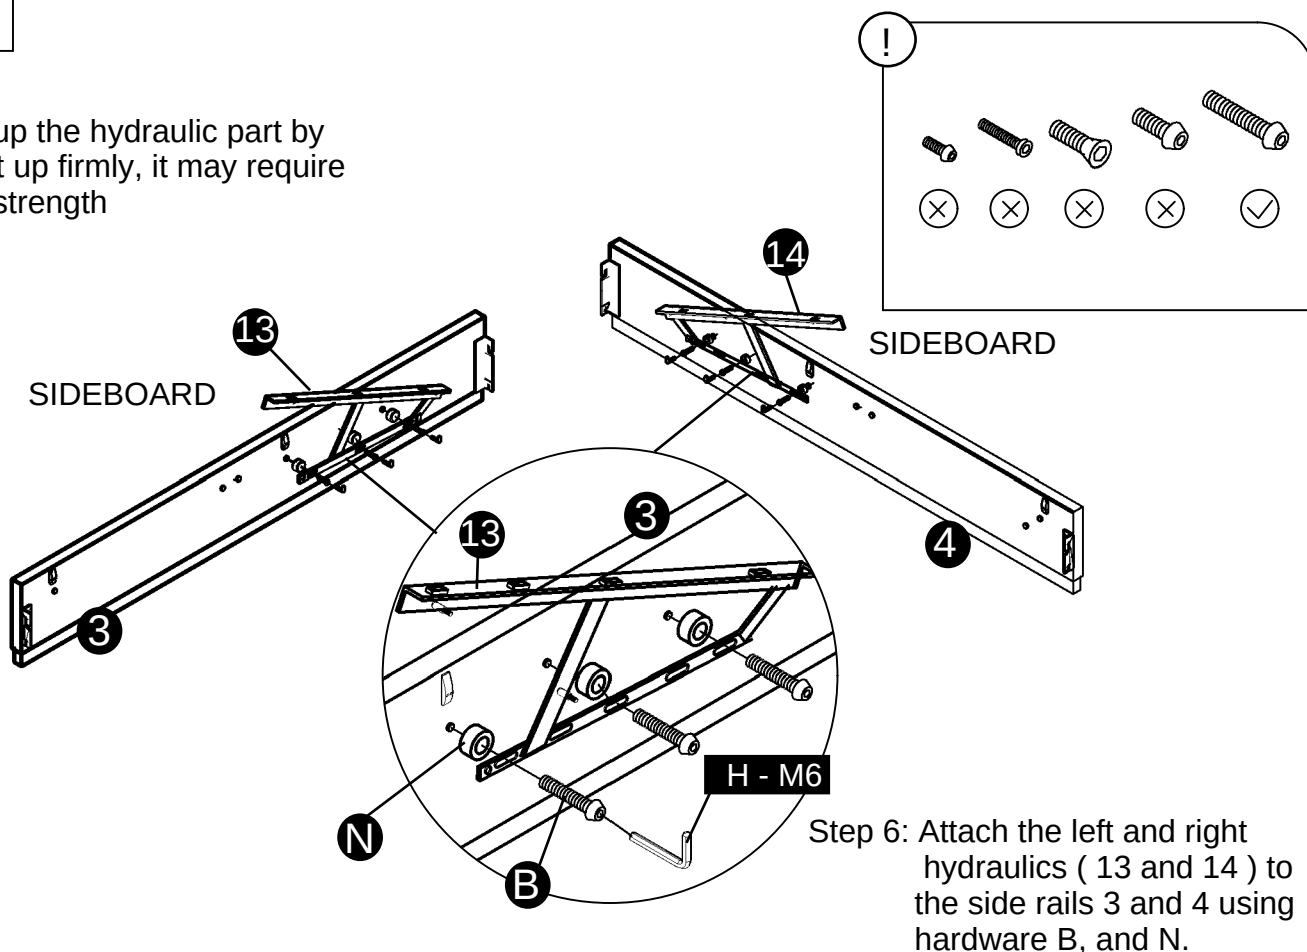

STEP 7


Step 7(a): Attach the side rails (3 and 4) to the headboard legs (22 and 23), using hardware A.

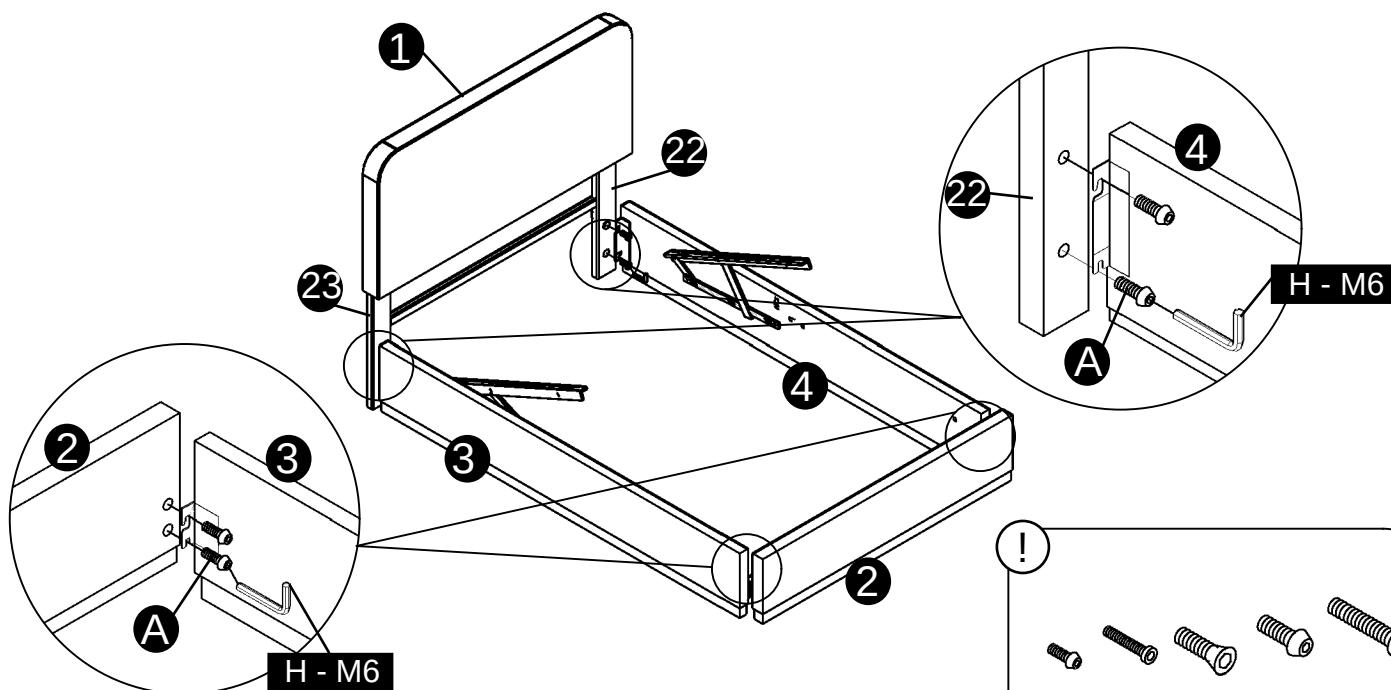


Step 7(b): Attach the side rails (3 and 4) to the footboard (2), using hardware A.

STEP 8


Step 8: Attach the middle bracket (18) to footboard (2) using hardware A.

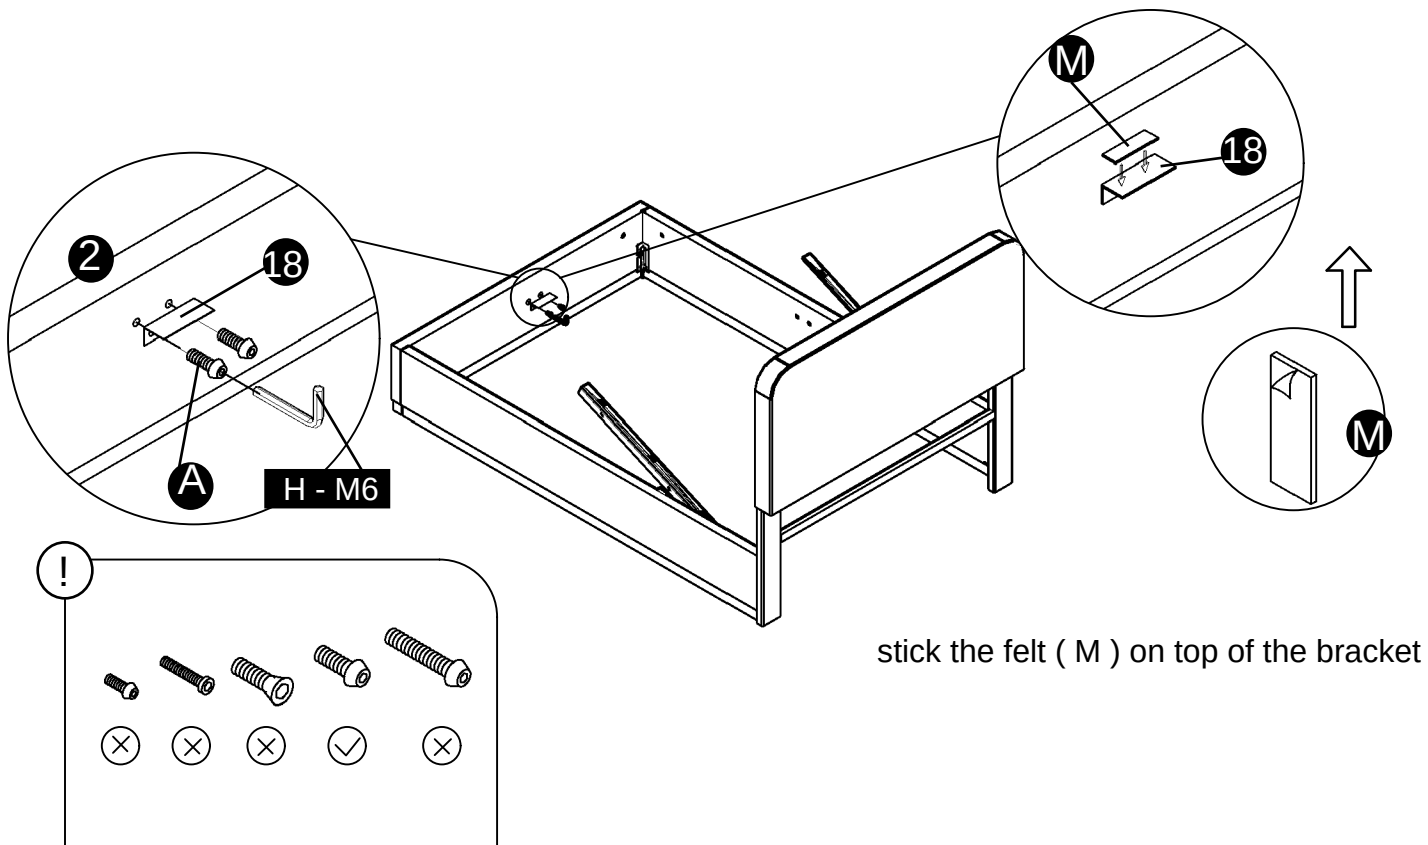**STEP 9**

Step 9: Attach the corner brackets (19) to connect the side rails(3 and 4) to the footboard(2), using hardware A .


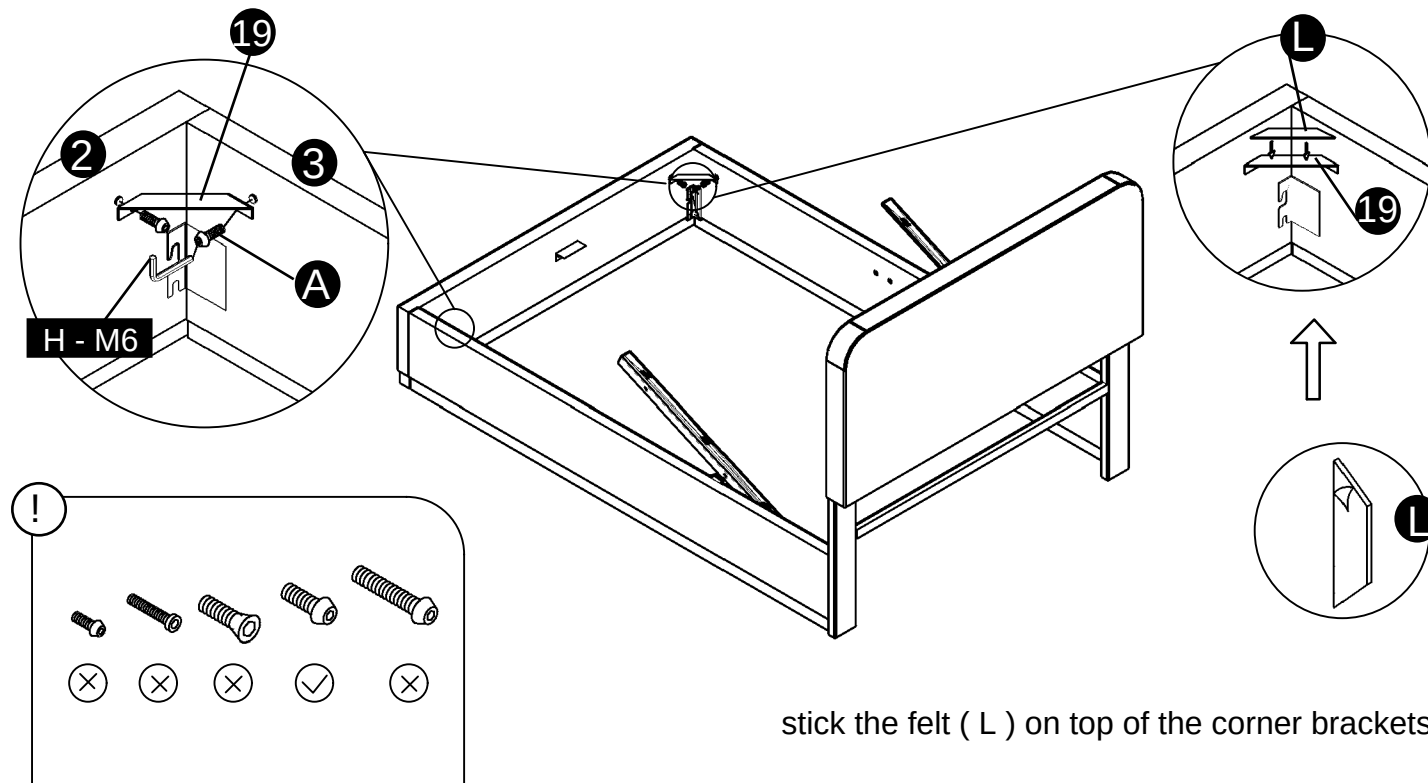


STEP 10

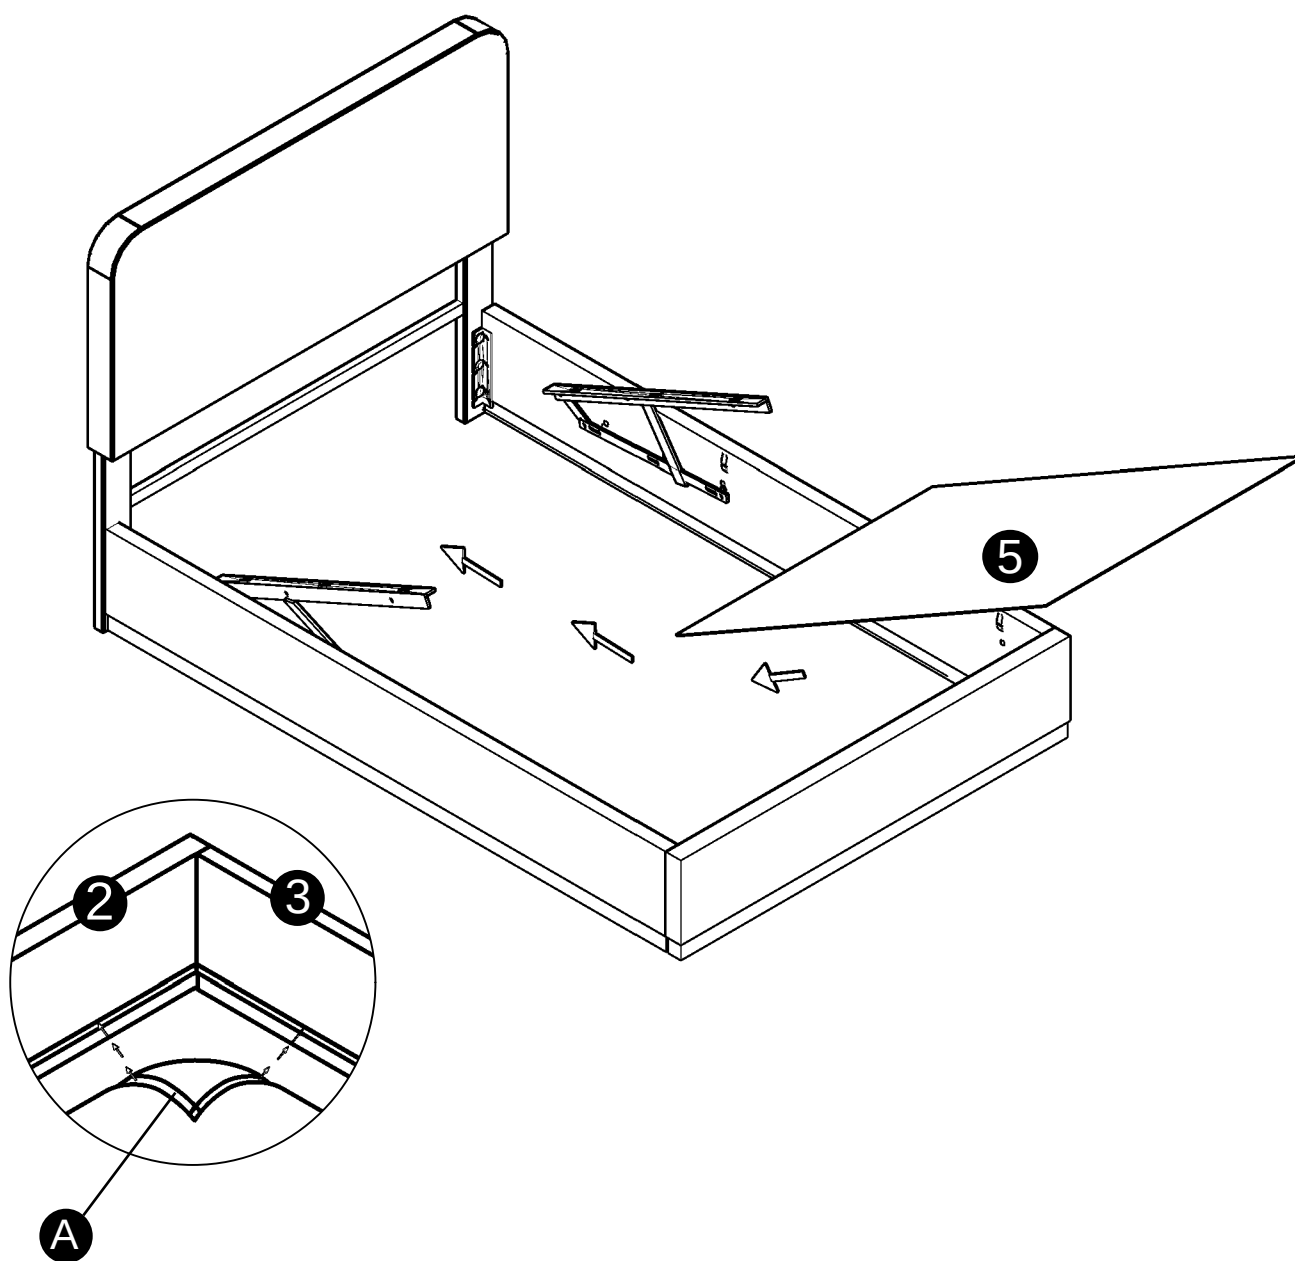

Step 10: Attach the non-woven fabric (5) to the inner sides of the bed frame. Start from the footboard and attach the fabric along the entire length of both side panels, securing it to the Velcro strips on the sides.



STEP 11

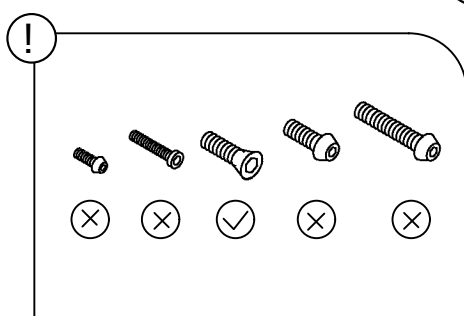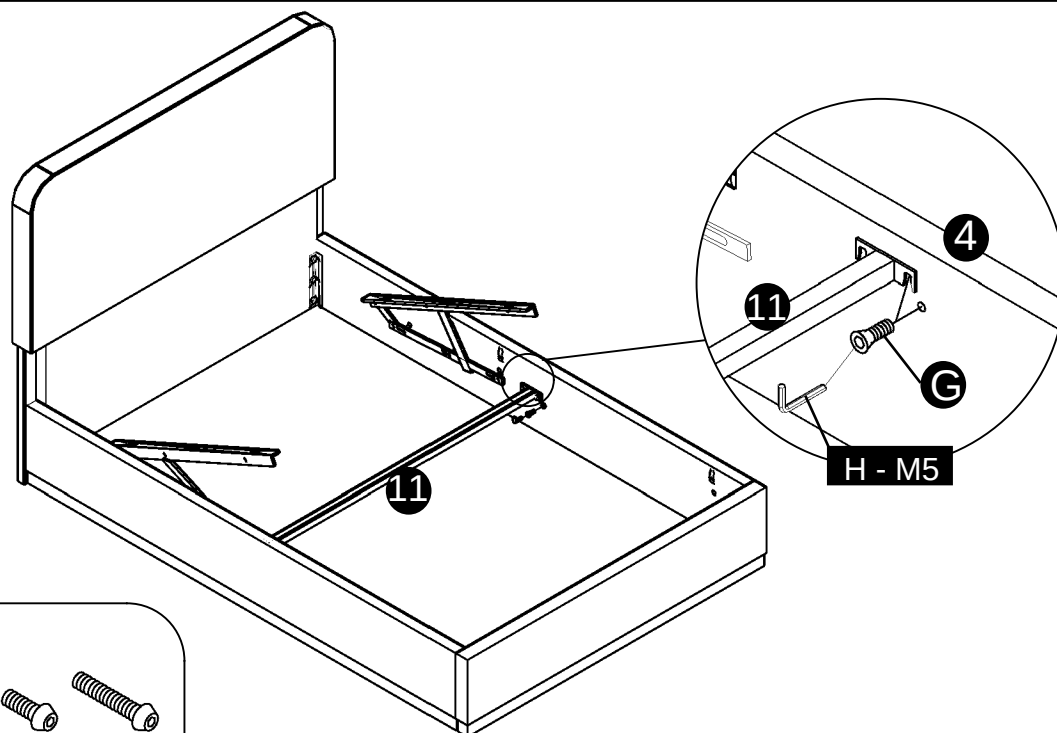

Step 11: Attach the second side rail connector (11) to the centre of both side rails (3 and 4) using hardware G.


STEP 12

Step 12: Attach the frame that you built in the previous steps to the gas lift mechanism using hardware B, and F.

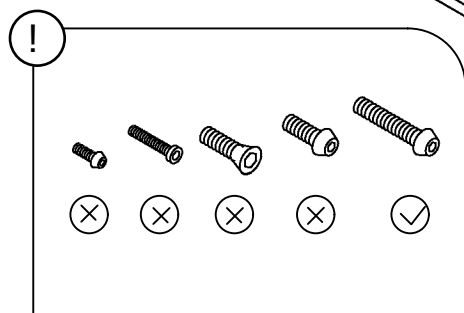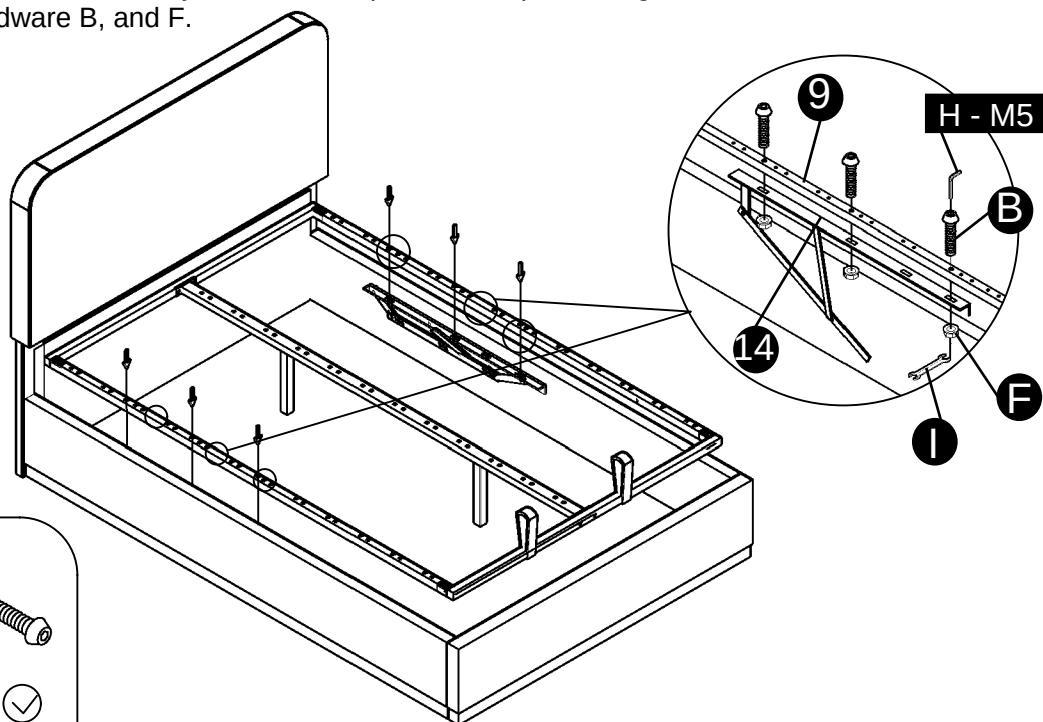

If you're unsure which three holes to use to connect the metal frame, please check the back of the metal tube (part 9) — you will see the three holes visible there.

STEP 13

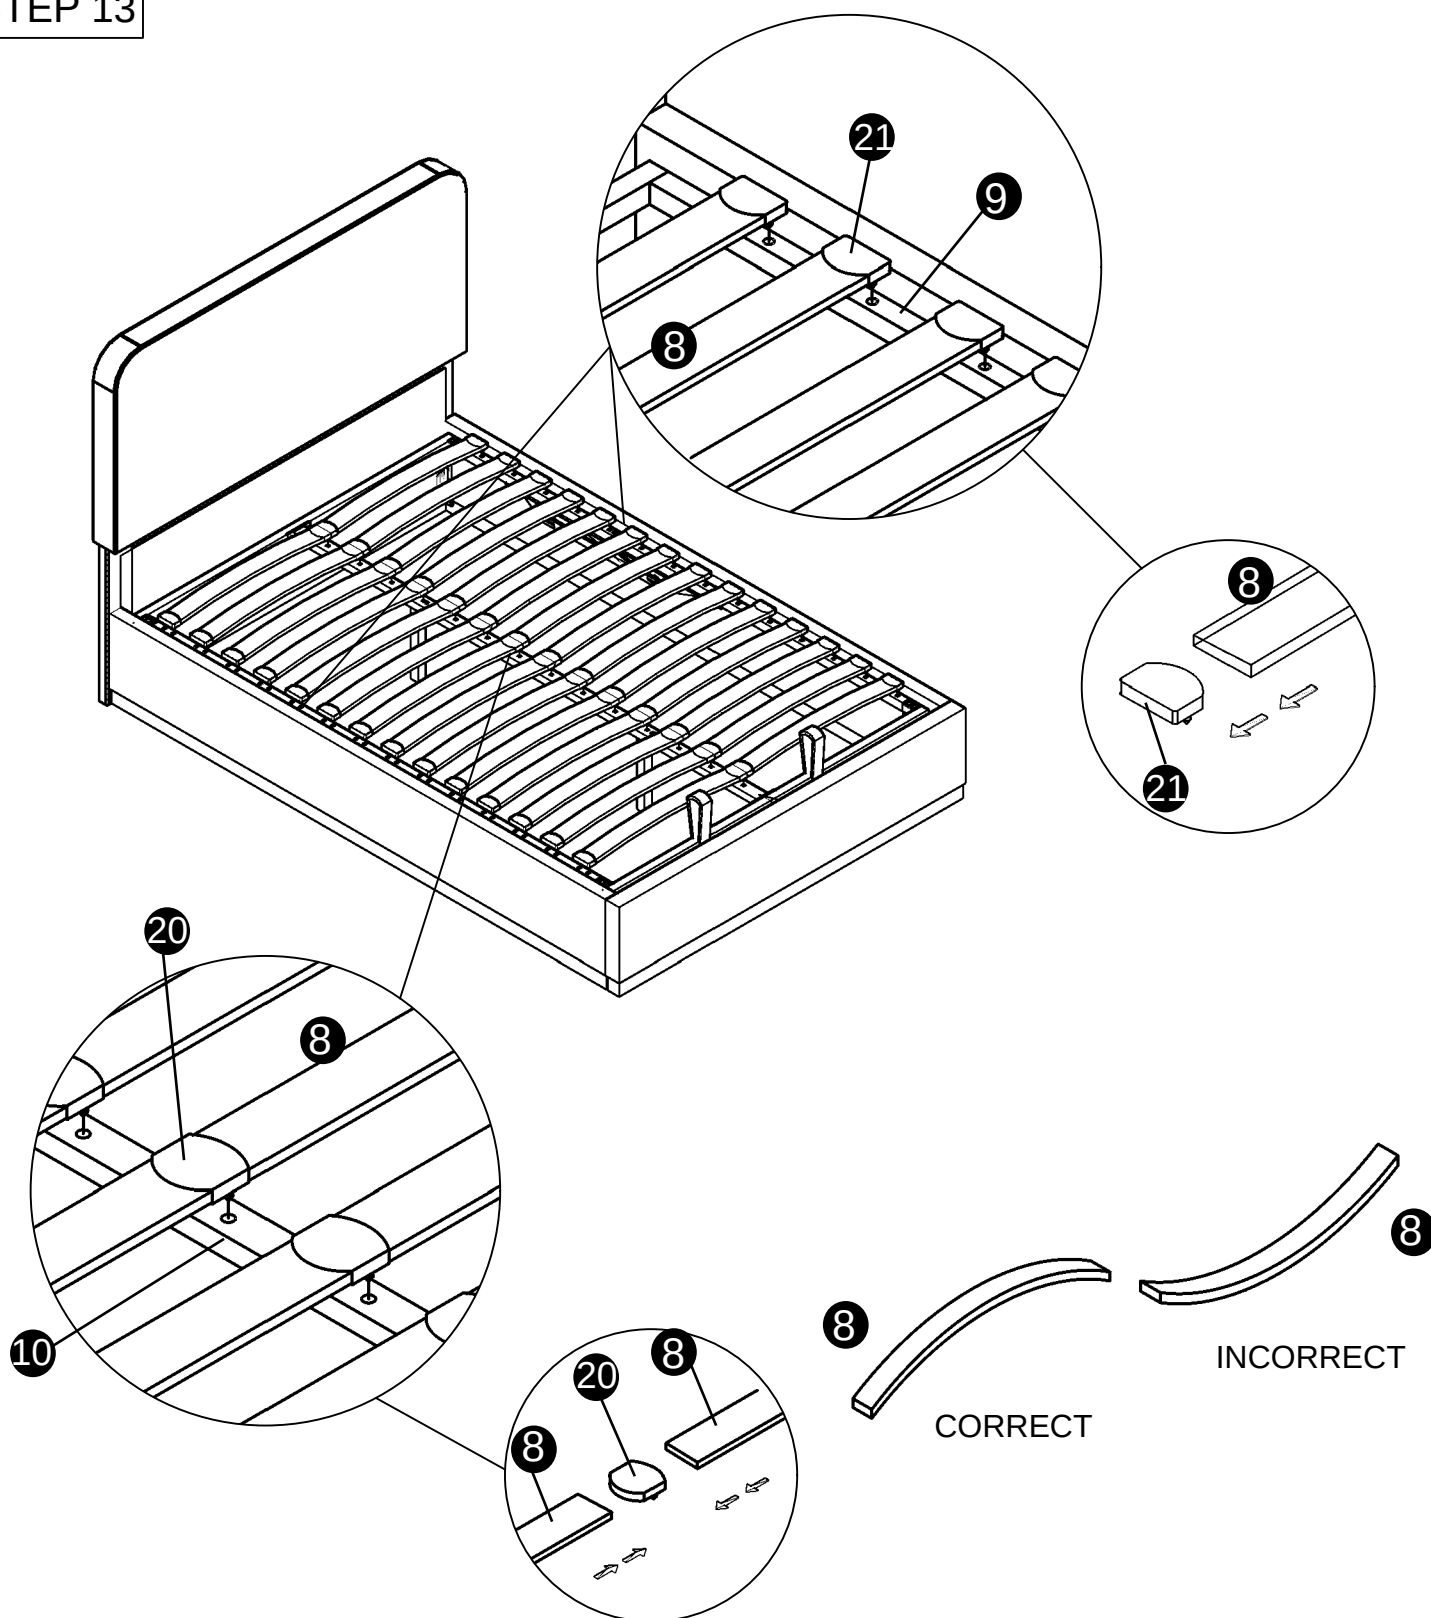


Step 13: Attach the slats (8) to the plastic clips and insert them into the holes of the metal bars (9 and 10). Clips open from both sides (20) will be attached to the middle bars (10), and clips open from one side (21) will be attached to the side bars (9).

NOTE: Ensure the slats are curved upwards when attaching them to the clips. Incorrect attachment may lead to breakage.

STEP 14




Make sure the stoppers are on the side of the headboard and not on footboard.

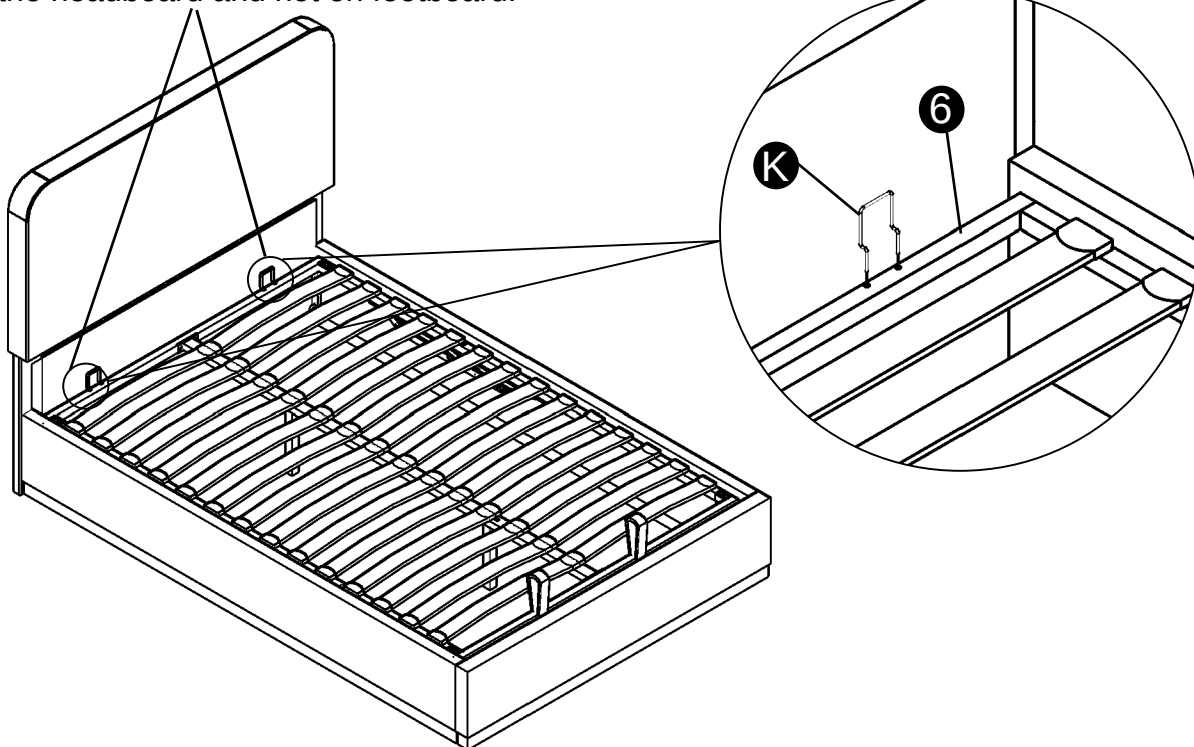

Step 14: Attach the mattress stoppers part K to part 6.


STEP 15

Step 15: Unscrew the nut on the left and right hydraulics (13 and 14) and attach the gas lifts (15). Screw the nut back on.

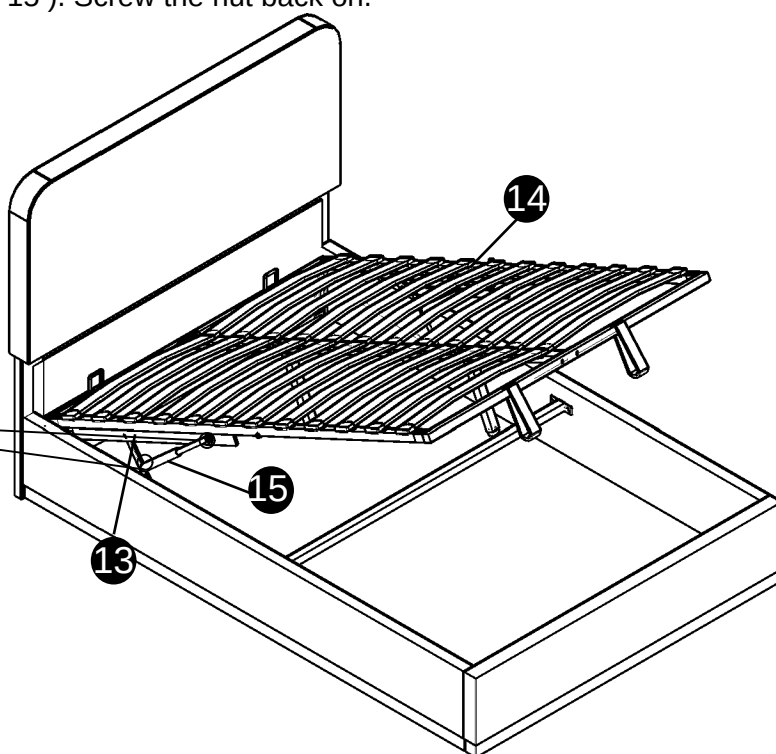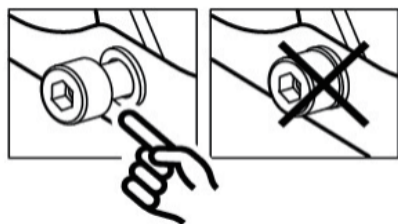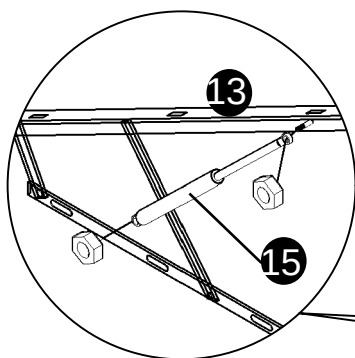



The nut should only be tightened by hand and will not go all the way in. No tools needed.

STEP 16

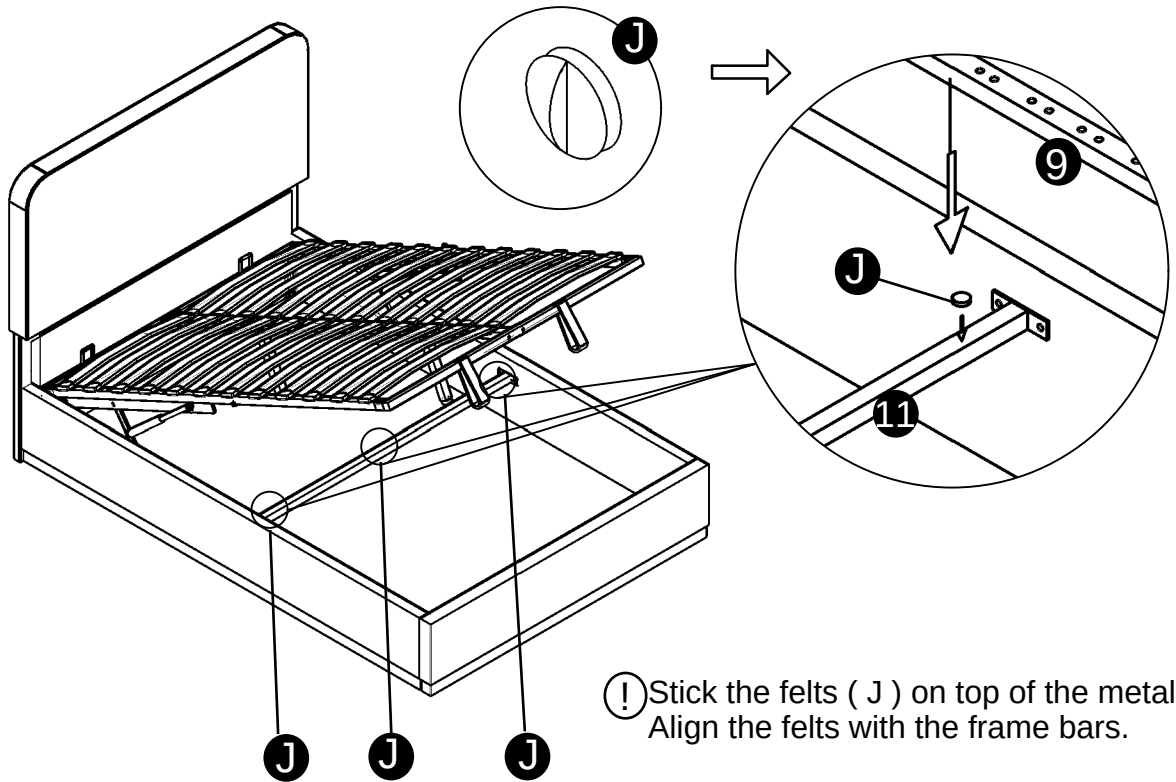


STEP 17

Step 17(a): Attach the bracket (17) to the centre of side rails (4) using hardware A.

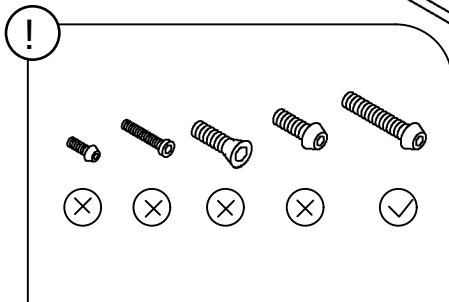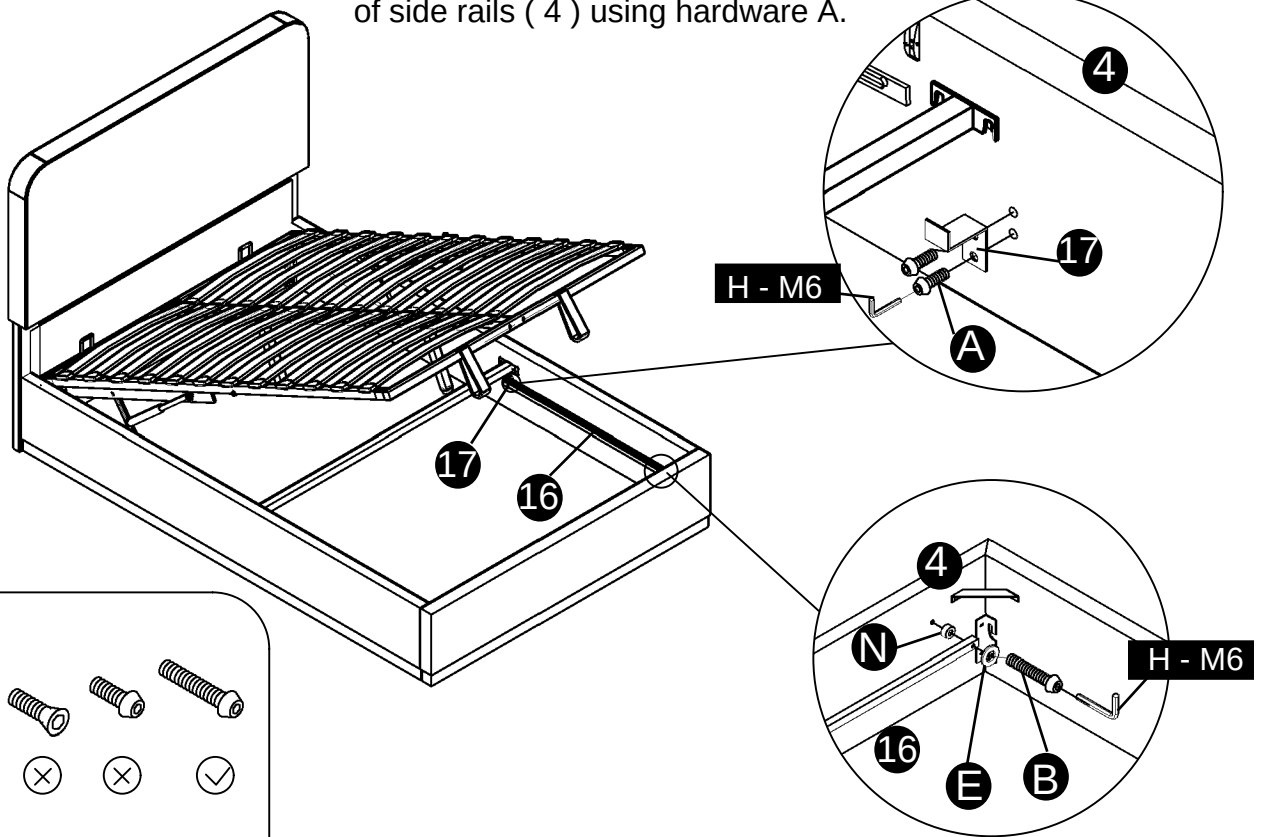


Step 17(b): Attach the Strut (16) to side rails (4) using hardware N , E and B.

STEP 18

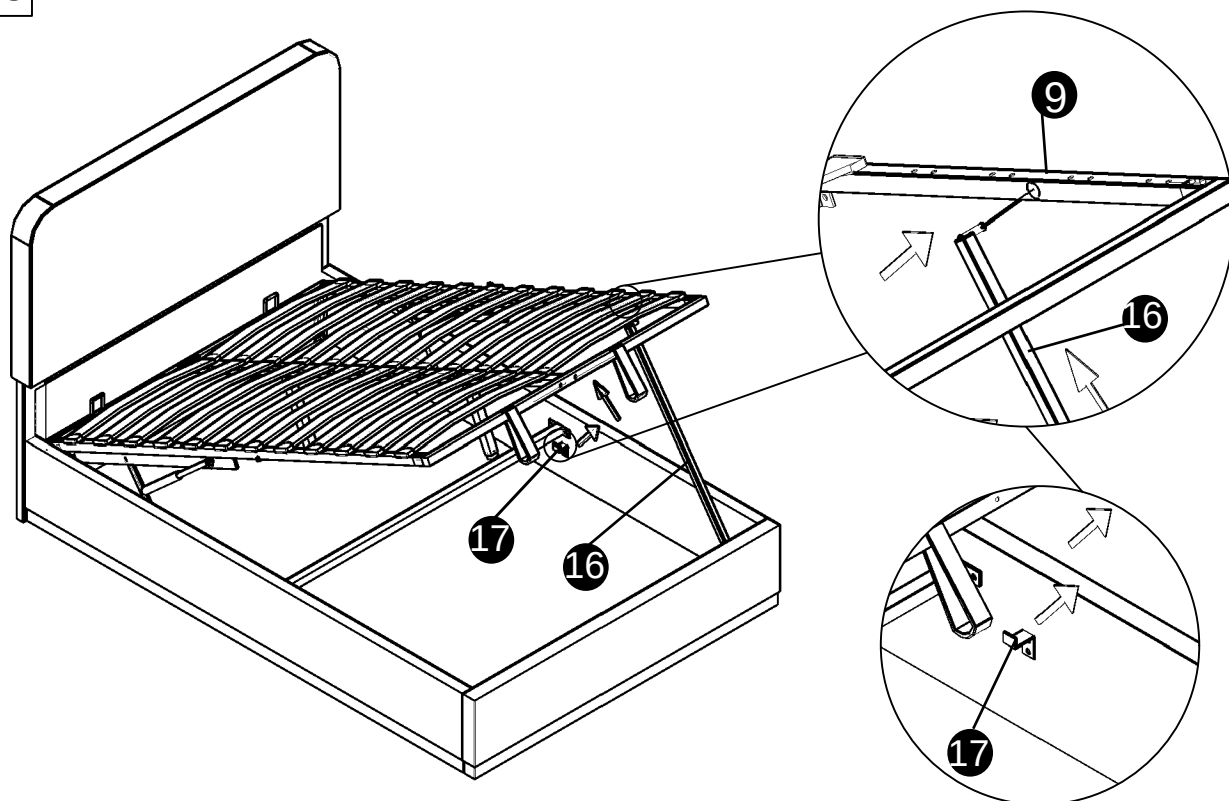

Step 18: To safely access the storage area, lift the bed frame and insert the strut (16) into the designated hole on the metal frame (9) to lock it in place and keep it securely propped open.


STEP 19

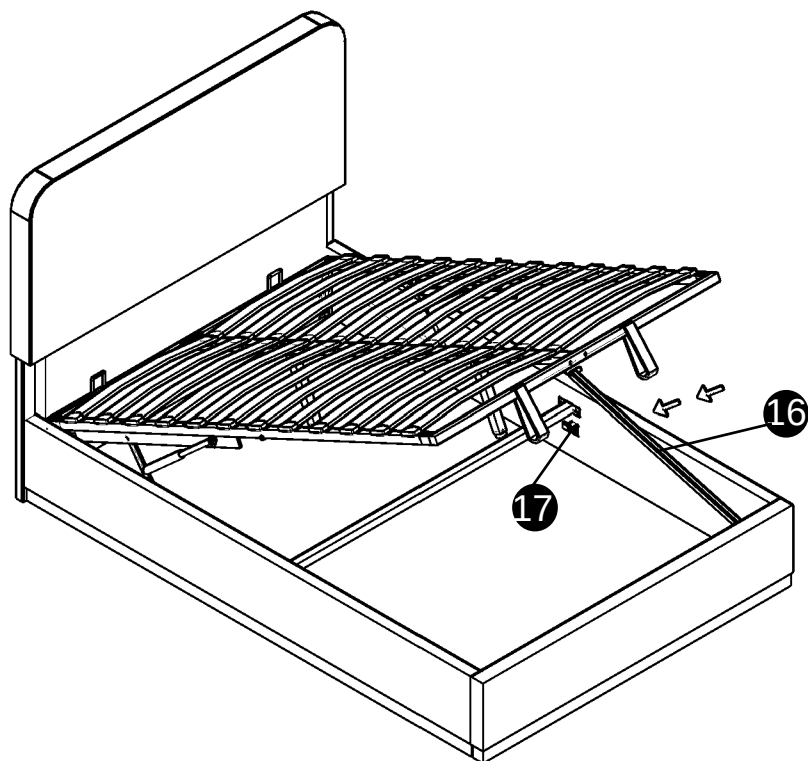

Step 19: When you're finished using the storage space, carefully remove the strut (16) from the metal frame and place it back onto the support plate (17) to secure it in its resting position.

STEP 20

ONCE THE MATTRESS IS ON TOP, YOU CAN
OPEN & CLOSE THE BED SAFELY

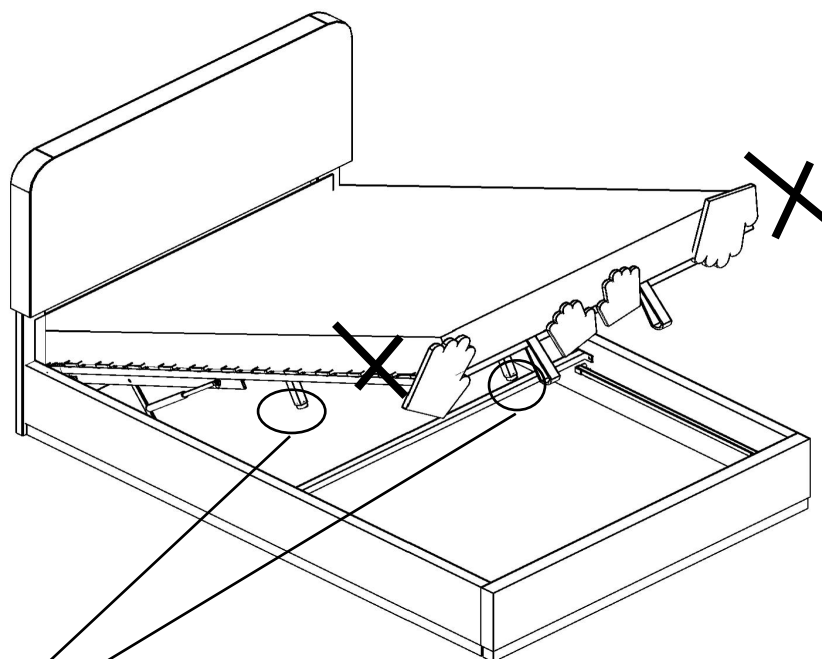

Do not fully open the adjustable part of the support legs. Please leave at least 1-2cm of space between the legs and the floor.



DO NOT
PUSH DOWN ON ONE
OR EITHER SIDE



PUSH DOWN FROM
THE MIDDLE USING
BOTH HANDS

Once all the nuts and bolts are tightened firmly, the first time you close the lifting mechanism, push down with extra pressure to force open the seals on the pistons.

This will feel like a lot of pressure, so be firm and it will close!

NOTE: The gaslift function works when you have a mattress on it. If you don't have a mattress on it, there is a possibility it will not stay down.



STEP 21



SAFETY WARNING: Please do not allow children or pets inside the storage area.



SAFETY WARNING: Please be careful when lifting the bed frame. Only lift with the mattress on top. To be operated by adults only.

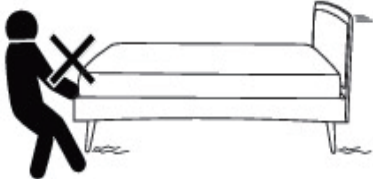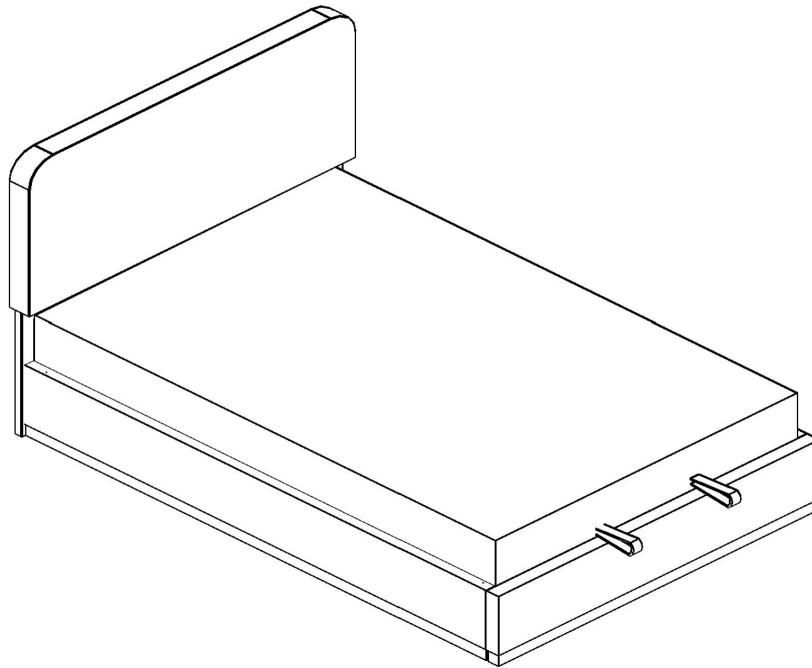

DO NOT DRAG BED, ALWAYS LIFT WITH AT LEAST TWO PEOPLE BEFORE MOVING



SAFETY WARNING: Please do not press down on the mattress when the bed frame is in the lift up position. The bed frame top must only be closed by using both center handles.

