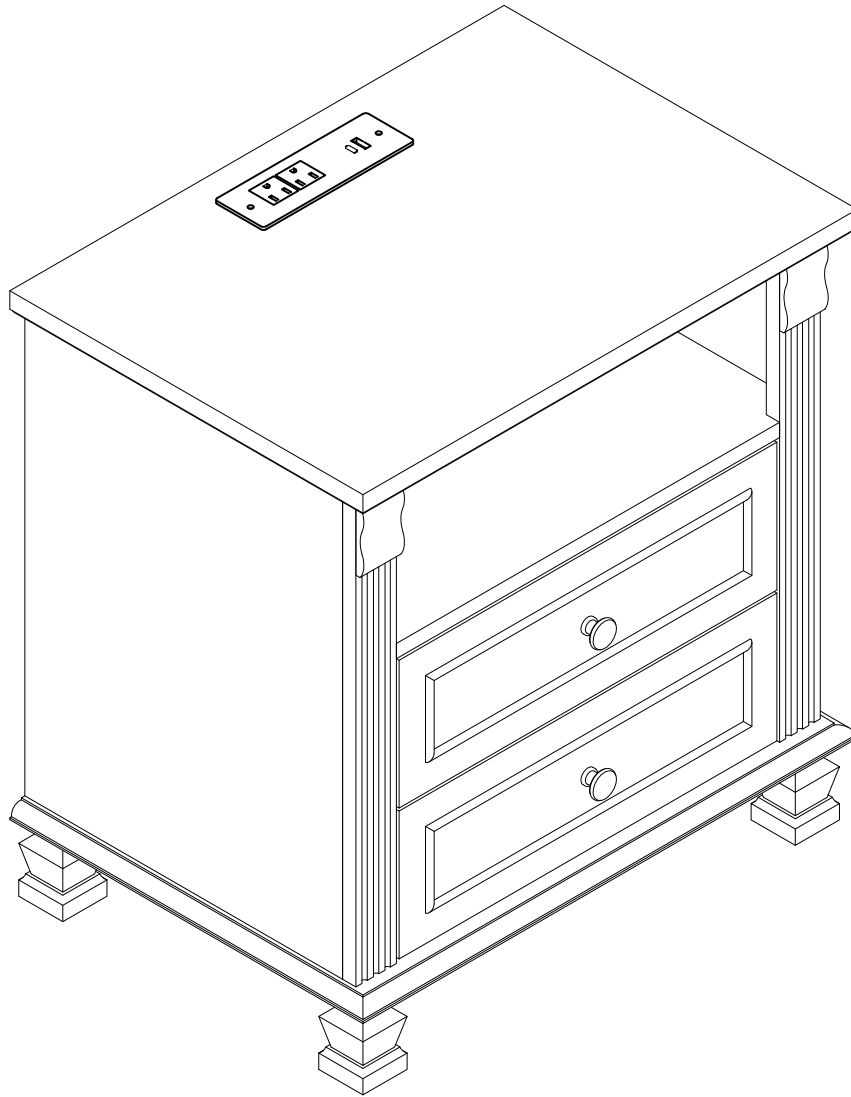


Instruction Manual



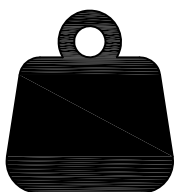
ITEM NO.HMGG0015

NOTE:

This brochure contains IMPORTANT safety info. Please read and keep for future reference.

MAINTAINANCE AND WARNING

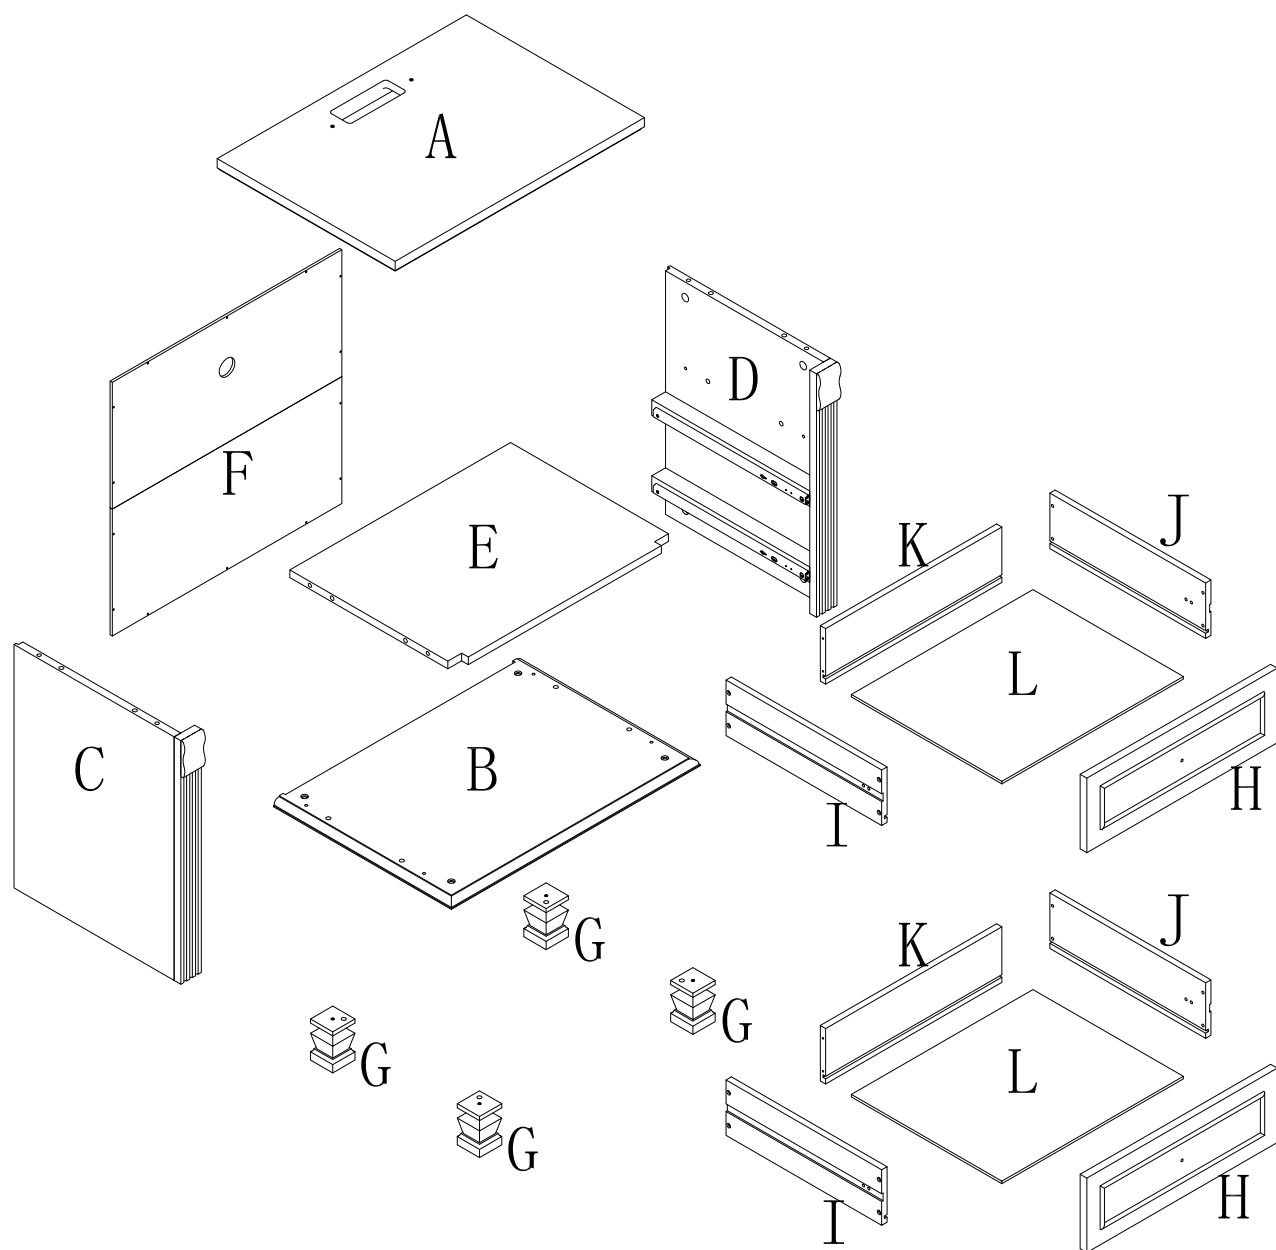
- 1.Keep furniture away from heat sources.
- 2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents,solvents,abrasives,spray packs or leather cleaner. Use non-color mild soa with warm water to clean spills(Mix 1:10 soap to water).
- 3.Do not place furniture under direct sunlight,material will possibly fade over time.
- 4.Do not use on site dry cleaning machine.Children should not climb or jump on the furniture.
- 5.Do not write on furniture that is not protectedby a padded barrier.
- 6.Not for commercial use,only for residential use.



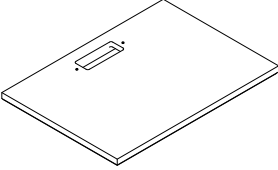
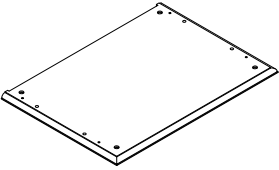
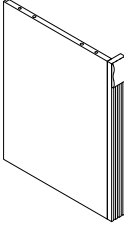
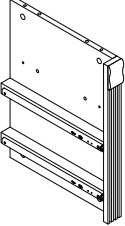
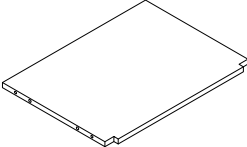
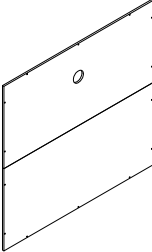
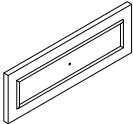



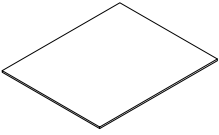
Weight Limitation

100 LBS

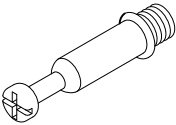



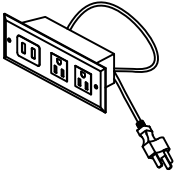



EXPLOSIVE VIEW



PARTS LIST

A	x1	B	x1	C	x1	D	x1
							
E	x1	F	x1	G	x4	H	x2
							
I	x2	J	x2	K	x2	L	x2
							

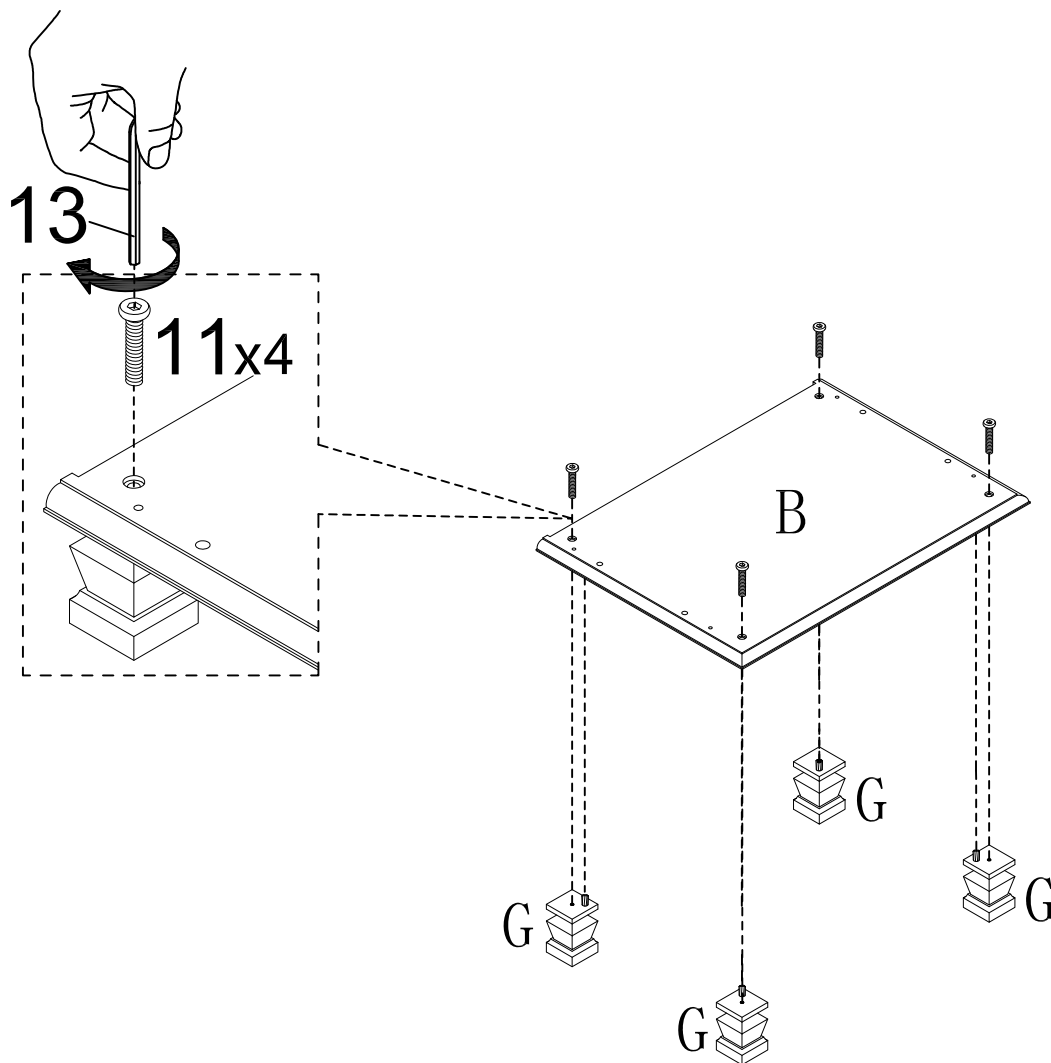
HARDWARE LIST


1	x12+1	2	x12+1	3	x12+1	4	x14+1	5	x2	6	x1
					$\Phi 8*30\text{mm}$		$\Phi 3*14\text{mm}$		$\Phi 3*15\text{mm}$		
7	x16+1	8	x2	9	x2	10	x8	11	x4	12	x1
	$\Phi 8\#*1"$				$\Phi 4*25\text{mm}$		$\Phi 4*13\text{mm}$		$\Phi 6*38\text{mm}$		
13	x1										
											
M4											


ASSEMBLY INSTRUCTIONS

STEP-1

1.Attached the legs G to the bottom panel B, tighten the screws #11



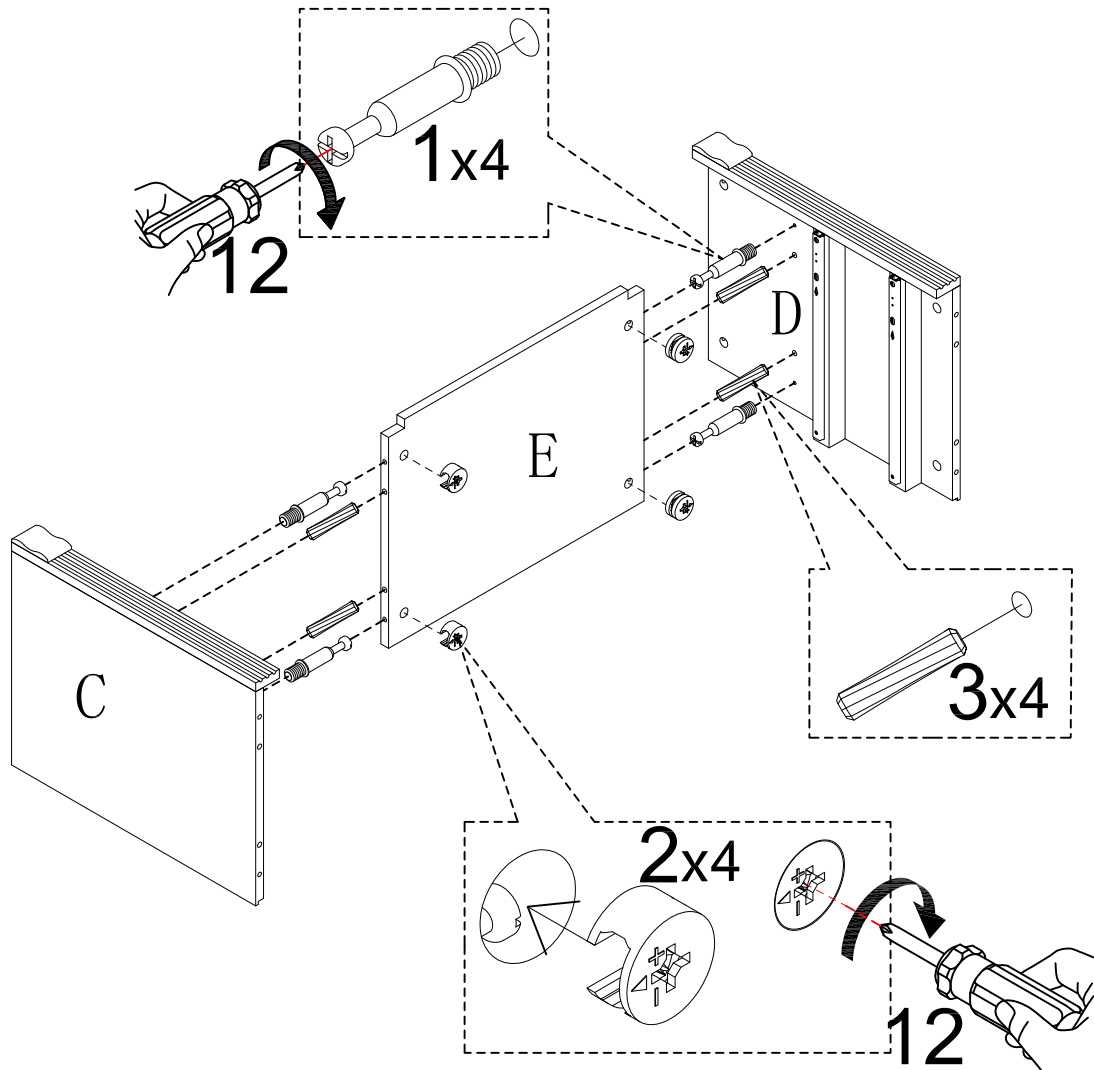
11	x4
	
Φ6*38mm	

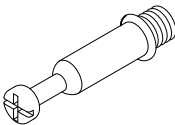
13	x1
	
M4	


ASSEMBLY INSTRUCTIONS

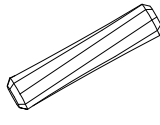
STEP-2

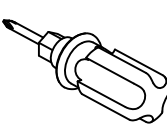
- 1.Put the bolts #1 and wood dowel #3 into the side panel C&D
- 2.Attached the shelf panel E to the side panel C&D and tighten the cam #2



1	x4
	

2	x4
	

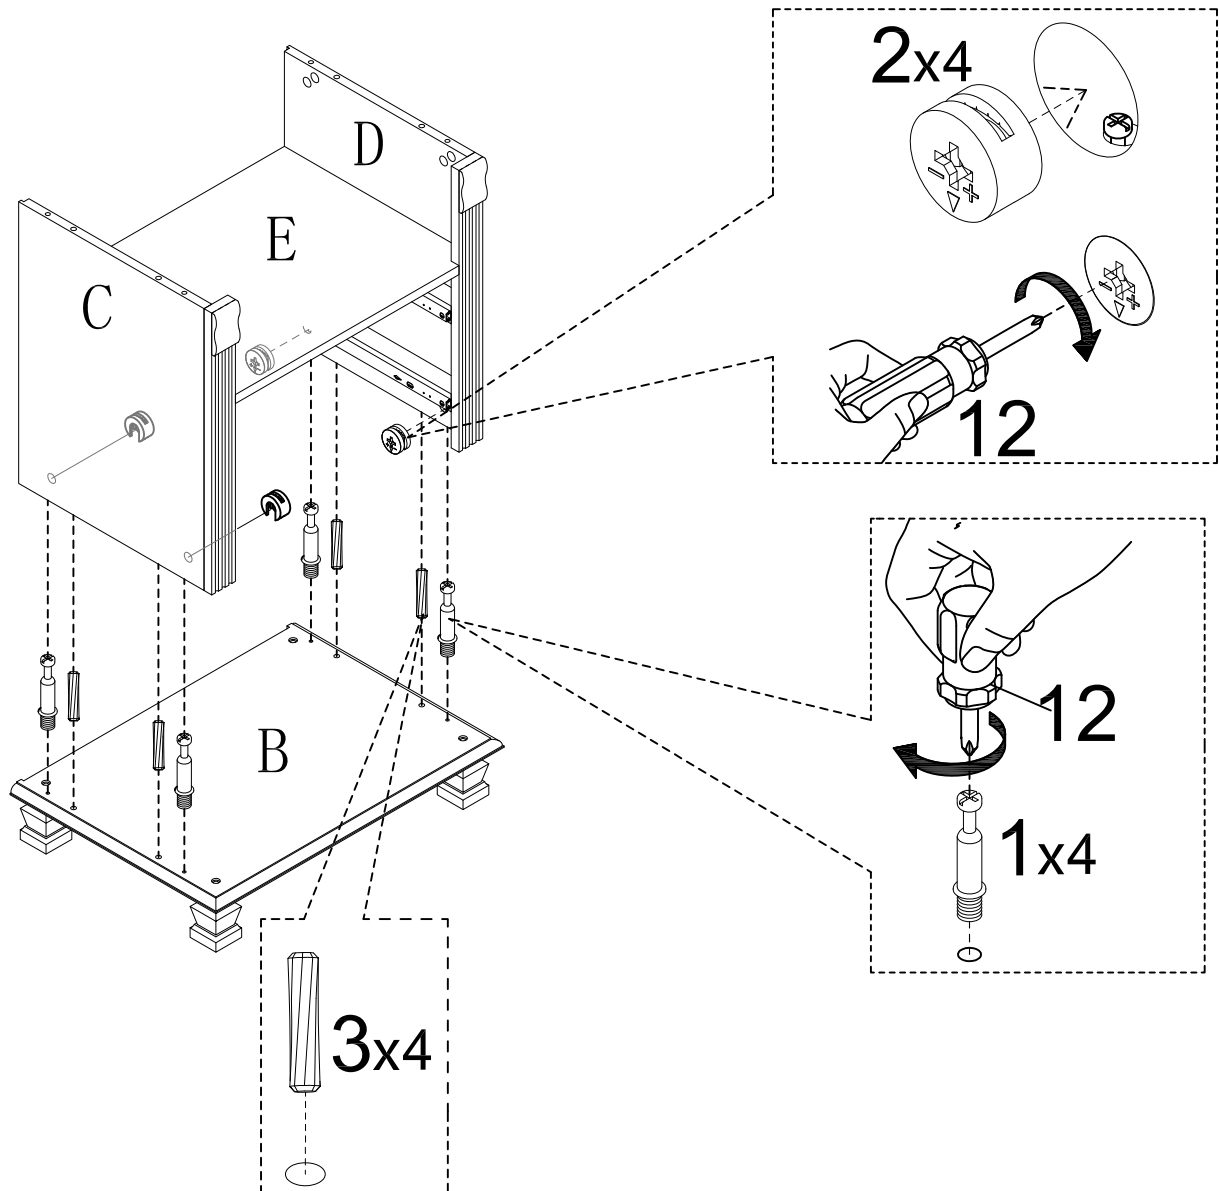
3	x4
	
Φ8*30mm	

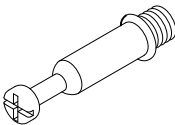
12	x1
	


ASSEMBLY INSTRUCTIONS

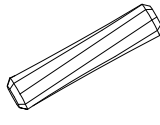
STEP-3

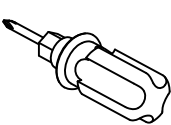
- 1.Put the bolts #1 and wood dowel #3 into the bottom panel B
- 2.Attached the side panel C&D to the bottom panel B and tighten the cam #2



1	x4
	

2	x4
	

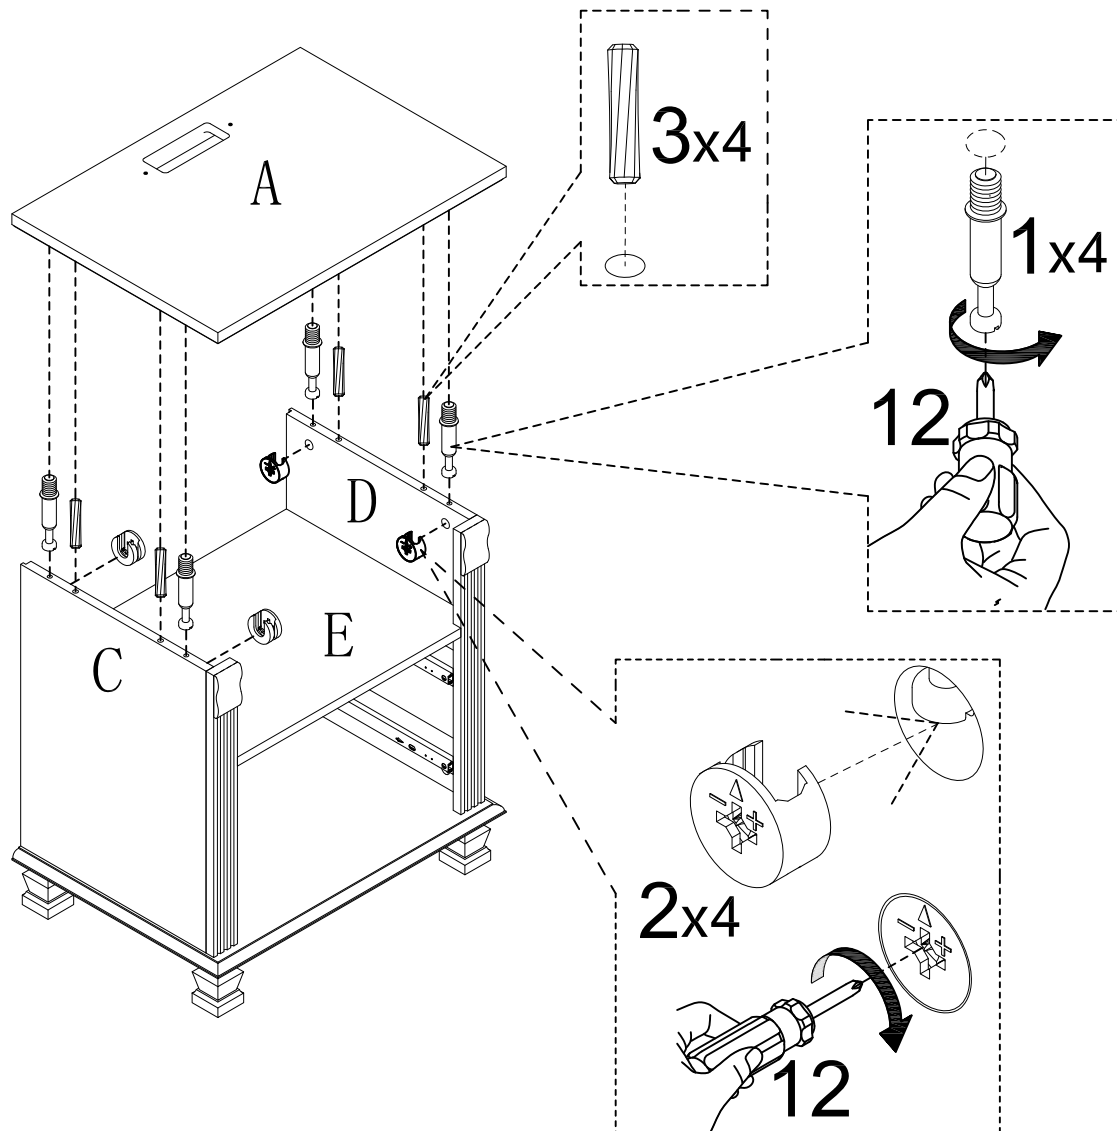
3	x4
	
Φ8*30mm	

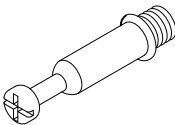
12	x1
	


ASSEMBLY INSTRUCTIONS

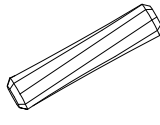
STEP-4

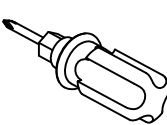
- 1.Put the bolts #1 and wood dowel #3 into the side panel C&D
- 2.Attached the top panel A to the side panel C&D and tighten the cam #2



1	x4
	

2	x4
	

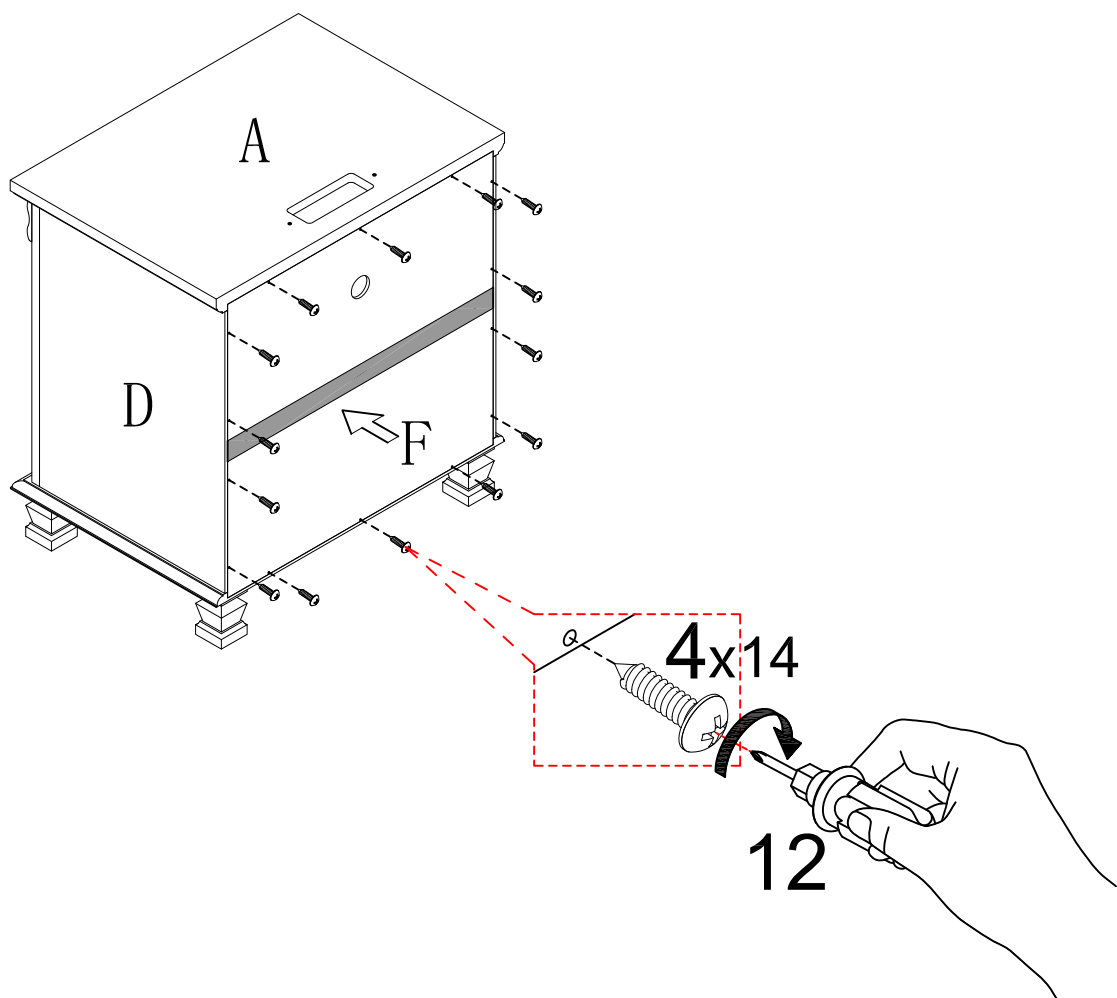
3	x4
	
Φ8*30mm	


12	x1
	


ASSEMBLY INSTRUCTIONS

STEP-5

1.Attached the back panel G to the side panels C&D and tighten the screws #4



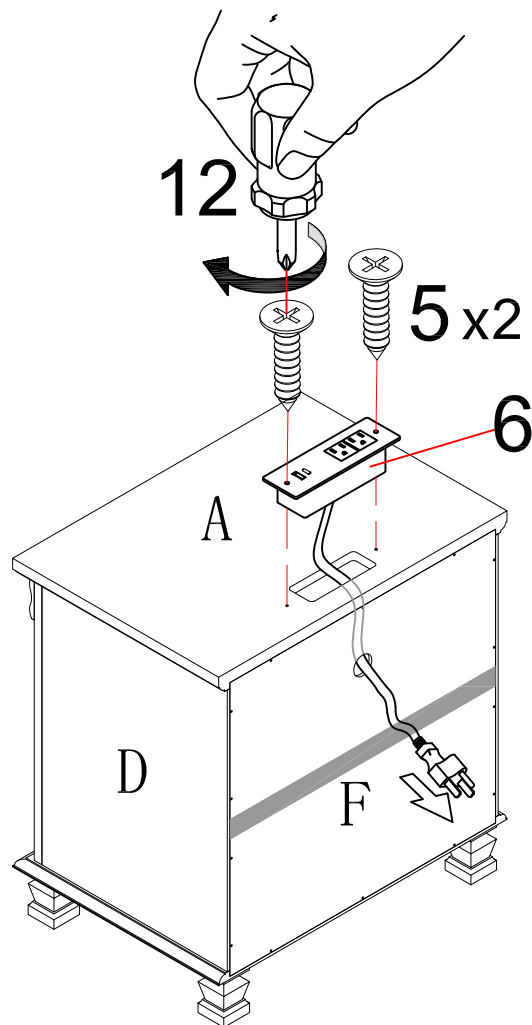
4	x14
	
Φ 3*14mm	

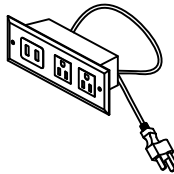

12	x1
	

ASSEMBLY INSTRUCTIONS

STEP-6

1.Attached the electric board #6 to the top panel A and tighten the screws#5

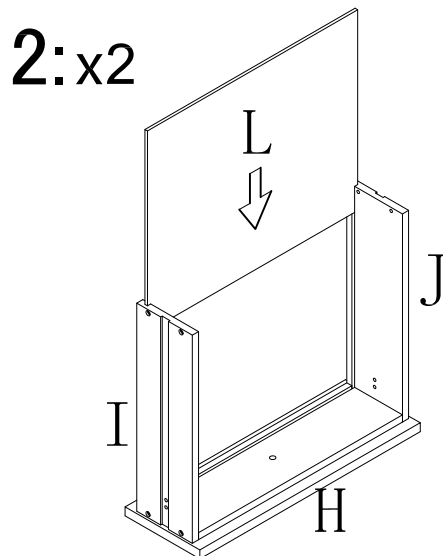
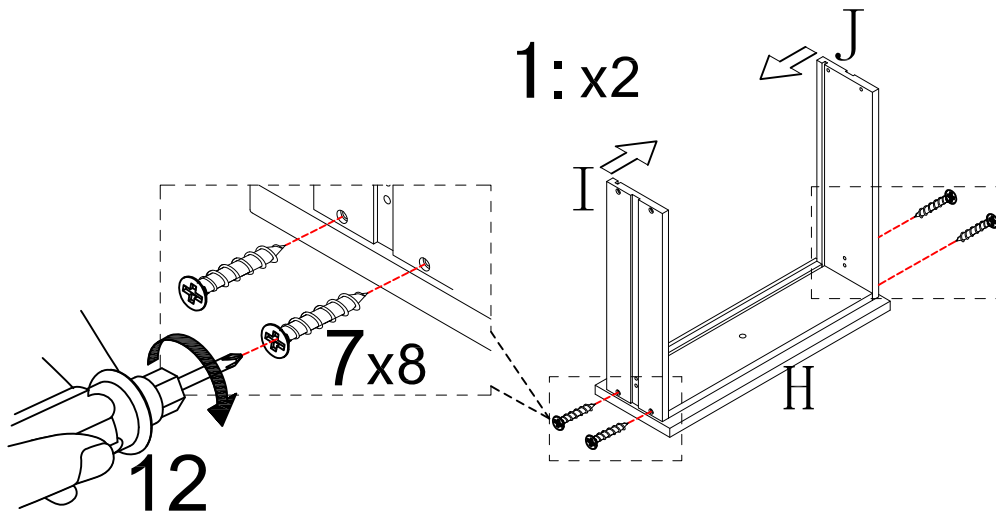




5	x2	6	x1	12	x1
					
Φ 3*15mm					

ASSEMBLY INSTRUCTIONS

STEP-7

1. Attached the drawer left I and right J panels to the drawer front panel H and tighten the screws #7
2. Put the drawer bottom panel L to the groove of the drawer Left I and right J panel

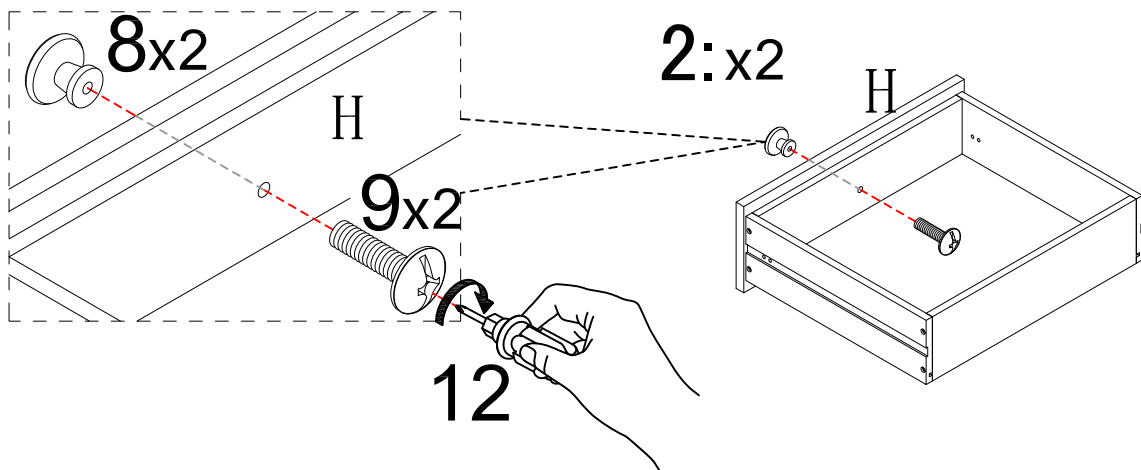
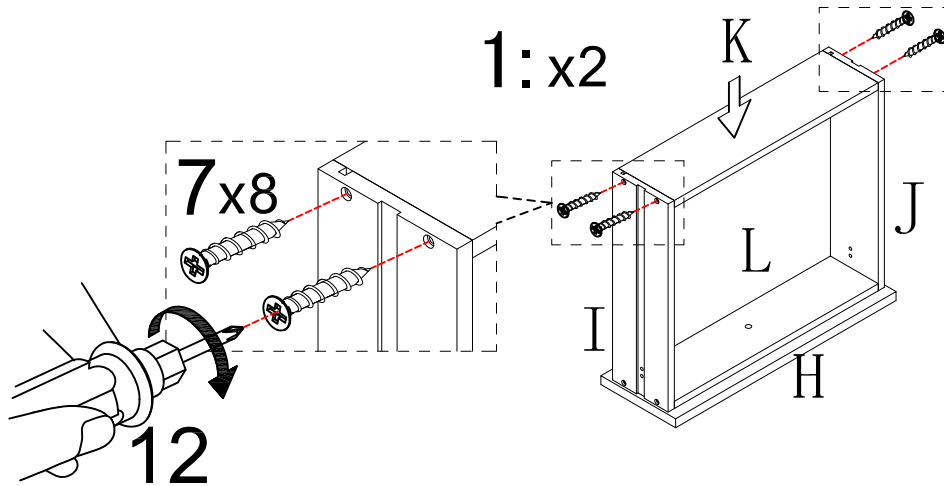





7	x8	12	x1
			
Φ8#*1"			

ASSEMBLY INSTRUCTIONS

STEP-8

1. Attached the drawer back panel K to the drawer left I and right J panel , then tighten the screws #7
2. Attached the handle #8 to the drawer front panels tighten the screws #9

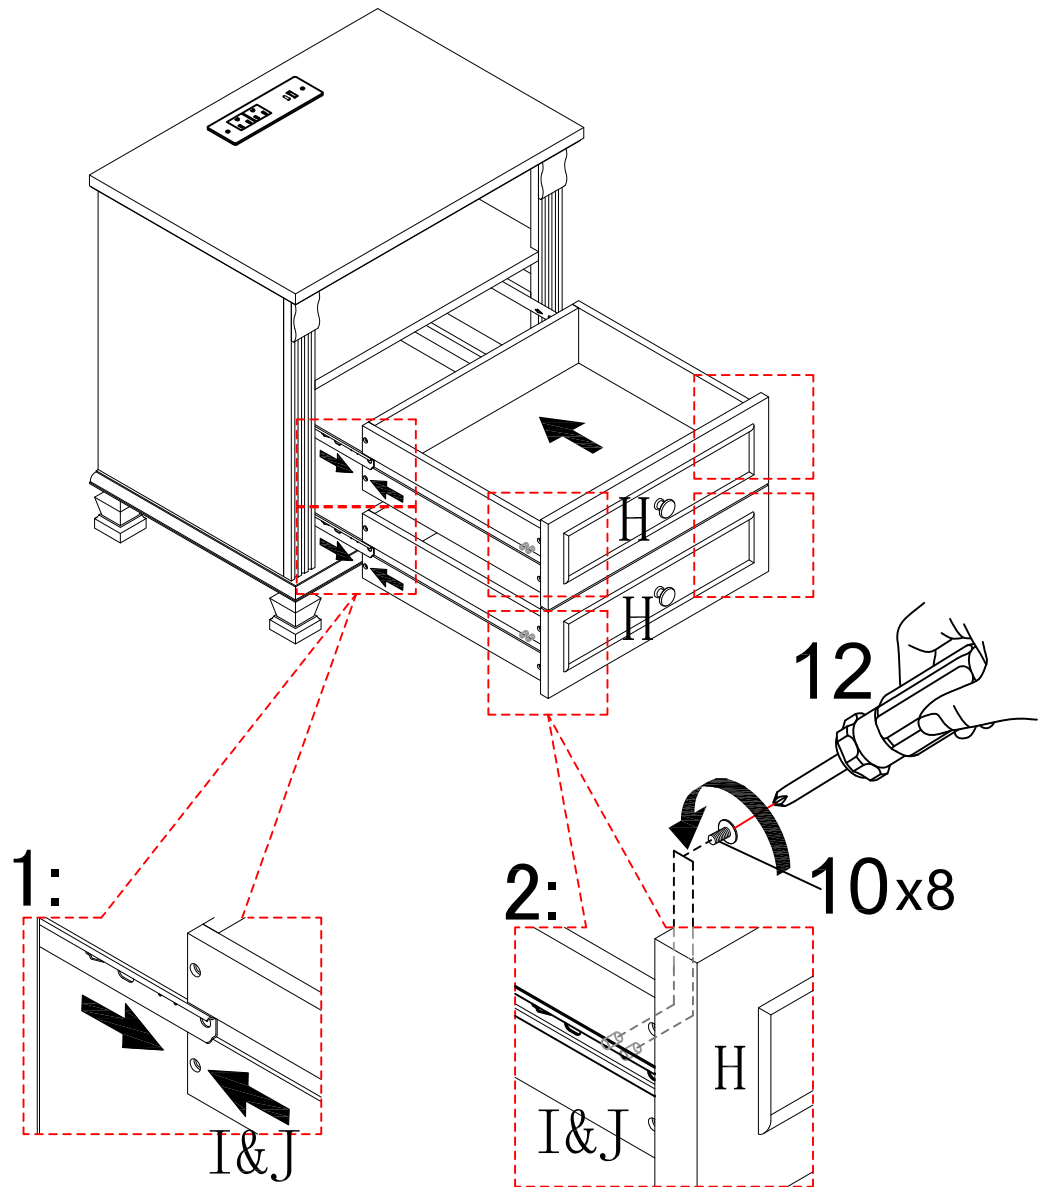


7	x8	8	x2	9	x2	12	x1
							
Φ8#*1"				Φ4*25mm			

ASSEMBLY INSTRUCTIONS

STEP-9

1.Attached the drawers , make sure the sliders are aligned and tighten the screws #10



10	x8
	
Φ 4*13mm	

12	x1
