


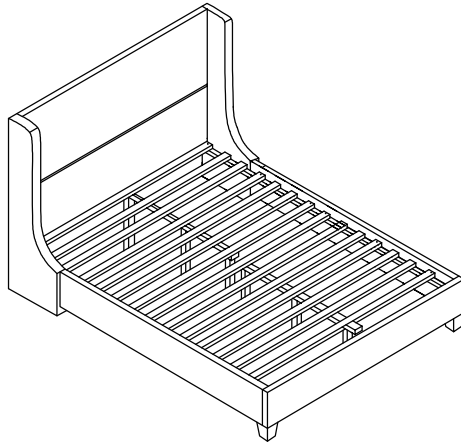

USER'S MANUAL

BRENT SERIES

QUEEN SIZE UPHOLSTERED BED



Guide of Manual

- ★ Thanks for your choice. **We will do our best to provide customer service for everyone.**
- ★ Please check to make sure all parts are included as stated when you unpack. If there are parts missing or wrong, please contact us, **we will expeditiously provide reissue accessories, compensation or other services.**
- ★ Instruction should be read carefully. But the manual may not cover every detail of all possible situations and steps. **Please contact us if further information and help are needed. We will respond in a timely manner.**
- ★ Please be patient that the other items are on the way if you buy more than one product.

Warning

- It's kindly advised to assemble this product on a carpeted floor to protect it from being scratched.
- Small parts are included. Please keep the product away from children while assembling. Do not let children play or jump on the product. Do not stand on the item or use as a step ladder.
- Please pay attention to the sharp corners during assembly. We recommend the use of gloves to prevent the undesired injury.
- Prior to use, please check to see if there's any loosening screw or part. Make sure that each screw and part is correctly installed and securely fastened.
- Usually it's unnecessary to use electric drill. Please at a low gear if you need.

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- There's no need to use furniture polish. If you need, test it first in an inconspicuous area. Using solvents of any kind on your furniture may damage the finish. Never use water to clean your furniture as it may cause damage to the finish.
- Liquid spills should be removed immediately. Gently blot the spill with a soft clean cloth to avoid rubbing.

Further Advice About The Furniture Care




- It is best to keep your furniture in a climate-controlled environment.
- We recommend to keep furniture from sunlight exposure to avoid possible surface damage.
- Following these important and helpful tips will help retain your furniture's performance even when it ages.
- Periodically (every 90 days) make sure the screws are fully tightened.

⚠ MAX WEIGHT CAPACITY: 800LBS
DO NOT STAND ON THE ITEM

Parts List & Assembly Instruction

1. Make sure all parts are in the package.
2. "+" in below list indicates that additional pieces are replacement parts.
3. Do not fully tighten anything until all screws, nuts, washers and bolts are in place.



Parts List


① x 1PC Headboard Top Panel 	② x 1PC Headboard Bottom Panel 	③ x 1PC Left Headboard Side Panel 	④ x 1PC Right Headboard Side Panel 	⑤ x 1PC Left Side Rail 
⑥ x 1PC Right Side Rail 	⑦ x 4PCS Support Rails 	⑧ x 1PC Footboard 	⑨ x 2PCS Legs 	⑩ x 2PCS Slats 
⑪ x 6PCS Slat Supporting Legs 	⑫ x 2PCS Slats Support Bars 			

Hardware List



Cross-head Screwdriver Tools Required (Not provided)

Ⓐ x 16 +2PCS Bolts  Ø1/4" x 50mm	Ⓑ x 10 +2pcs Bolts  Ø1/4" x 37mm	Ⓒ x 20 +4PCS Bolts  Ø1/4" x 19mm	Ⓓ x 2 +1PC Bolts  Ø5/16" x 19mm
Ⓔ x 2PCS Metal brackets 	Ⓕ x 1PC Allen Wrench  4mm	Ⓖ x 13+3 PCS Screws  Ø8 x 28mm	Ⓖ x 2PCS Metal Plates 

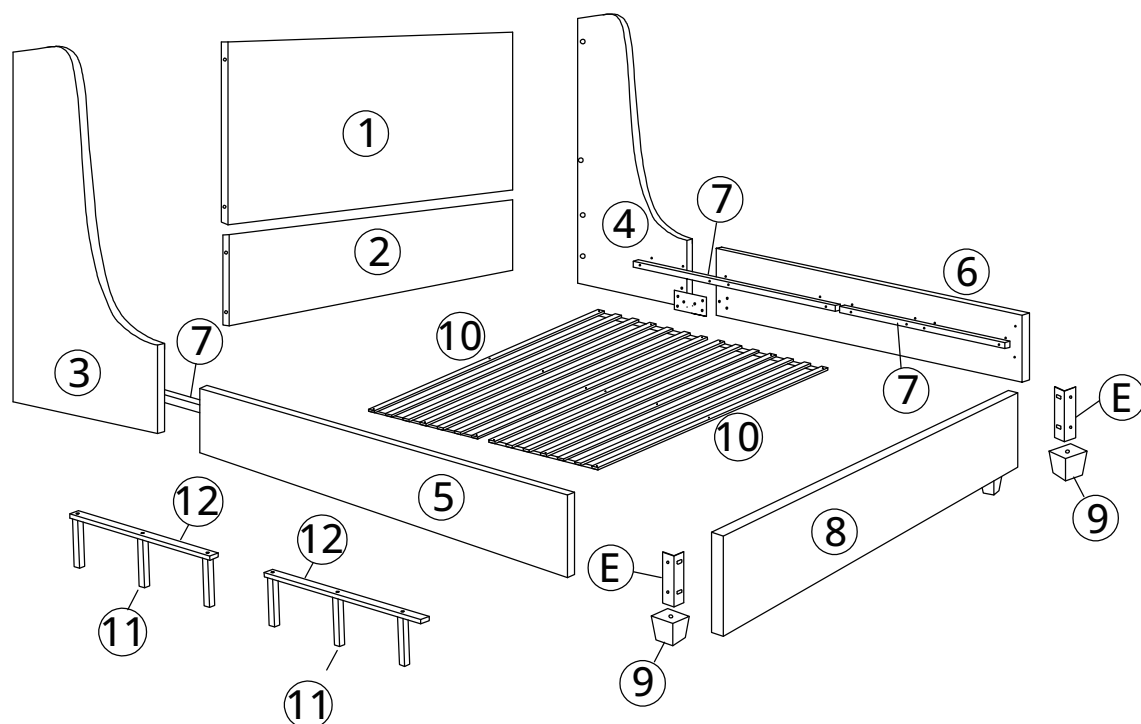


1

Open the back cover of the headboard, Install the Headboard Top Panel ① to Bottom Panel ② by using the Bolts B, and tighten it with Allen Wrench F to 80%, See Figure 01.

(B)		2
(F)		1

		80%	
		✓	
		100%	
		X	

Figure 01

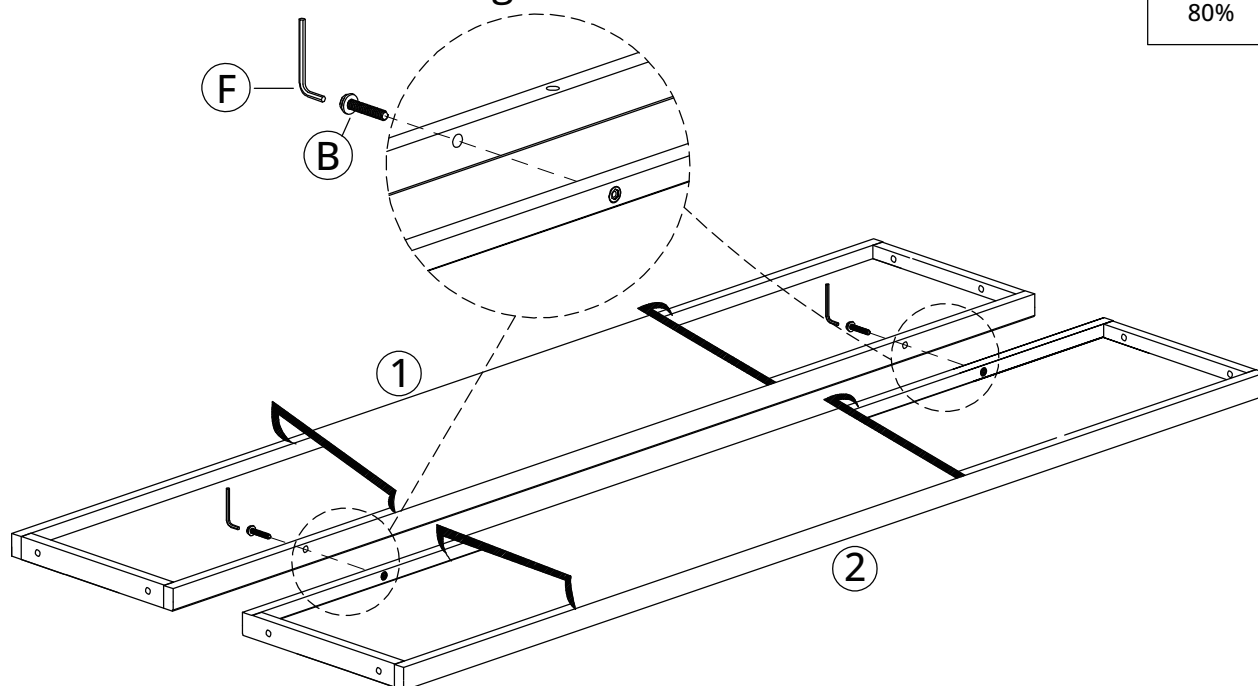

2

Open the back cover of the headboard. Install the Left Headboard Side Panel ③ to the Headboard (1/2) by using the Bolts B and tighten it with Allen Wrench F. See Figure 02. Repeat the above procedure with the Right Headboard Side Panel ④ to attach it to the headboard (1/2). Attach the cover with velcro after complete installation. See figure 03. Then tighten all the other untightened bolts to 100% in previous steps

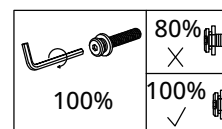
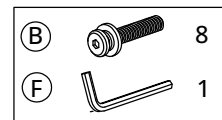


Figure 02


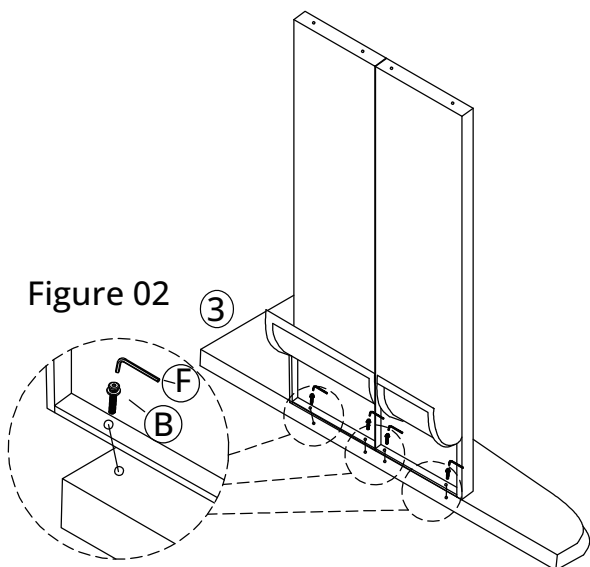


Figure 03

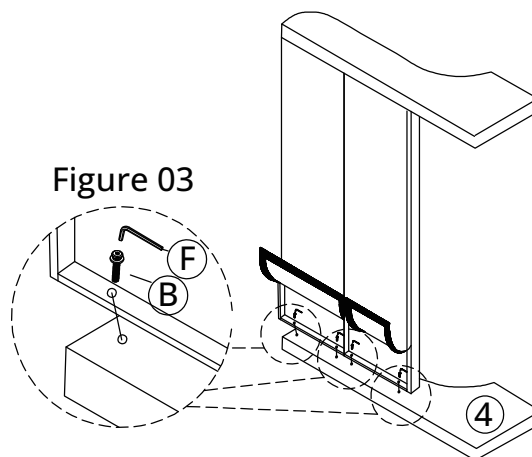

3

Install the Support Rails ⑦ to the side rail-left/right (⑤L/⑥R) by using the Bolts A, and tighten it with Allen Wrench F. See Figure 04.



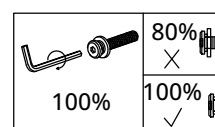



Figure 04

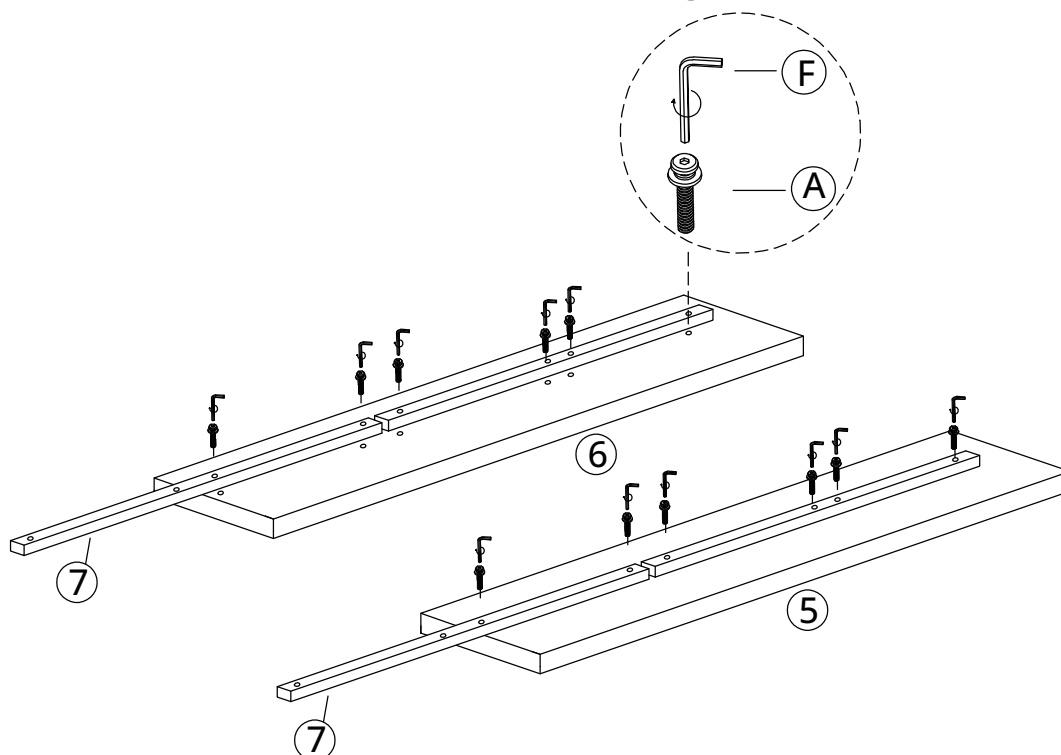

4

Install the Metal Brackets E to the Legs ⑨ by using the Bolts D tighten it with Allen Wrench F. See Figure 05.

Re-tighten all bolts for a snug fit after assembly. please DO NOT OVER-TIGHTEN.

Ⓓ		2
Ⓕ		1
Ⓔ		2




	80% ×
	100% ✓



Figure 05

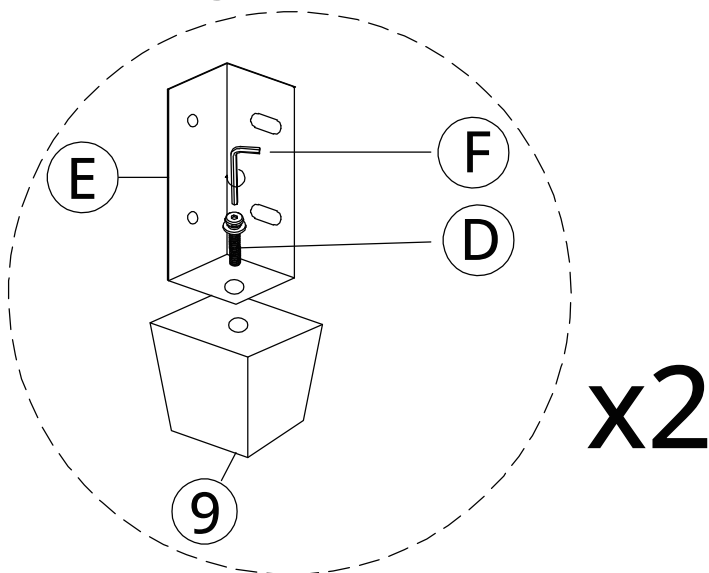

5

Install the metal bracket ⑤ to the Footboard ⑧ by using the Bolts C, tighten it with Allen Wrench F. See Figure 06. Re-tighten all bolts for a snug fit after assembly. Please DO NOT OVER-TIGHTEN.

Ⓒ		4
Ⓕ		1

	80% ×
	100% ✓



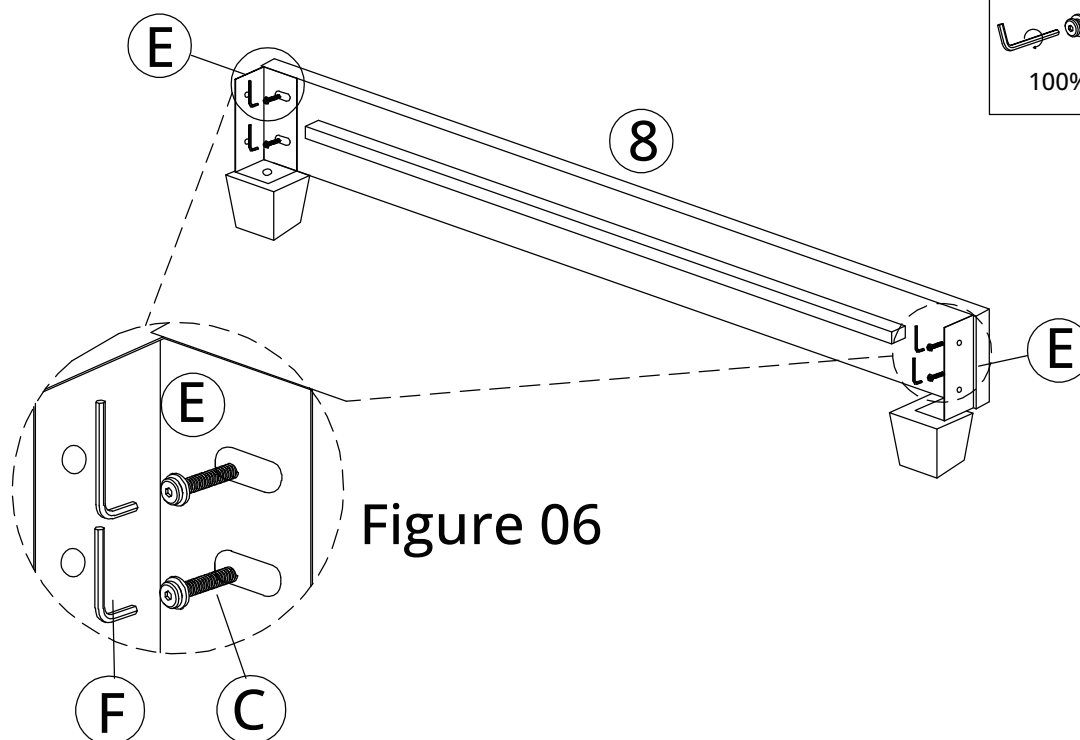


Figure 06

6

Attach the Footboard ⑧ to the Right Side Rail ⑥ by using the Bolts C, tighten it with Allen Wrench F. See Figure 07. Repeat the above procedure with the Footboard ⑧ to attach it to the Left Side Rail ⑤. Re-tighten all bolts for a snug fit after assembly. Please DO NOT OVER-TIGHTEN.

C		4
F		1
		

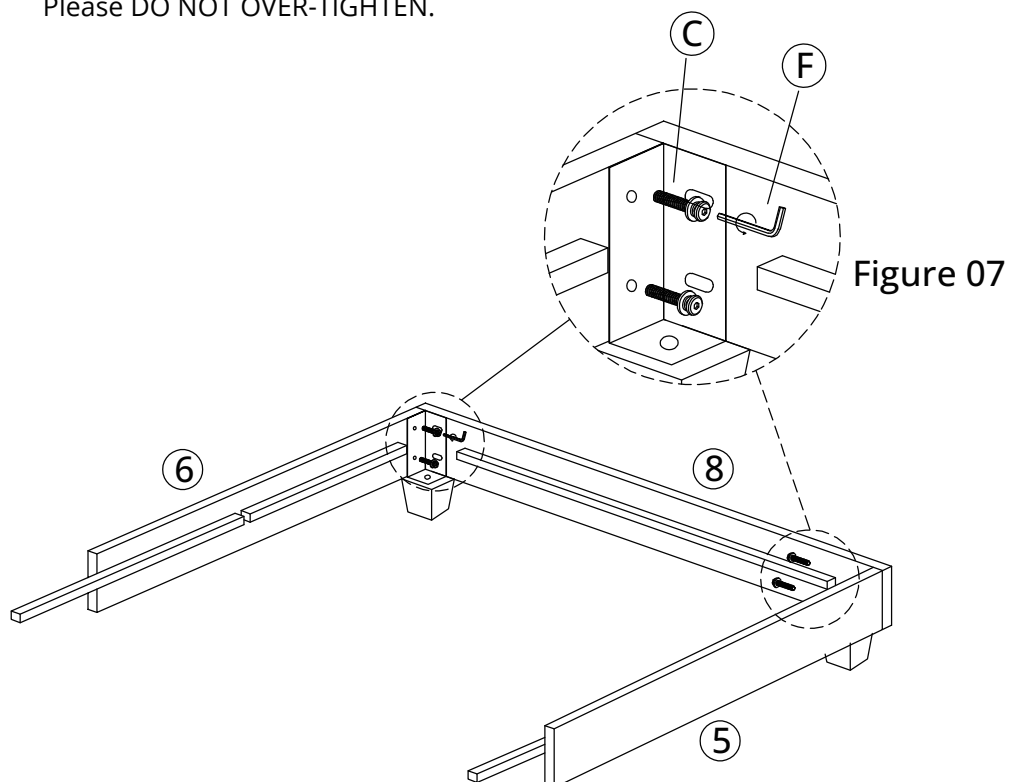

7

Install the Right Side Rail ⑥ to the Right Headboard Side Panel ④ by using the Bolts A, tighten it with Allen Wrench F. See Figure 08. Repeat the above procedure with the Left Side Rail ⑤ to attach it to the Left Headboard Side Panel ③. Re-tighten all bolts for a snug fit after assembly. Please DO NOT OVER-TIGHTEN.



A		4
F		1
		

Figure 08

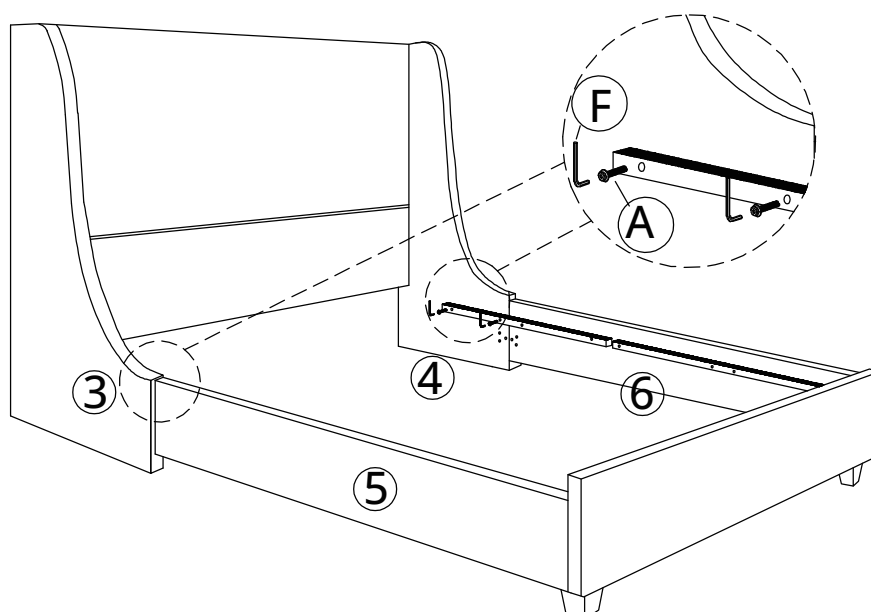

8

Install the Right Side Rail ⑥ to the headboard using Metal Plates H by the Bolts C and tighten it with Allen Wrench F. See Figure 09.


Repeat the above procedure with the Left Side Rail ⑤ to attach it to the Headboard.

Re-tighten all bolts for a snug fit after assembly. Please DO NOT OVER-TIGHTEN.

③		12
④		1
⑤		2

		80% ×
100%		100% ✓


Figure 09

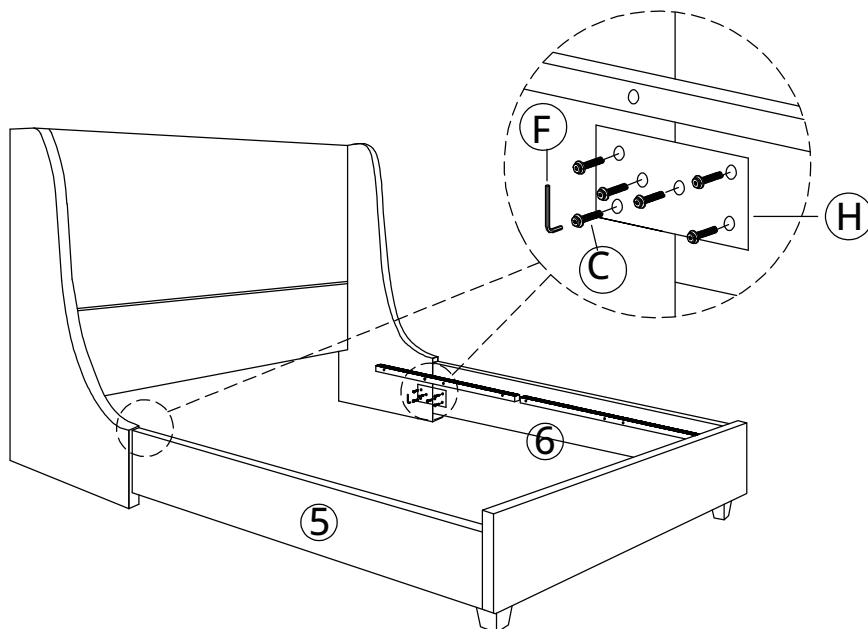

9

Install the Slats Support Bars ⑫ to the Slats ⑩ by tightening the Slat supporting Legs ⑪. See Figure 10.

Figure 10

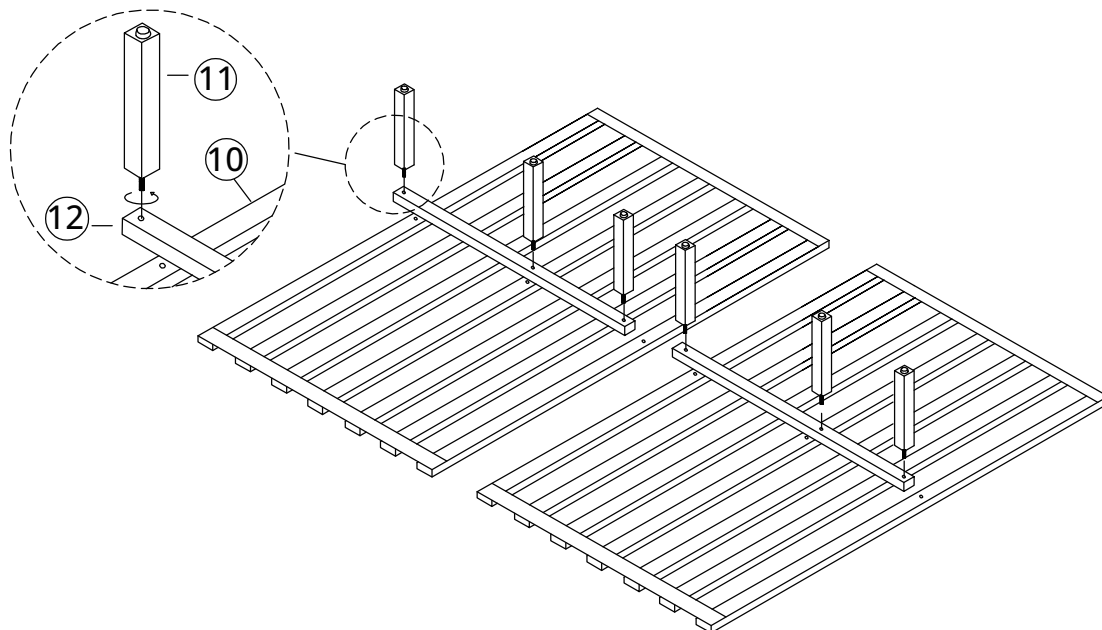

10

If it feels uneven on the floor, first tighten all the screws, then adjust the leveling feet for balance. See Figure 11.

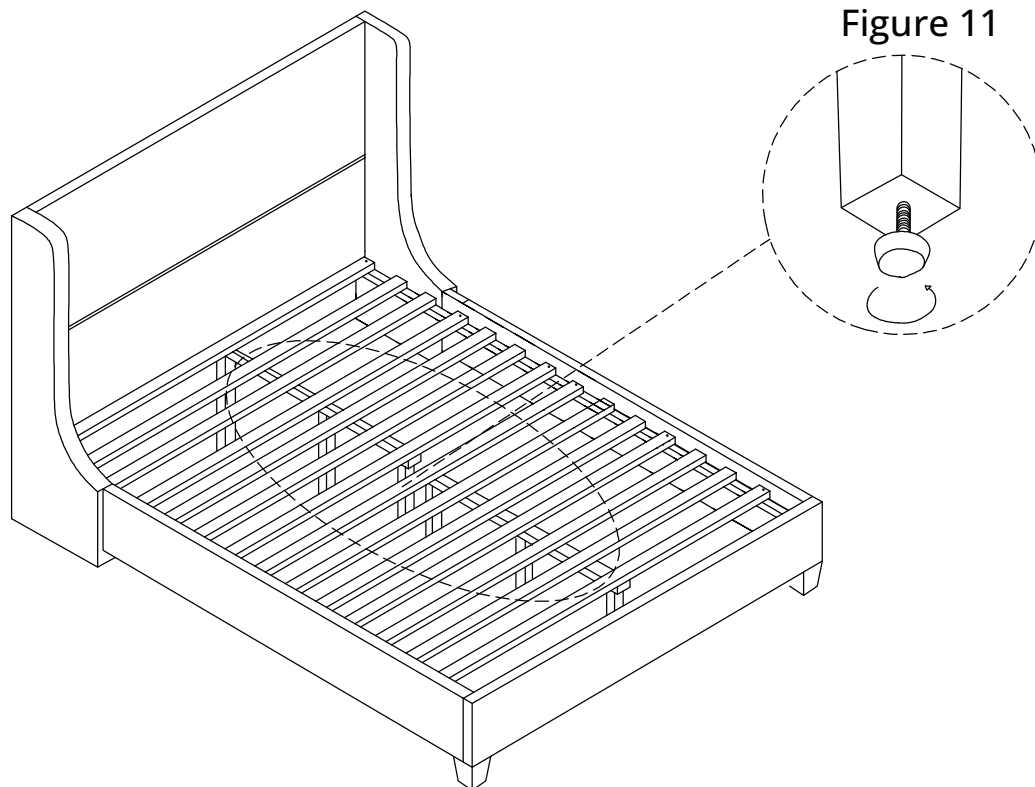


Figure 11

11

Attach the bed slats to the bed frame with Velcro and Screws G. There is a beam support rod with screw holes locked in the front ⑫. See Figure 12.

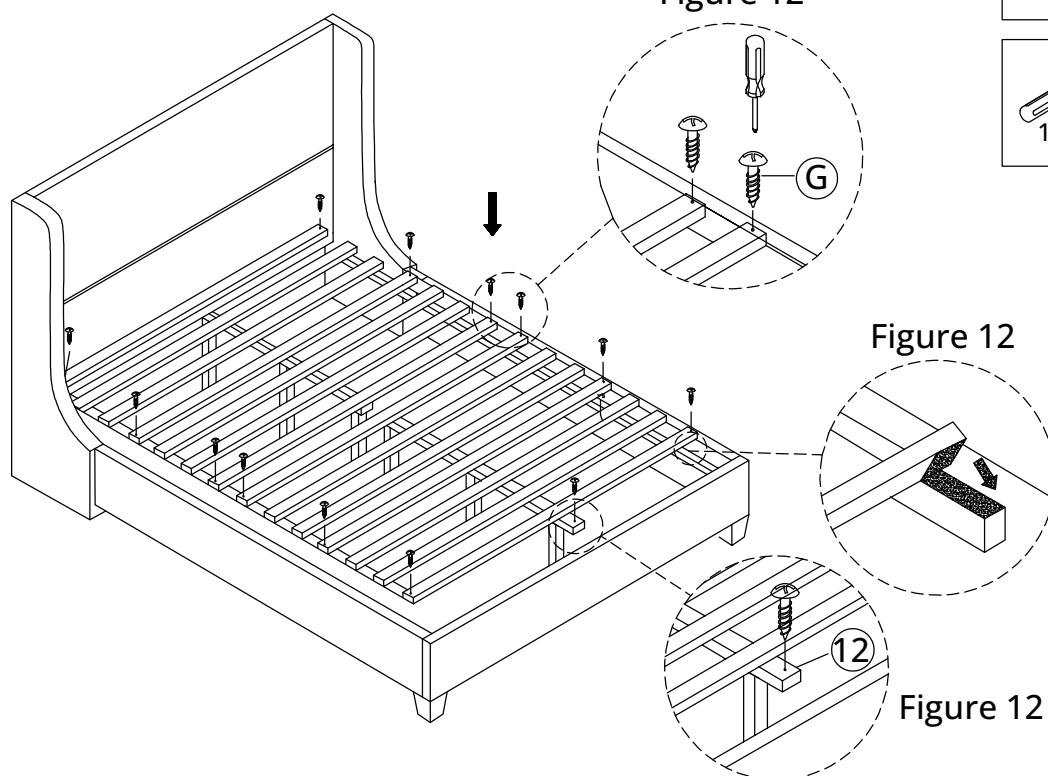


Figure 12


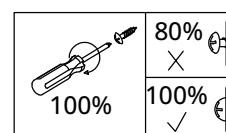


Figure 12

Figure 12

FINISHED

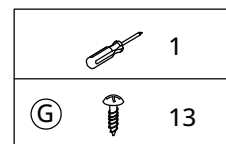