


ASSEMBLY INSTRUCTIONS

Parts:

(2) Sides

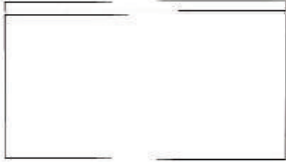

(3) Small Doors
18½" x 11⅝"



Large Door
18½" x 12¼"



(3) Dividers



(20) Hex Screws



Allen Wrench



(8) Handle Screws



(16) Small Screws



(4) Red Handles




Phillips Head Screwdriver
(Not Included)



Back




Top




Bottom



Step 1: Attach hinges of the **Small Door** to the **Side** using the **Small Screws**.

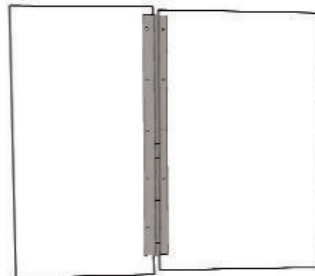


Step 2: Attach hinges of the **Small Door** to (2) **Dividers** using the **Small Screws**.

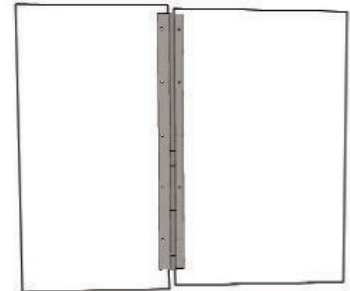


Step 3: Attach hinges of the **Large Door** to the remaining **Divider** using the **Small Screws**.


Step 4: Insert edges of **Side** with **Small Door** into mortise on **Bottom**. Make sure back grooves are aligned. Insert hex screws into pre-drilled holes in **Bottom**. Tighten down halfway.

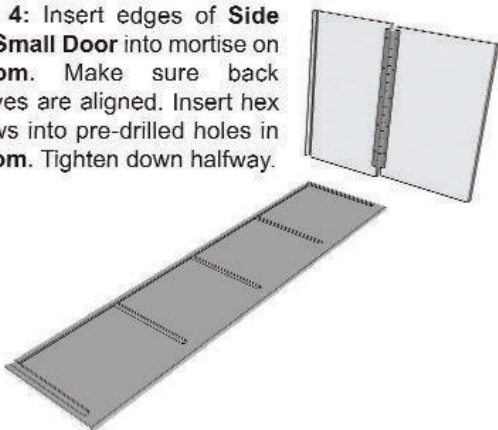


Step 5: Insert edge of **Divider** with **Small Door** into mortise of **Bottom**. Insert hex screws into each of the pre-drilled holes in **Bottom**. Tighten down halfway. Repeat for remaining **Divider** with **Small Door**.

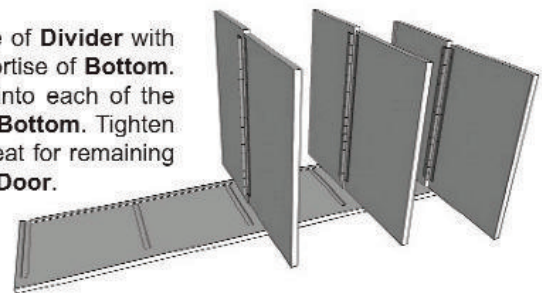


Step 6: Insert edge of **Divider** with **Large Door** into mortise of **Bottom**. Insert hex screws into each of the pre-drilled holes in **Bottom**. Tighten down halfway.

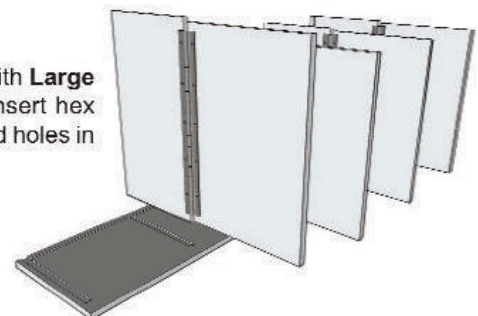


ASSEMBLY INSTRUCTIONS

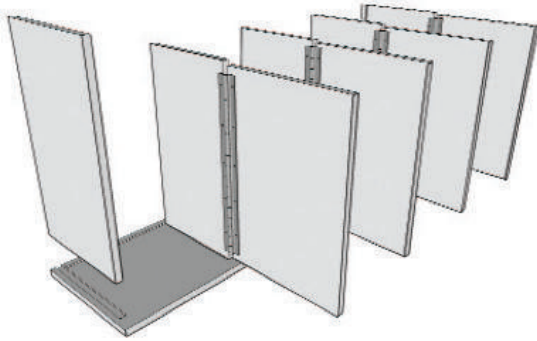


Step 7: Insert edge of remaining **Side** into mortise of **Bottom**. Make sure back grooves are aligned. Insert hex screws into each of the pre-drilled holes in **Bottom** and tighten halfway.

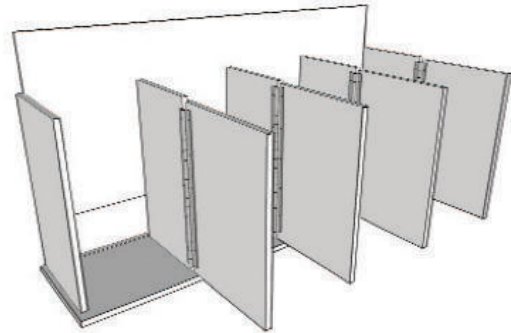


Step 8: Carefully slide **Back** piece into 1/4 inch grooves on **Side** pieces until edge fits securely into 1/4 inch groove on **Bottom** piece.

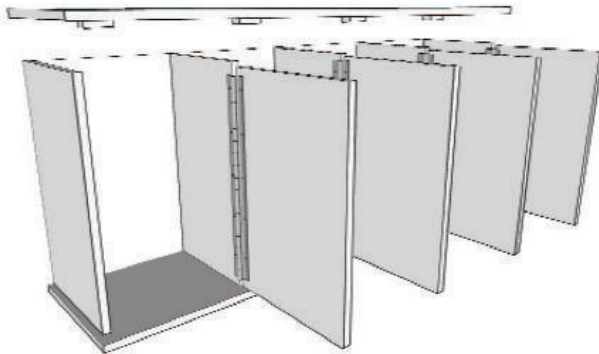

Step 9: Fit edges of assembled pieces into mortises and back grooves of **Top**. Insert hex screws into each of pre-drilled holes in **Top**. Tighten down halfway.

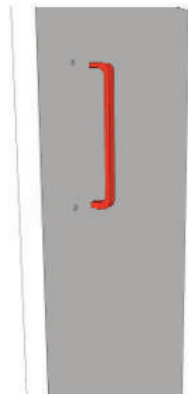

Step 10: Insert **Handle Screw** from back of door into the **Handle** and tighten. Repeat for remaining Doors.

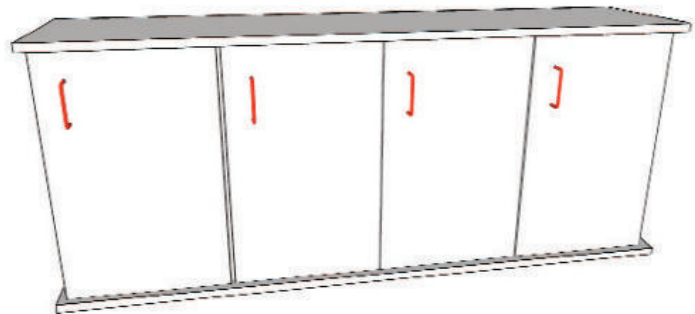

Step 11: Tighten all screws snugly. DO NOT OVERTIGHTEN. DO NOT DRILL. **Assembly is now complete.**