


Short Cabinet with Glass Door

ASSEMBLY INSTRUCTIONS


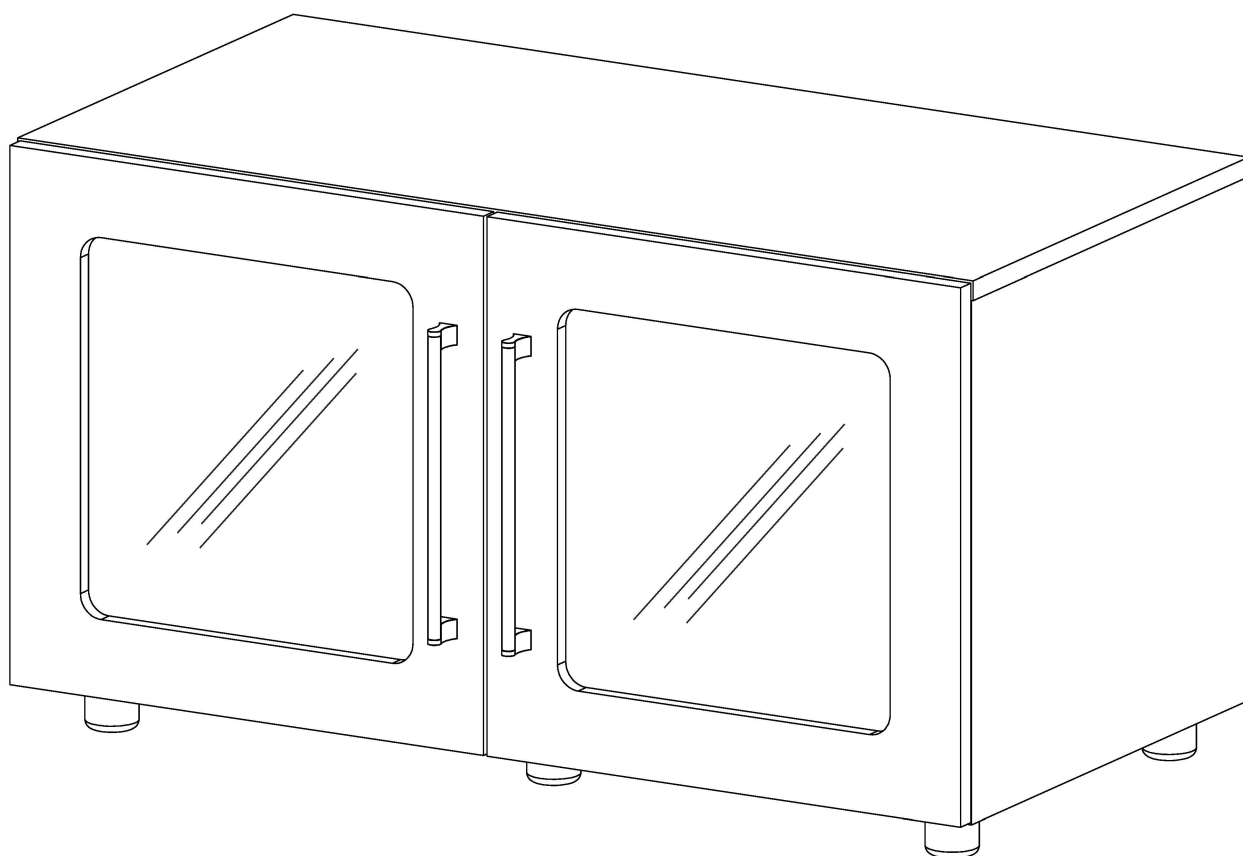


IMPORTANT
PLEASE READ BEFORE YOU CONTINUE FURTHER
FOR DOMESTIC USE ONLY
CARE AND MAINTENANCE

DO NOT USE AS BEDROOM FURNITURE!

- After unpacking this product please keep the original packaging in case it needs to be returned for any reason.
- Please ensure all fittings and parts are present before commencing with assembly.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- We strongly recommend that you keep children away from your work area.
- Assemble this product as close to its final position as possible
- Never drag or push products as this could cause damage to the joints making it inferior.
- Do not drag or push items across your furniture as this may cause the surface to scratch.
- Do not place this product next to radiator or in direct sunlight.
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is Wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use soft cotton or micro fibre cloth and do not use detergents of any kind.
- Do not place on a wet or damp floor as staining may occur to your floor.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.

Create thousands of unique looks with this versatile range! Designed to complement every part of your home—living room, entrance hall, office, library, laundry, and beyond. Discover your perfect combination today!

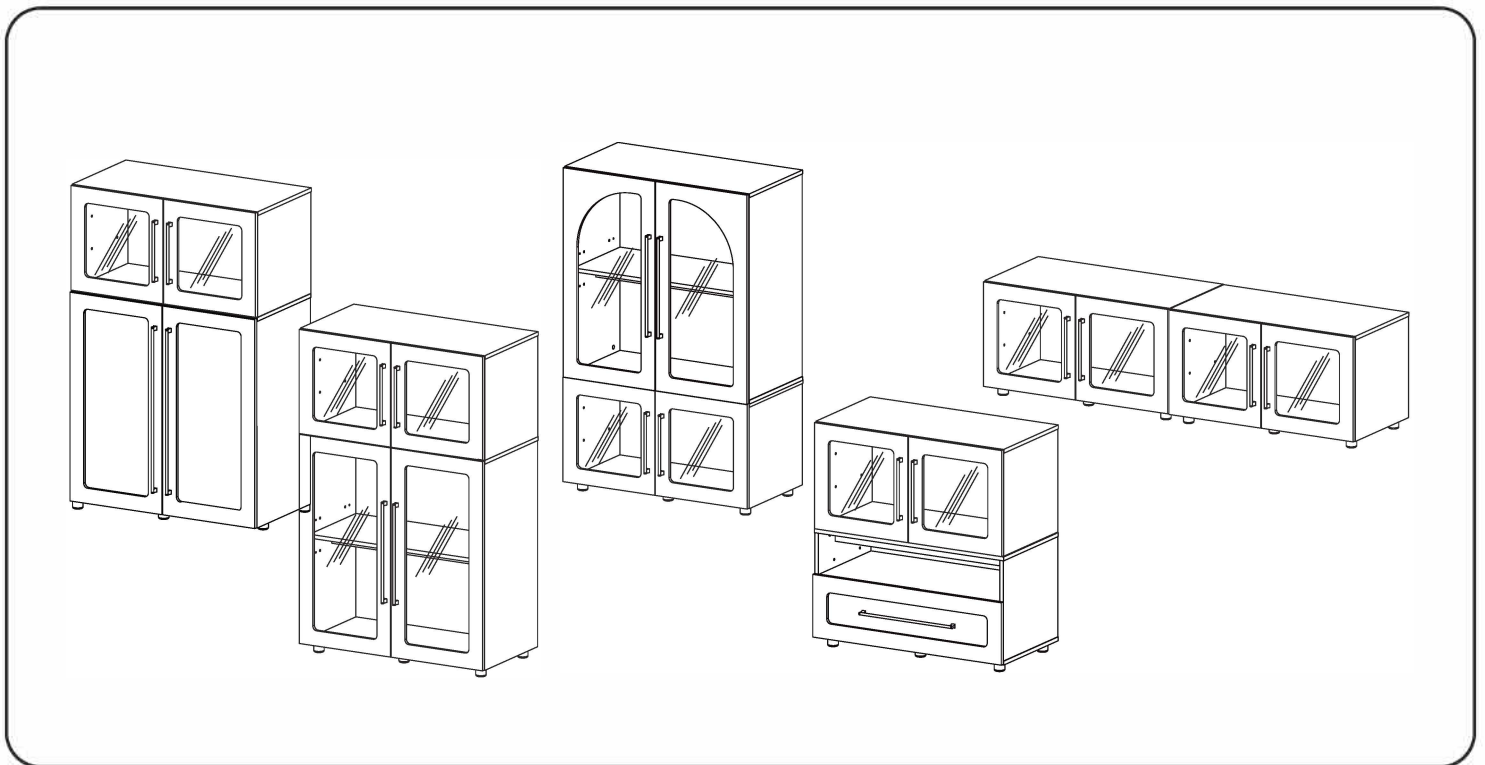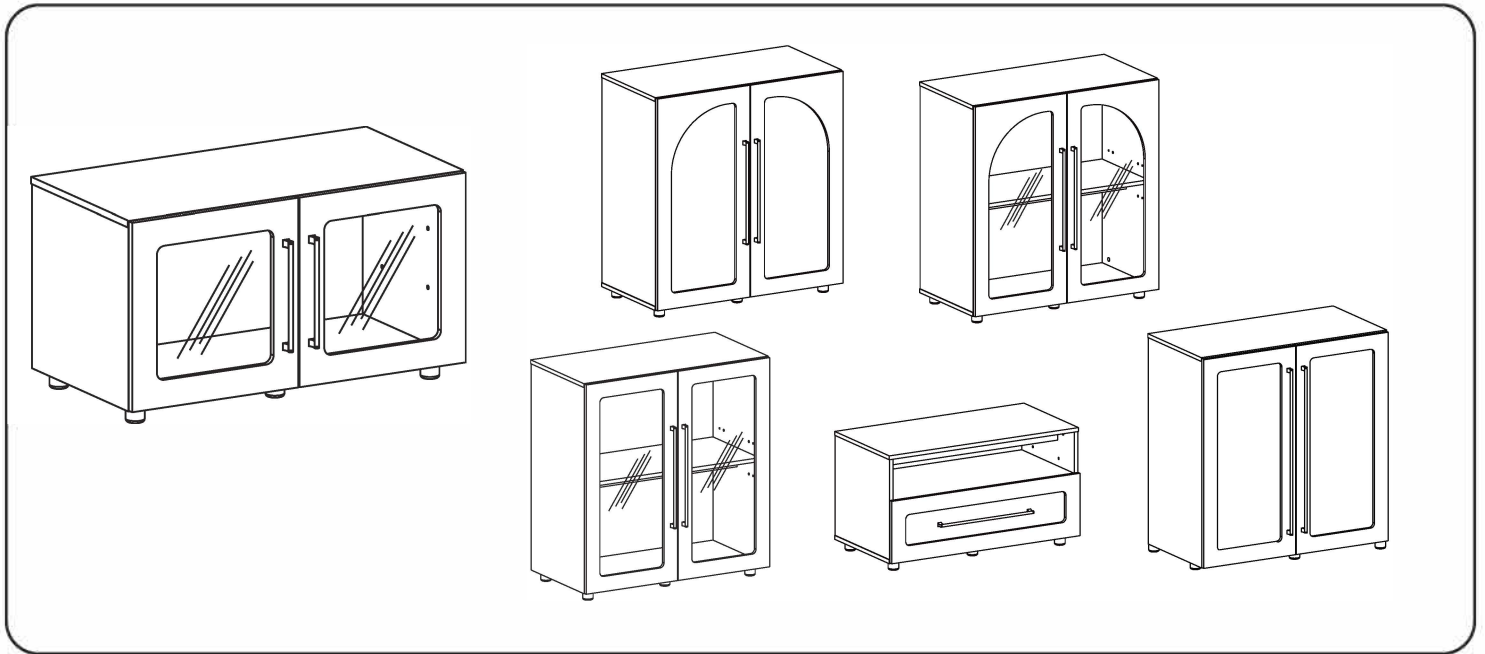


Parts List

Part Number	Description	Quantity
01	Bottom Panel	1
02	Left Panel	1
03	Top Panel	1
04	Right Panel	1
05	Door	2
06	Glass Door Front	2
07	Foot	5
08	Back Panel	1
09	Rail	1












Distributed By:
Seconique-US Corporation
806 Verona Street
34741 Kissimmee - Florida-USA

SKU: XXXXX
PO: XXXX
Date: XX/XX/26
Rev. XX/XX/26

EPA TSCA Title VI and California 93120
Phase 2 compliant for formaldehyde

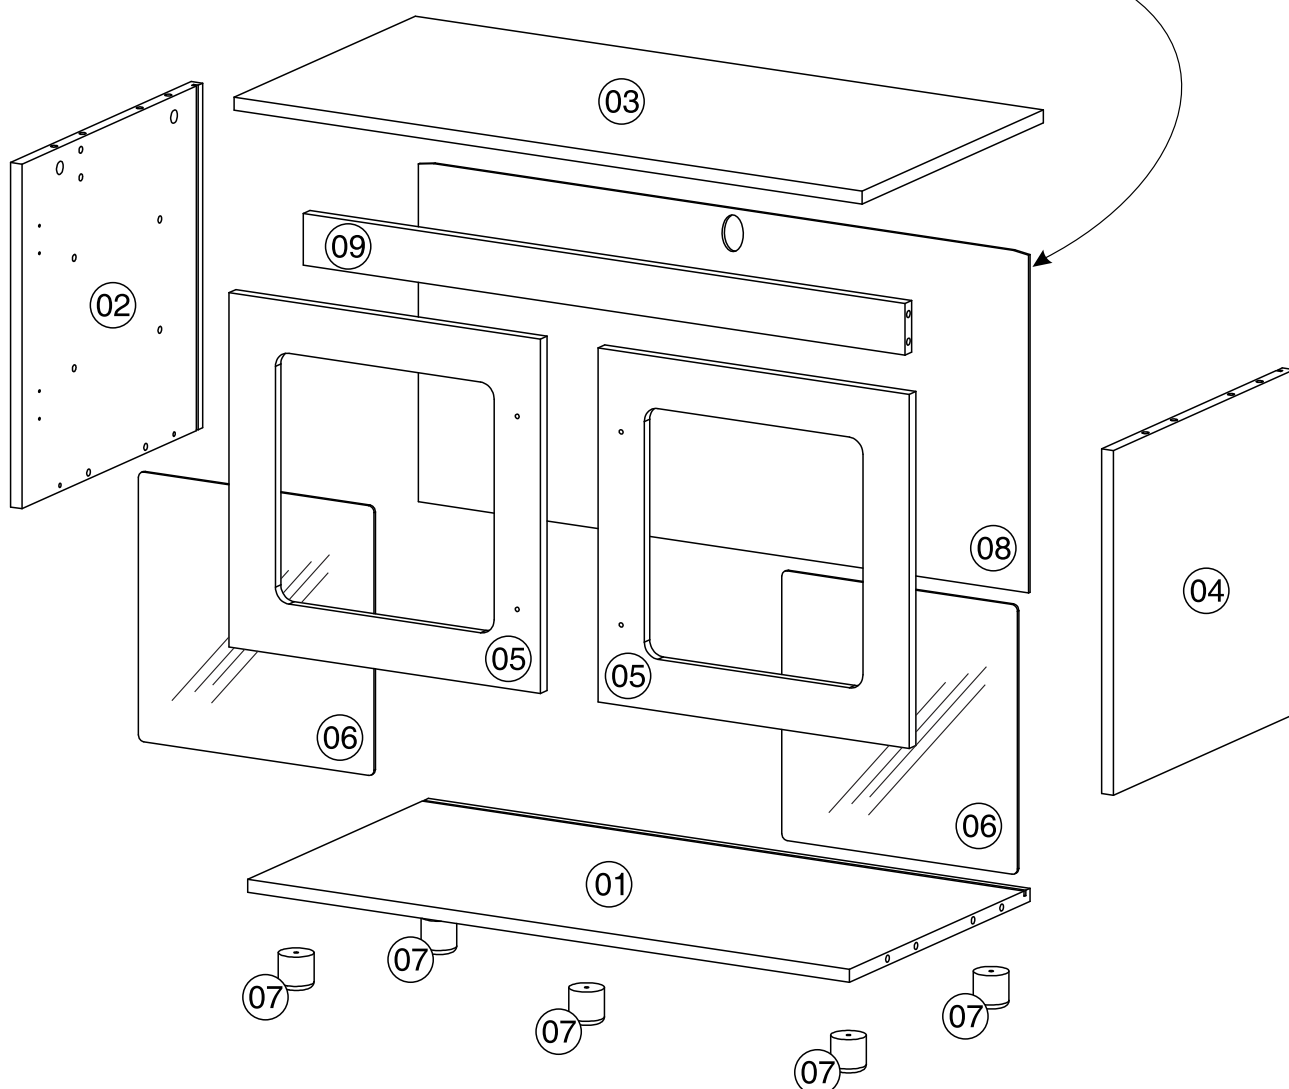


Hardware List

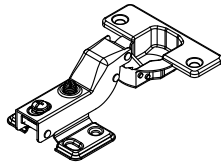Part	Size	Name	Quantity
A 	8x30mm	Wooden dowel	12
B 	Ø7x30mm	Cam Bolt	8
C 	Ø15x10mm	Cam Lock	8
D 	Ø3.5x12mm	Screw	16
E 	Ø3.5x25mm	Screw	4
F 	Ø4x14mm	Screw	24
G 	Ø4x20mm	Screw	5
H 	Ø5x40mm	Screw	5
I 	Ø3x16mm	Screw	4
J 	Ø 19mm	Sticker	16
K 	14.7x30mm	Support	4
L 	224mm	Handle	2
M 	Ø35mm	Metal Hinge	4
N 	25x12mm	Door Latch	16
O 	1/4x5/8	Washer	02
P 	20x200mm	Wall Anchor	01

*The hardware quantities listed above are required for proper assembly.
Extra hardware pieces may be included.*

Step 1

Let's get started! Insert Wooden Dowels (A) into Bottom Panel (1), Left Panel (2), Right Panel (4) and Rail (9). Also, attach Cam Bolts (B) to Left Panel (2), Top Panel (3) and Right Panel (4) using a Phillips screwdriver.

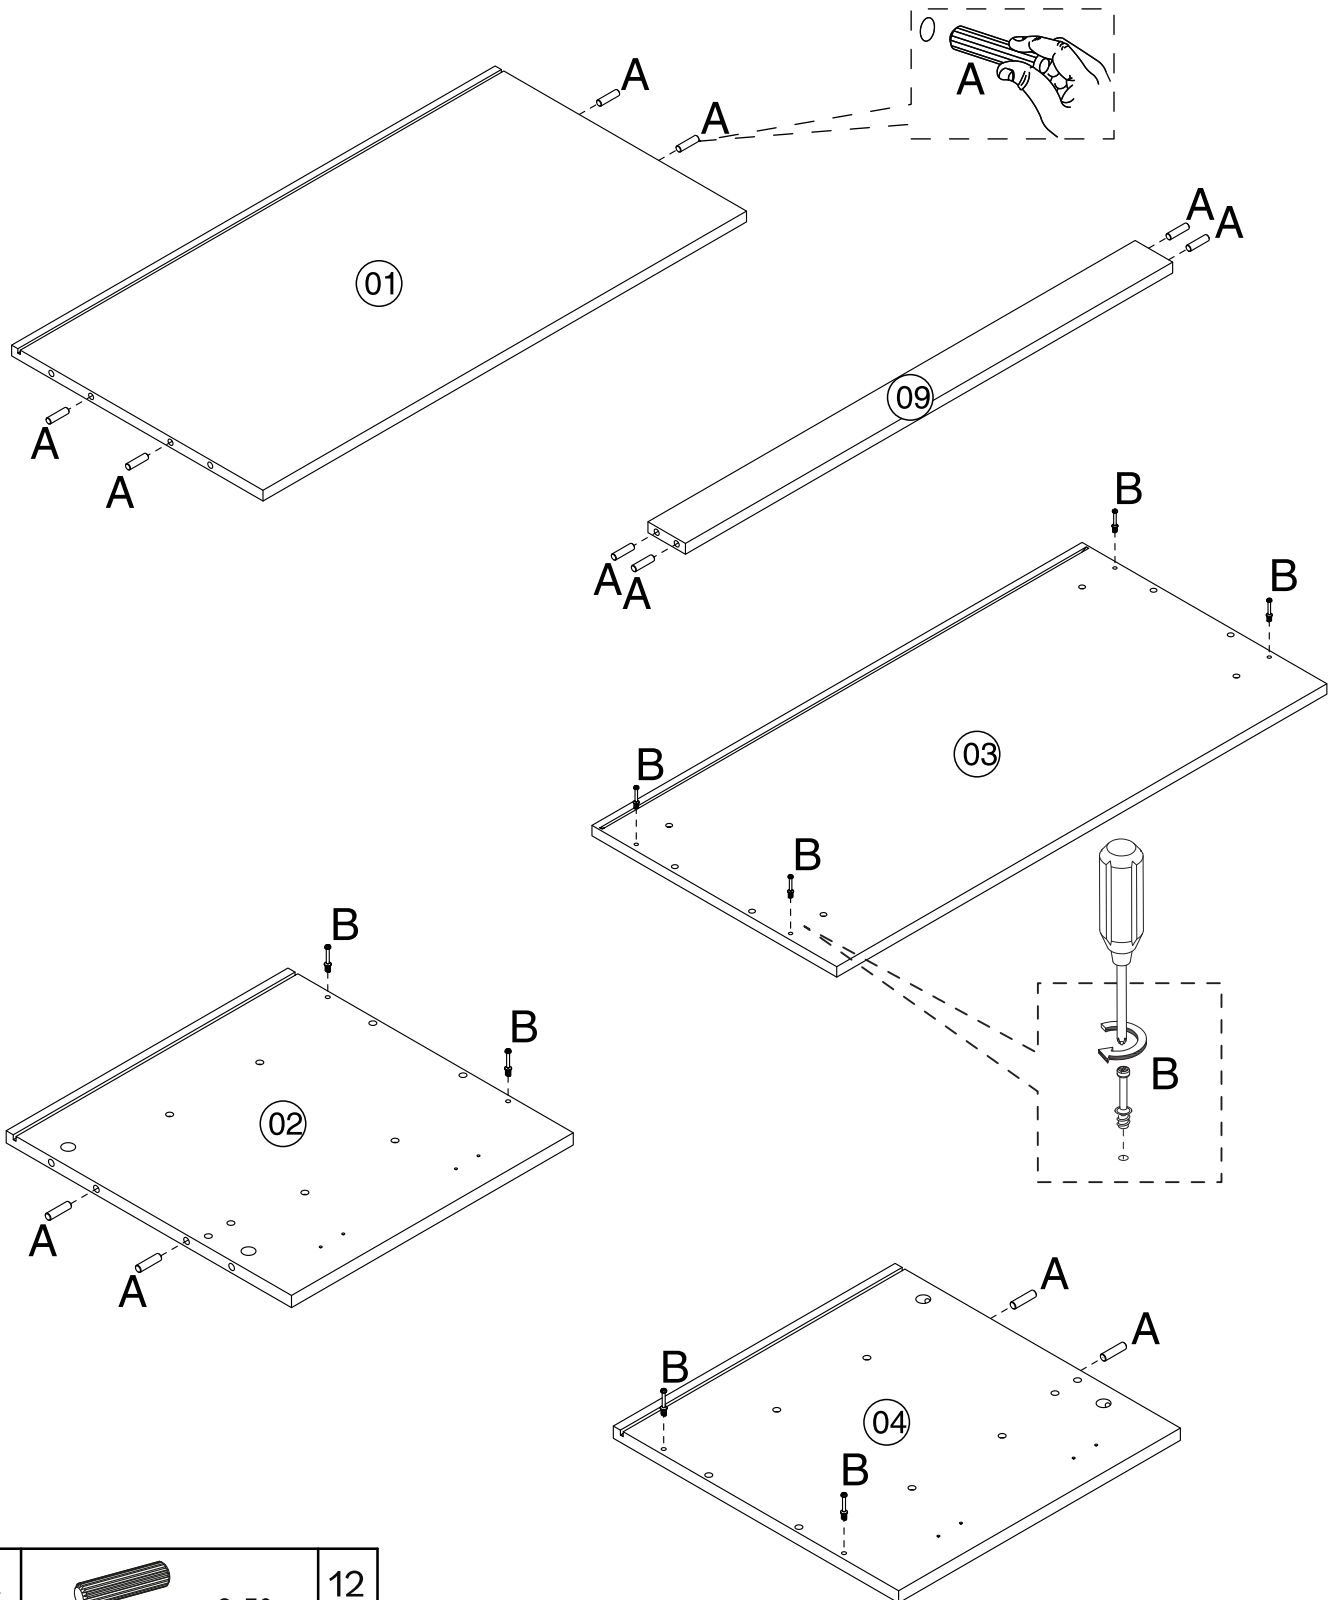


A		8x30mm	12
---	--	--------	----

B		Ø7x30mm	8
---	--	---------	---

Step 2A

Remove the safety tape and insert Glass Door Front (6) in Doors (5) and secure using Door Latch (N), Screw (D) and a Phillips screwdriver.

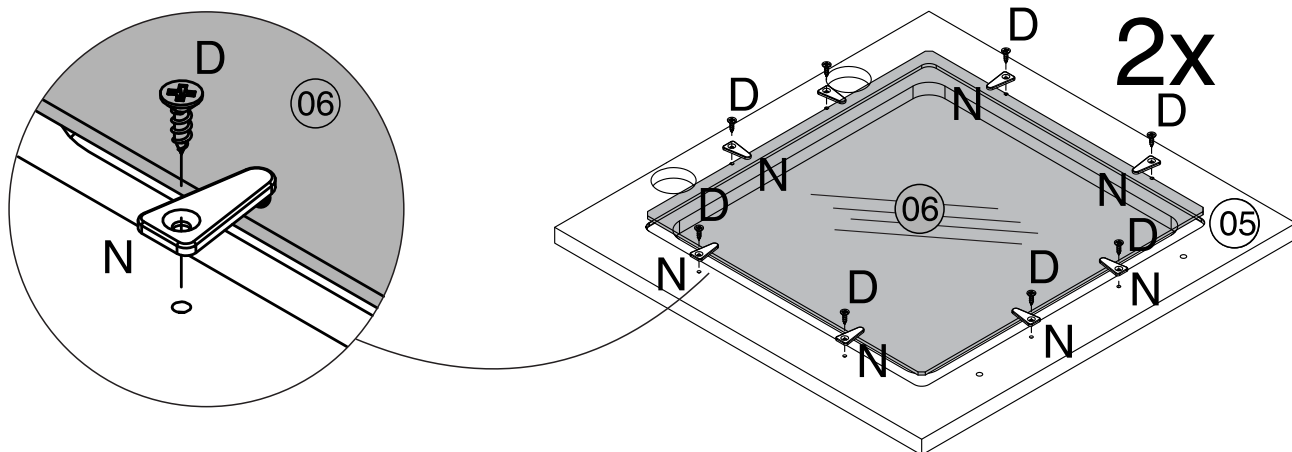


D		Ø3.5x12mm	16
---	--	-----------	----

N		25x12mm	16
---	--	---------	----

Step 2B

Attach Hinges (M) to Doors (5) using Screw (F) and a Phillips screwdriver.


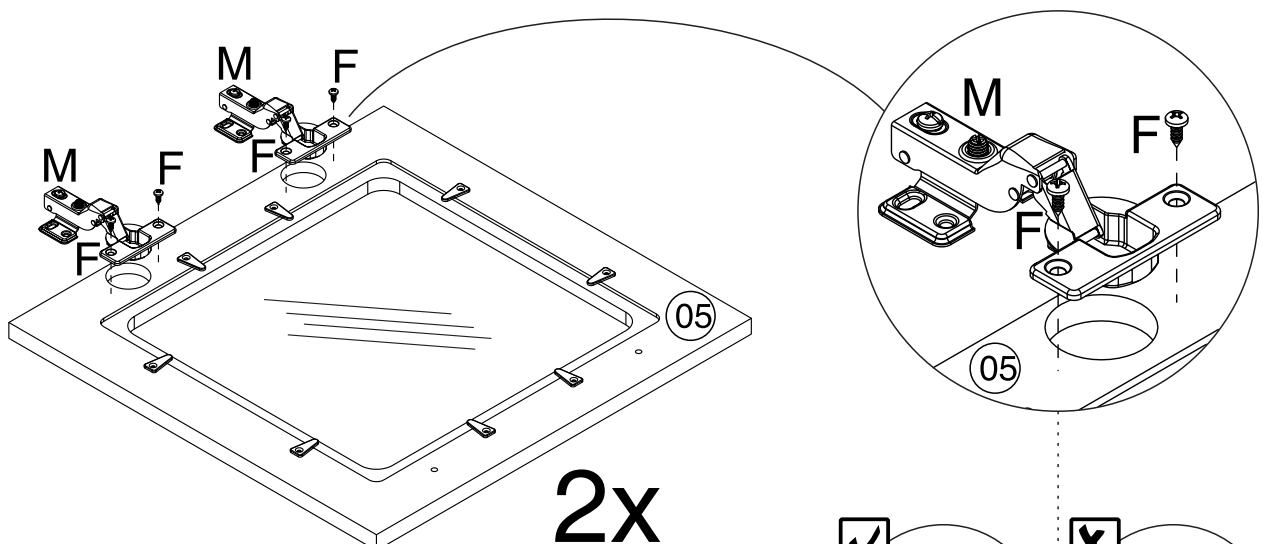


F		Ø4x14mm	8
---	--	---------	---

M		Ø35mm	4
---	--	-------	---


Step 3

Join Bottom Panel (1) and Left Panel (2) using Cam Locks (C) and a Phillips screwdriver add sticker.

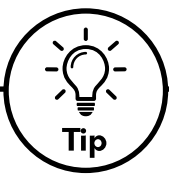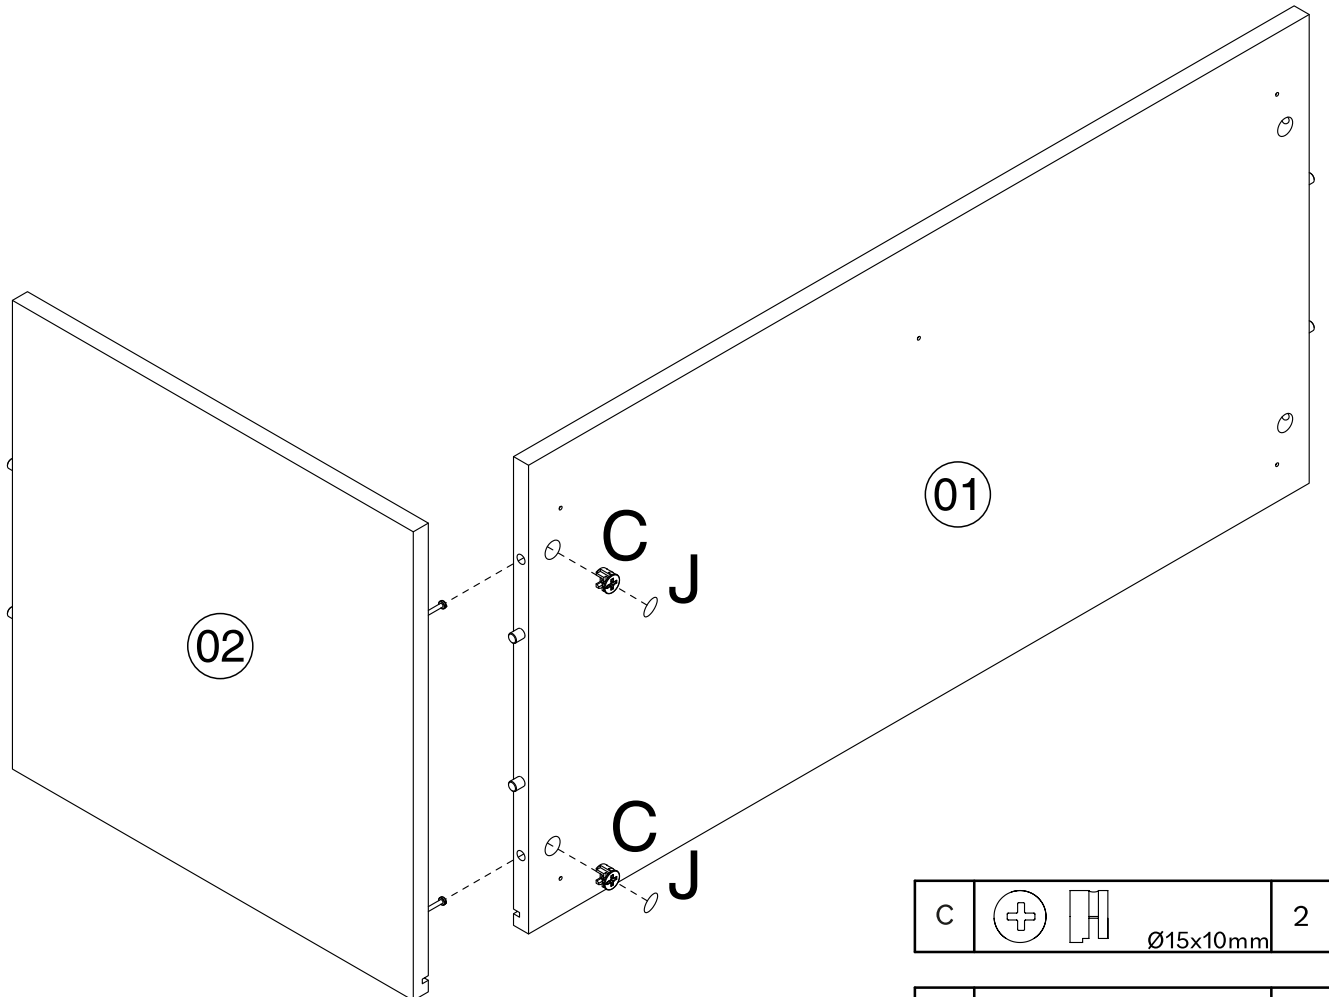


Cam Locks


Cam Locks help to securely join two pieces together.
Follow these easy steps:

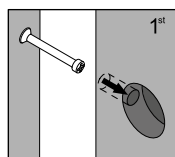

1: Insert Cam Bolt into bolt holes on the flat side. Don't over tighten!

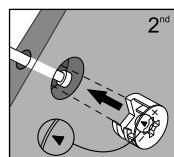

2: Assemble both parts together. The cam bolts go in the drill holes that have a circular hole on the side, you should be able to see the cam bolts through it. After fitting parts together insert the cam lock on the side holes.

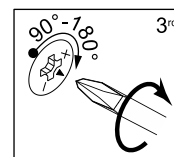


3: On the back of the Cam Lock will be a "C" shape. Insert the Cam Lock so the opening of the "C" fits over the Cam Bolt. Tighten with the screwdriver.

Step 4



Secure Rail (9) and Right Panel (4) using dowels, Cam Locks (C) and a Phillips screwdriver add sticker.

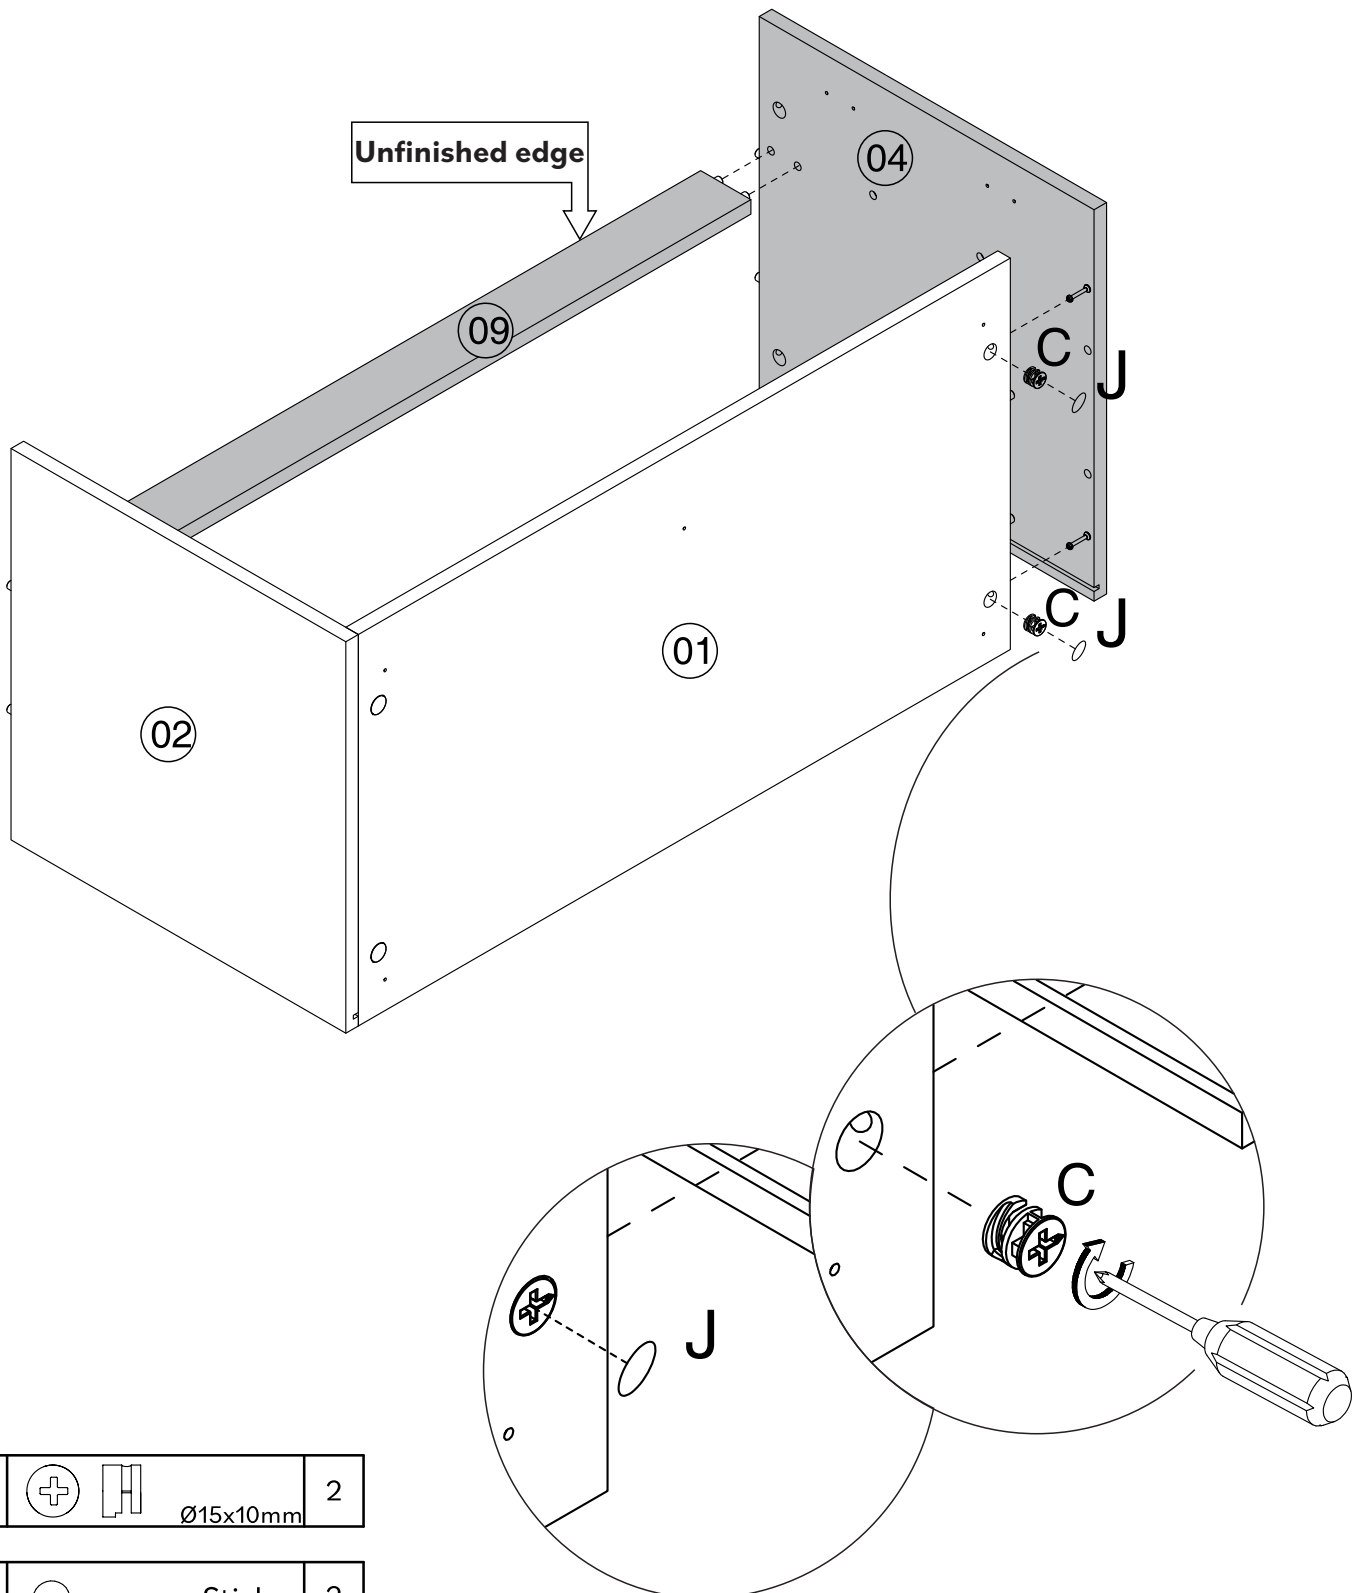


C			Ø15x10mm	2
---	--	--	----------	---

J		Sticker	2
---	--	---------	---


Step 5





Slide Back Panel (8) between the grooves on Left Panel (2) and Right Panel (4) fitting in Bottom Panel (1).

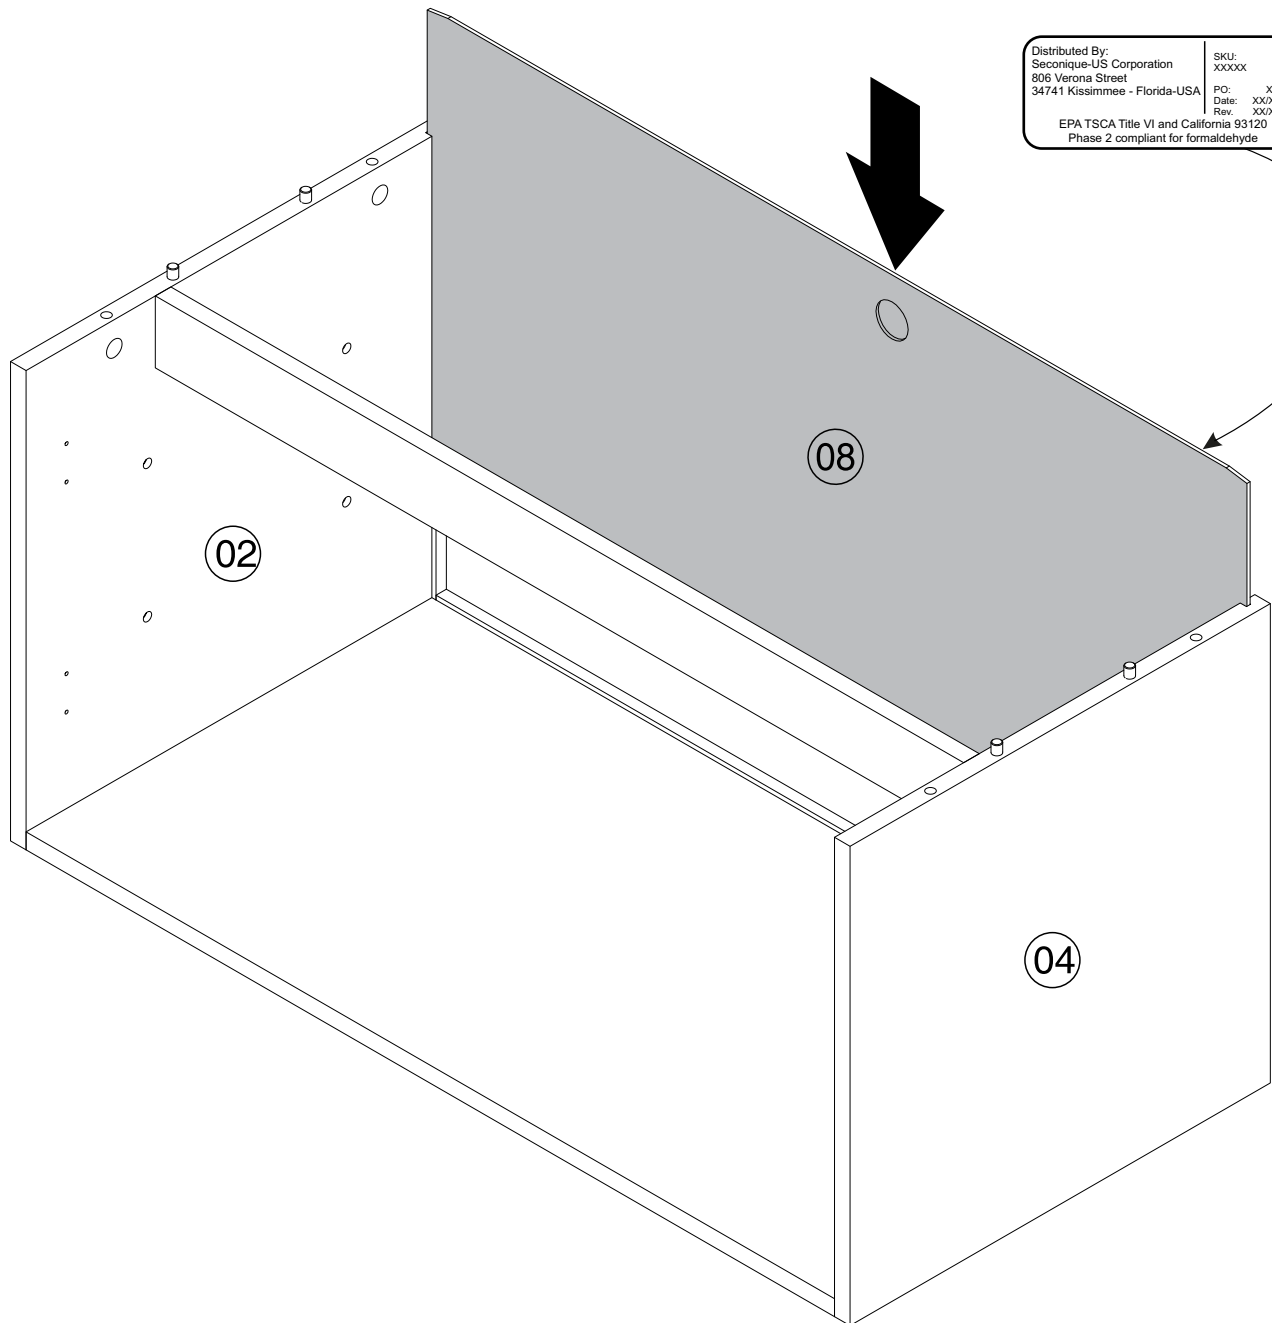

Step 6



Attach Top Panel (3) to Left Panel (2) and Right Panel (4) using Cam Locks (C) and a Phillips screwdriver add sticker.




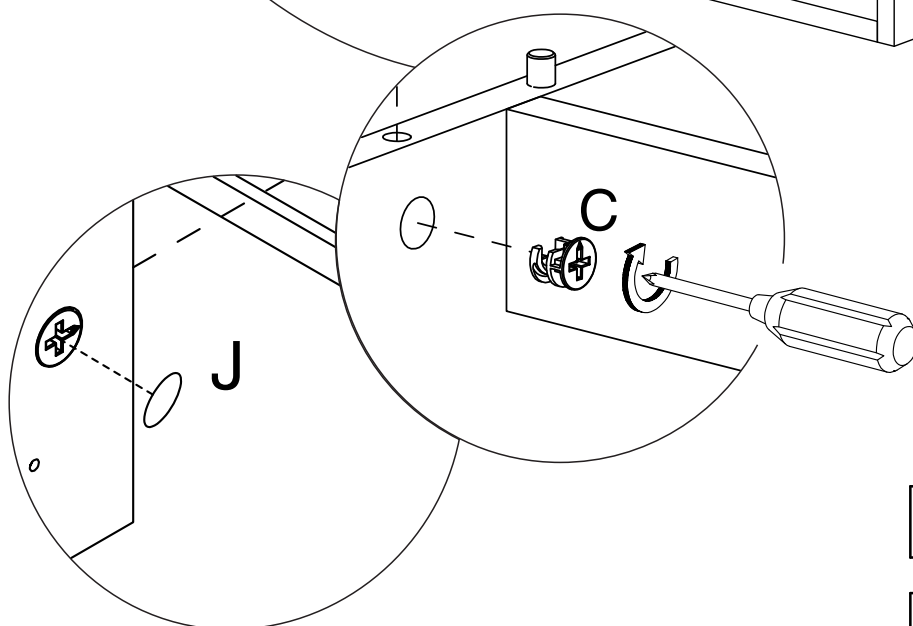
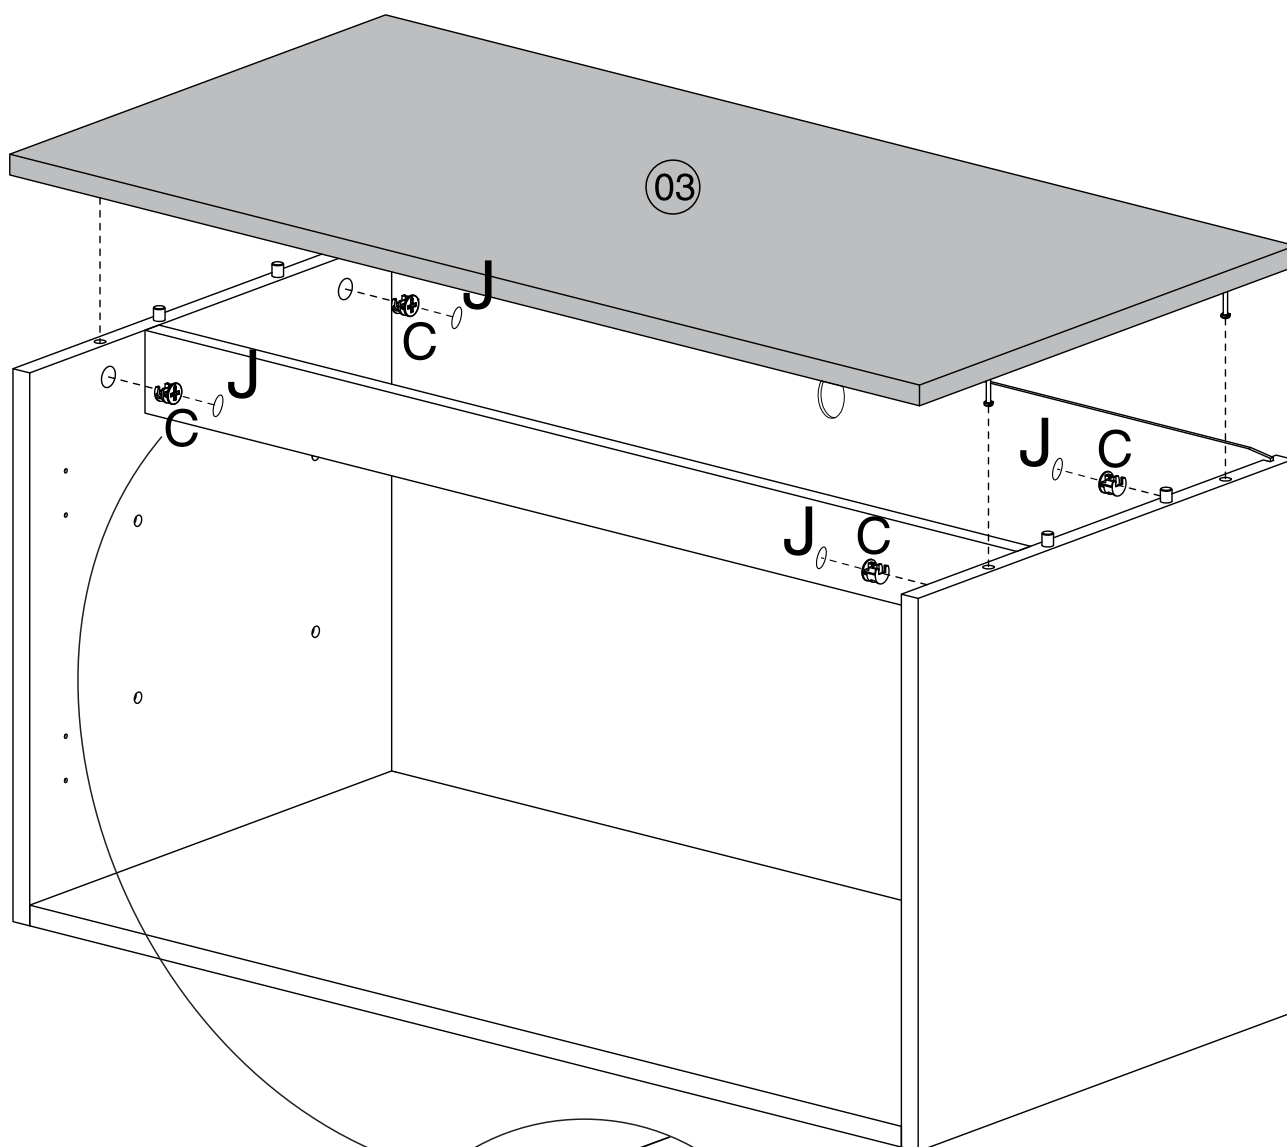


C			Ø15x10mm	4
---	--	--	----------	---

J		Sticker	4
---	--	---------	---

Step 7


Secure Back Panel (8) using Support (K), Screw (I) and a Phillips screwdriver.

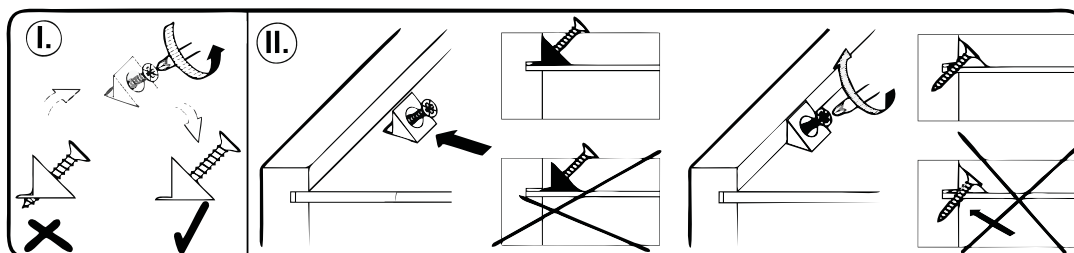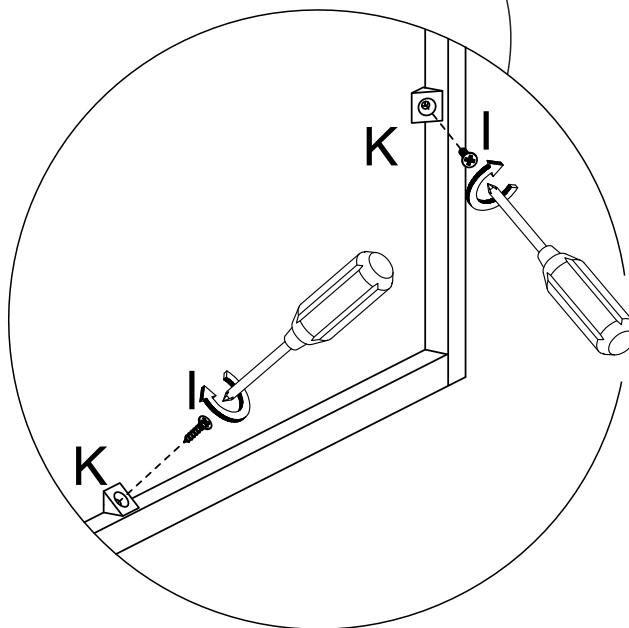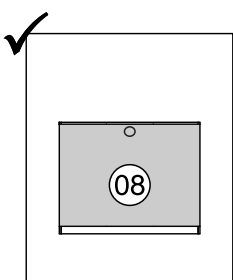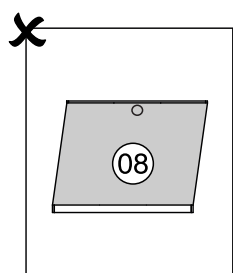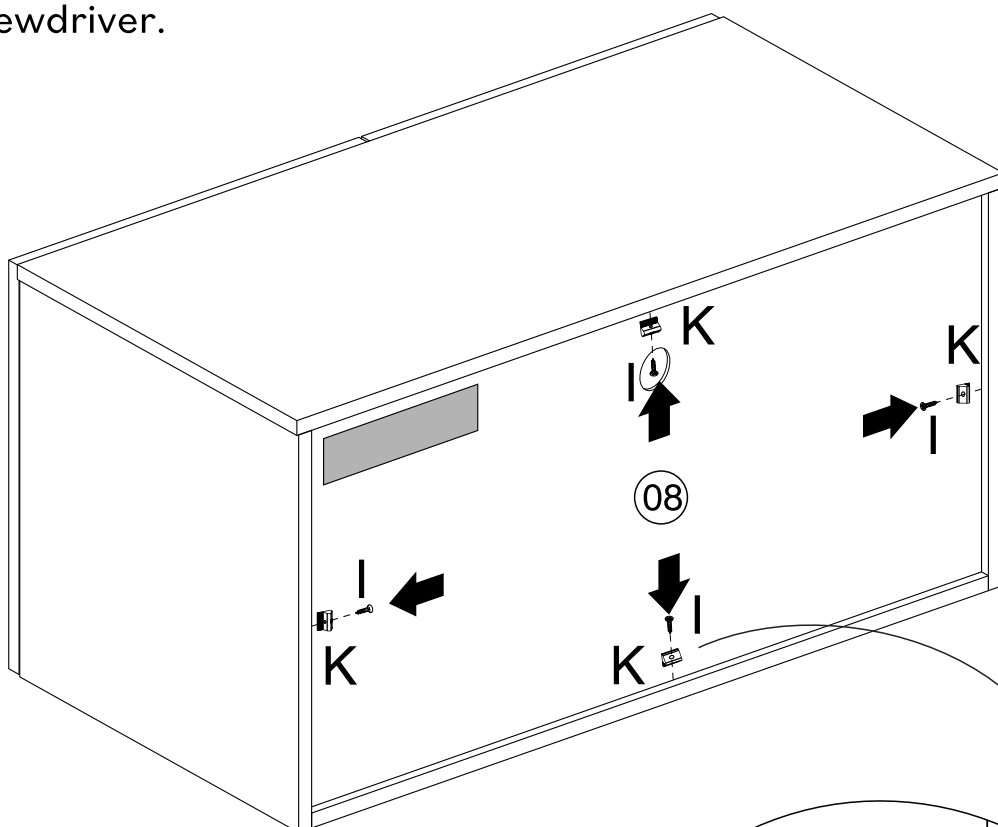


I		Ø3x16mm	4
---	--	---------	---

K		14.7x30mm	4
---	--	-----------	---

Step 8



Attach Door (5) on Left Panel (2) using Screws (F) and a Phillips screwdriver.


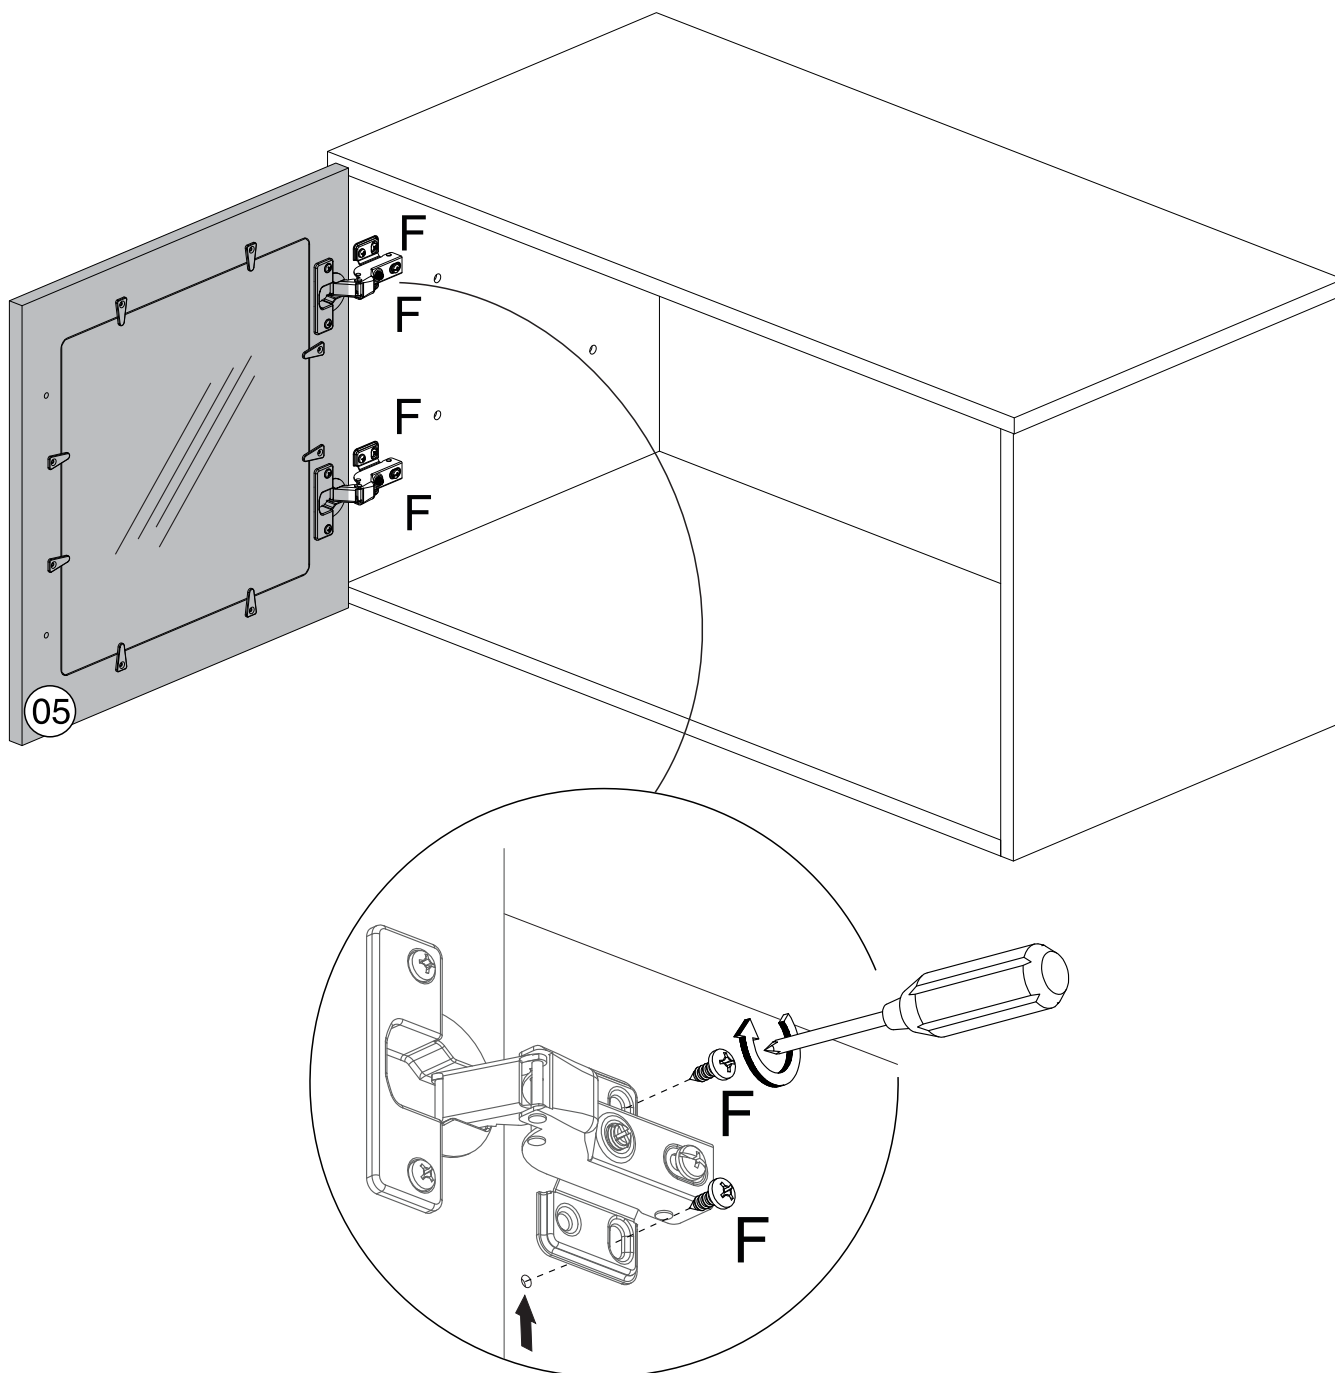


F		Ø4x14mm	4
---	---	---------	---

Step 9



Attach Door (5) on Right Panel (4) using Screws (F) and a Phillips screwdriver.

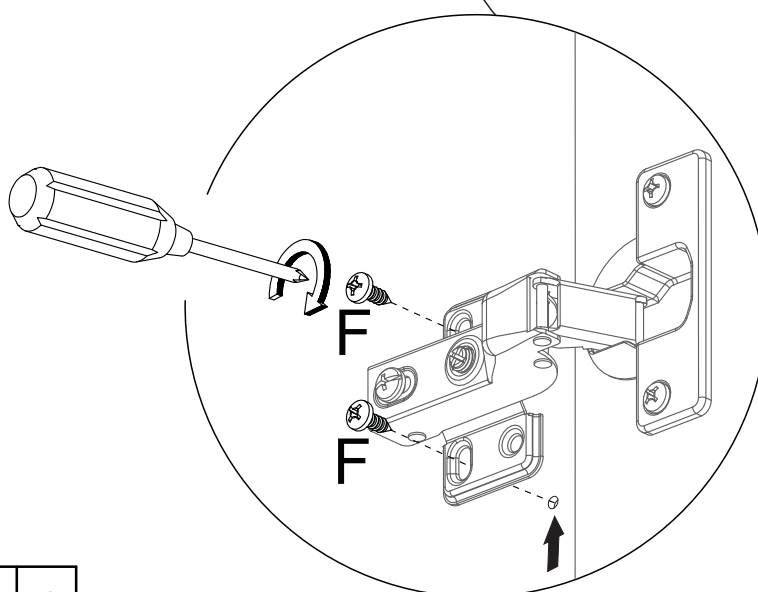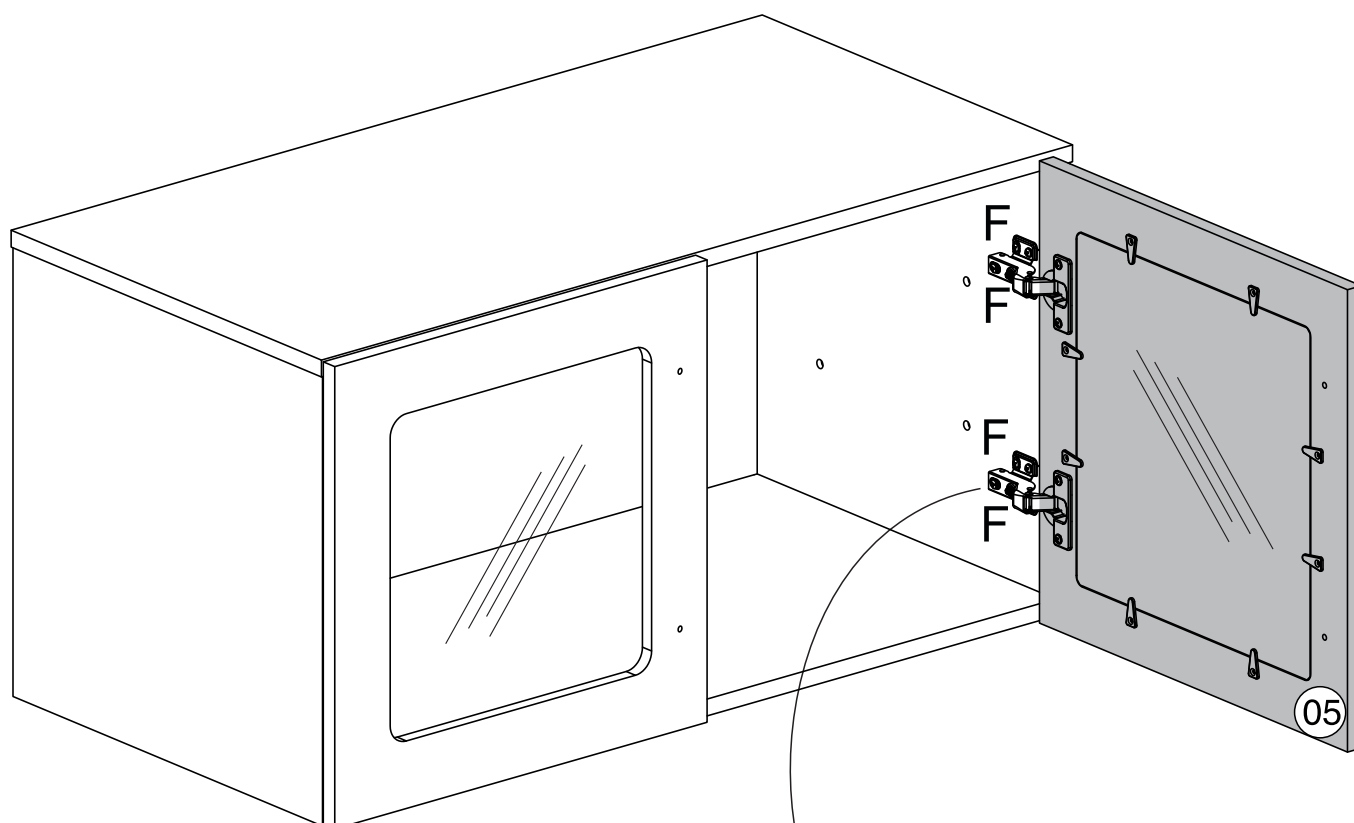


F		Ø4x14mm	4
---	---	---------	---


Step 10




Secure Handle (L) using Screw (E) and a Phillips screwdriver.

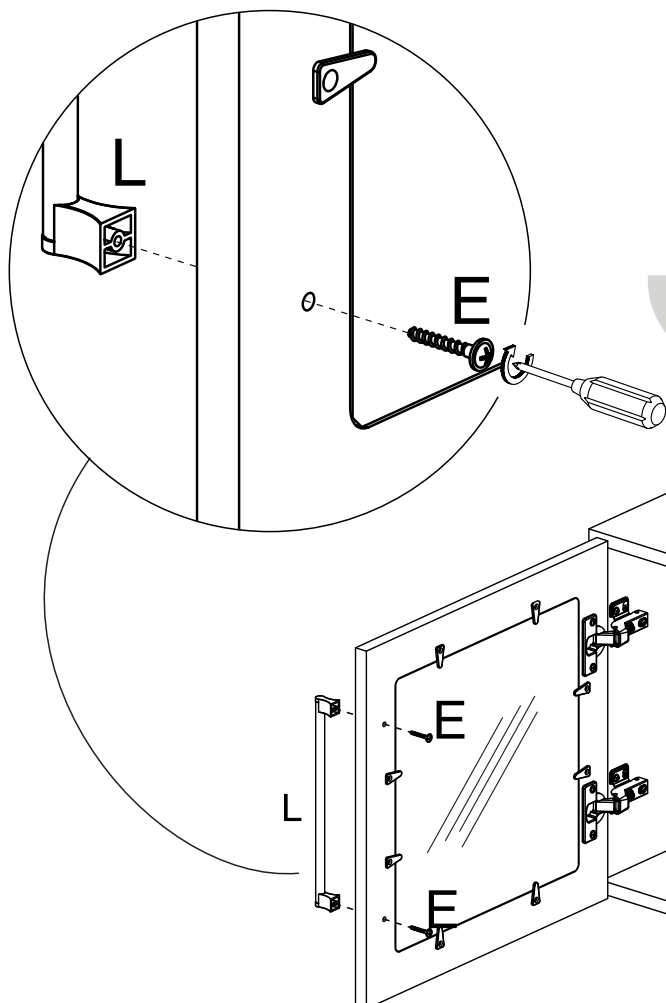

Step A

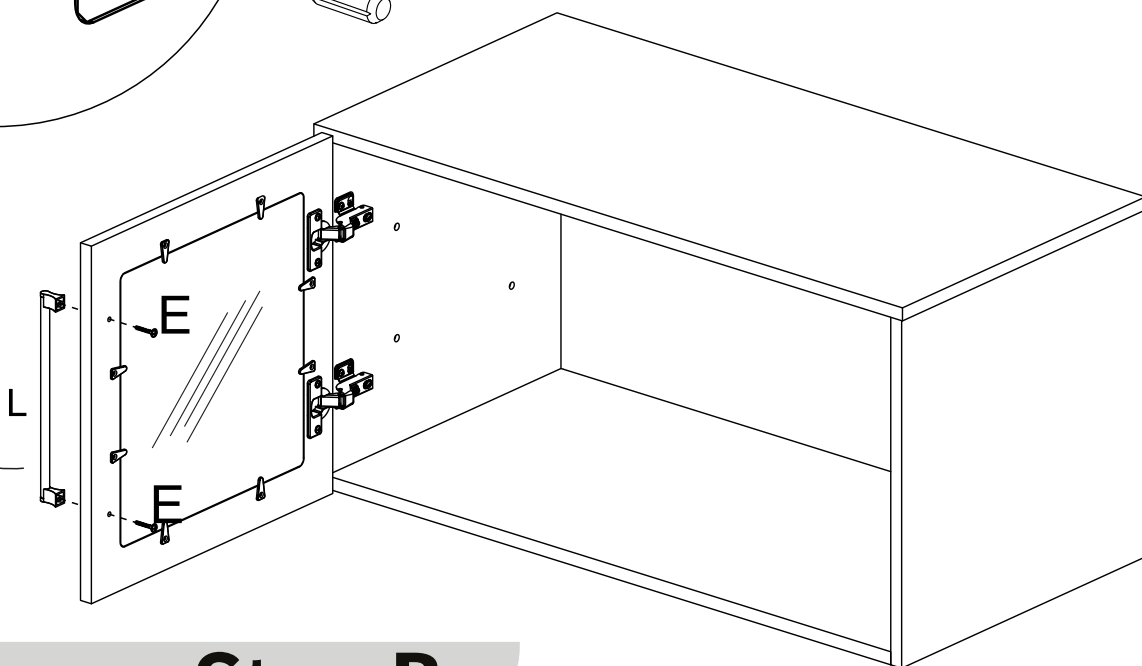

Step B


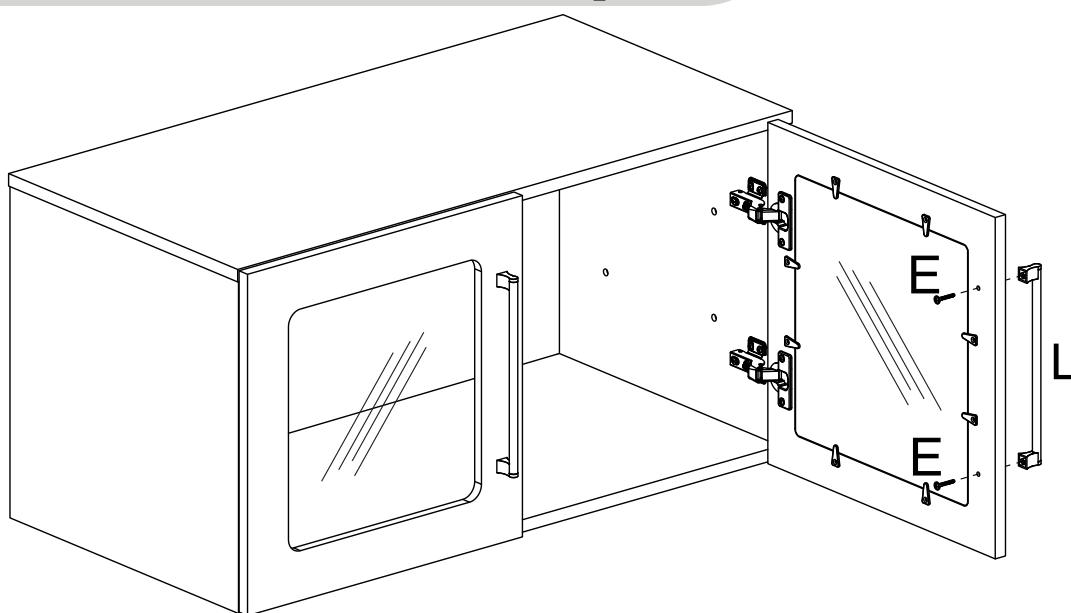


E		Ø3.5x25mm	4
---	--	-----------	---

L		224mm	2
---	--	-------	---


Step 11

Adjust the doors using Screw (F) and a Phillips screwdriver.

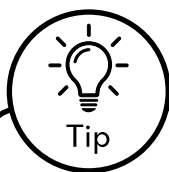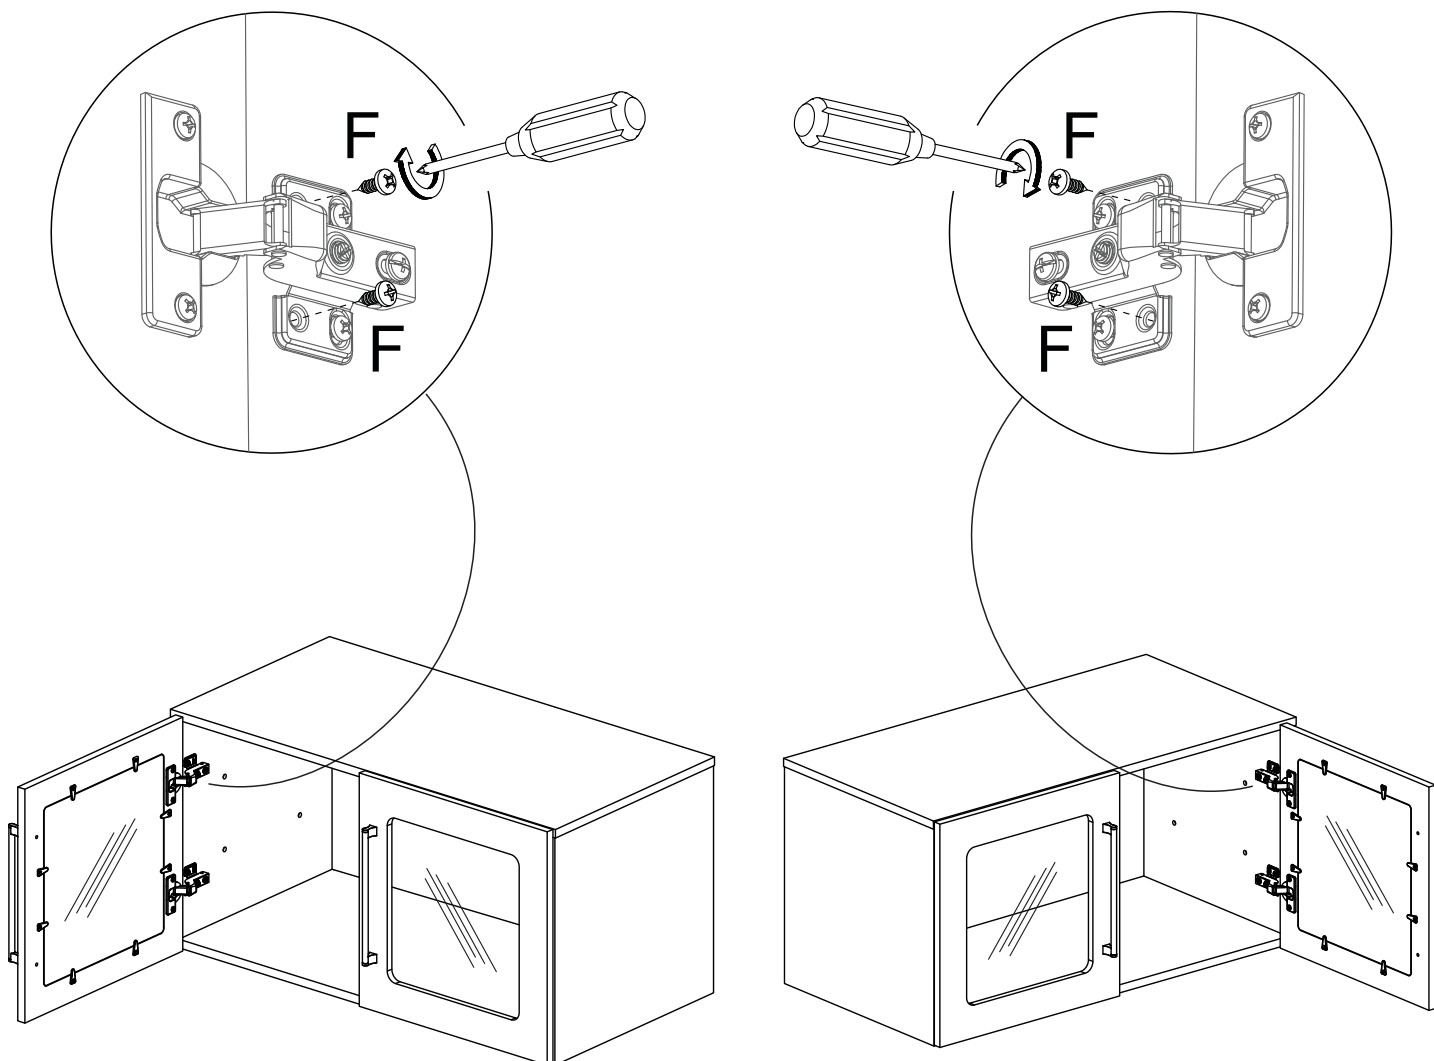


F		Ø4x14mm	8
---	---	---------	---


Adjusting The Cabinet Doors

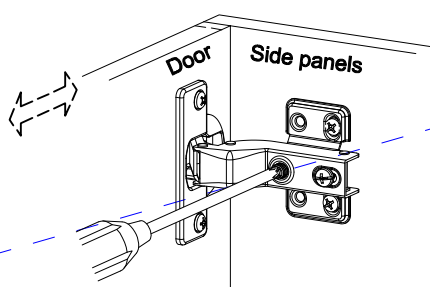

Adjust horizontal width
with this screw

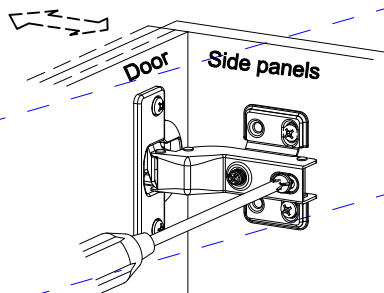


Adjust depth position
by loosening the hinge
arm mounting screw

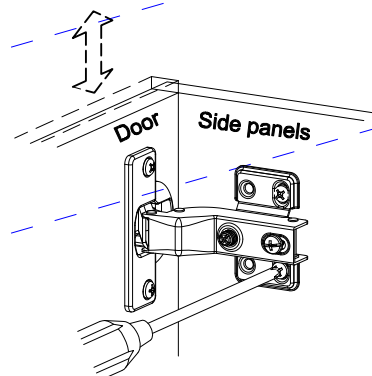

Adjust vertical height
via the screws in the
mounting plate


Step 12

If you are not using your new cabinet on top of other Modular Cabinet, you can attach Feet (7) using Screw (H) and a Phillips screwdriver.

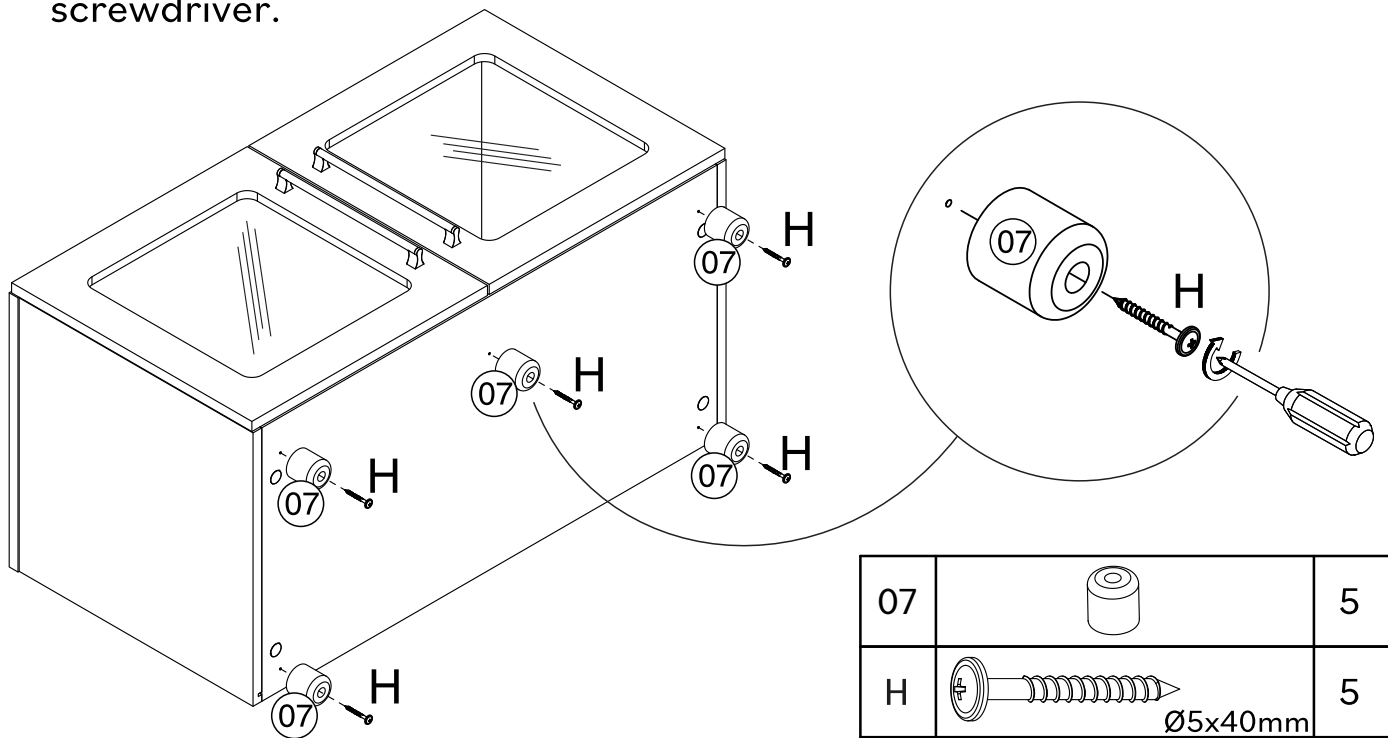


Modular Assembly Options

Step 13

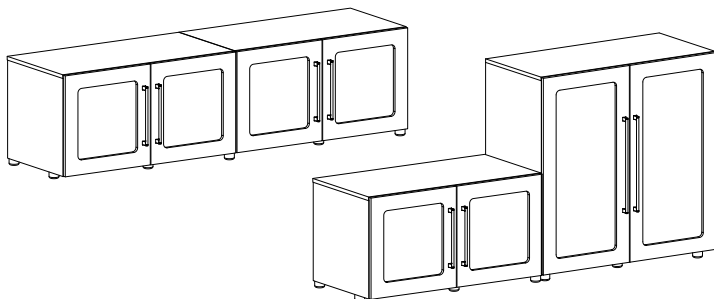


Step 14


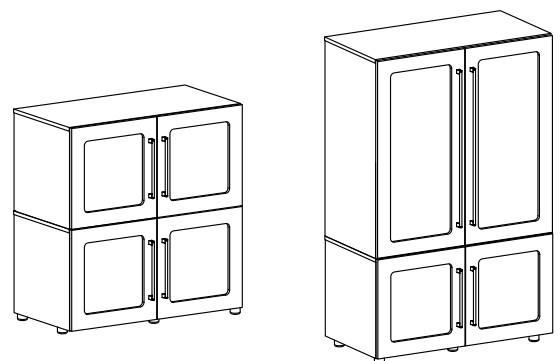


Step 13

If attaching cabinets side by side, use Screws (G) and a Phillips screwdriver to join them through the side panels. The holes are predrilled.

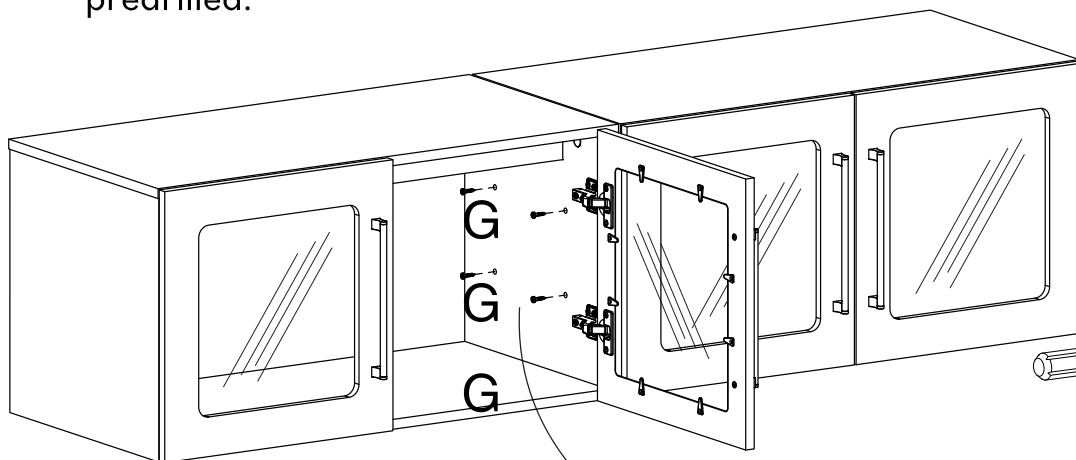


Assembly Option

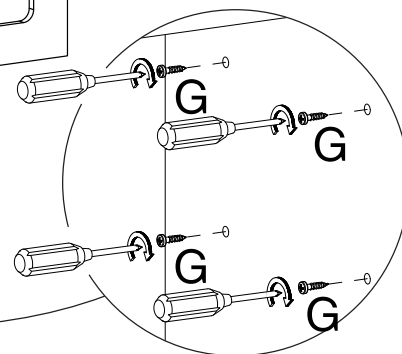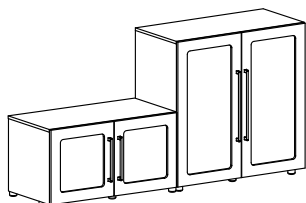



G		Ø4x20mm	4
---	--	---------	---

Step 14

If assembling your cabinets on top of each other, use Screws (G) and a Phillips screwdriver to join them through the top and bottom panels. The holes are predrilled.

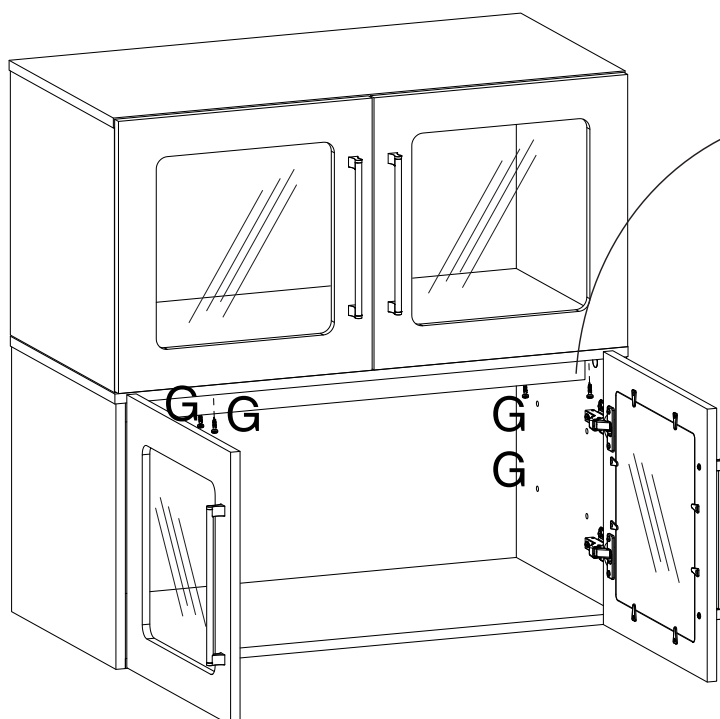


Assembly Option

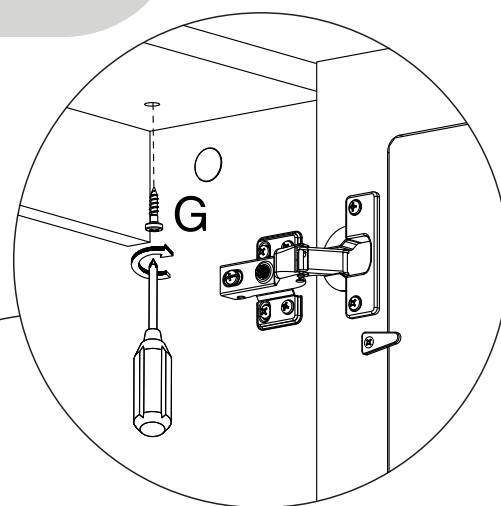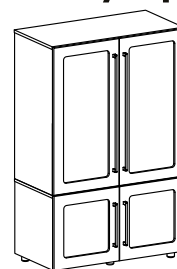

G		Ø4x20mm	4
---	---	---------	---

Step 15


With everything in place use Stickers (J) to cover the extra holes.

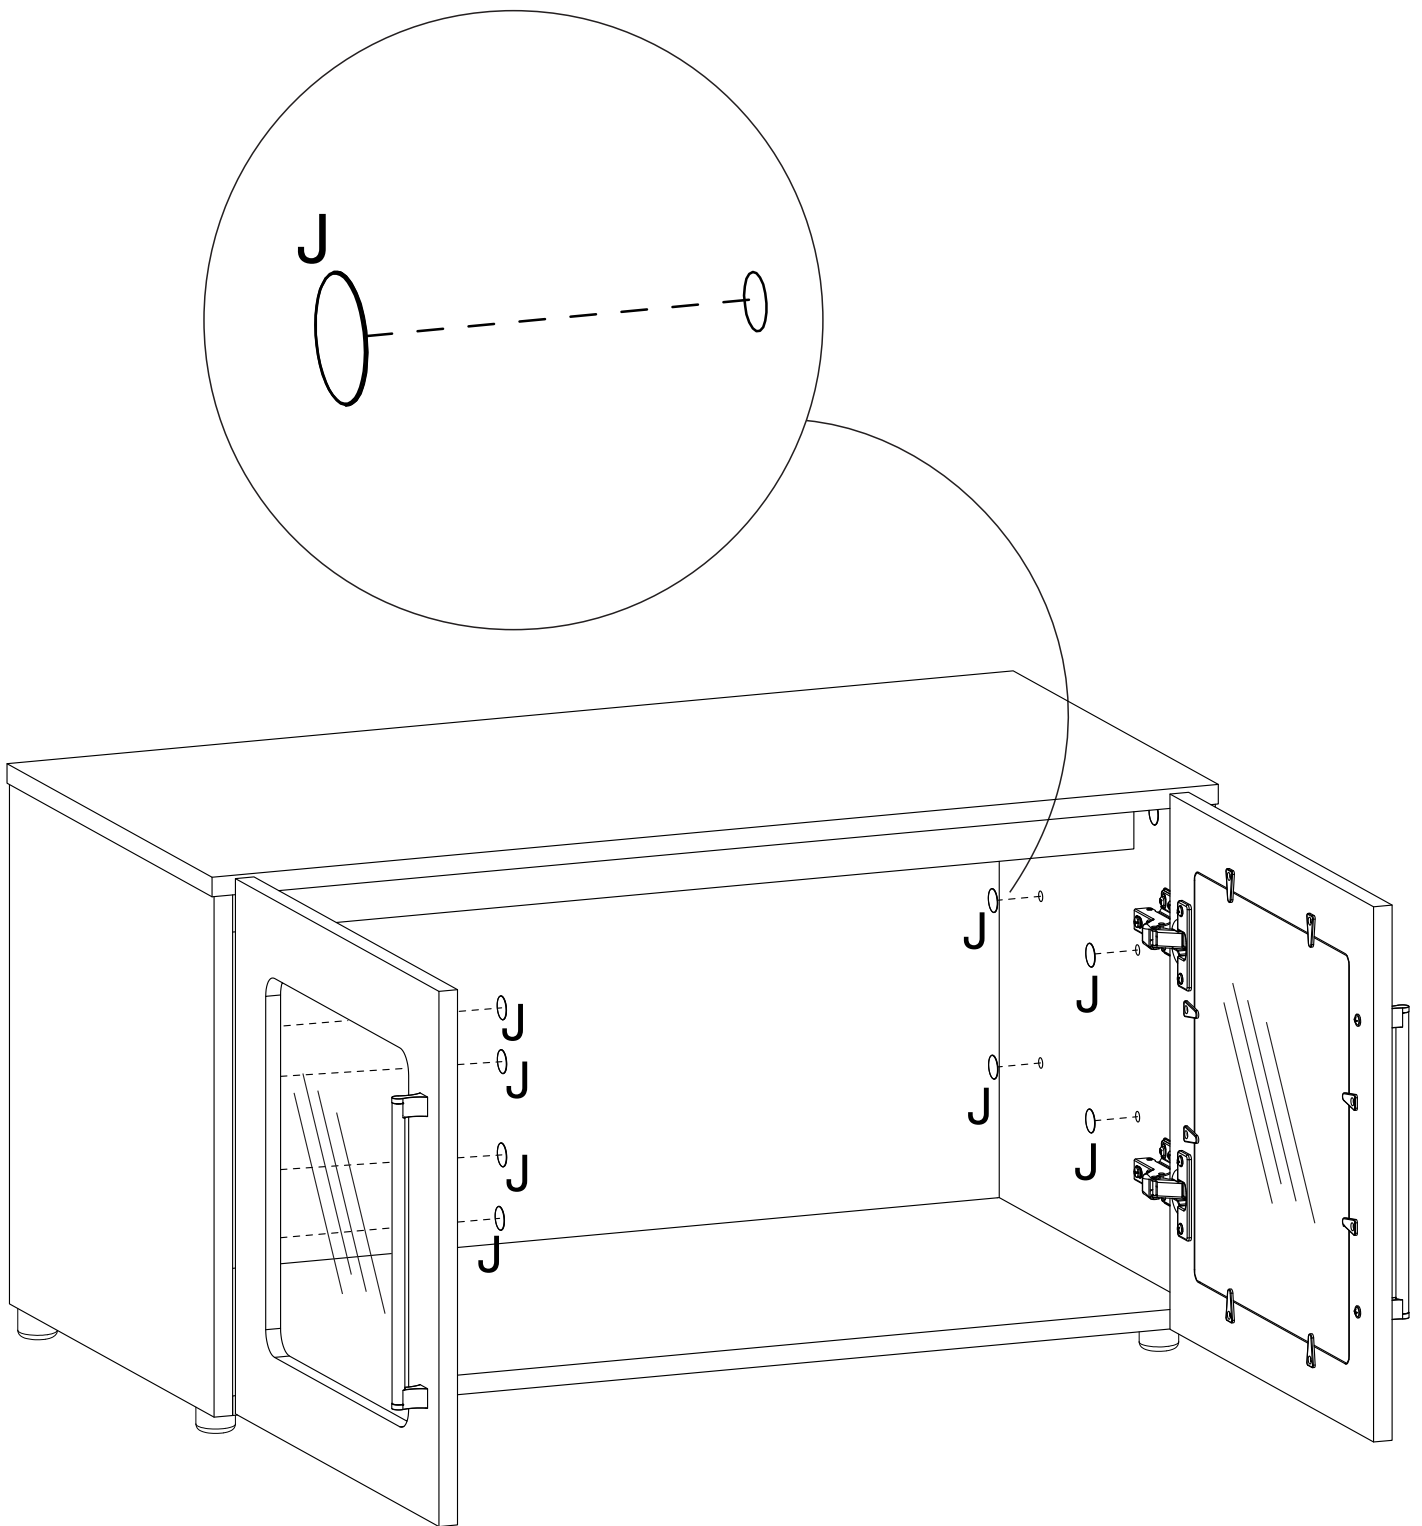

J		Sticker	8
---	---	---------	---

Step 16

Attach your Cabinet to the wall. Secure Wall Anchor (P) to your cabinet using Washer (O), Screw (G) and a Phillips screwdriver.

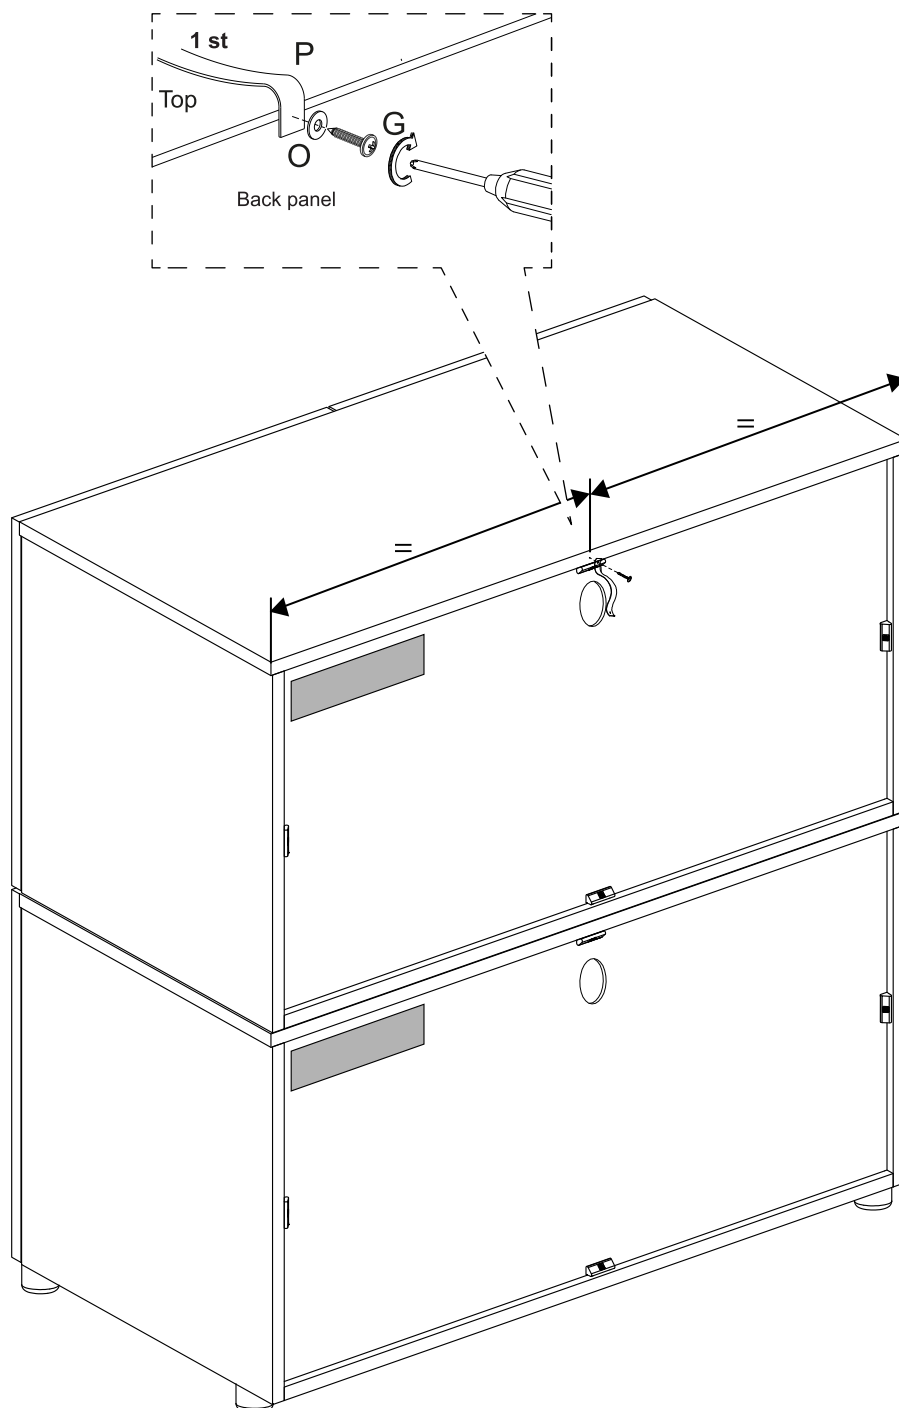


G		Ø4x20mm	1
---	---	---------	---

O		1/4x5/8	1
---	---	---------	---

P		20x200mm	1
---	---	----------	---

Step 17


To finish this up use a plastic bush suitable for your wall. Then, secure the Wall anchor (L) to the wall using Washer (M) and a screw also suitable for your wall.

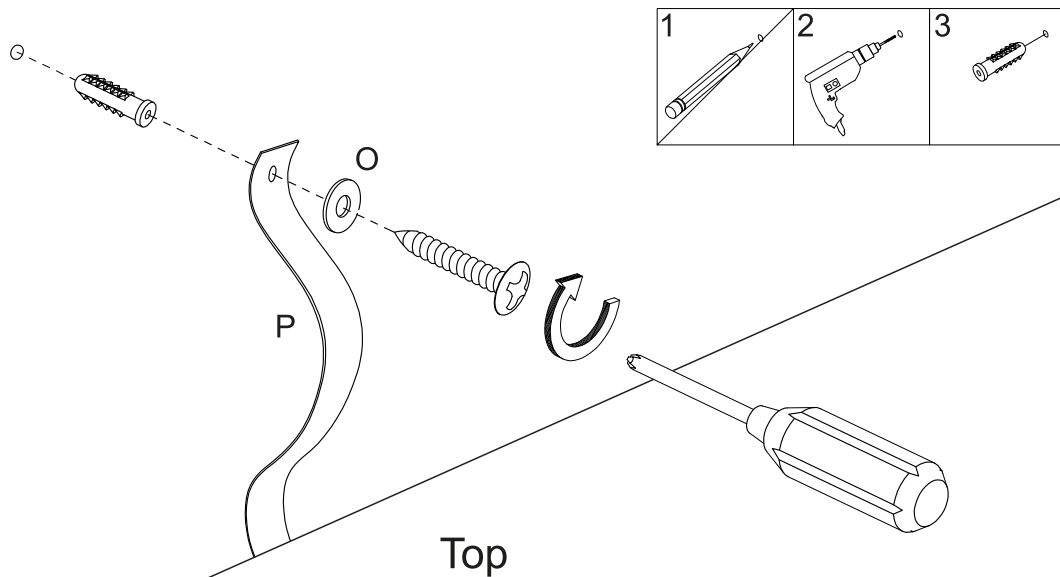


O		1/4x5/8	1
---	---	---------	---

Warning

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over, we recommend that it is permanently attached to the wall. Wall anchor is included in this product. Please make sure the extra hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

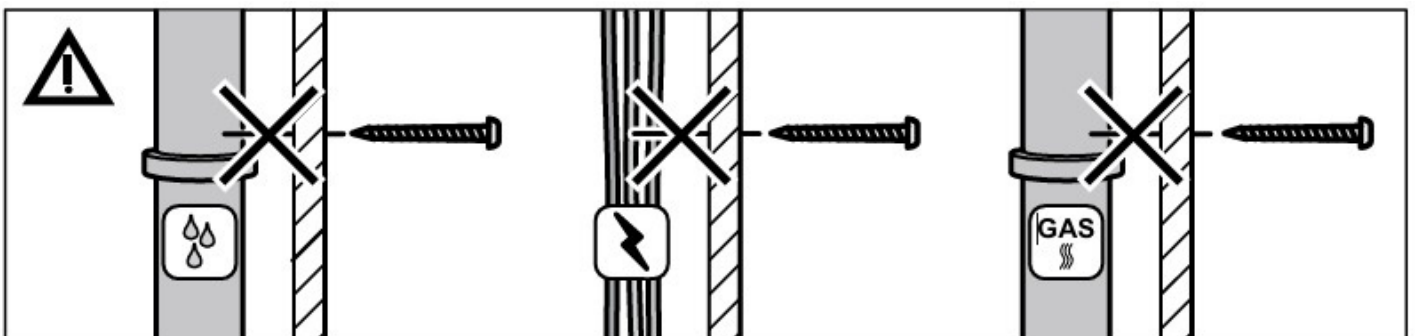

**You did it! Enjoy your new Modular
Cabinet with Glass Door!**

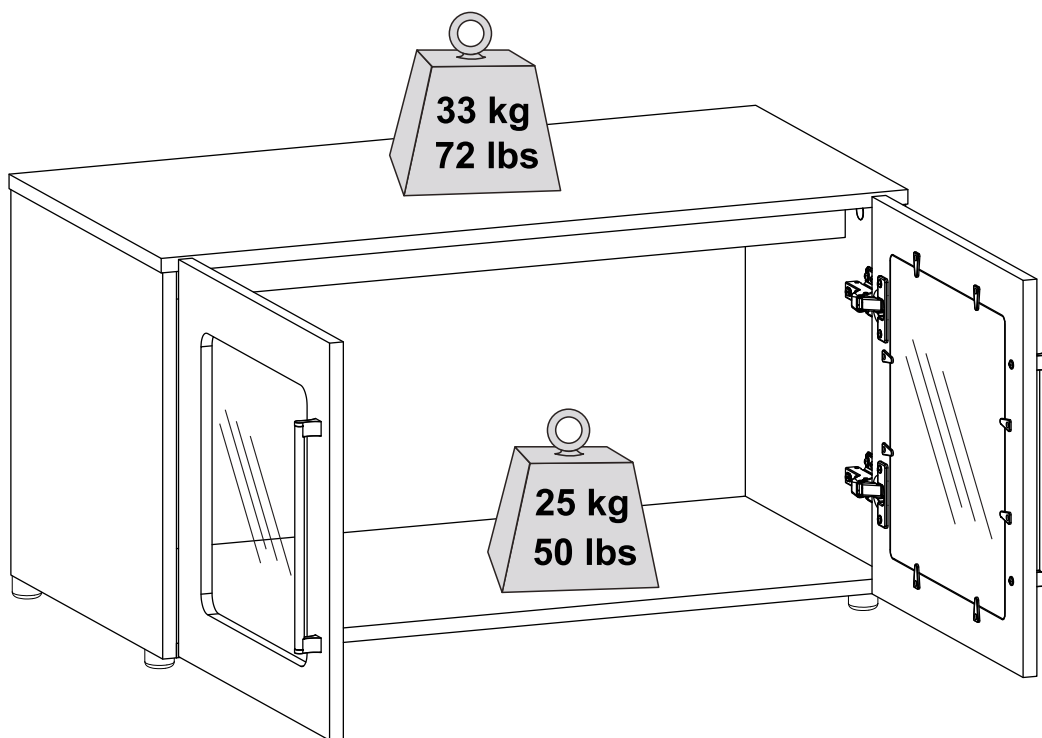

Congratulations on your new piece of furniture!