

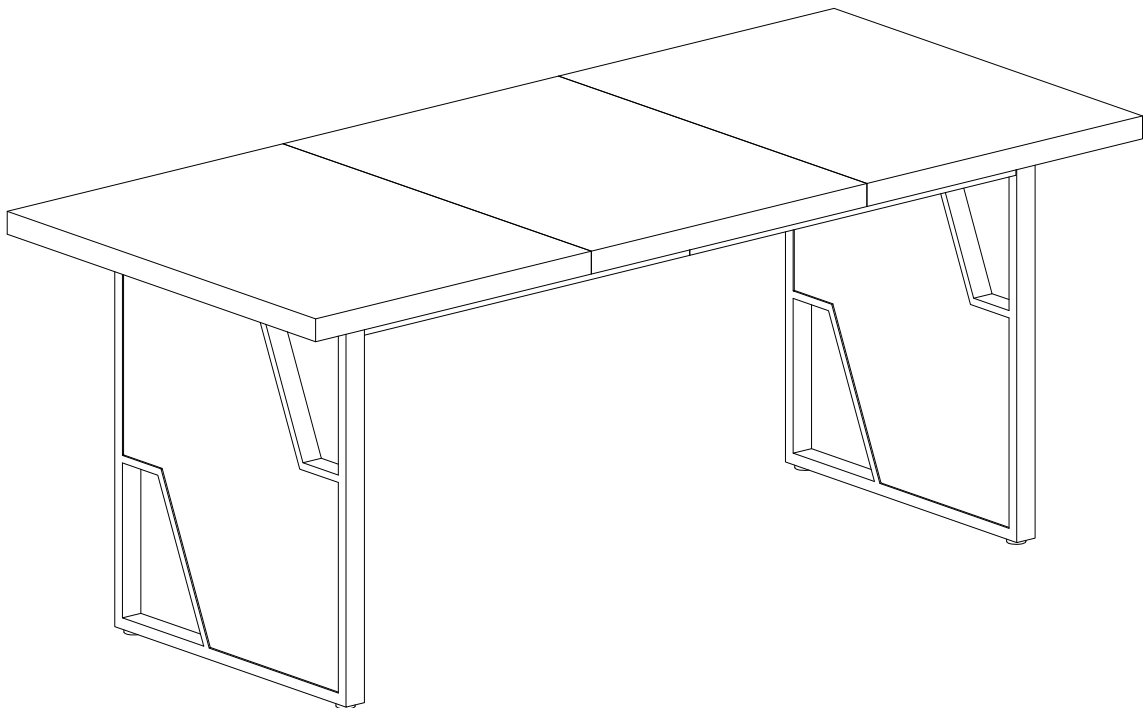
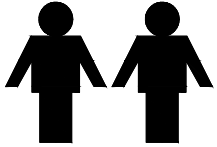
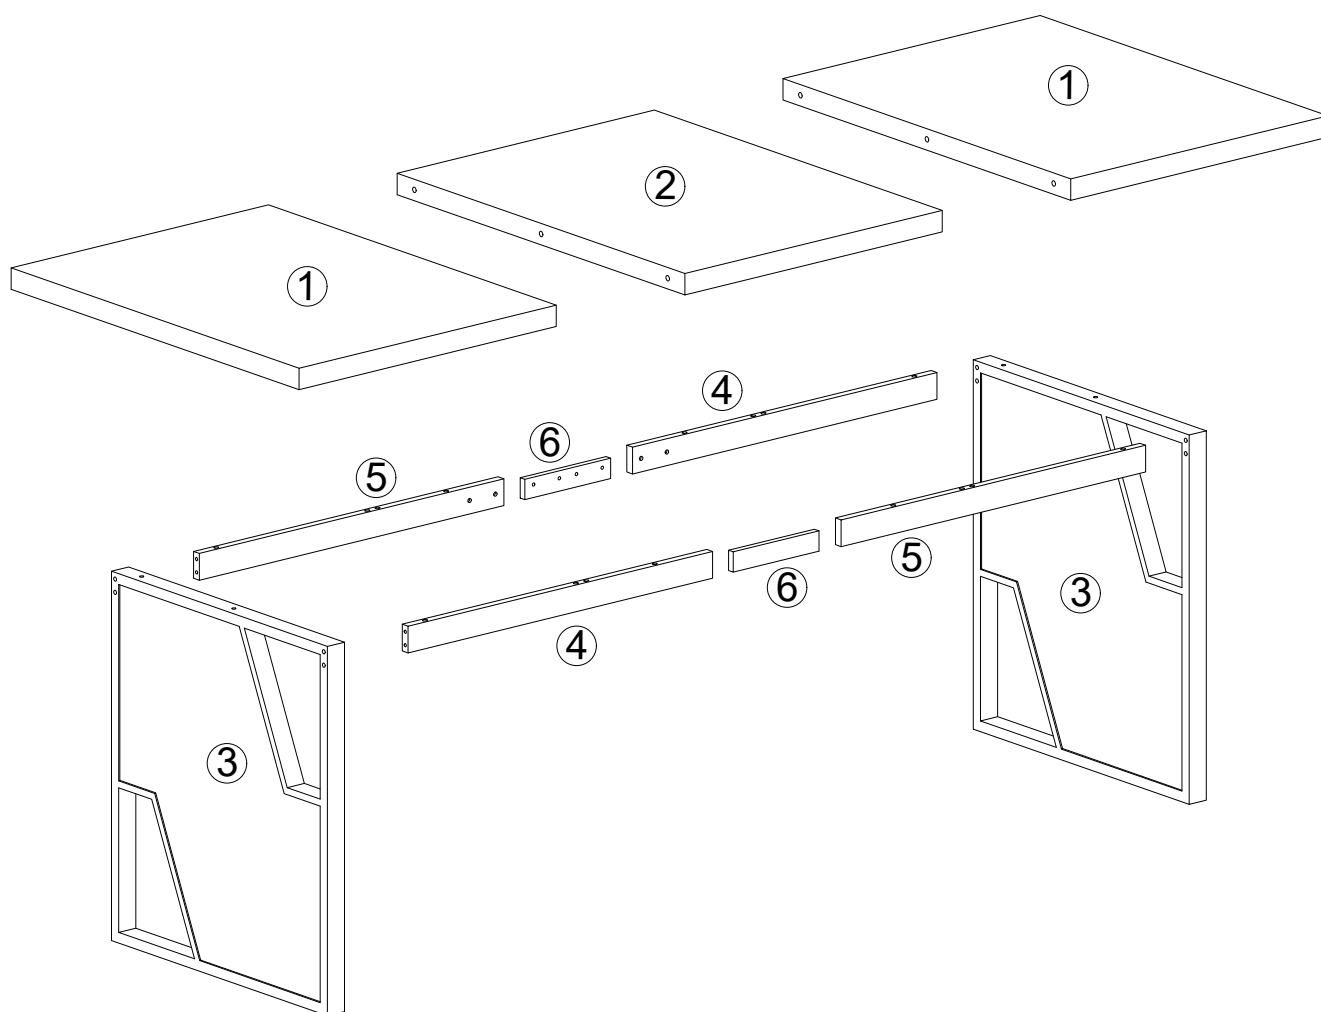


ASSEMBLY INSTRUCTION





Notes: Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.



A	X16	B	X8	C	X16	D	X1	E	X6	F	X4
											
M6X12mm		M6X60mm		M6X65mm		M4X55mm		Ø10X50mm		M6XØ30mm	



STEP 1

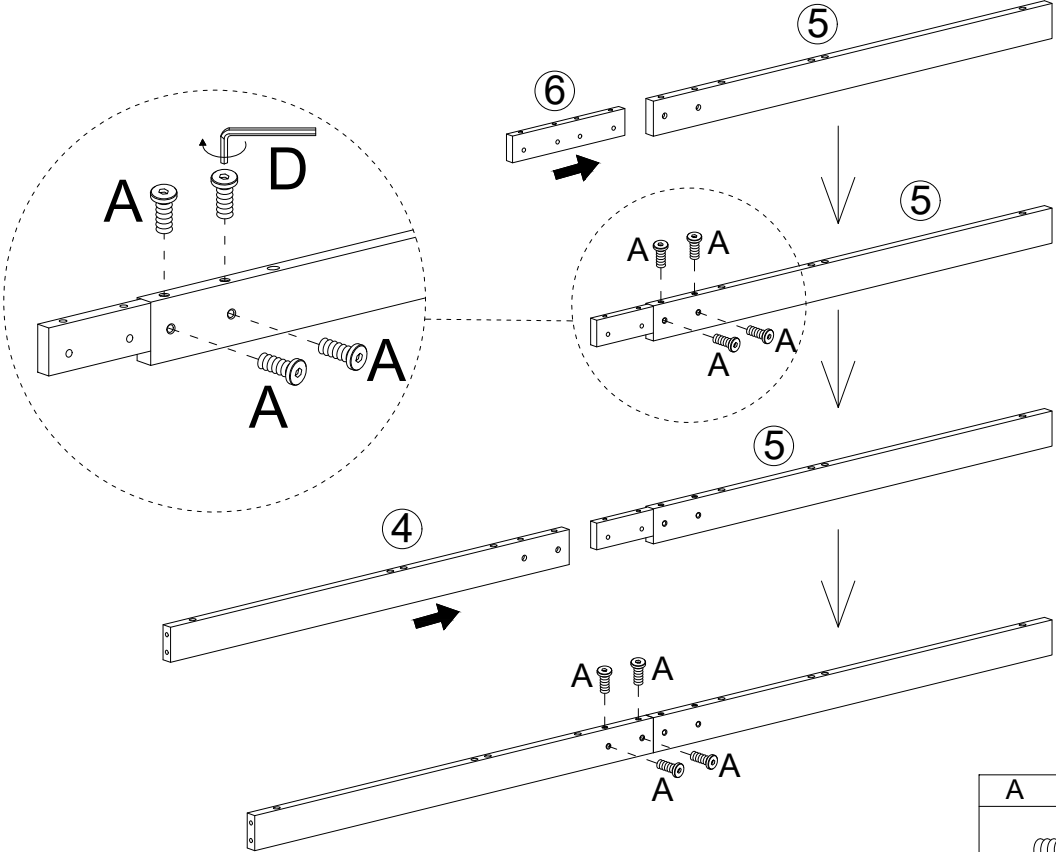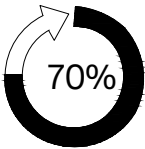


X2


A	X16	D	X1
			
M6X12mm		M4X55mm	

STEP 2

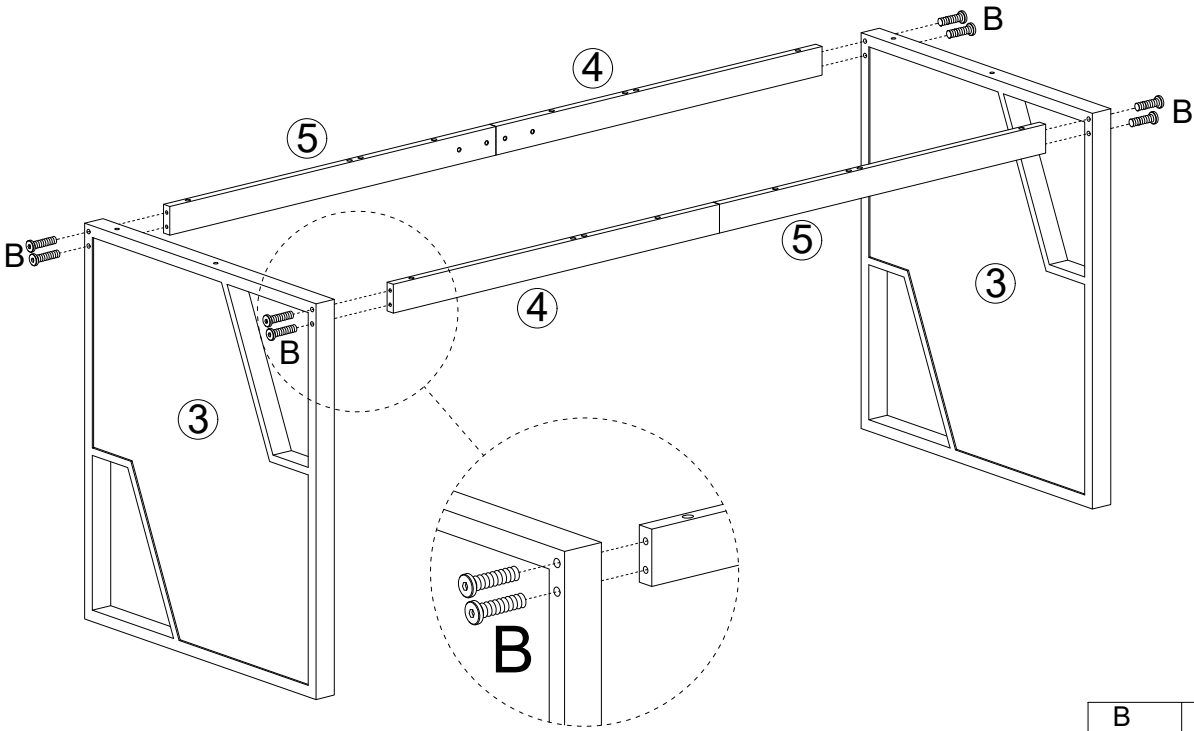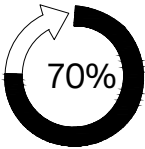


B	X8
	
M6X60mm	


STEP 3

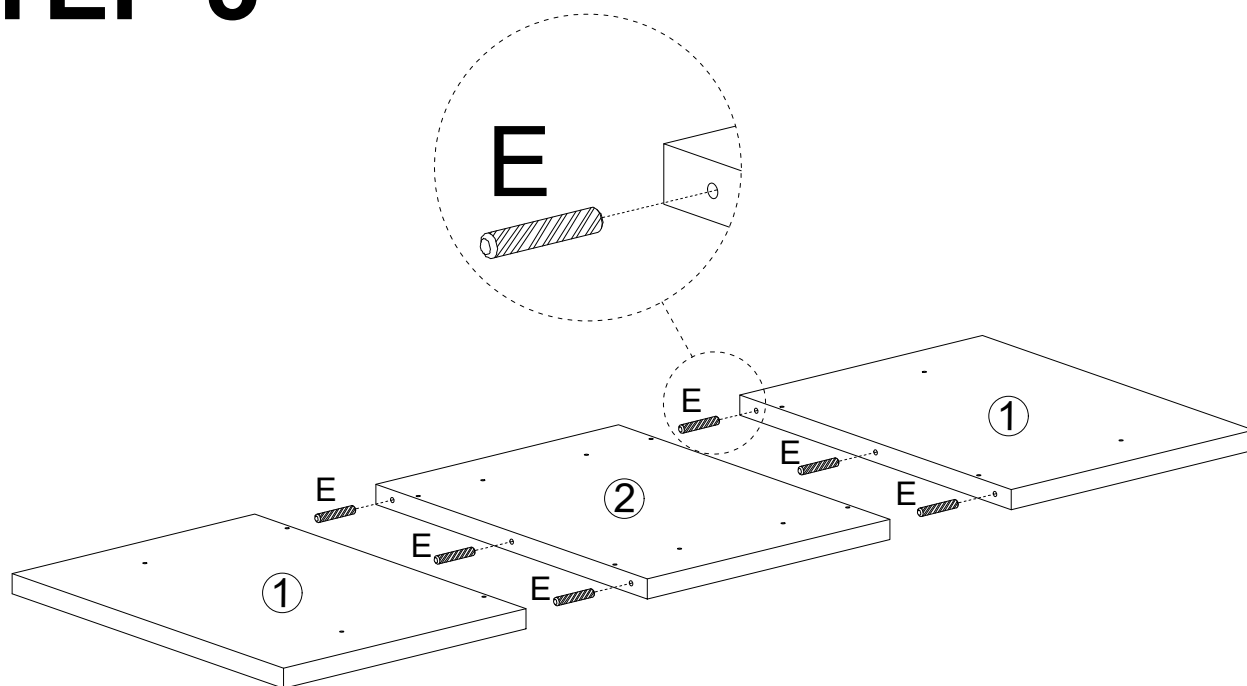


E	X6
	
Ø10X50mm	

STEP 4

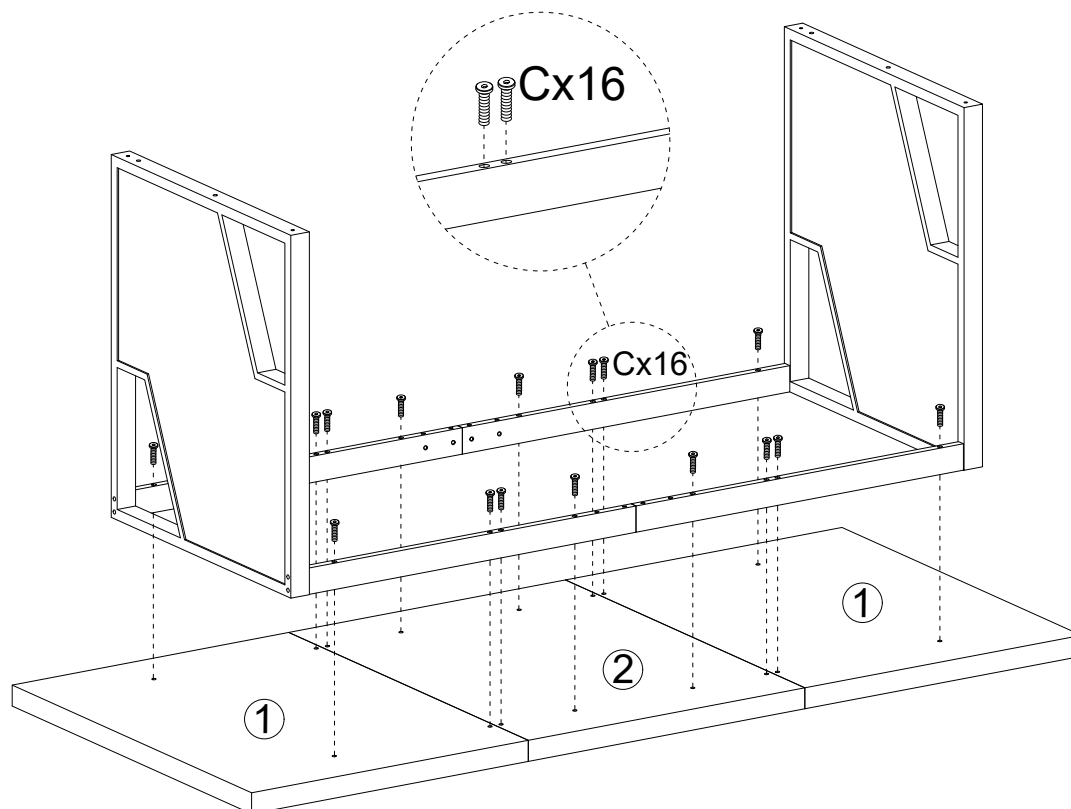

C	X16
	
M6X65mm	

STEP 5

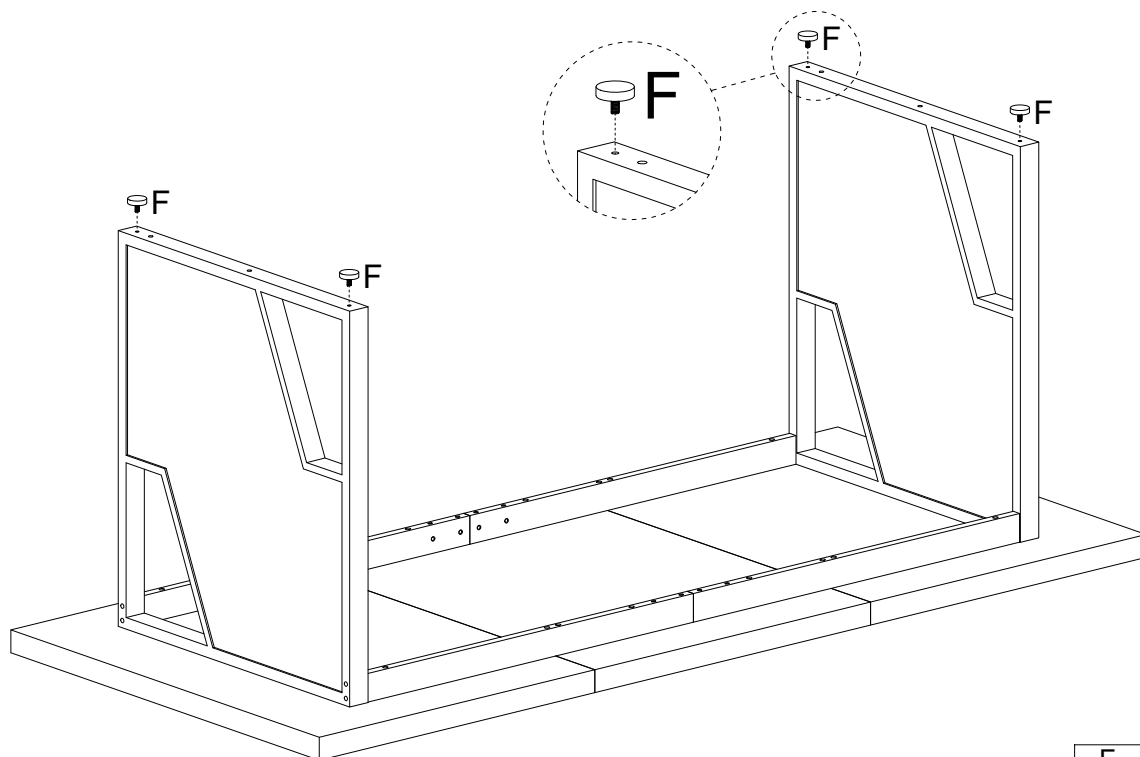

F	X4
	
M6XØ30mm	

STEP 6

