


## **48"MANTEL SHELF**

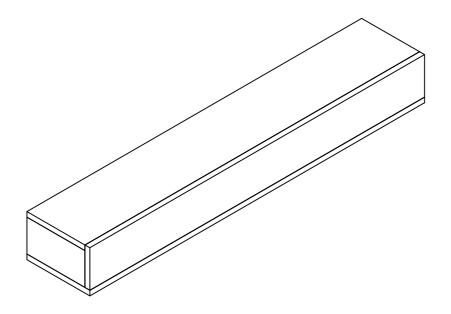


## **INSTRUCTION MANUAL**

**V1.0** 

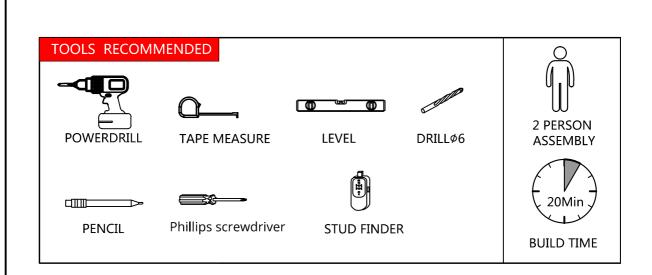


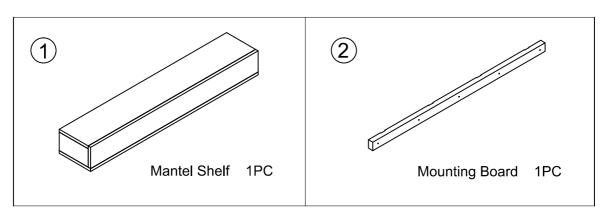

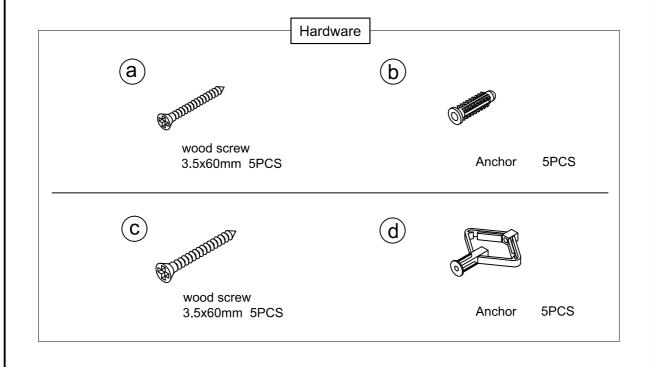

Put the Mounting Board to the Wall Where You Want to Install Mark All Holes with Pen or Pencil

**A** Ensure Bracket is Level

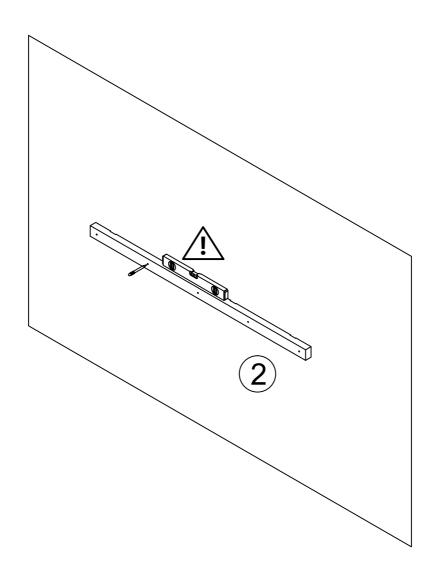


## For Wood Wall:

Use Stud Finder(not included) to Locate Wood Studs. Secure the Mounting Board to the Wall Using (a) Screw Directly

For Dry wall or Cement, Brick Wall, Follow the Step 2 and 3

2 For Cement or Brick Wall: Drill Ø6 Hole at the Pencil Marks For Dry wall: Drill Ø10 Hole

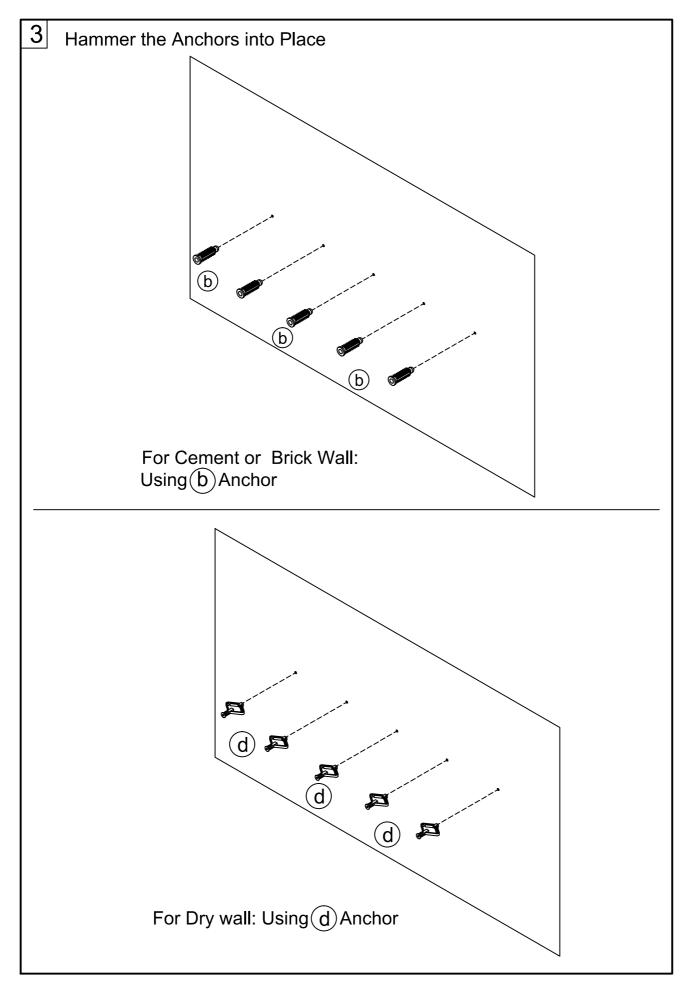

Attach the Mounting Board to the Wall Using (a) Screw to (b) Anchor or  $\bigcirc$  Screw to  $\bigcirc$  Anchor

