





ASSEMBLY INSTRUCTIONS

CORNER SEAT

NO.	PARTS LIST	QTY	DESCRIPTION	NO.	PARTS LIST	QTY	DESCRIPTION
A		1	Seat Frame	G		4	Wooden Leg
B		1	Left Back Rest	H		8	Allen Bolt ØM8*50
C		1	Right Back Rest	I		8	Lock Washer M8
D		1	Seat Cushion	K		8	Flat Washer M8*Ø22*1.5mm
E		1	Left Back Cushion	L		1	Allen Key M5*100*50mm
F		1	Right Back Cushion				


STEP 1: Take out Left Back Rest(B), Right Back Rest(C), Seat Cushion(D), Left Back Cushion(E), Right Back Cushion(F), Wooden Leg(G), Allen Bolt(H), Lock Washer(I), Flat Washer(K), Allen Key(L).

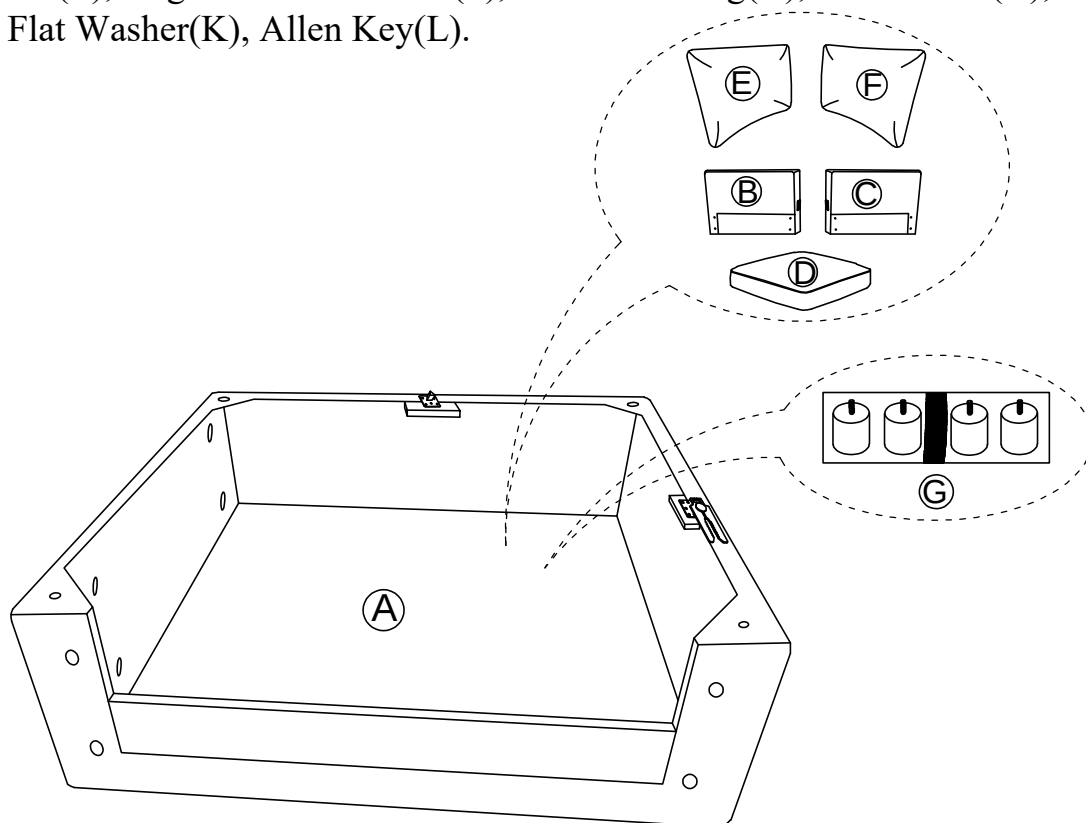


ASSEMBLY INSTRUCTIONS

CORNER SEAT


STEP 2: Align Wooden Leg (G) onto the bottom of the Seat Frame (A), rotate to tighten it.

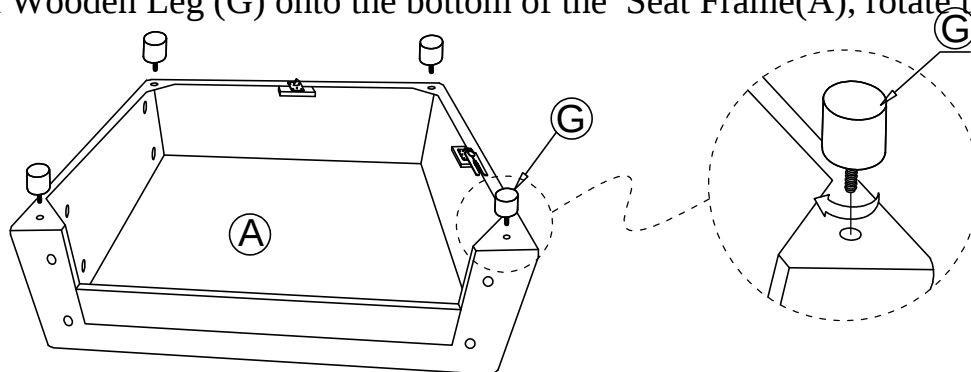

STEP 3: Insert Left Back Rest (B) into Right Back Rest (C).

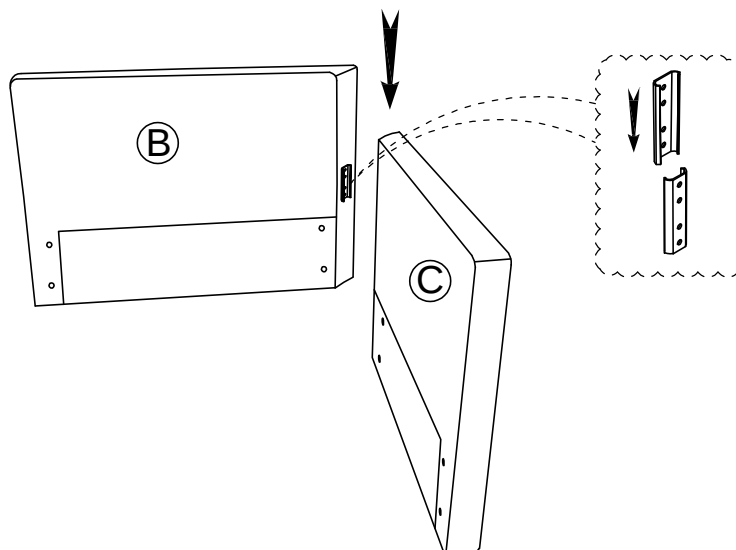


STEP 4: Place seat cushion on the seat frame. Match holes of Left Back Rest (B), Right Back Rest (C) and Seat Frame (A) correctly. Serew Allen Bolt (H) Lock Washer (I). Flat Washer (K) with Allen Key (L).

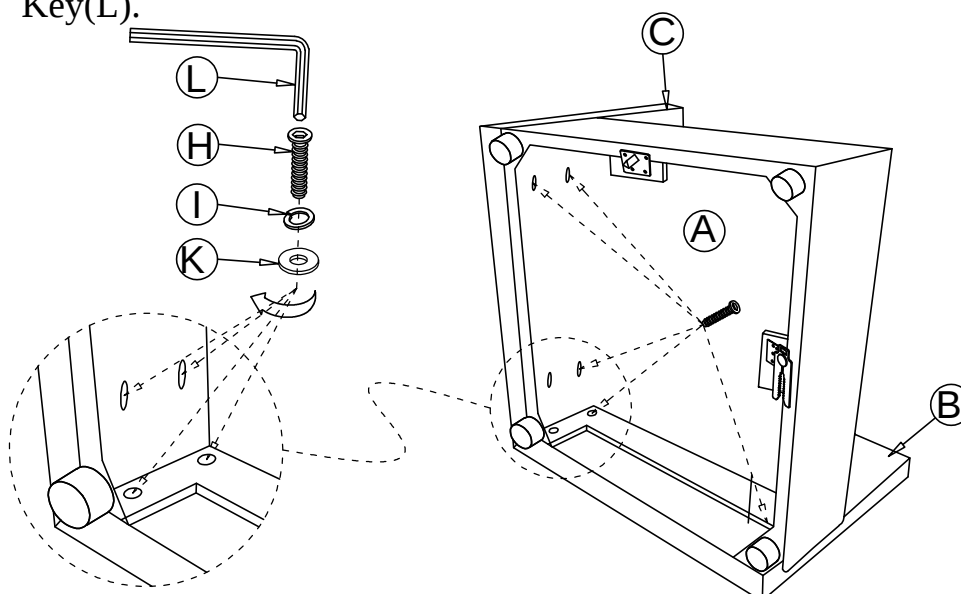


ASSEMBLY INSTRUCTIONS

CORNER SEAT


STEP 5: Put Seat Cushion(D) on the Seat Frame(A).

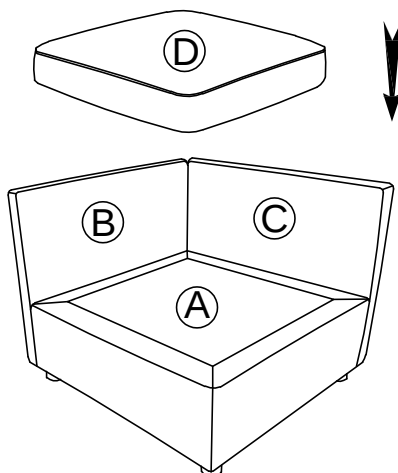

STEP 6: Put Left Back Cushion(E) and Right Back Cushion(F) on Seat Cushion(D).

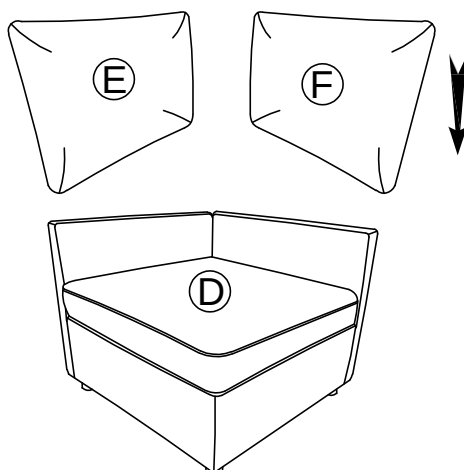

STEP 7: Completed

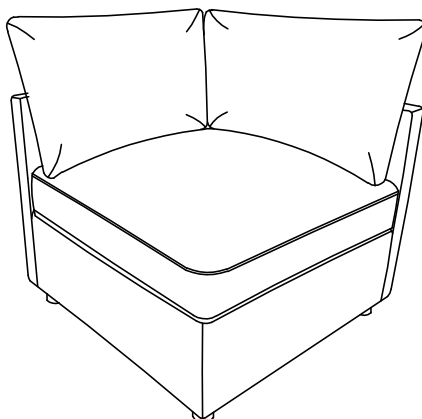


CARE INSTRUCTIONS FOR FABRIC FURNITURE

To maintain the original appearance of your fabric furniture, please follow the simple care procedures below:


- ° Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage fabric.
- ° Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.

ASSEMBLY INSTRUCTIONS

CORNER SEAT

NO.	PARTS LIST	QTY	DESCRIPTION
A		2	CR-Corner Seat
B		2	AC-Armless Chair
C		1	4-Ottoman

STEP 8: Sectional connection by placing (B) into piece (A) Continue sectional connection with piece (C) and (B) the same method.

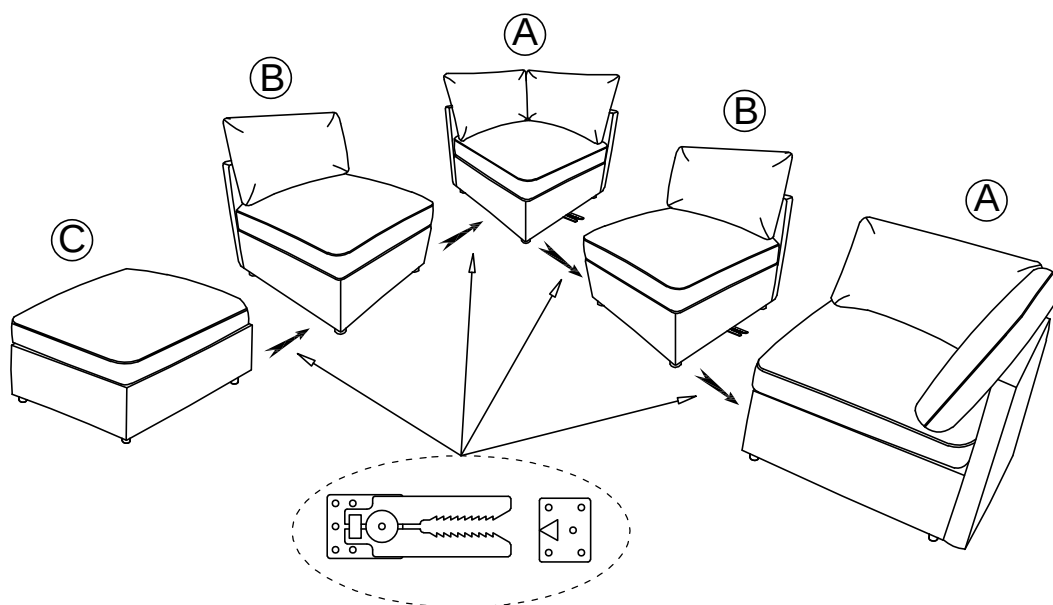

STEP 9: Completed

