



OTTOMAN STORAGE BOX

Assembly instruction- Please keep for future reference

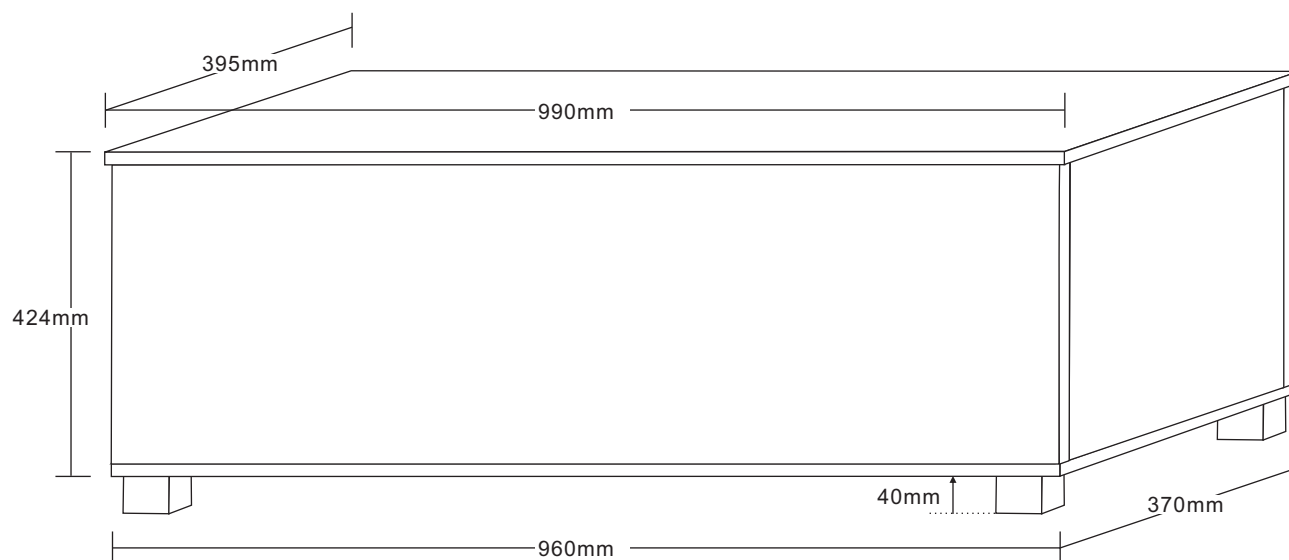

Dimensions	No. People	Assembly Time
Width: 990 cm Depth: 395 cm Height: 465 cm		45 mins (approx)

Important

- PLEASE READ THESE INSTRUCTION FULLY BEFORE STARTING ASSEMBLY.
- PLEASE DO NOT THROW THE PACKAGING AWAY UNTIL YOU ARE SATISFIED WITH PURCHASE, GOODS NEED TO BE RETURNED IN ORIGINAL PACKAGING.

Safety and Care Advice

Important-Please read these instructions fully before starting assembly


- Check you have all the components and tools listed on pages 2,3 and 4.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drill/drivers for inserting screw, as this could damage the unit. only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.



Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Panels

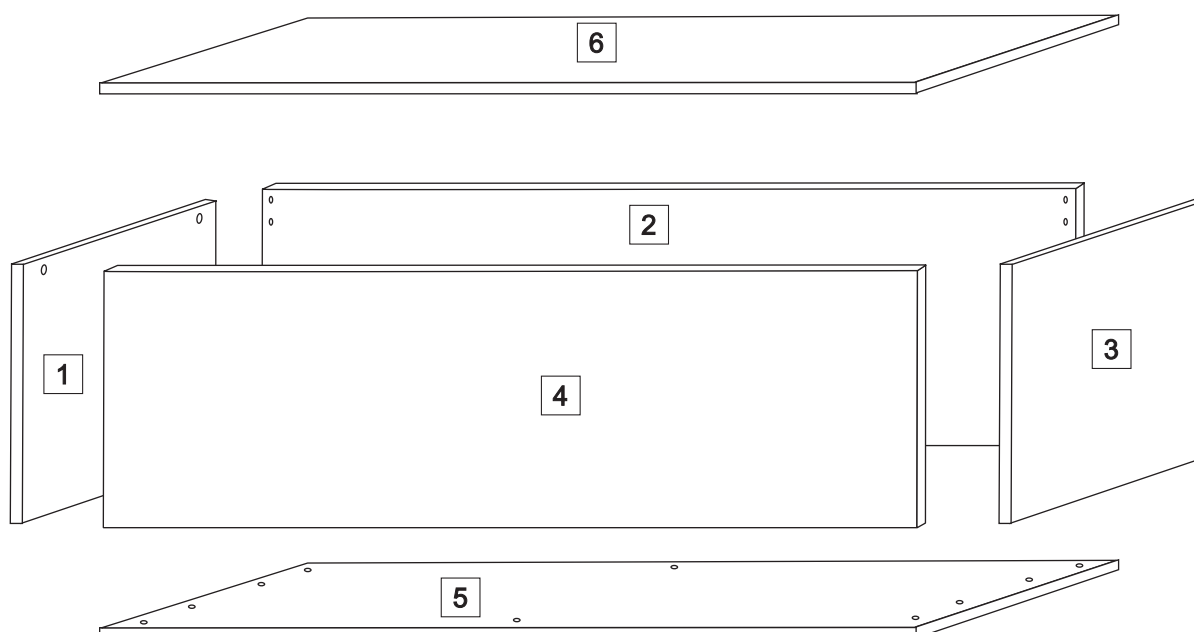

Components - Panels

Please check that you have all the components listed below before constructing your item.









[illegible]

Important-Please read these instructions fully before starting assembly

Components - Fixings

Please check that you have all the components listed below before constructing your item.


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

HARDWARE			
(A)  JCBC M5 X 40mm X 6	(B)  M3.5 X 14mm X 33	(C)  Bolt Nut MiniFit set X 4	(D)  Dowel (M8X25) X 8
(E)  Hinges X 3	(F)  Door Hinge Retainer X 1	(G)  Plastic Leg X 4	(H)  Allen Key X 1

Tools Required (Not Provided)



Ruler - Use this to measure your screws (mm)




Important-Please read these instructions fully before starting assembly


Assembly Instructions

Step 1

1a. Insert Minifit Nut (C) and Dowel (D) to the pre-drilled holes of side panel 1 & 3.

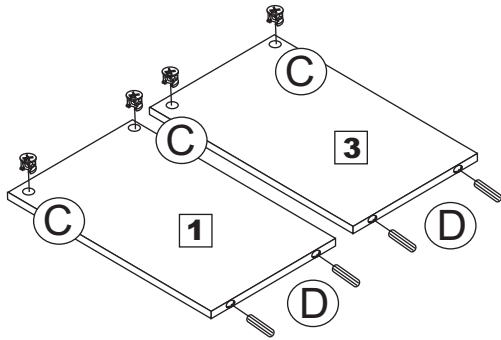


1b. Attach Minifit bolt (C) to front & back panel 2 & 4 using a screw driver.

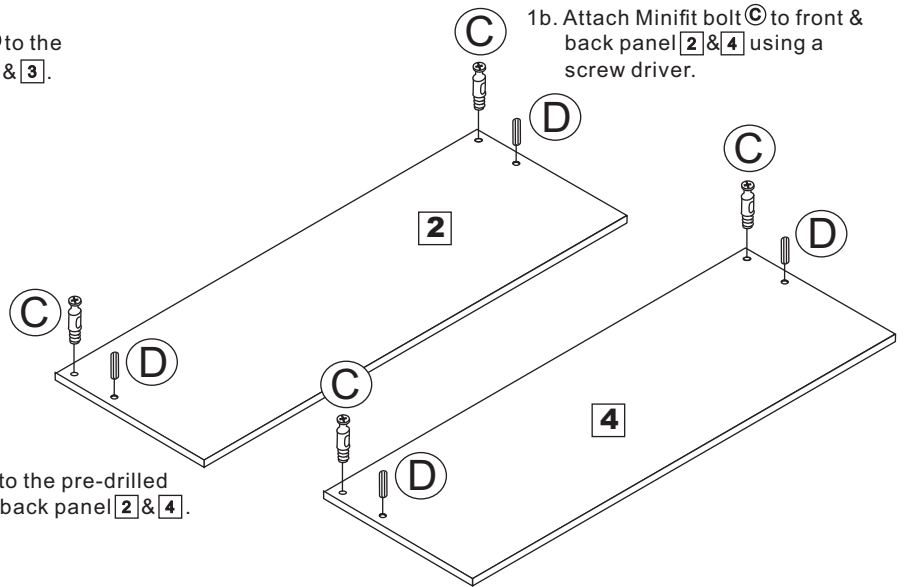

1c. Insert Dowel (D) to the pre-drilled holes of front & back panel 2 & 4.


Step 2

Align and attach Side panel 1 & 3 to Back panel 2 to Dowel and Minifit and tighten with a screw driver or Allen key.

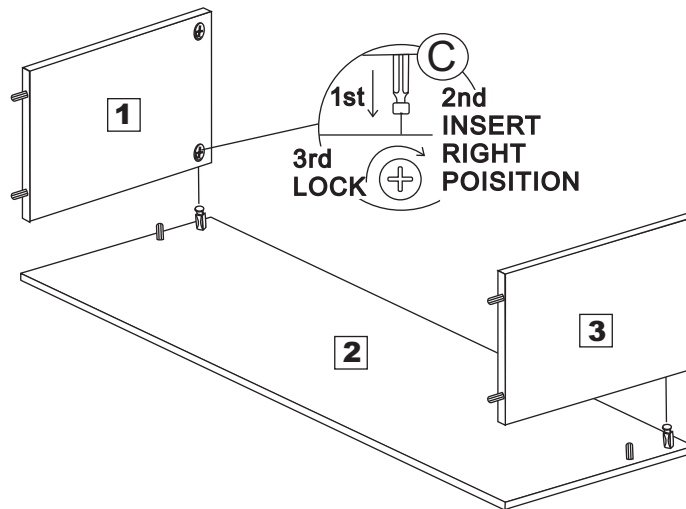


Step 3


Align and attach Front panel 4 to Side panel 1 & 3 to Dowel and Minifit as shown, and tighten with a screw driver or Allen key.

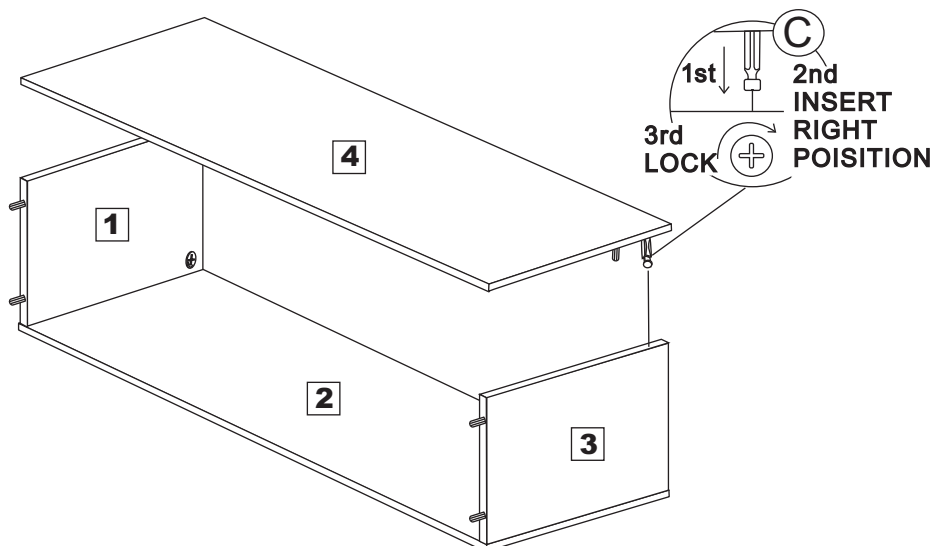




Step 4 Attach Bottom panel **5** to assemble the Ottoman box with Screw **A** using Allen key to tighten.

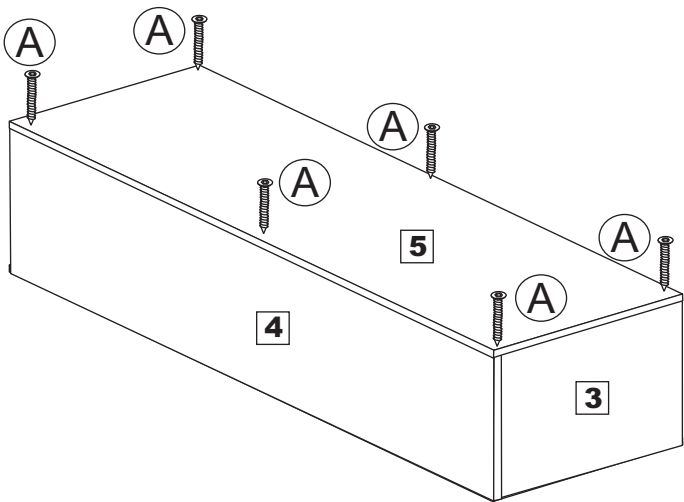

Step 5 Attach Plastic leg **G** to the underside of Bottom panel **5** with Screw **B** as shown using a screw driver.

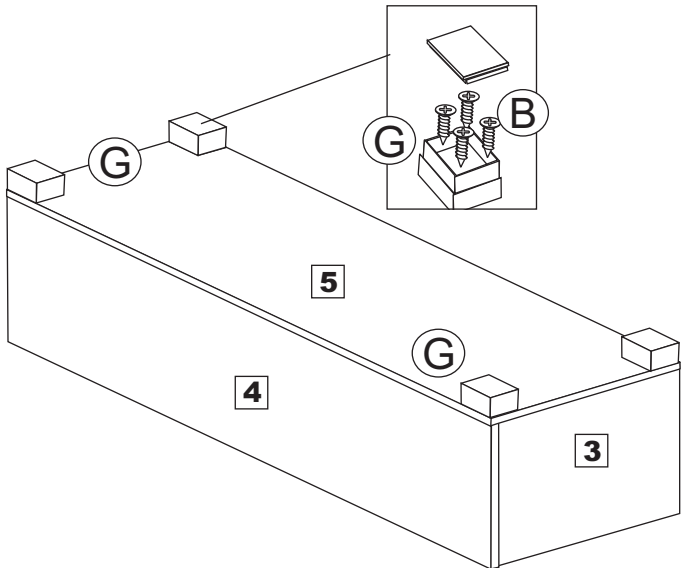

Step 6 6a. Attach Hinge **E** with Screw **B** using a screw driver.

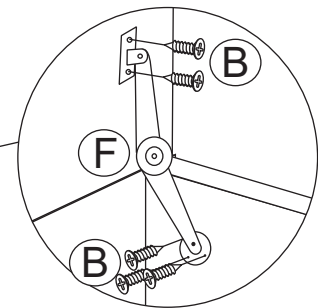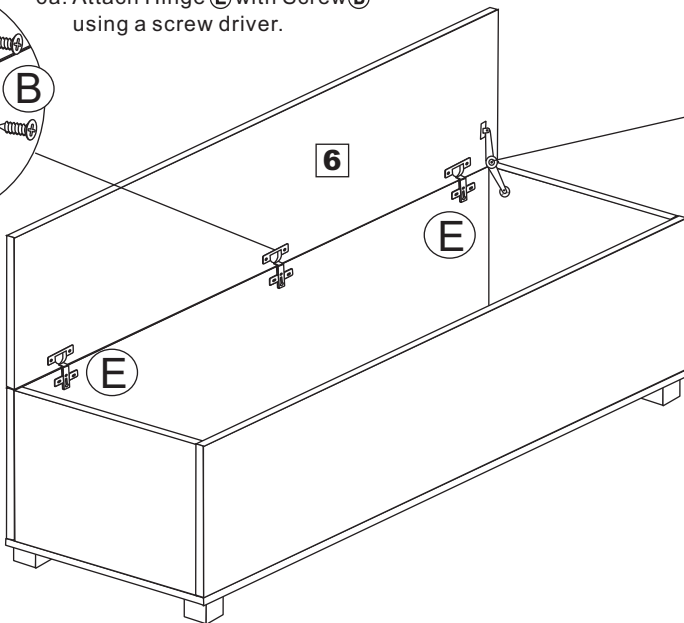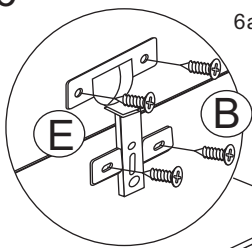

6b. Attach door hinge retainer **F** with Screw **B** using a screw driver.

Assembly Complete

