



ASSEMBLY INSTRUCTIONS









TWIN FLOOR BED WITH FENCE, WITHOUT DOOR

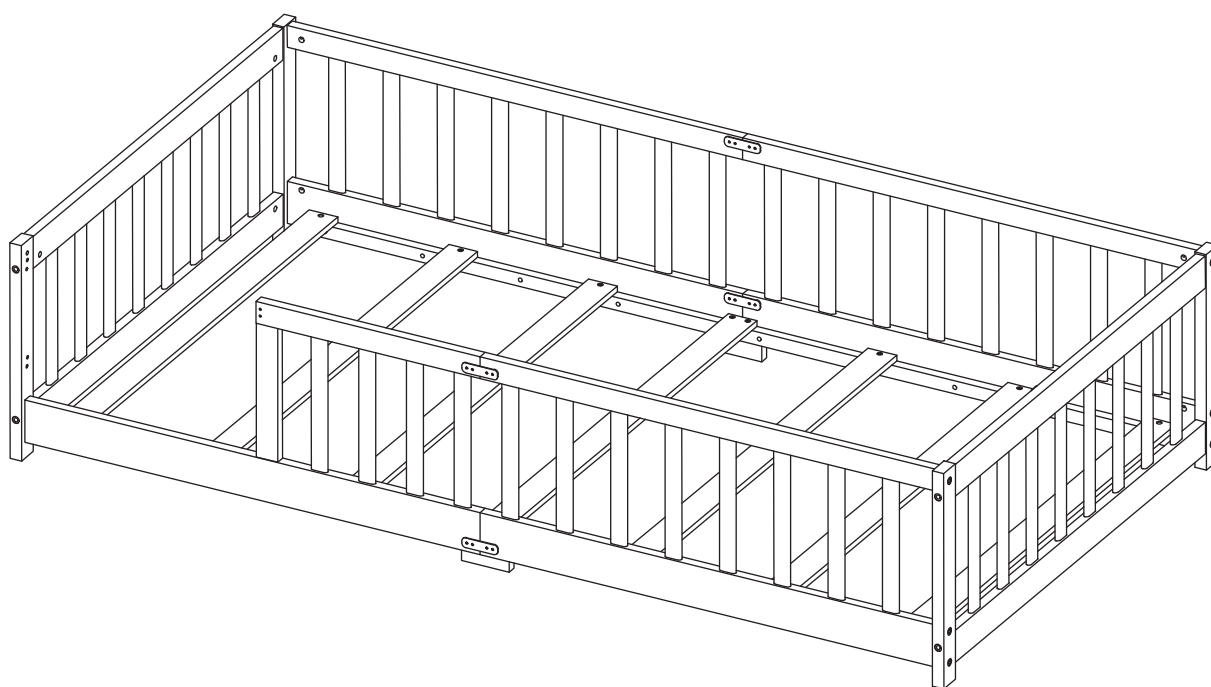






Detail View

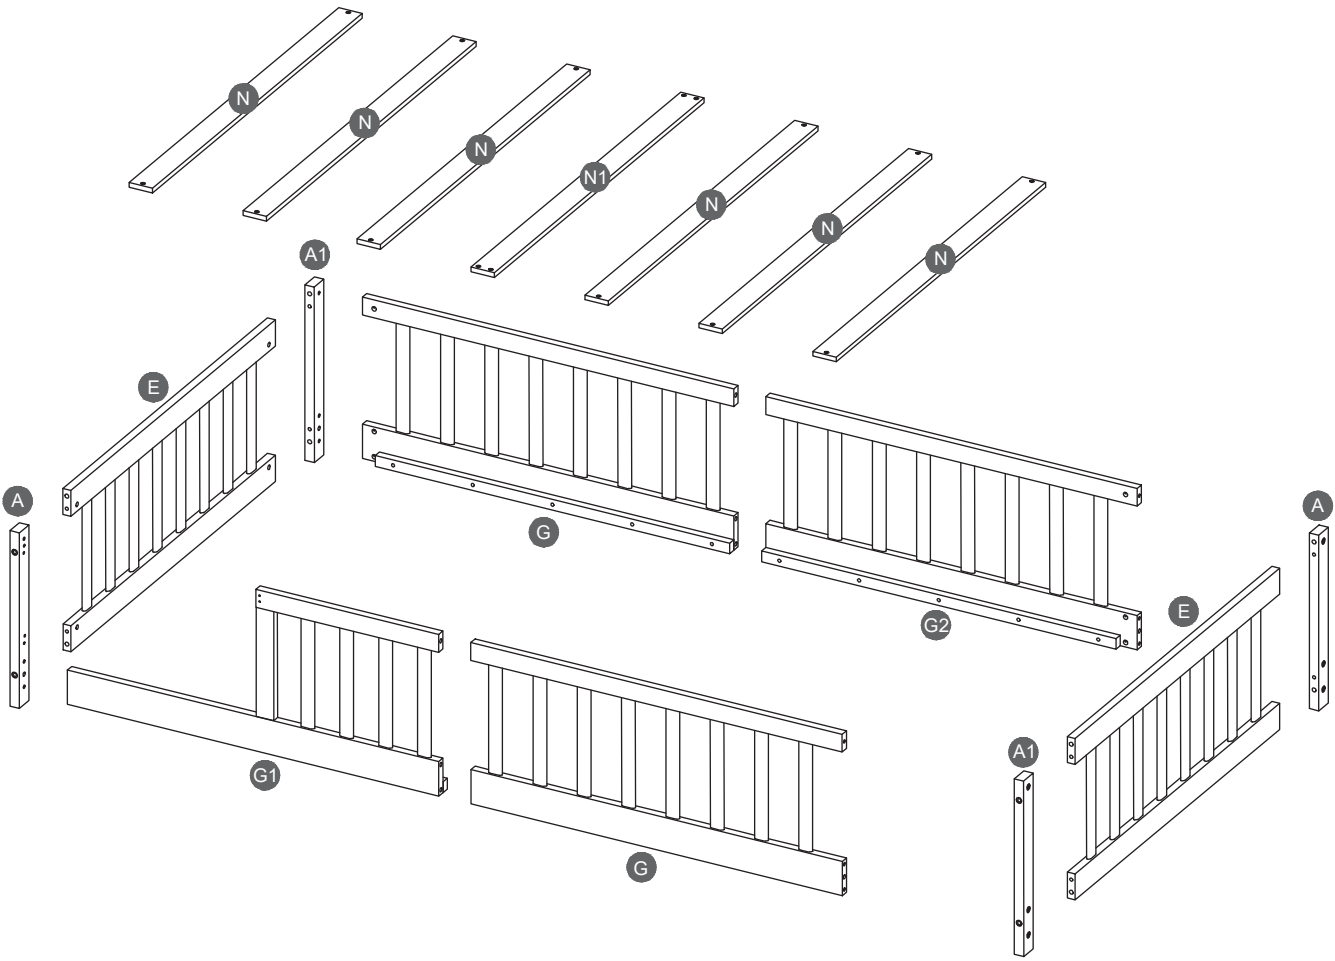


Part List

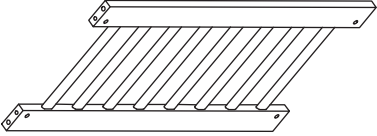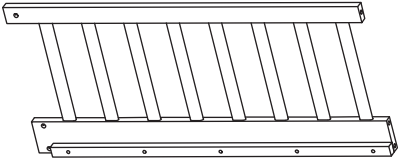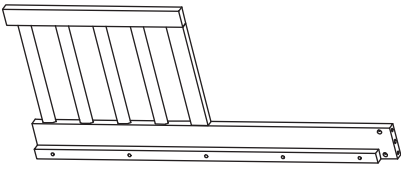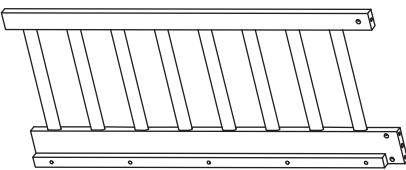A  Leg - 2pcs	A1  Leg - 2pcs
E  Hb. Fb. Panel - 2pcs	G  Side Rail - 2pcs
G1  Side Rail - 1pc	G2  Side Rail - 1pc
N  Bed Slats - 6pcs	N1  Bed Slats (Mid.) - 1pc



Hardware List

1  M6 x 80mm JCBC (8pcs)	2  M6 x 15mm Barrel Nut (19pcs)	3  M10 x 30mm Wood Dowel (Short) (12pcs)
4  Metal Bracket (8pcs)	5  M6 x 65mm JCBC (11pcs)	6  Side Rail Bottom Support (2pcs)
7  M4 x 32mm CSK Screw (4pcs)	8  M3.5 x 16mm CSK Screw (32pcs)	9  Sticker Cap (2pcs)
10  M10 x 40mm Wood Dowel (Long) (6pcs)	11  20 x 20 x 233mm Wood Block (1pc)	12  M4 x 25mm CSK Screw (16pcs)
13  M4 Allen Key (1pc)		


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)





PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

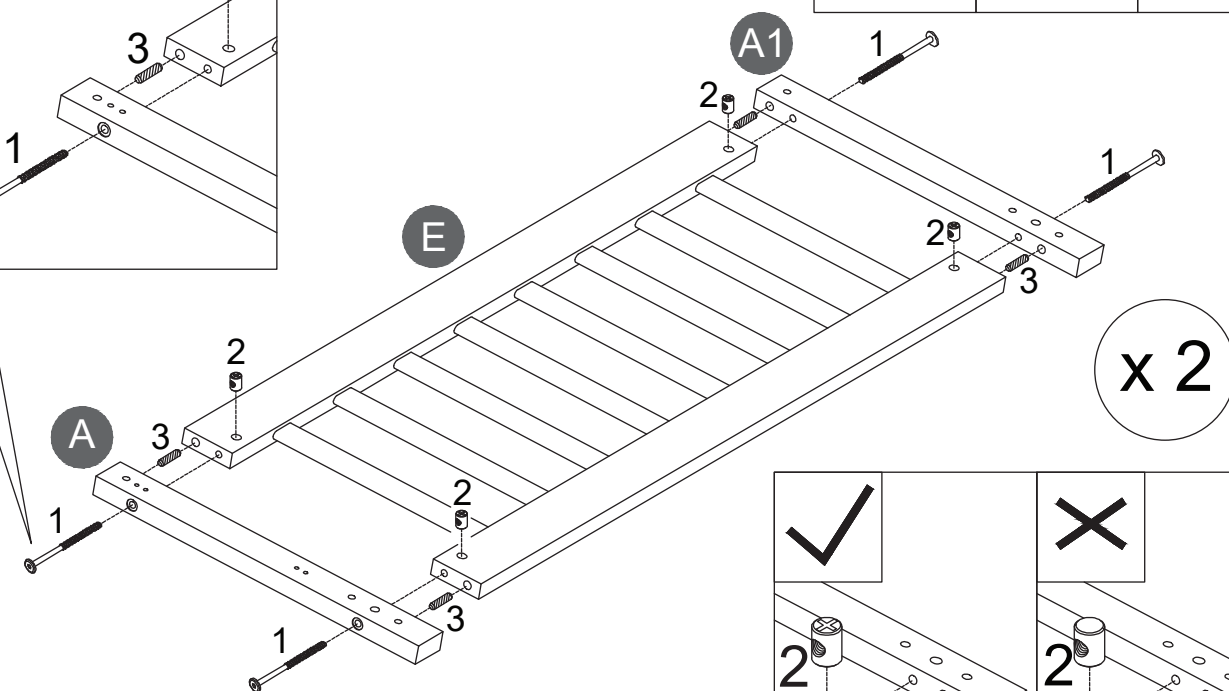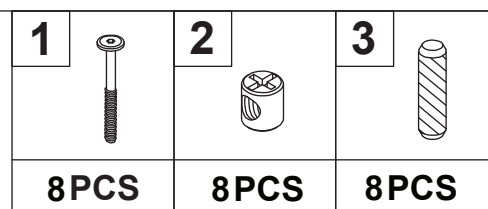


Note: Part 2 will face up with the "+" mark on it, otherwise it cannot be tightened


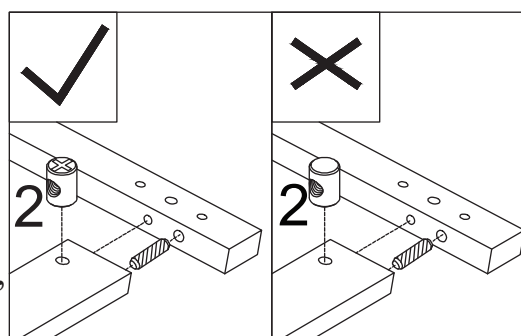


Note:
Use the **Long
Wood Dowel
M10 x 40mm**

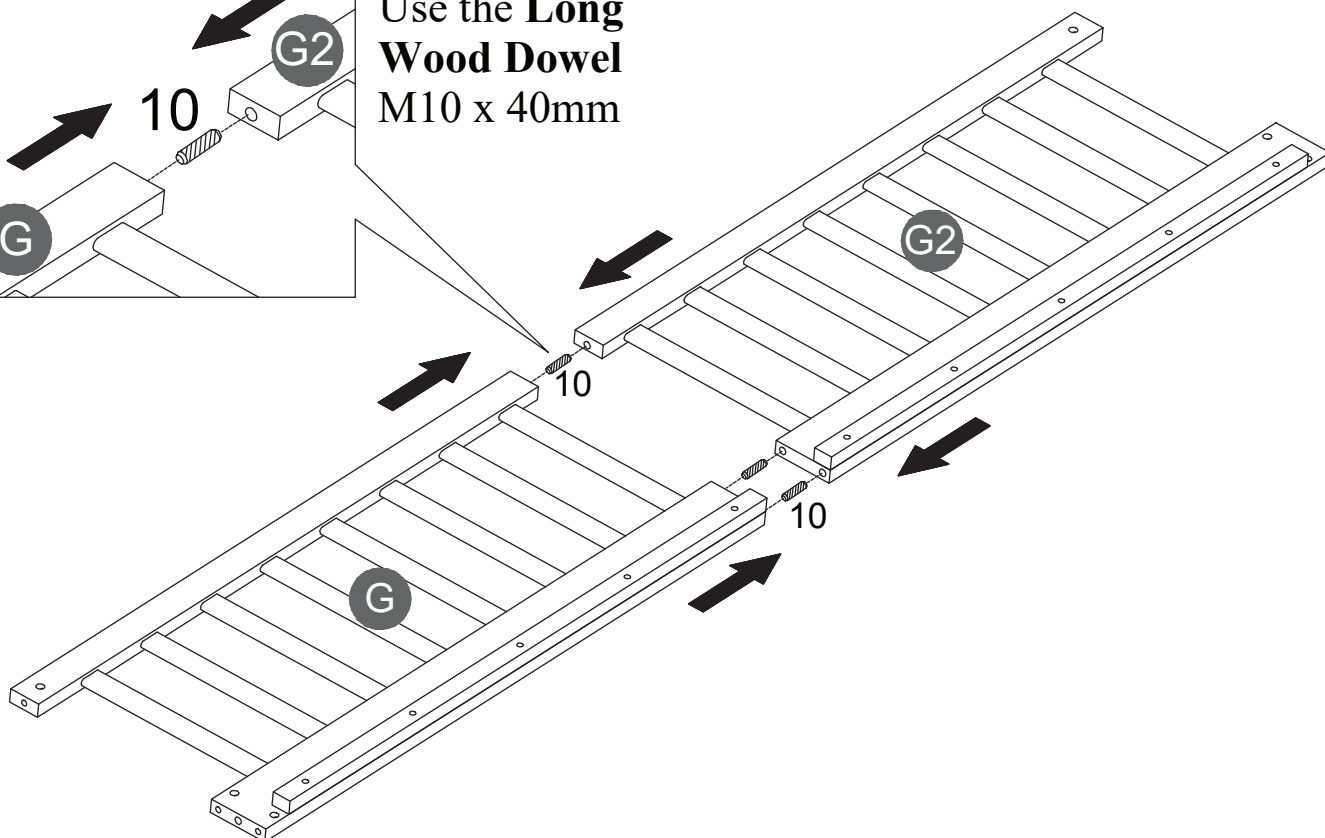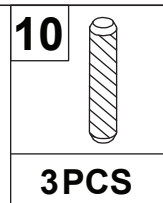




STEP 3:

4	8
	
2PCS	8PCS

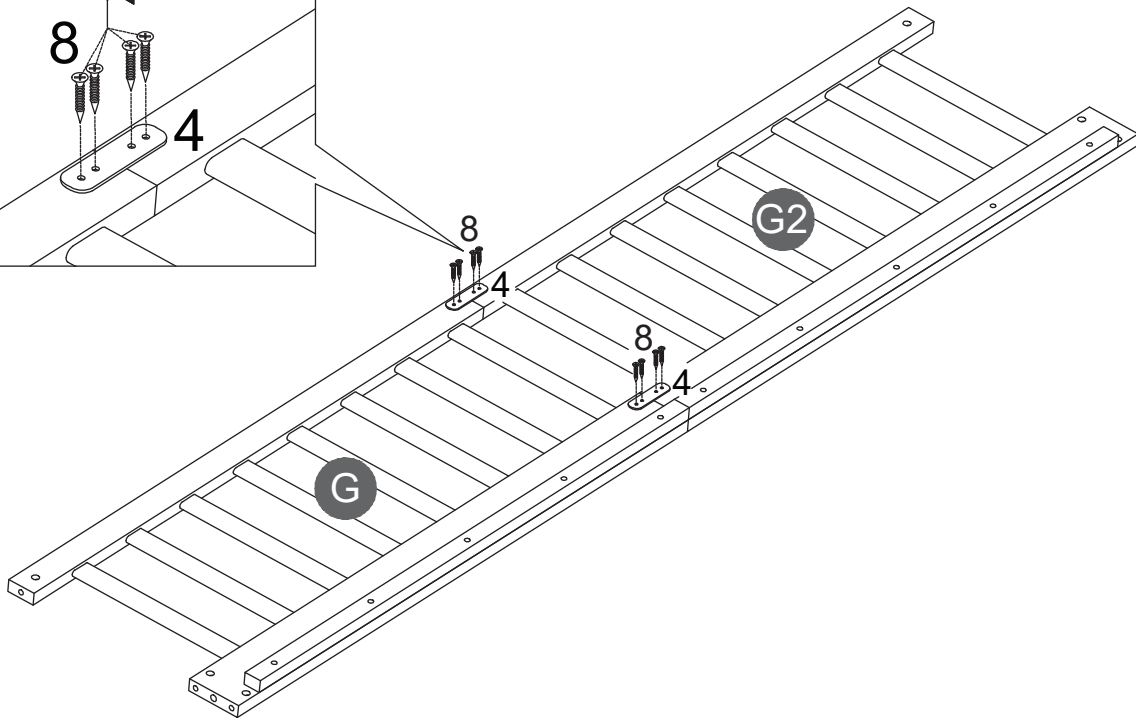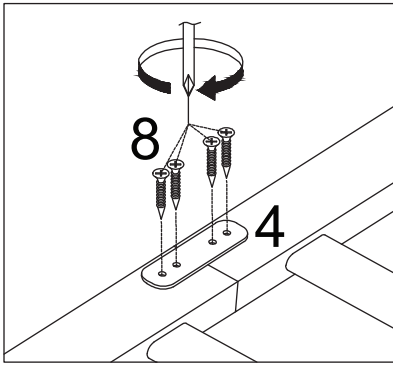

STEP 4:

4	8
	
2PCS	8PCS

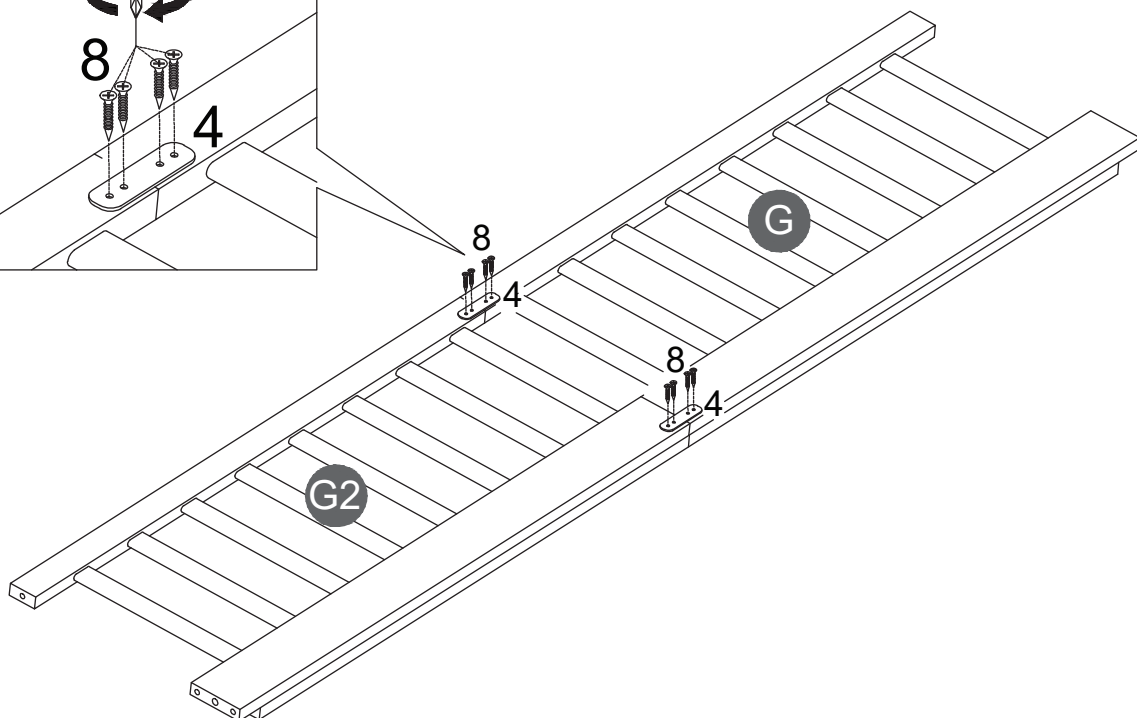
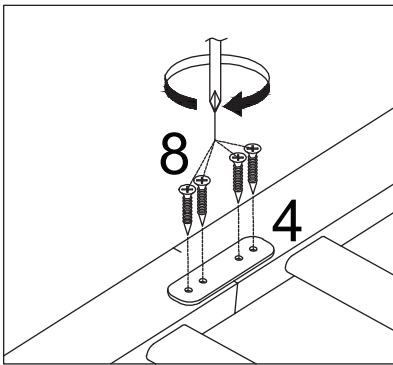


After completing the installation of Step 3, please flip to the other side.


STEP 5:



10	
3PCS	

Note:
Use the **Long Wood Dowel**
M10 x 40mm

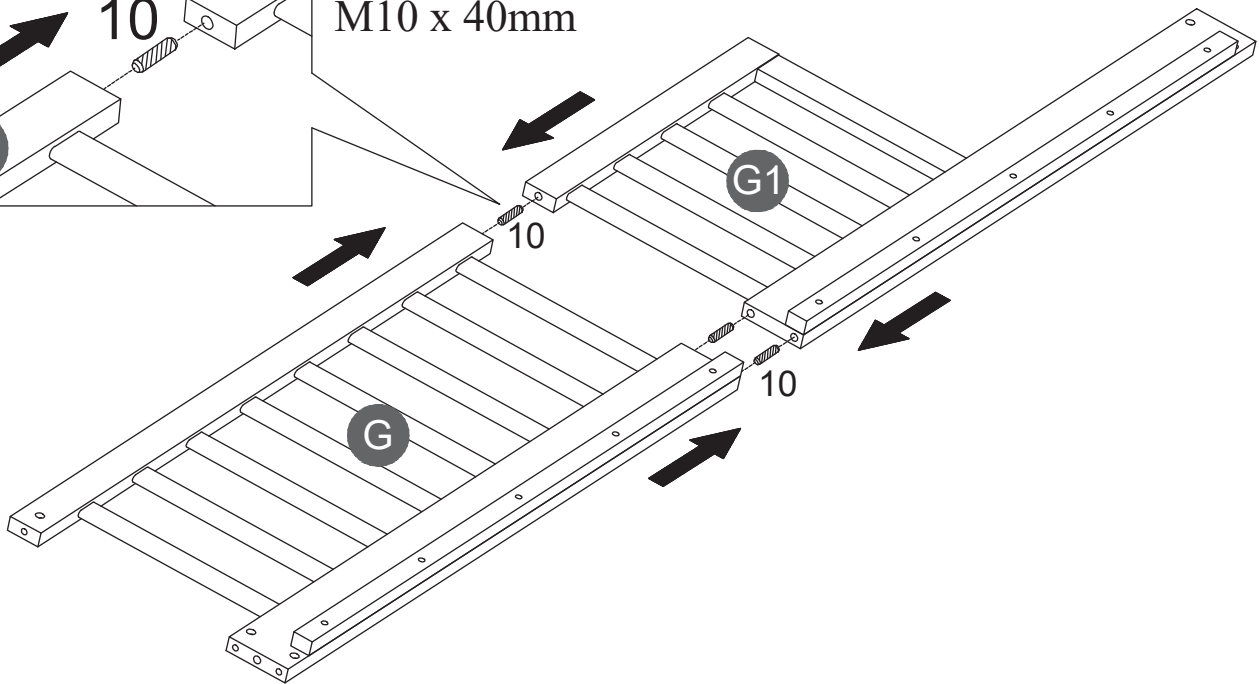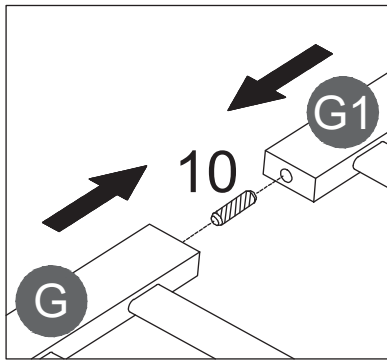



STEP 6:


4	8
	
2PCS	8PCS

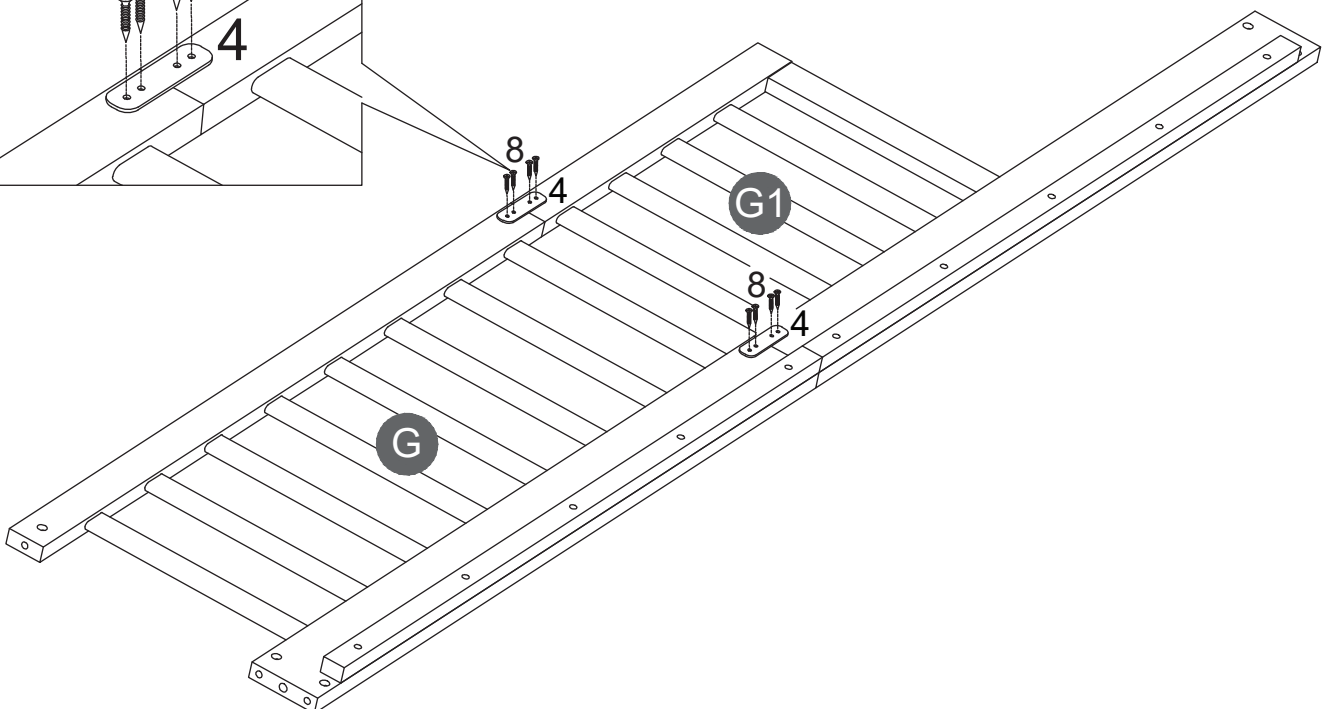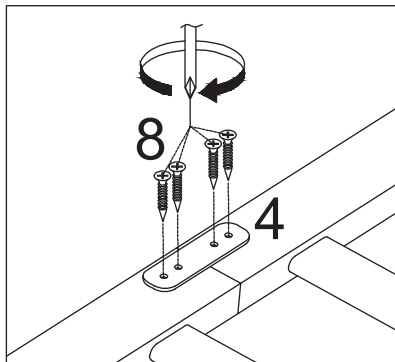

STEP 7:

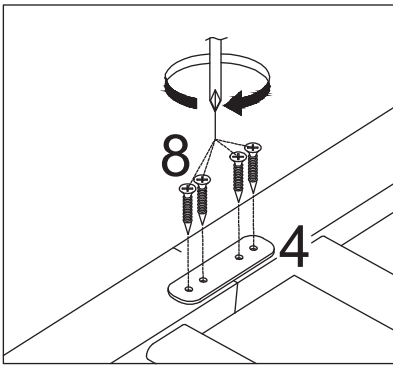




4	8
	
2PCS	8PCS

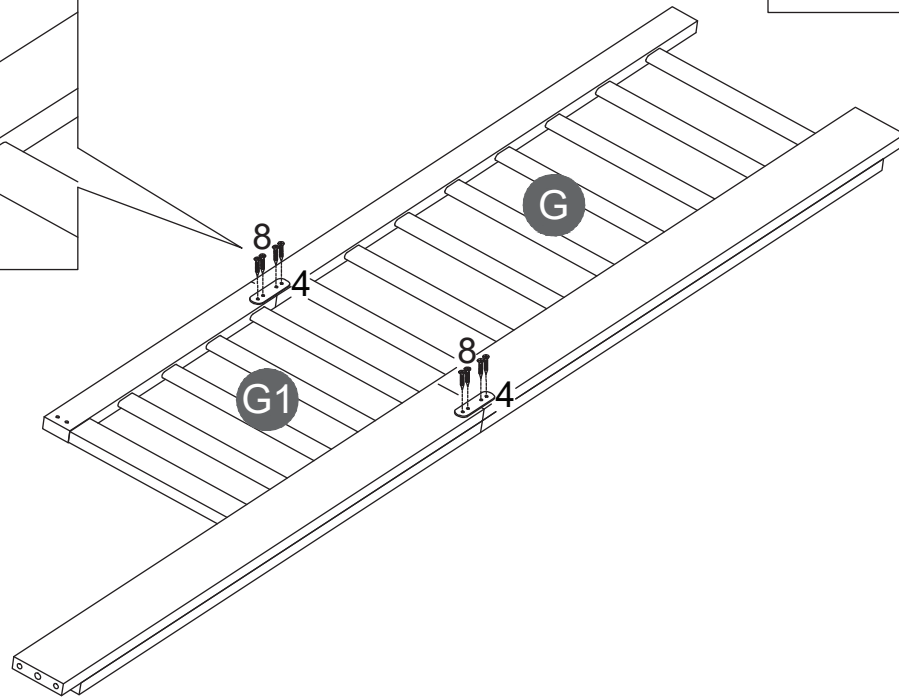


After completing the installation of Step 6, please flip to the other side.

STEP 8:

6	7
	
2PCS	4PCS

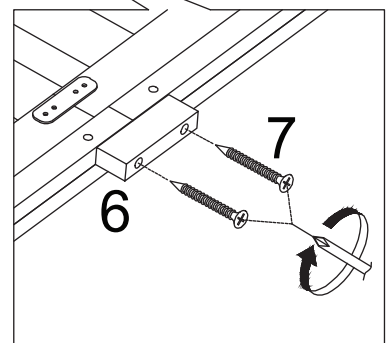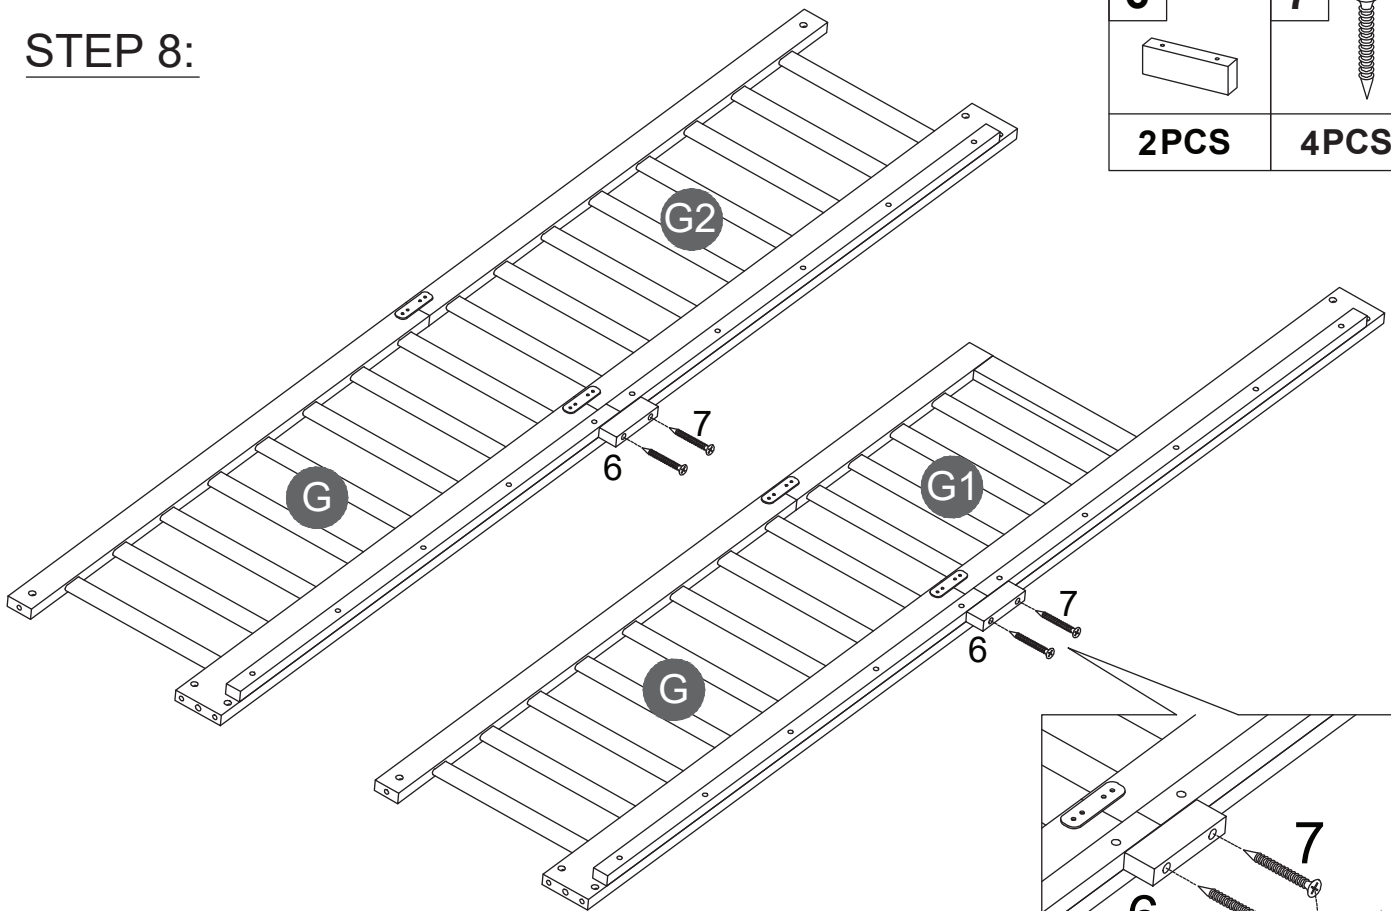

STEP 9:

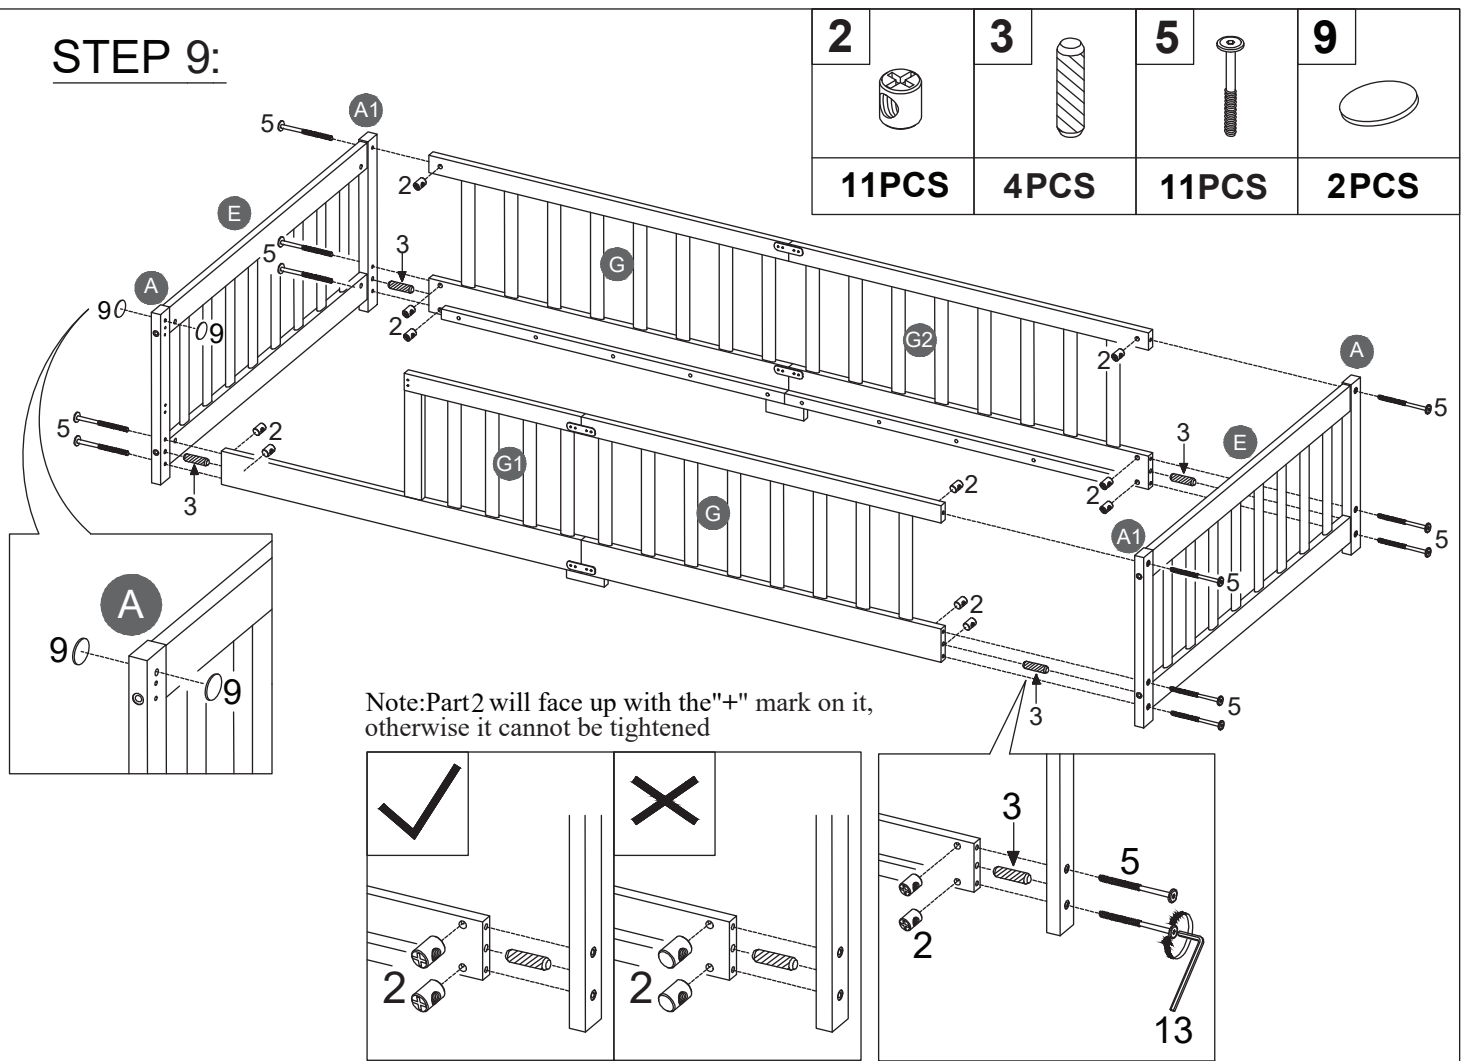

STEP 10:

