


BATHROOM MEDICINE CABINET

INSTALLATION MANUAL

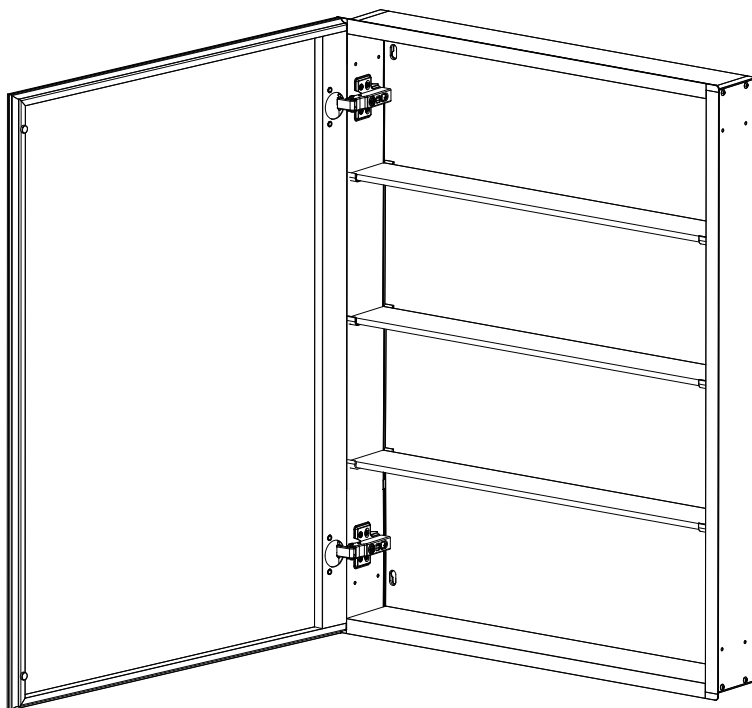



PACKING LIST


Please ensure that you have received all parts and accessories in the correct specifications and quantities as listed below:




Item	Illustration	Qty.	Qty.	Qty.	Qty.	Qty.
------	--------------	------	------	------	------	------



①		x8	x16	x16	x24	x32
---	--	----	-----	-----	-----	-----





②		x8	x16	x16	x24	x32
---	---	----	-----	-----	-----	-----




③		x0	x8	x8	x16	x24
---	---	----	----	----	-----	-----

④		x4	x8	x8	x12	x16
---	---	----	----	----	-----	-----








Please ensure that you have received all parts and accessories in the correct specifications and quantities as listed below:



Item	Illustration	Qty.	Qty.	Qty.	Qty.	Qty.
⑤		×4	×8	×8	×12	×16
⑥		×4	×8	×8	×12	×16
⑦		×0	×4	×4	×8	×12
⑧		×4	×8	×8	×12	×16
⑨		×4	×8	×8	×12	×16
⑩		×1	×1	×1	×1	×1
⑪		×1	×1	×1	×1	×1




Please ensure that you have received all parts and accessories in the correct specifications and quantities as listed below:						
Item	Illustration	Qty.	Qty.	Qty.	Qty.	Qty.
12		x4	x8	x8	x12	x16
13		x1	x1	x1	x1	x1
A1		x1	x2	x2	x3	x4
A2		x1	x2	x2	x3	x4
B		x2	2+2 (Long+Short)	x4	x6	x8
C		x1	1+1 (Long+Short)	x2	x3	x4

Please ensure that you have received all parts and accessories in the correct specifications and quantities as listed below:

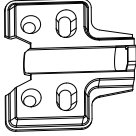
						
Item	Illustration	Qty.	Qty.	Qty.	Qty.	Qty.
D1		×2	×4	×4	×6	×12
D2		×2	×4	×4	×6	×12
G		×2	2×2 (Long+Short)	2×2	3×2	4×2
		×3	2×3 (Long+Short)	2×3	3×3	4×3
H		×1	1+1 (Long+Short)	×2	×3	×4
		×2	×4	×4	×6	×8
		×2	×4	×4	×6	×8

Note: For medicine cabinets taller than 32 inches, an additional piece of **D1** **D2** **G** will be provided for assembly.

INSTALLATION TOOLS


 Electric Drill	 Hammer	 Tape Measure
 Level	 Marker	 Safety Goggles

EXPLODED DIAGRAM

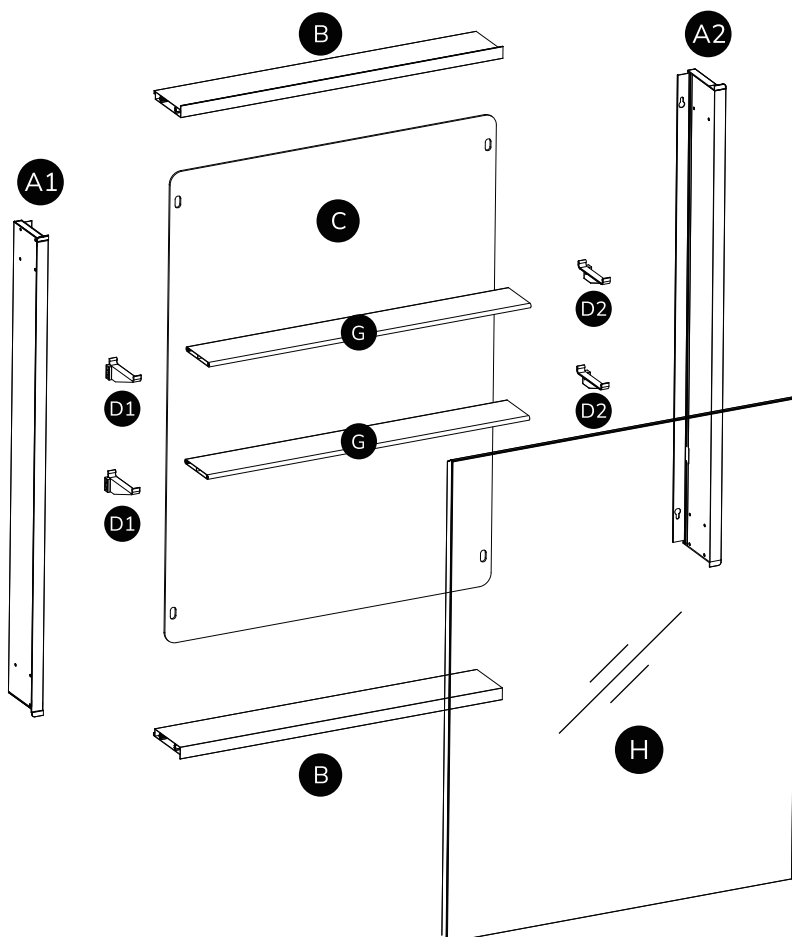


Assembly Instructions

1 Installation preparation

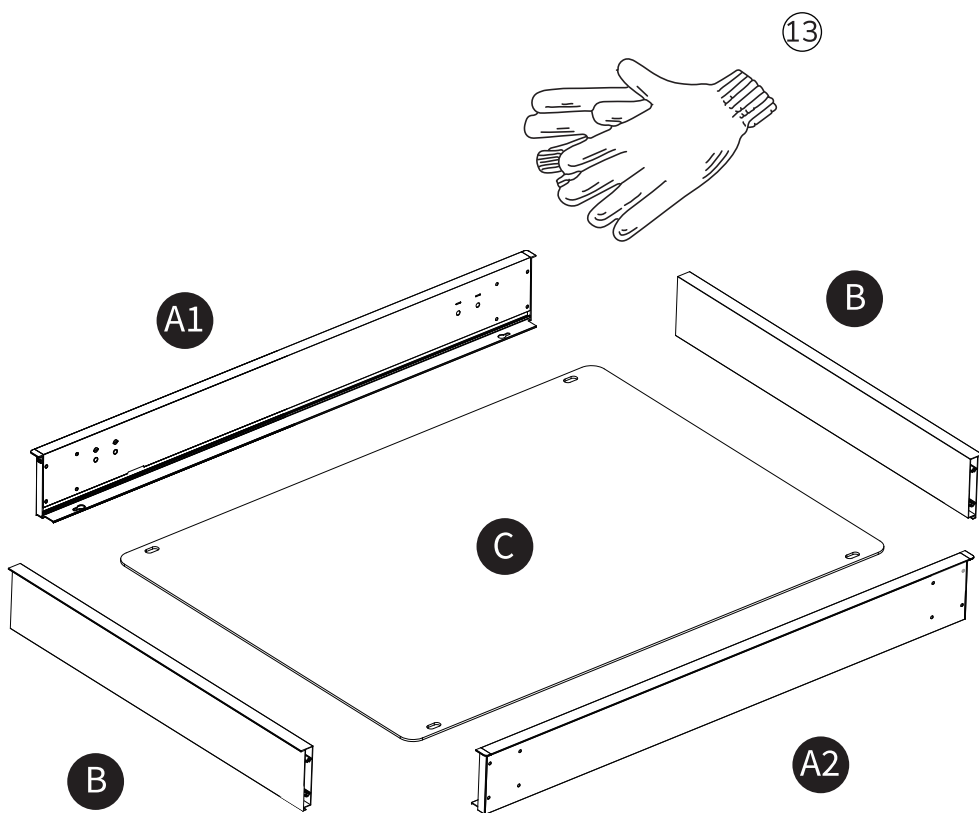


2

Install hinge base

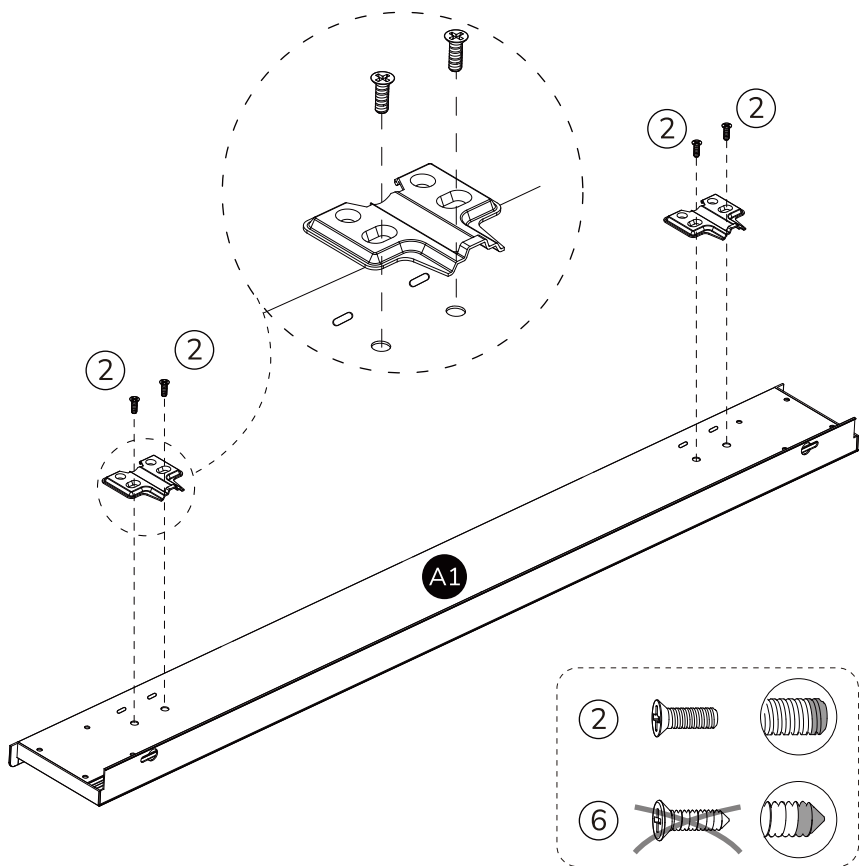


3 Install the top and bottom plate

Step 1

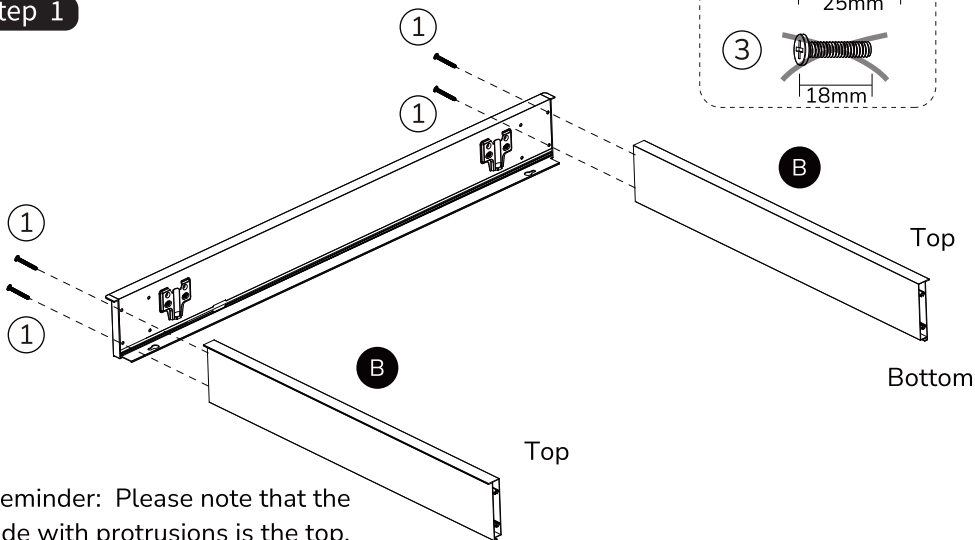


Reminder: Please note that the side with protrusions is the top, and the side with bends is the bottom and ensure that parts A1 and B are seamlessly joined and aligned top.

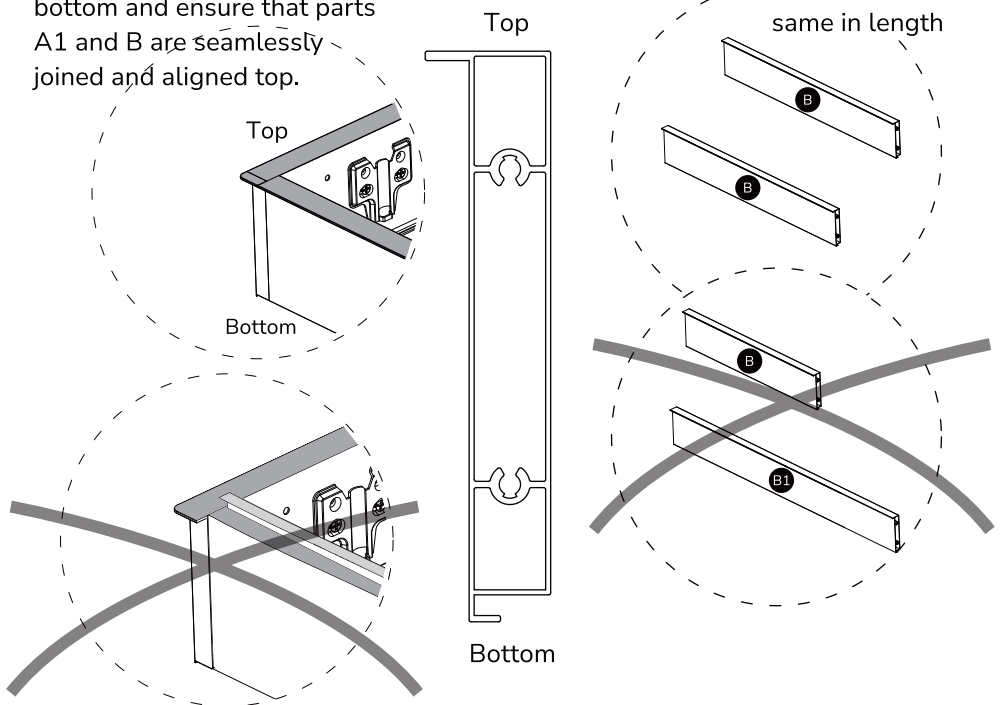


Step 2


Reminder: Please note the backplane color: the front side is white, and the back side is gray.

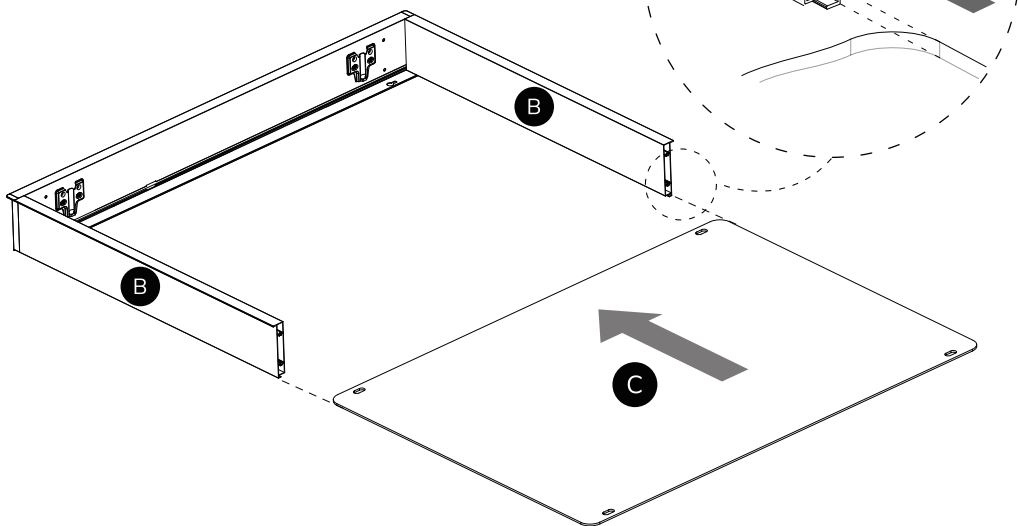

Step 3

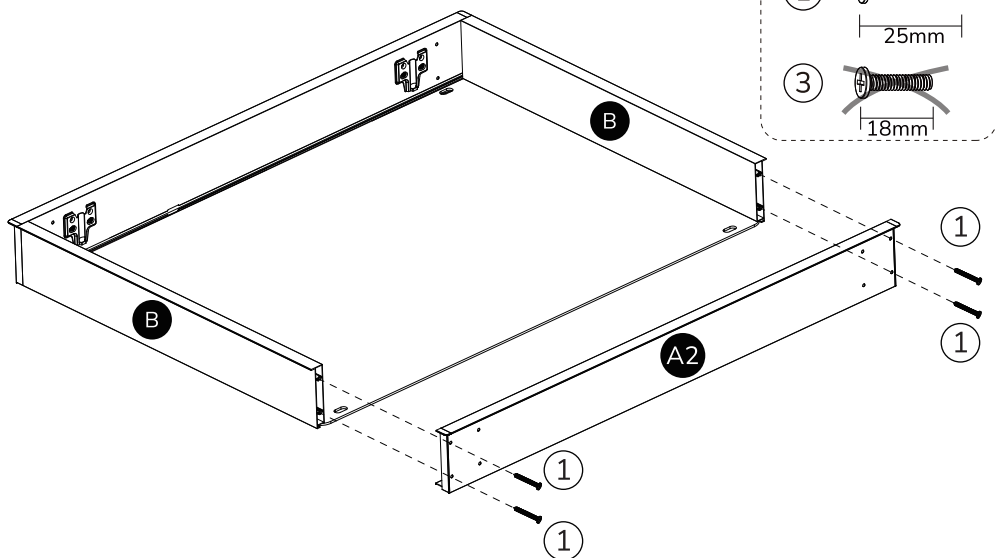

4 Install cabinet door hinges

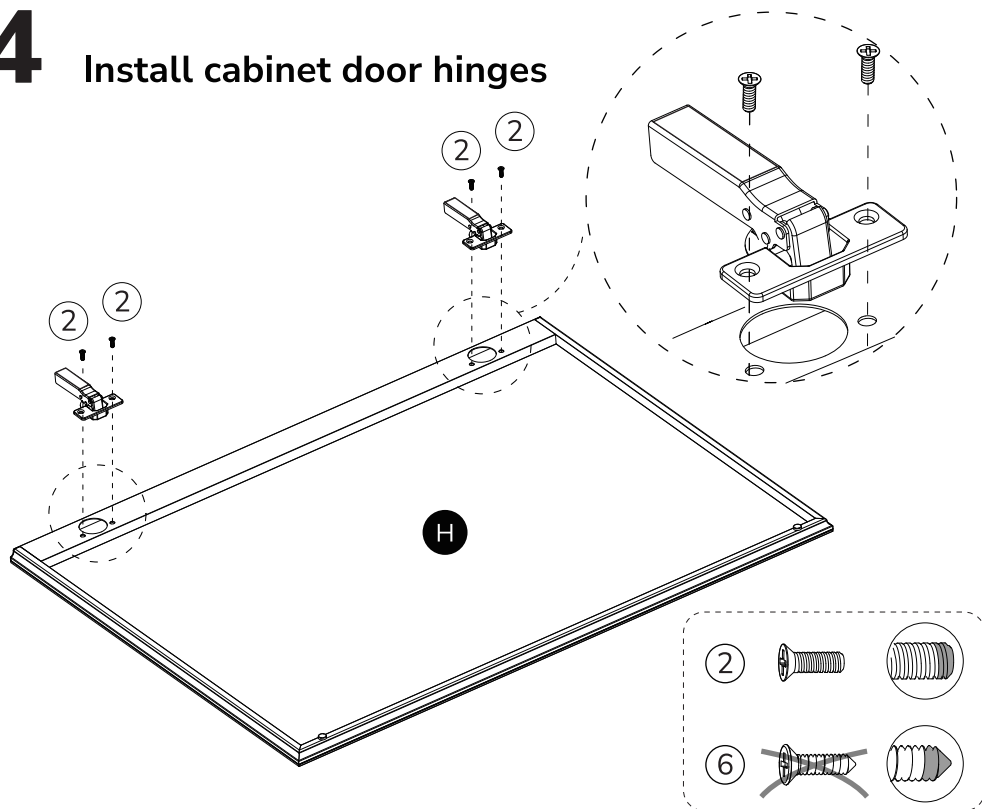

ATTENTION

Now that the cabinet and door are assembled, please proceed to the next step based on the model you purchased:

Single-door:


Proceed to step 6.

Double-door / Triple-door:

Repeat the previous steps to assemble all cabinet units and doors, then proceed to step 5.




5 Connection of multi-door cabinets

Double-door




Taking this as an example

Step 1

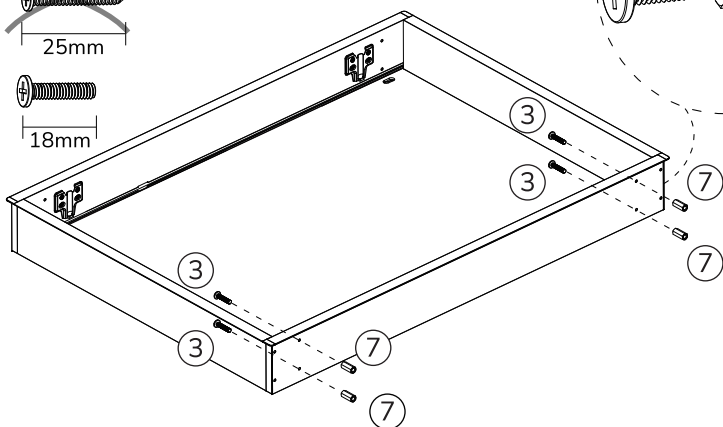


Step 2

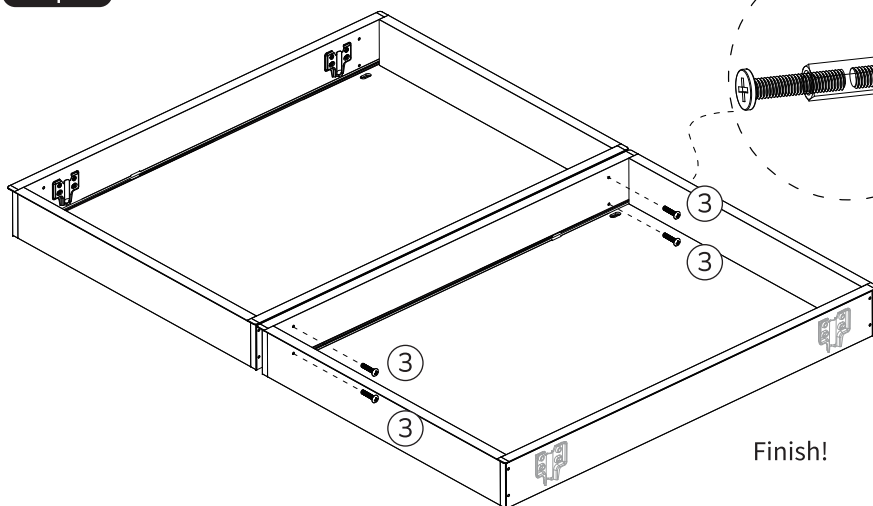




Finish!

Triple-door




Taking this as an example


Step 1

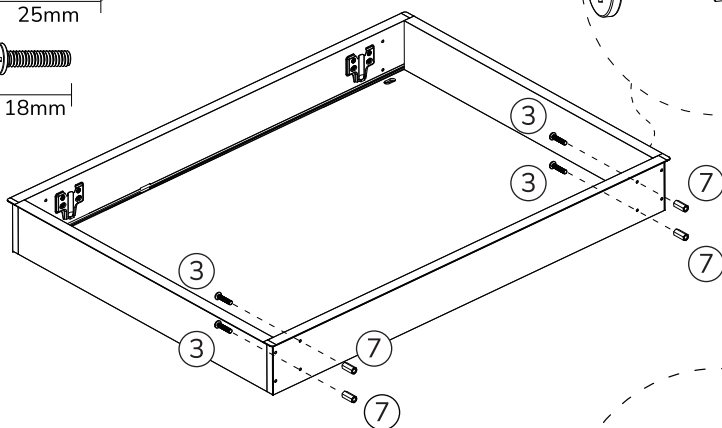


Step 2

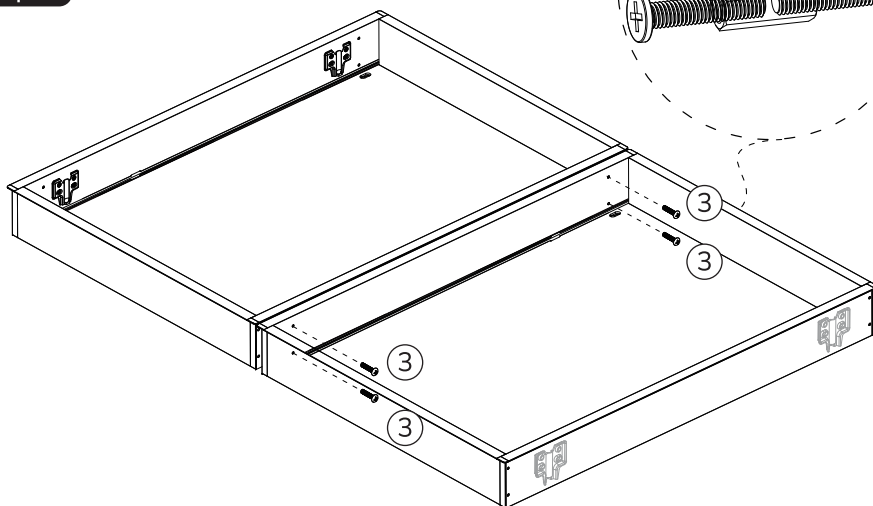



Step 3

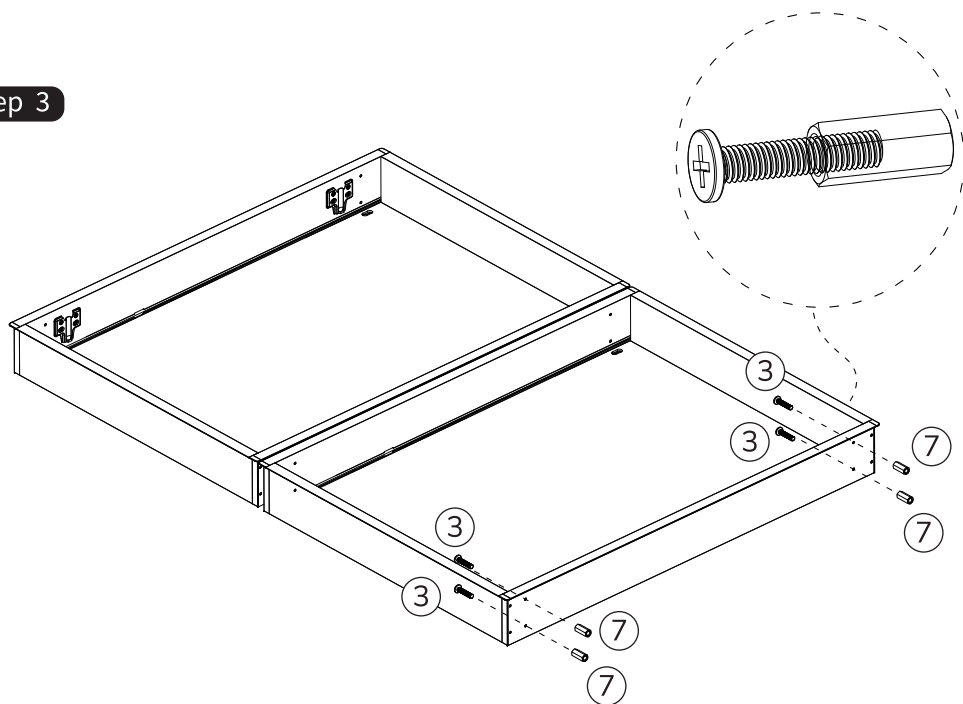

Step 4



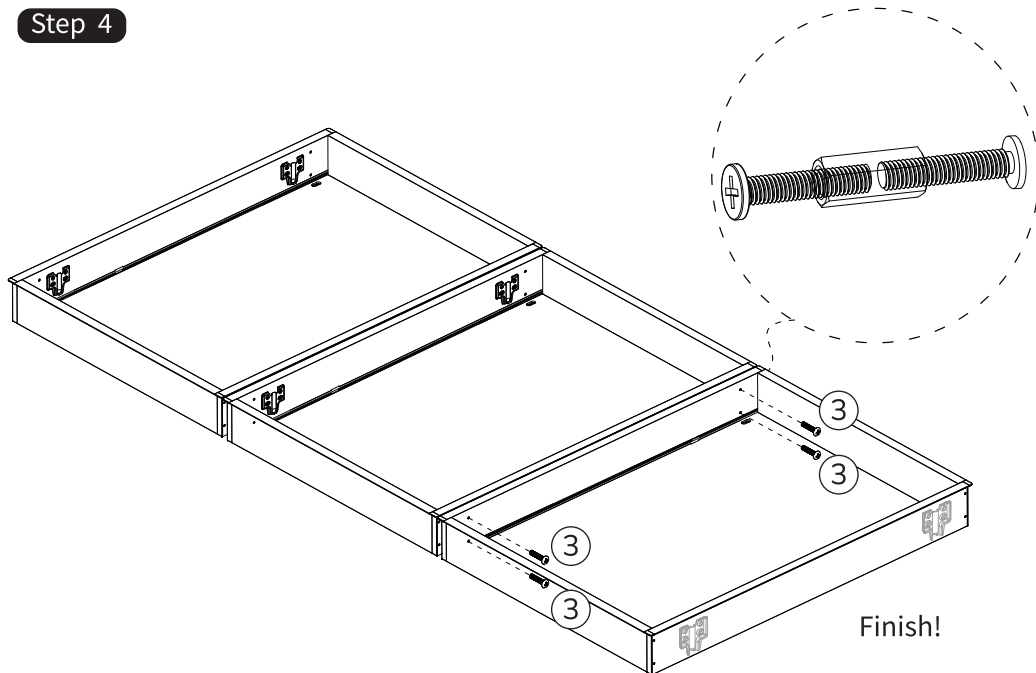


Four-door




Taking this as an example


Step 1

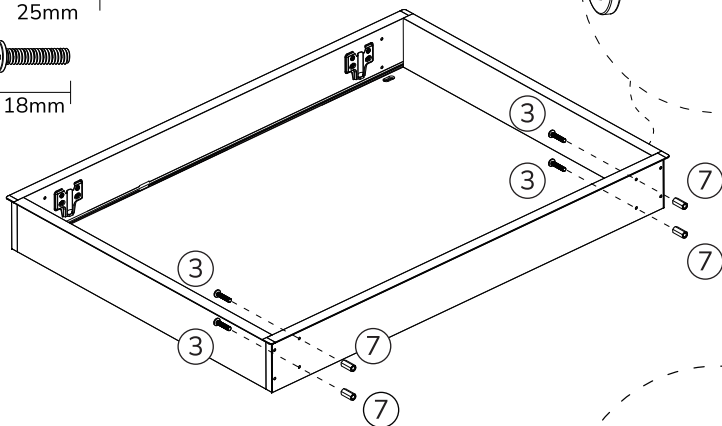


Step 2

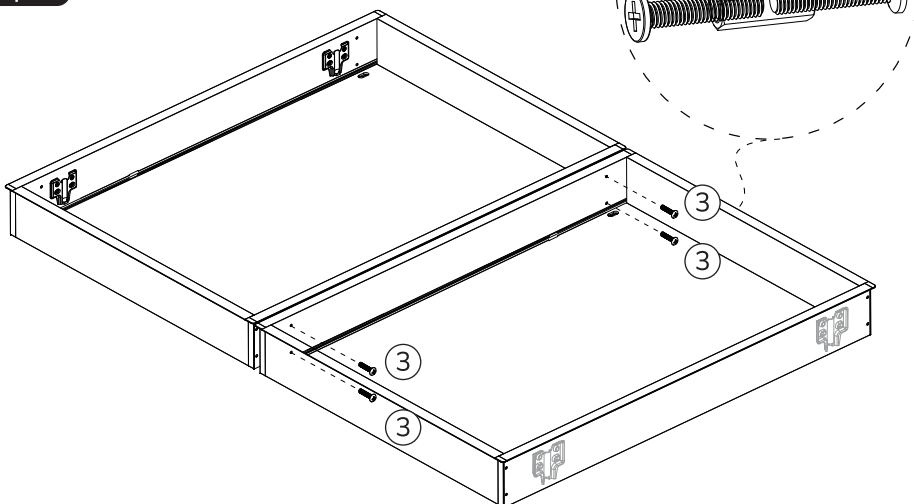


Step 3

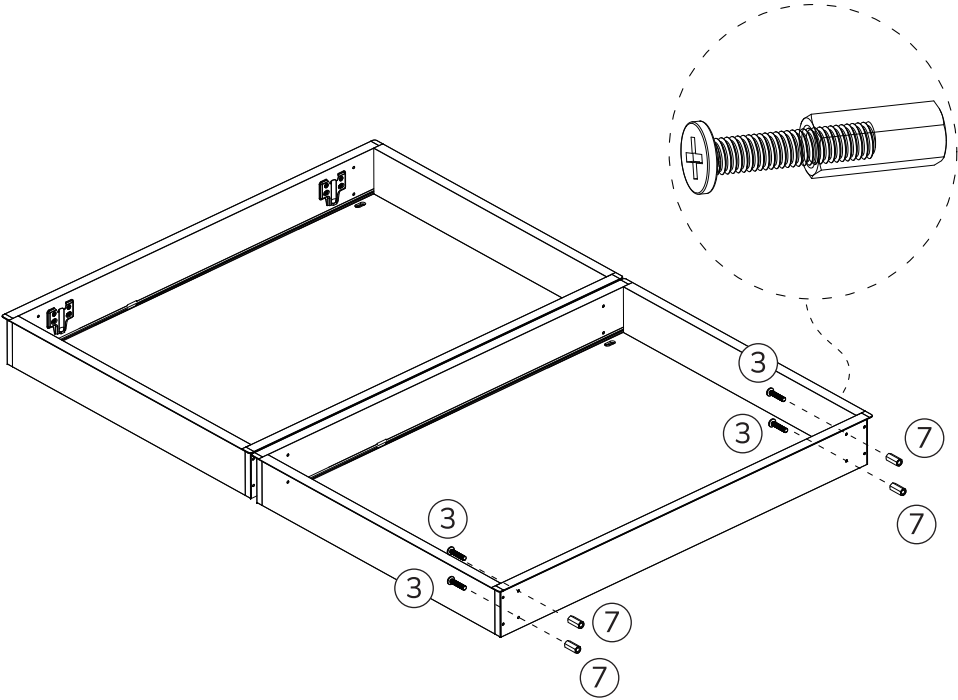

Step 4

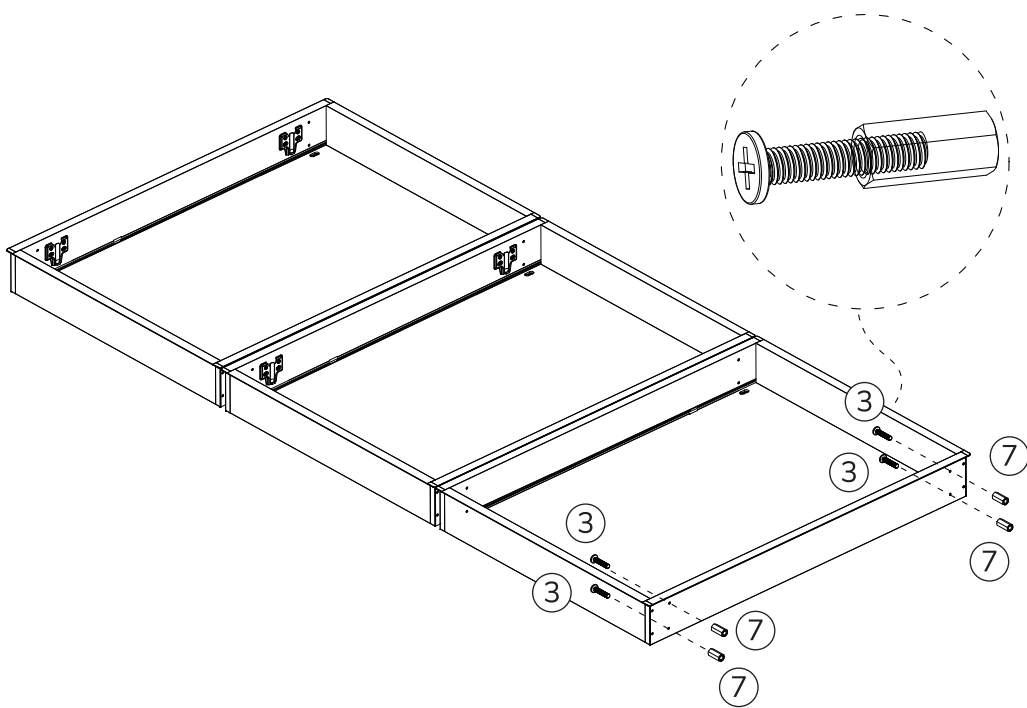

Step 5

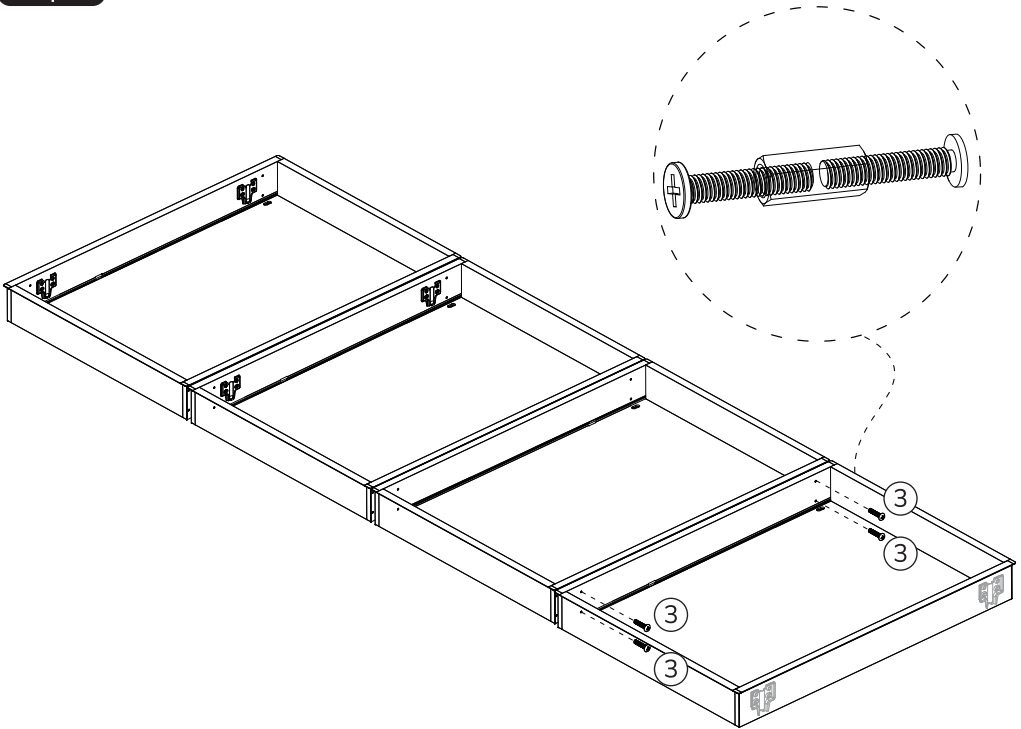


Finish!


6 Installation of shelves

Step 1


Loosen the screws on parts D1 and D2.

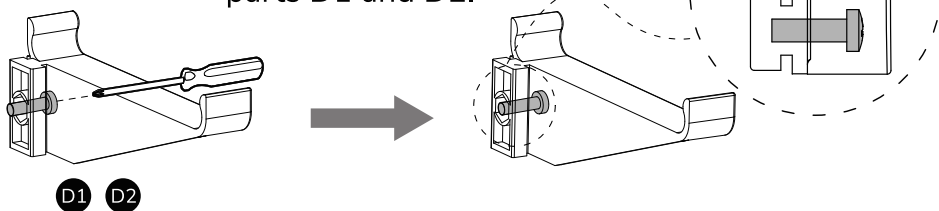


Step 2

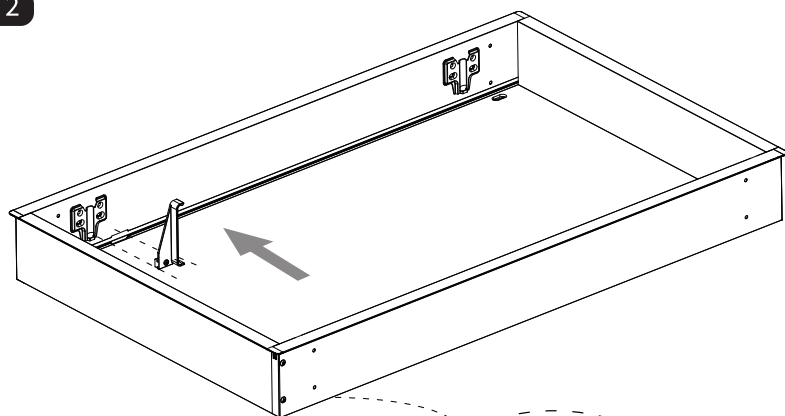


Align the shelf with the slot and insert it vertically

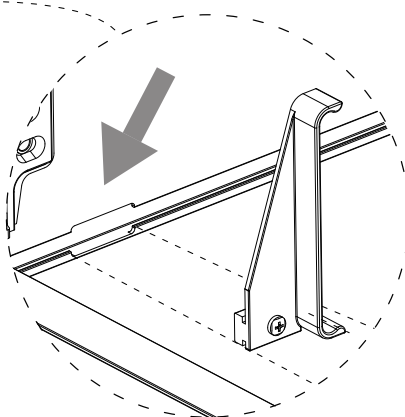

Step 3

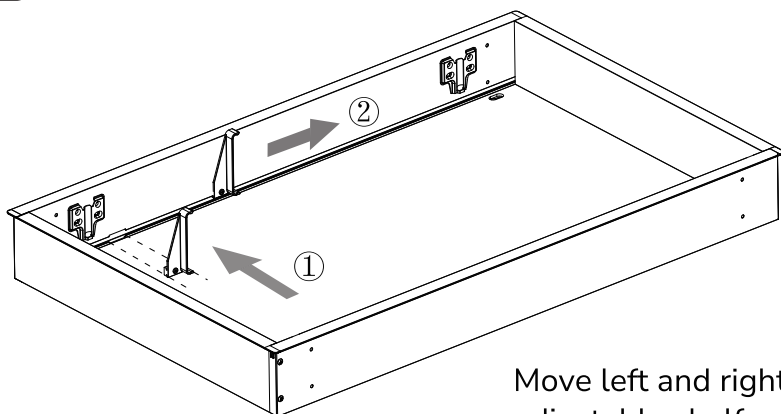

Move left and right,
adjustable shelf position

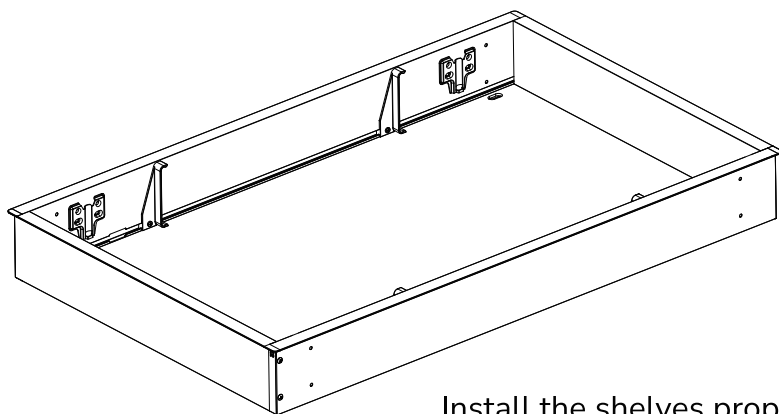

Install the shelves properly

ATTENTION:


Left door opening: D1 needs to be installed on the side with hinges

Right door opening: D2 needs to be installed on the side with hinges

7


Install the shelves

Step 1


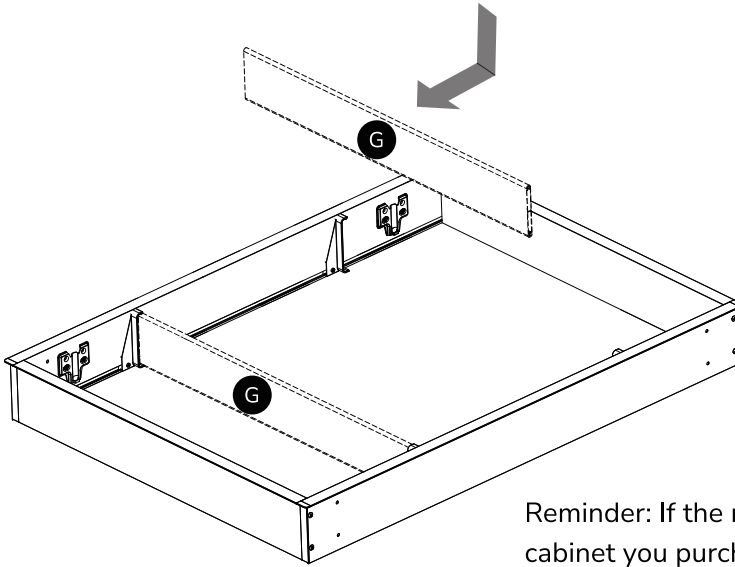


Reminder: If the medicine cabinet you purchased is taller than 32 inches, please assemble all the included G parts.

The shelf panel needs to snap into the shelf frame.


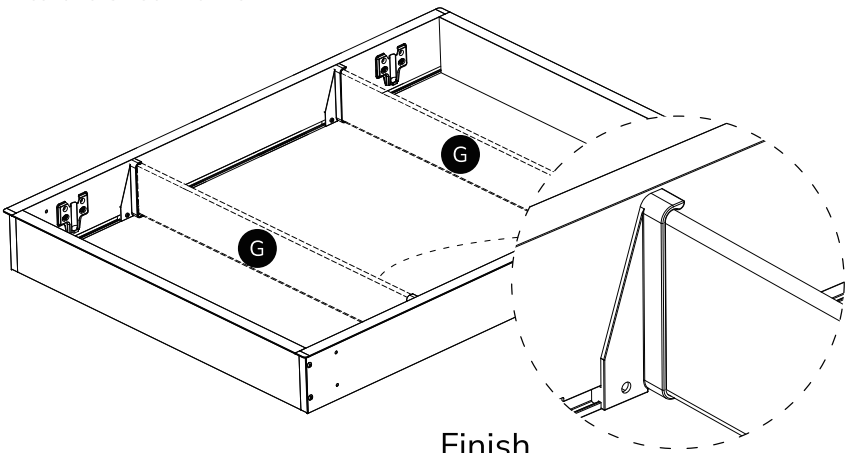


Step 2

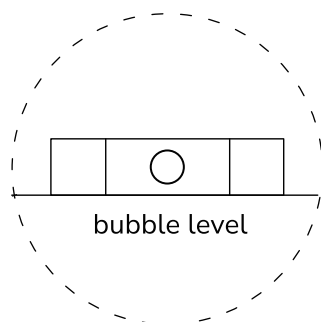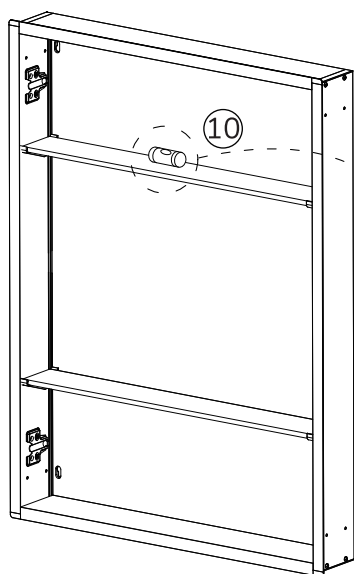

Reminder: Place the cabinet vertically on the desk-top, Please ensure the shelves are horizontal with the bubble level.

Step 3

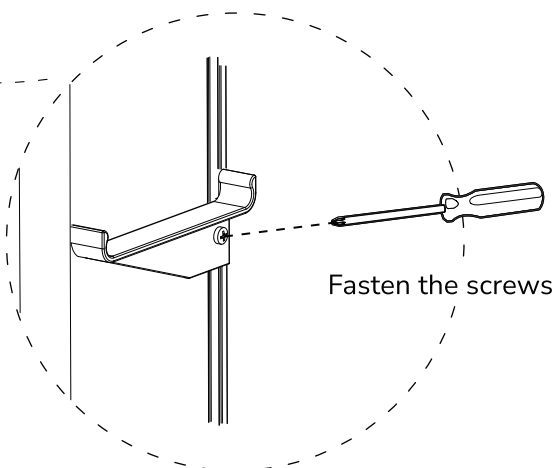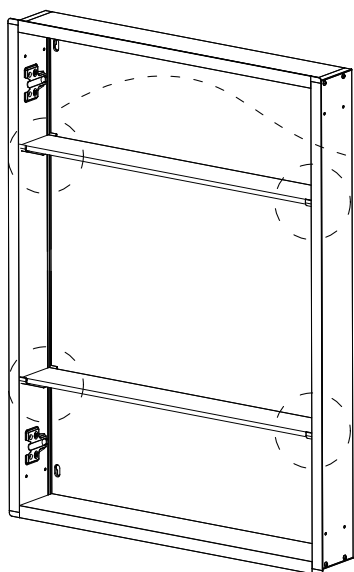


8 Decide on the Installation

Choose whether to wall-mount (Step 8-1 to Step 8-8) or recess-mount (Step 9-1 to Step 9-7) the medicine cabinet according to your preference.


For various product models, the mounting holes are positioned differently. Before drilling, confirm and mark all hole locations, ensuring each spot is drilled and fitted with wall anchors and screws.

The mounting holes are located as indicated below:


Single-door

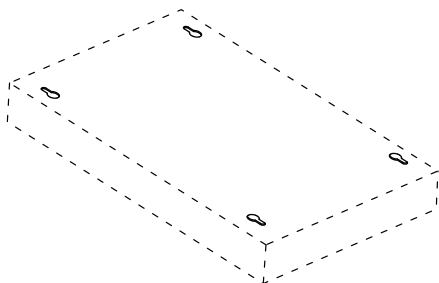

Double-door

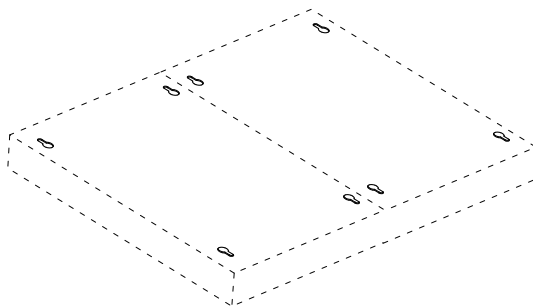

Triple-door

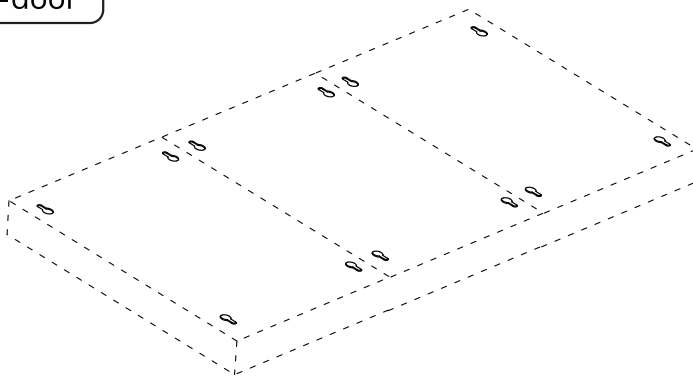


WALL MOUNTING

8-1

Step 1

Measure the distance between the upper mounting hole to the bottom of cabinet box

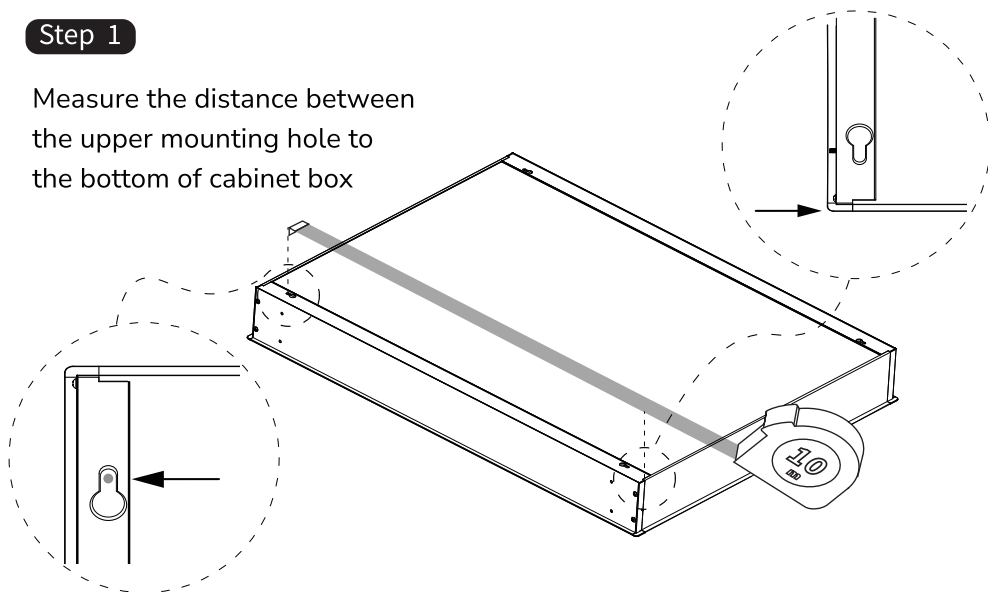


Step 2

1. Based on the measured distance, mark spots for the mounting holes on the wall.


2. From the two designated spots, draw straight lines using a bubble level to ensure they are perfectly horizontal.

3. Draw a vertical line at the middle of vanity sink as a reference.

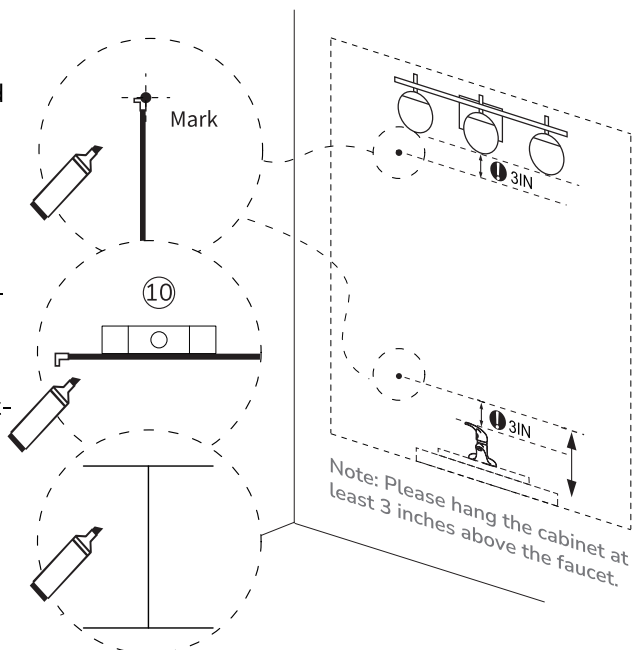


Step 3

Measure the distance between the outermost two mounting holes

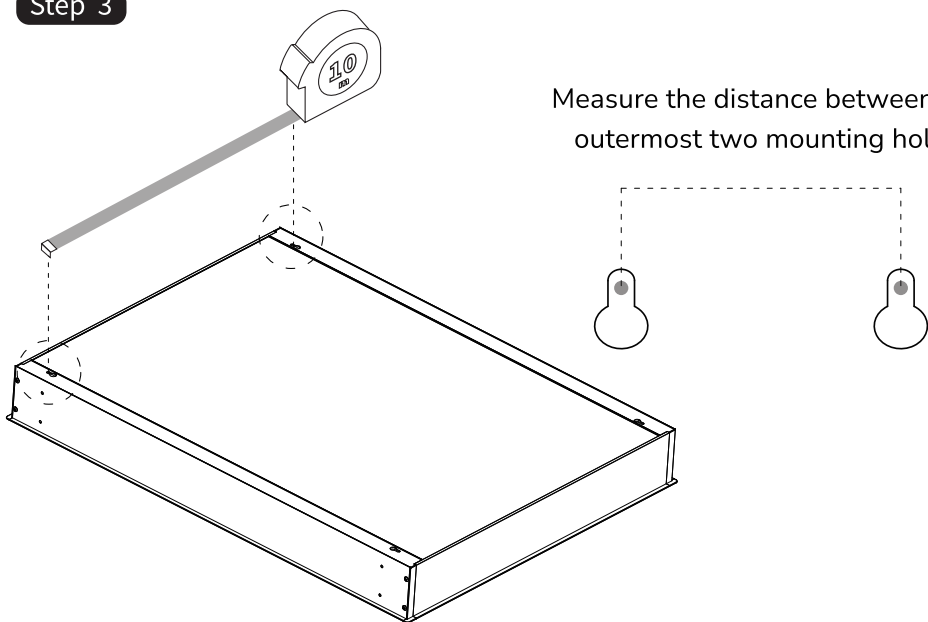

Step 4


Based on the measured distance, mark the other two spots on the wall.

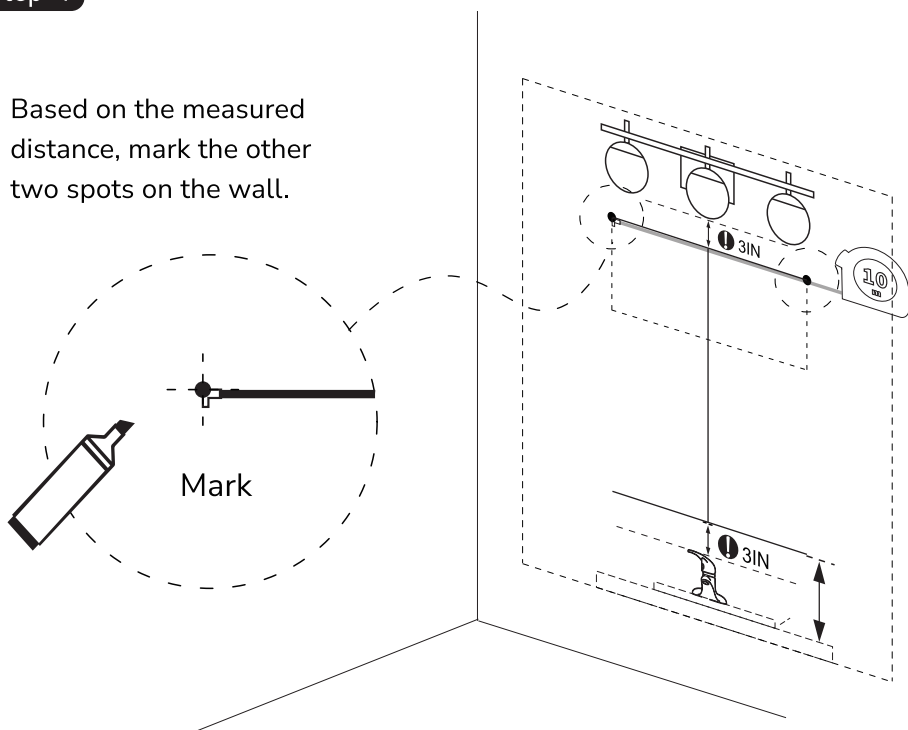

8-2

Step 1

Drill holes at the marked spots.

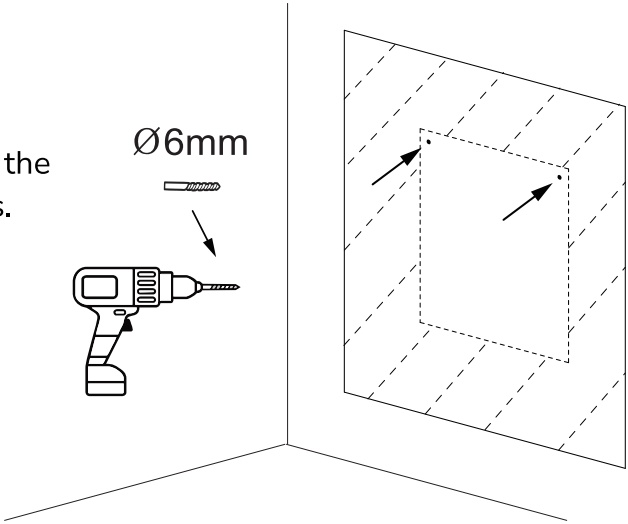


Step 2

Choose appropriate drill bits that match the thickness and material of the wall to ensure secure mounting.


Thickness of Wall :	Recommended Drill Bit :	
> 5/8" (16mm)	1/4" (6mm) drill bit, drilling depth in 1 31/32" (50mm)	  (8) (4)
5/16" (8)-5/8" (16mm)	25/64" (10mm) drill bit	  (9) (5)
< 5/16" (8mm)	Unapplicable	

Fit the screws but leave
a 0.27-0.55in (7-14mm)
gap between the screw-
head and the wall

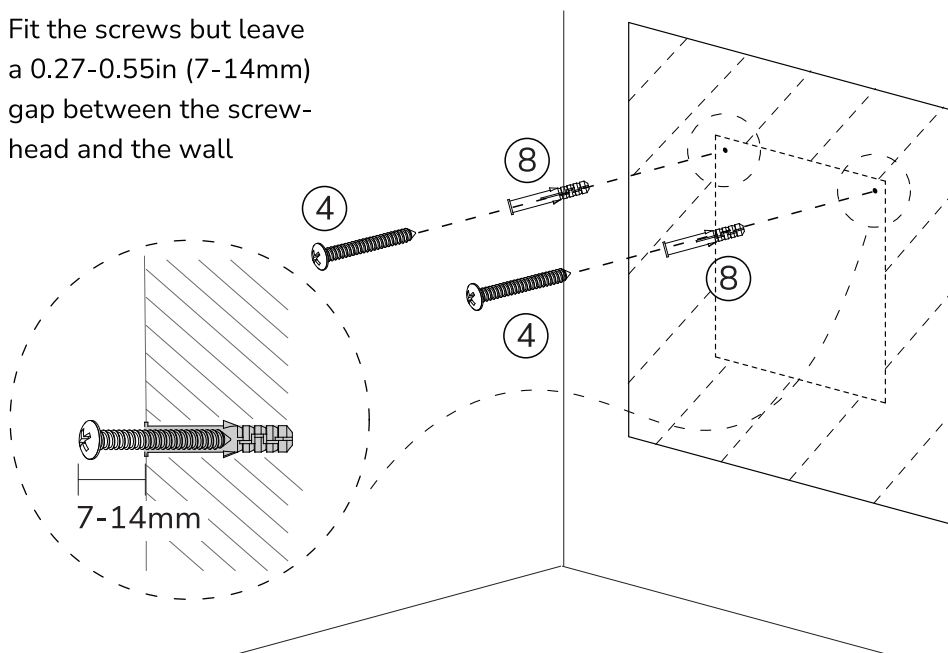


8-3

Step 1

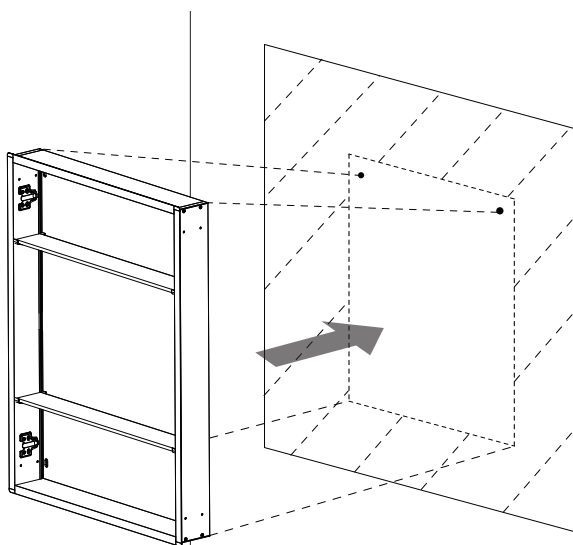

Place the mirror
cabinet on the wall


Step 2

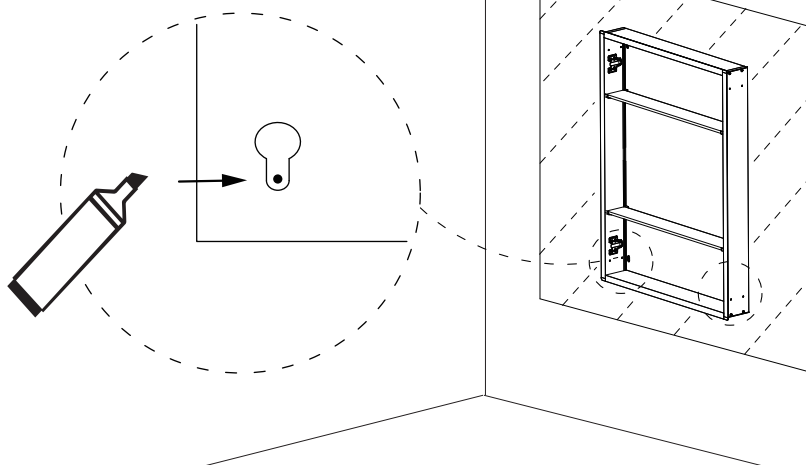

Mark the two bottom spots on the wall.


8-4

Step 1

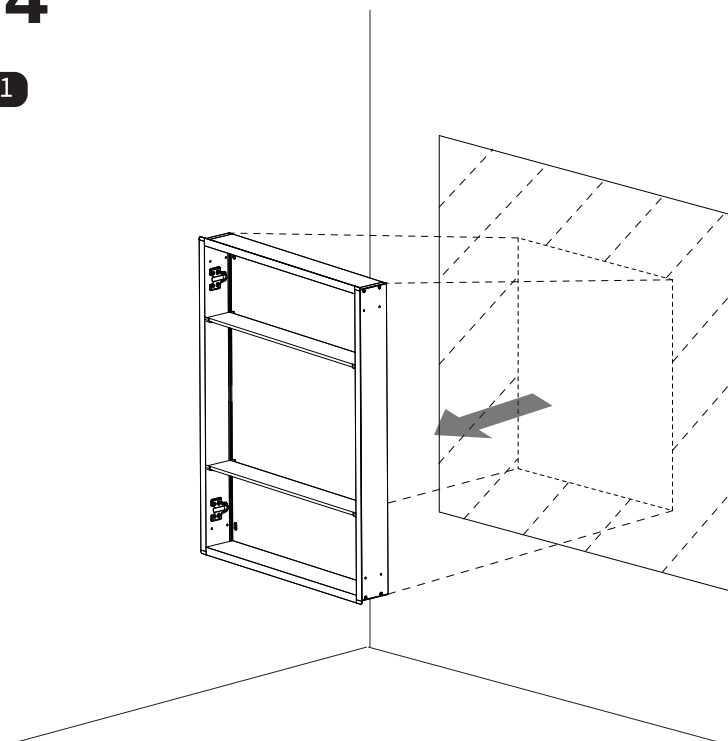


Step 2

Drill holes at the marked spots.

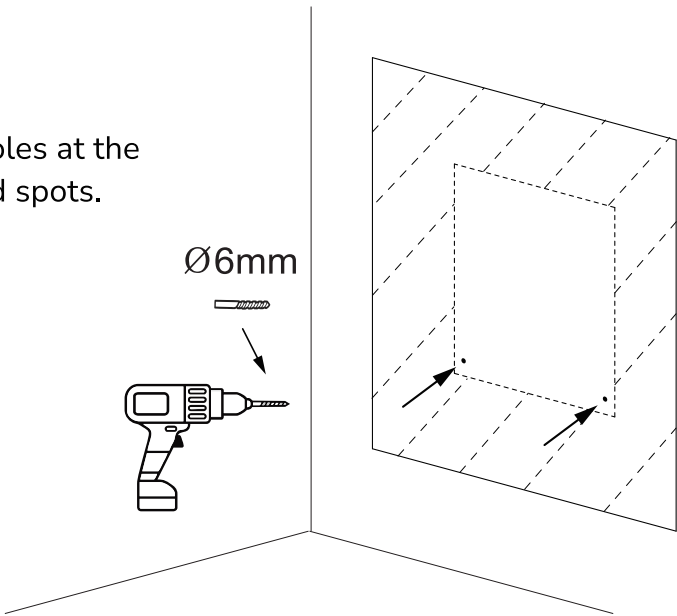

Step 3


Install wall anchors.

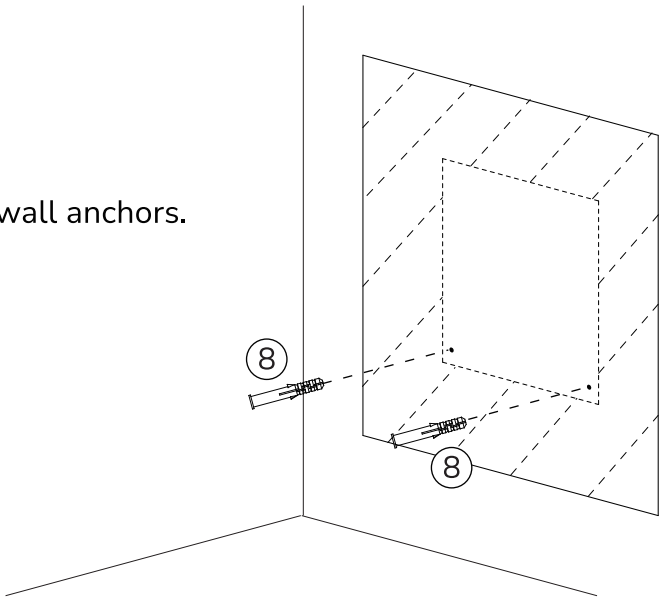

8-5


Step 1

Set screws

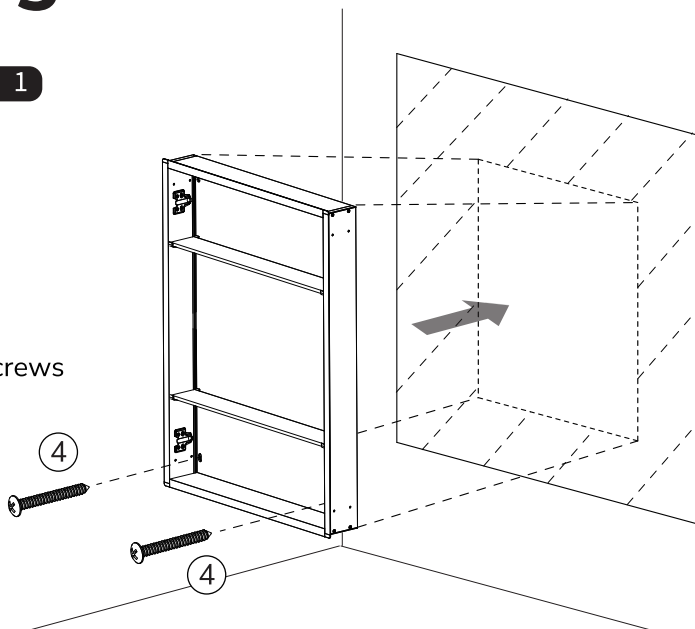


Step 2

Fasten the screws

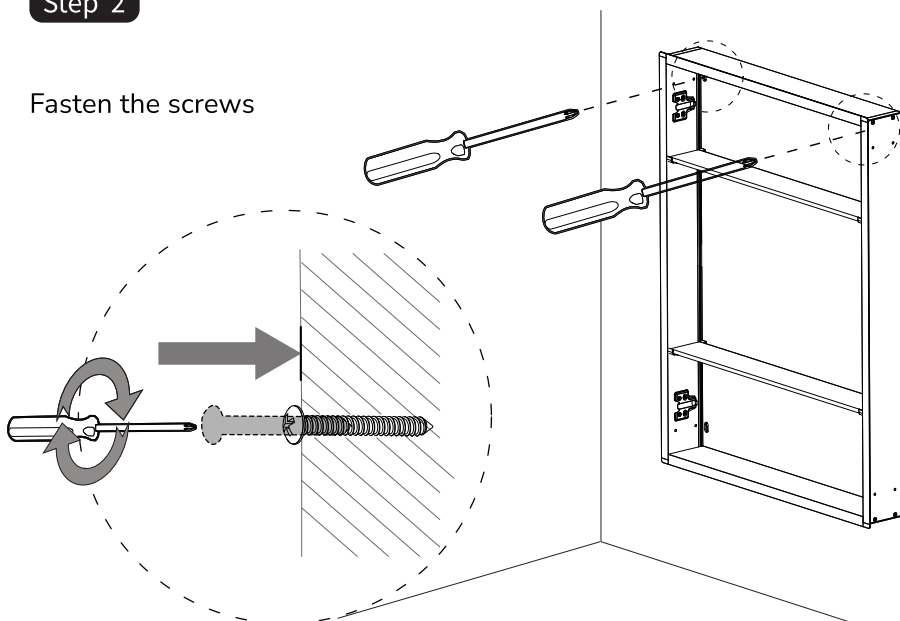

8-6


Apply stickers to cover the screwheads

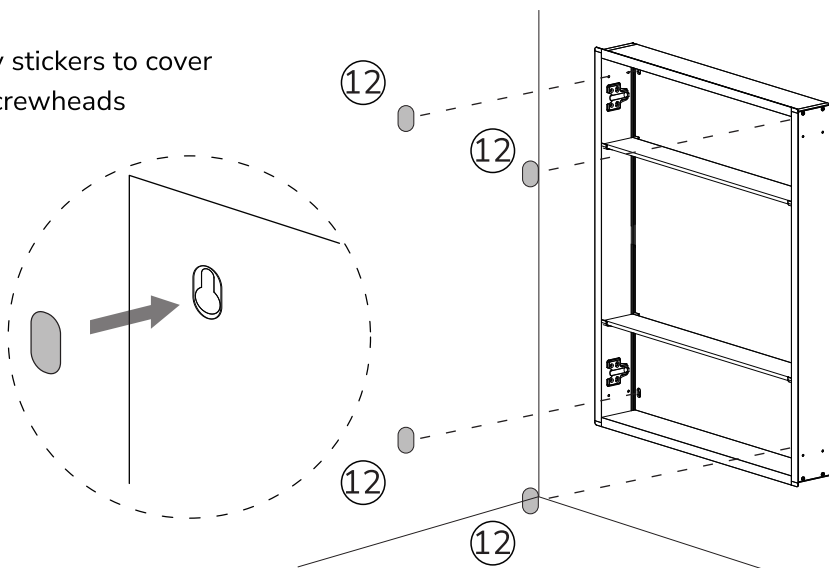


8-7

Step 1


Link the cabinet door to the cabinet body

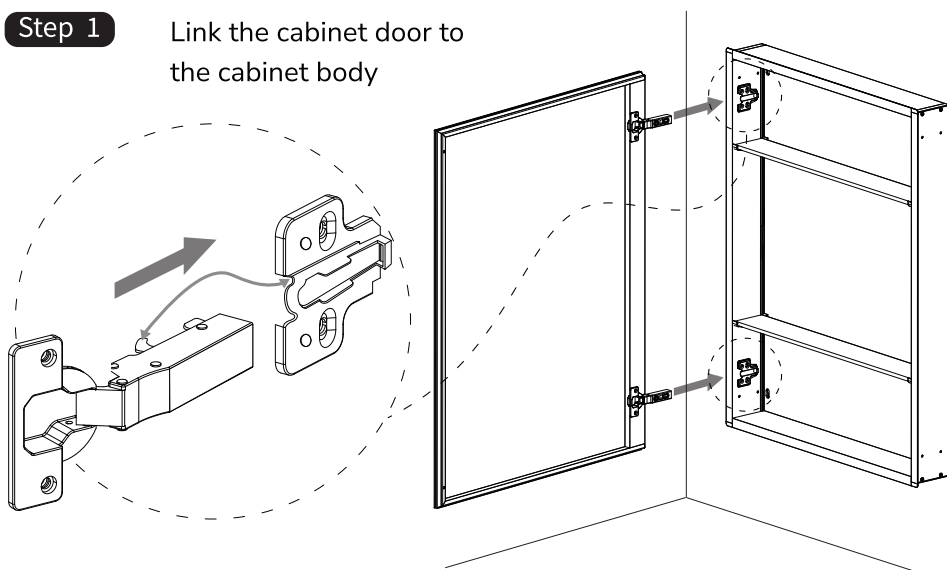

Step 2






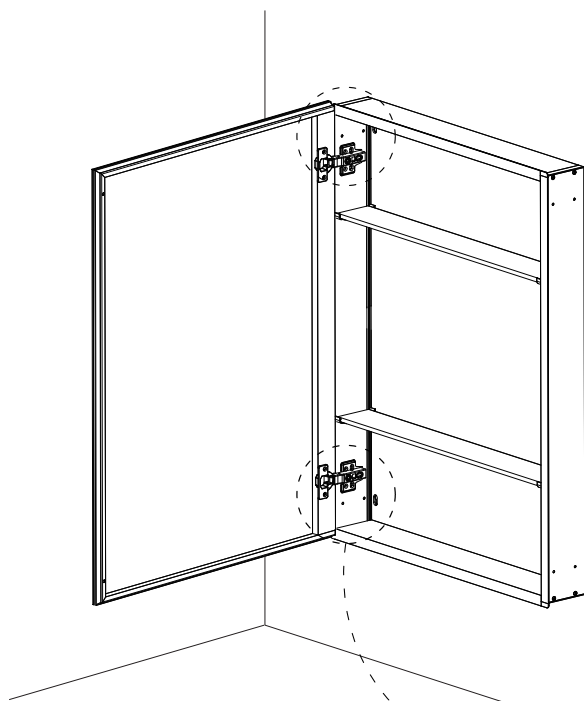


Press the hydraulic hinge into place.
Once you hear a click, it indicates
that the installation is complete.

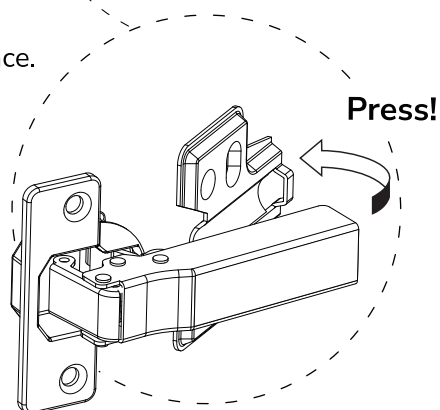



HOW TO ADJUST HYDRAULIC HINGES

Open the hydraulic hinge cover and adjust the cabinet door by fastening or loosening the screws accordingly.

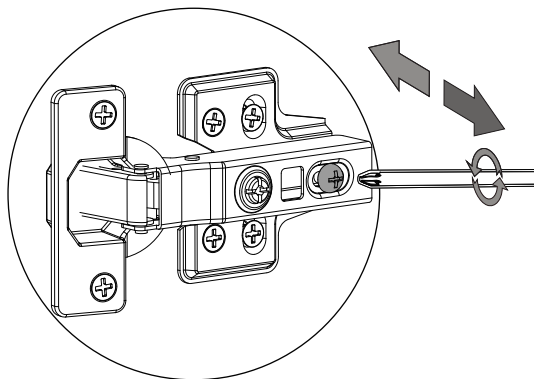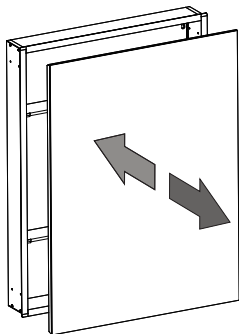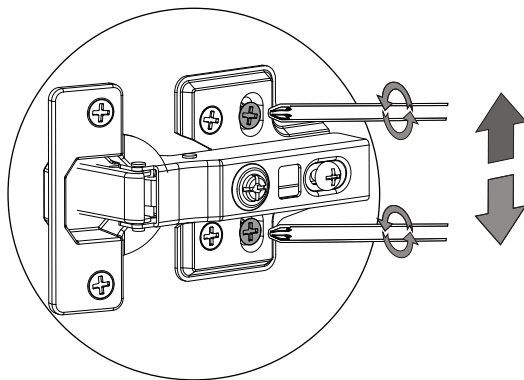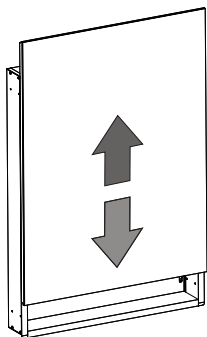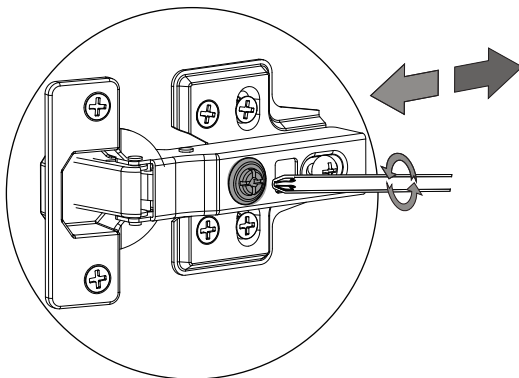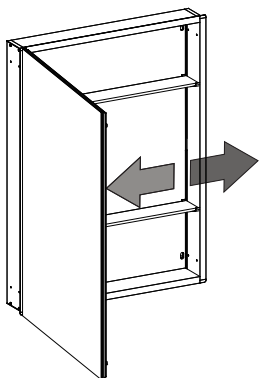


8-8

Adjust hinge

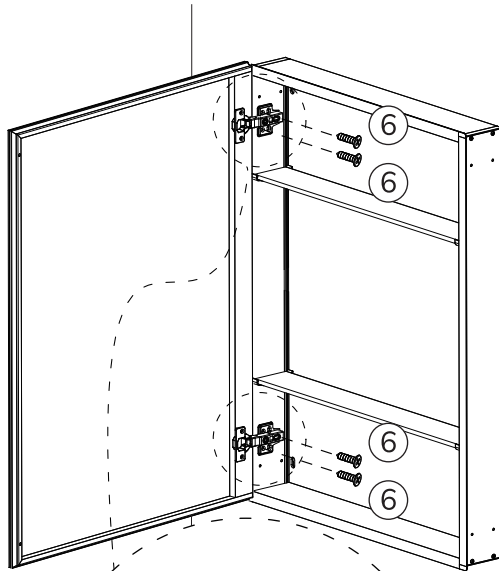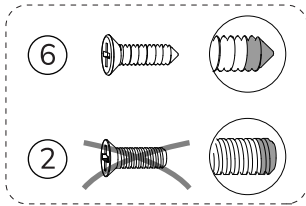


Step 1

1. Adjust the screws on hydraulic hinge, ensuring the cabinet door locates perfectly.

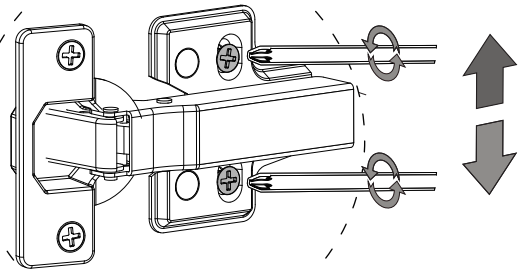

Step 2

2. Fasten the screws

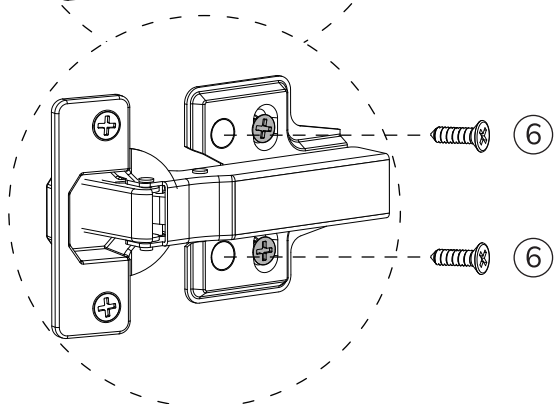



Installation Completed

RECESSED MOUNTING

9-1



Step 1

Ensure the cabinet is level

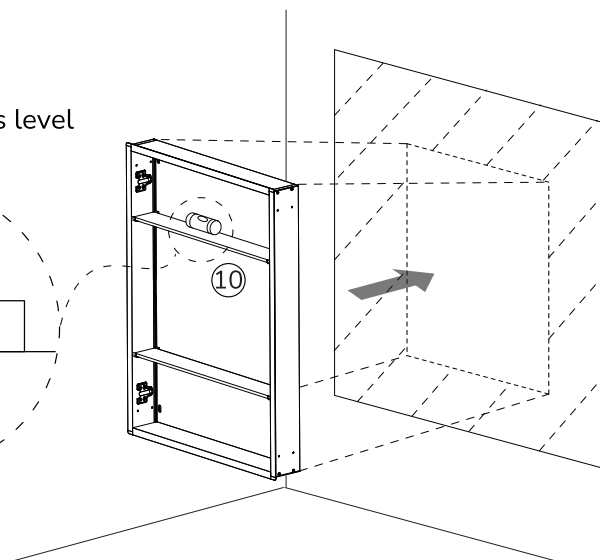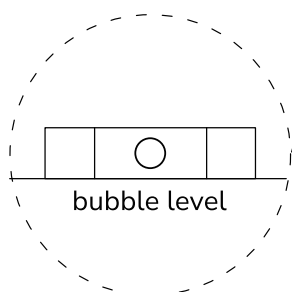




Step 2

Mark the placement of the cabinet

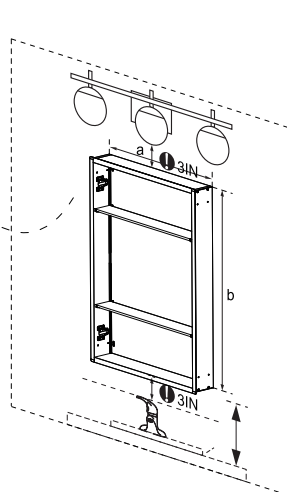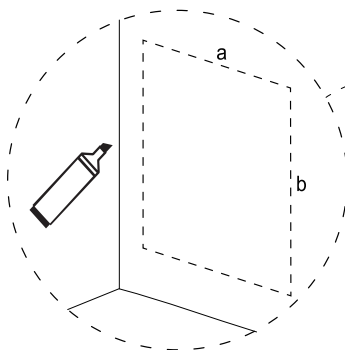

Note: Please hang the cabinet at least 3 inches above the faucet.


9-2

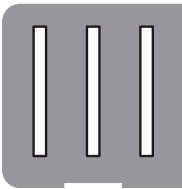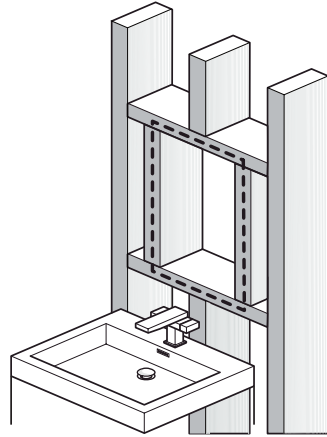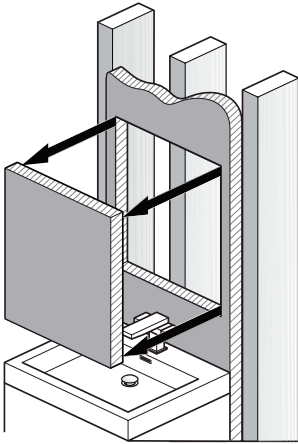


a



b

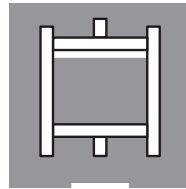

c

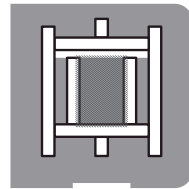


d

- a. Mark the center stud;
- b. Saw it for cabinet to rest on;
- c. Add additional 2 studs on the top and at the bottom of the opening to support the cabinet;
- d. Two more studs on both sides for the cabinet to be secured on.

9-3


Step 1

Place the mirror cabinet into the wall

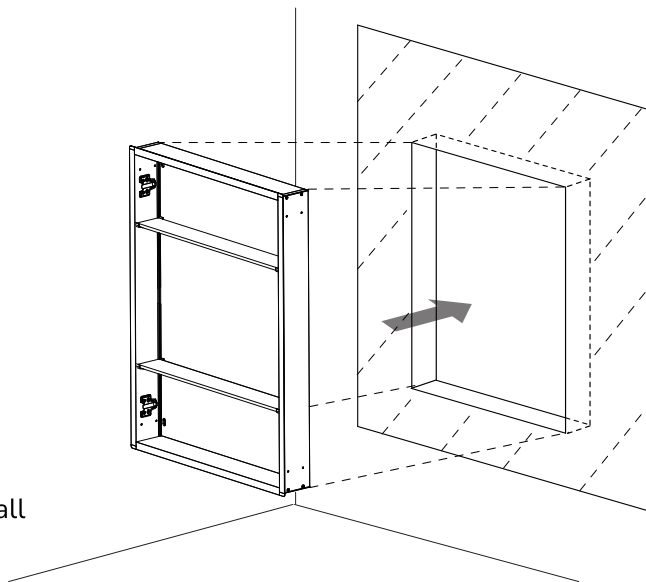

Step 2



Mark spots for mounting hydraulic hinge

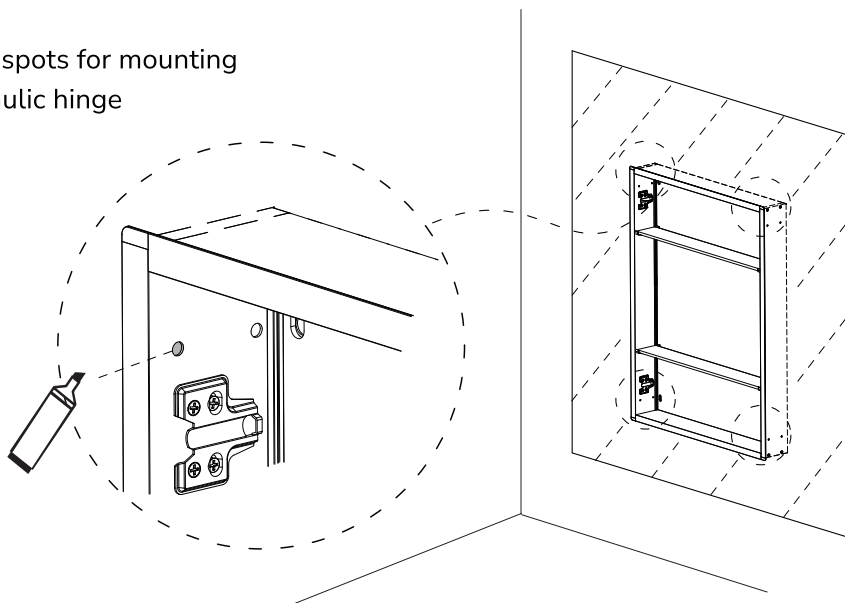


9-4

Step 1

Choose appropriate drill bits that match the thickness and material of the wall to ensure secure mounting.

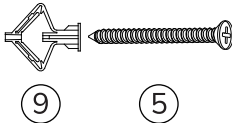
Thickness of Wall :	Recommended Drill Bit :
> 5/8" (16mm)	1/4" (6mm) drill bit, drilling depth in 1 31/32" (50mm) 
5/16" (8)-5/8" (16mm)	25/64" (10mm) drill bit 
< 5/16" (8mm)	Unapplicable

Take out the cabinet box and drill holes at the marked spots.

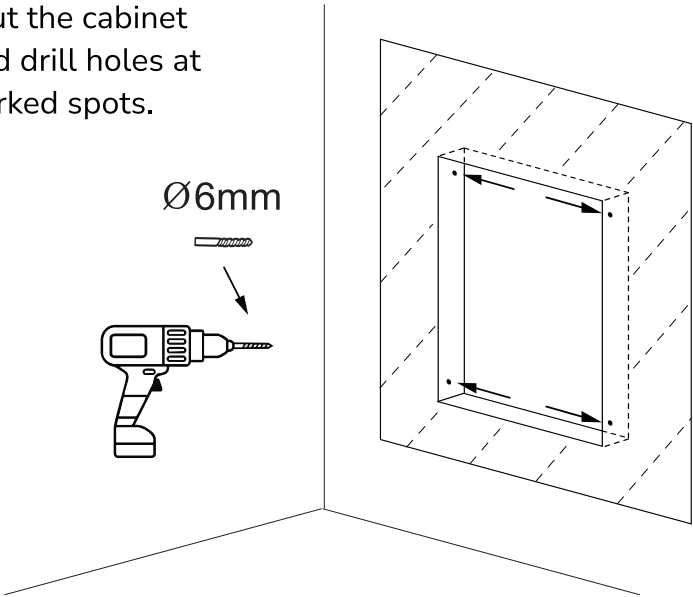


Step 2

Install wall anchors

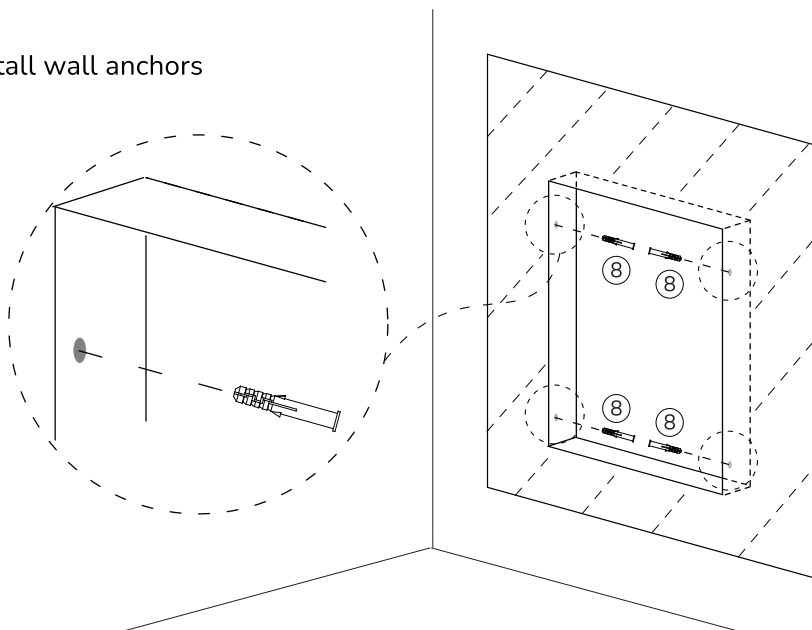


Step 3

Place the mirror cabinet into the wall

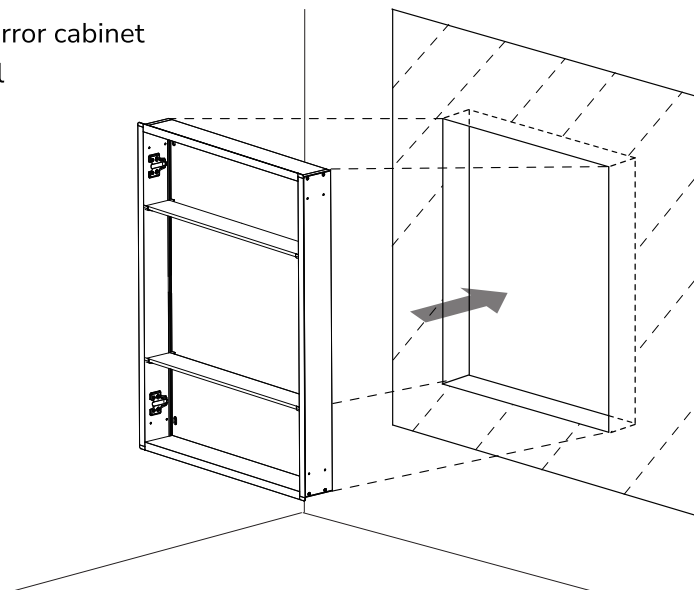


Step 4

Set screws

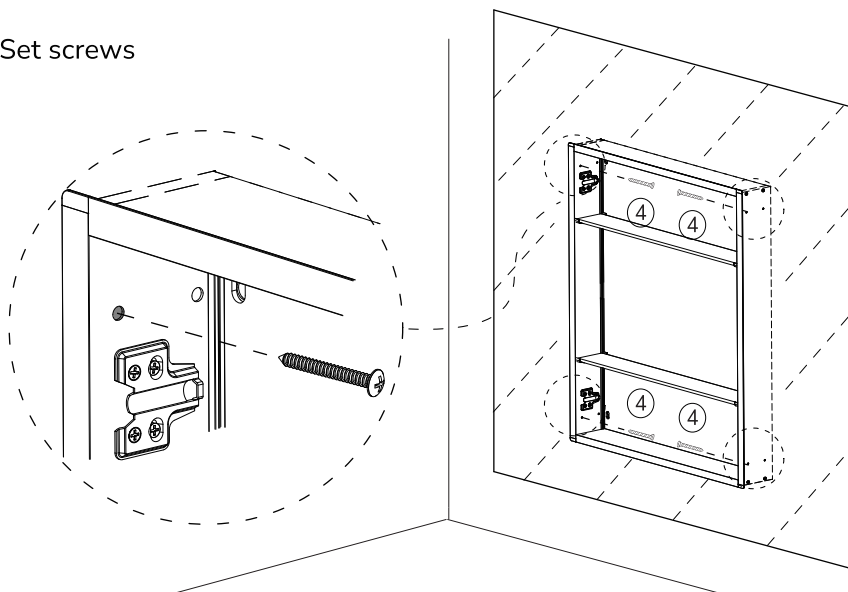

9-5


Apply stickers to cover the screwheads

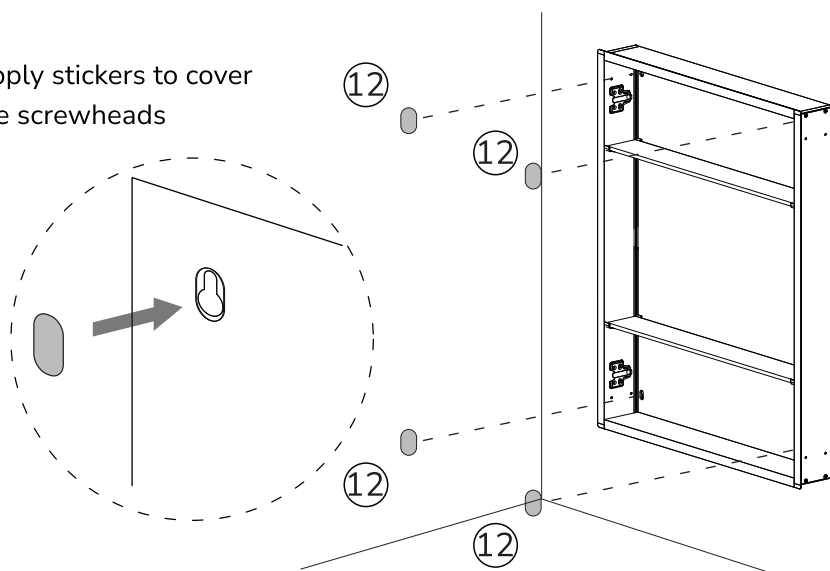

9-6


Step 1

Link the cabinet door to the cabinet body

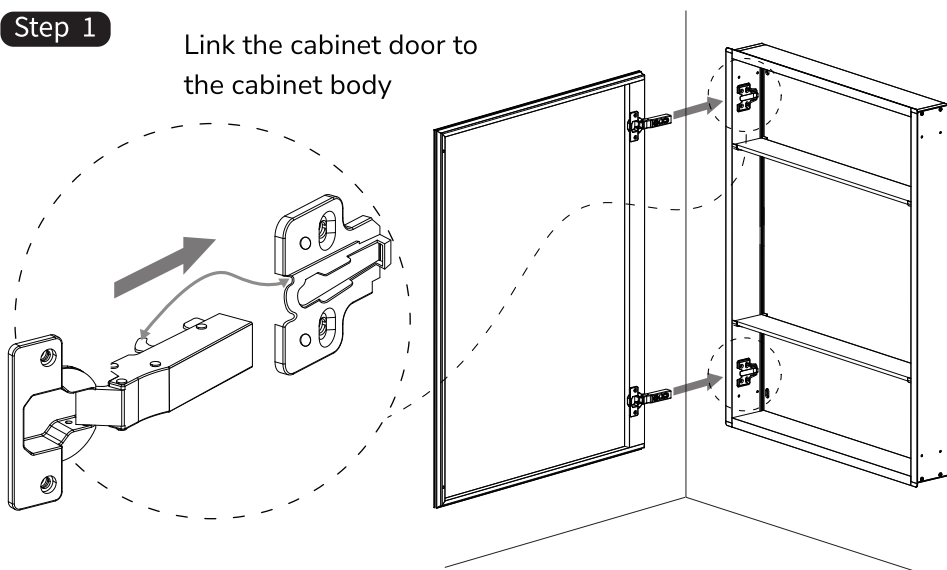







Step 2

Press the hydraulic hinge into place.
Once you hear a click, it indicates
that the installation is complete.

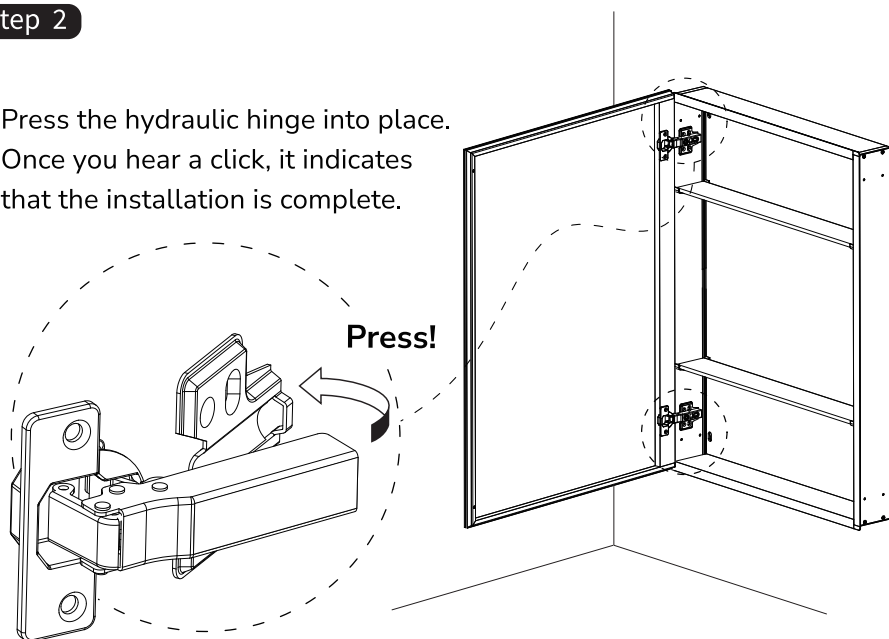



HOW TO ADJUST HYDRAULIC HINGES

Open the hydraulic hinge cover and adjust the cabinet door by fastening or loosening the screws accordingly.

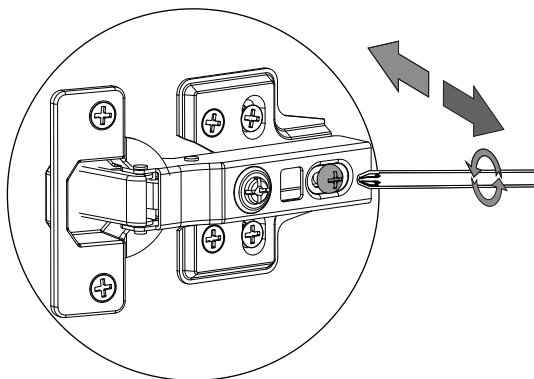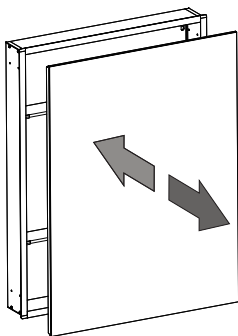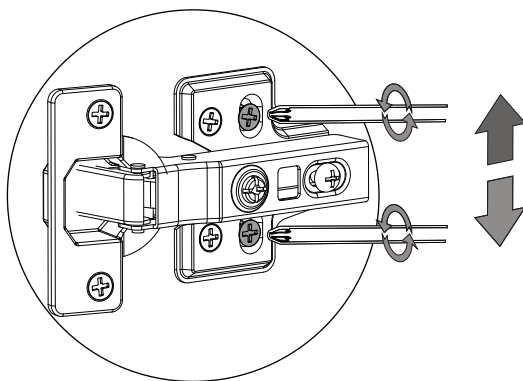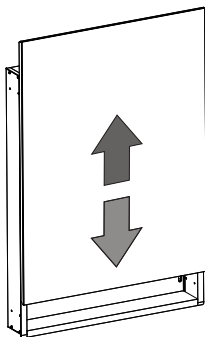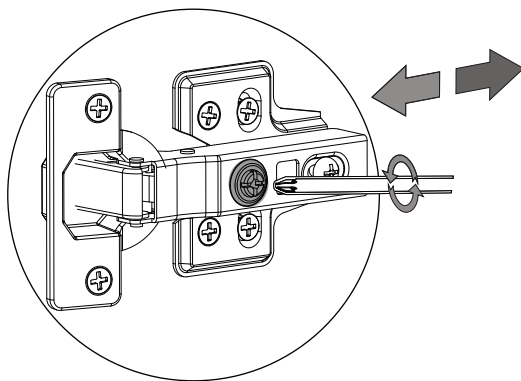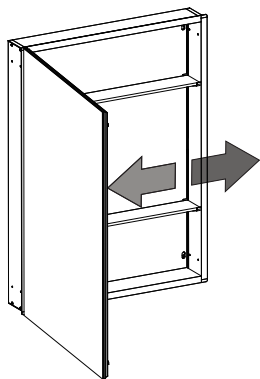


9-7

Adjust hinge

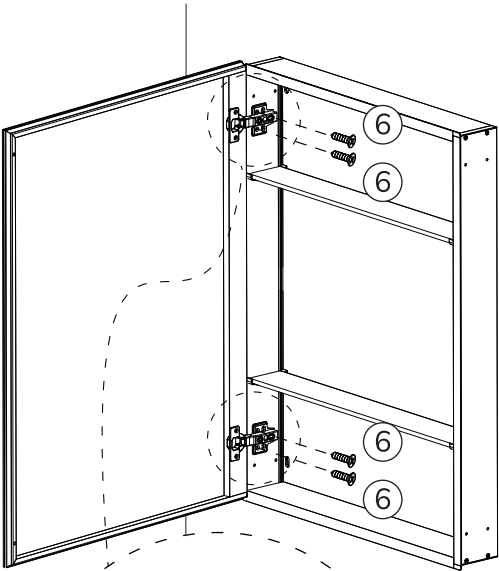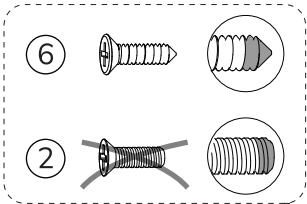


Step 1

1. Adjust the screws on hydraulic hinge, ensuring the cabinet door locates perfectly.

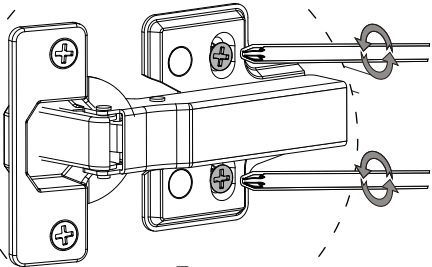

Step 2

2. Fasten the screws

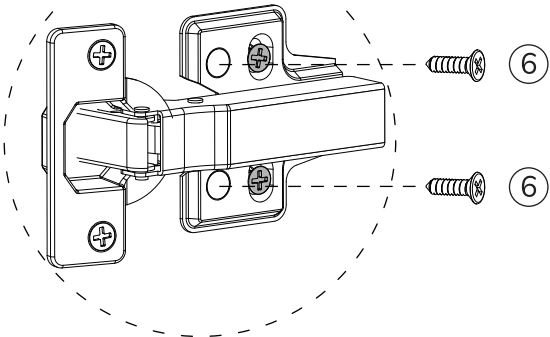

Installation Completed

HOW TO CLEAN

When cleaning the mirror, please follow these instructions:

1. Use a soft, non-abrasive cloth to clean the mirror. Avoid using rough or abrasive materials that may damage the surface.
2. Do not use any cleaning agents that may cause irritation or damage to the mirror's finish. Instead, use any of the recommended cleansers to remove dirt and grime:

☒ Gentle liquid detergents ☒ Colorless cleansers

3. If any adhesive residue left, please wipe it off with a cloth dipped in water (instead of detergents).

★ Warranty

A two-year warranty from the date of your purchase.