


INSTALLATION



Product Manual

Version: 740008US-01-26A-AA

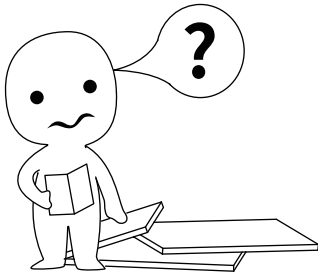



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

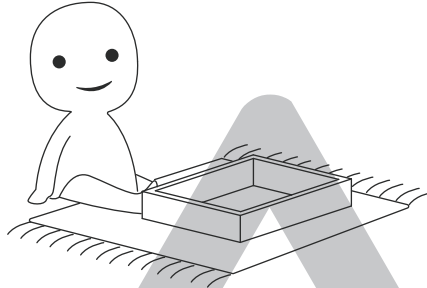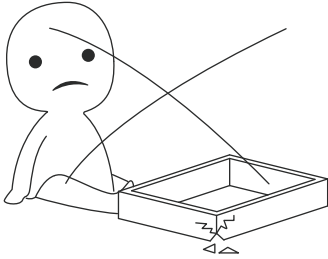





AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

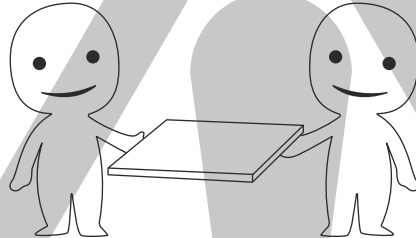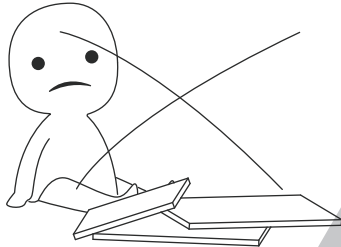

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

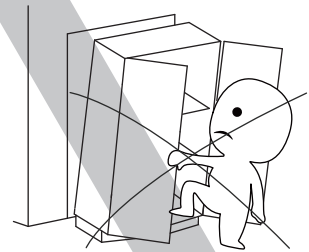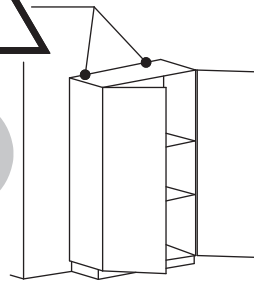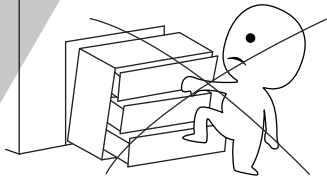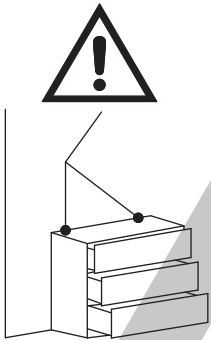

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

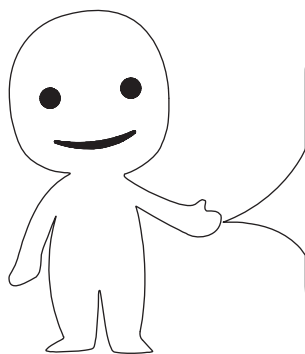

Please prepare the following tools

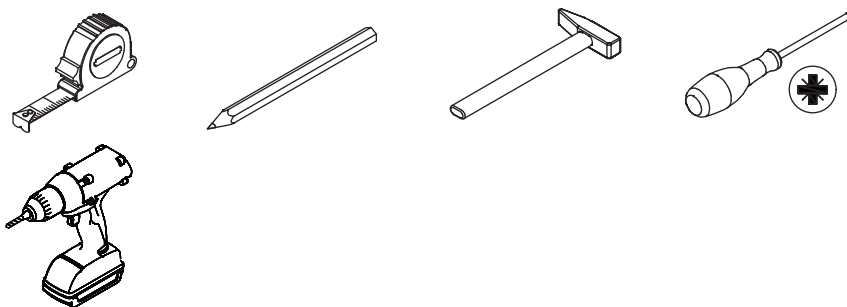


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 63




CRB1595A

B x 63

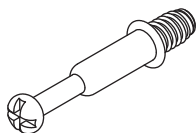


CRA0635B

C x 63




D x 39




CRF0630A

E x 14

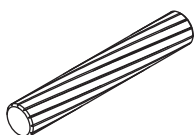


CRF0840A

F x 30

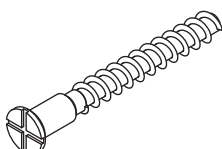


CRC0540A

G x 8

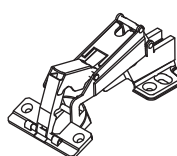


DGA861C

H x 1

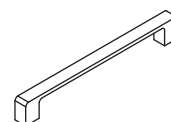


J x 2




CRE0418A

K x 14

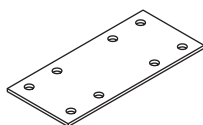


L x 162




CRD3514A


M x 2

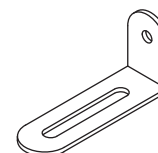

N x 2

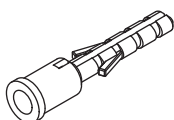


P x 2

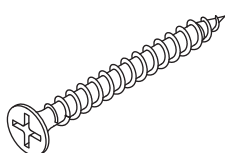

CRD3535A


Q x 72



R x 72



CRD0314A

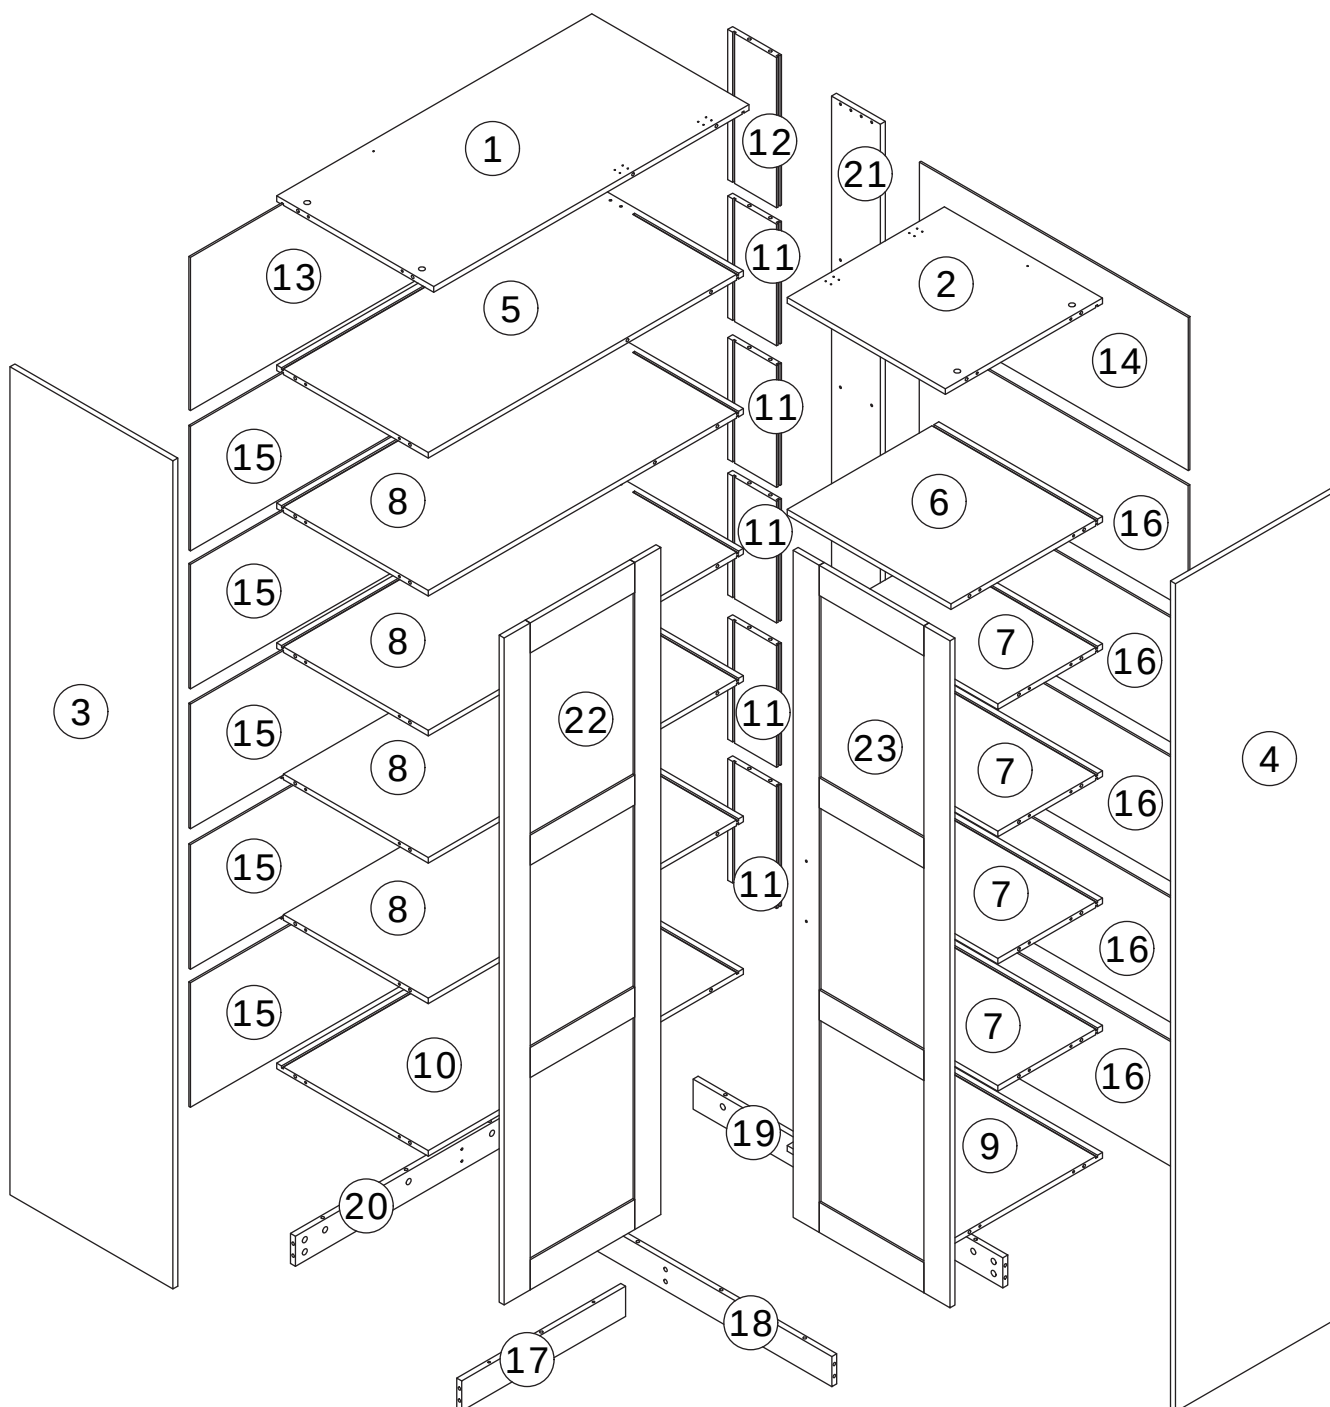


⚠ WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.




*This is a permanent label.
Do not remove!*

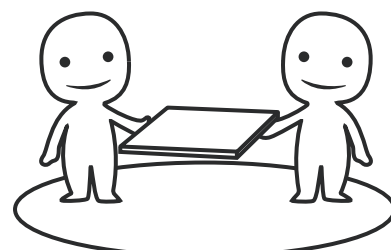


ASSEMBLED BY 2 ADULTS

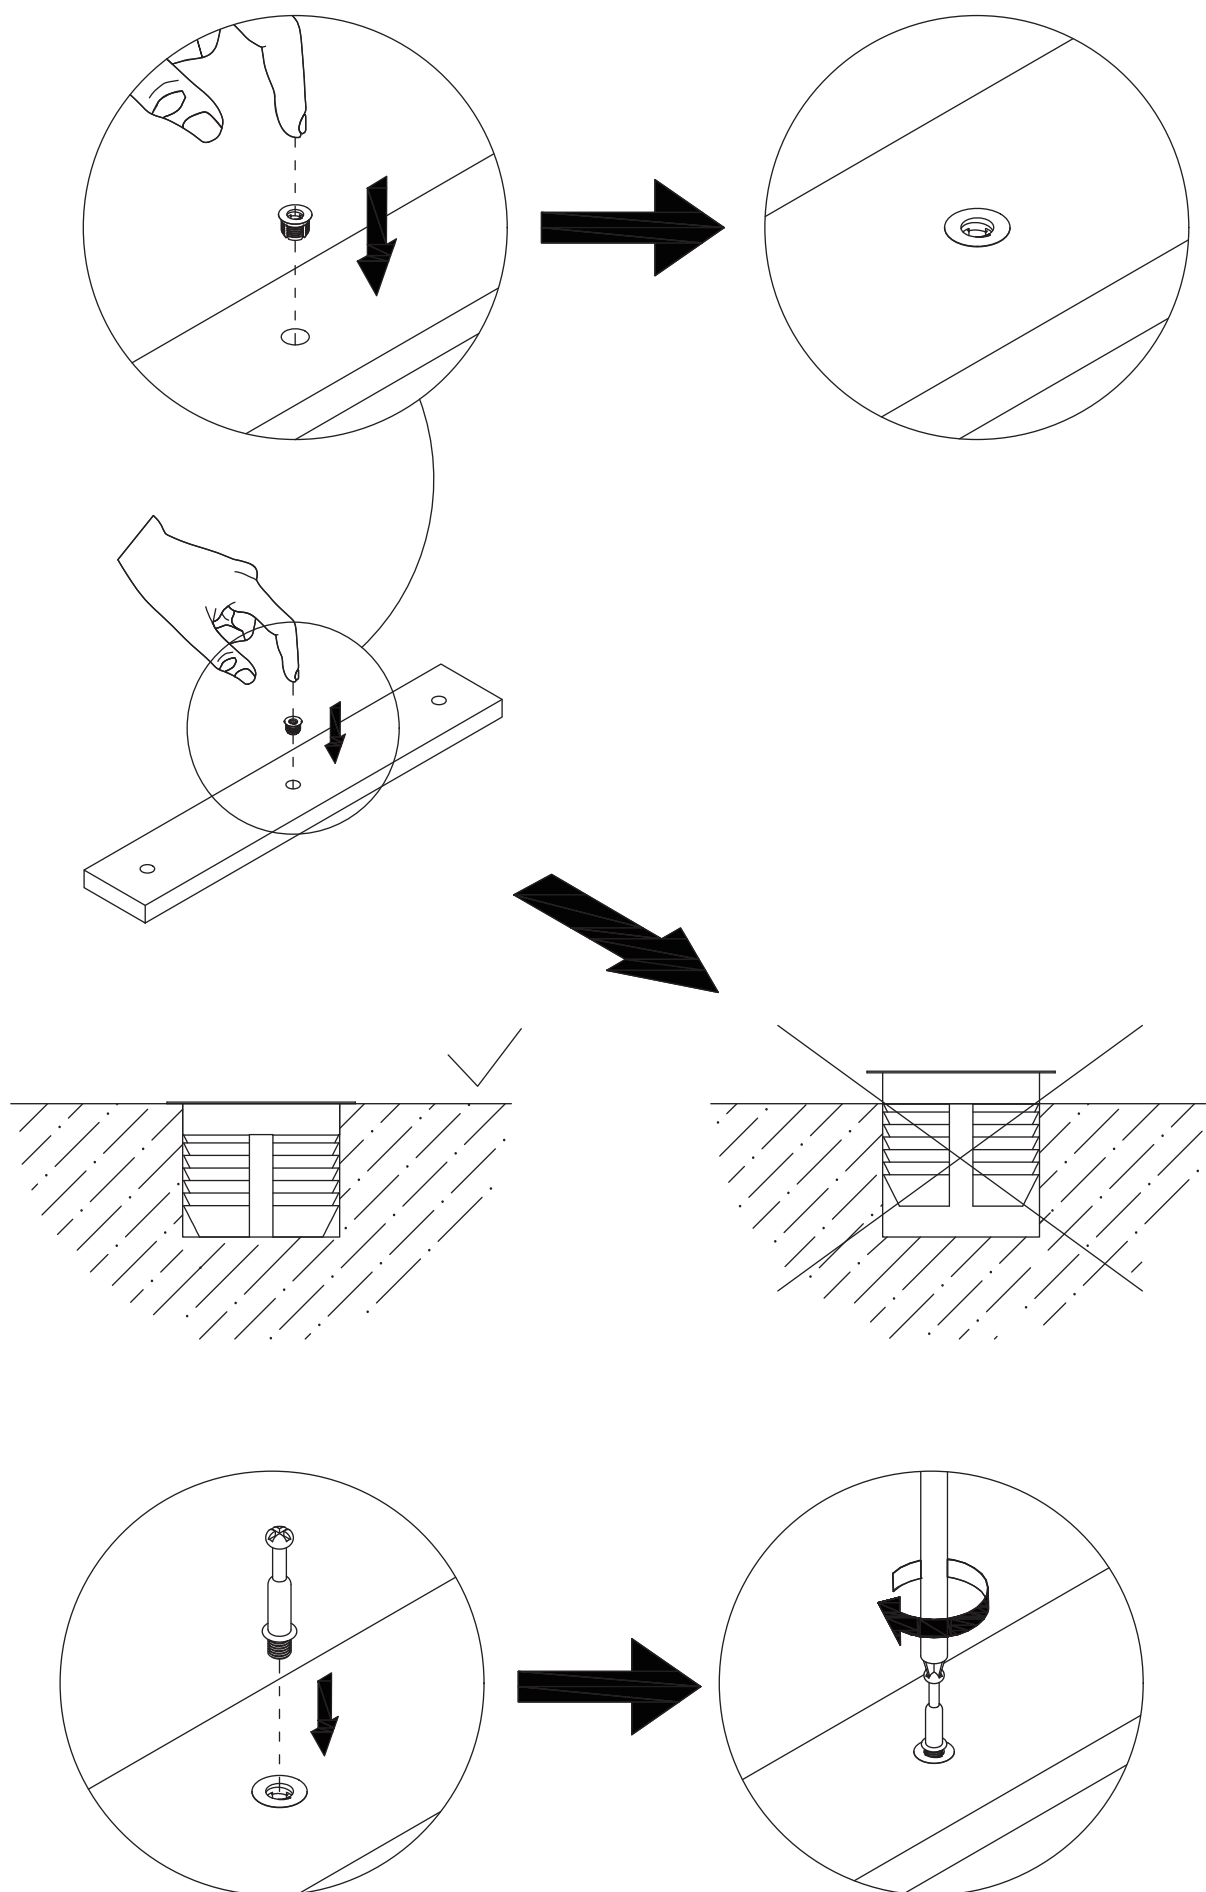


1

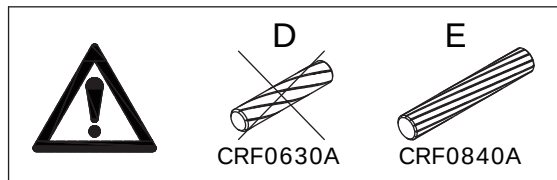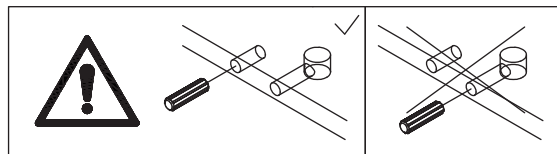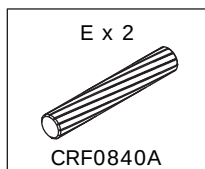


Connect panel 2 to panel 1 using wooden dowel (E).

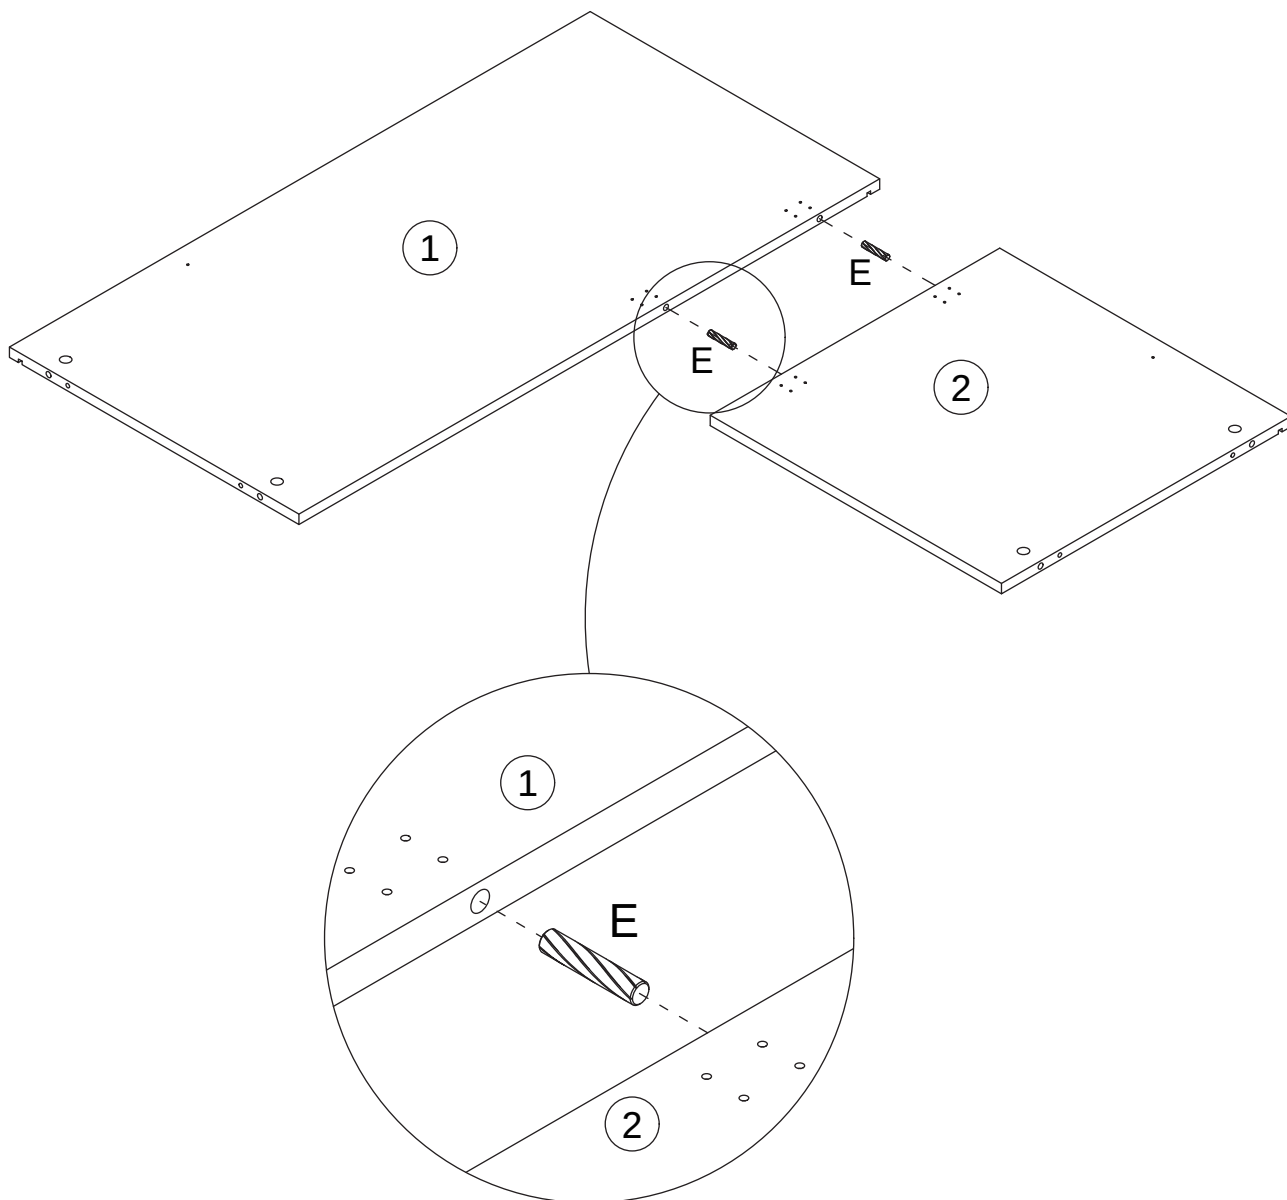



2

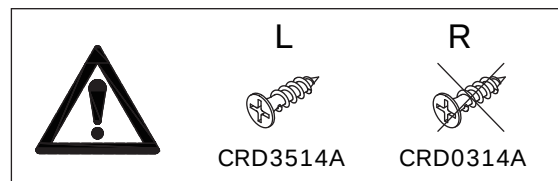


Secure part (K) to panels 1 and 2 using screw (L).

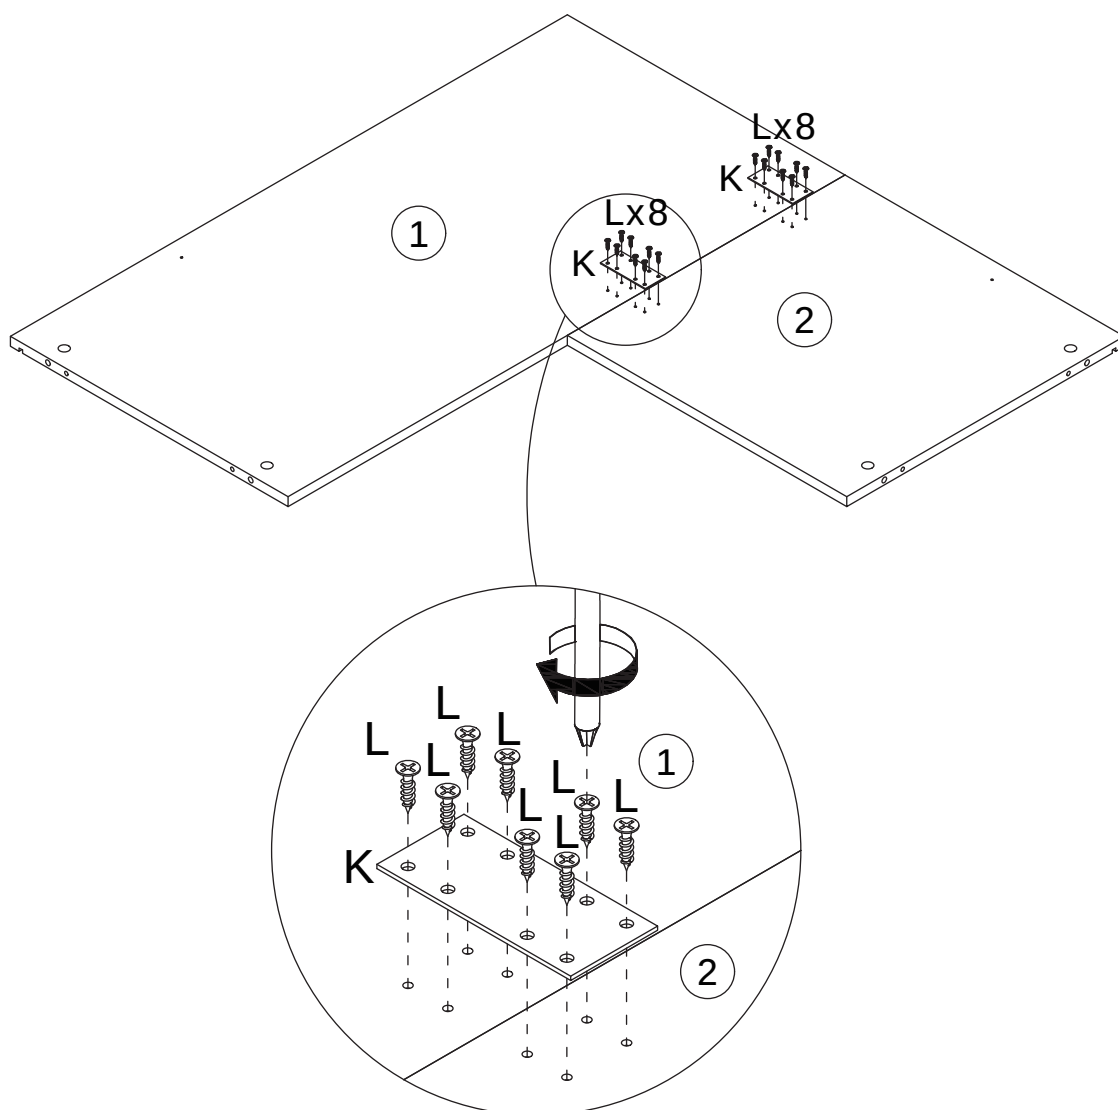

3

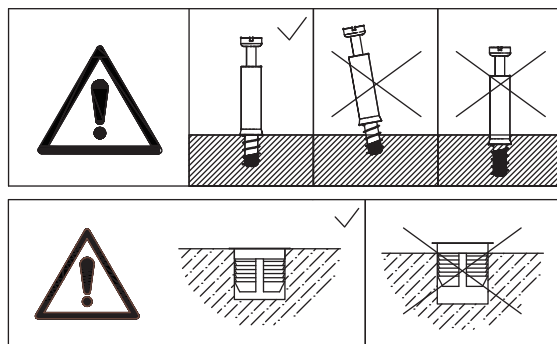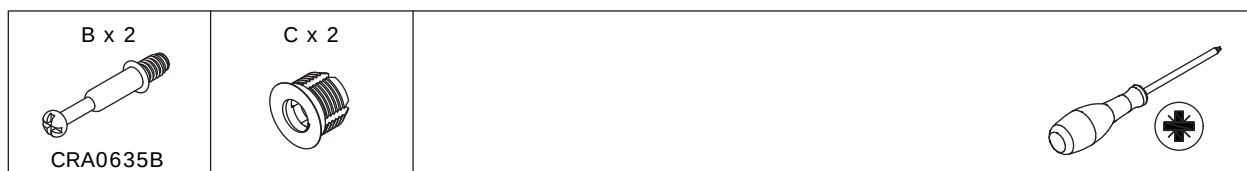

Install plug (C) onto panel 1, then screw self-tapping rod (B) into panel 1.


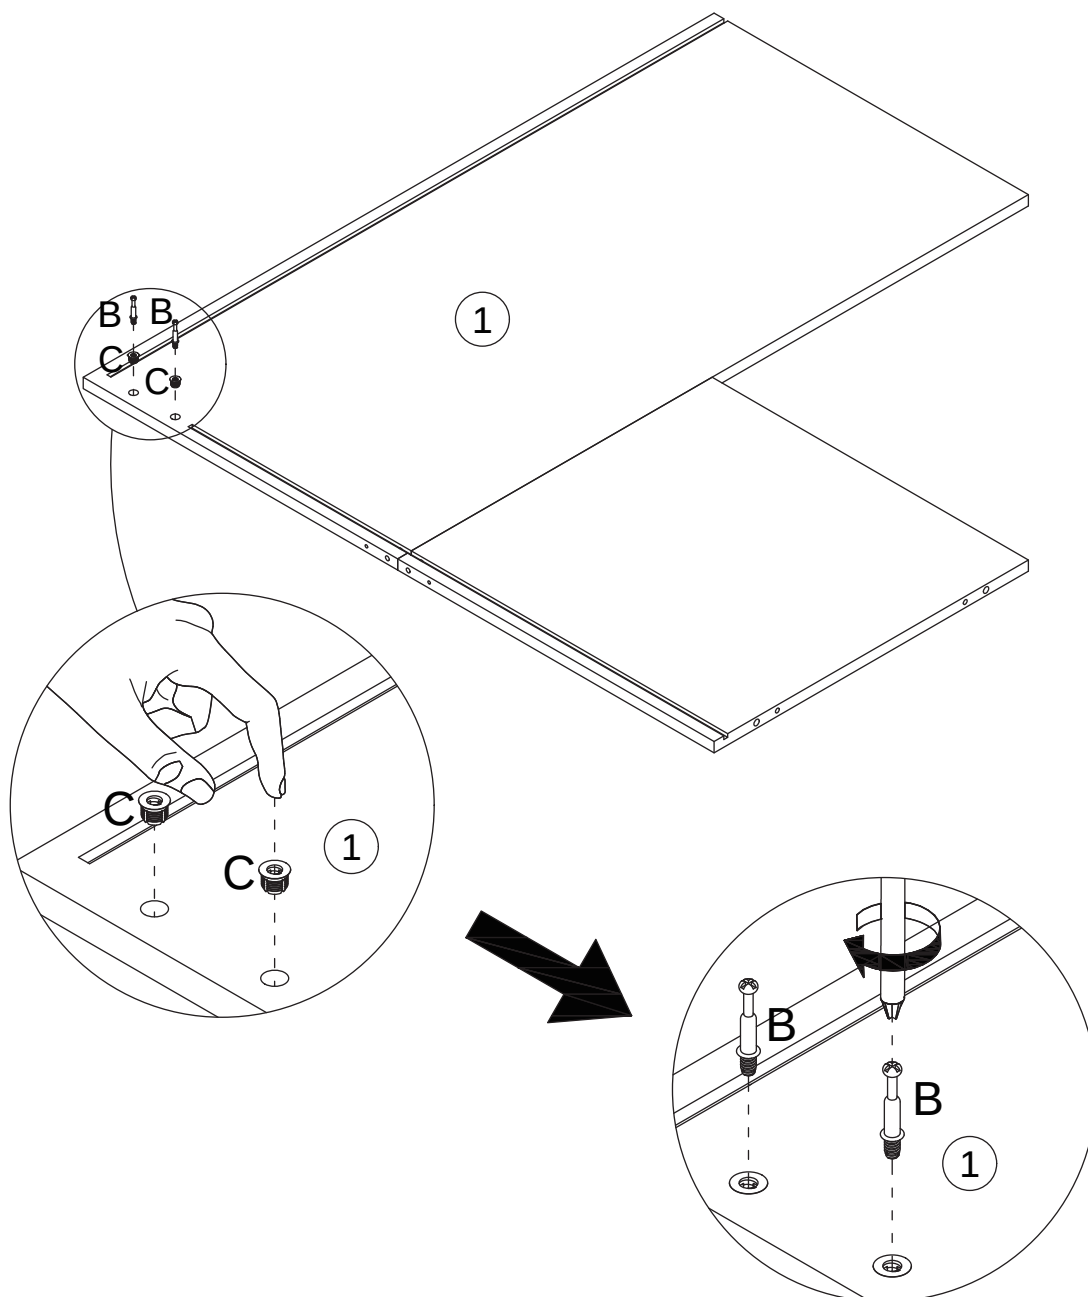


4

E x 2



CRF0840A




CRF0630A




CRF0840A

Connect panel 6 to panel 5 using wooden dowel (E).

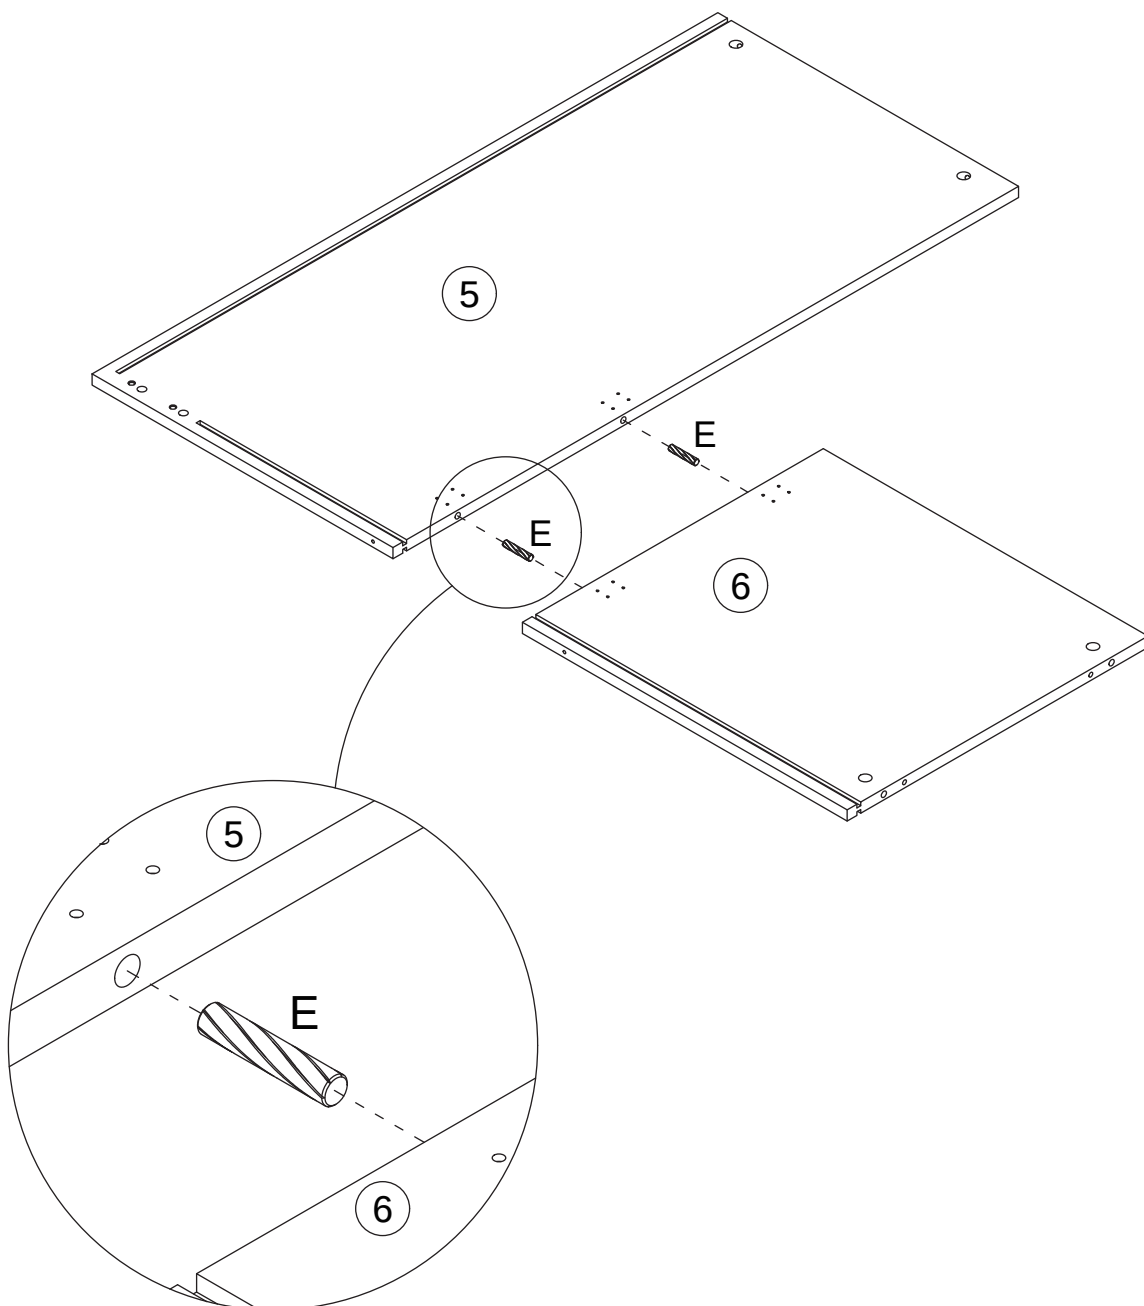

5


K x 2



L x 16



CRD3514A



L





CRD3514A

R




CRD0314A


Secure part (K) to panels 5 and 6 using screw (L).

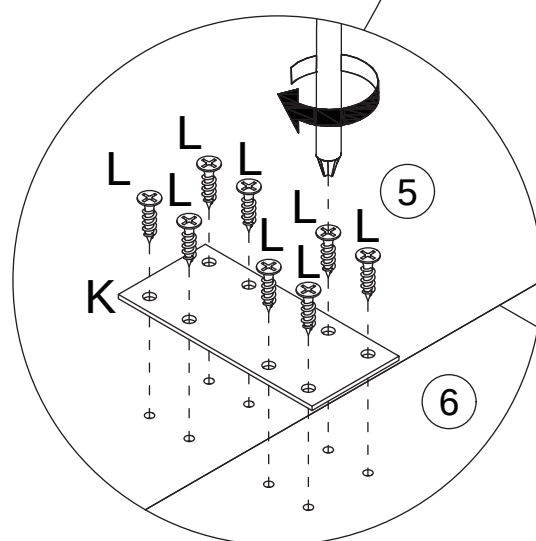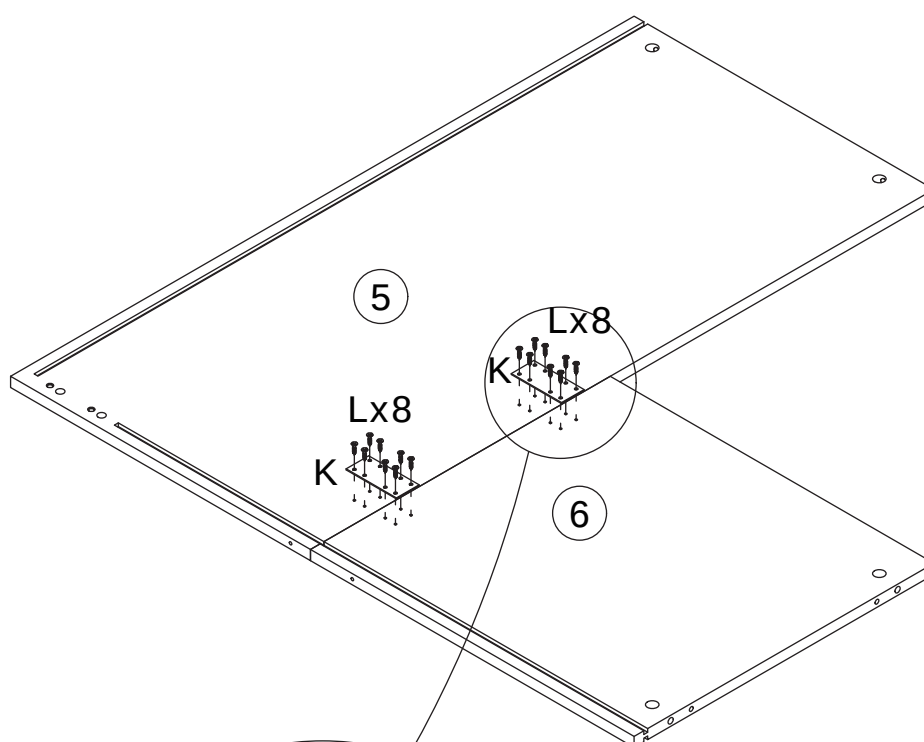




6

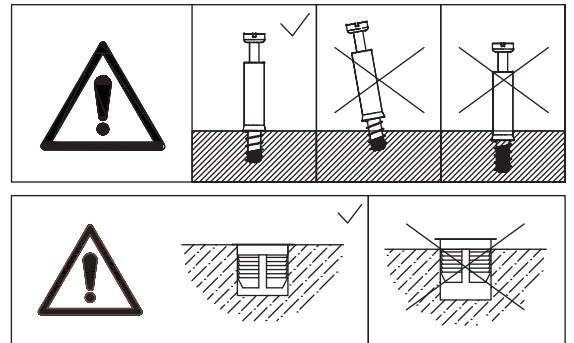


Install plug (C) onto panel 5, then screw self-tapping rod (B) into panel 5.

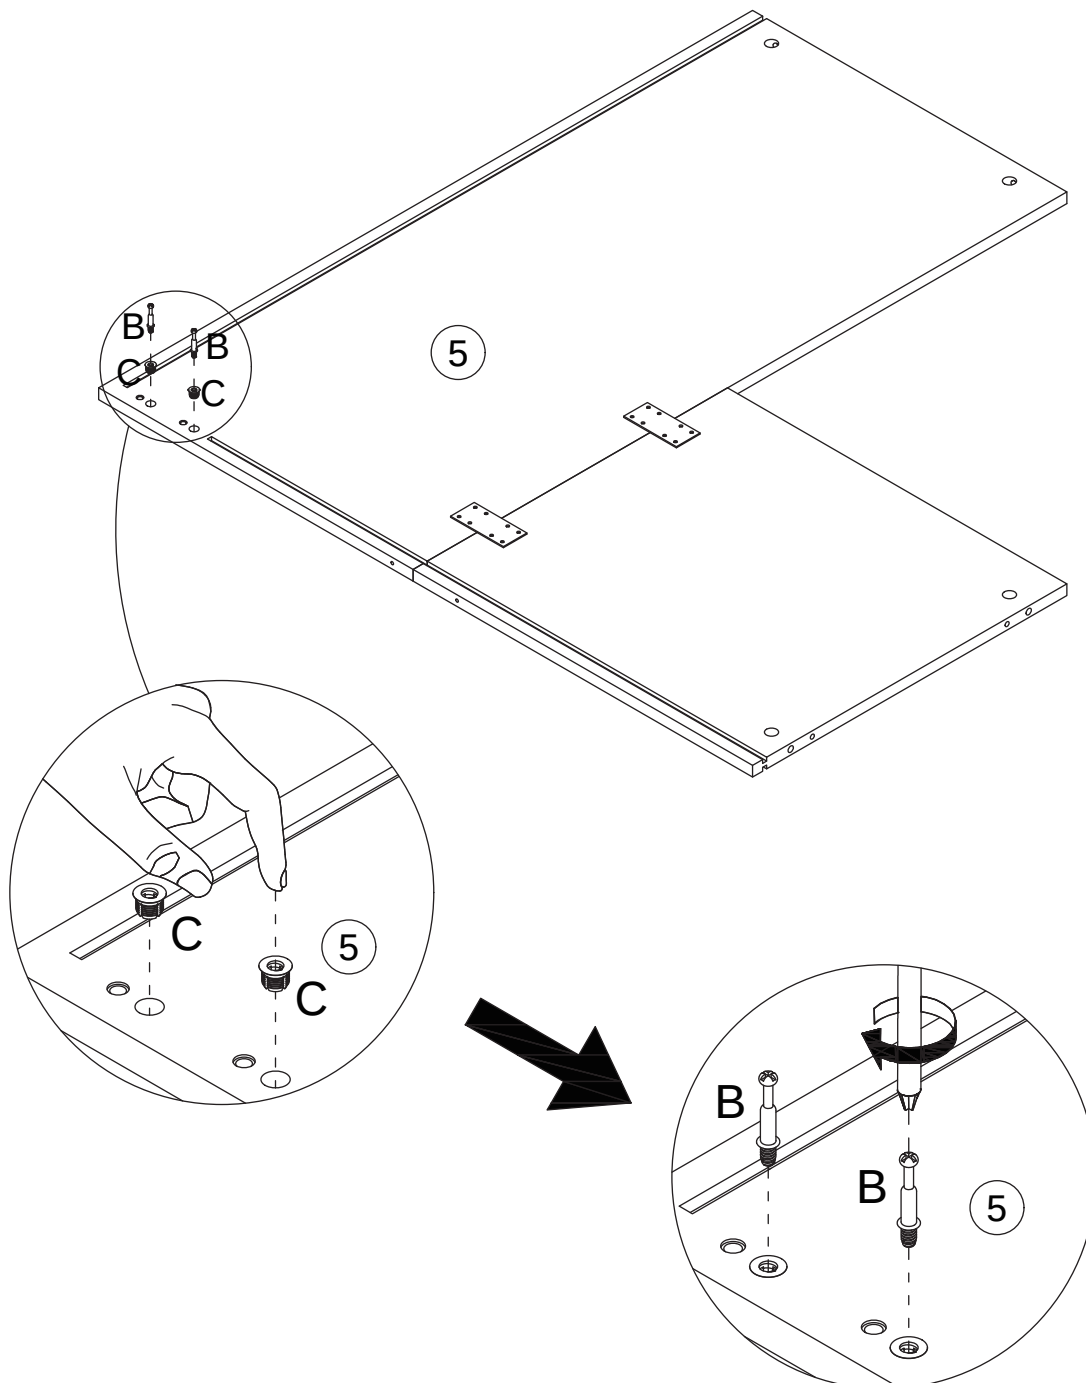

7

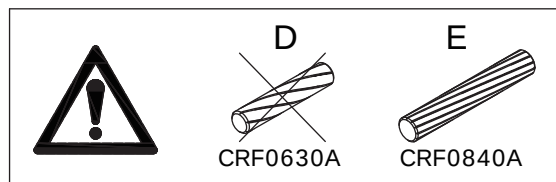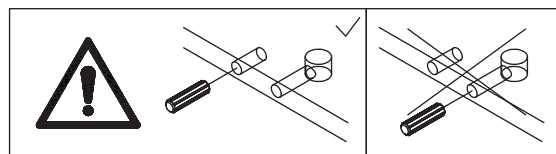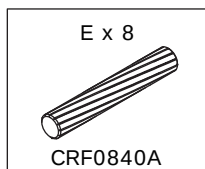


Connect panel 7 to panel 8 using wooden dowel (E).

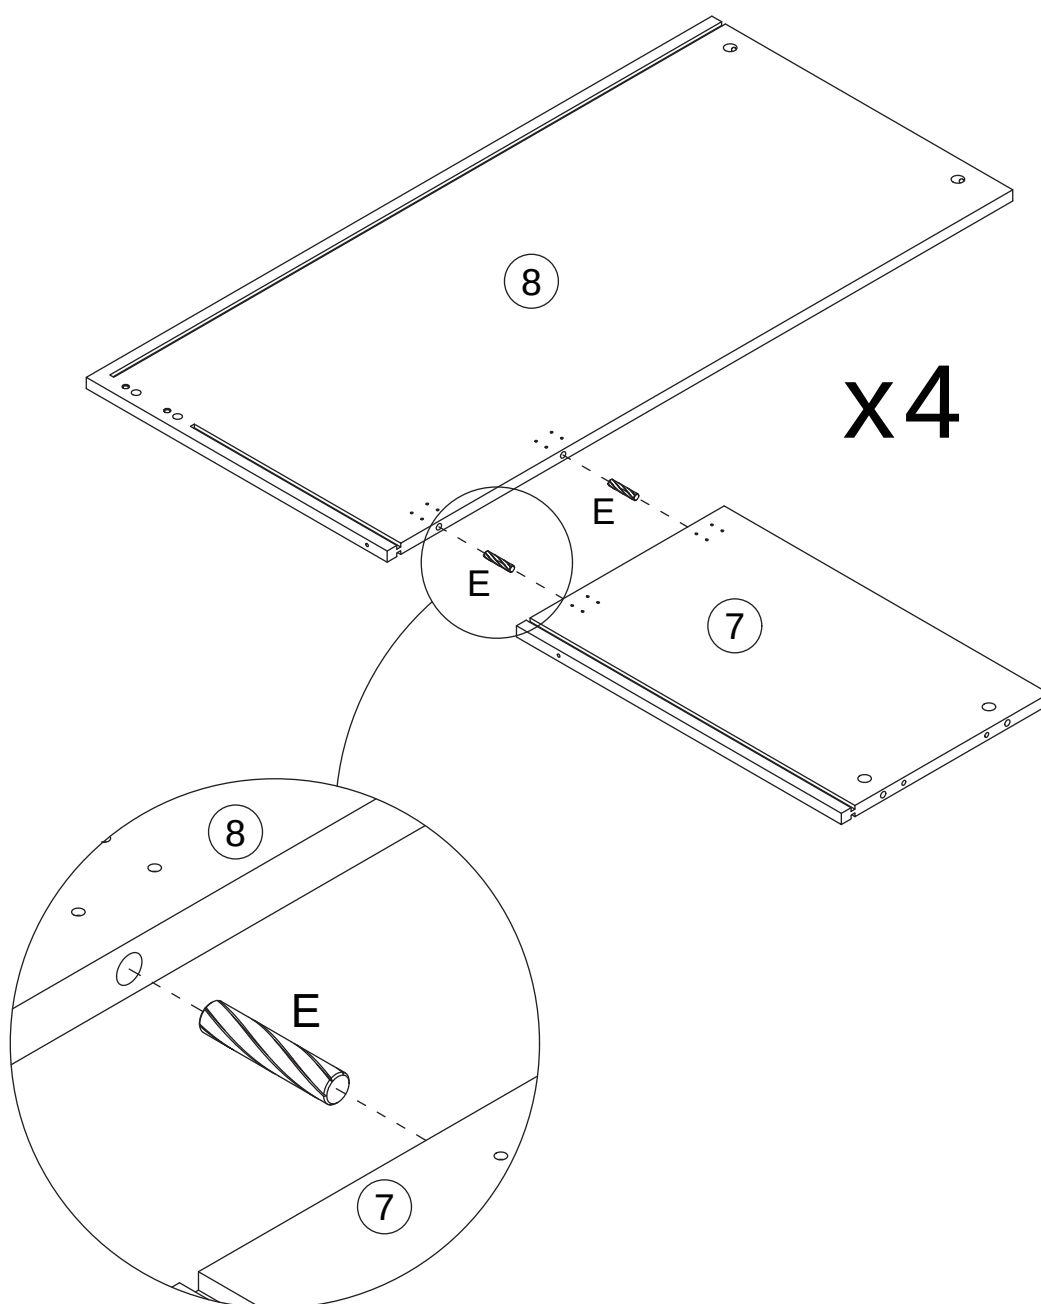

8


K x 8



L x 64



CRD3514A



L





CRD3514A

R





CRD0314A


Secure part (K) to panels 7 and 8 using screw (L).

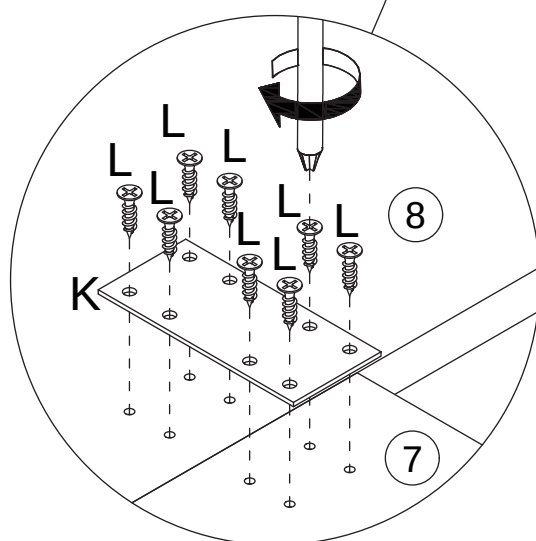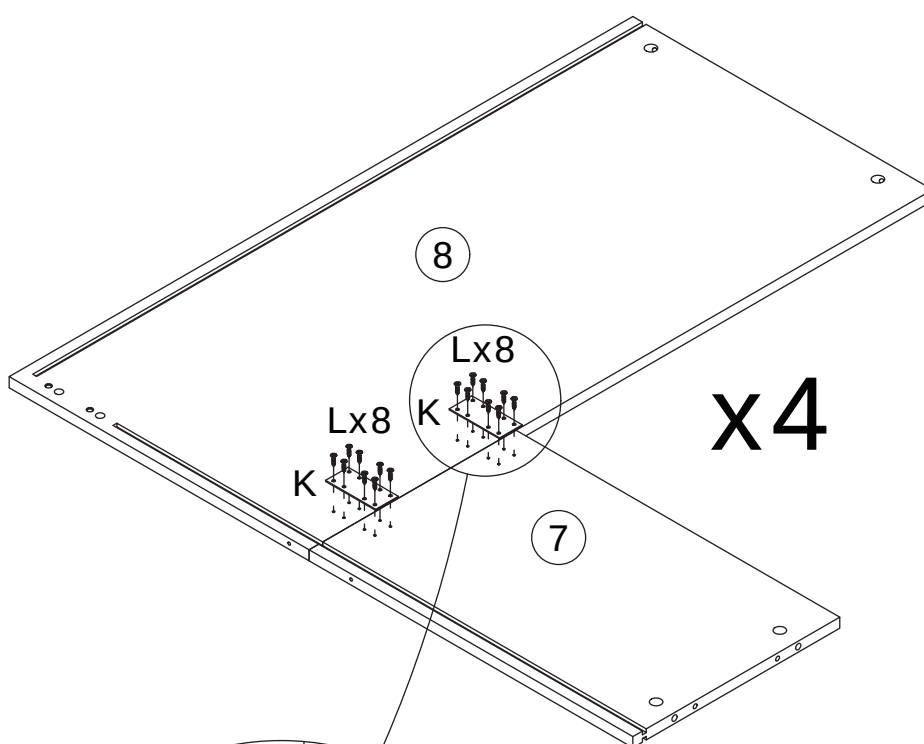




9

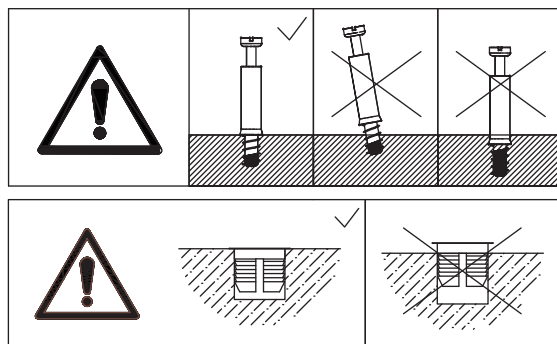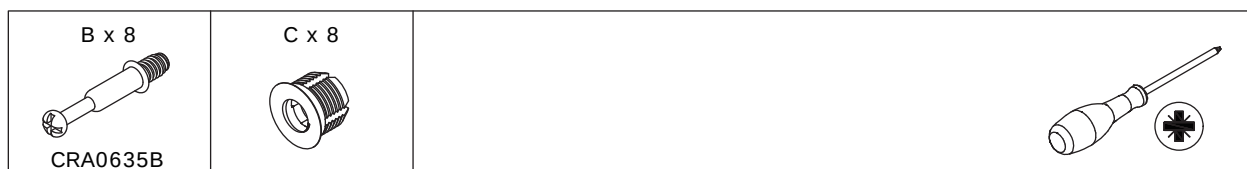


Install plug (C) onto panel 8, then screw self-tapping rod (B) into panel 8.

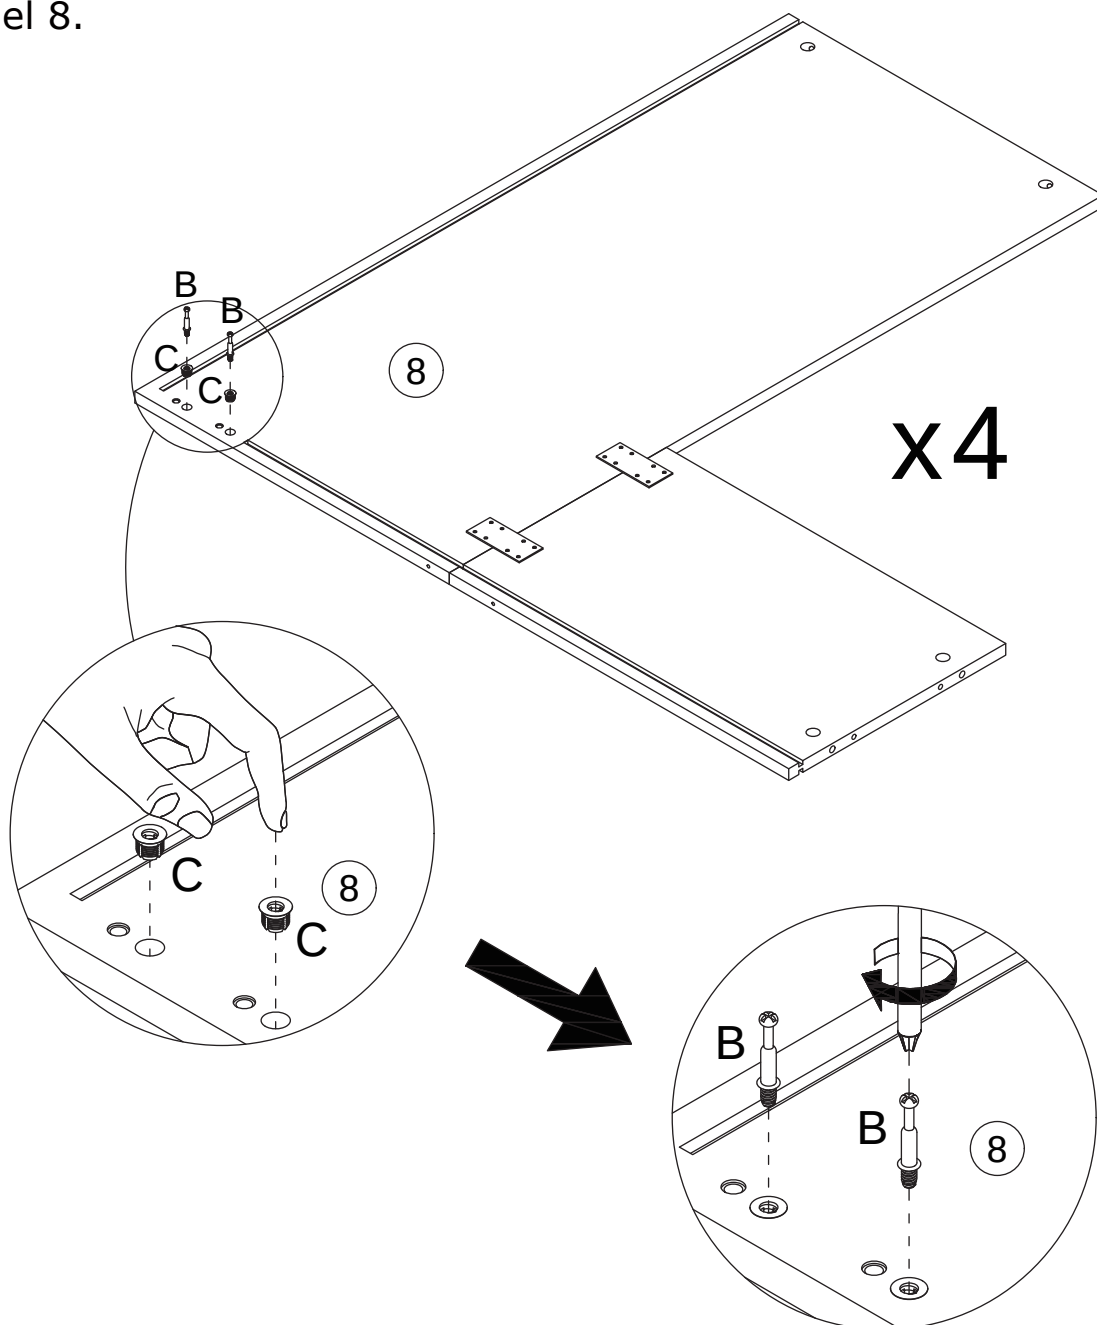


10

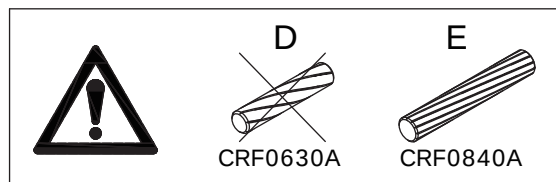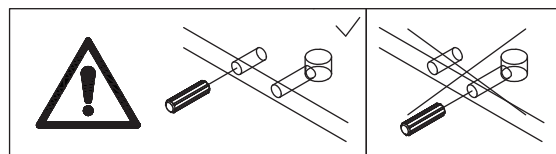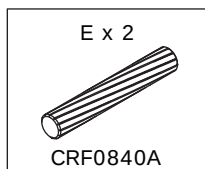


Connect panel 10 to panel 9 using wooden dowel (E).

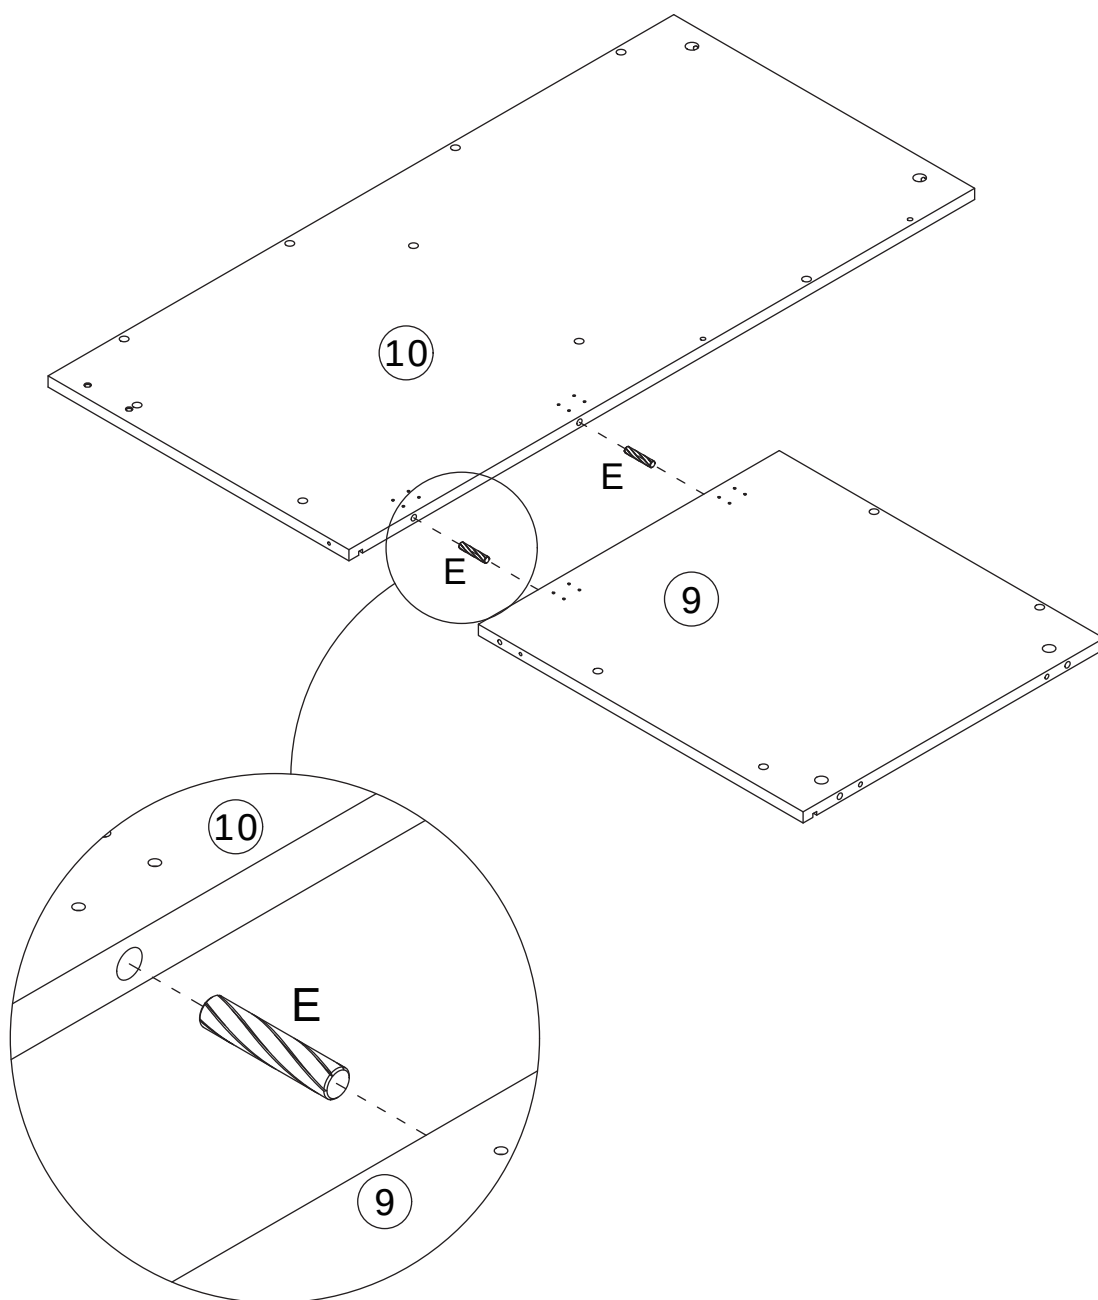

11

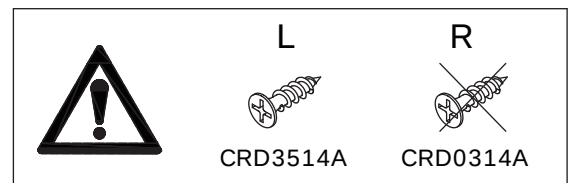


Secure part (K) to panels 9 and 10 using screw (L).

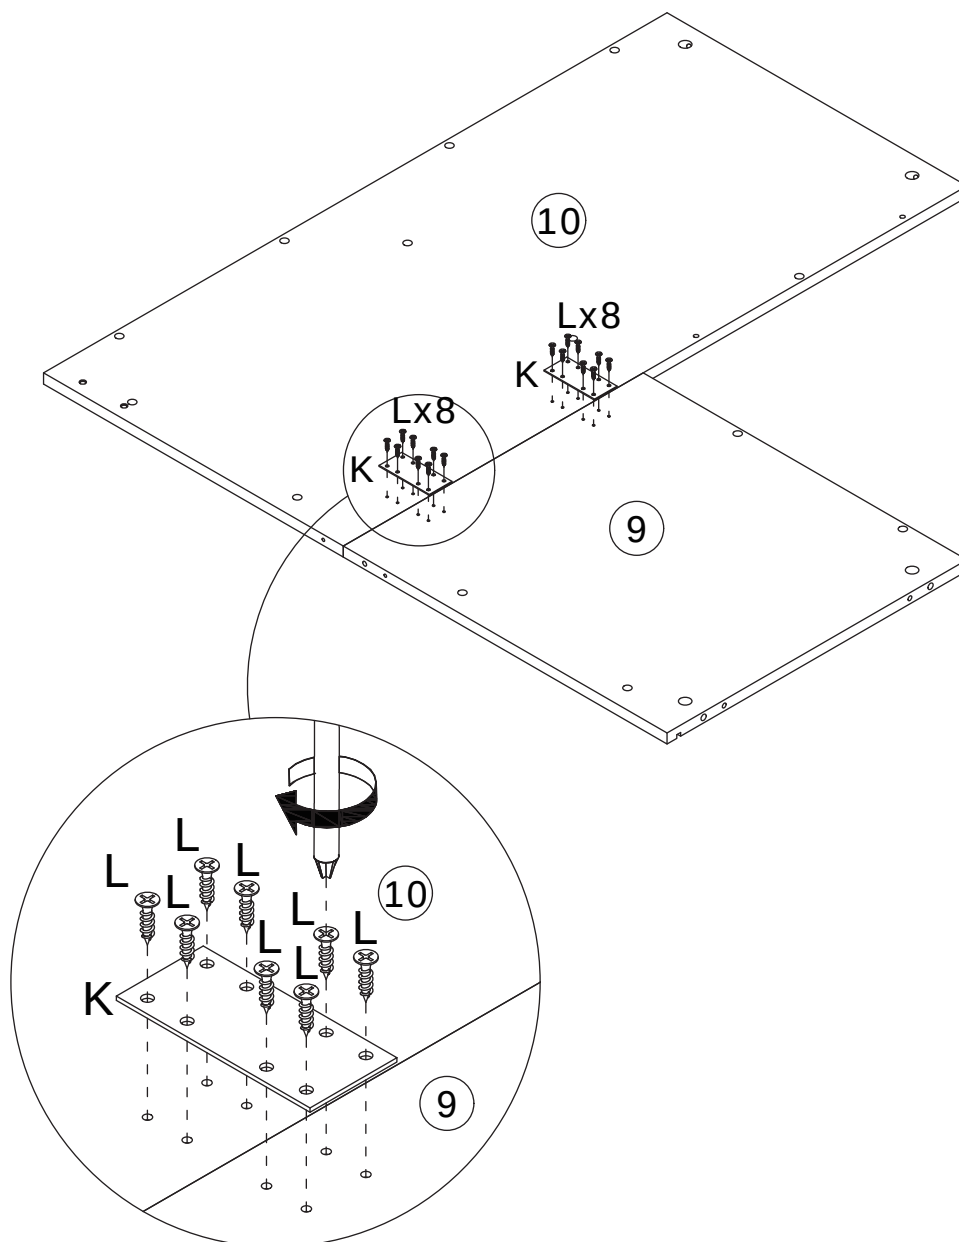




12

B x 13




CRA0635B



C x 13

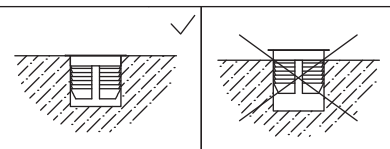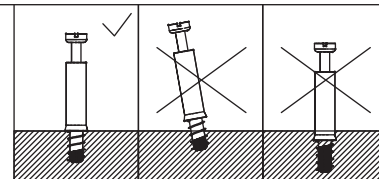


Install plug (C) onto panels 9 and 10, then screw self-tapping rod (B) into panels 9 and 10.

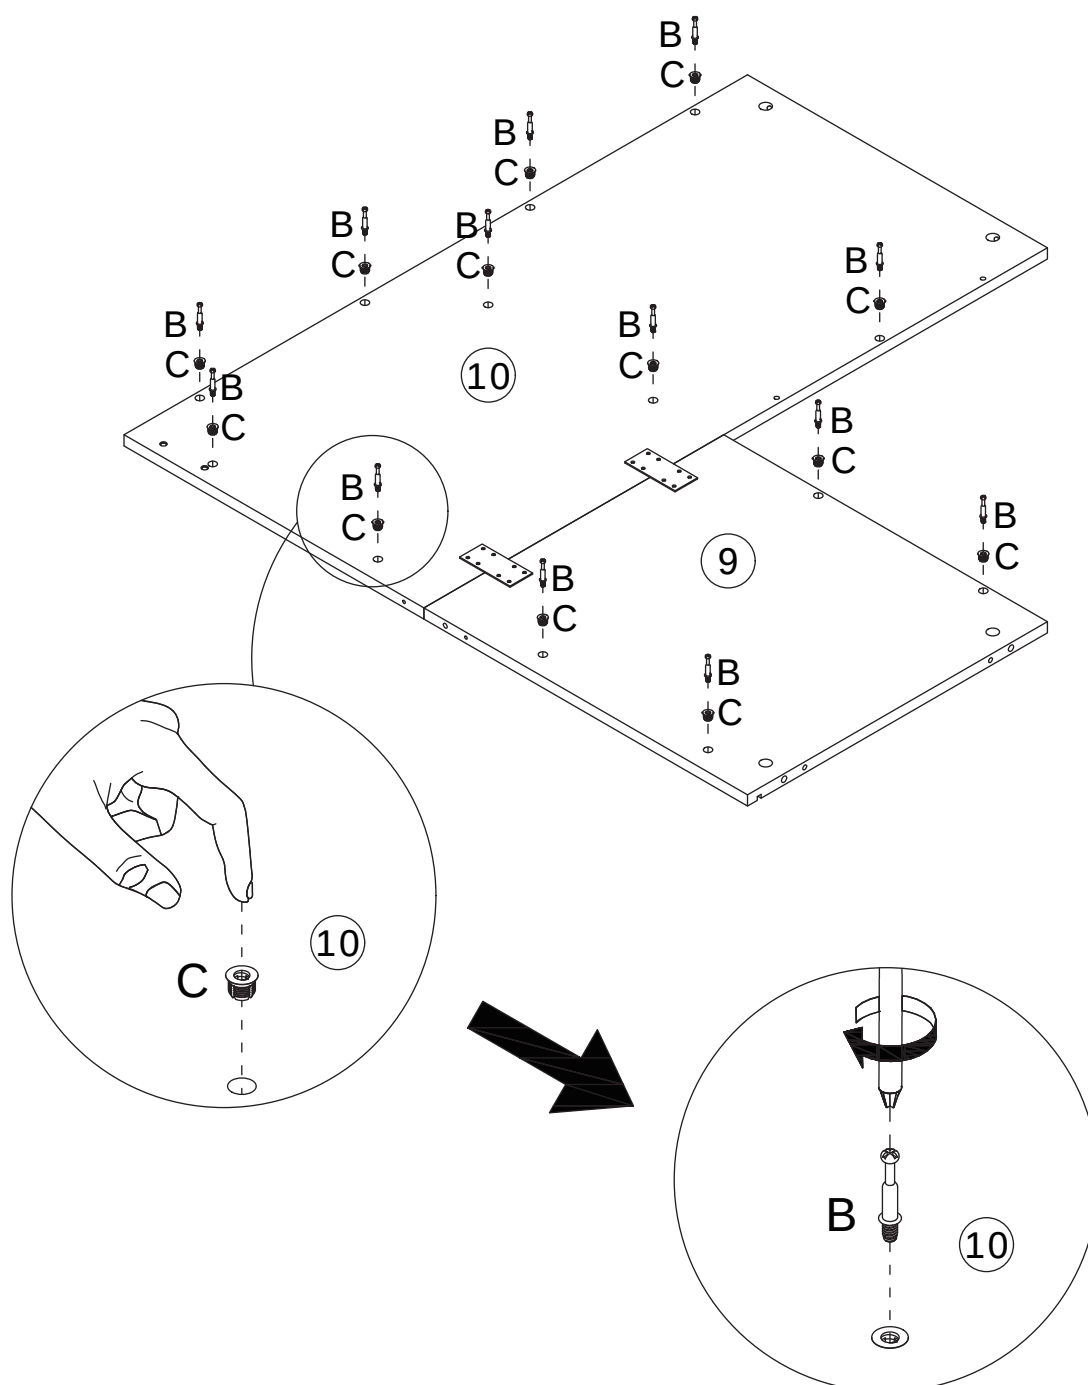

13

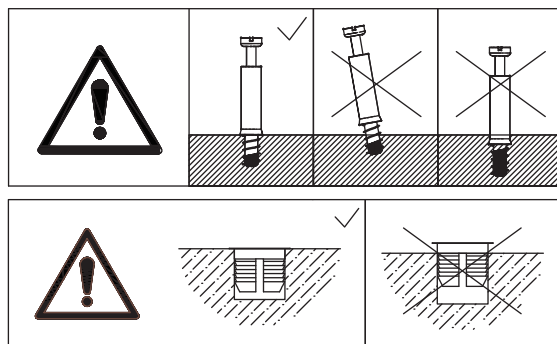
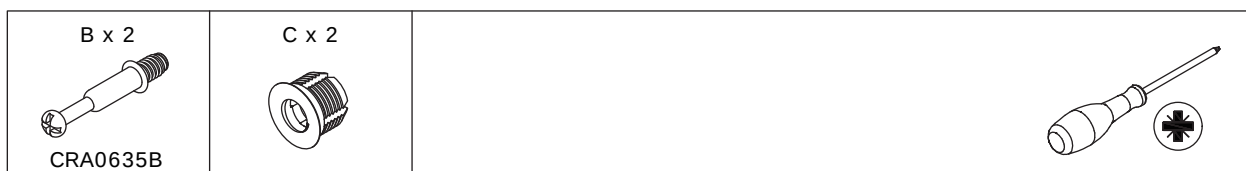


Install plug (C) onto panel 18, then screw self-tapping rod (B) into panel 18.

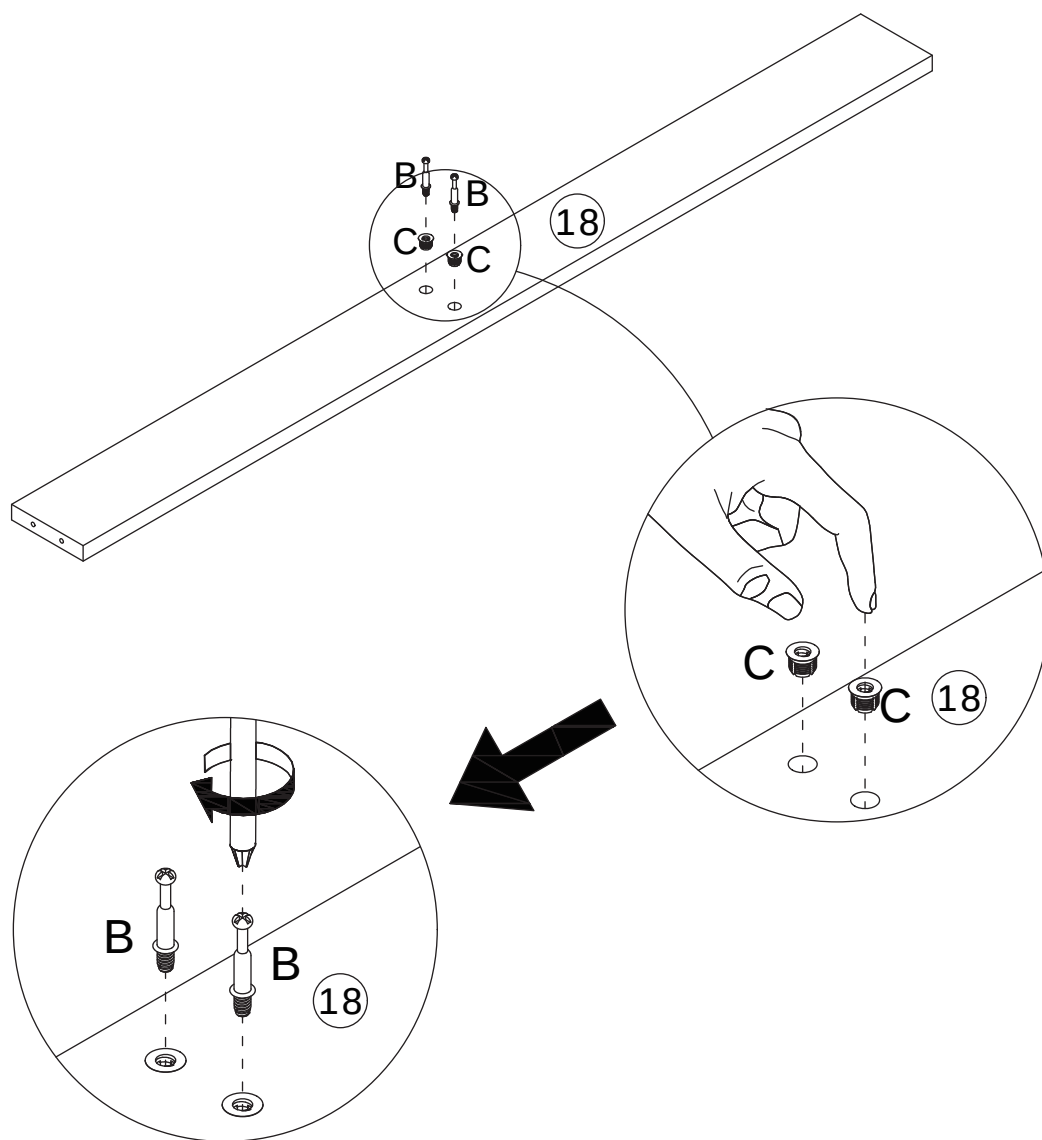


14



A x 2
CRB1595A

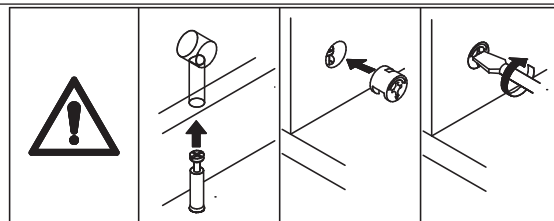




Connect panel 17 to panel 18, then tighten by turning cam lock (A) clockwise.

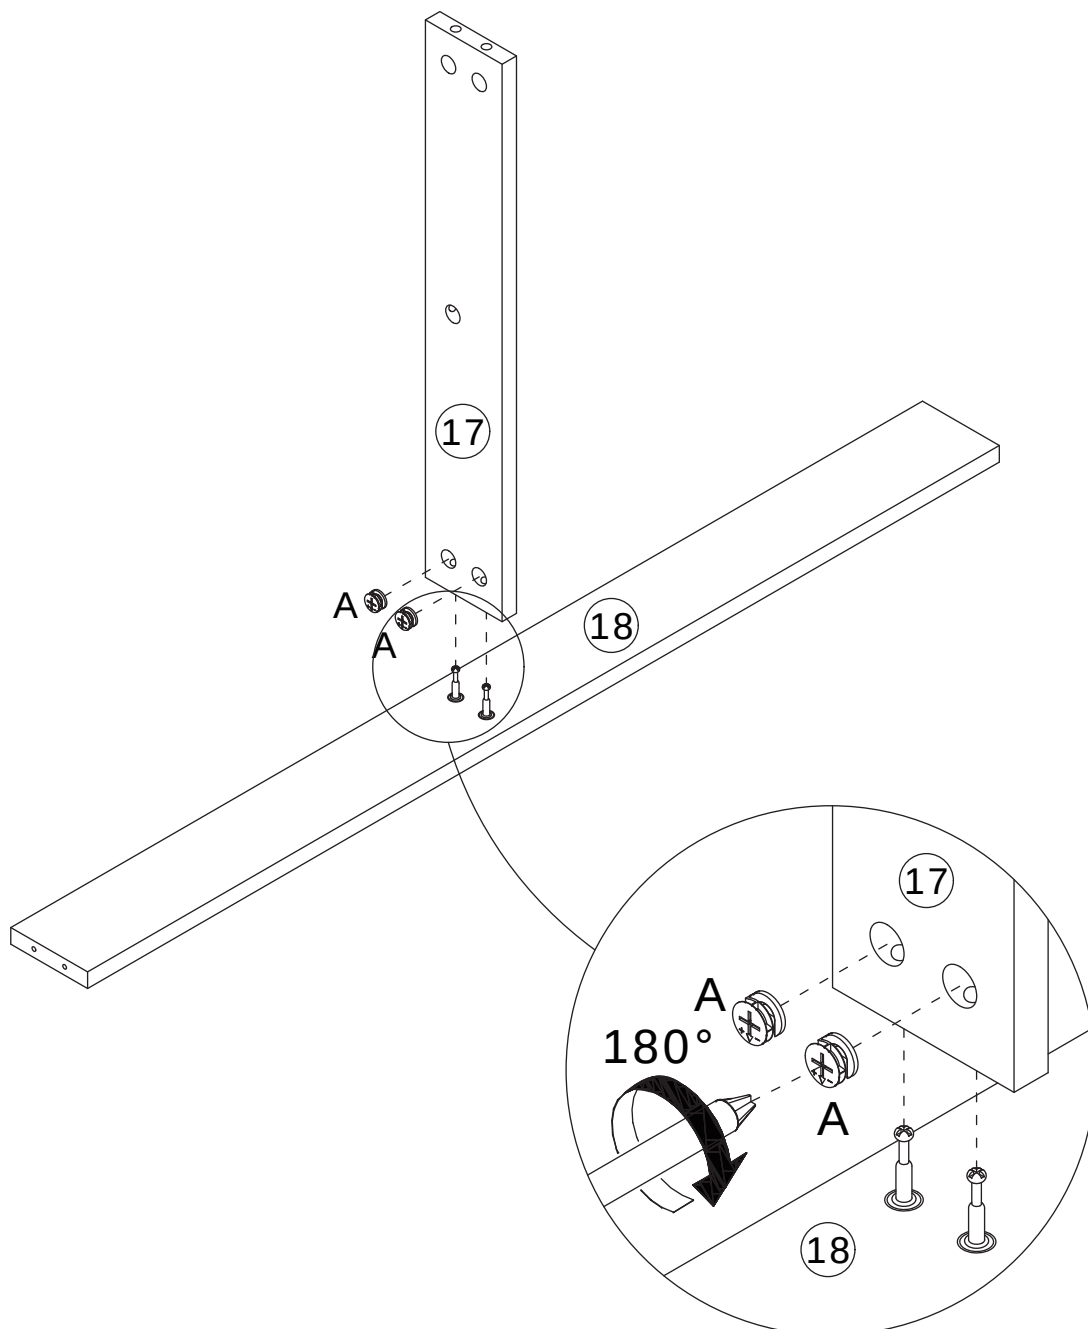



15

A x 9  CRB1595A	D x 2  CRF0630A	
--	--	---


Insert wooden dowel (E) into panel 17.
Connect panels 17, 18, and 20 to panels 9
and 10, then tighten by turning cam lock (A)
clockwise.

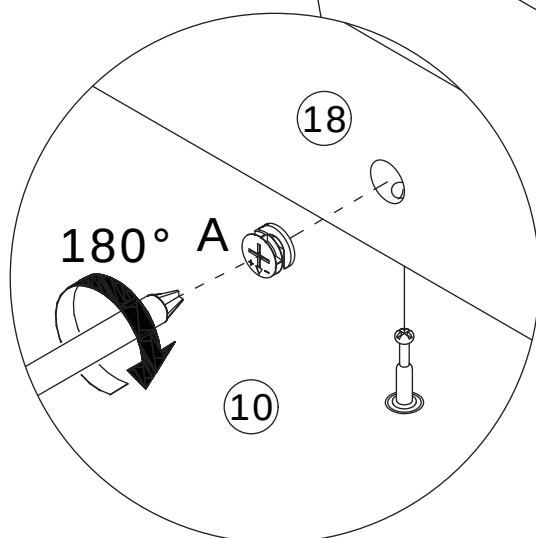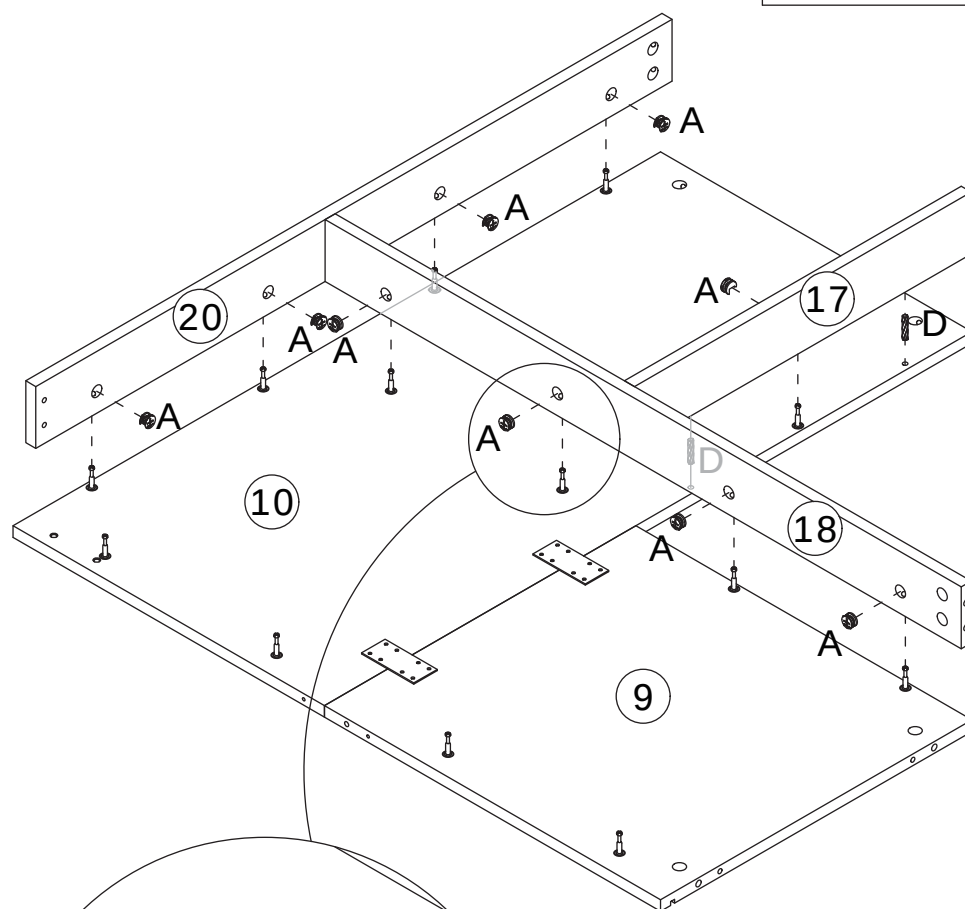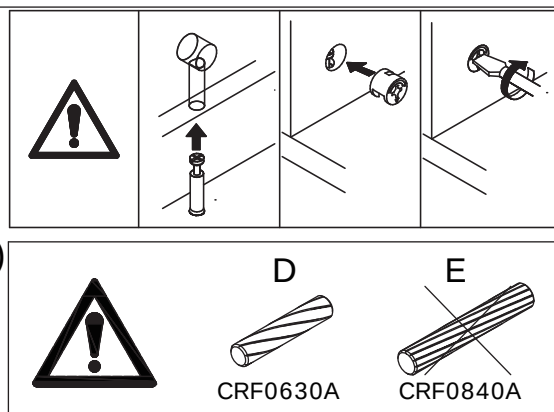

16


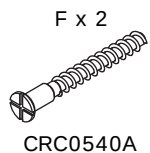


Secure panel 20 to panel 18 using screw (F).

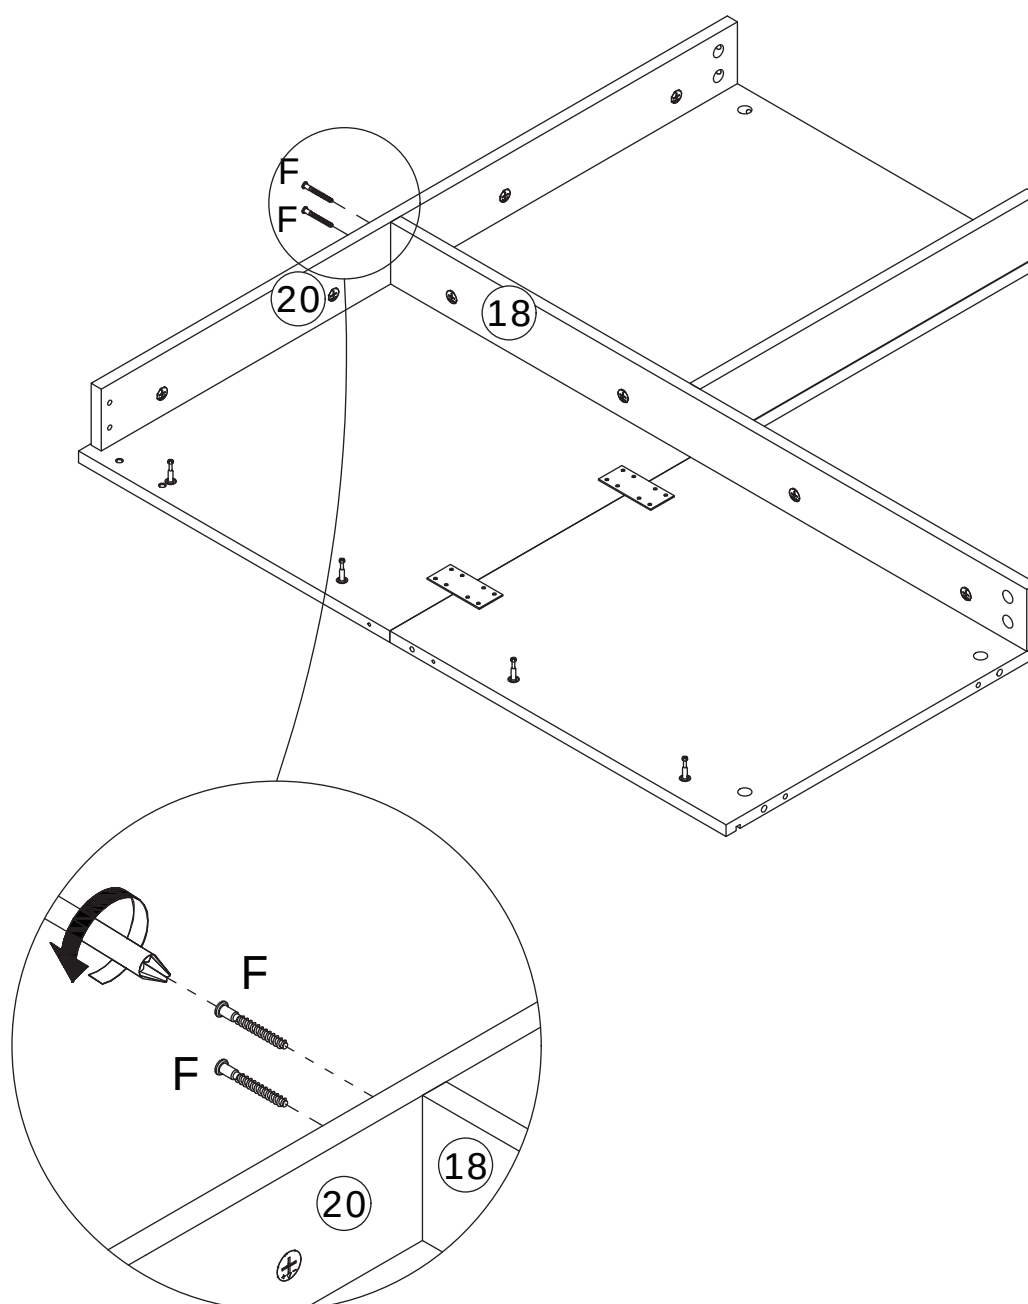


17




A x 2
CRB1595A

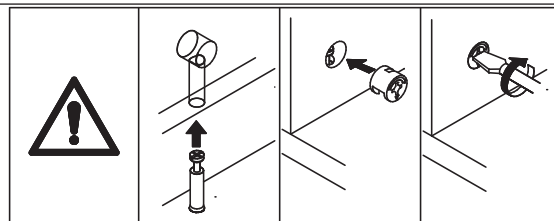

Connect panel 12 to panel 1, then tighten by turning cam lock (A) clockwise.

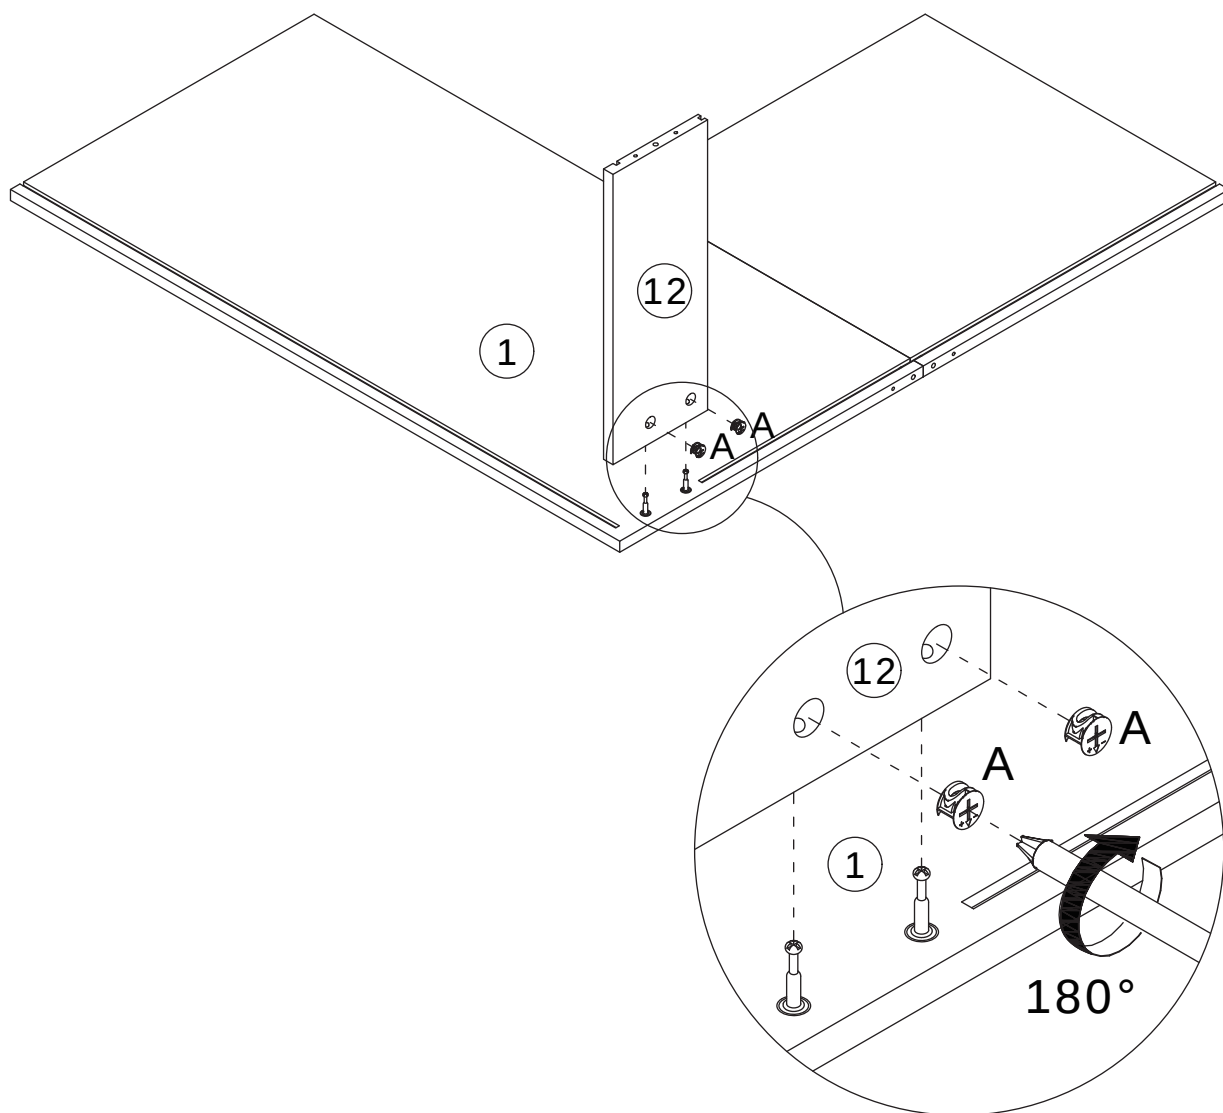

18

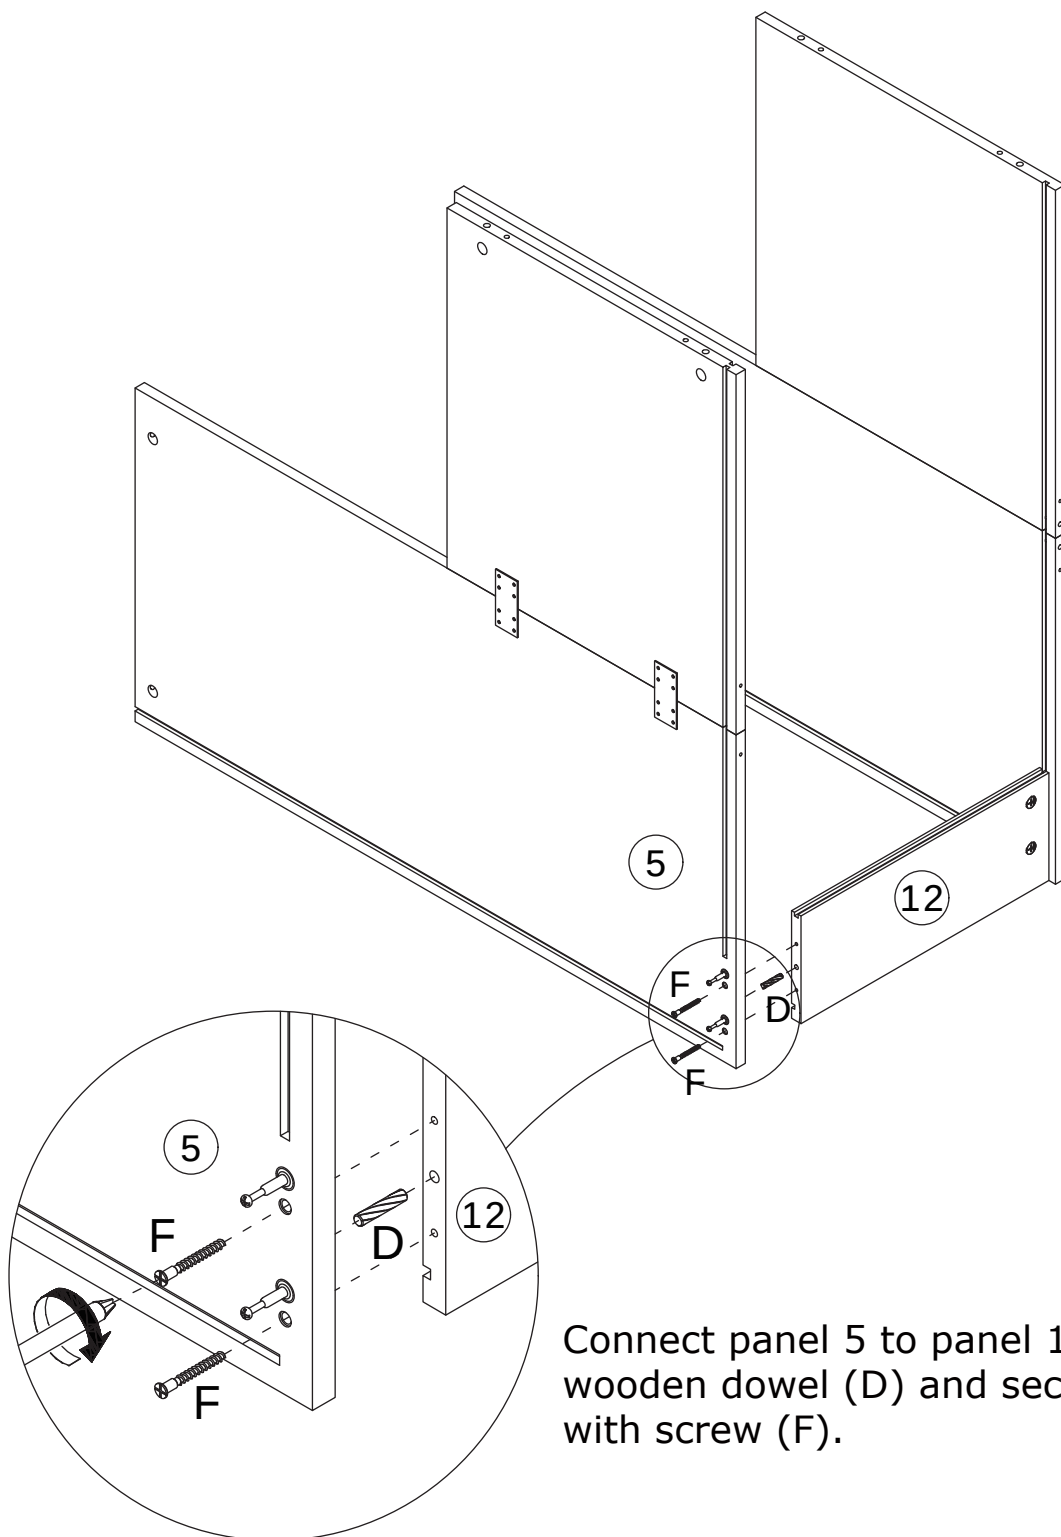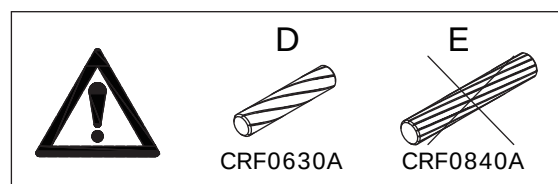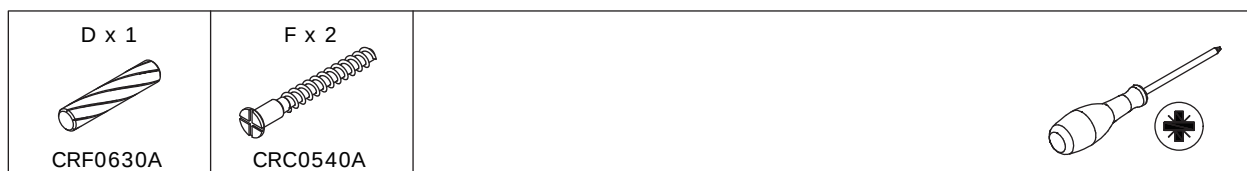



Connect panel 5 to panel 12 using wooden dowel (D) and secure them with screw (F).

19


A x 2





CRB1595A

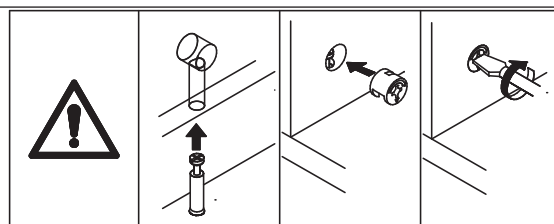


Connect panel 11 to panel 5, then tighten by turning cam lock (A) clockwise.

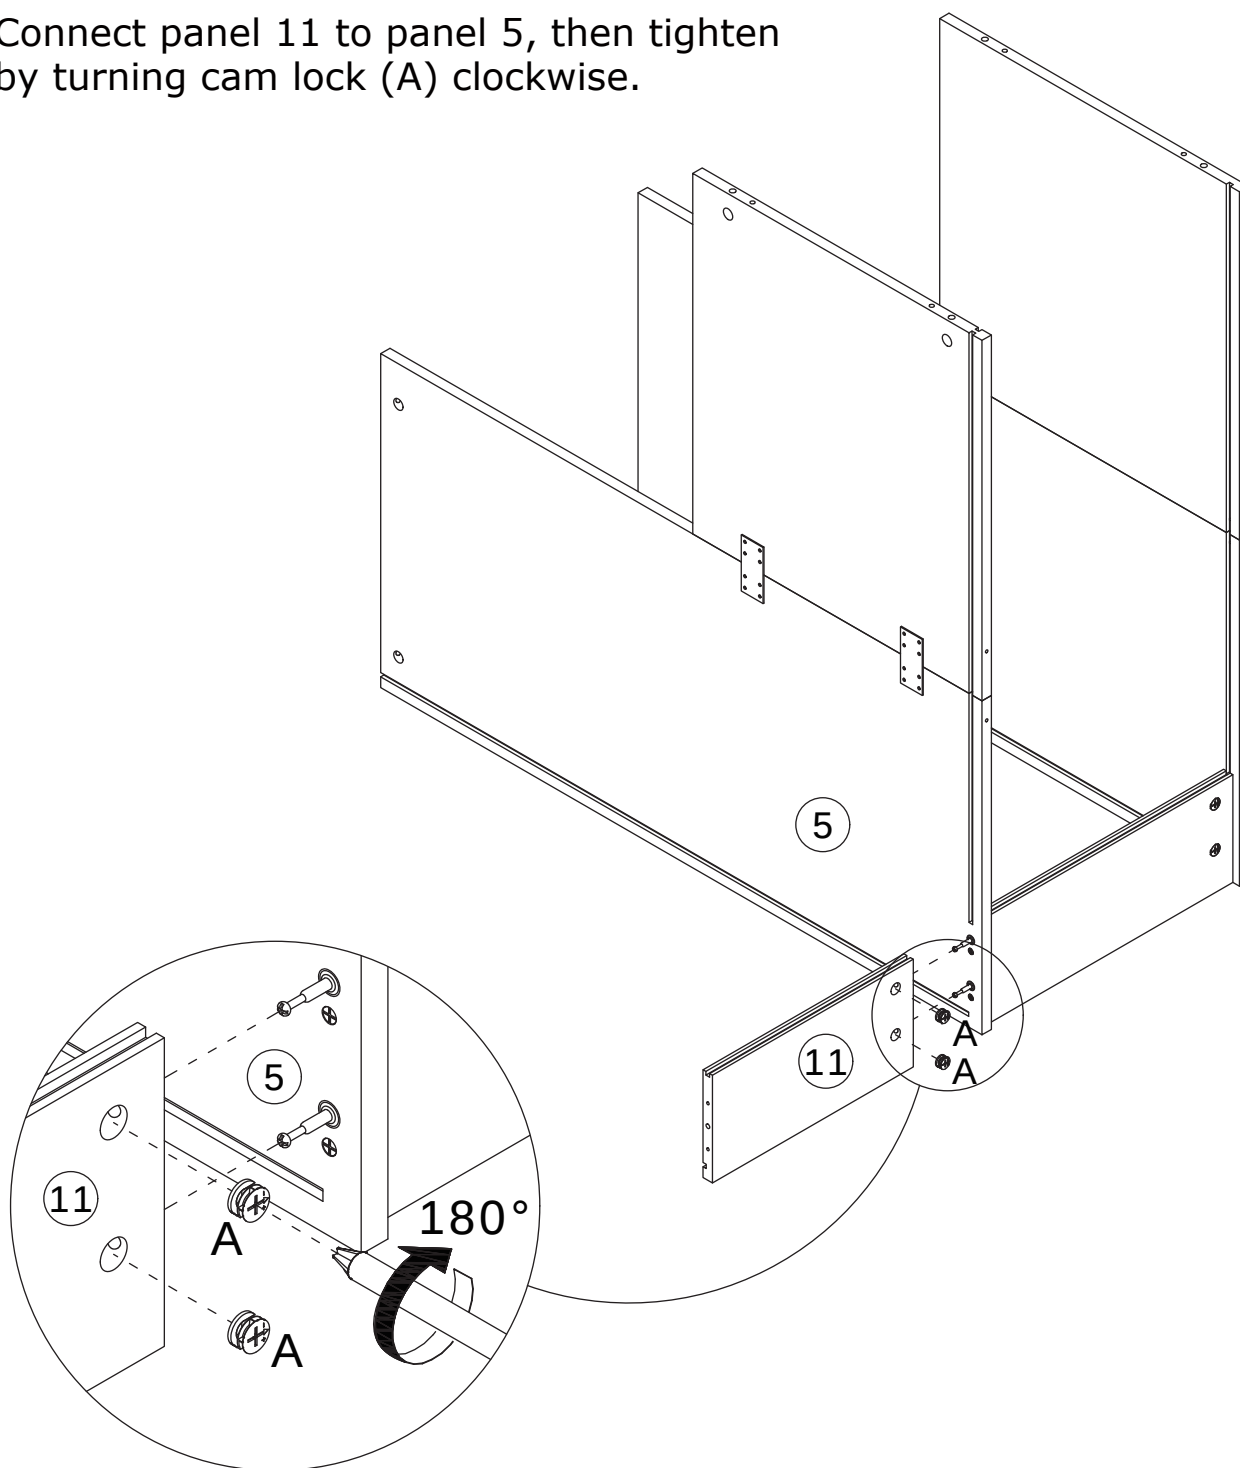

20

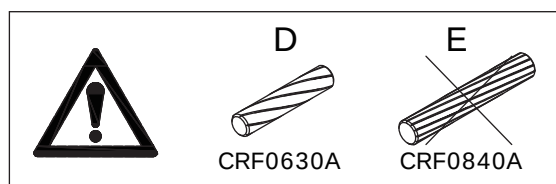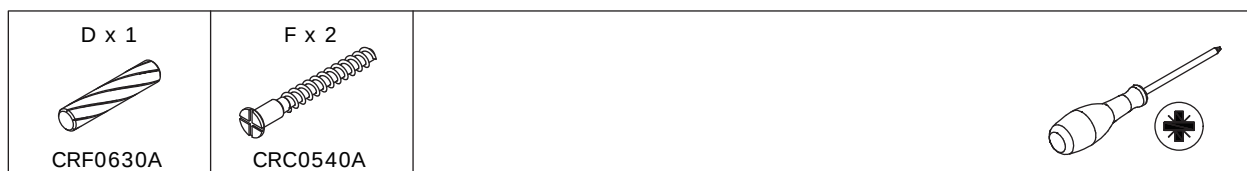

Connect panel 8 to panel 11 using wooden dowel (D) and secure them with screw (F).




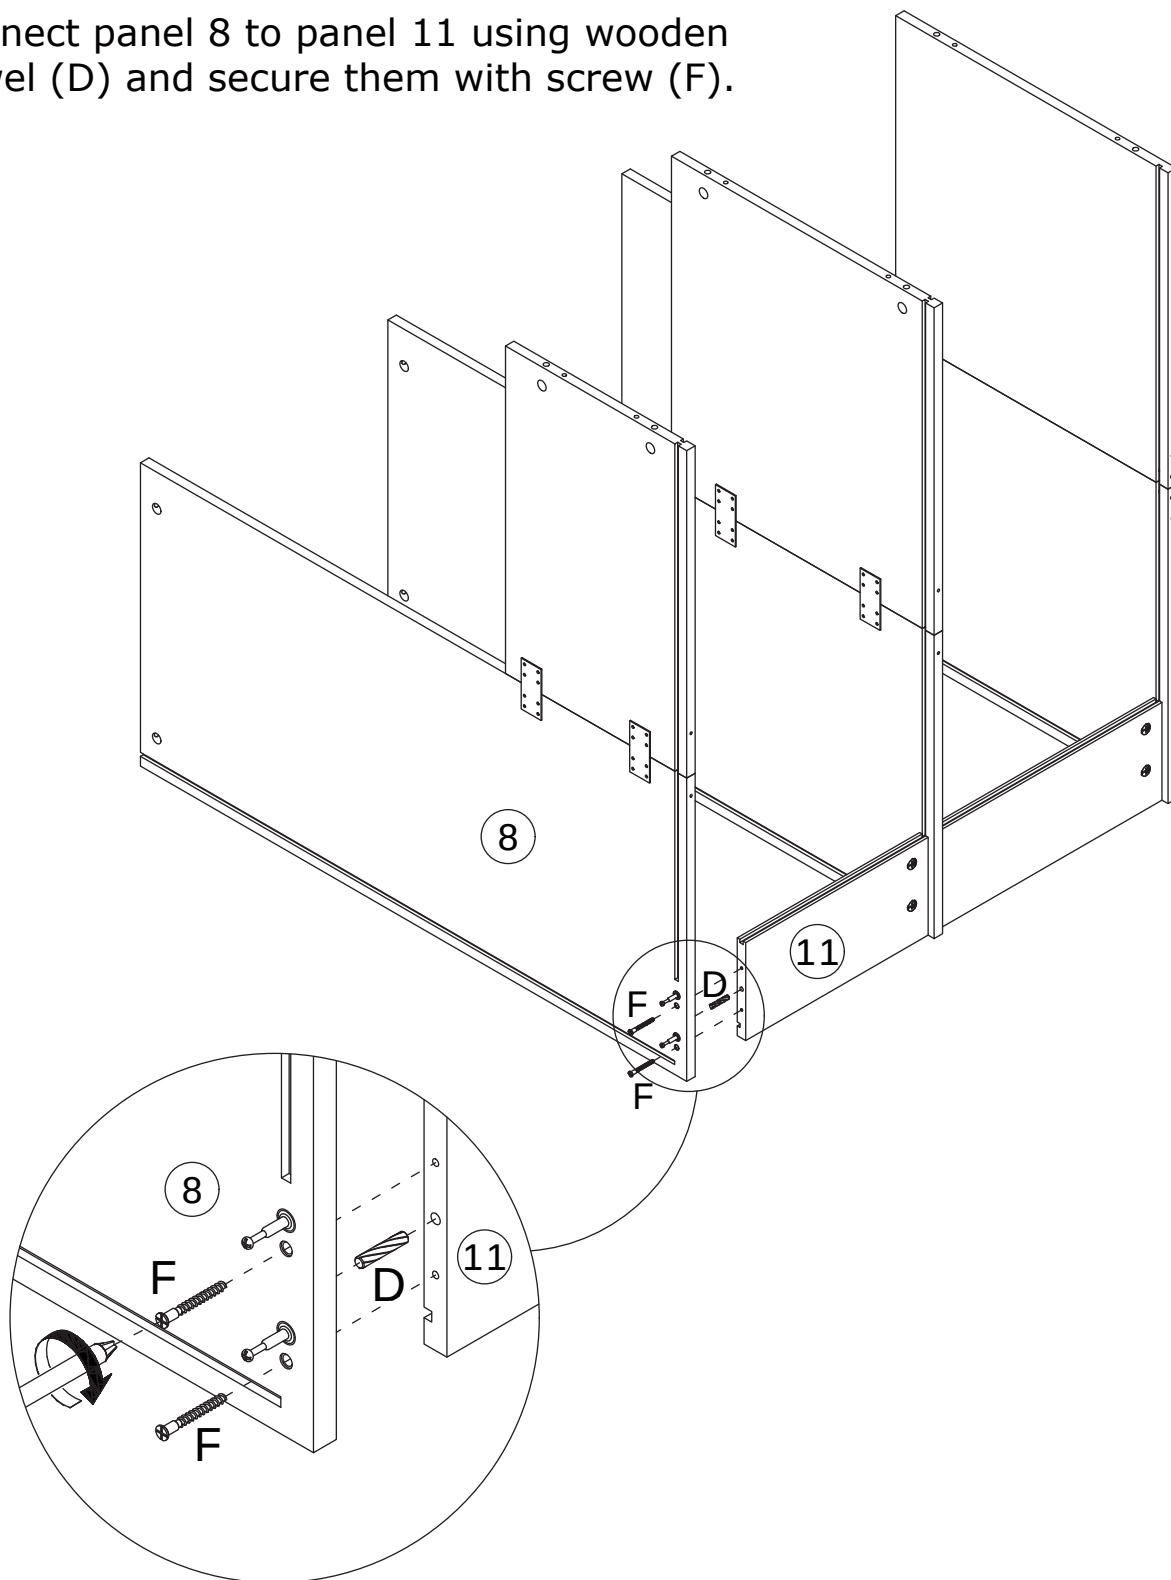


21



A x 2





CRB1595A

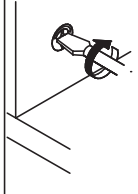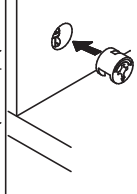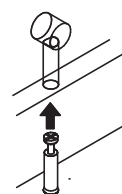


Connect panel 11 to panel 8, then tighten by turning cam lock (A) clockwise.

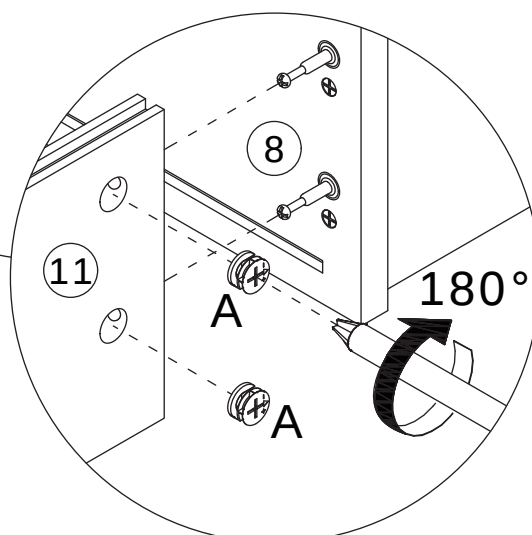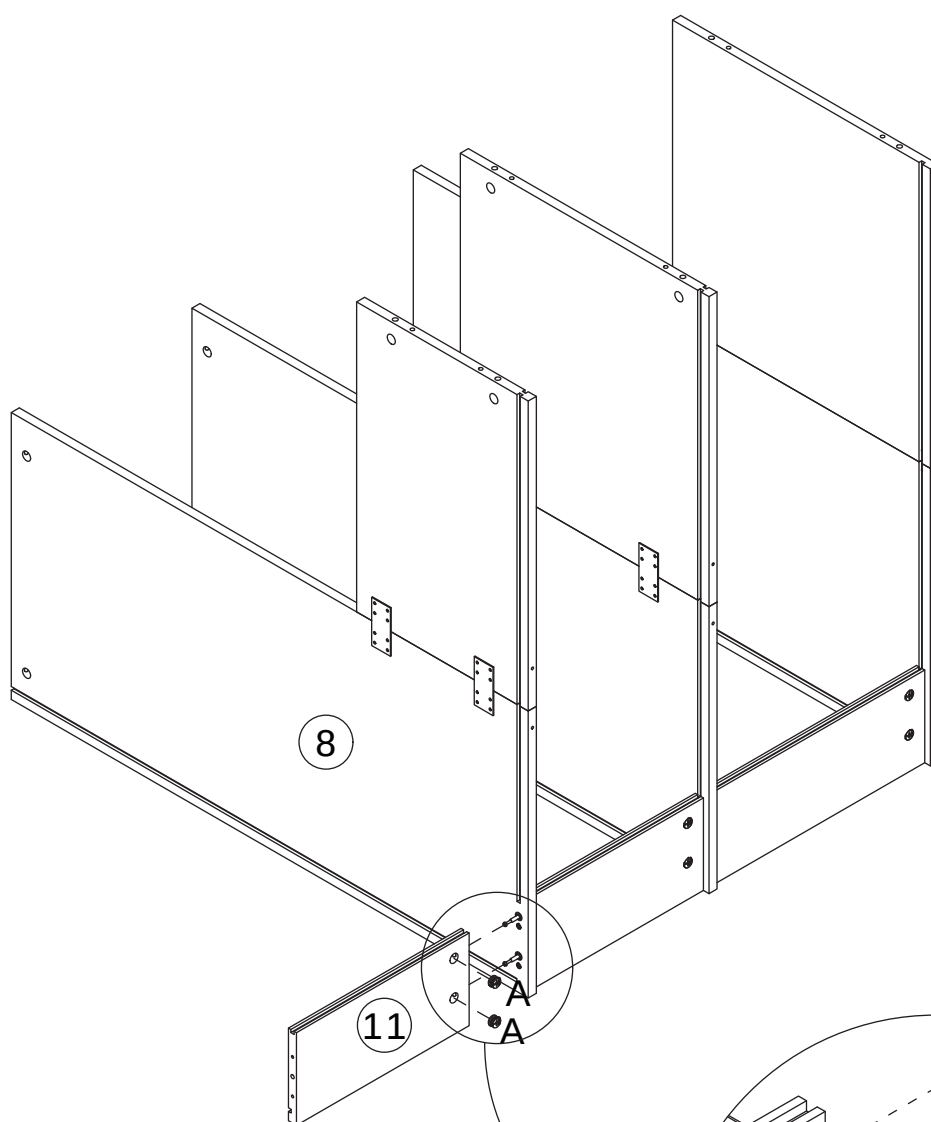

22

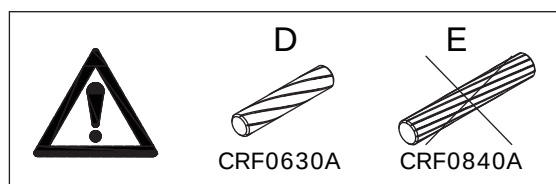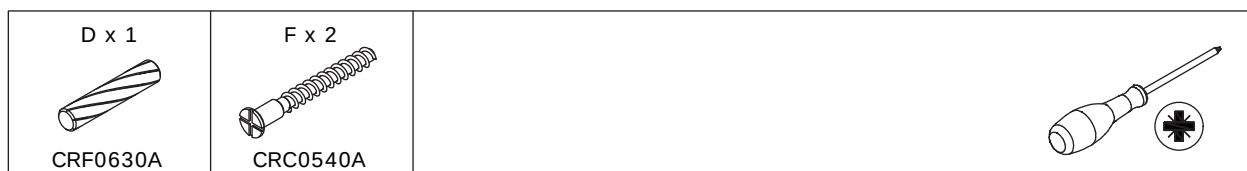

Connect panel 8 to panel 11 using wooden dowel (D) and secure them with screw (F).




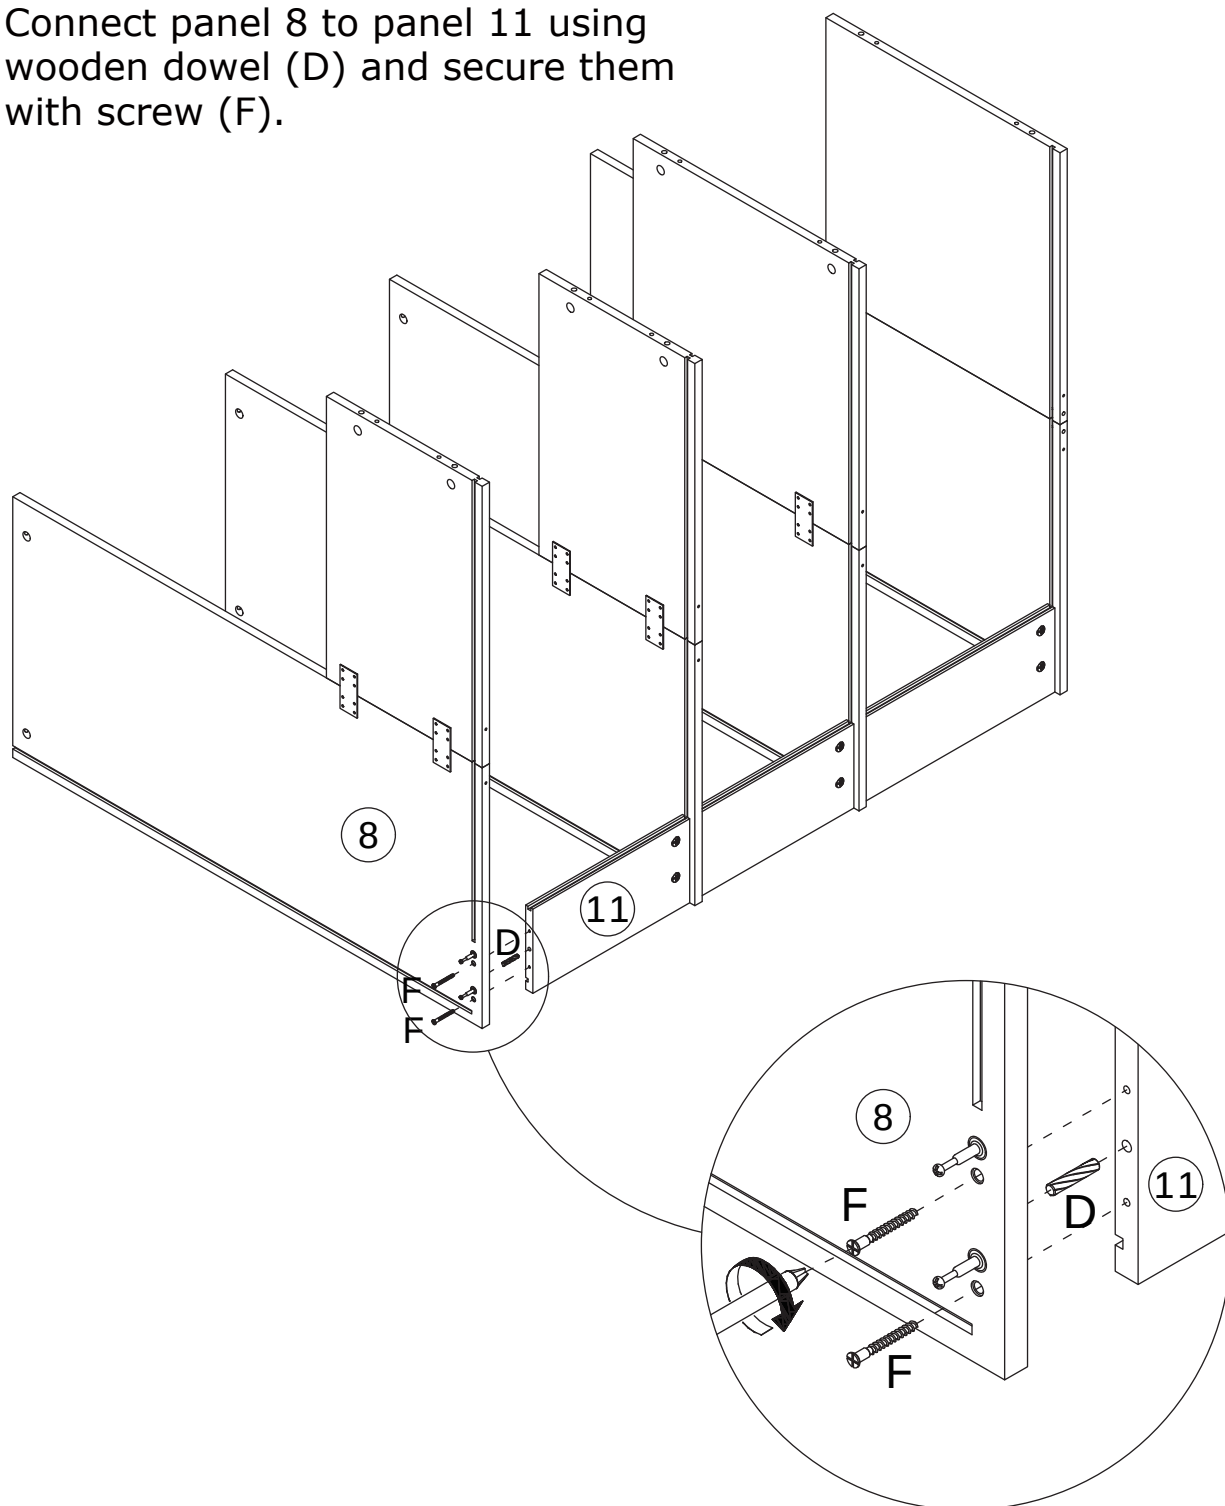


23



A x 2





CRB1595A

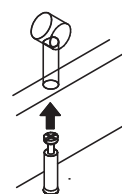


Connect panel 11 to panel 8, then tighten by turning cam lock (A) clockwise.

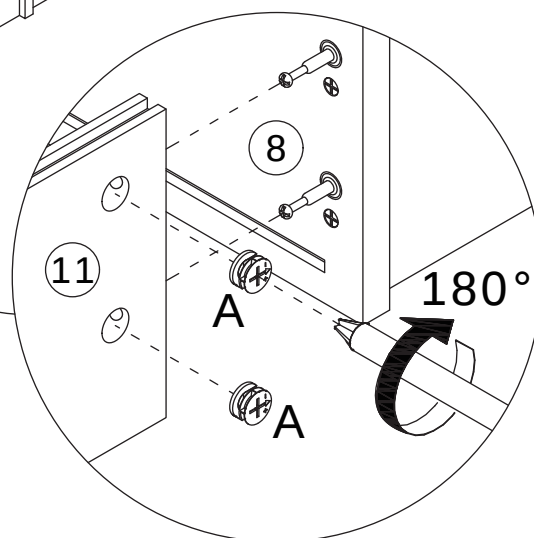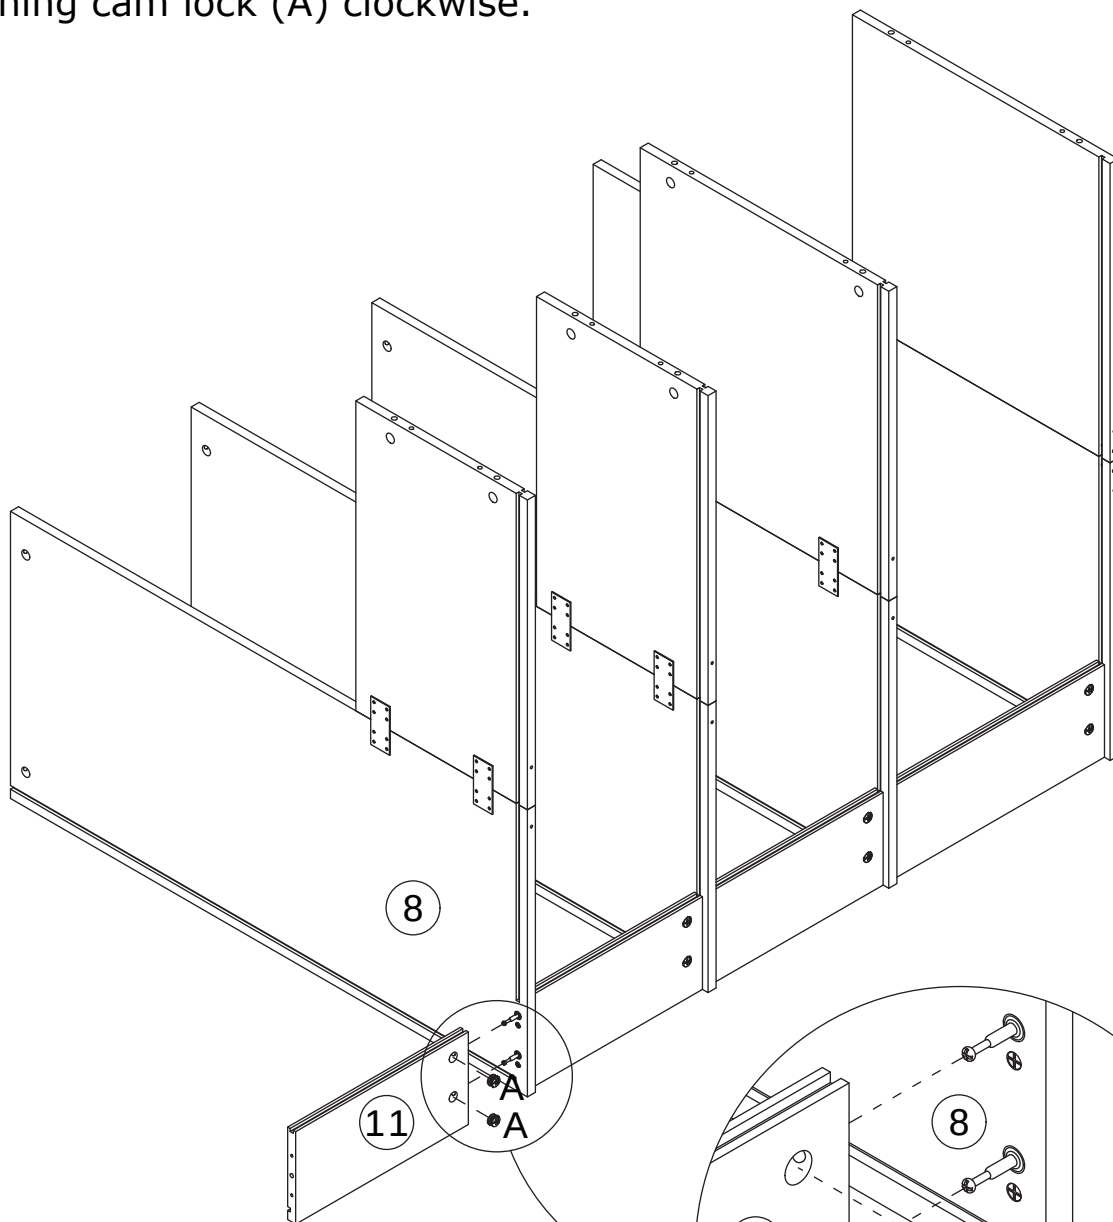

24

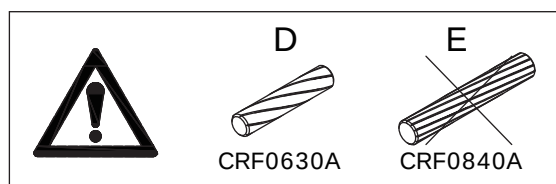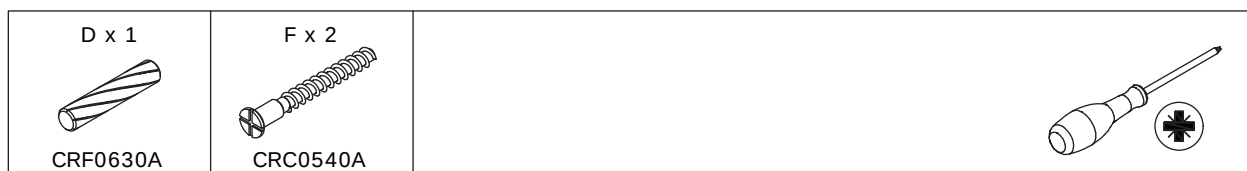

Connect panel 8 to panel 11 using wooden dowel (D) and secure them with screw (F).


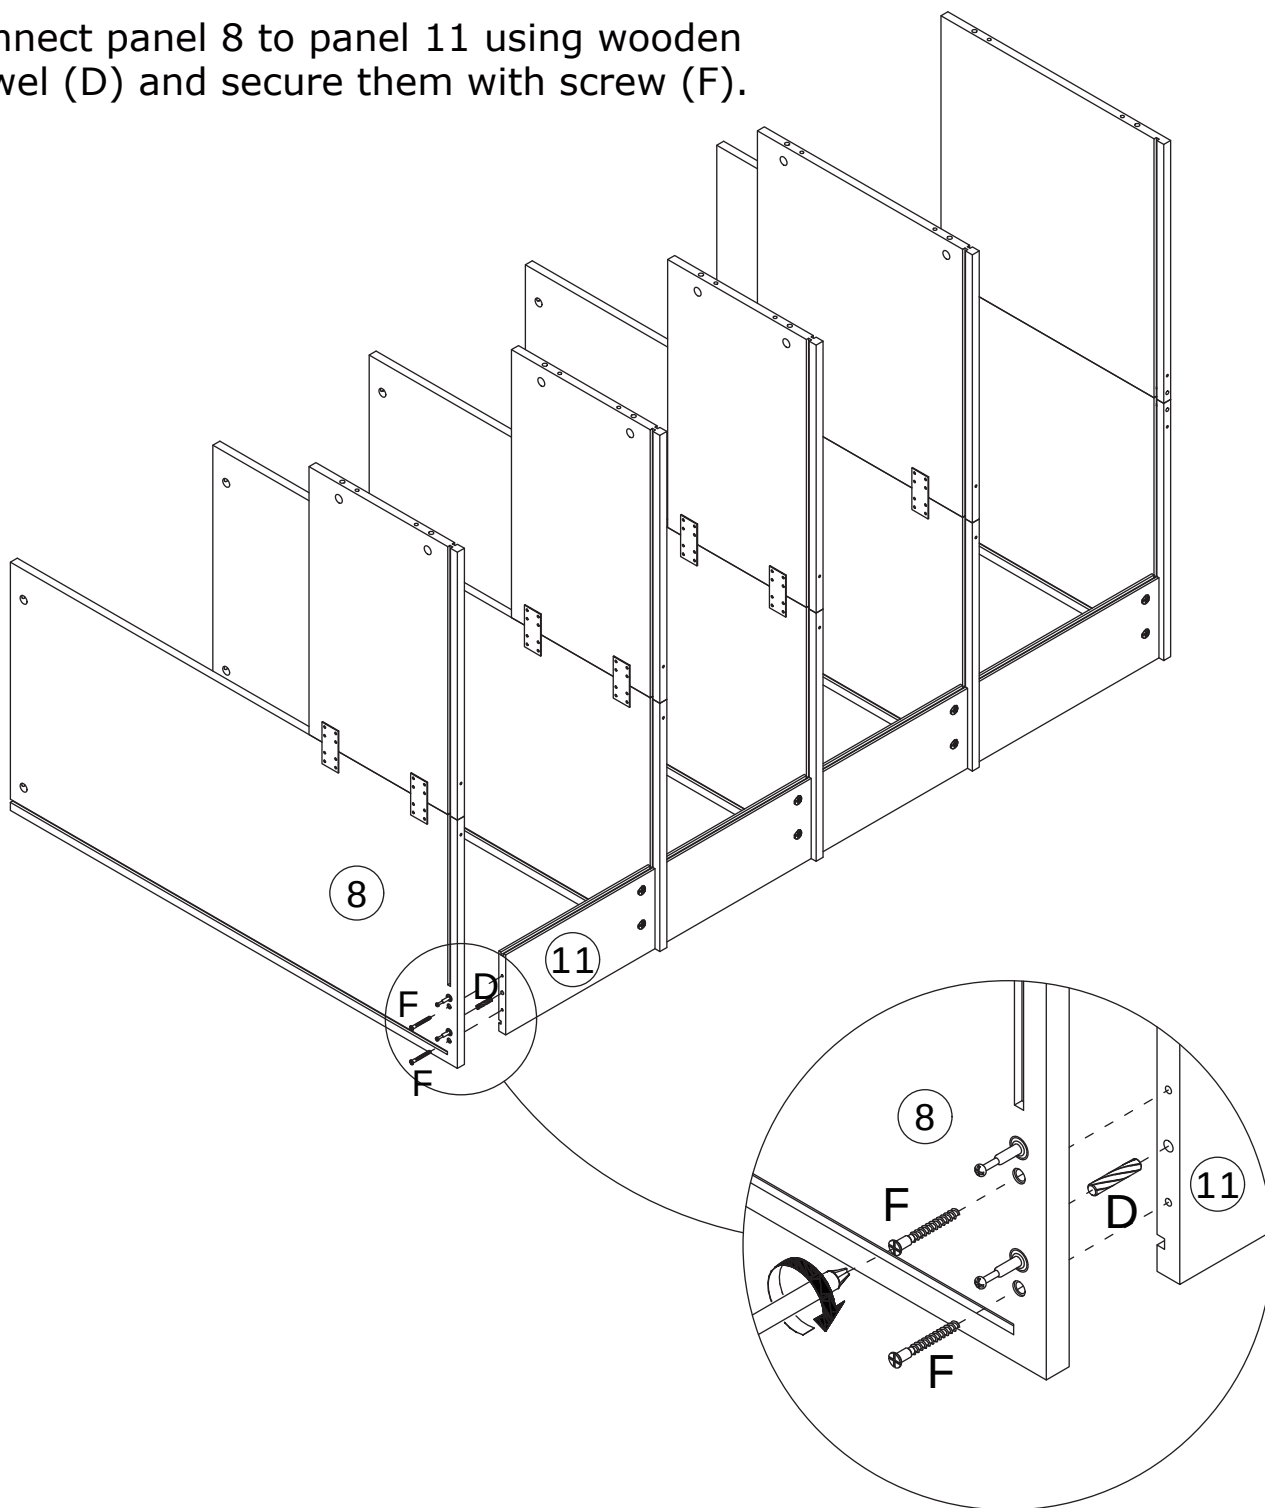


25



A x 2





CRB1595A

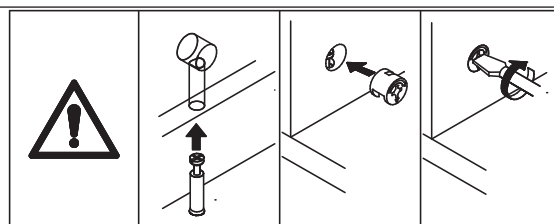


Connect panel 11 to panel 8, then tighten by turning cam lock (A) clockwise.

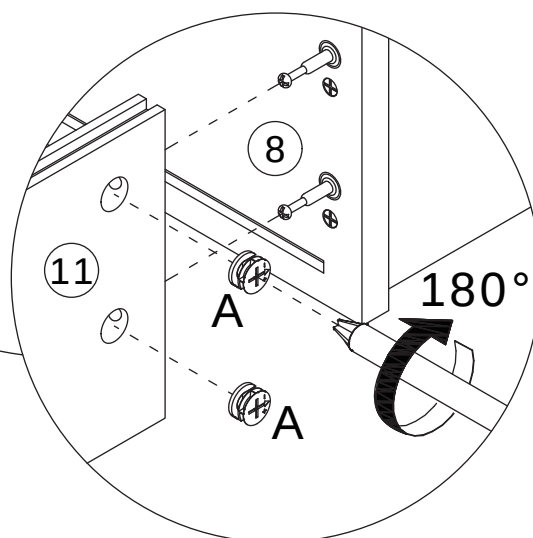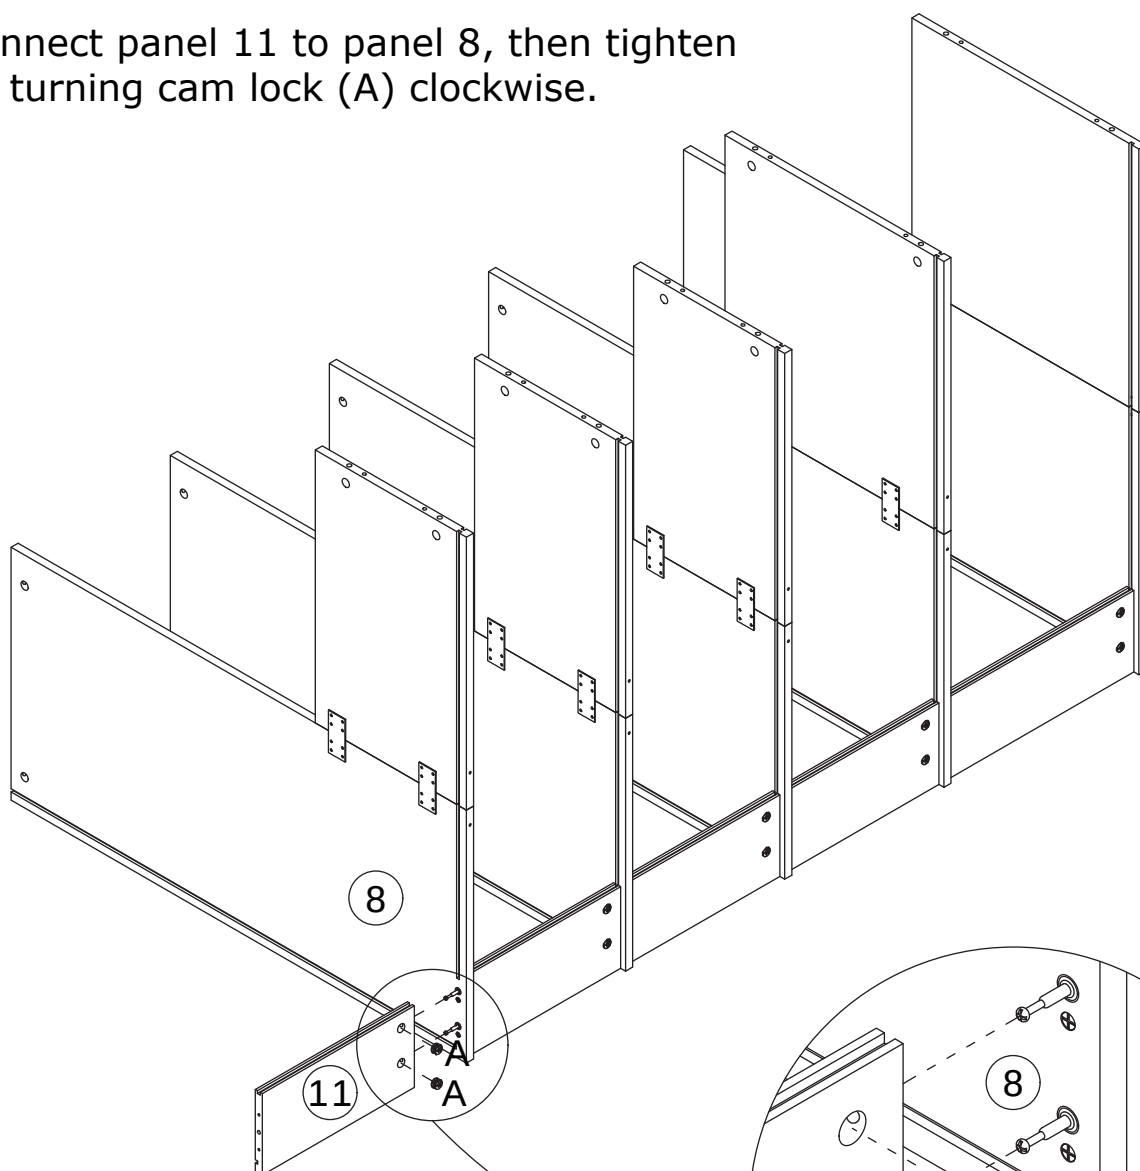

26

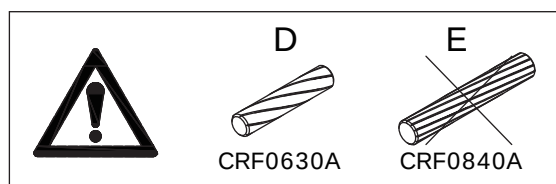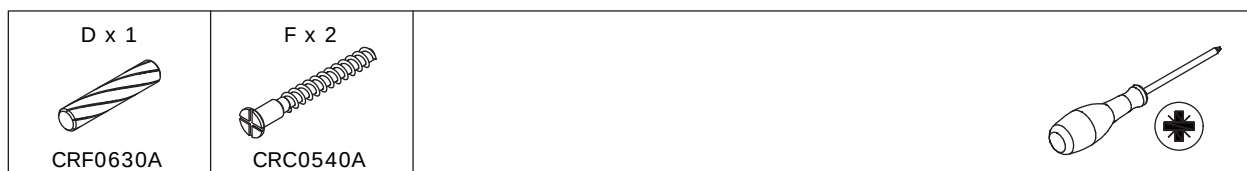

Connect panel 8 to panel 11 using wooden dowel (D) and secure them with screw (F).


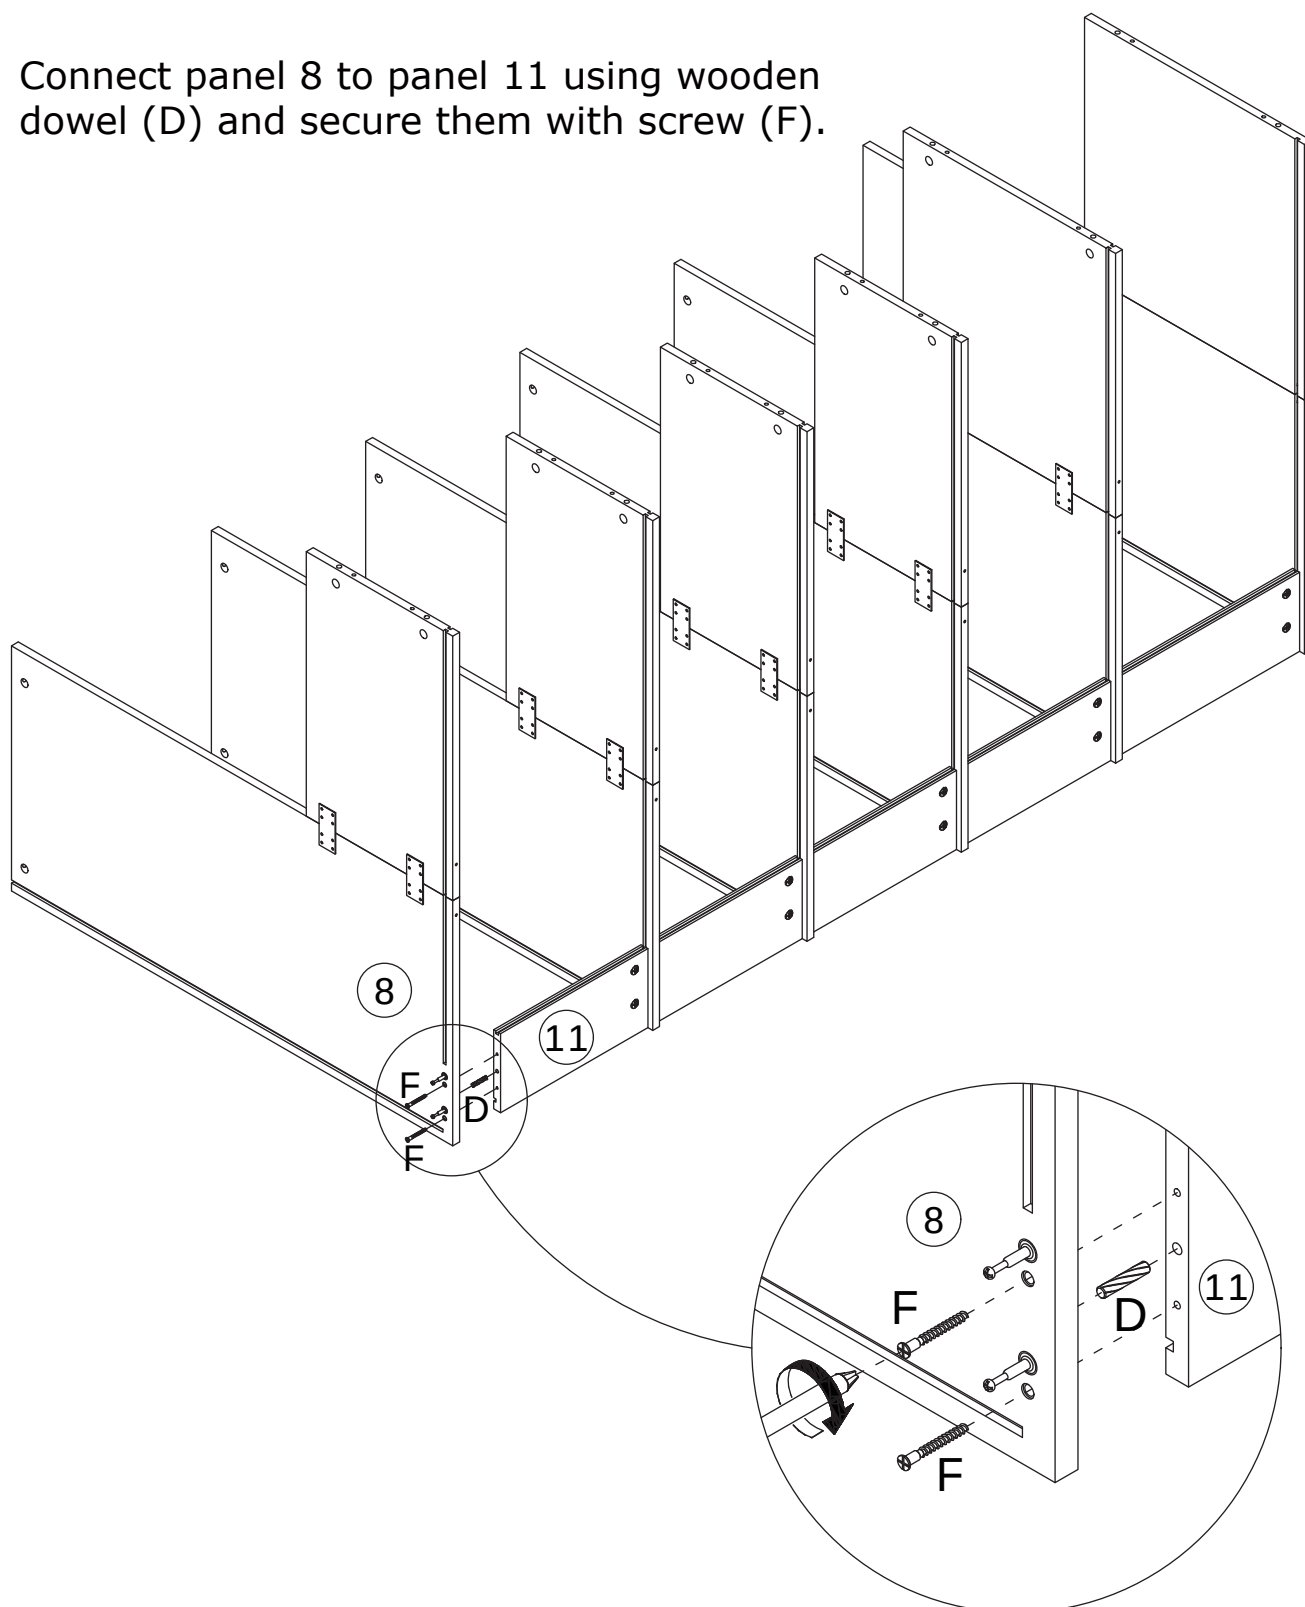


27



A x 2





CRB1595A

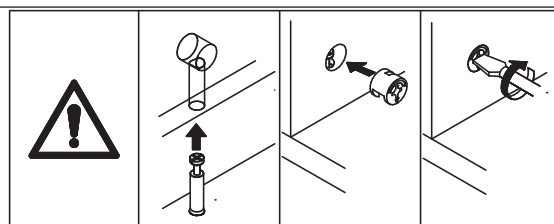


Connect panel 11 to panel 8, then tighten by turning cam lock (A) clockwise.

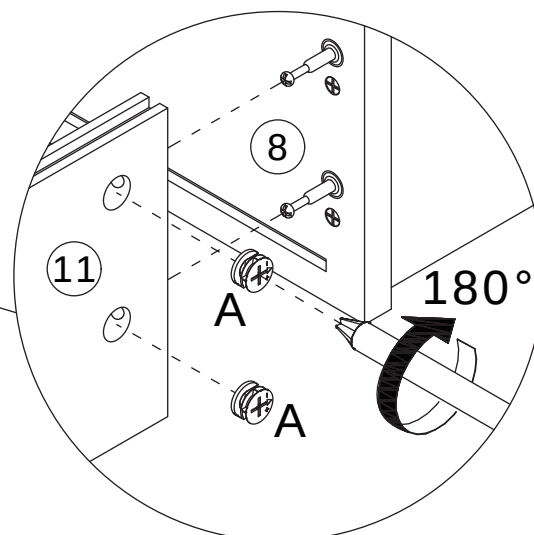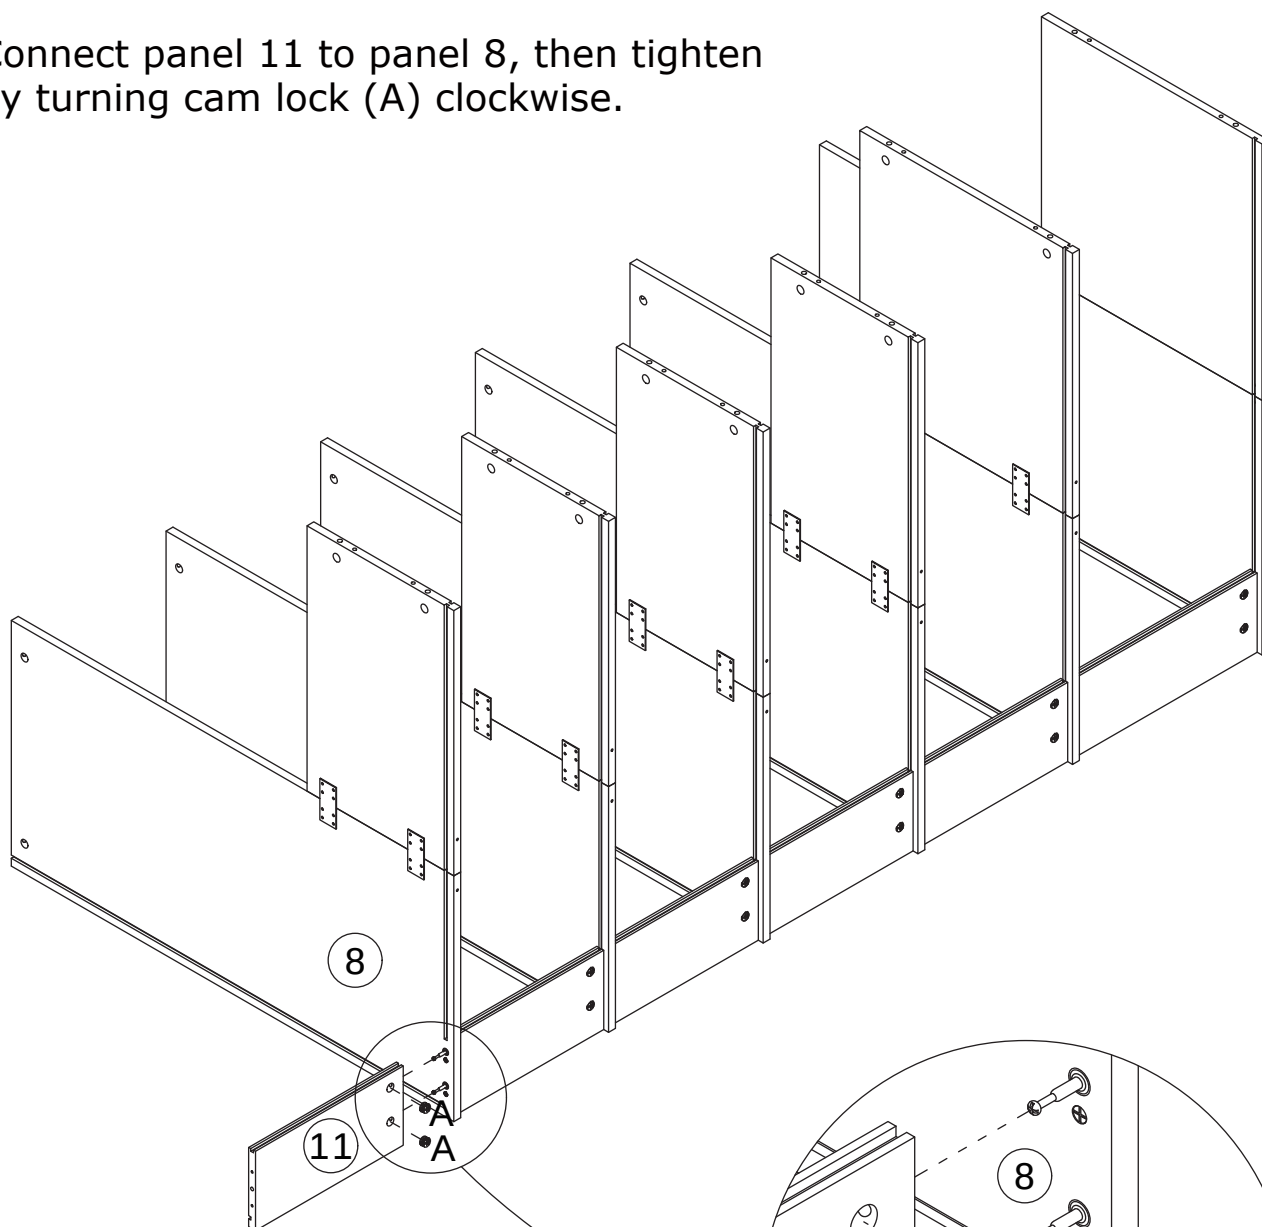

28

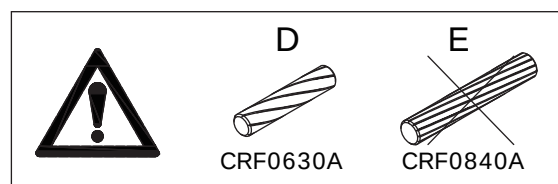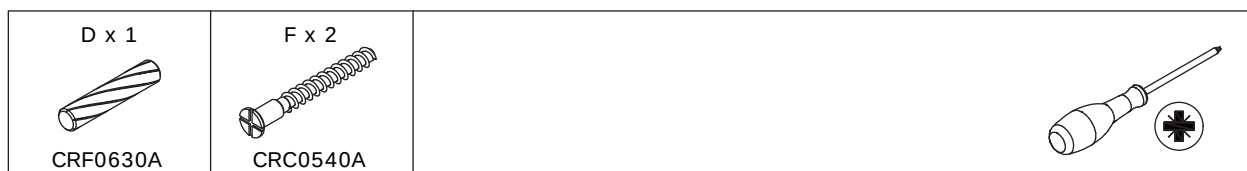

Connect panel 10 to panel 11 using wooden dowel (D), and secure them with screw (F).



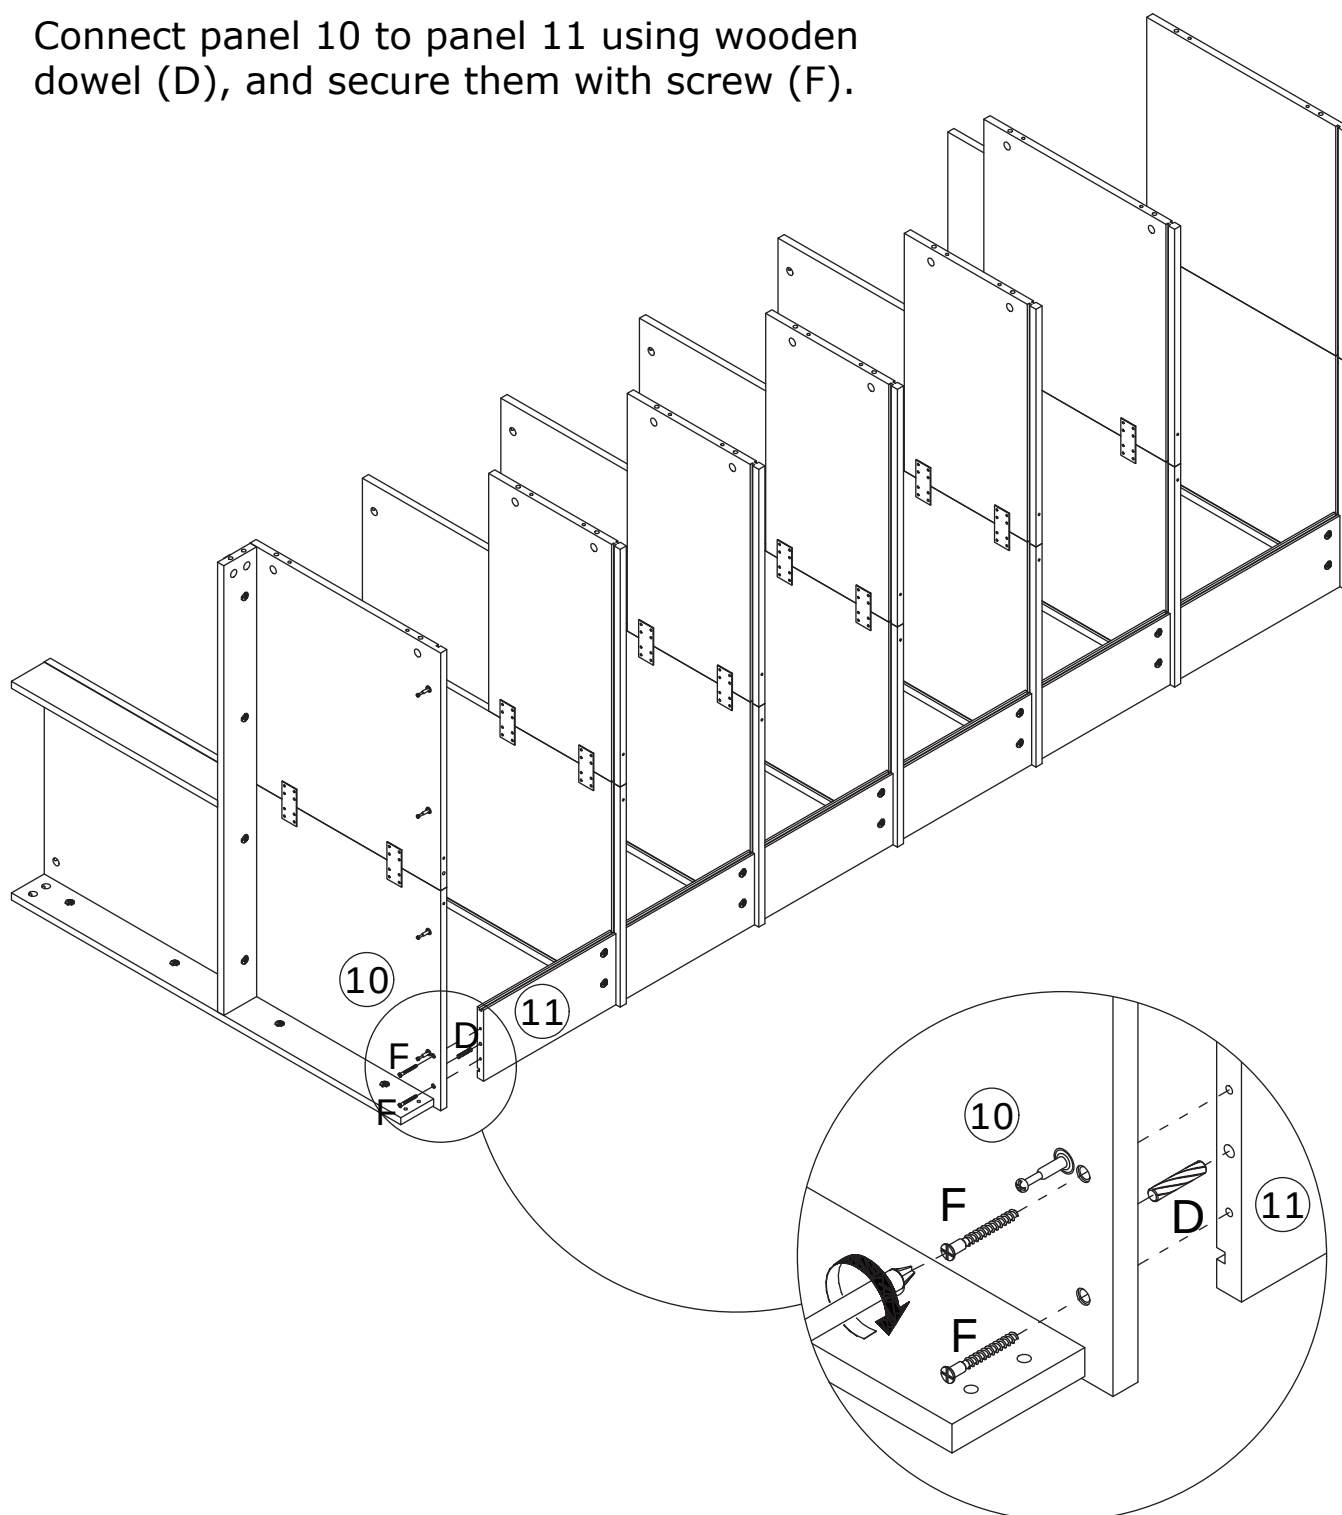


29



A x 4




CRB1595A

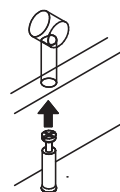

Connect panel 19 to panels 9 and 10, then tighten by turning cam lock (A) clockwise.

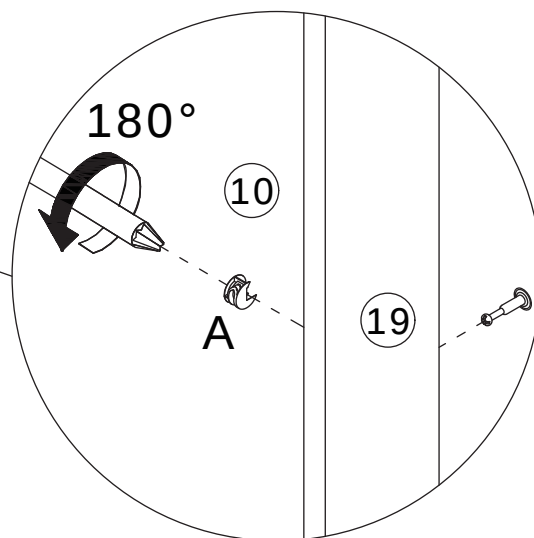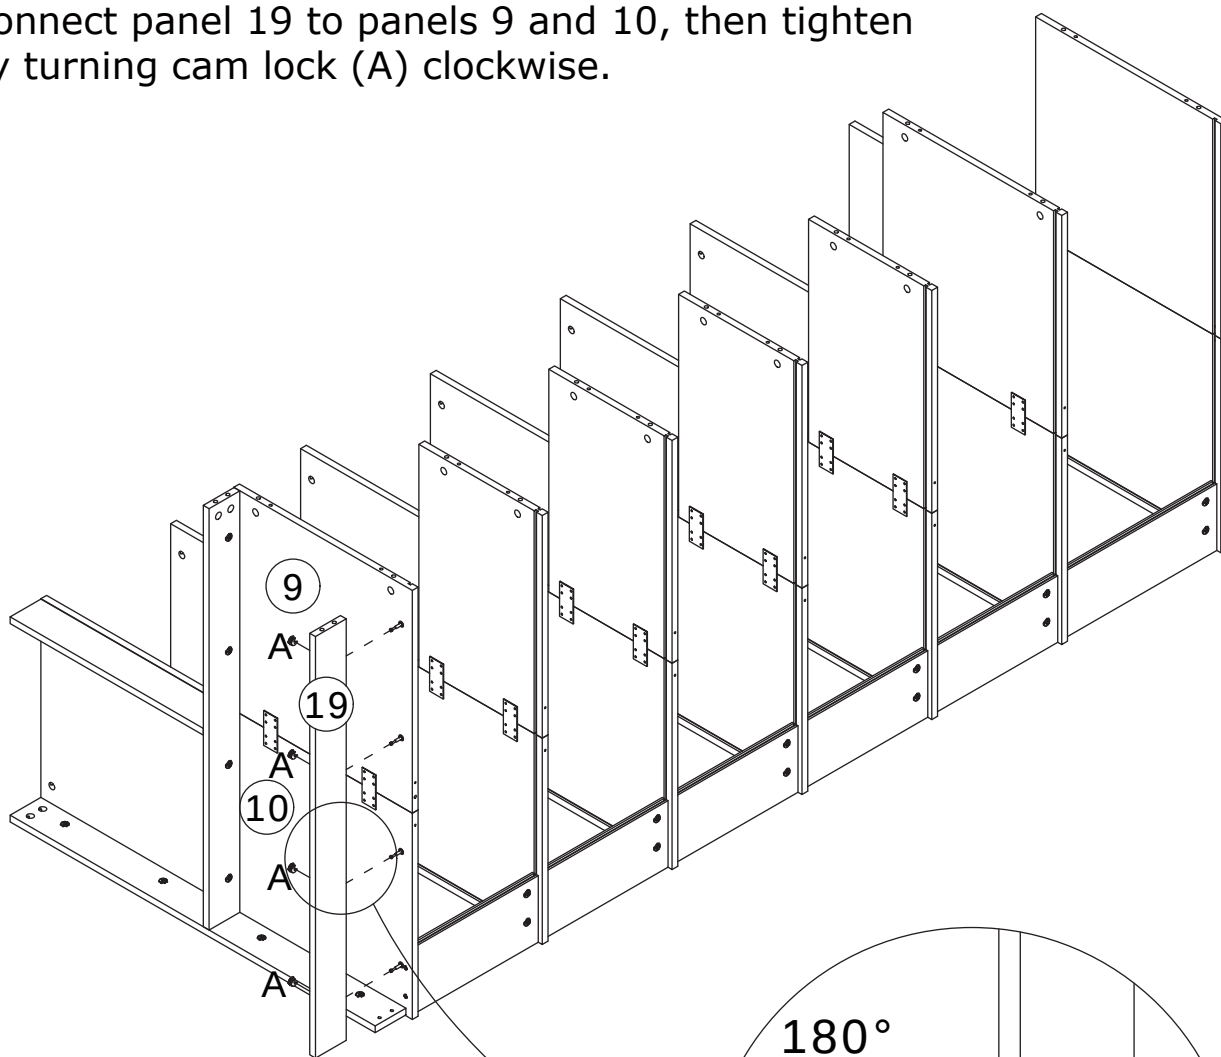

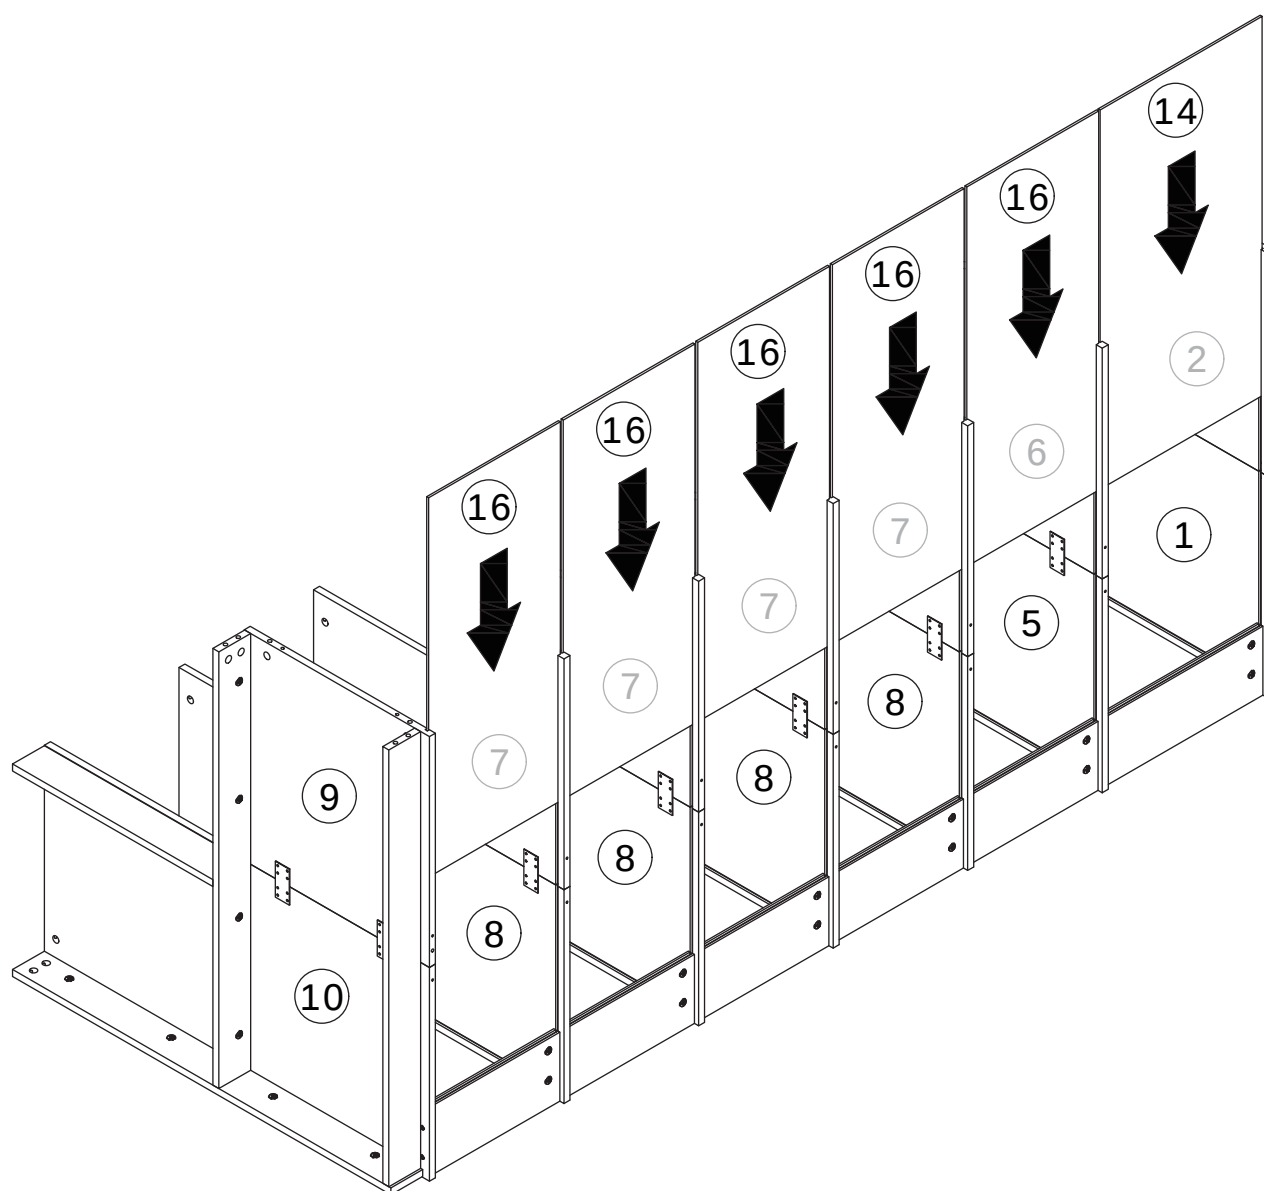



Insert panels 14 and 16 into the available slots.

31

D x 14



CRF0630A

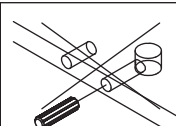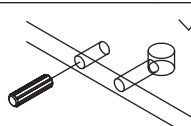

D




CRF0630A

E




CRF0840A

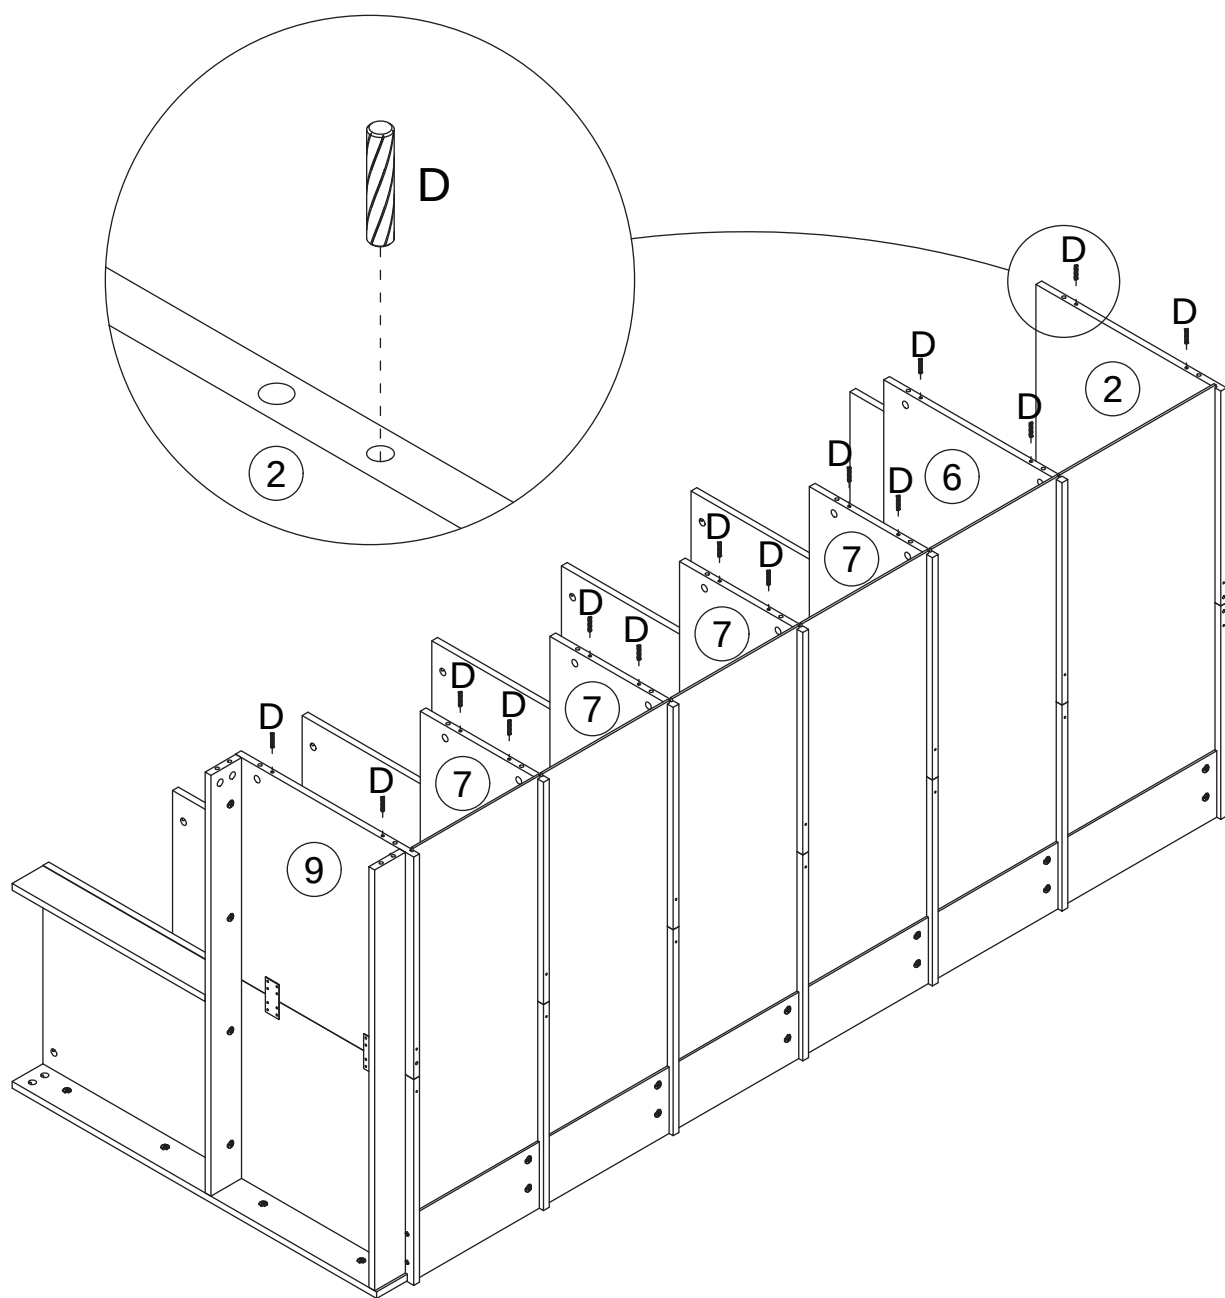

Insert wooden dowel (D) into the mounting unit.




32

B x 18




CRA0635B

C x 18

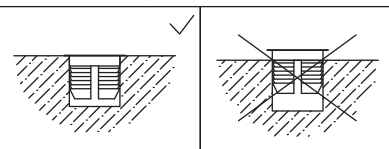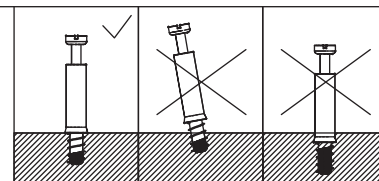

Install plug (C) onto panel 4, then screw self-tapping rod (B) into panel 4.


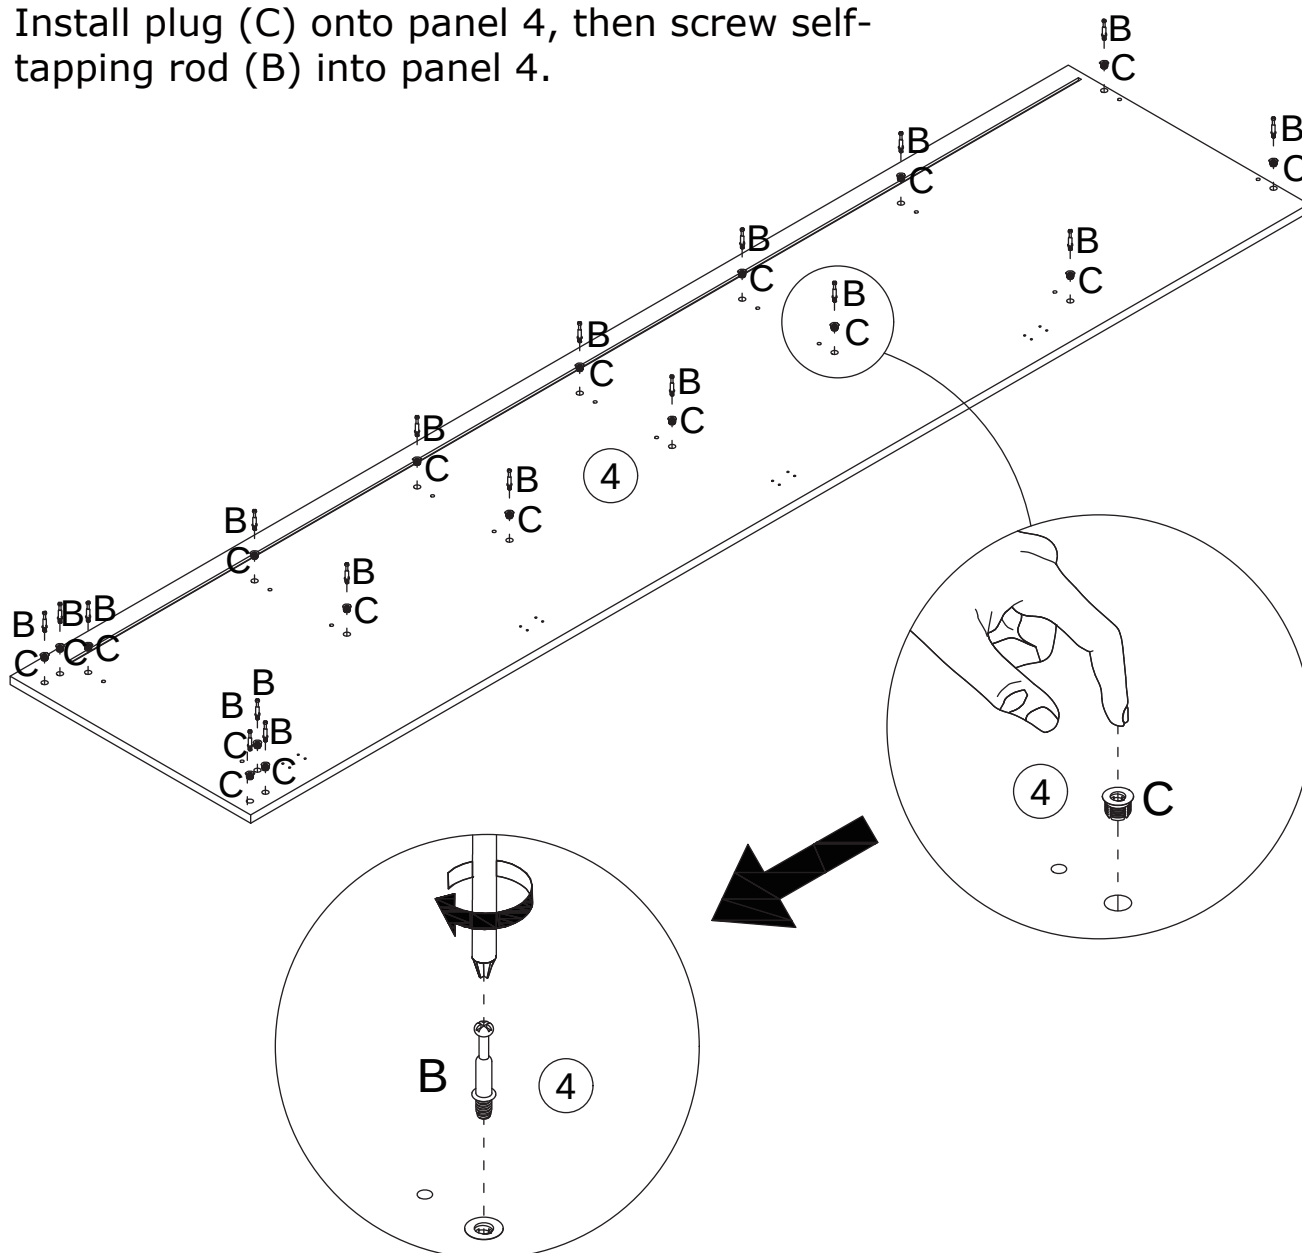


33


A x 18






CRB1595A

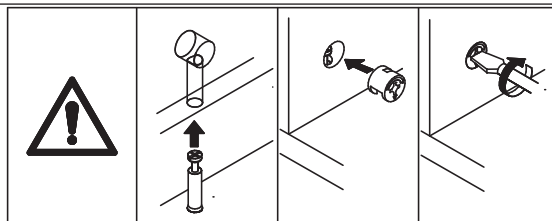


Connect panel 4 to the mounting unit, then tighten by turning cam lock (A) clockwise.

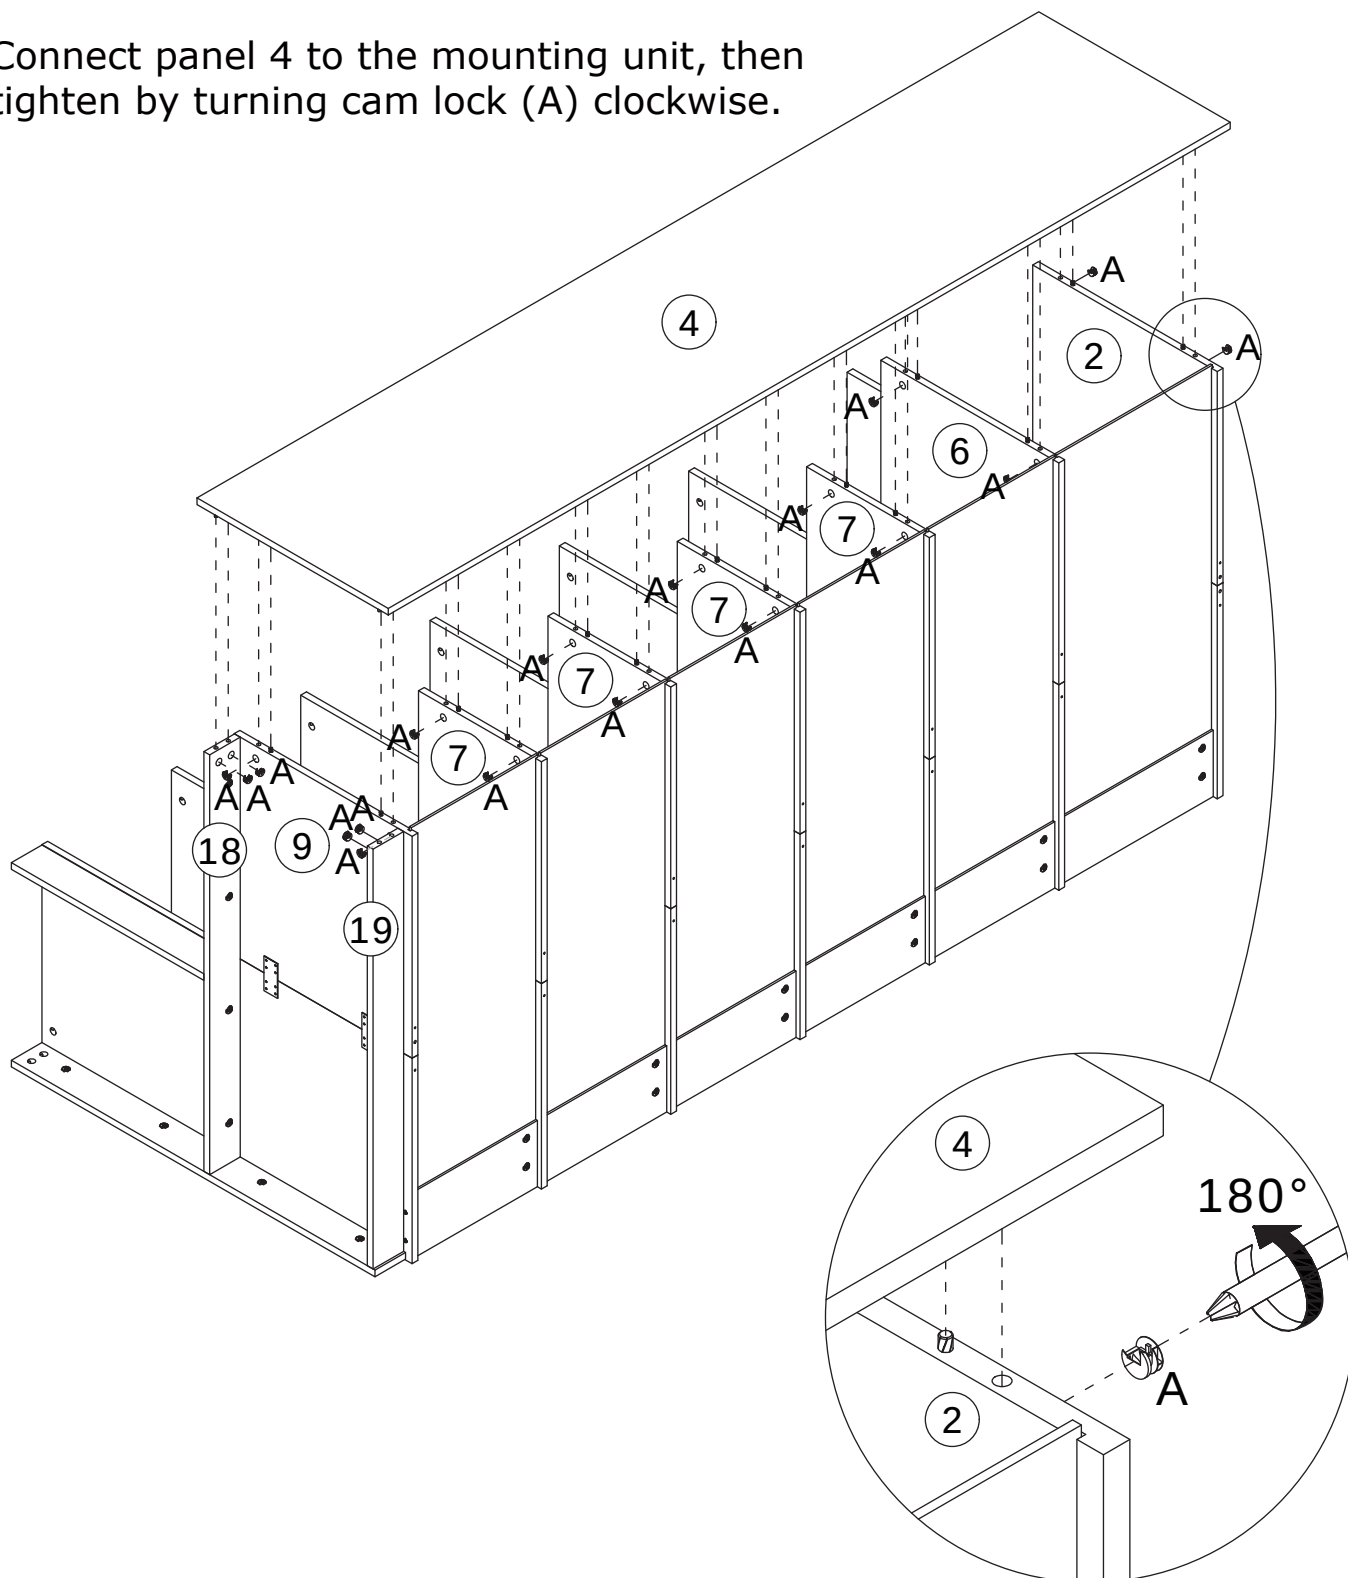

34

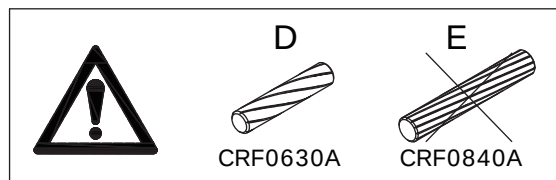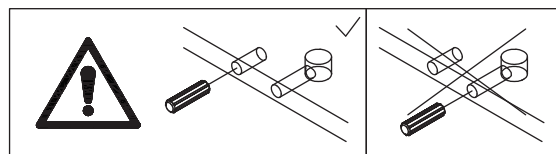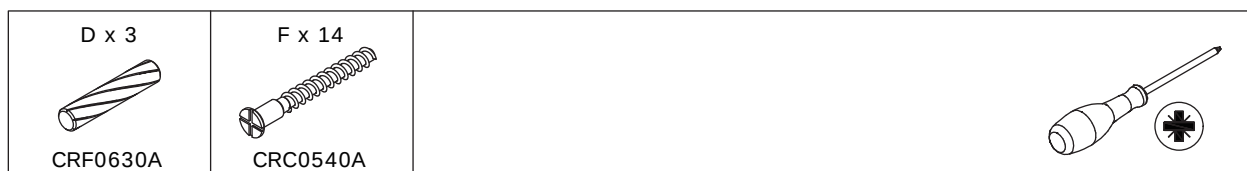


Connect panel 21 to the mounting unit using wooden dowel (D) and secure them with screw (F).

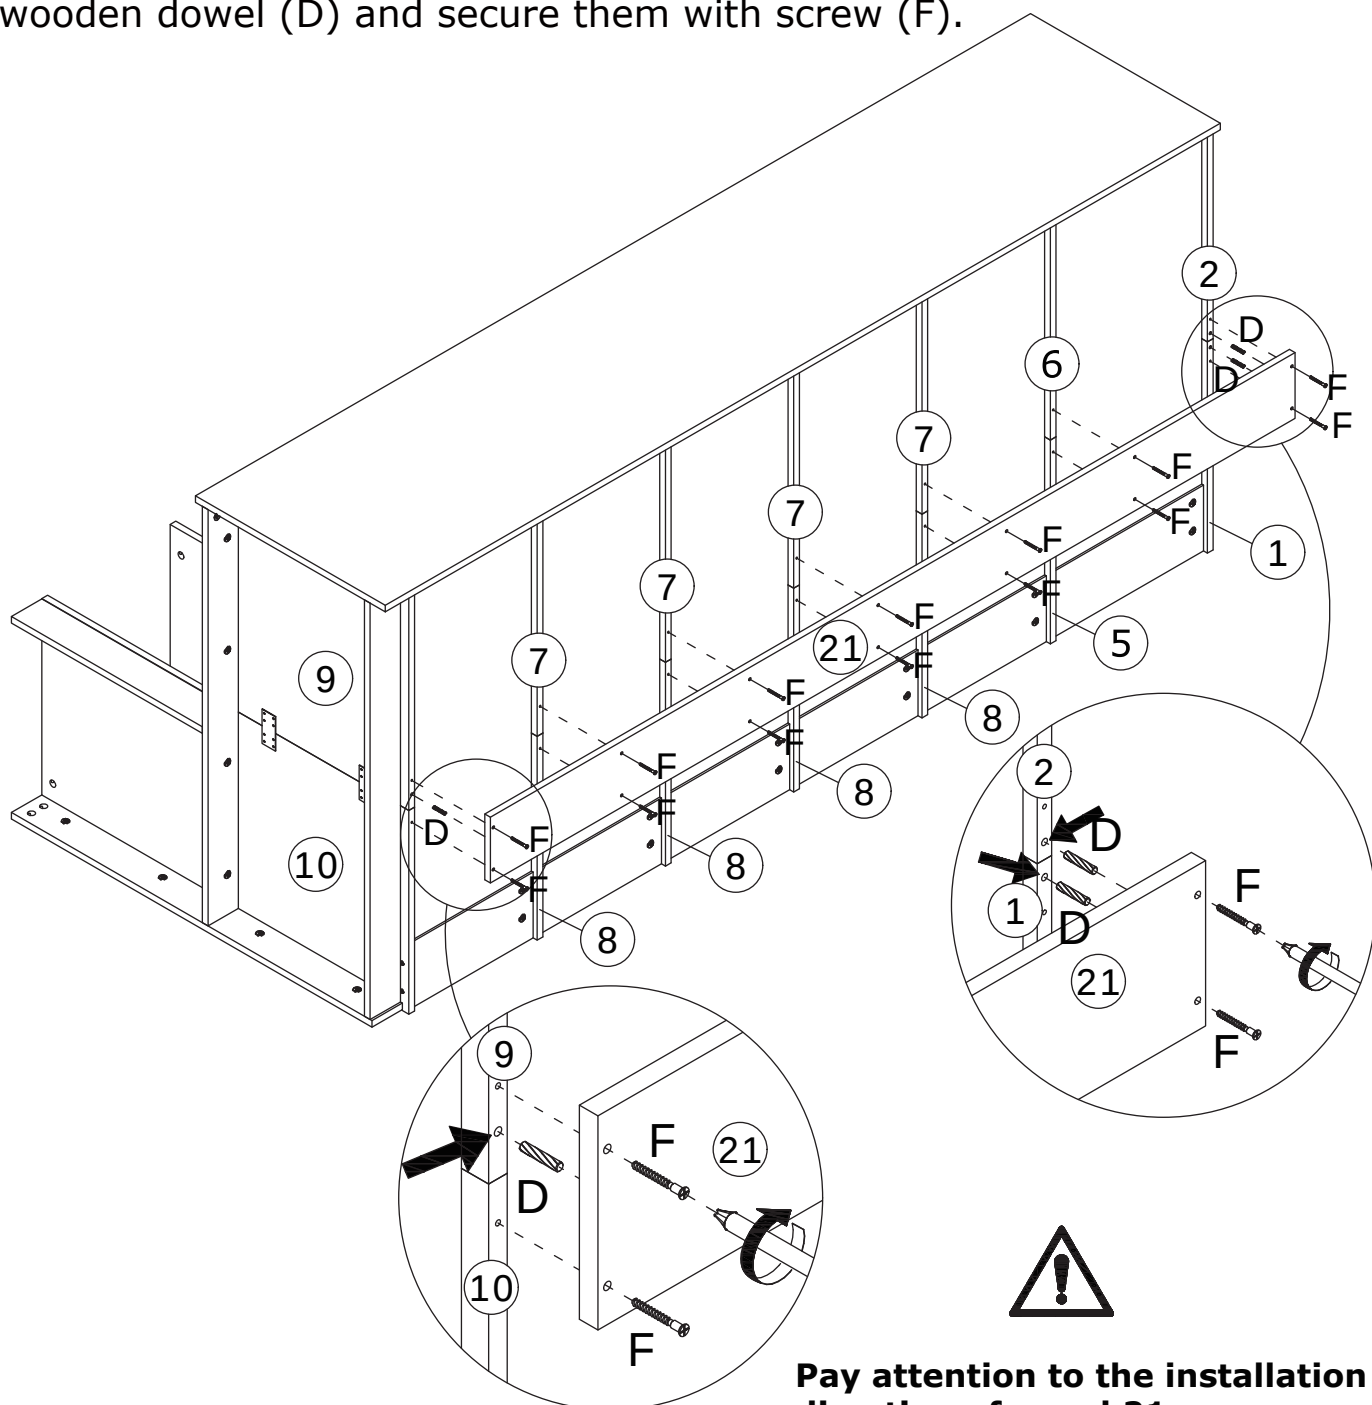


Pay attention to the installation direction of panel 21.

35


F x 2
CRC0540A



Turn the cabinet upside down and secure panel 20 to panel 19 using screw (F).

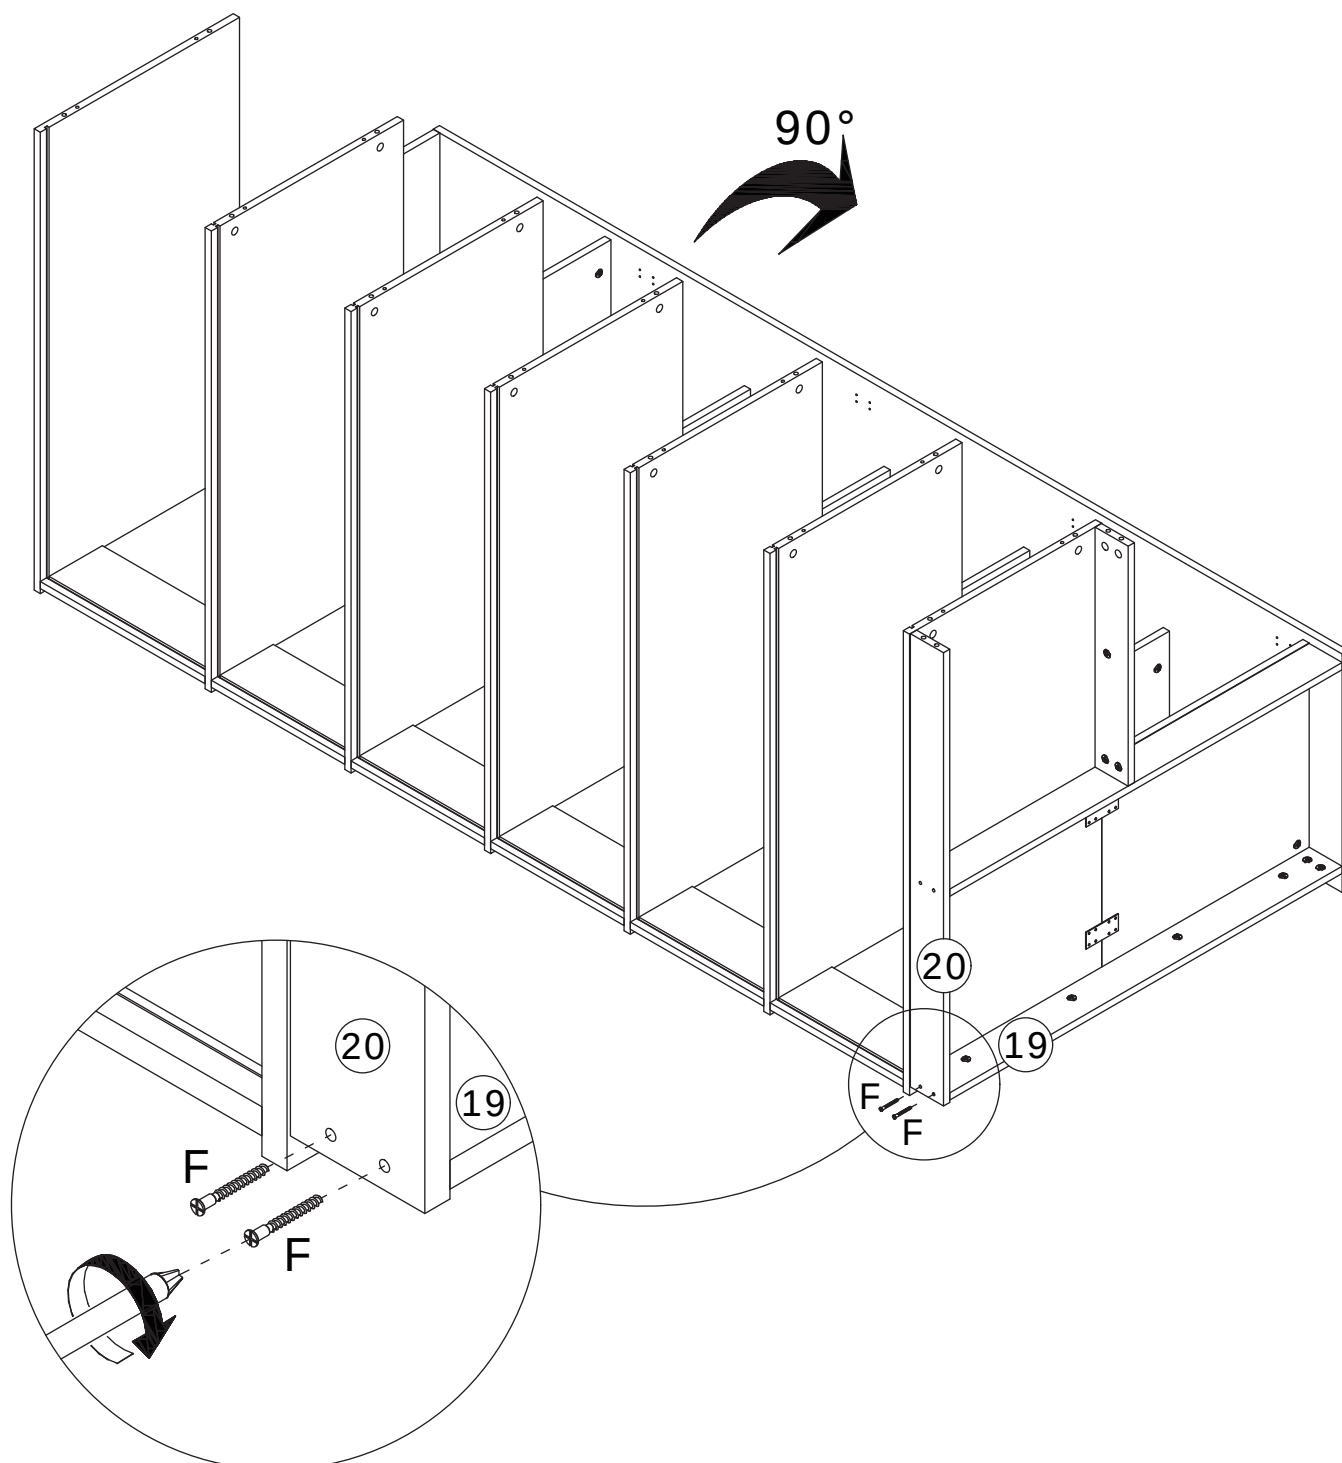

Insert panels 13 and 15 into the available slots.

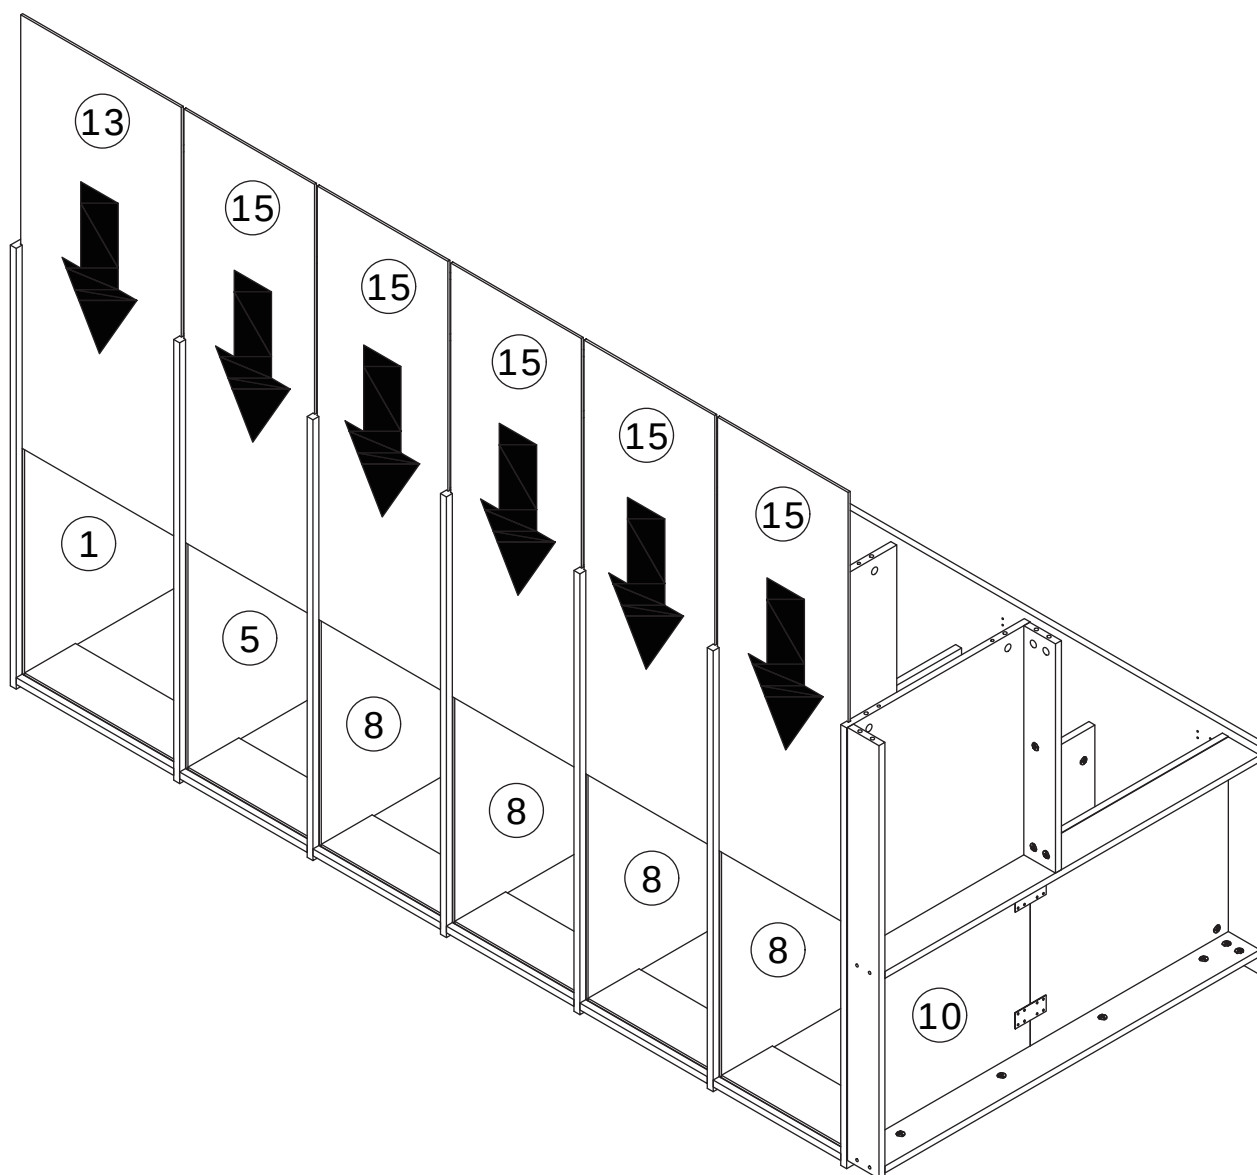



37

D x 14



CRF0630A

Insert wooden dowel (D) into the mounting unit.



D




CRF0630A

E




CRF0840A

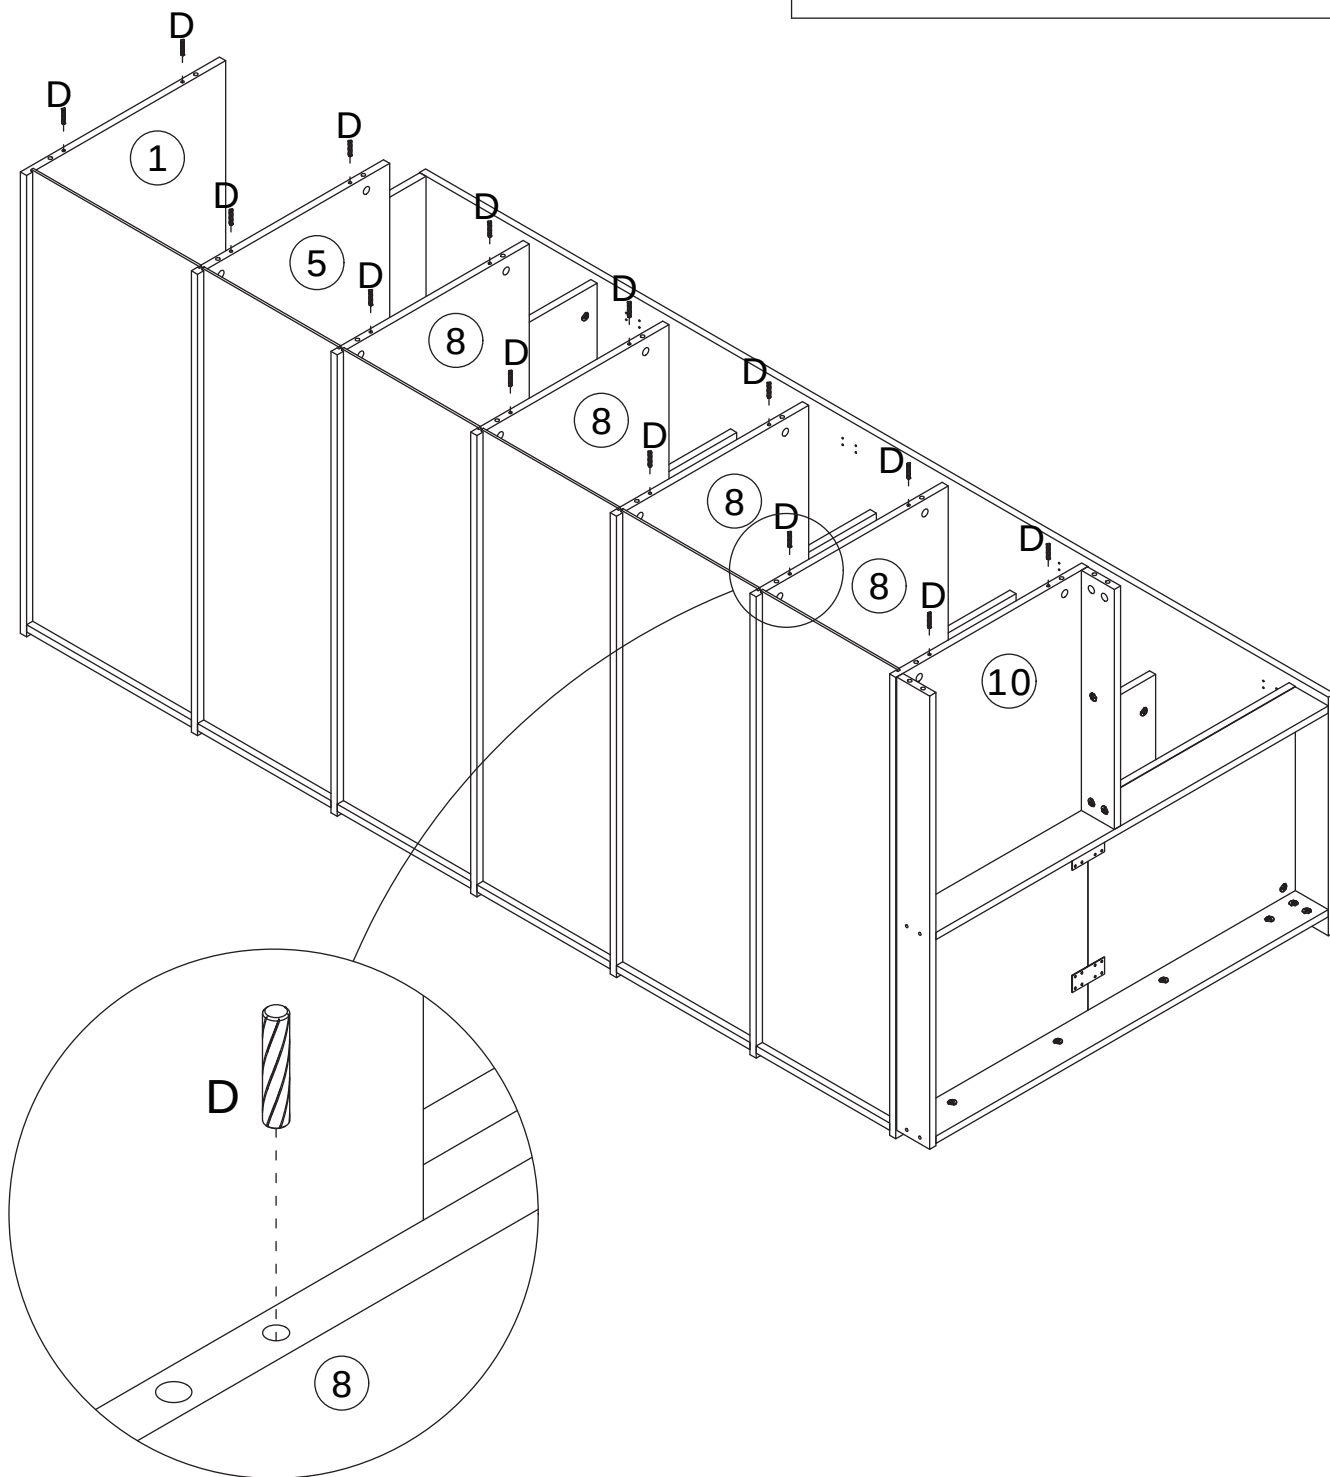




38

B x 18




CRA0635B

C x 18

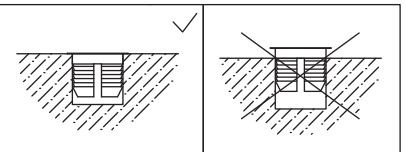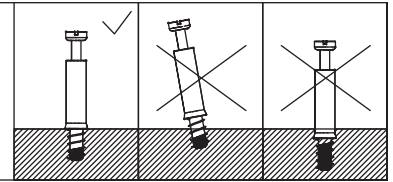

Install plug (C) onto panel 3, then screw self-tapping rod (B) into panel 3.




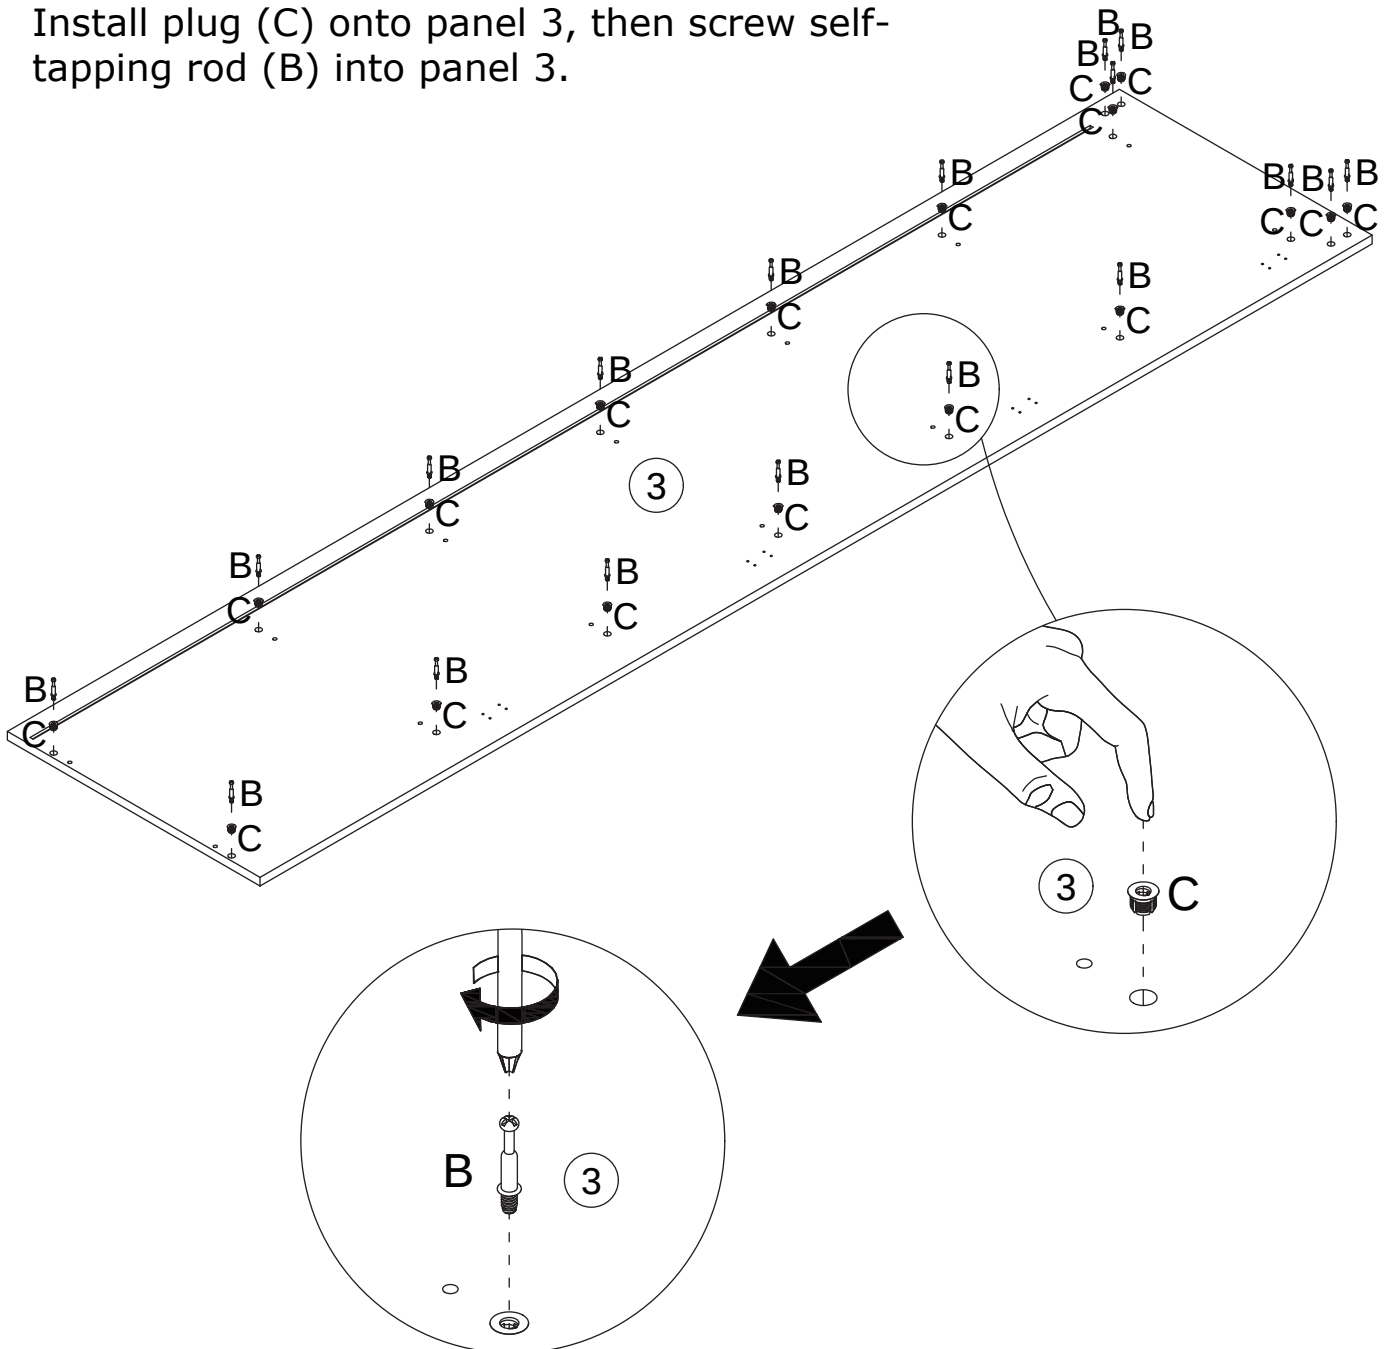


39



A x 18




CRB1595A

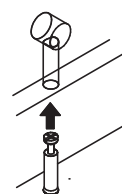


Connect panel 3 to the mounting unit, then tighten by turning cam lock (A) clockwise.

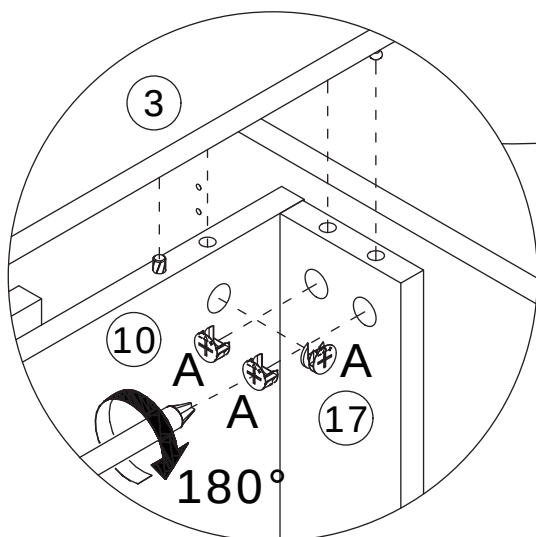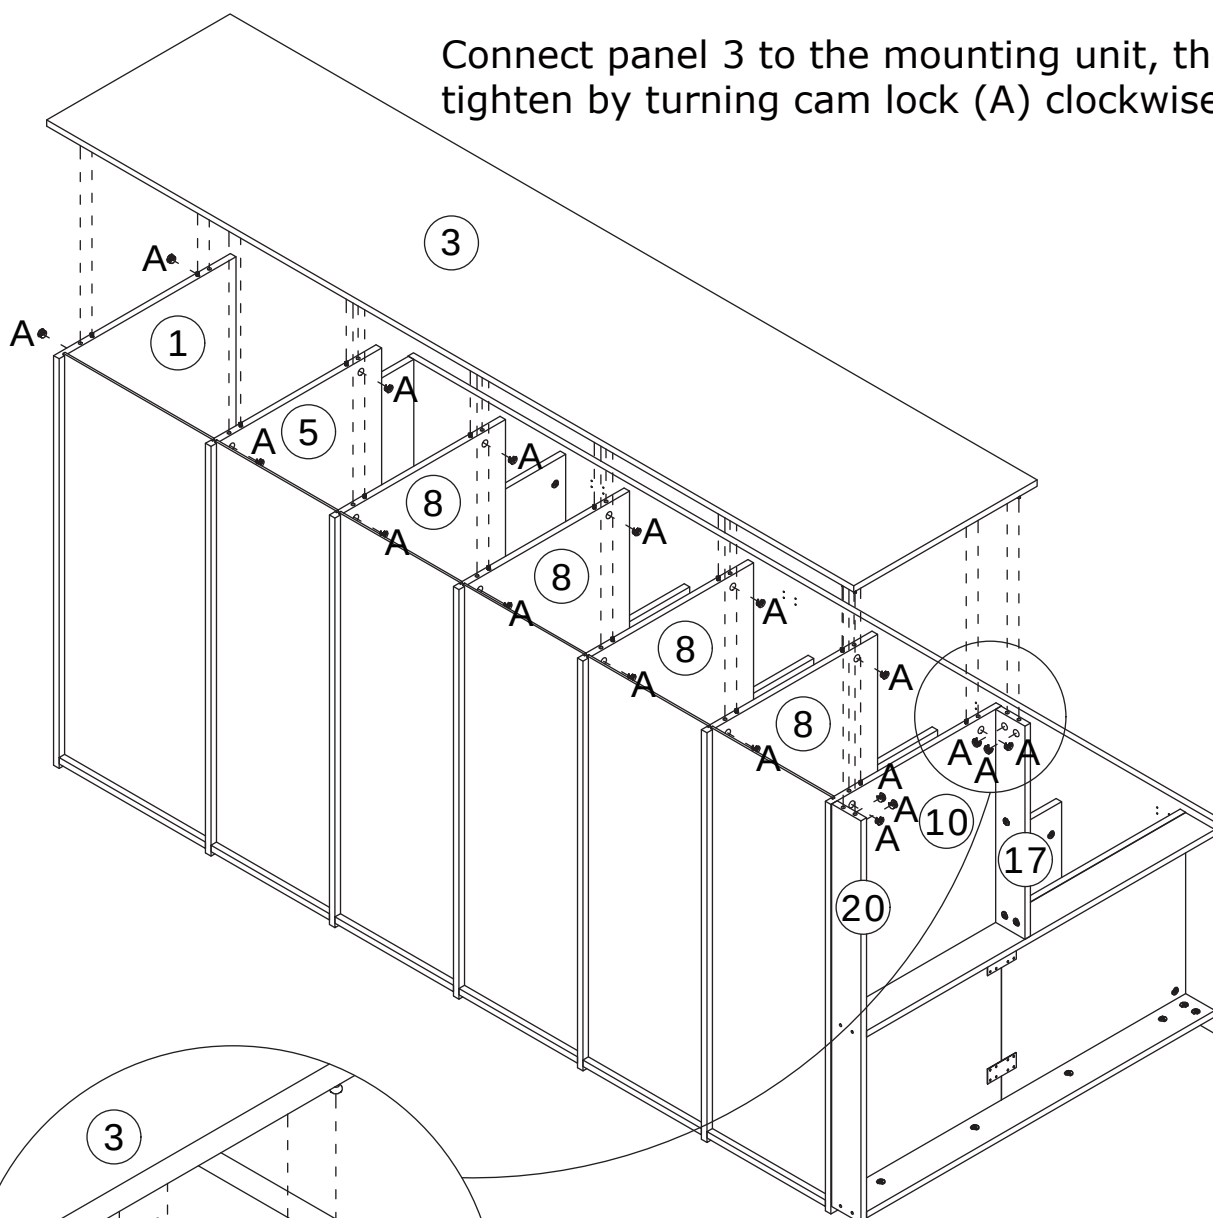

40

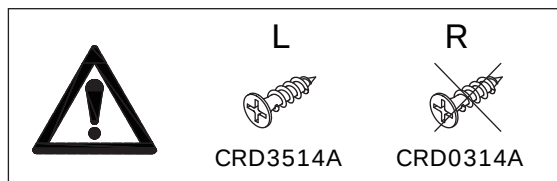

Secure hinge (G) to panel 22 using screw (L).

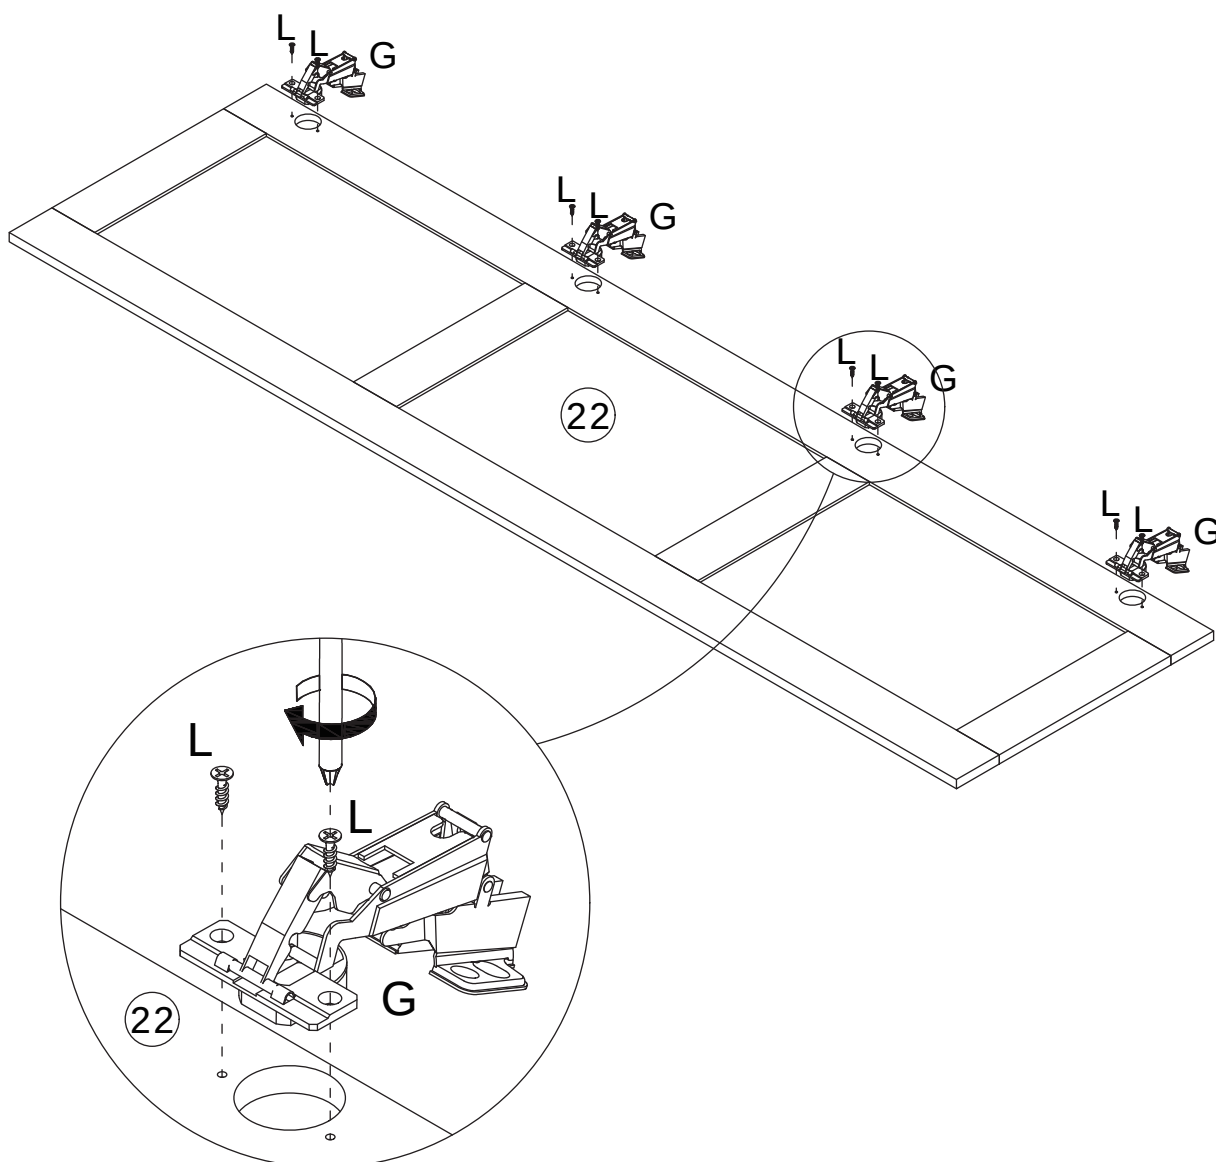


41

L x 16



CRD3514A



L






CRD3514A

R




CRD0314A


Attach panel 22 to panel 3 via hinges using screw (L).

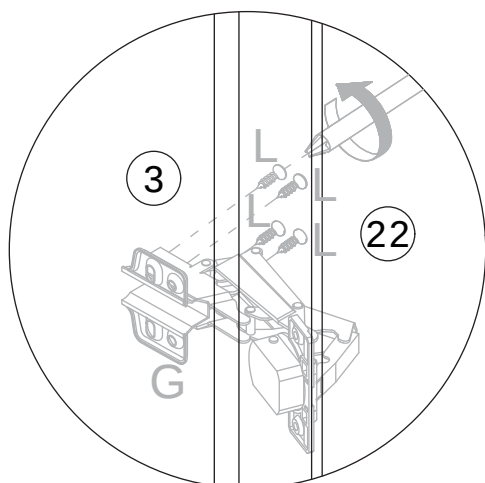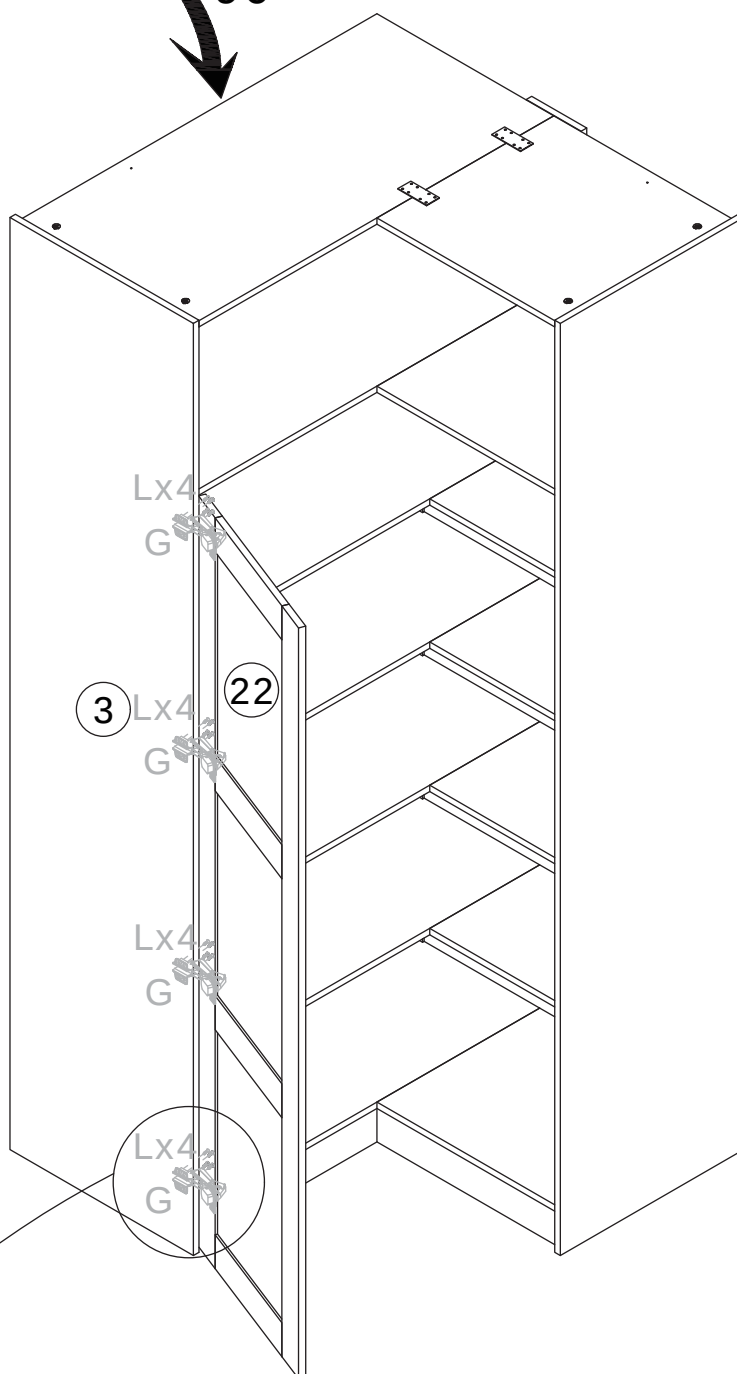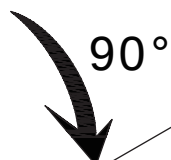

42

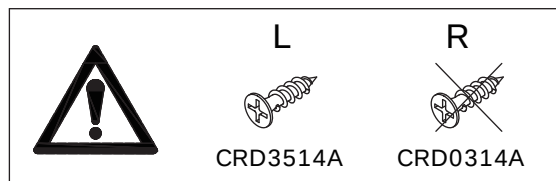

Secure hinge (G) to panel 23 using screw (L).

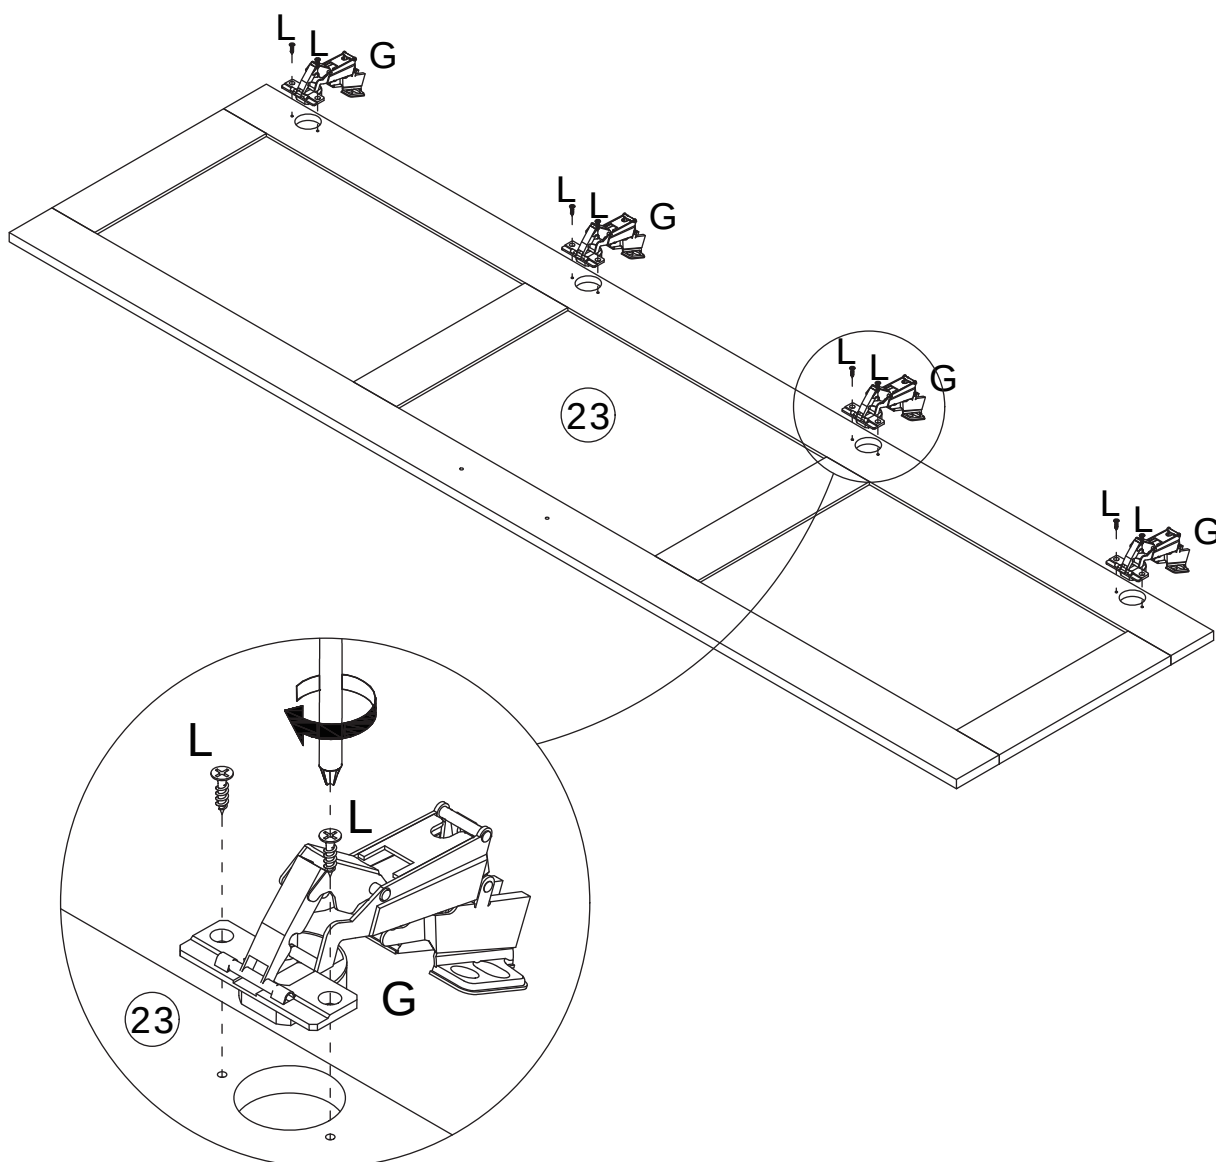


43

L x 16



CRD3514A



L




CRD3514A

R




CRD0314A

Attach panel 23 to panel 4 via hinges using screw (L).

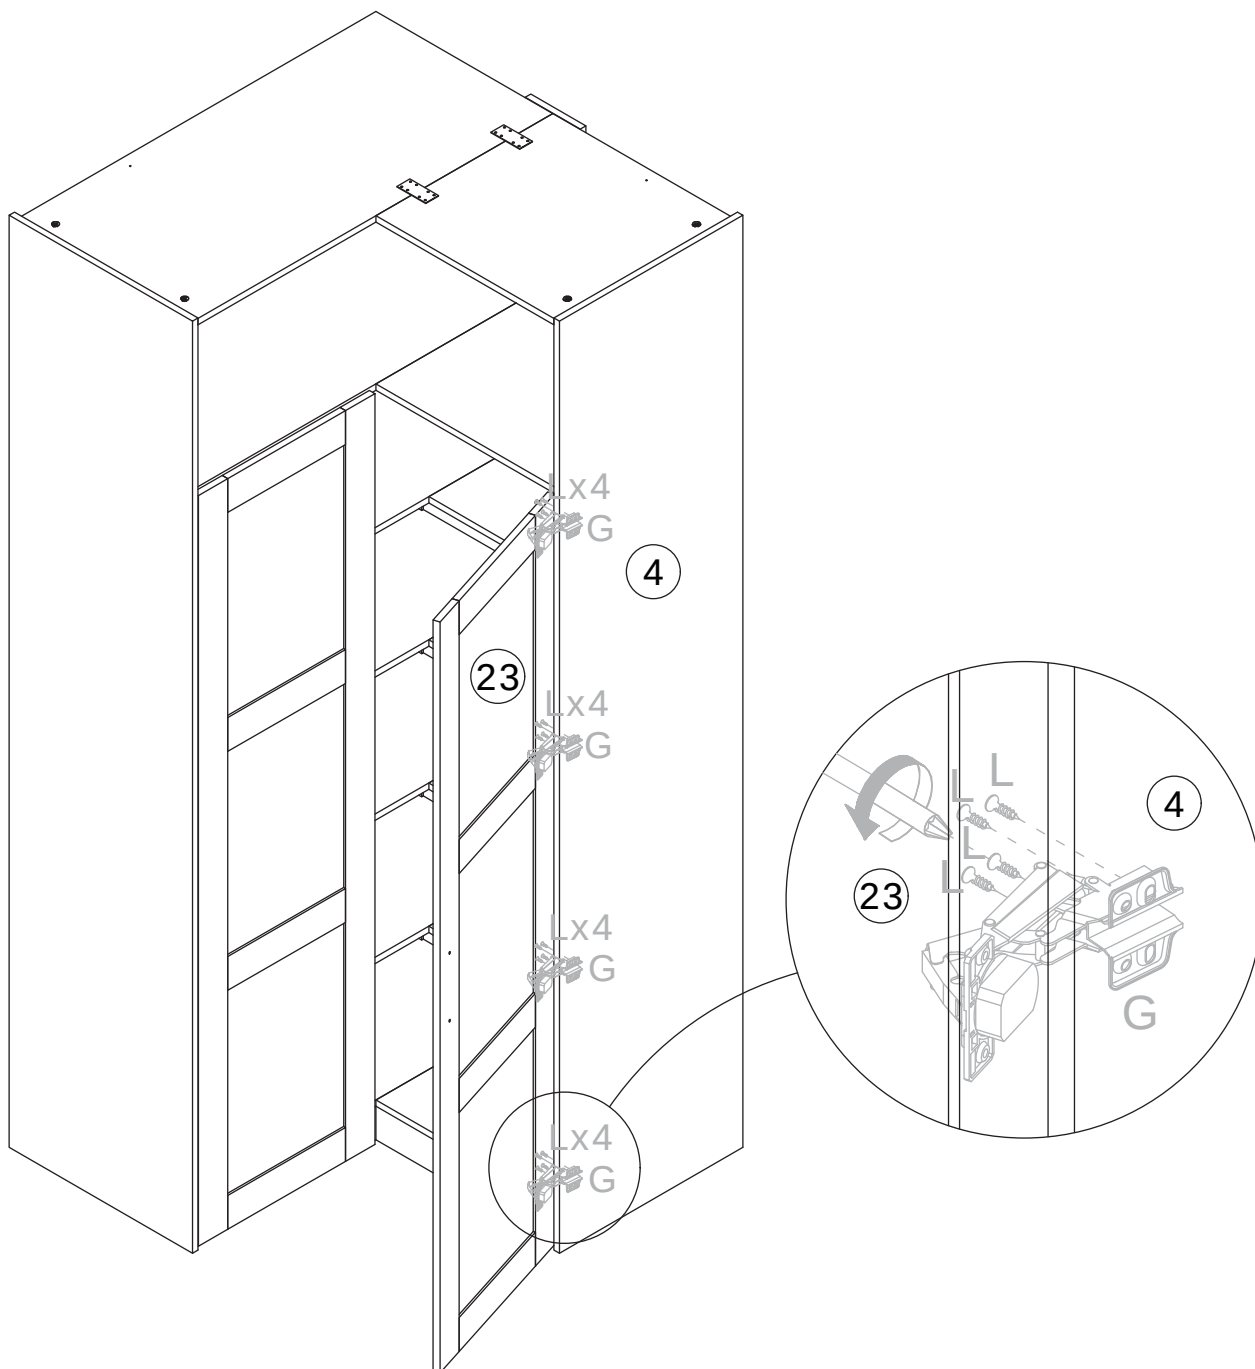

44


H x 1





J x 2



CRE0418A



Secure handle (H) to panels 22 and 23 using screw (J).

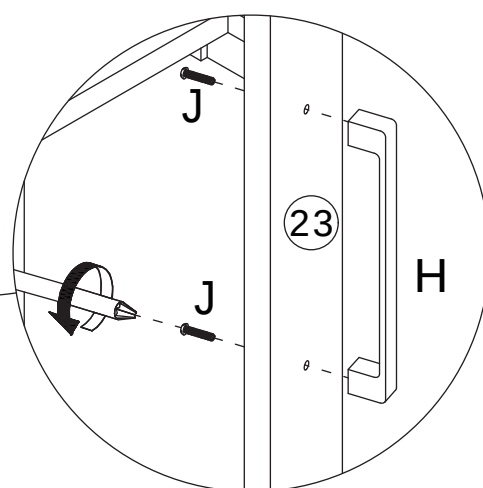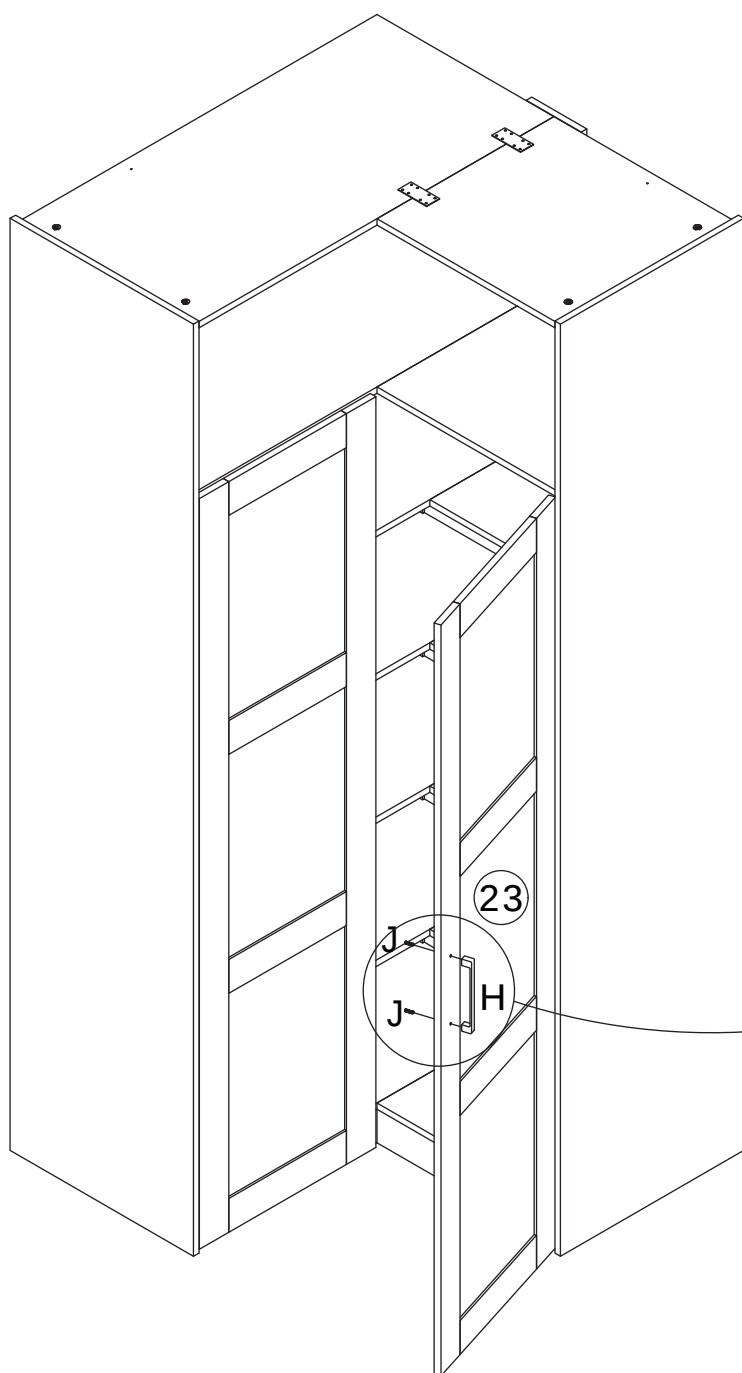

45


Q x 72



R x 72



CRD0314A



L






CRD3514A

R





CRD0314A


Insert clip (Q) into the available slots, then secure them with screw (R).

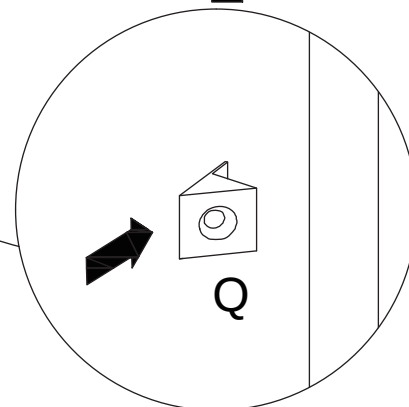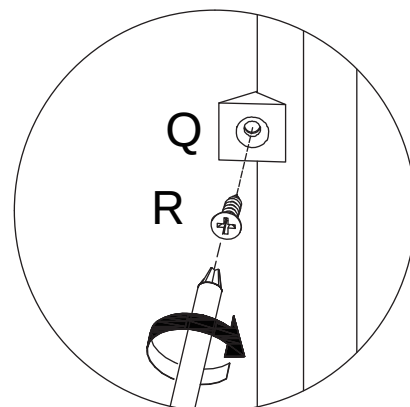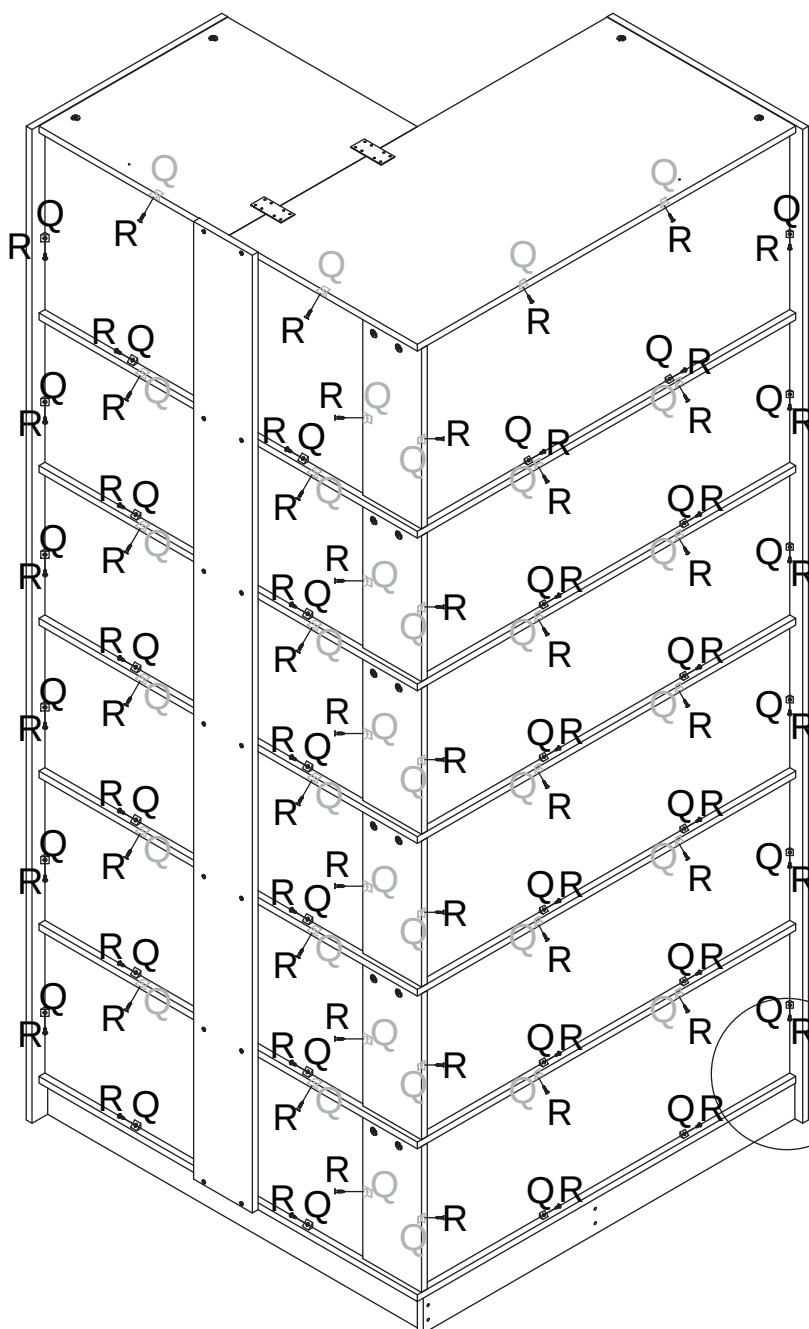

46

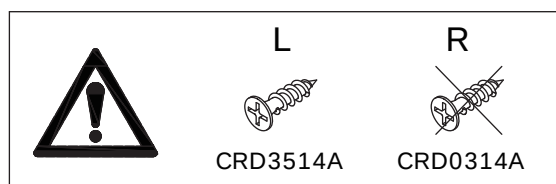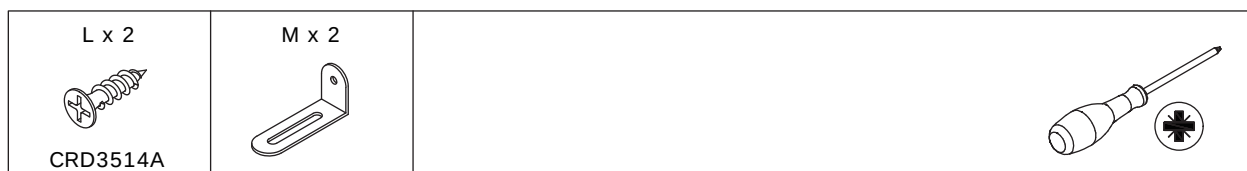


Secure bracket (M) to panels 1 and 2 using screw (L).

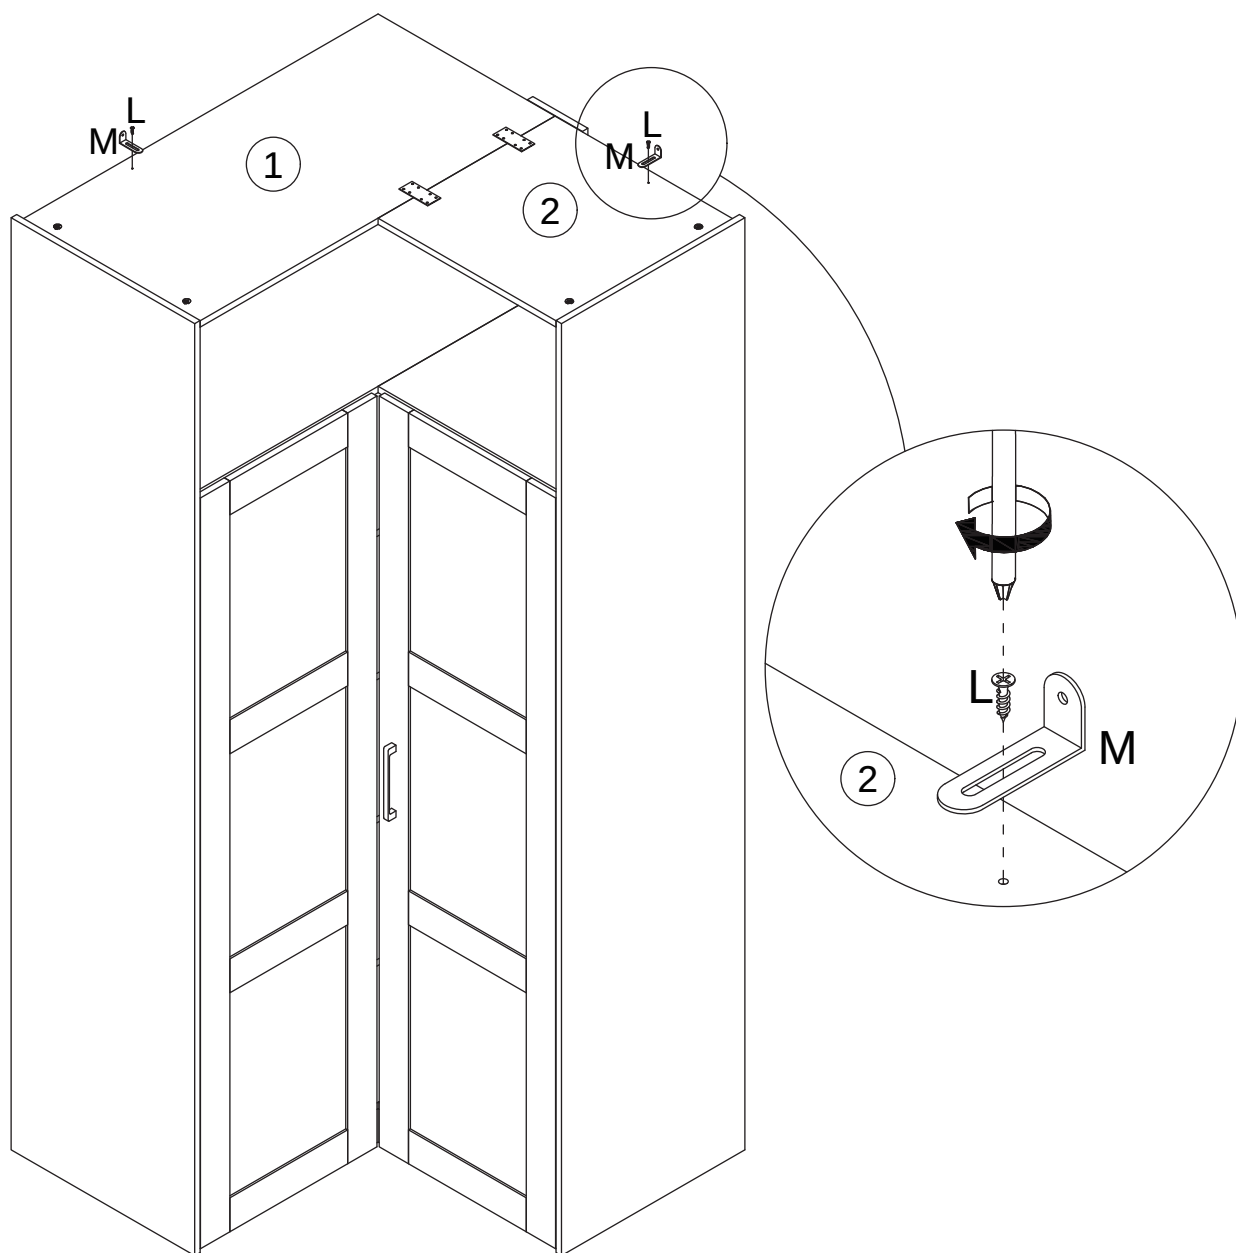

47




N x 2



P x 2




CRD3535A

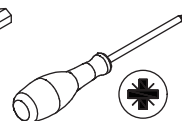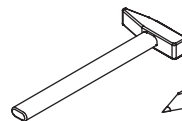


Install an anti-tip device.

WALL


1.





2.

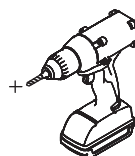


3.

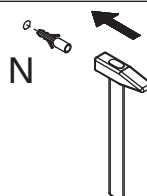

4.

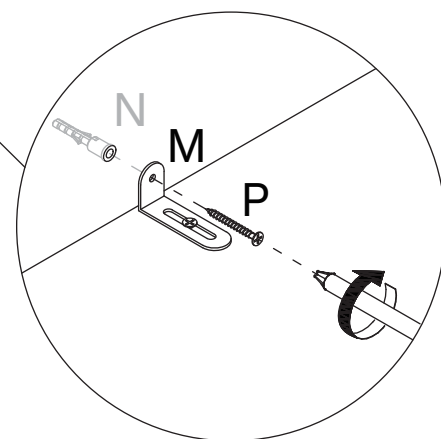
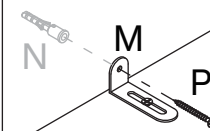





If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

Or you can search this link to view the teaching video.


<https://youtu.be/n0Lb36SoODM>

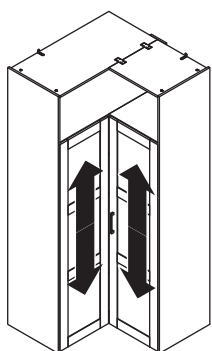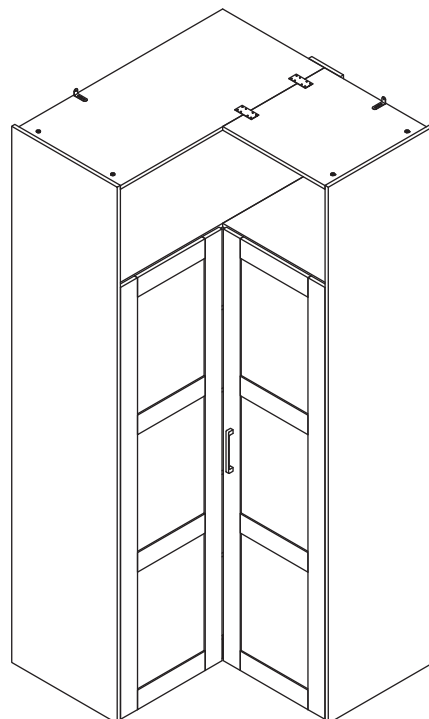



I

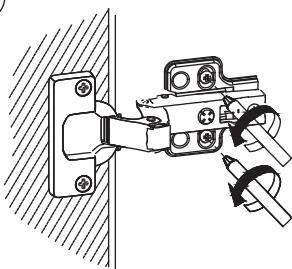


II

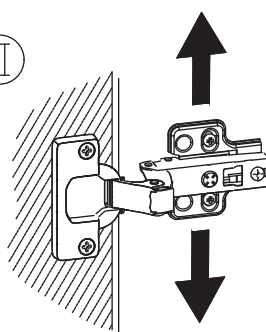


III

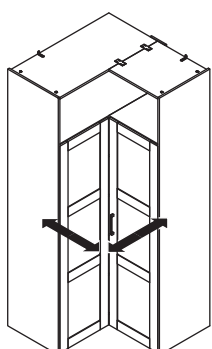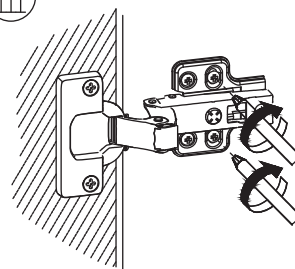



I

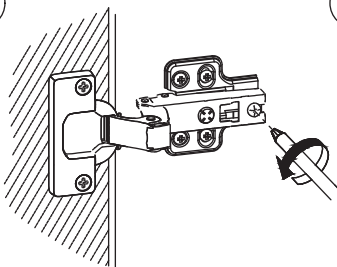


II

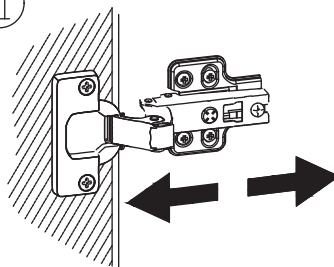

III

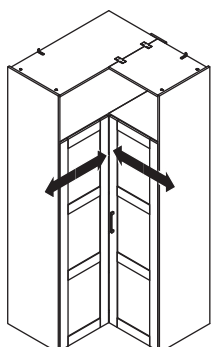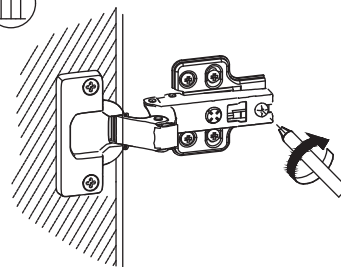

I

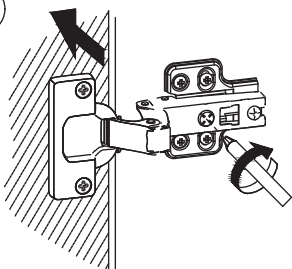

II

