
DRAWERS + MODESTY PANEL - FULL

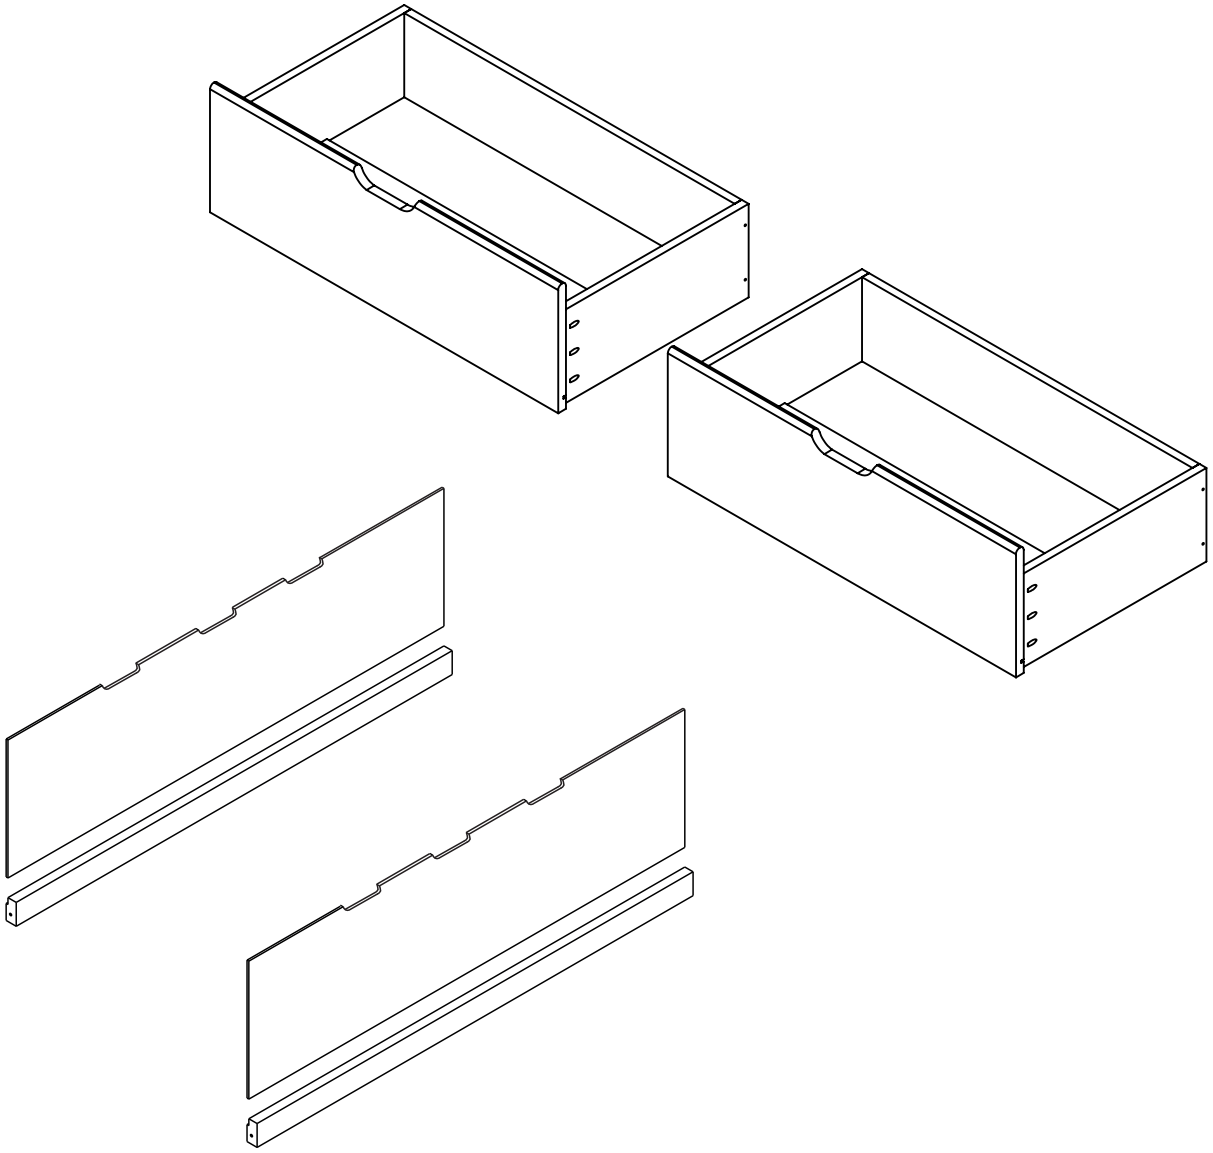


ATTENTION




1 - Read and observe carefully all the assembly instructions before beginning assembly.
2 - The assembly of the product must be done on a clean and flat surface. We suggest to use the packaging to cover the floor to avoid damages.
3 - The screw must be tightened periodically.
4 - Avoid contact with sharp objects.
5 - Avoid banging pieces together.



‘’Please! Confirm all parts and hardware are included to assemble!’’

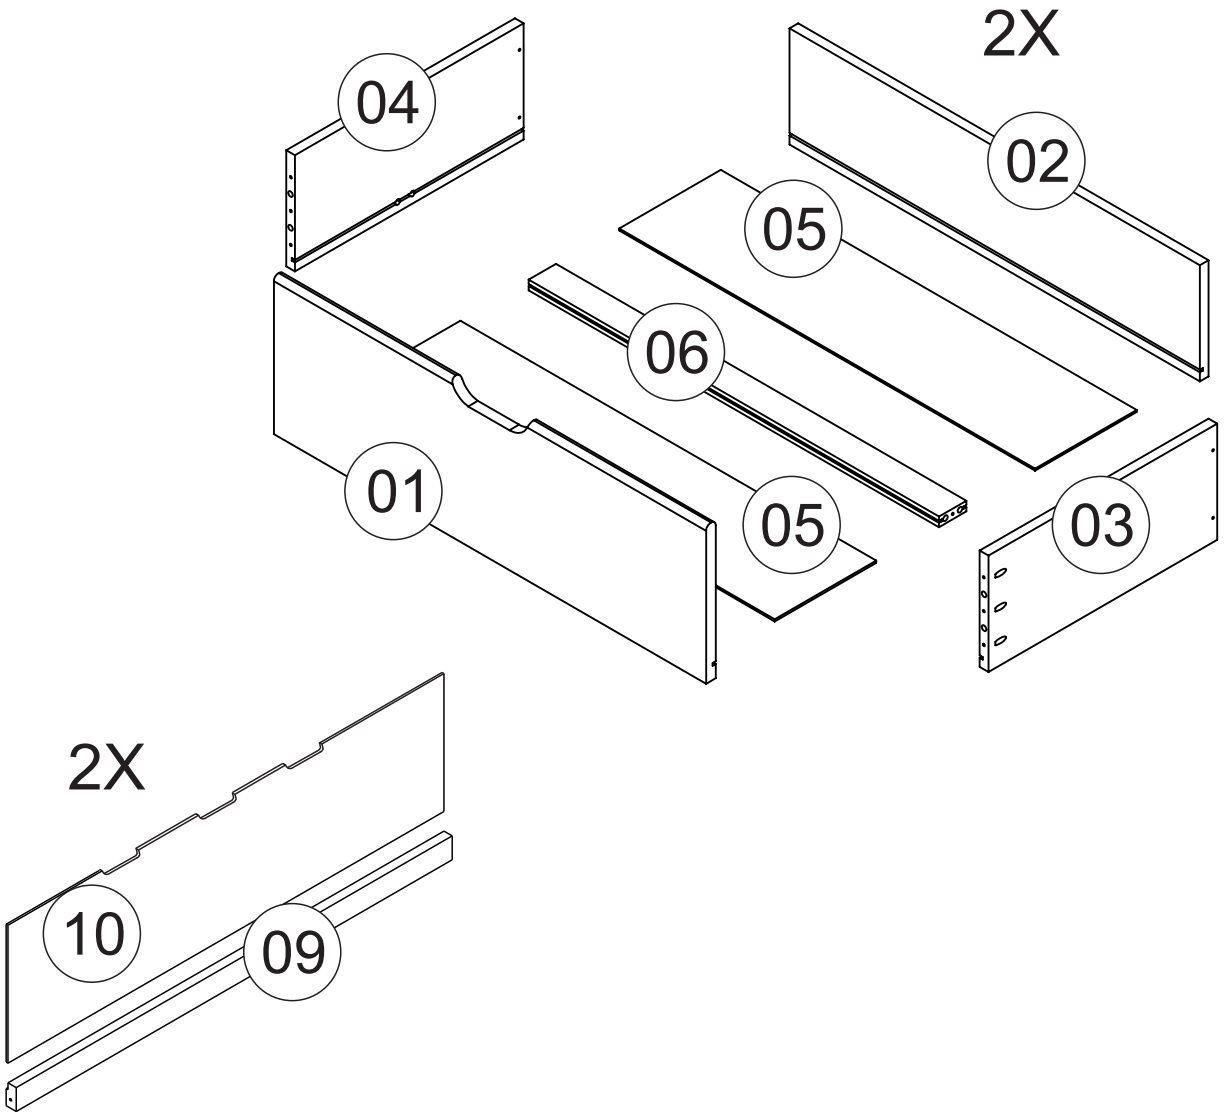


Hardware

T	 1 5/16"	08x
Z	 Ø1/8" x 5/8"	48x
AP	 Ø1/8" x 1 3/8"	28x
AW	 Ø3/8" x 1 3/8"	16x

ASSEMBLY INSTRUCTIONS


Step 01

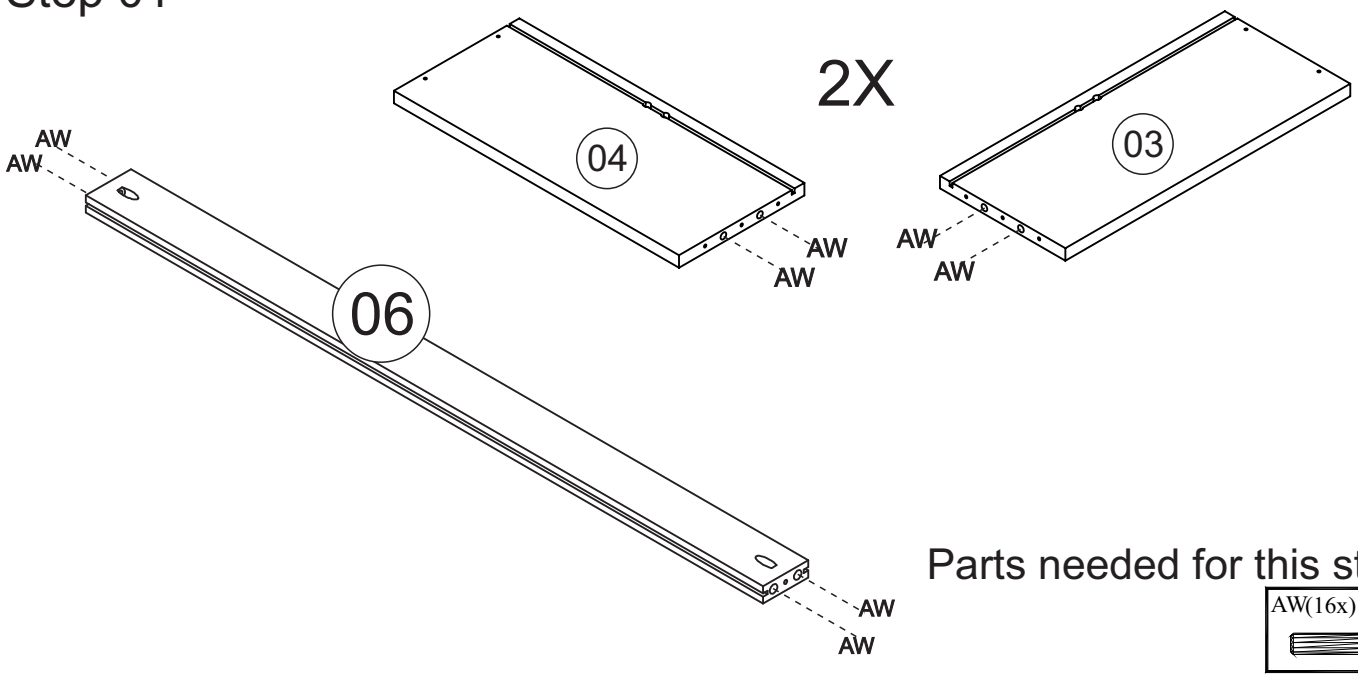

Parts needed for this step:

AW(16x)


Step 02

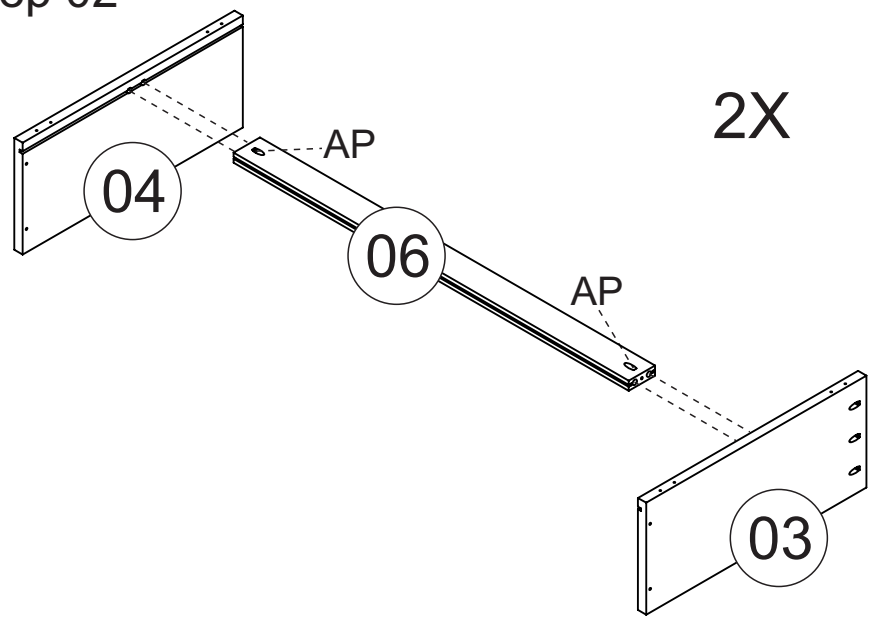

Parts needed for this step:

AP(04x)


Step 03

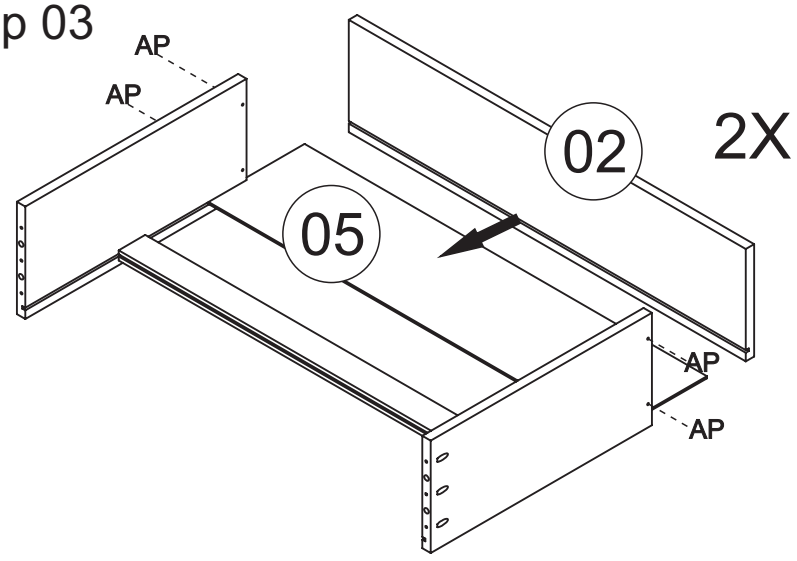

Parts needed for this step:

AP(08x)


Step 04

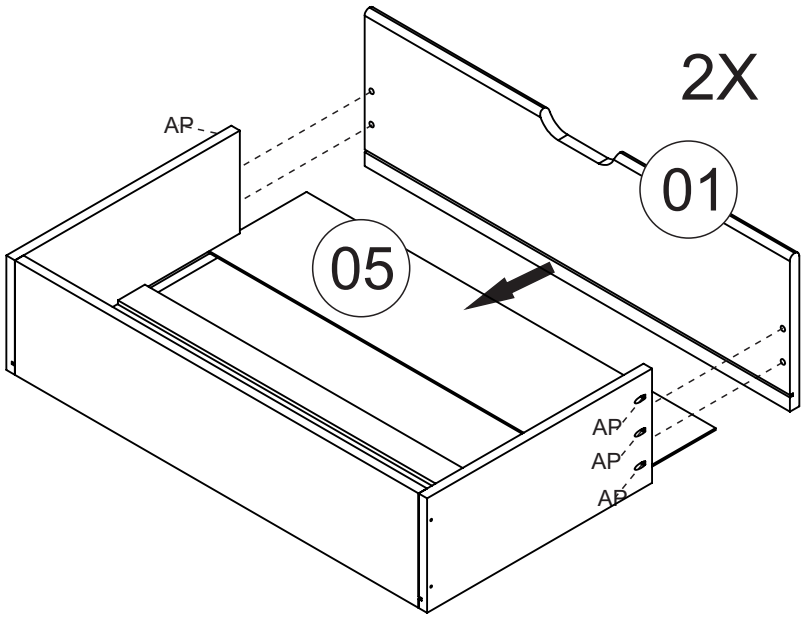

Parts needed for this step:

AP(12x)


Step 05

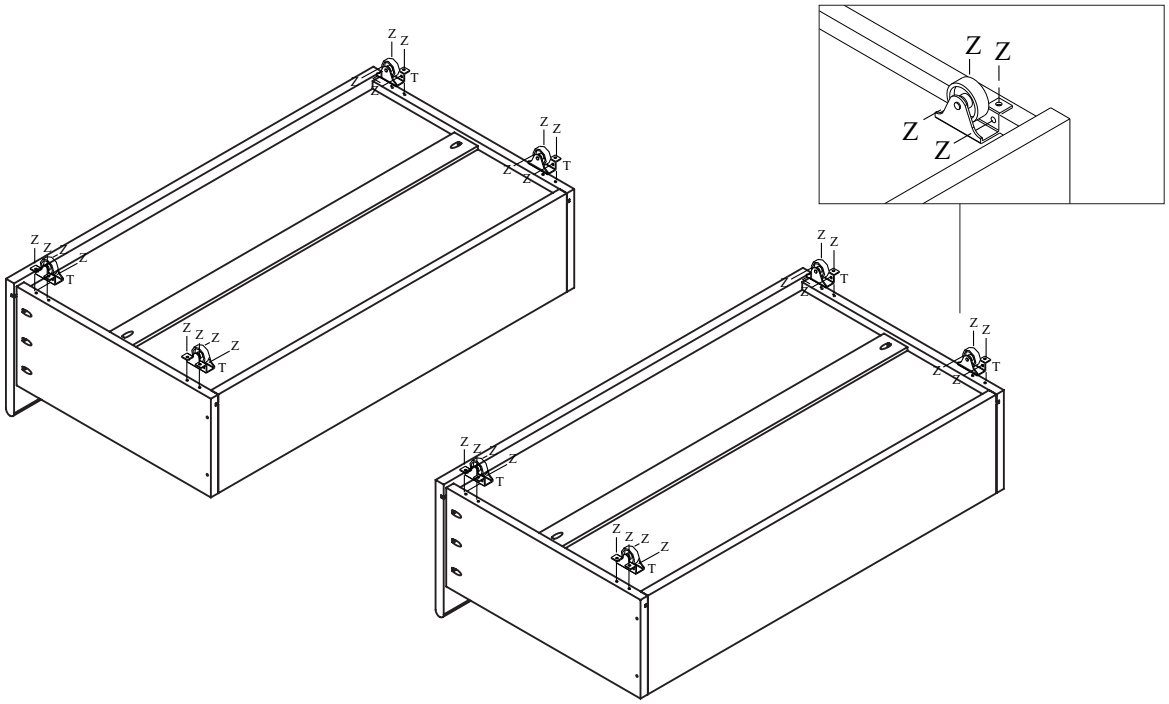

Parts needed for this step:

Z (32x)	T (8x)

Step 06

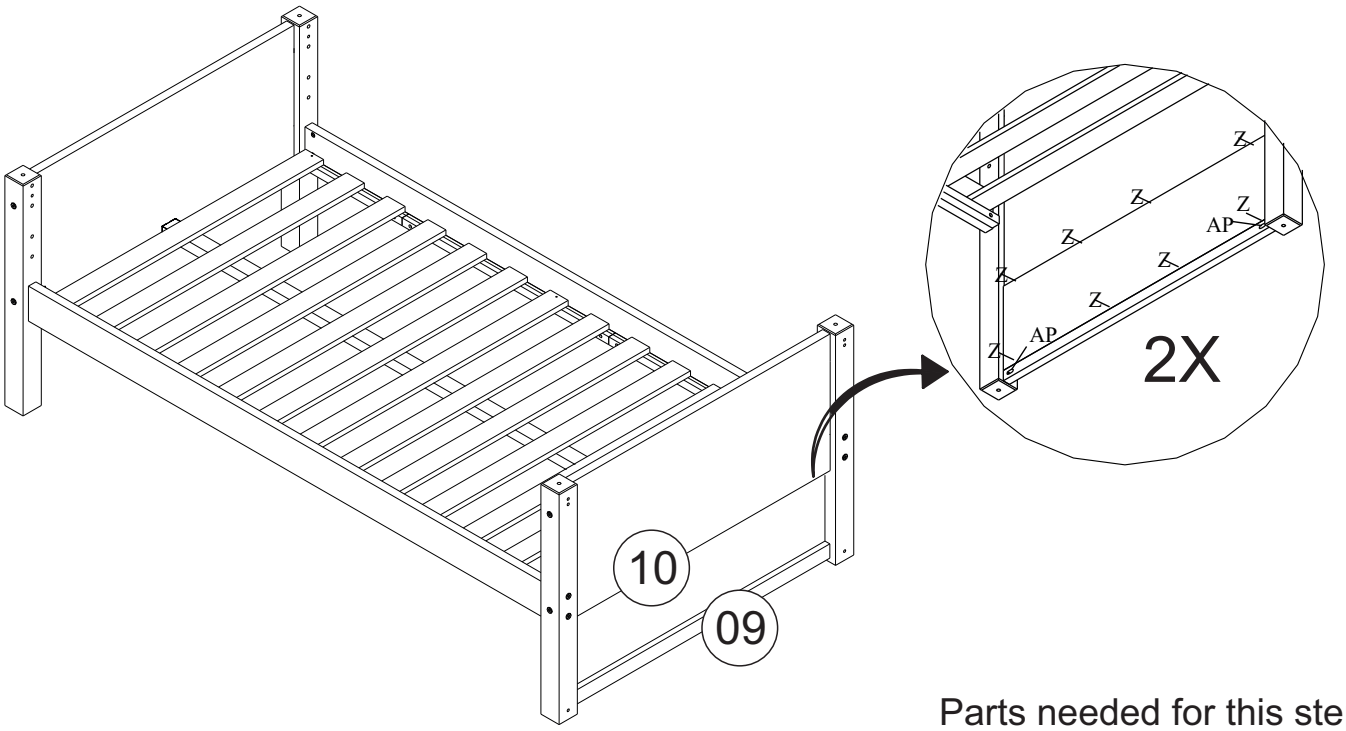

Parts needed for this step:

AP (4x)	Z (16x)

Step 07

