


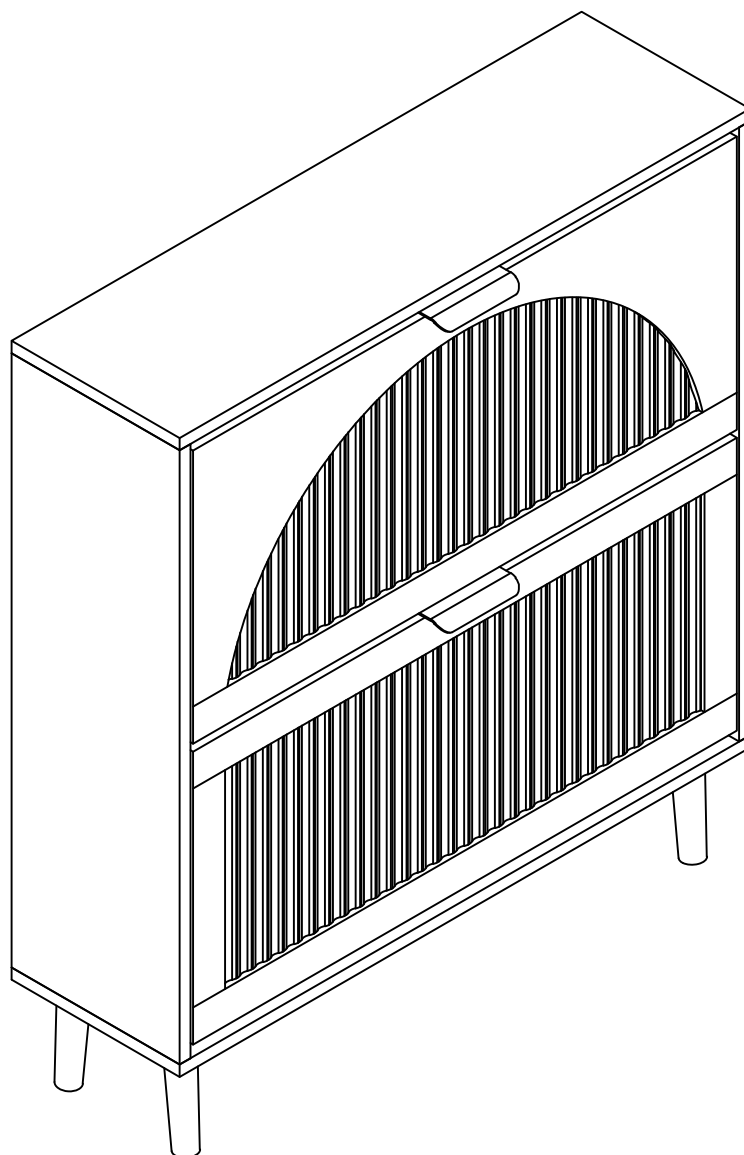


Please note: Items cannot be returned once assembled

HLG227

Version:1.0




IT IS RECOMMENDED
TO USE POWER TOOLS

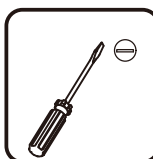


60MIN




EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

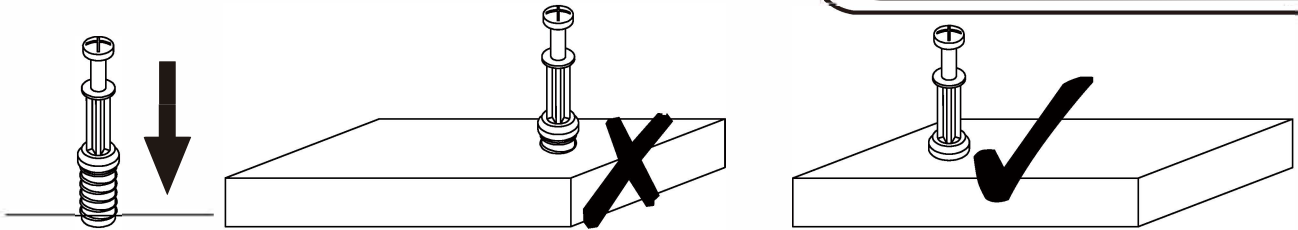


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

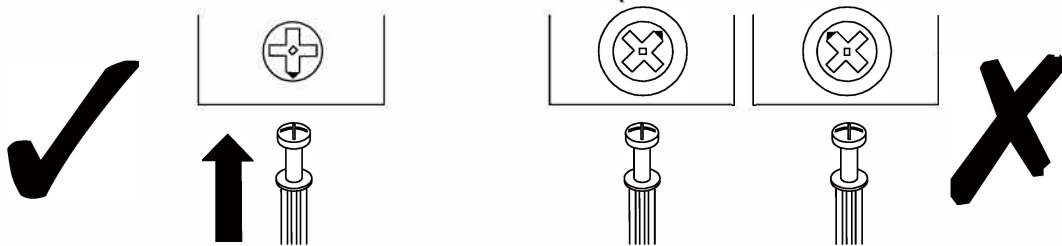










EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

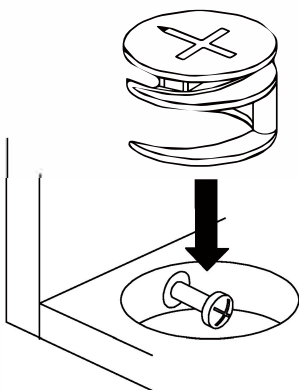





EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.








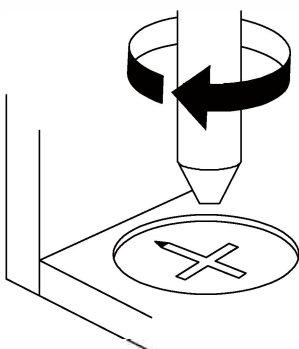



EN_Turn cam lock clockwise to tighten.

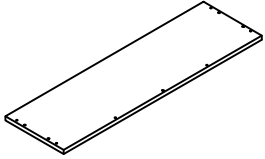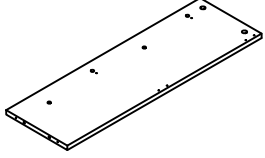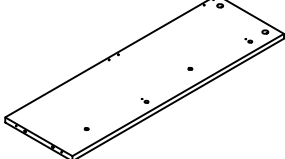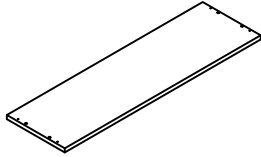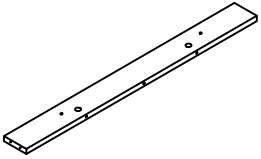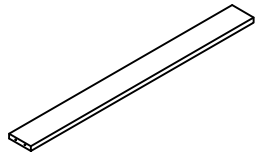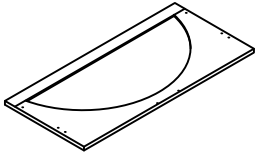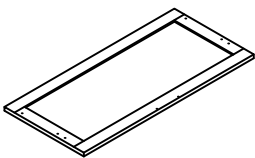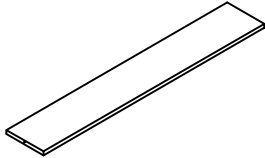NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤			
⑥		x1	
⑦		x4	
⑧		x1	
⑨		x1	
⑩		x2	

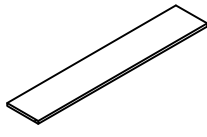NO.		QTY	SPARE
⑪		x4	
	 Hardware Kit	x1	

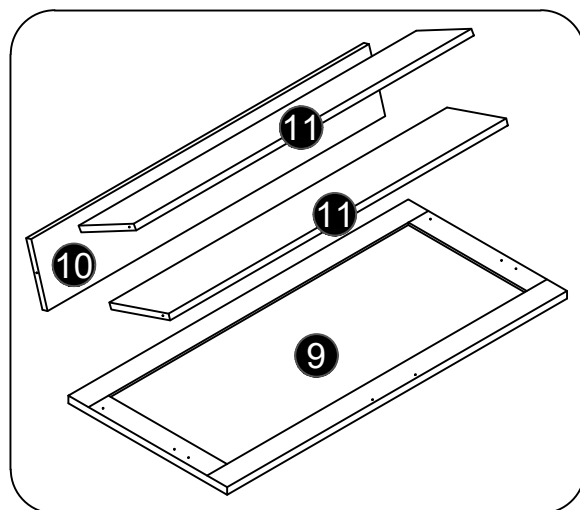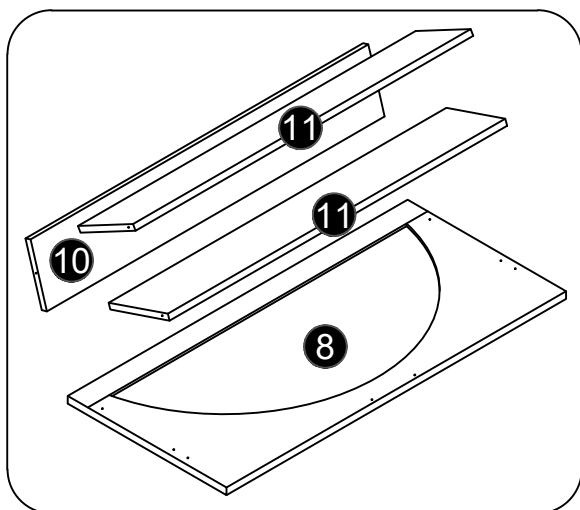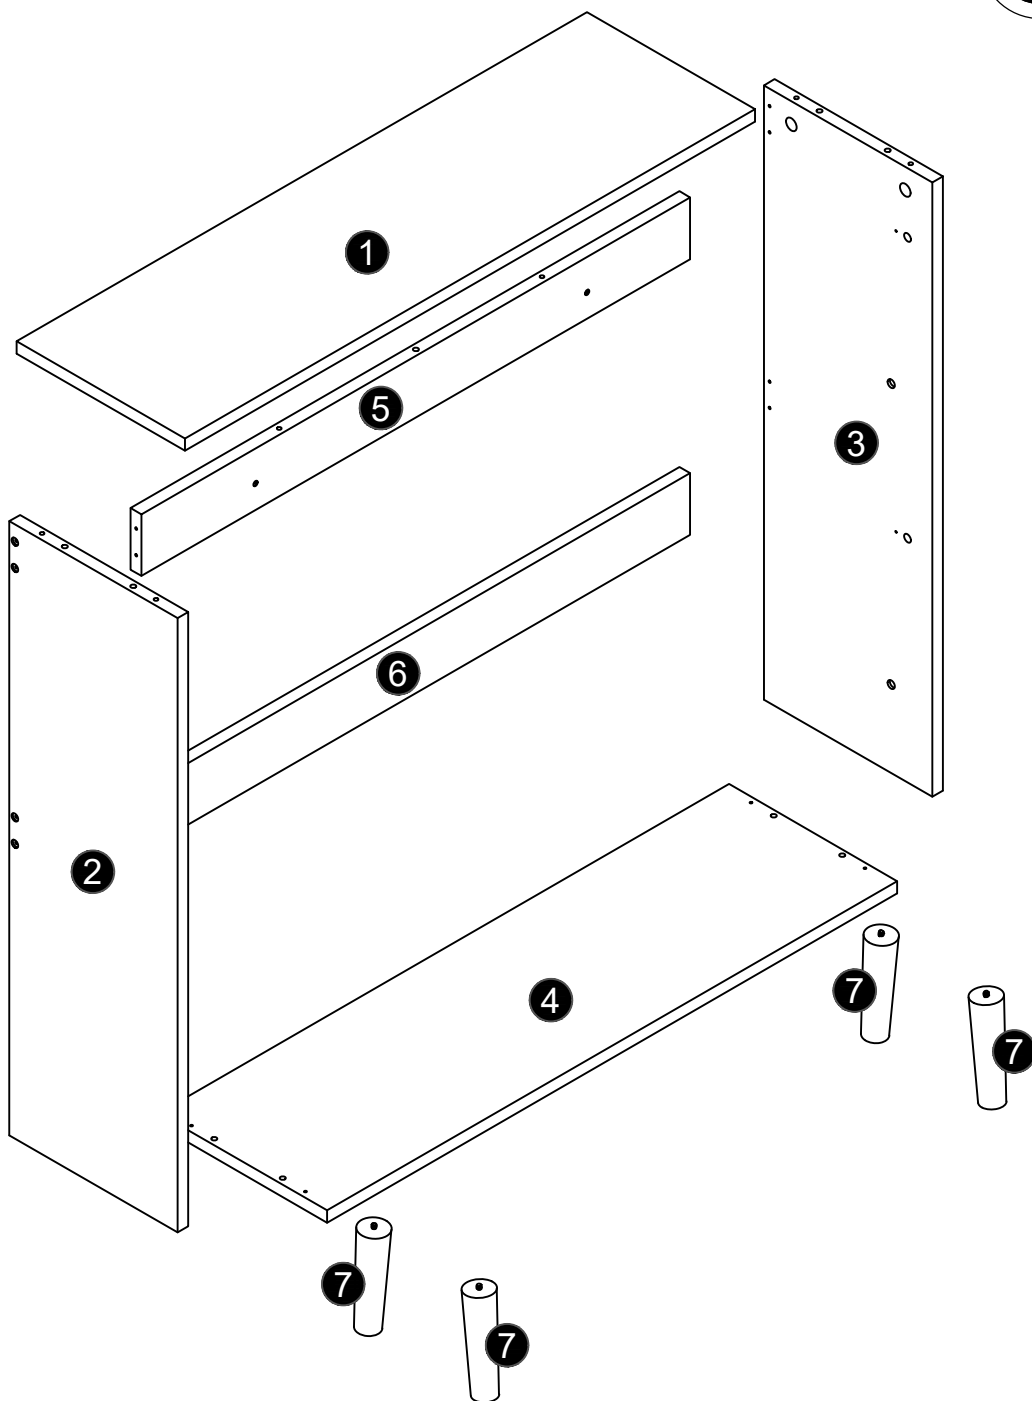


A x6 Ø6x35mm 	B x6 Ø15x10mm 	C x9 Ø6x30mm 	D x12 Ø4x35mm +1(spare) 	E x28 Ø3.5x12mm +2(spare) 	F x4 +1(spare) 
G x4 +1(spare) 	H x4 +1(spare) 	I x1 	J x4 	K x20 Ø4x14mm +2(spare) 	L x2 
M x4 	N x2 	O x2 O-1 O-2  	P x8 +2(spare) 	Q x4 	R x2 

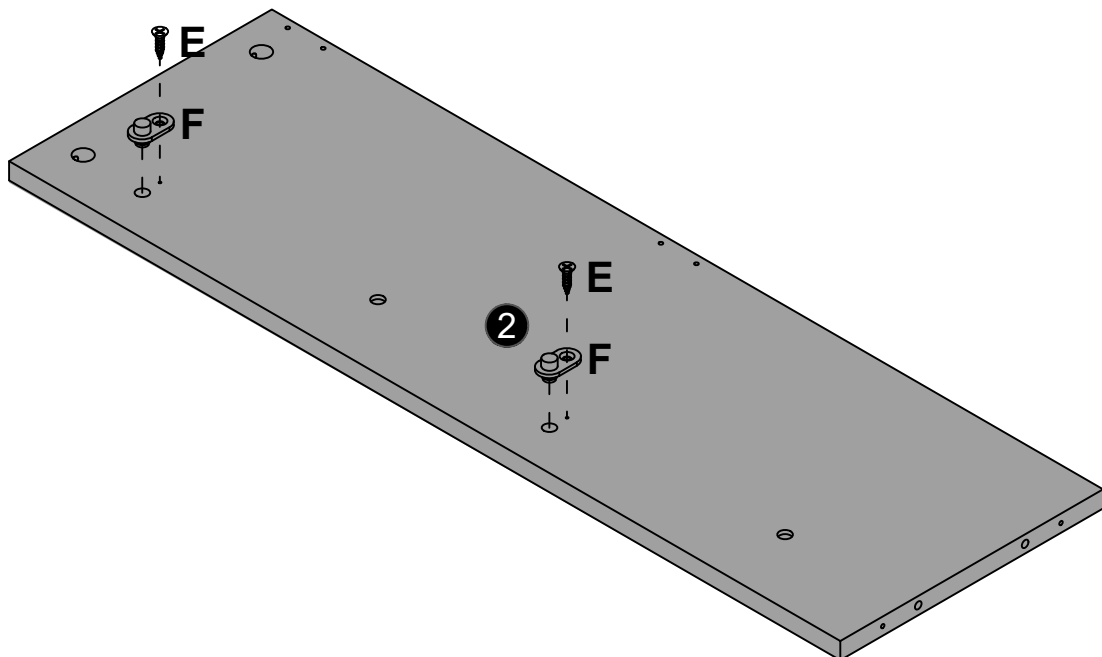E x2**F** x2**01**



E x2




F x2

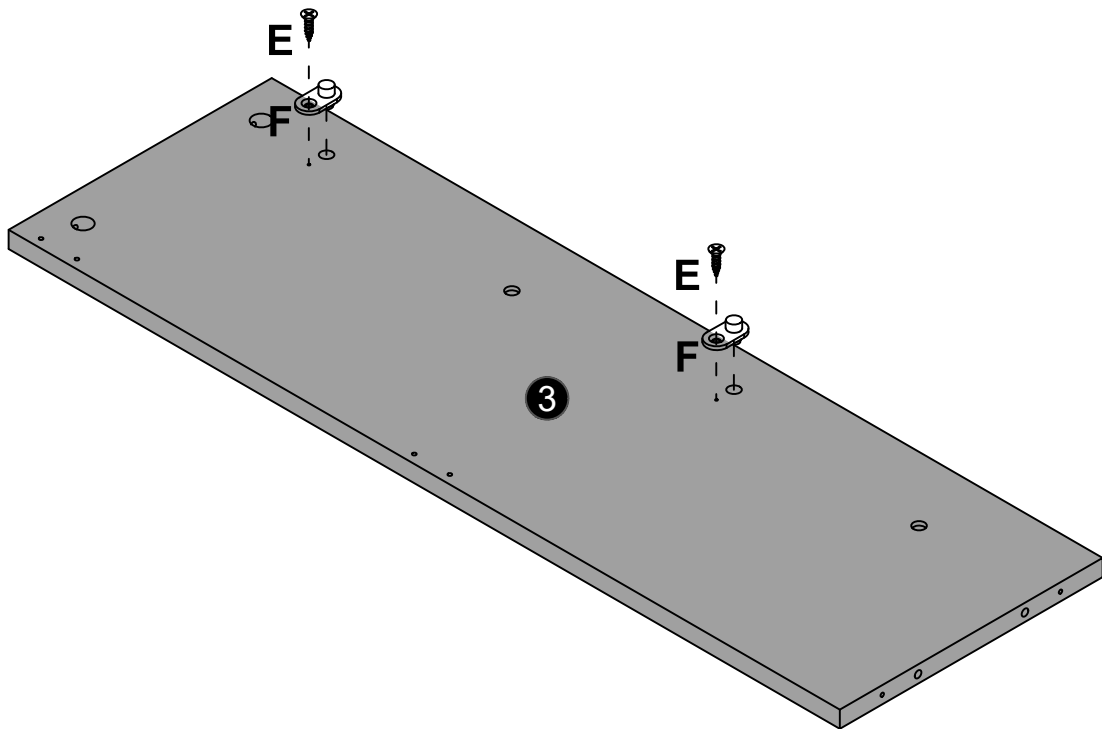


D x4

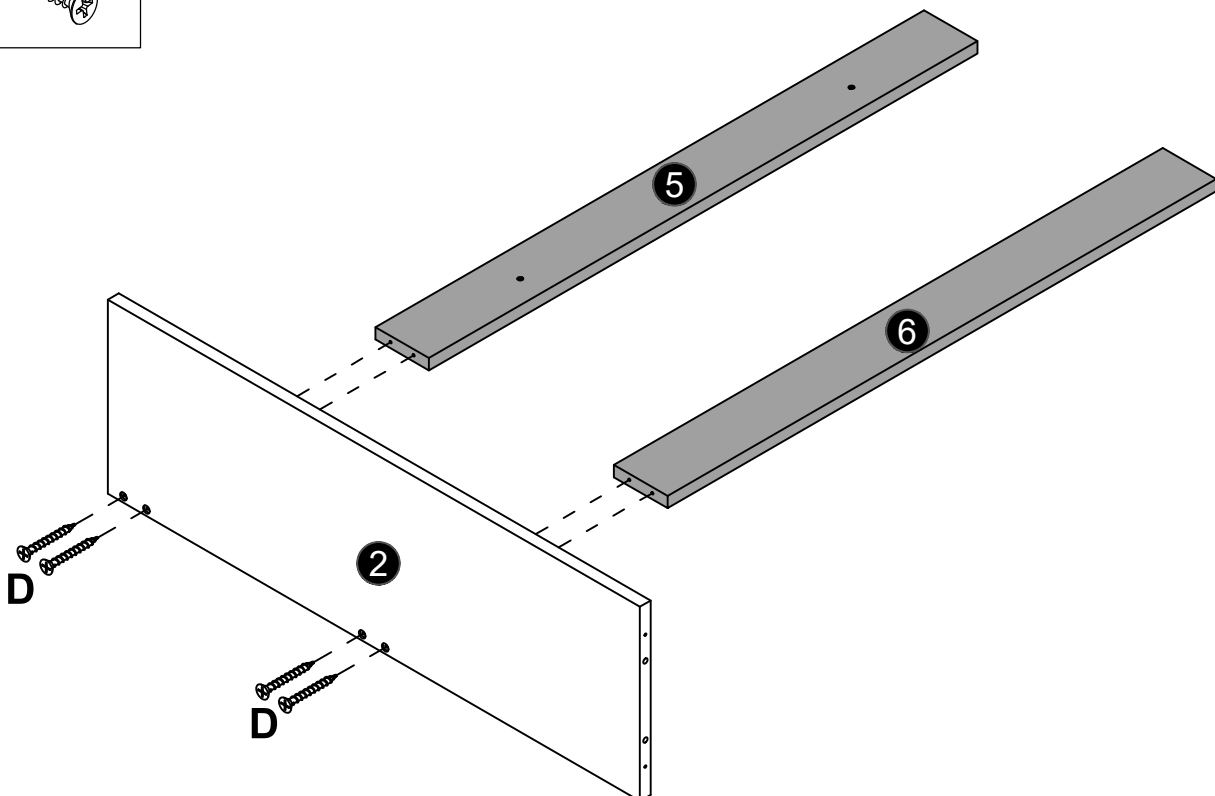

D x4




04

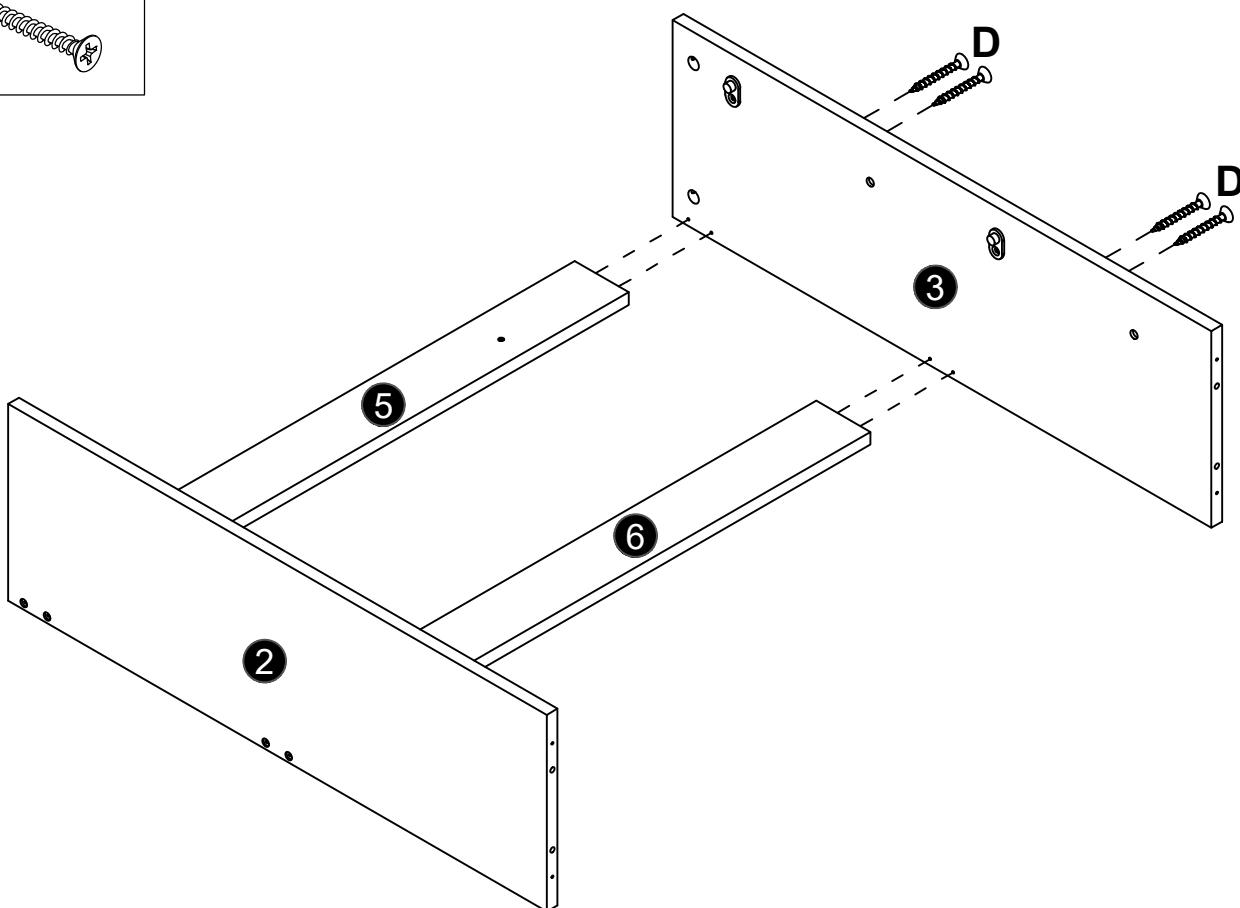


C x4







D x4



05

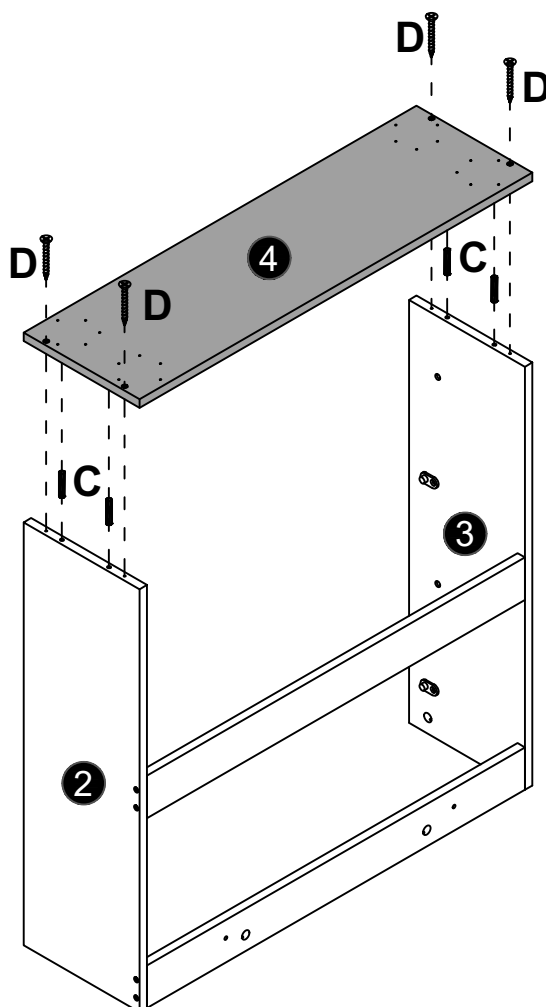

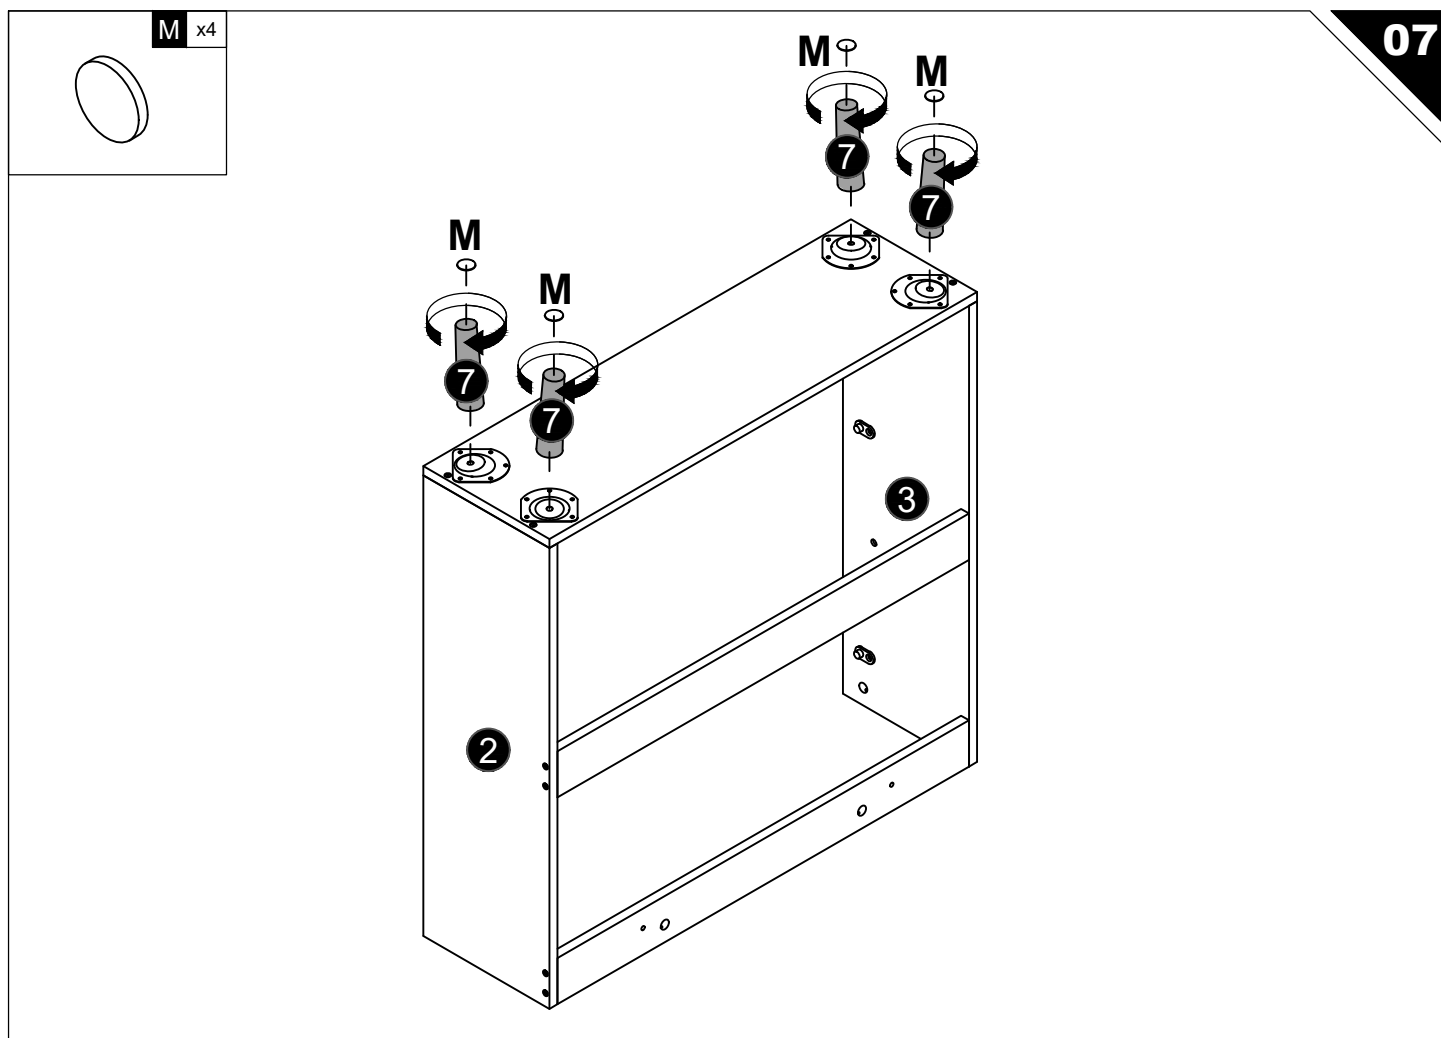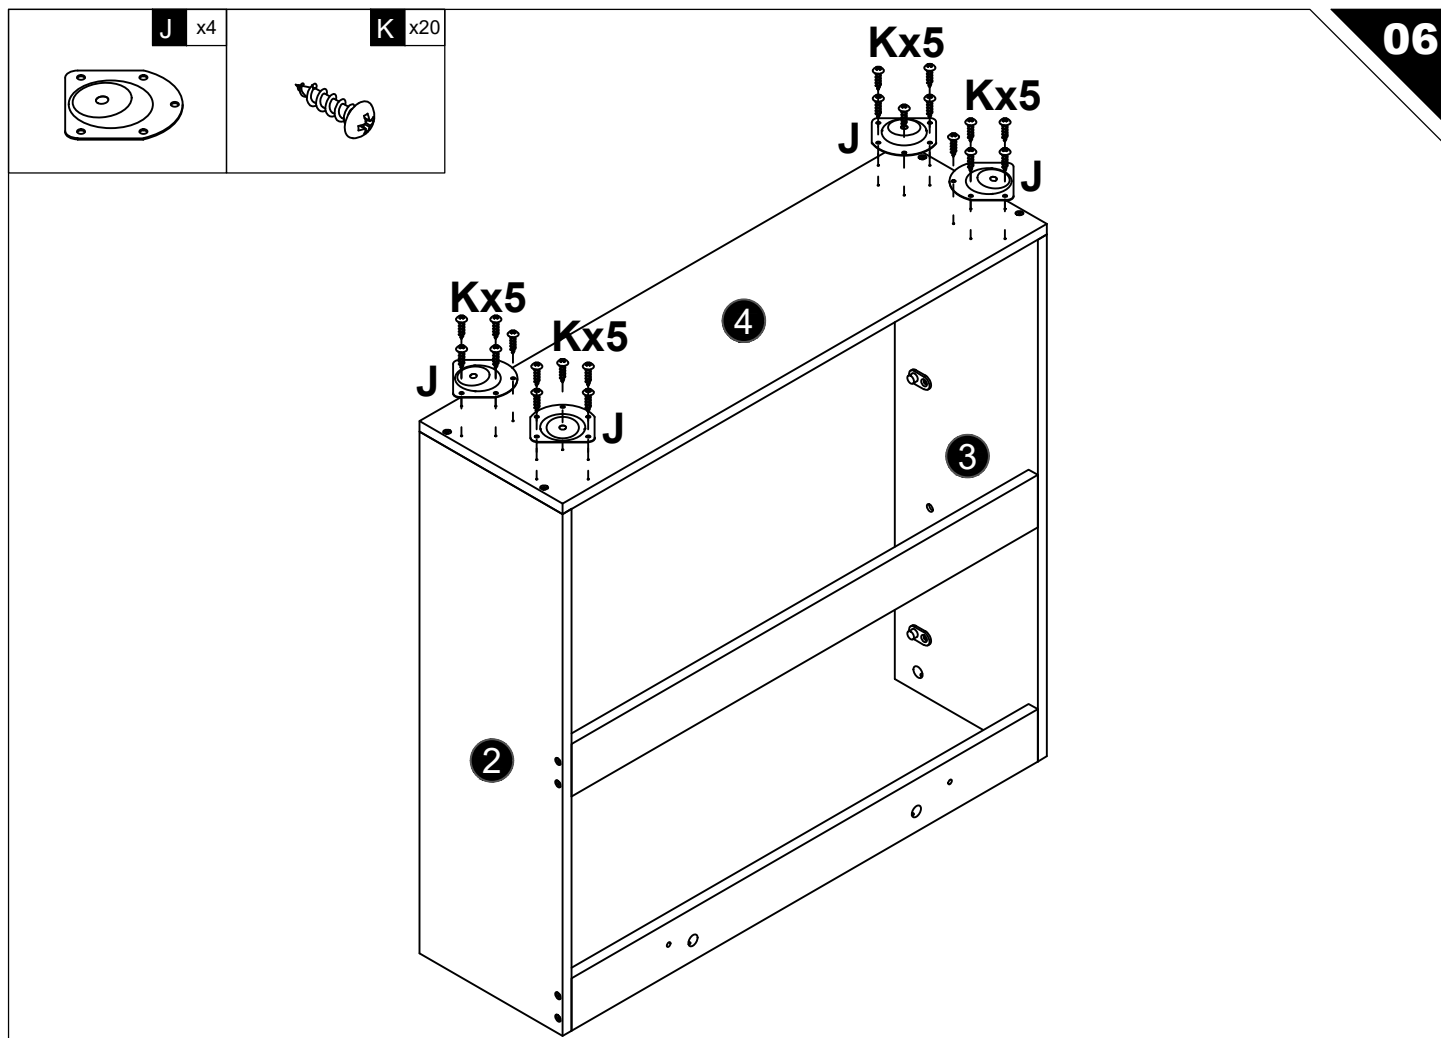


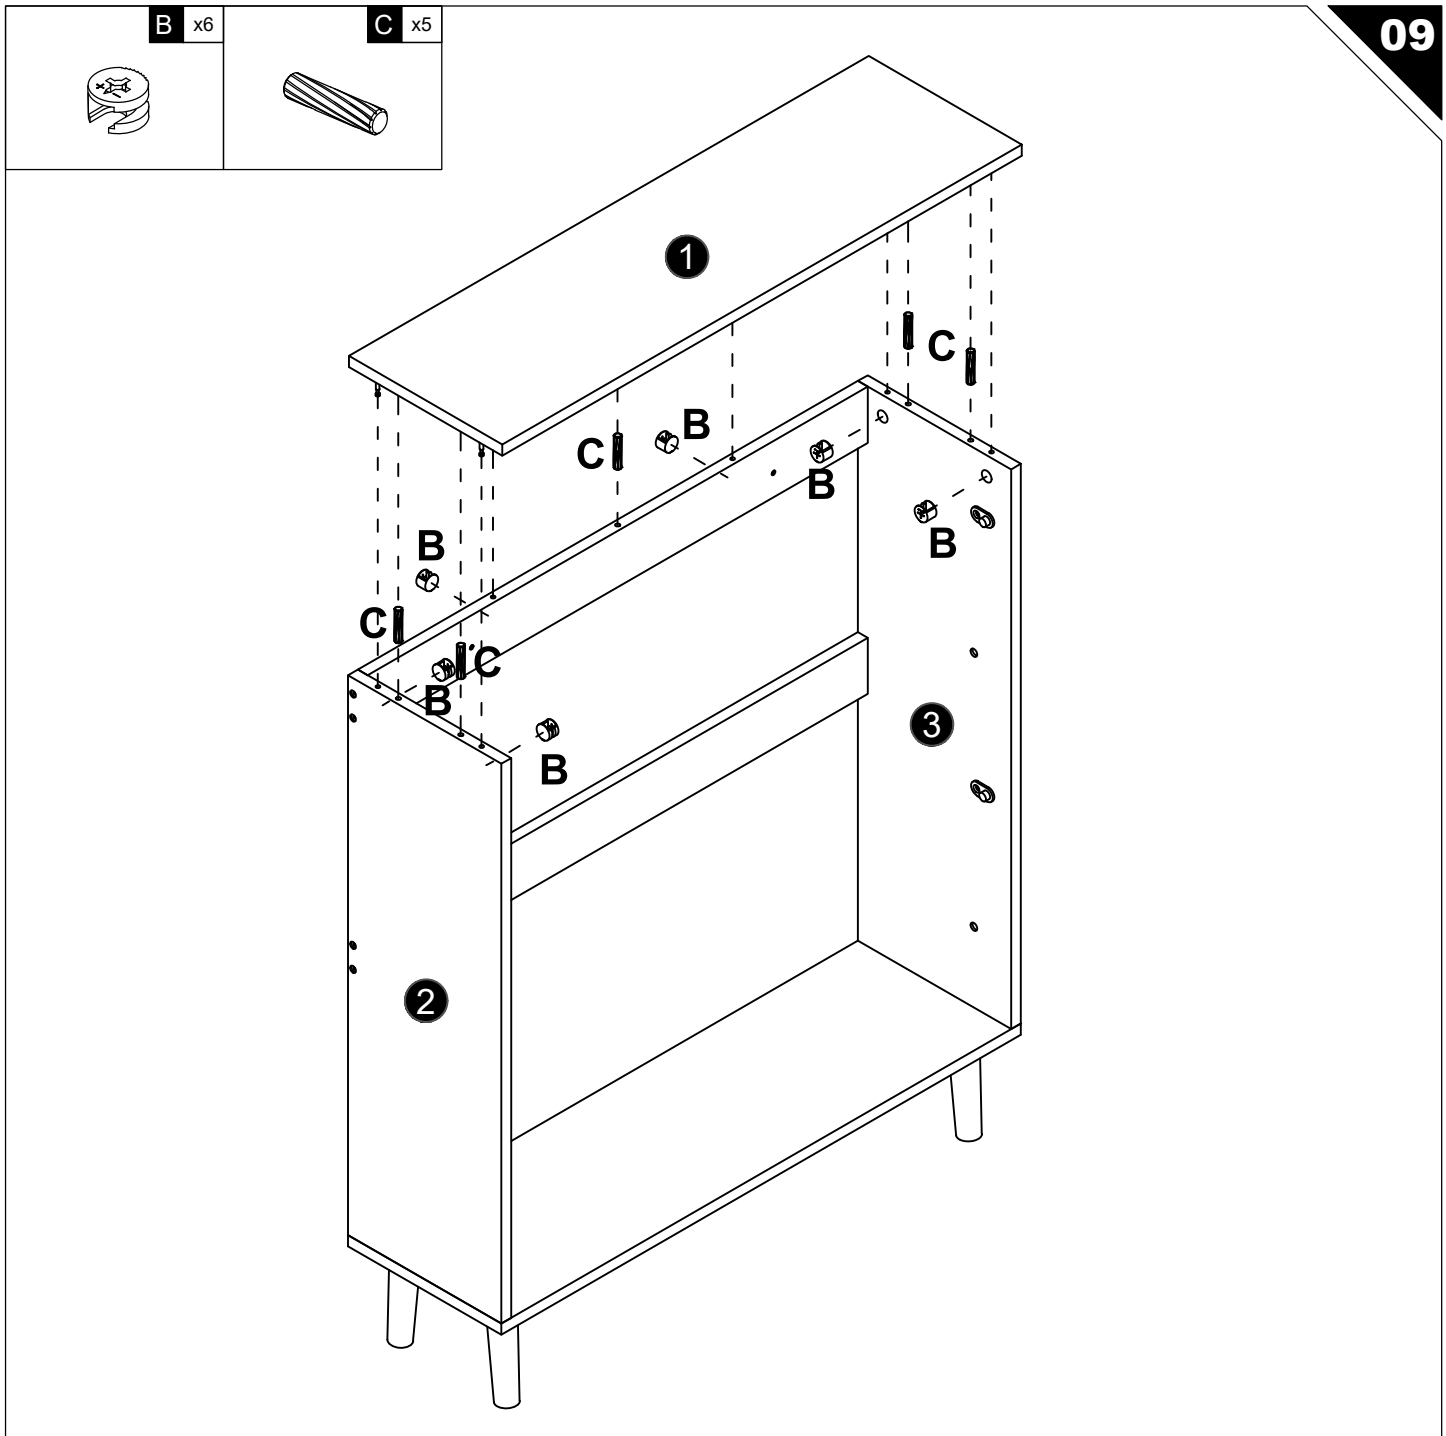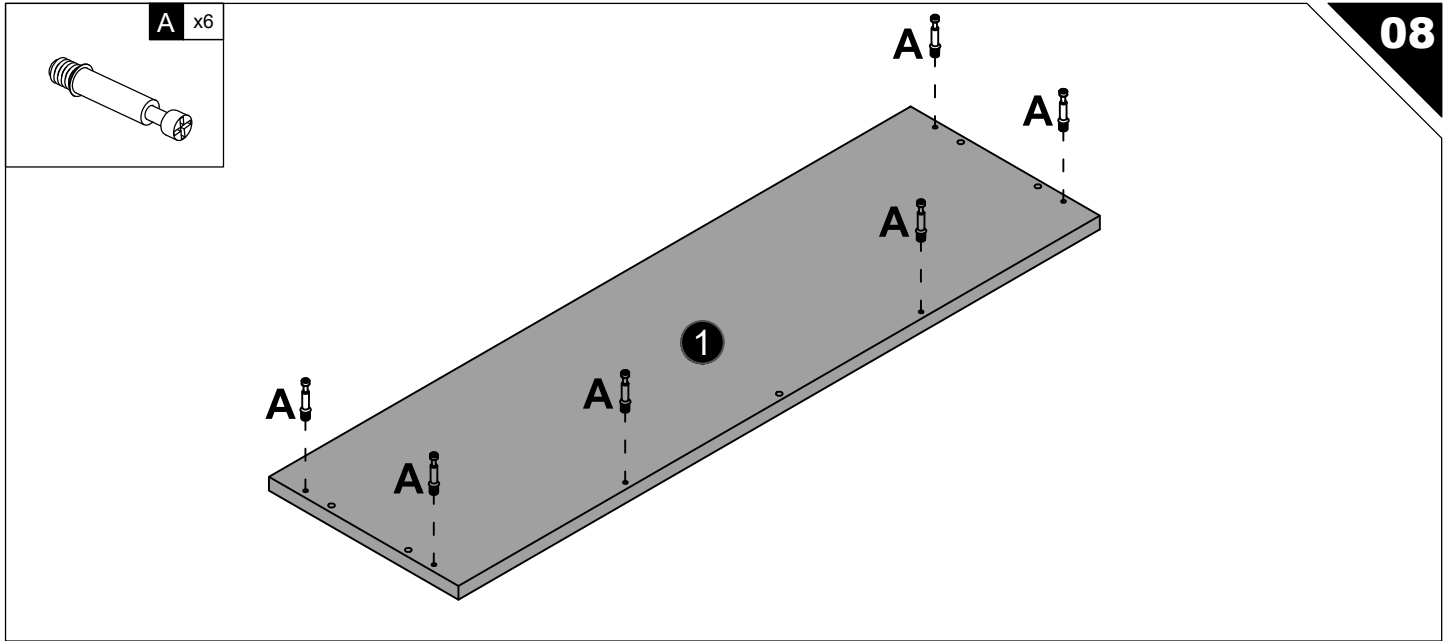


O x2




O-1 O-2

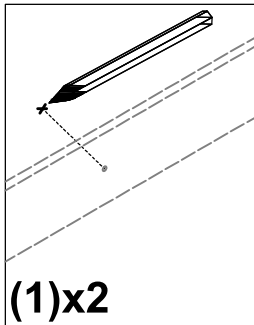


First fix the anti-rewind screw in the reserved hole of the product.

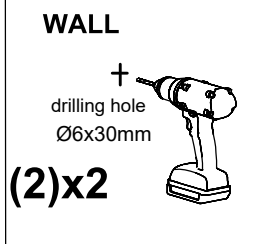


Then use a tape drill to make holes in the wall that are suitable for the product screws.

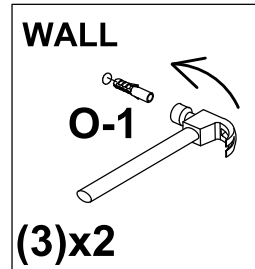

Then, put the expansion bolt into the hole

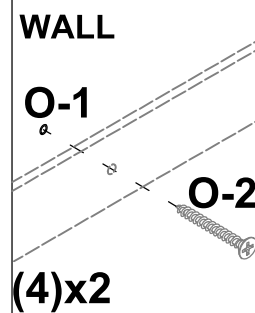




Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

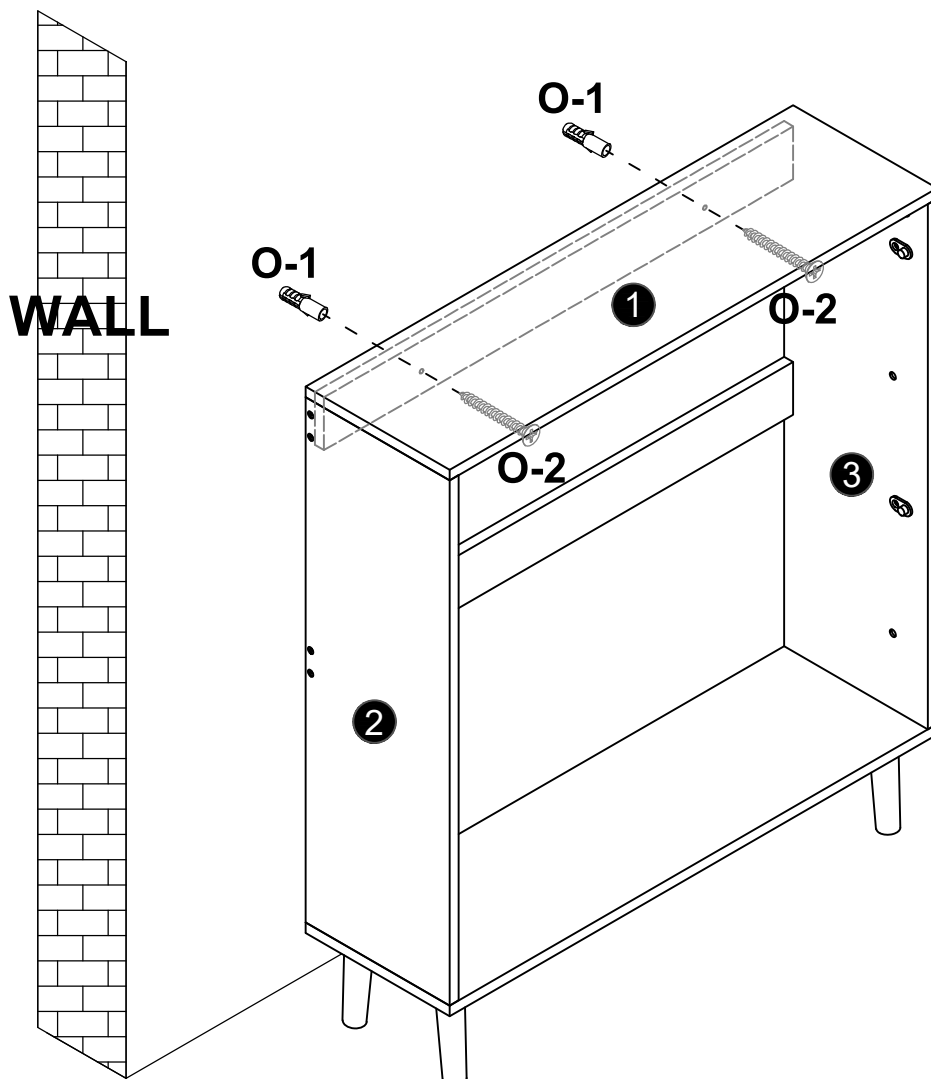

E x6

L x1


R x1

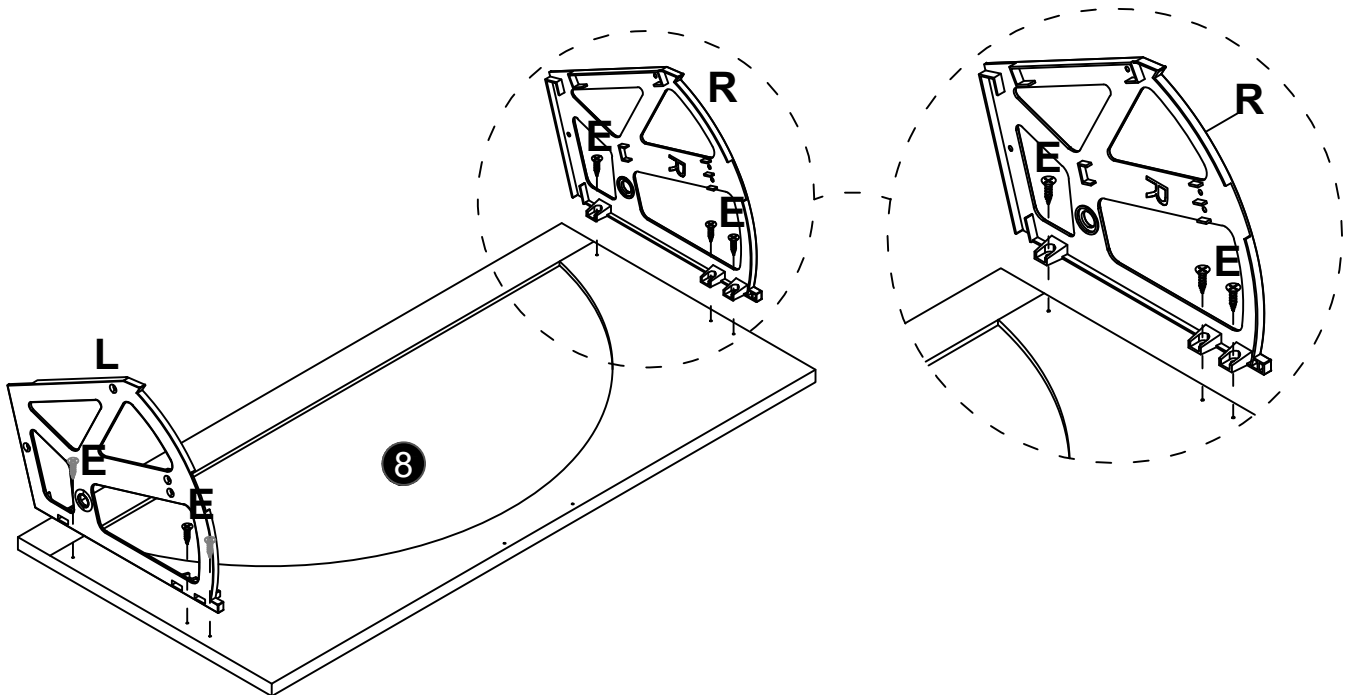

E x2






Please push the shoe racks L and R slightly with your hands .As shown in the figure, facing towards both sides,Place the 10th back panel into the back panel slot As shown in the figure.

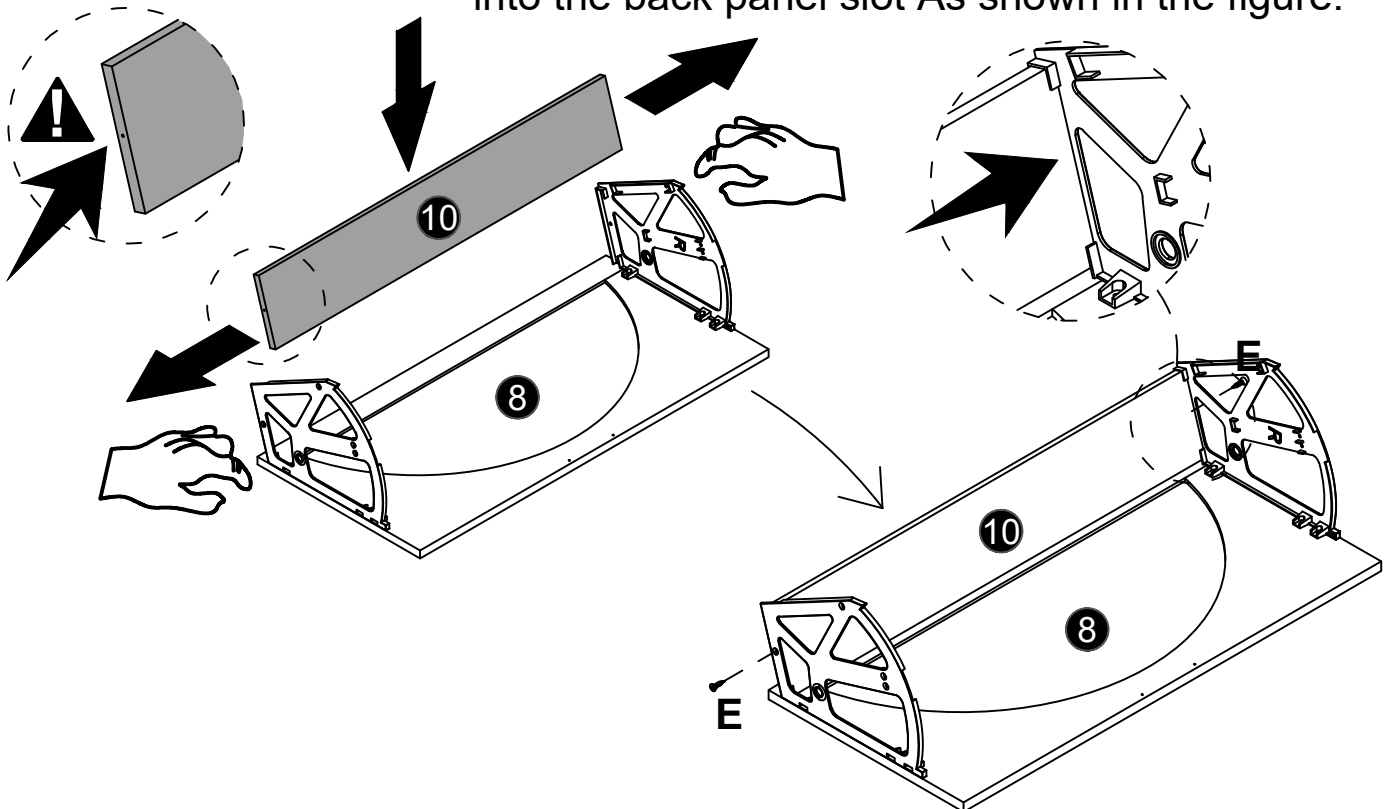

E x2**13**




Please push the shoe racks L and R slightly with your hands .As shown in the figure, facing towards both sides,Place the 11th back panel into the back panel slot As shown in the figure.

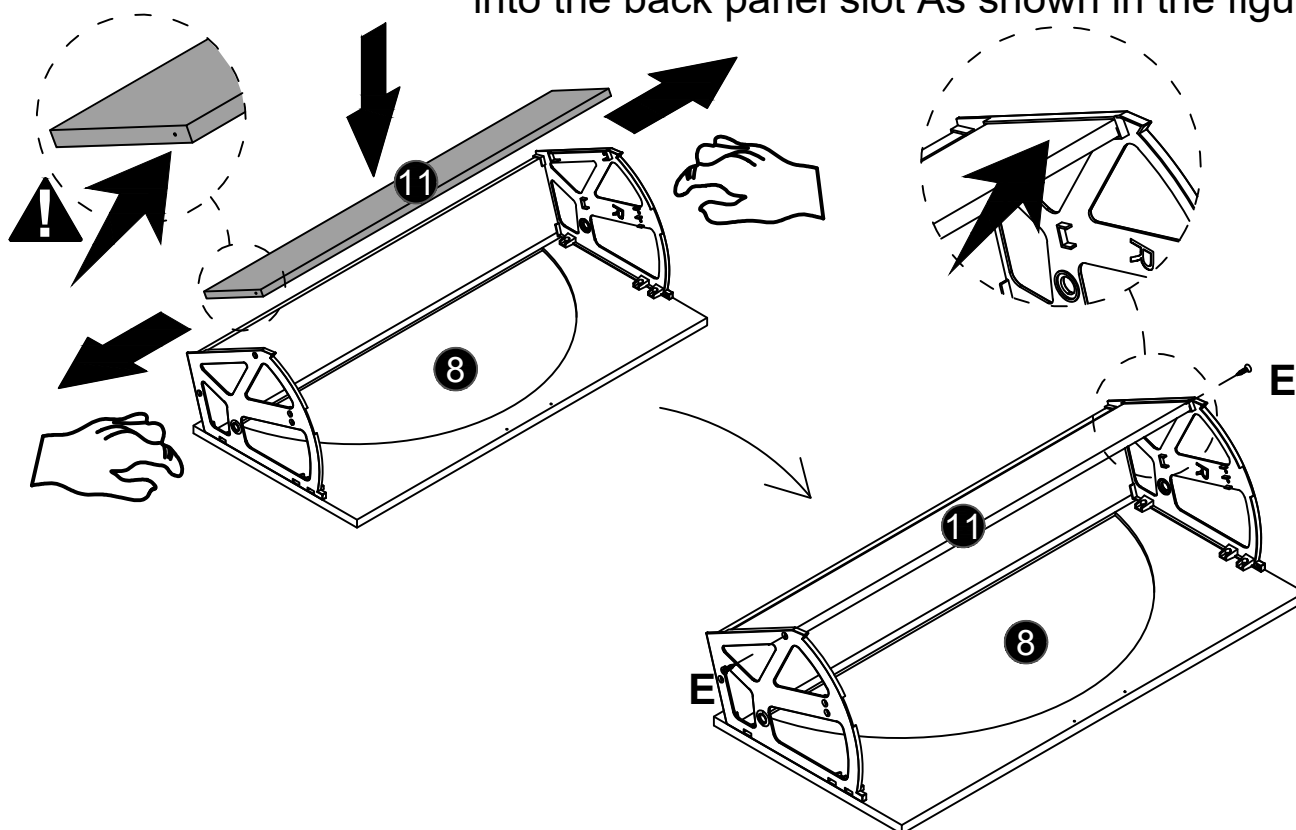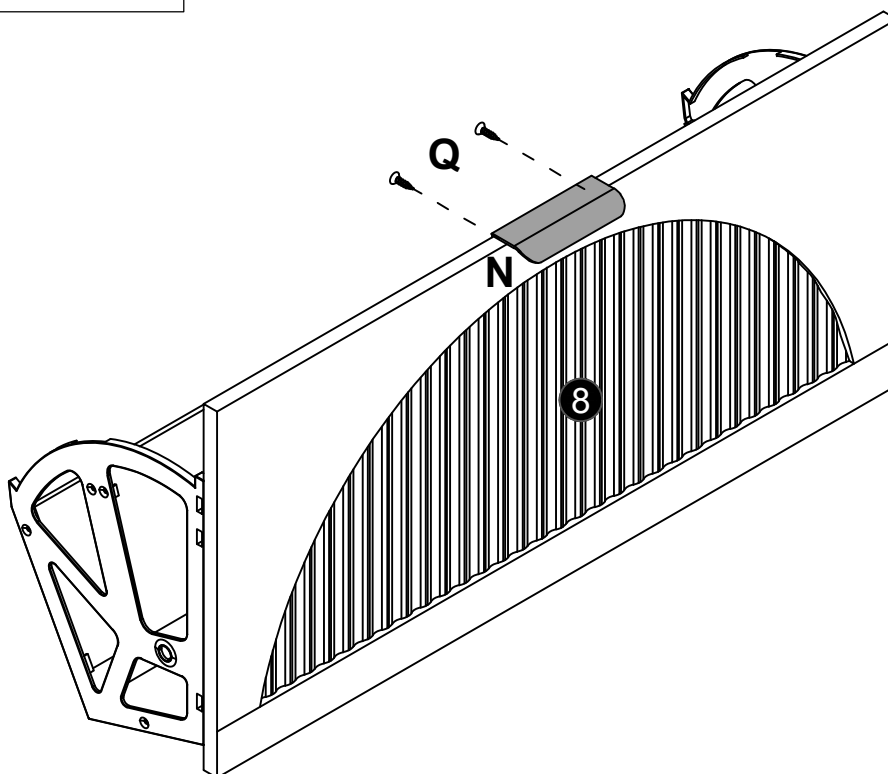**N** x1**Q** x2**14**

E x6

L x1


R x1

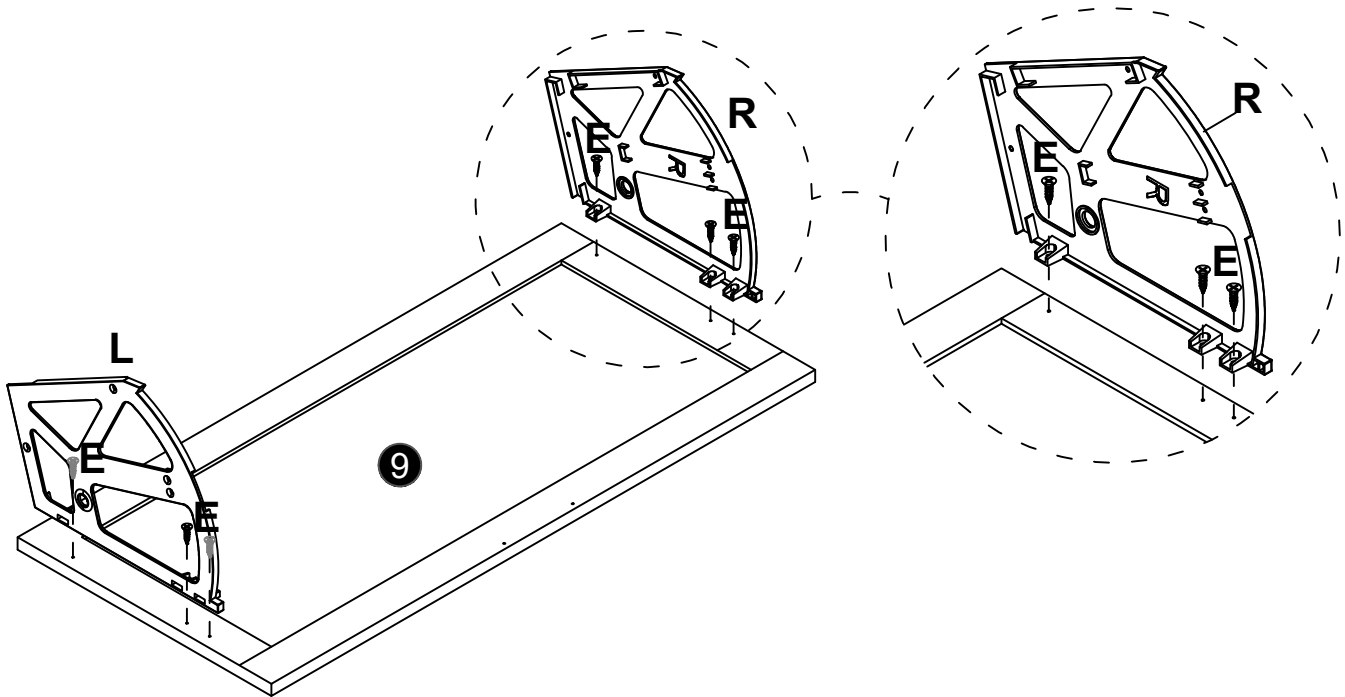

E x2






Please push the shoe racks L and R slightly with your hands .As shown in the figure, facing towards both sides,Place the 10th back panel into the back panel slot As shown in the figure.

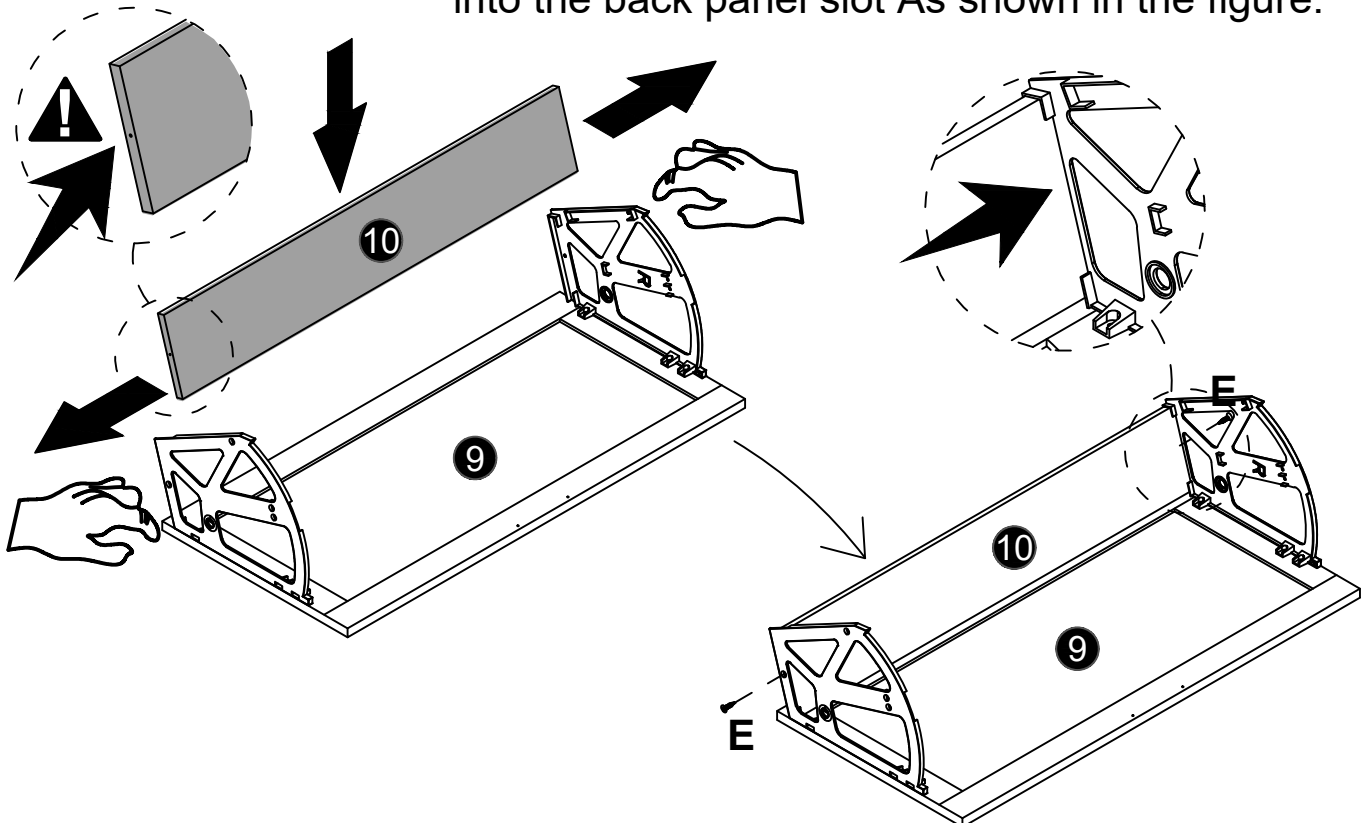

E x2**17**


Please push the shoe racks L and R slightly with your hands .As shown in the figure, facing towards both sides,Place the 11th back panel into the back panel slot As shown in the figure.

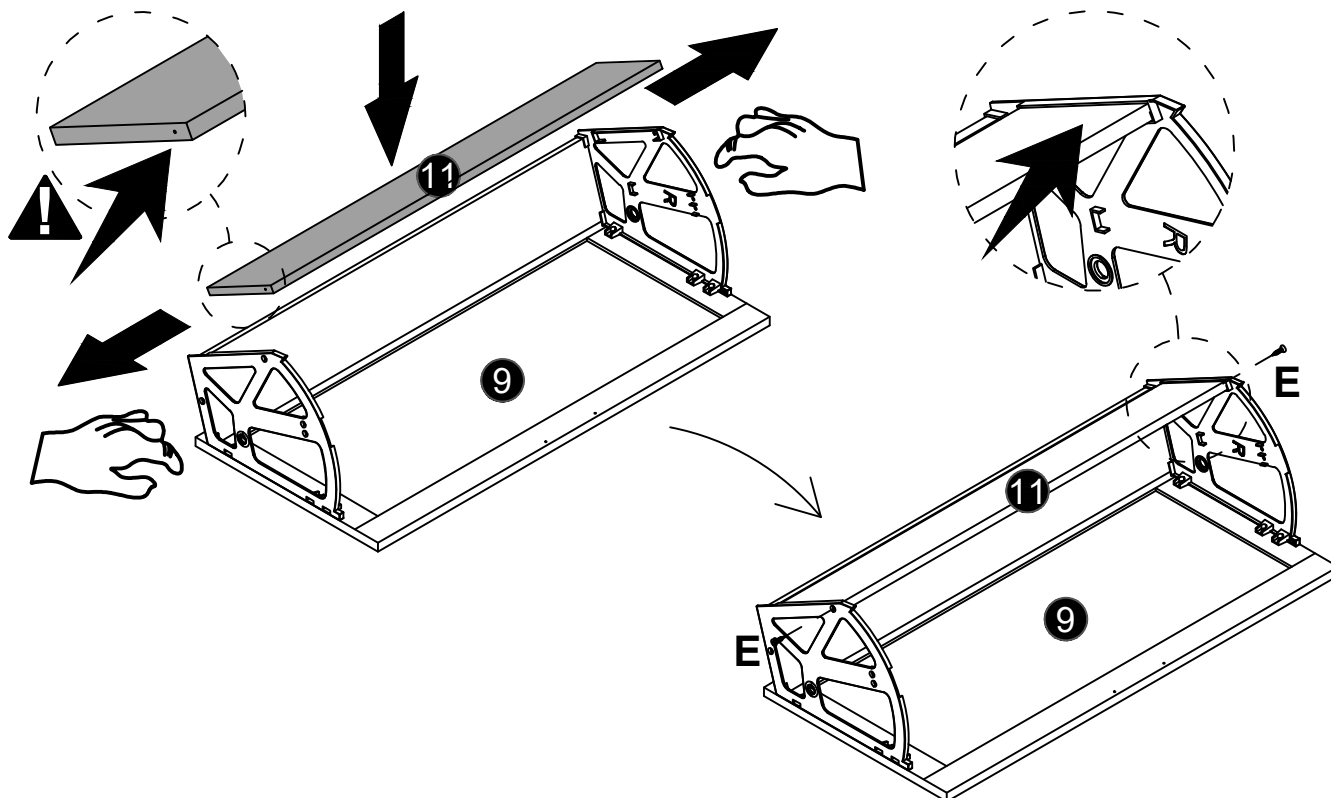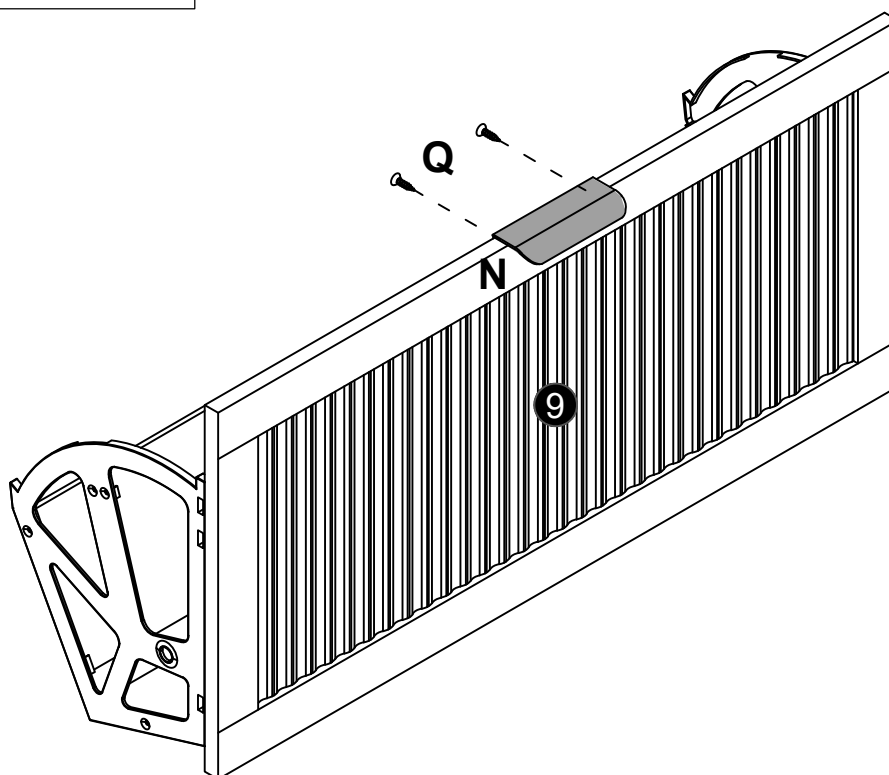**N** x1**Q** x2**18**



G x4




H x4




I x1

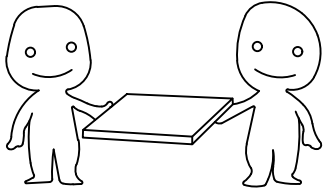


Need Two or More
People To Complete

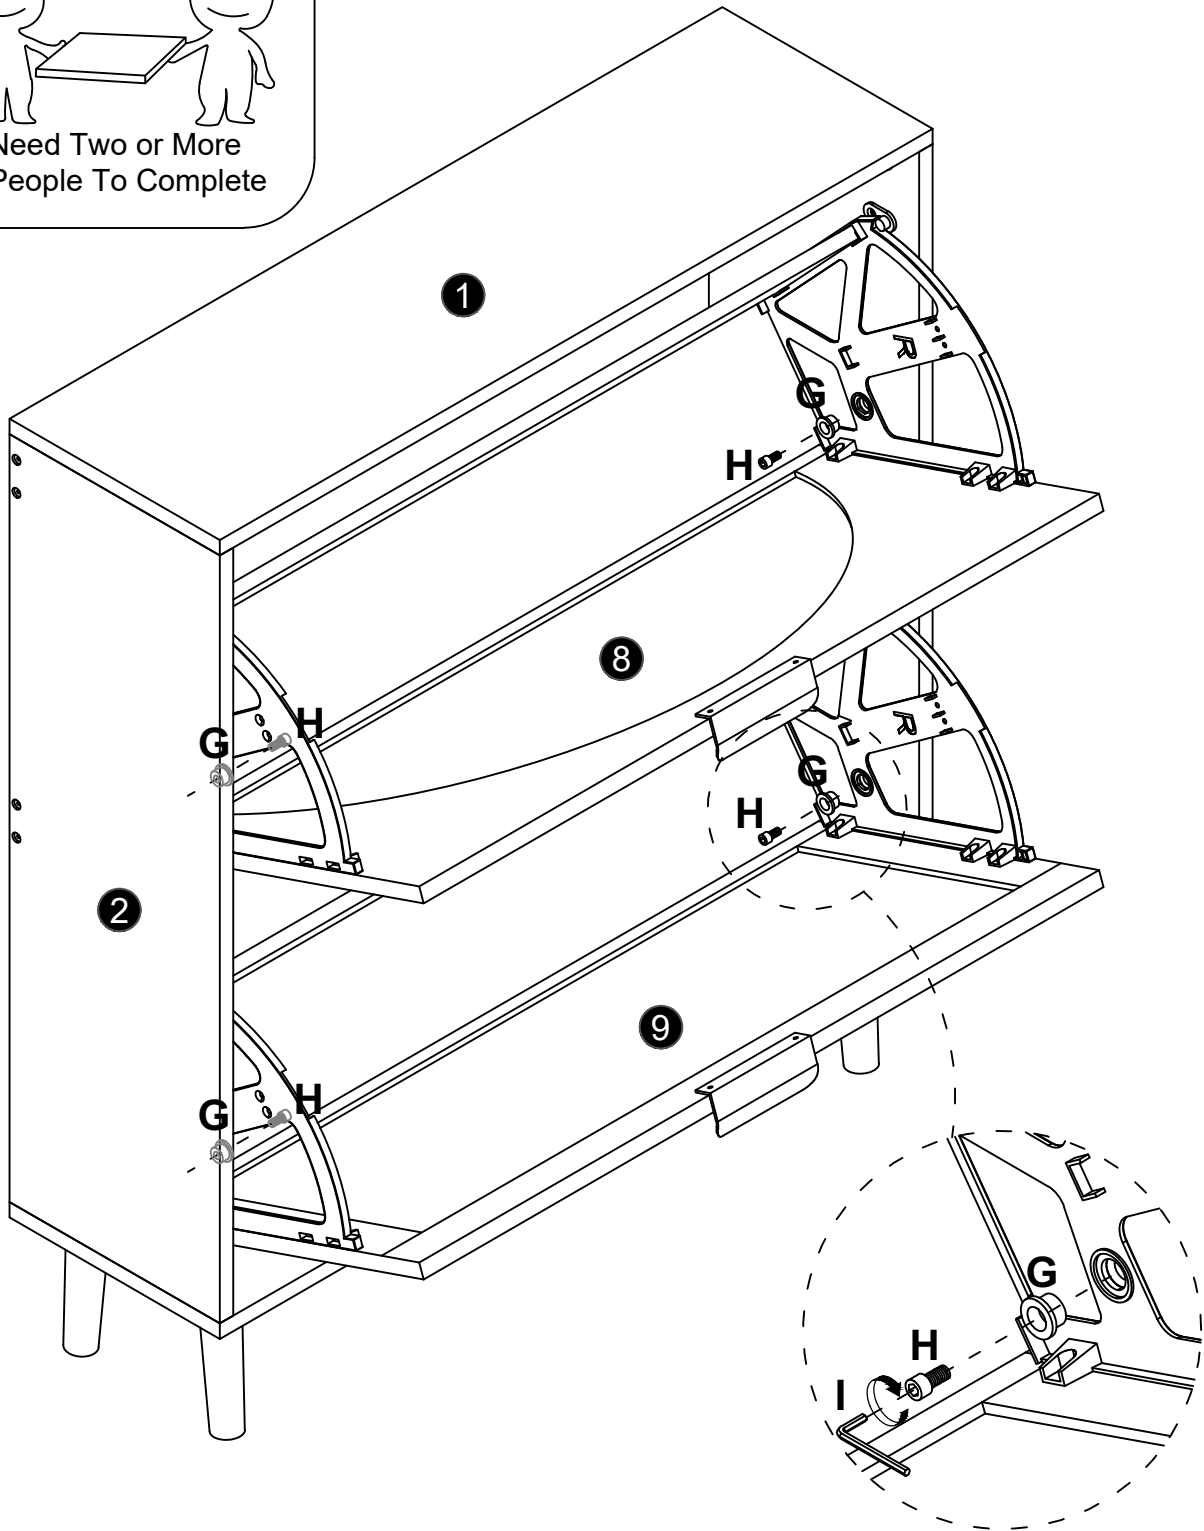


Note: When installing H, it is sufficient to reach 90% progress. Installing 100% may cause damage to G.

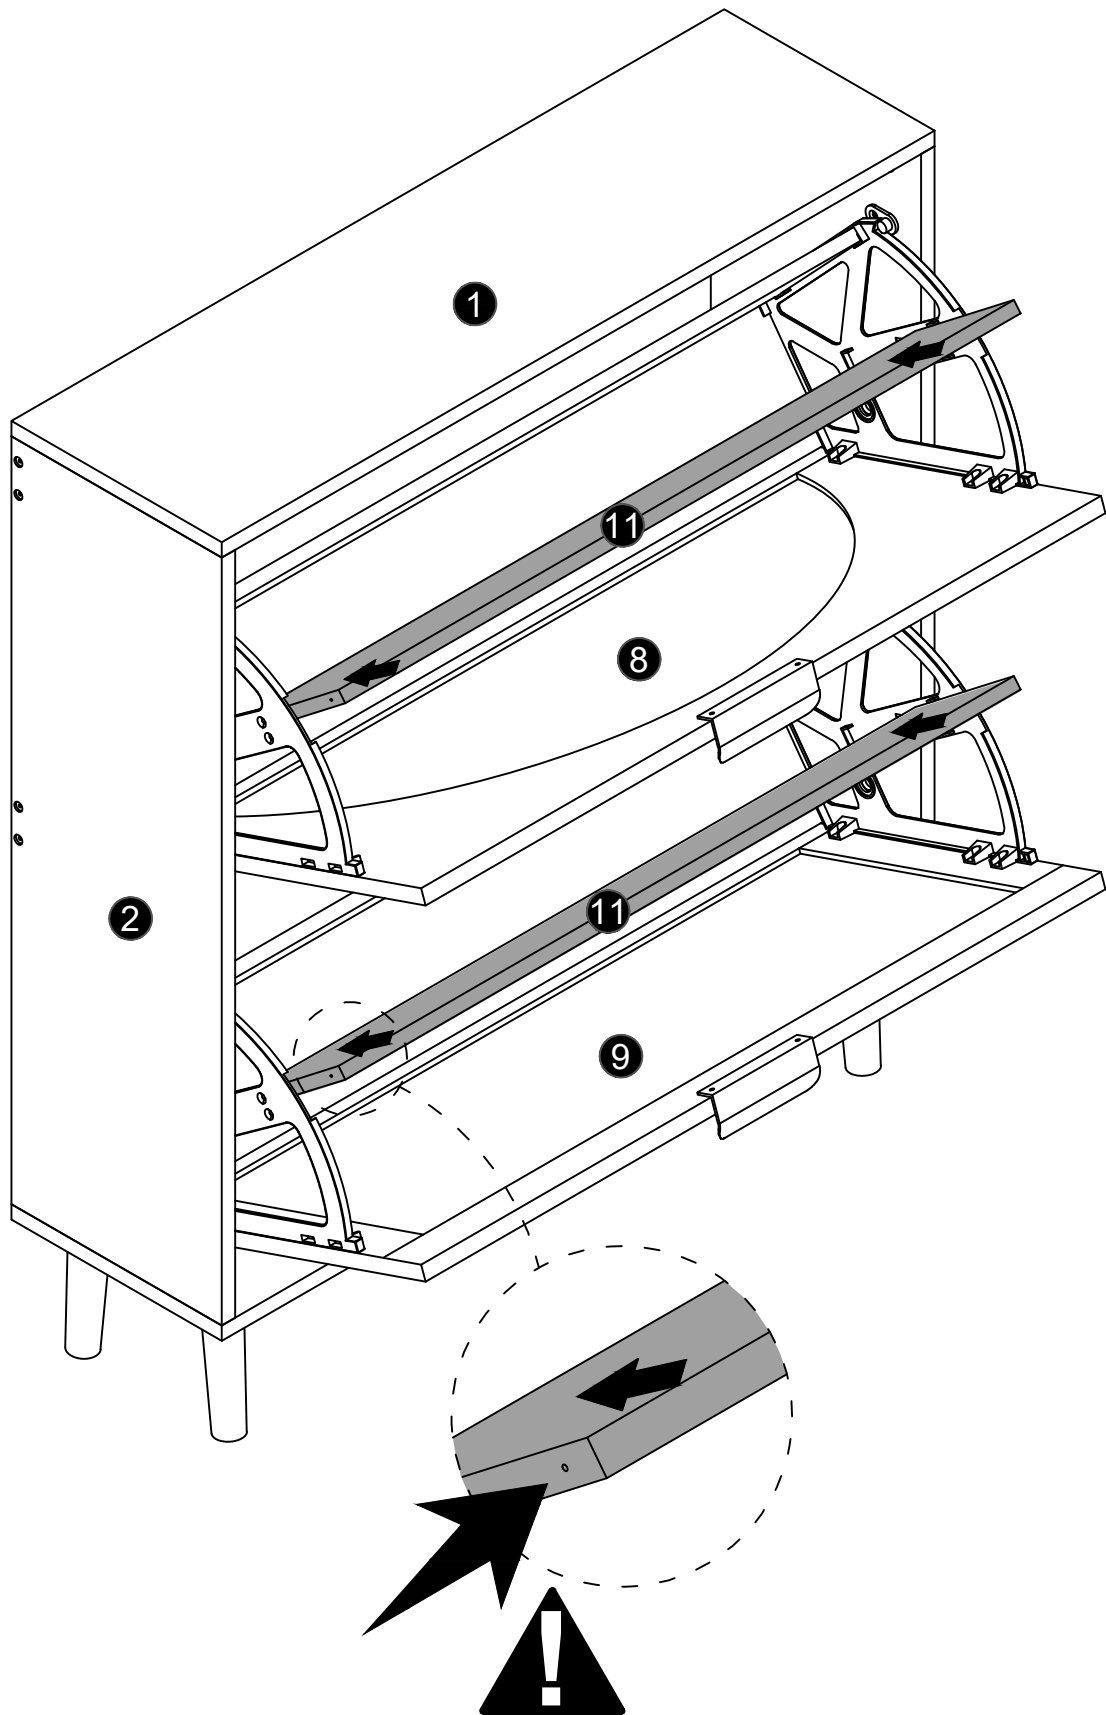


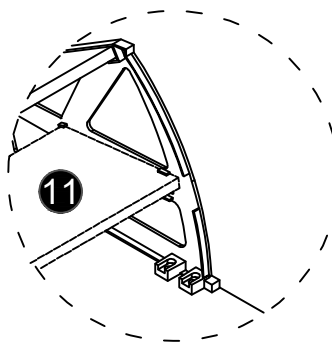

OR

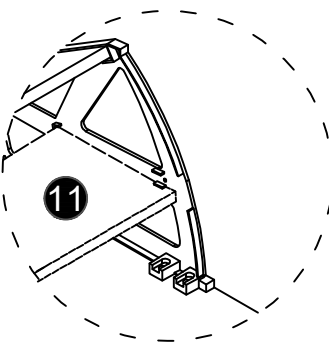

Adjustments can be made
according to your own needs.

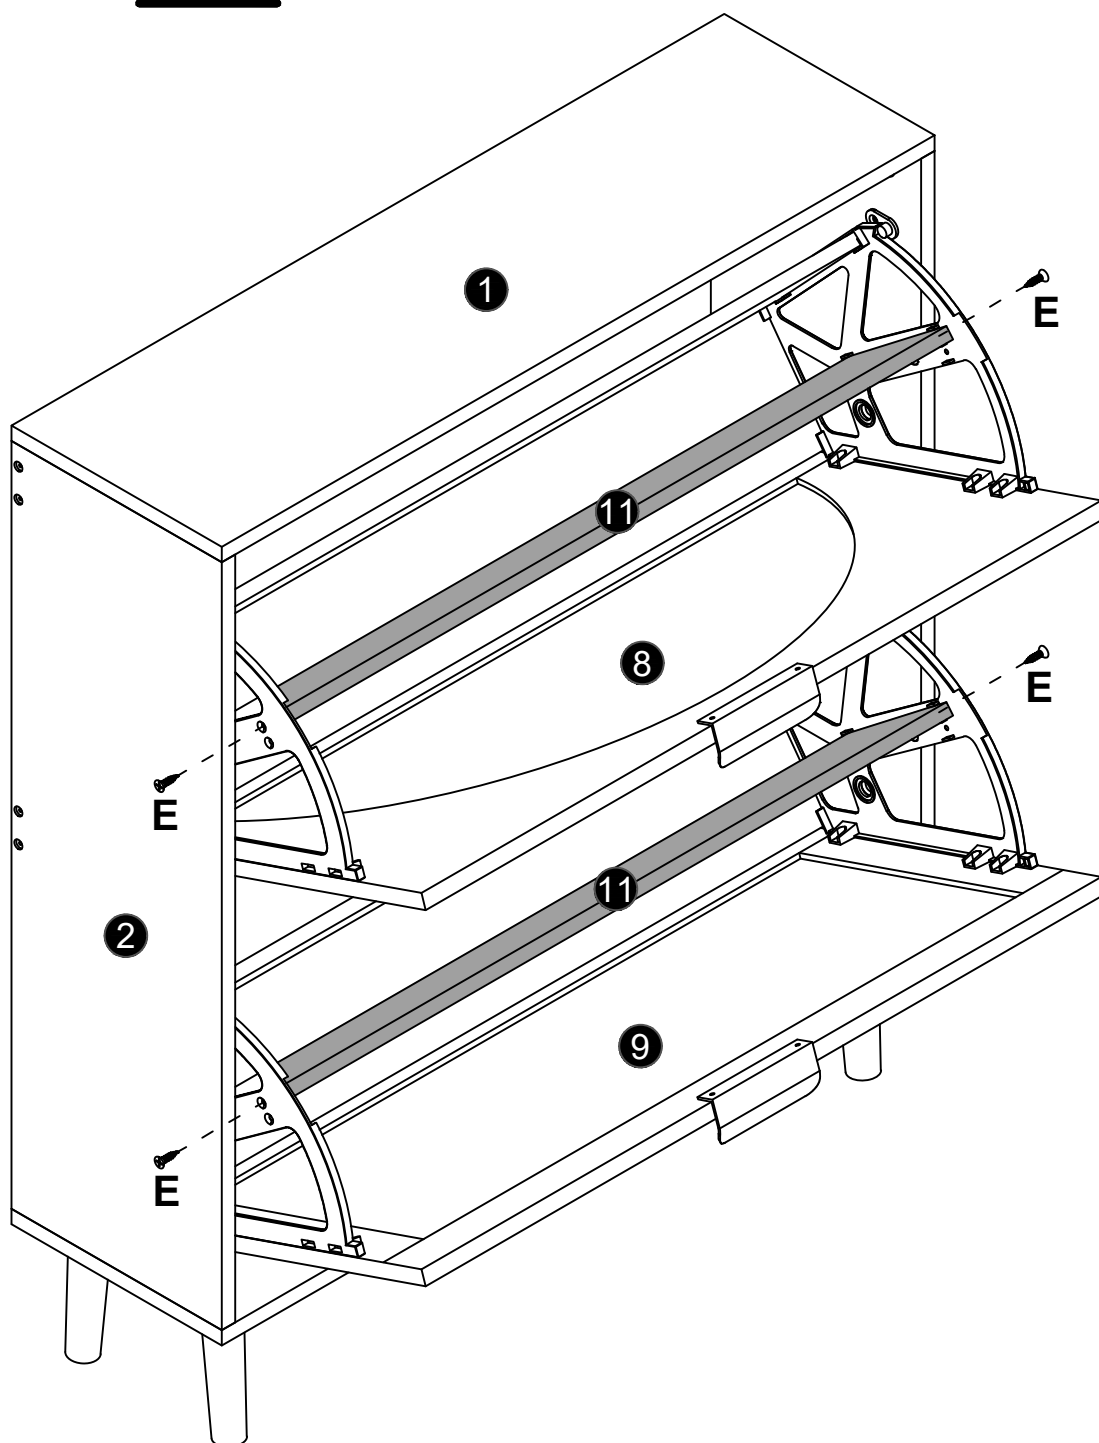

P x8

Done

