
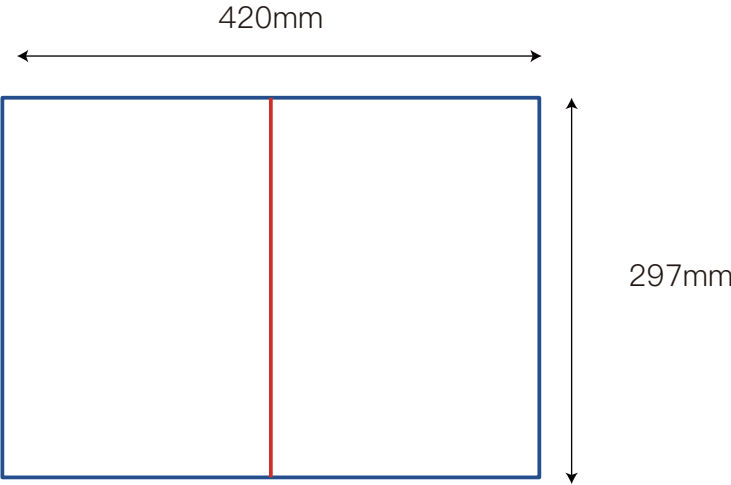
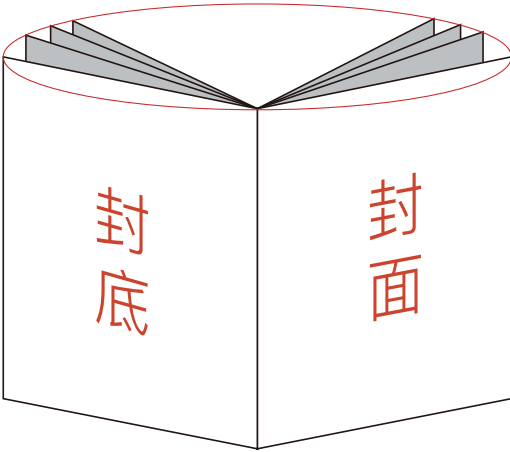





	1		2		3		4		
	注：此页为技术说明，非印刷内容								
A	刀模线：  内折线： 								
B	展开尺寸图： 								
C	装订效果图： 								
D									
未经倍思奇书面许可，不得复制部分或全部内容。违者本公司保留追究法律责任的权利。	技术要求： 1、材质：封面：105g 铜板纸，内页：80g 双胶纸； 2、展开尺寸：A3，如图所示折叠成型为A4，20P 3、颜色：双色（黑色 + 1专色 PANTONE 1585C） 4、印刷：印刷图档见后续页，双面印刷 5、装订方式：骑马订								
符号标识 版本变更  关键尺寸  编号  参考尺寸 (X.XX)					名称	PGLF12-N1-US-说明书-XS	PLM号	860-04534-00	
							投影法	第一角投影法	
									
							版本	重量G	比例
							V0		1:1
							共1页	第1页	
							倍思奇创新科技 (深圳) 股份有限公司		
	1		2		3		4		

PERLEGEAR

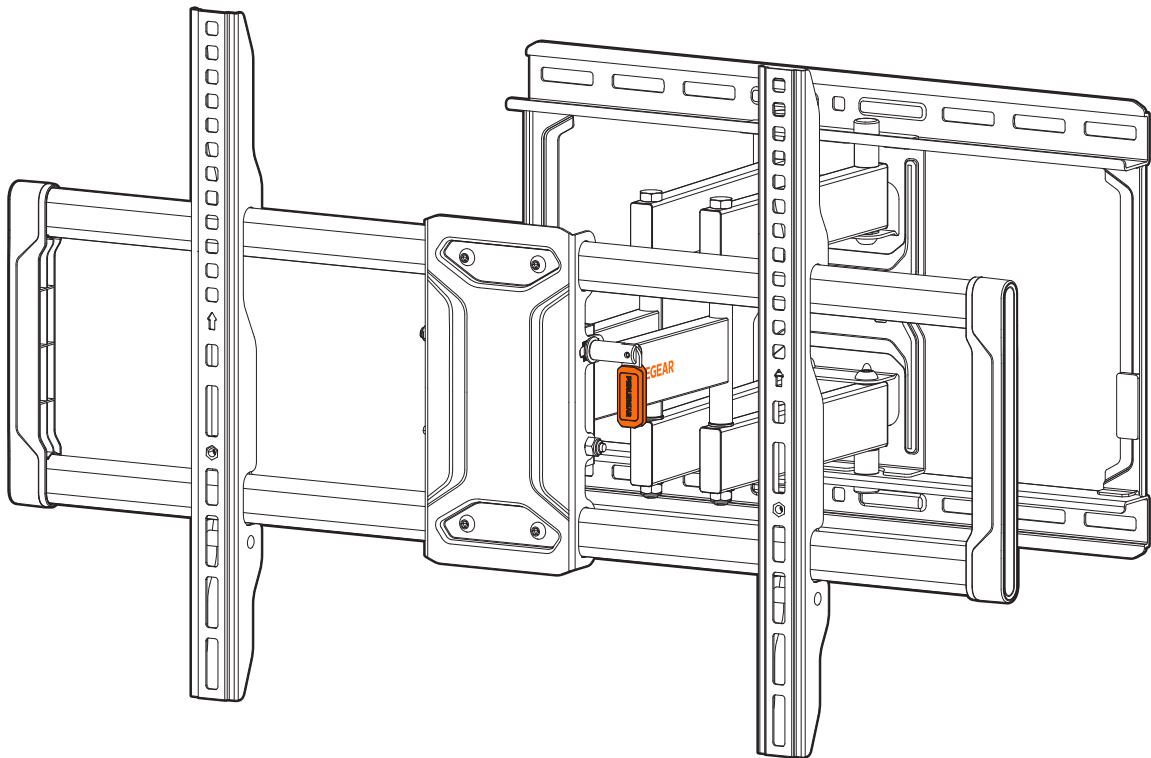

FULL-MOTION TV WALL MOUNT


PGLF12

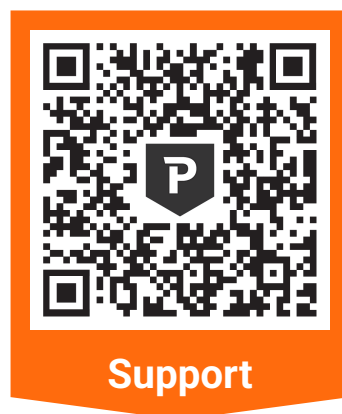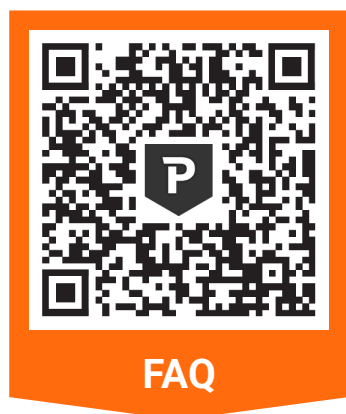

**THE MOUNTS EXPERT FOR
FAMILY HOME ENTERTAINMENT**

**"LET'S MAKE SURE THIS MOUNT IS COMPATIBLE.
IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US."**


1

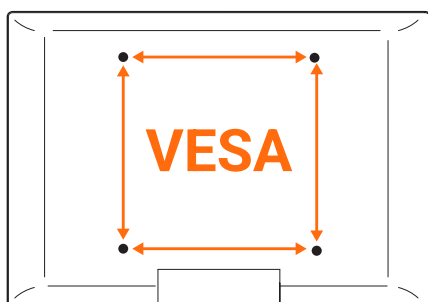

Max VESA:
600 x 400mm (23.6 x 15.7")

Min VESA:
200 x 100mm (7.9 x 3.9")


2

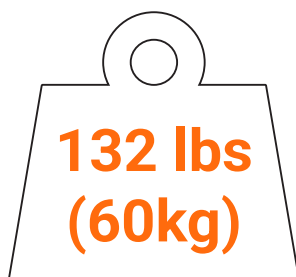

! WARNING:

Do not exceed the Max Load.
Exceeding the Max Load can cause
the mount to fail, leading to personal
injury and/or property damage.


3

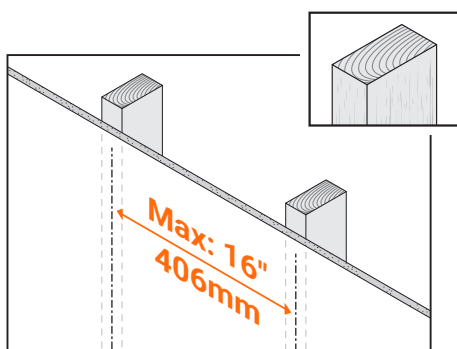

Wood Studs (with Drywall)

! WARNING:

Do not install on drywall alone.

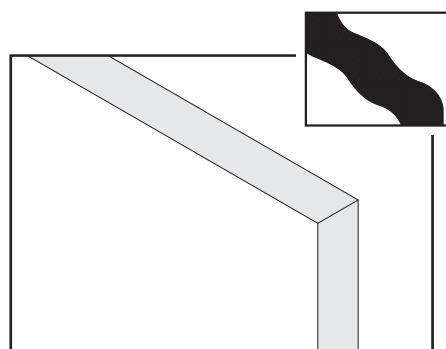

Solid Concrete


! DANGER: Please carefully read all instructions before attempting installation. If you do not understand the instructions or have any questions or concerns, please contact us.

! CAUTION: Avoid the risk of personal injury and property damage!


! WARNING: All fasteners must be firmly tightened!

- **Before starting assembly, verify that all parts and hardware are included and undamaged. Do not use damaged or defective items. If you require replacements, please contact us.**
- This product is designed for installation on wood studs and solid concrete. Do not install on drywall alone.
- The wall must be capable of supporting four times the weight of the TV and mount combined.
- This product contains small parts that may pose a choking hazard.
- Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed the maximum weight capacity. We are not liable for damage or injury caused by incorrect assembly, improper mounting, or inappropriate use.
- Use this mounting system only for its intended purpose as described in these instructions. Do not use attachments not recommended by the manufacturer.
- Do not use outdoors.
- Route cords and cables properly to avoid mechanical damage.

SAVE THESE INSTRUCTIONS

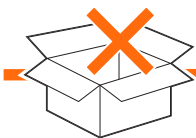

Pencil

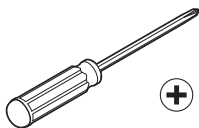

Phillips Screwdriver



Electric Drill




Tape Measure



7/16" (11mm)
Socket Wrench





1/2" (13mm)
Socket Wrench

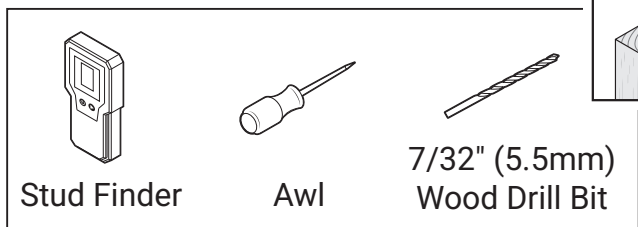

Stud Finder



Awl

7/32" (5.5mm)
Wood Drill Bit

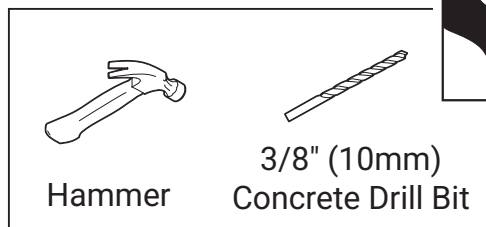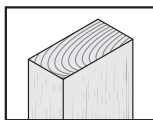


Hammer


3/8" (10mm)
Concrete Drill Bit

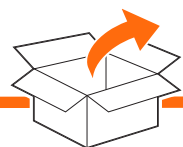

TV Brackets

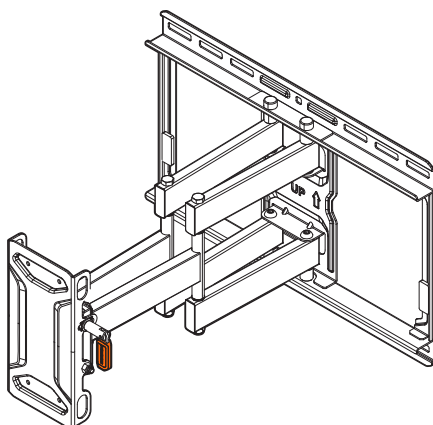


Arm Assembly / Wall Plate

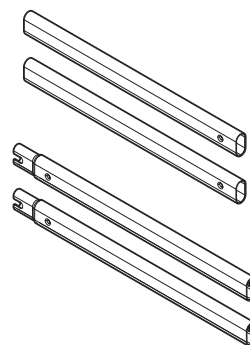


Front Support Bars




Level




End Caps

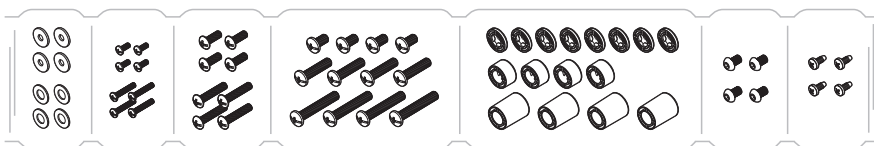


TV Fastener &
Assembly Hardware Kit

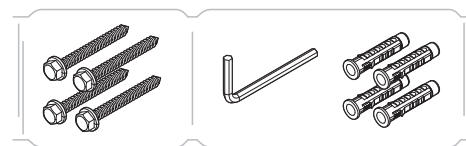


Wall Fastener &
Assembly Hardware Kit

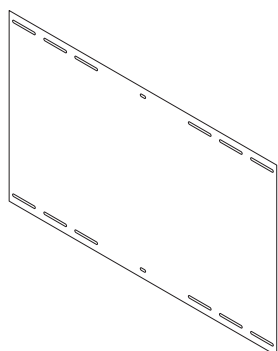


Wall Plate Template

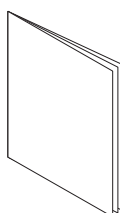


Manual

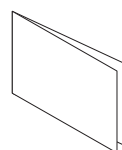

Quick Start Guide



Cable Straps

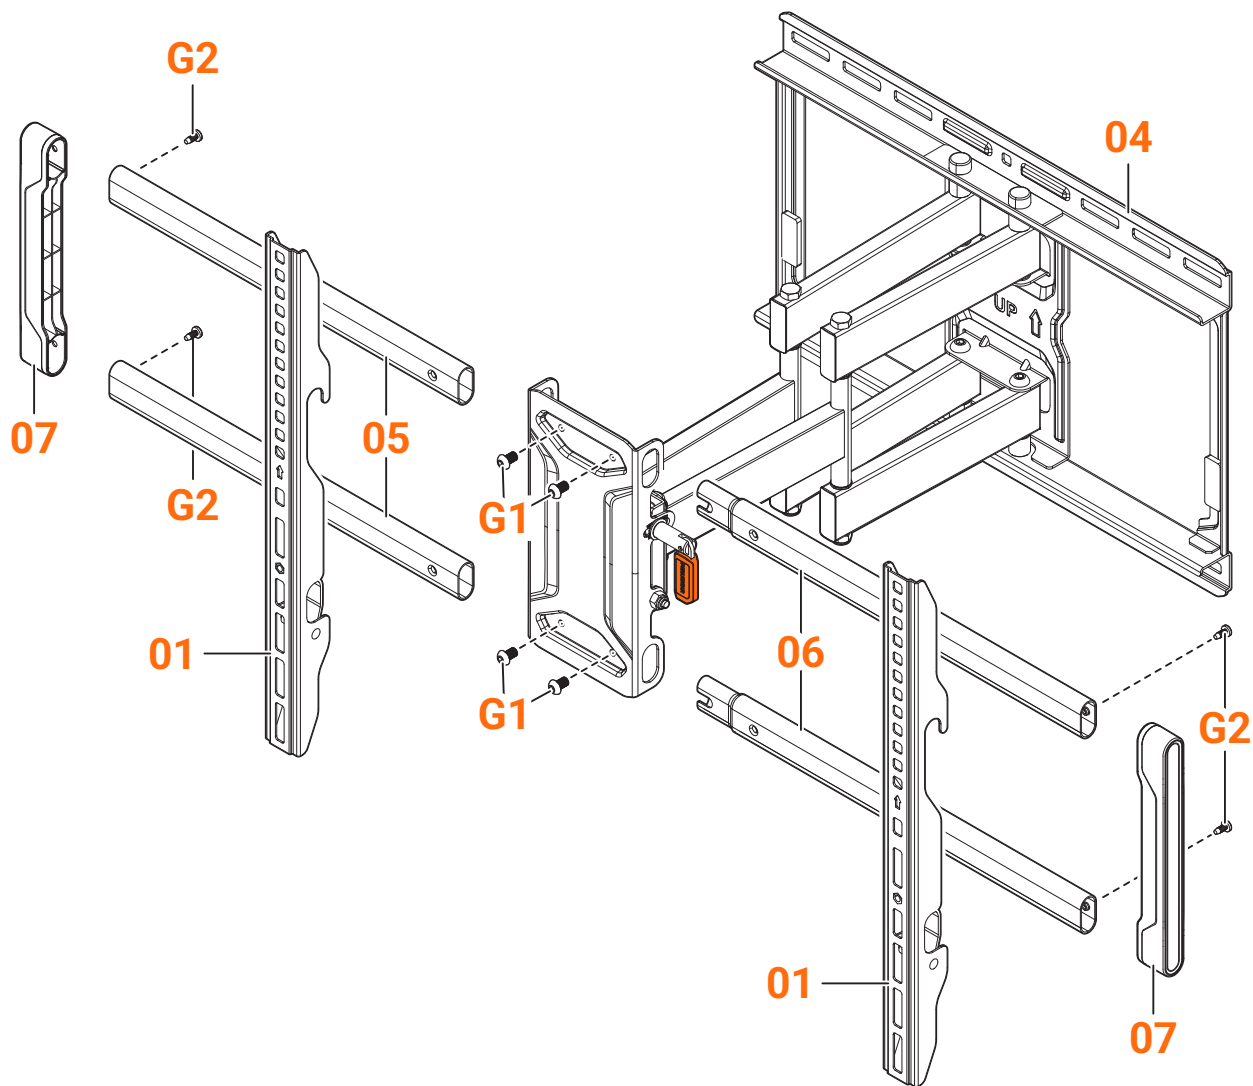

01 TV Bracket

04 Arm Assembly / Wall Plate


05 Front Support Bar

06 Front Support Bar


07 End Cap

G1 Bolt

G2 Bolt

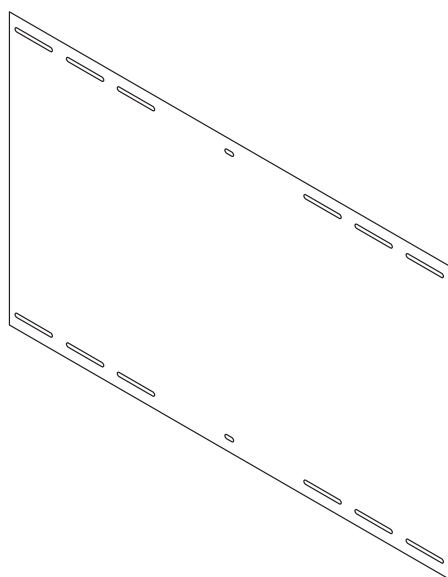

02 Wall Plate Template

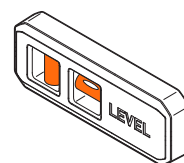


03 Level

TV Bolt



M4 x 12mm

C1 x 4




M4 x 30mm

C2 x 4



M6 x 15mm

D1 x 4




M6 x 35mm

D2 x 4




M8 x 15mm

E1 x 4

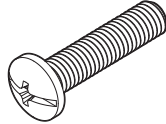

M8 x 35mm

E2 x 4

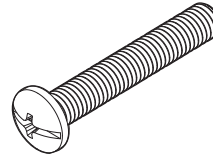

M8 x 50mm

E3 x 4

Washer



M4/M5

B1 x 4



M6/M8


B2 x 4

Spacer




L2.5mm

F1 x 8



L10mm

F2 x 4

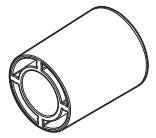

L22mm

F3 x 4

Bolt



M6 x 10mm


G1 x 4



M4 x 10mm

G2 x 4


Lag Screw

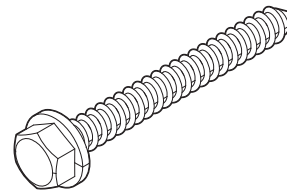

ST 5/16 x 2 3/4"

A1 x 4

Wall Anchor

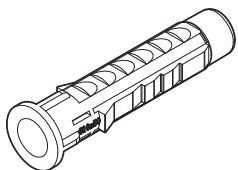


A2 x 4

! CAUTION!

These anchors are for solid concrete ONLY. Do not use them in drywall or wood studs.

Allen Key

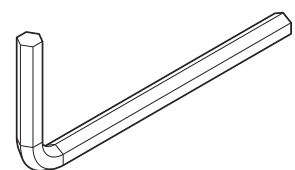


5/32" (4mm)



A3 x 1

STEP 1


1-1

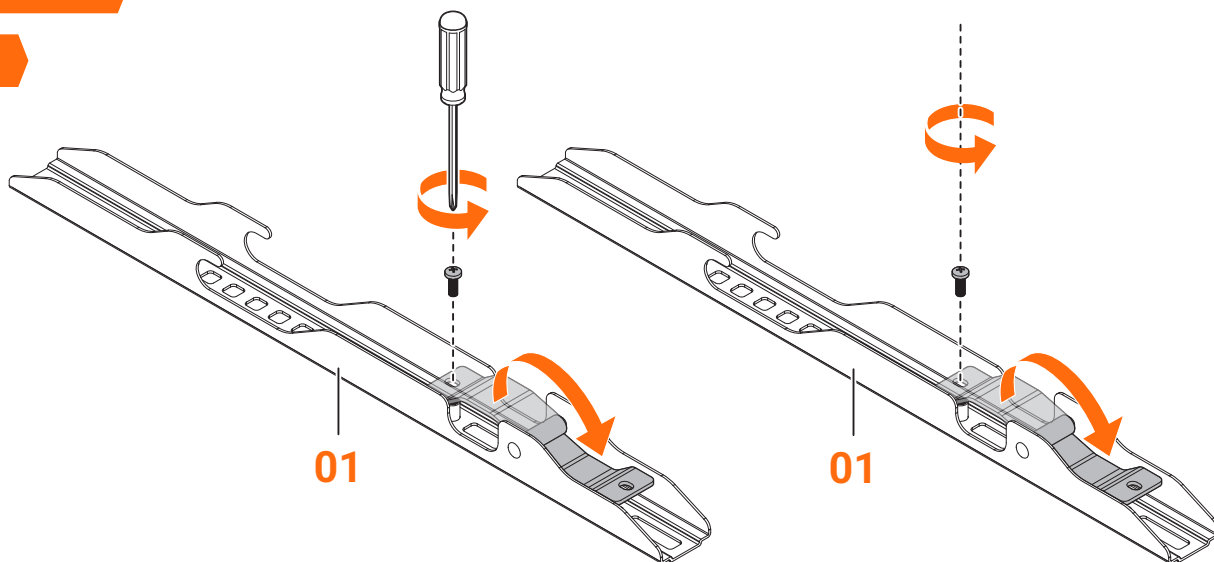

1-2

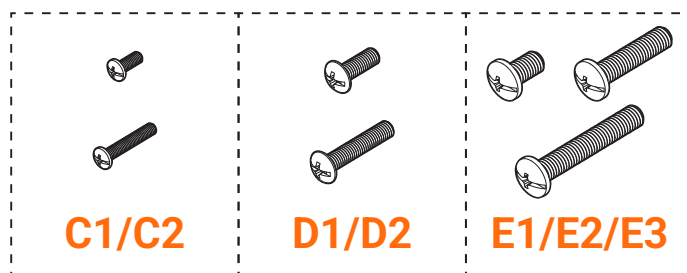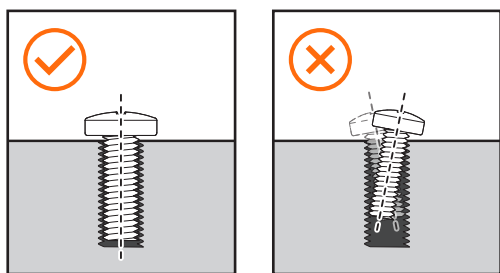


⚠ Note:
Only one size fits your TV.

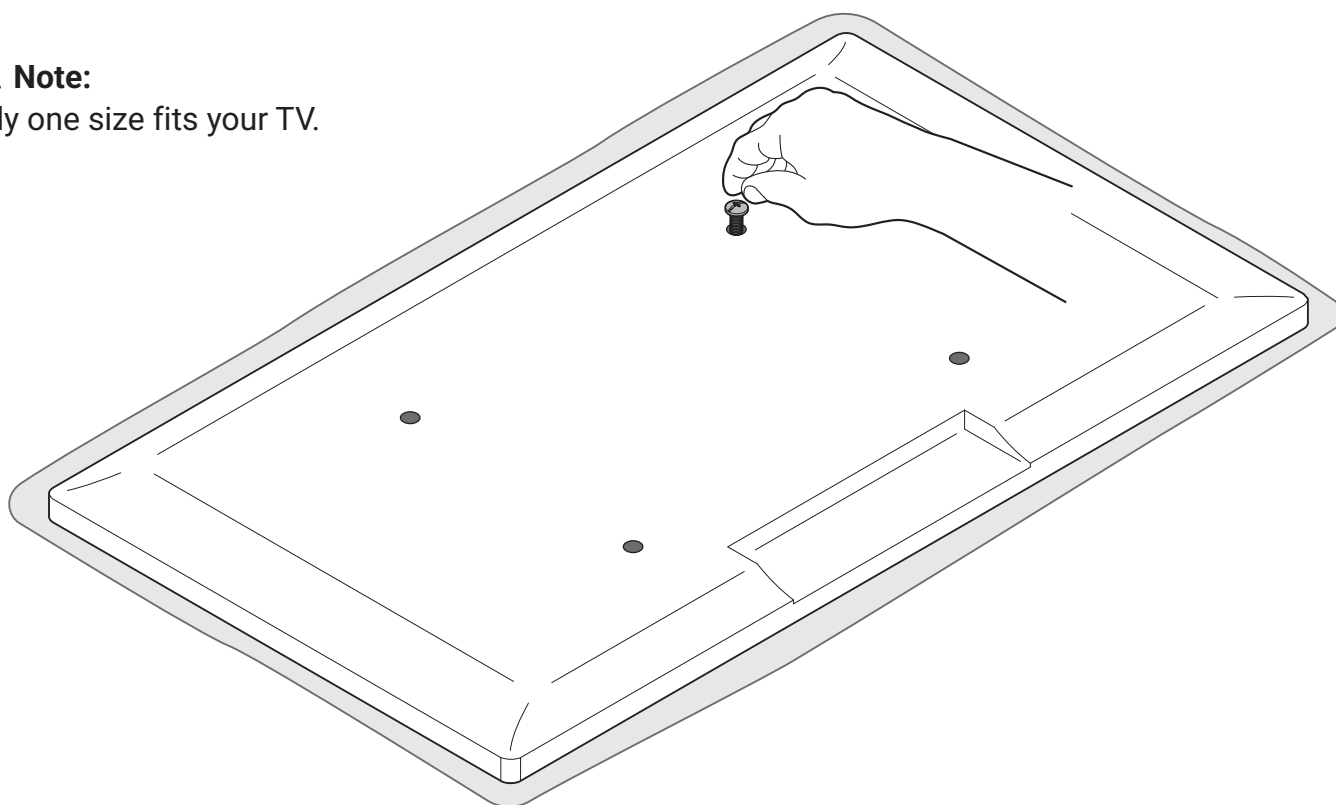


The correct bolt diameter should thread smoothly into the VESA mounting holes.

1-3

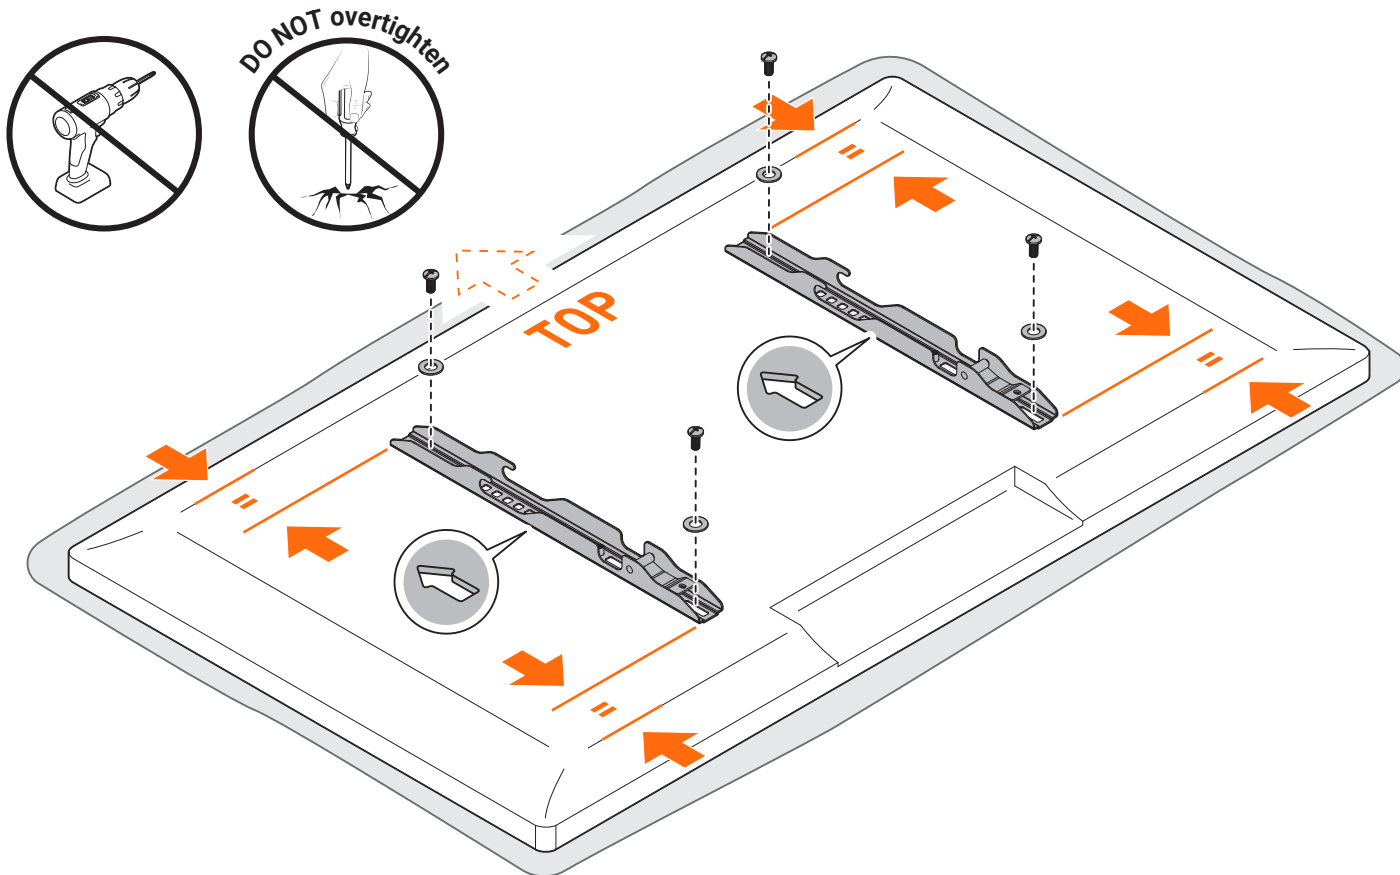

! WARNING:



- The depth of the bottom holes may be different from the top holes.
- Do not turn the bolt past the bottom of the hole.
- If the bolt is too short, it may not adequately support the TV.
- If the bolt is too long, it could damage the TV.
- At least 4–5 turns into the threading is required.

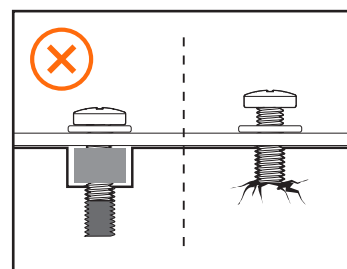

Option A


Flat-Back TV

Use short TV bolts with washers.

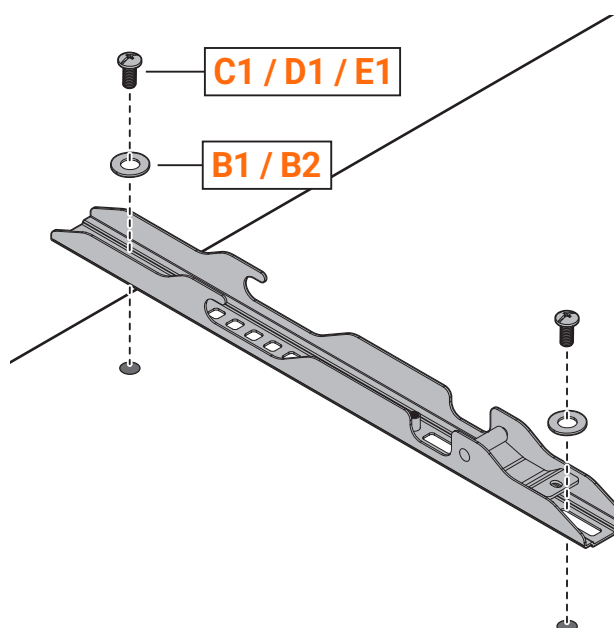


Option B


B1: TV with Mounting Restrictions

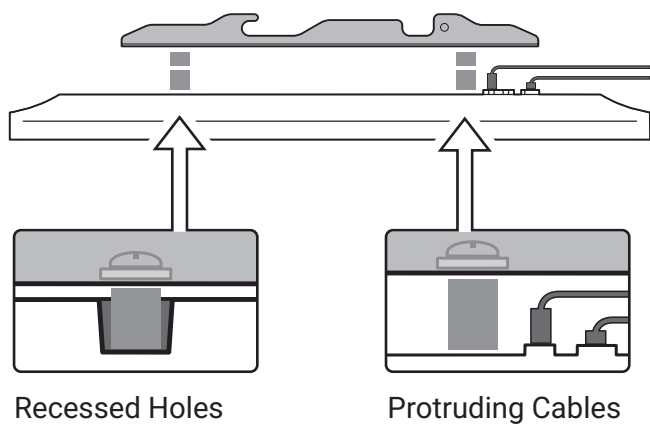



B2: Bump

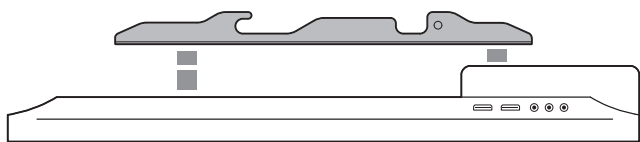

B3: Curved TV

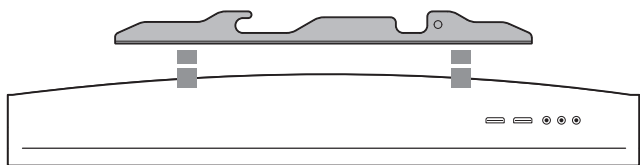

Use long TV bolts with washers and spacers to create extra space between the TV and brackets.

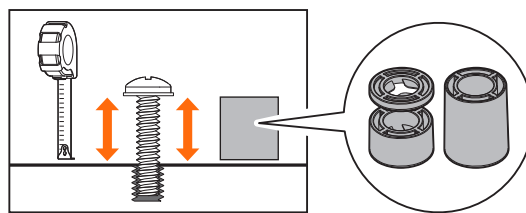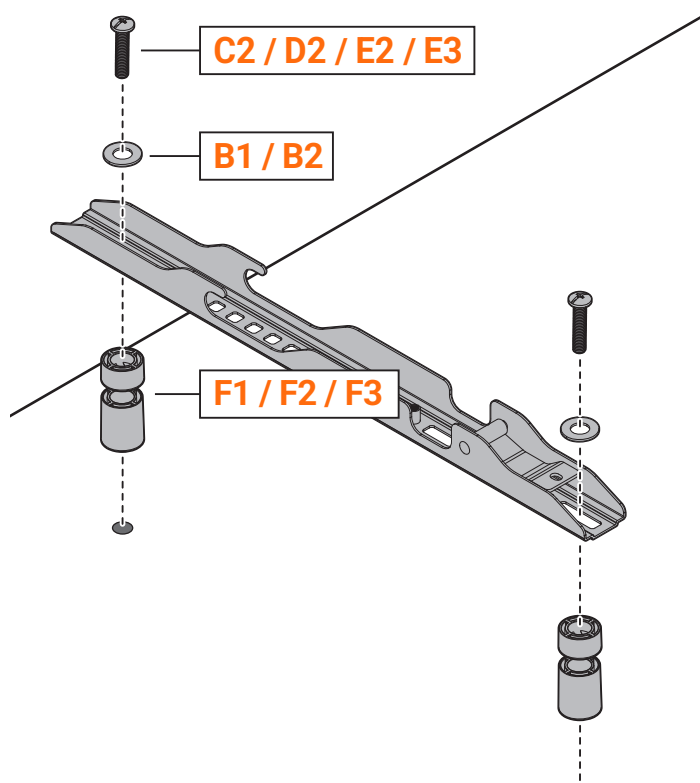


Measure or compare to choose the best spacer combination. There are multiple combinations that can be used.



1-800-456-5231 (US/CA)
44-808-196-4165 (UK)


 support@perlegear.com

STEP 2

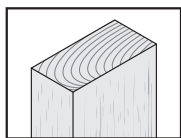

Option A


For Wood Stud Installation

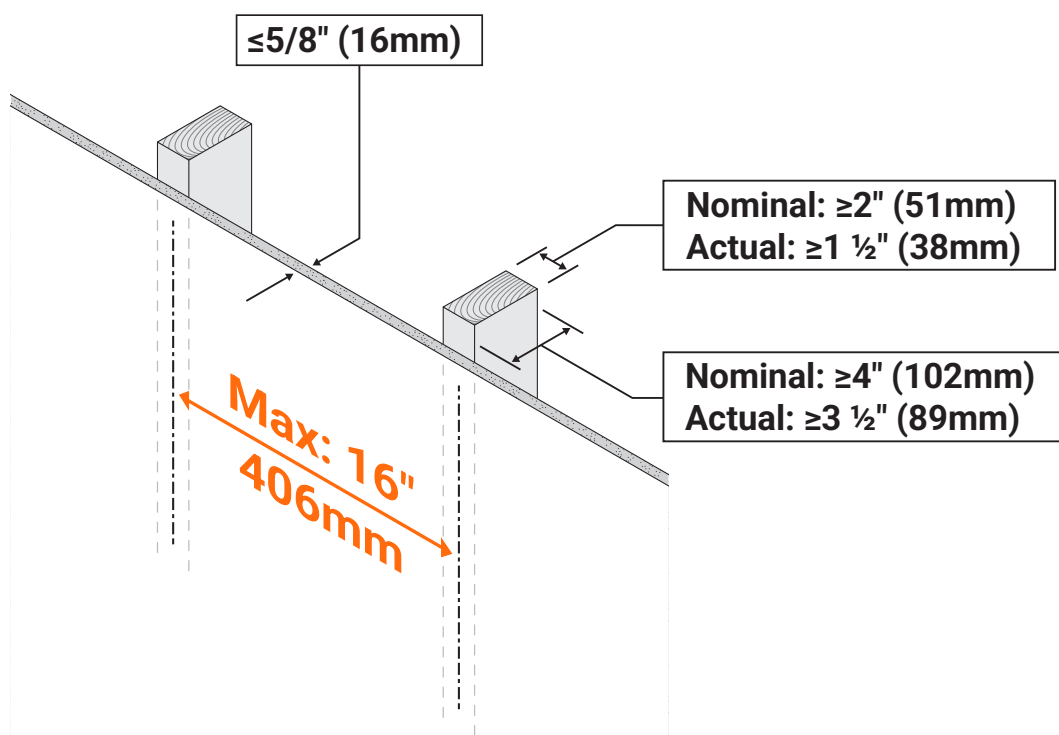


WARNING:

- Avoid the risk of personal injury or property damage! Tighten the lag screws [A1] only until they are pulled firmly against the wall plate (do not overtighten). Do not use a drill; only use a socket wrench.
- Do not use wall anchors [A2] for this mounting option.


2A-1

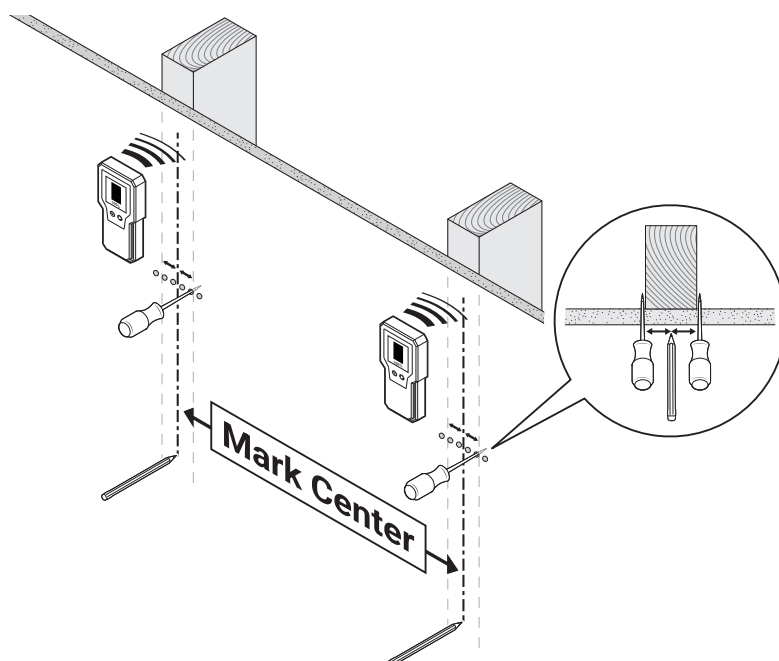




2A-2

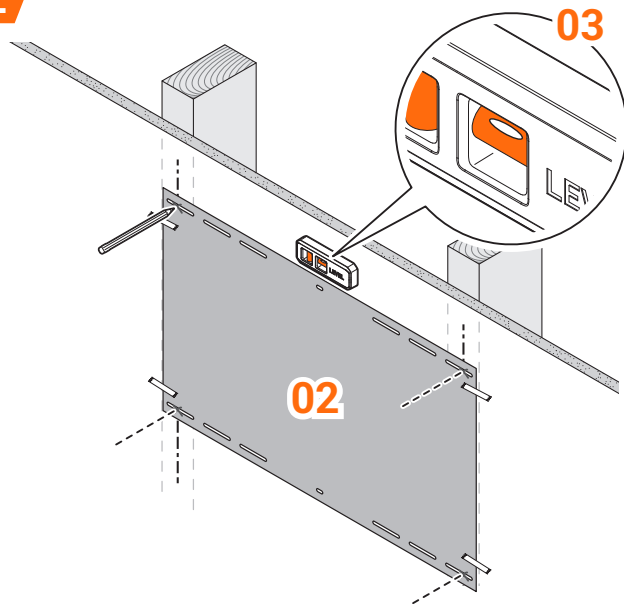


2A-3

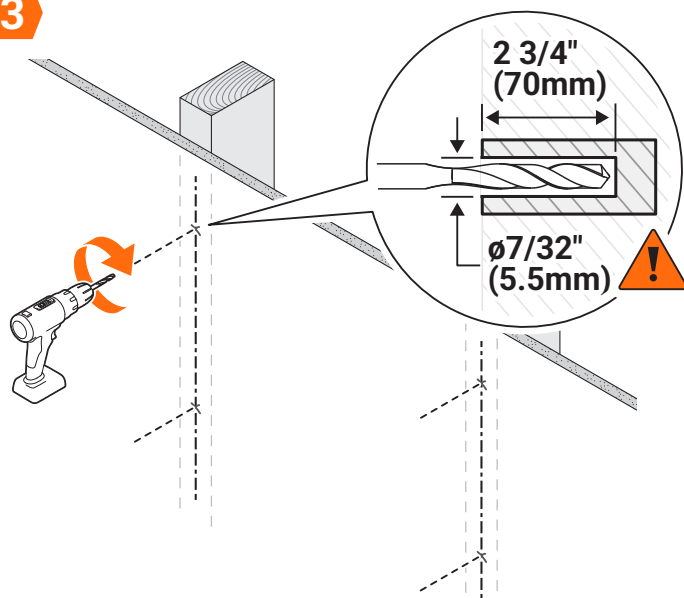


2A-4

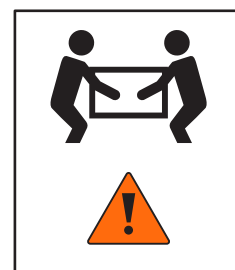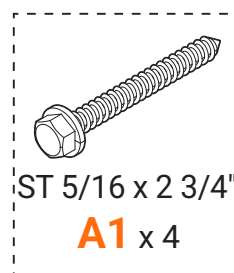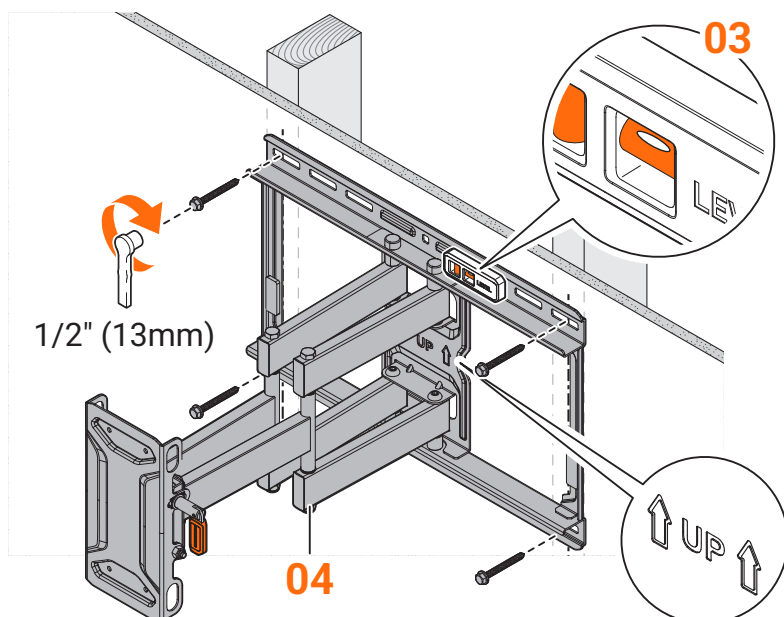

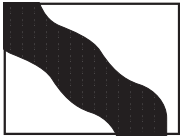

Option B


For Solid Concrete Installation

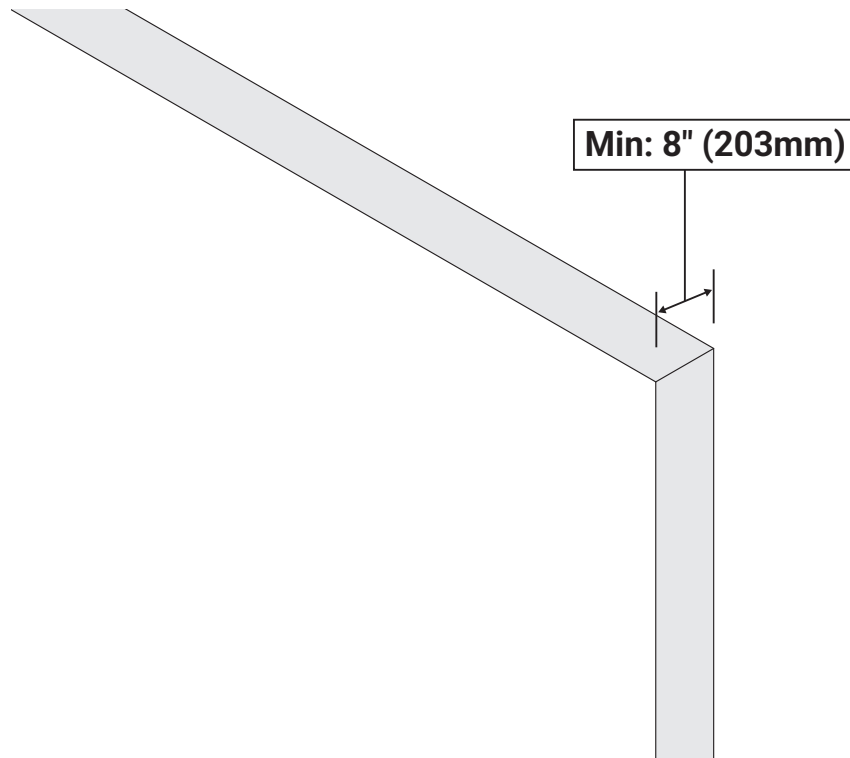


WARNING:

- Avoid the risk of personal injury or property damage! Tighten the lag screws [A1] only until they are pulled firmly against the wall plate (do not overtighten). Do not use a drill; only use a socket wrench.
- Use wall anchors [A2] for this mounting option.
- Mount the wall plate directly on the concrete surface.





2B-1

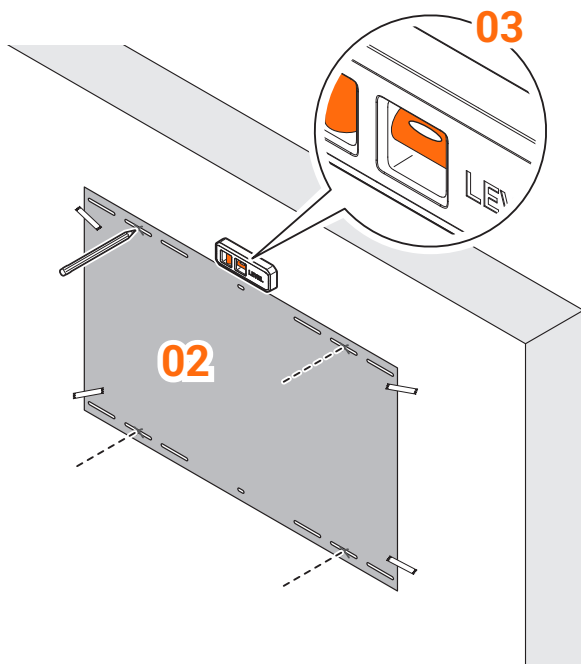




2B-2



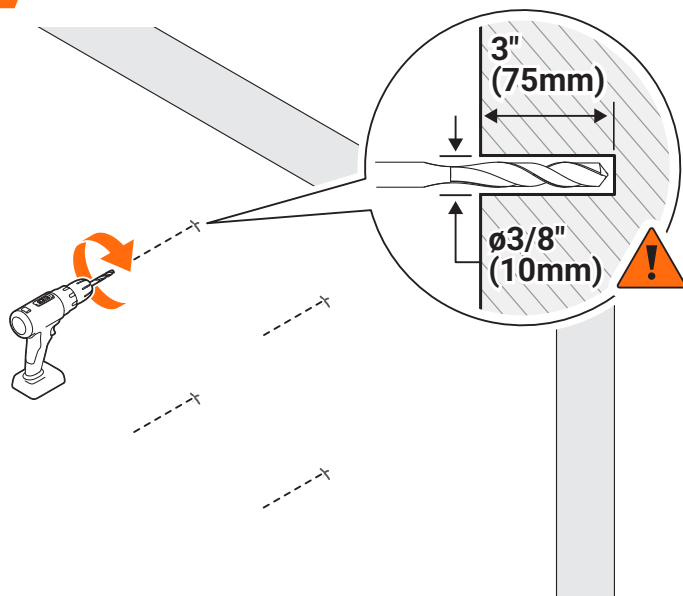


2B-3

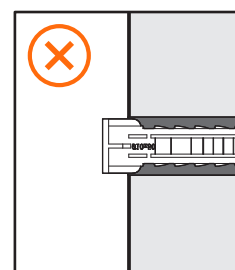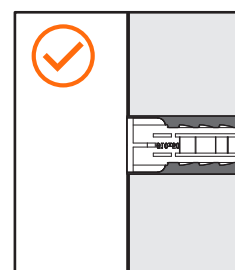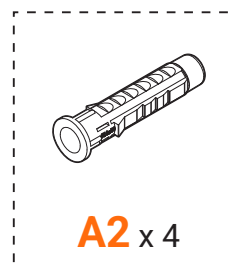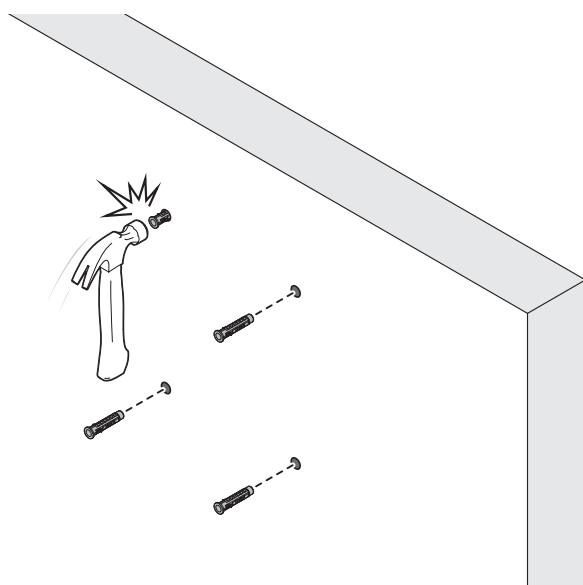


2B-4

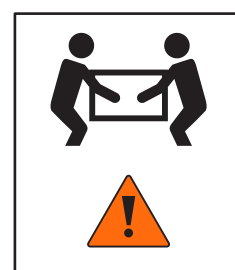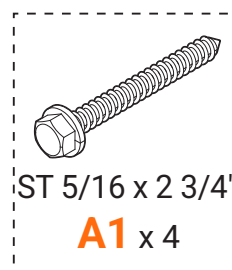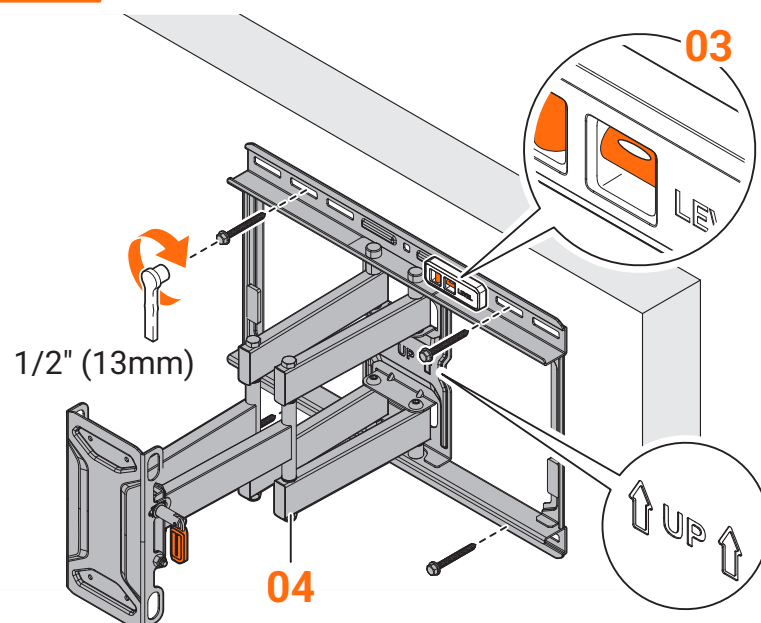

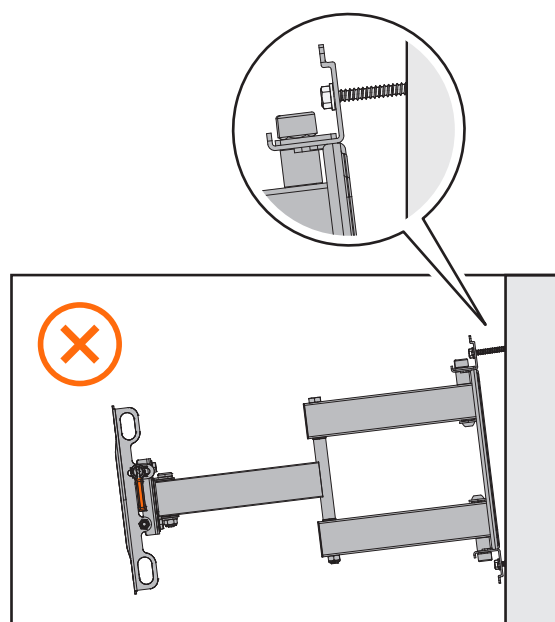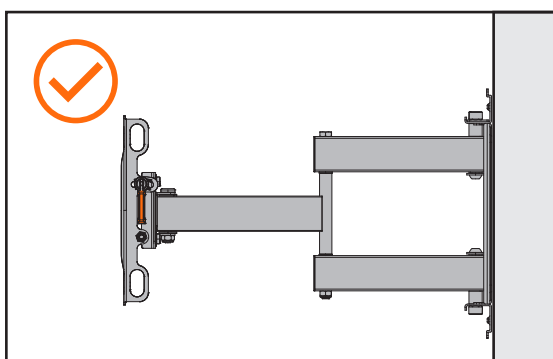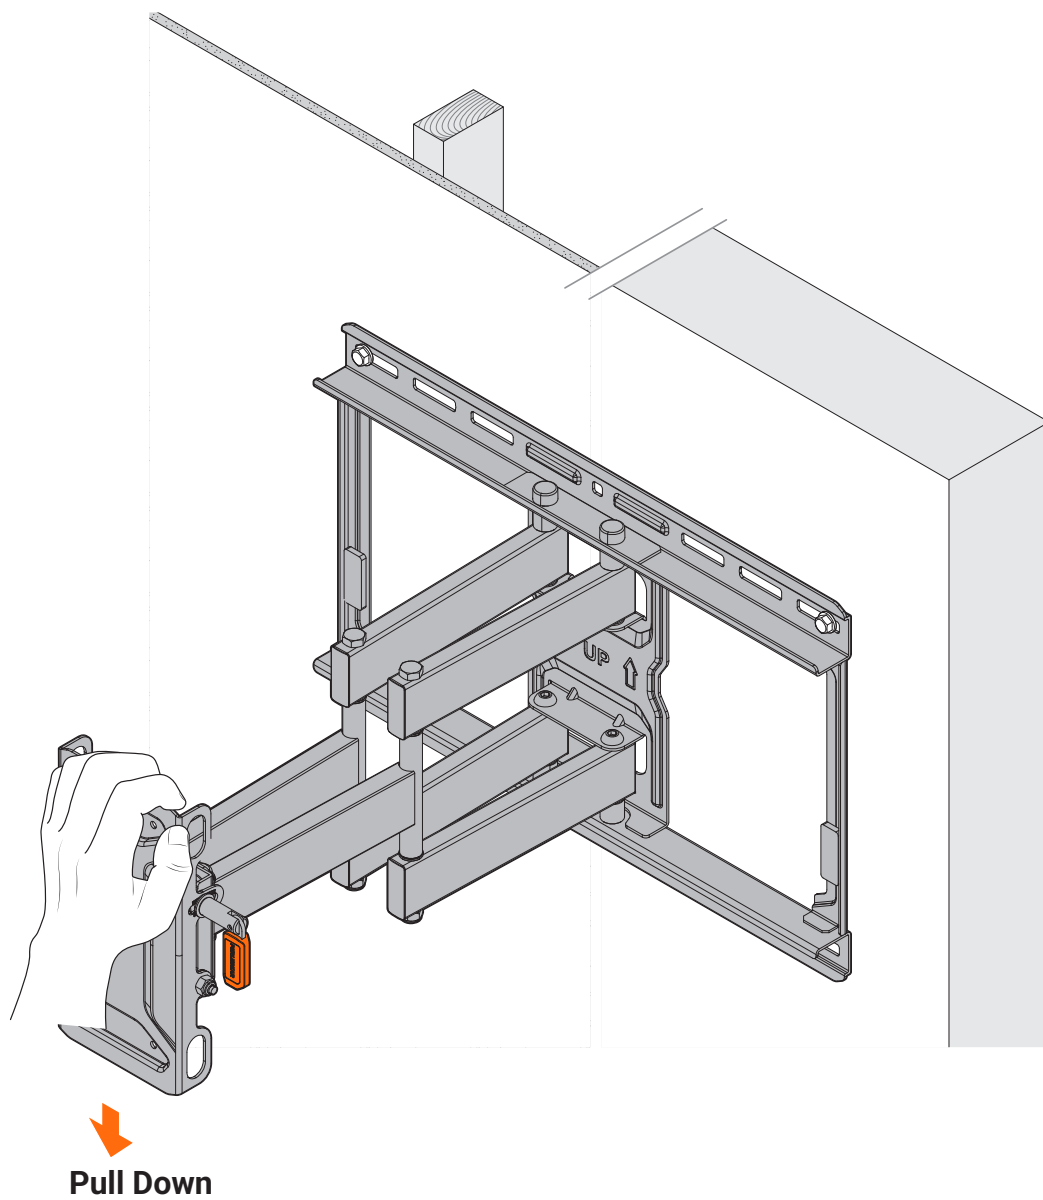


STEP 3

3-1

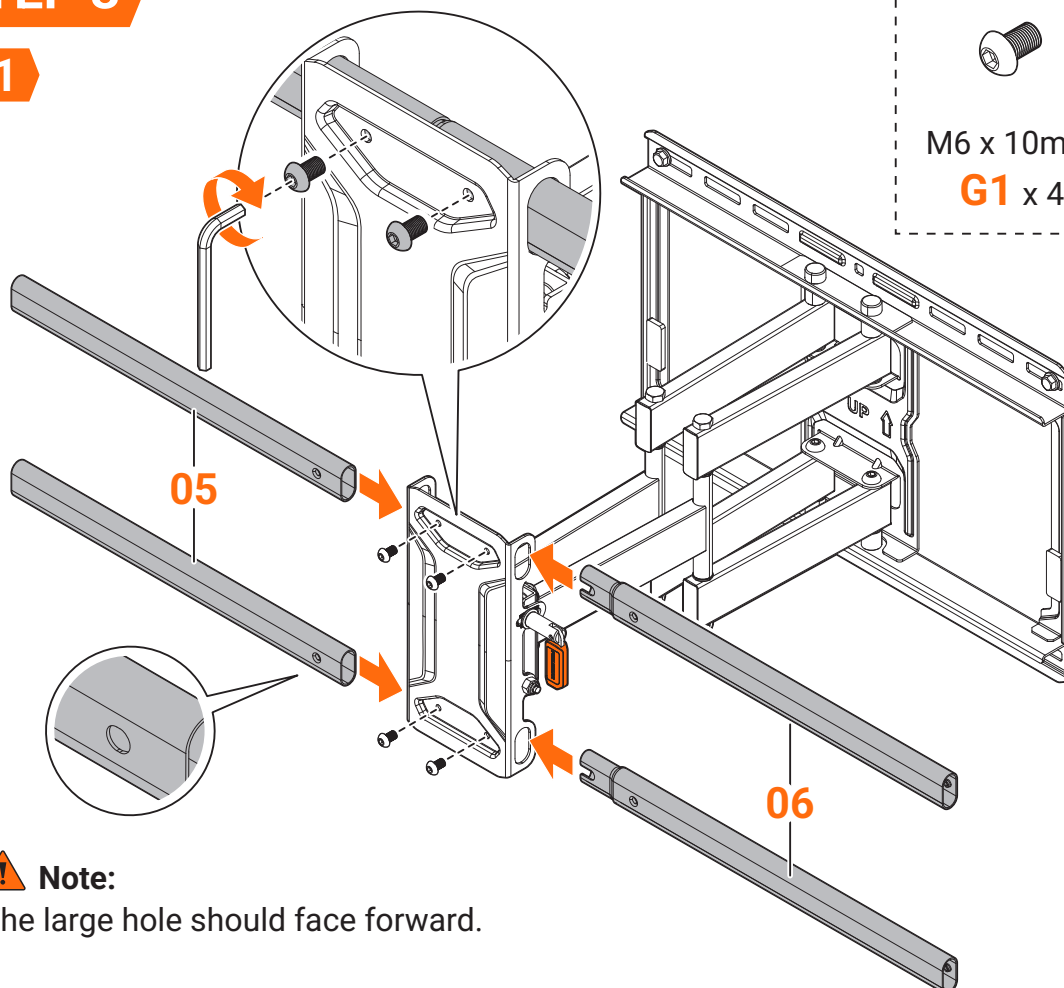




Note:


The large hole should face forward.

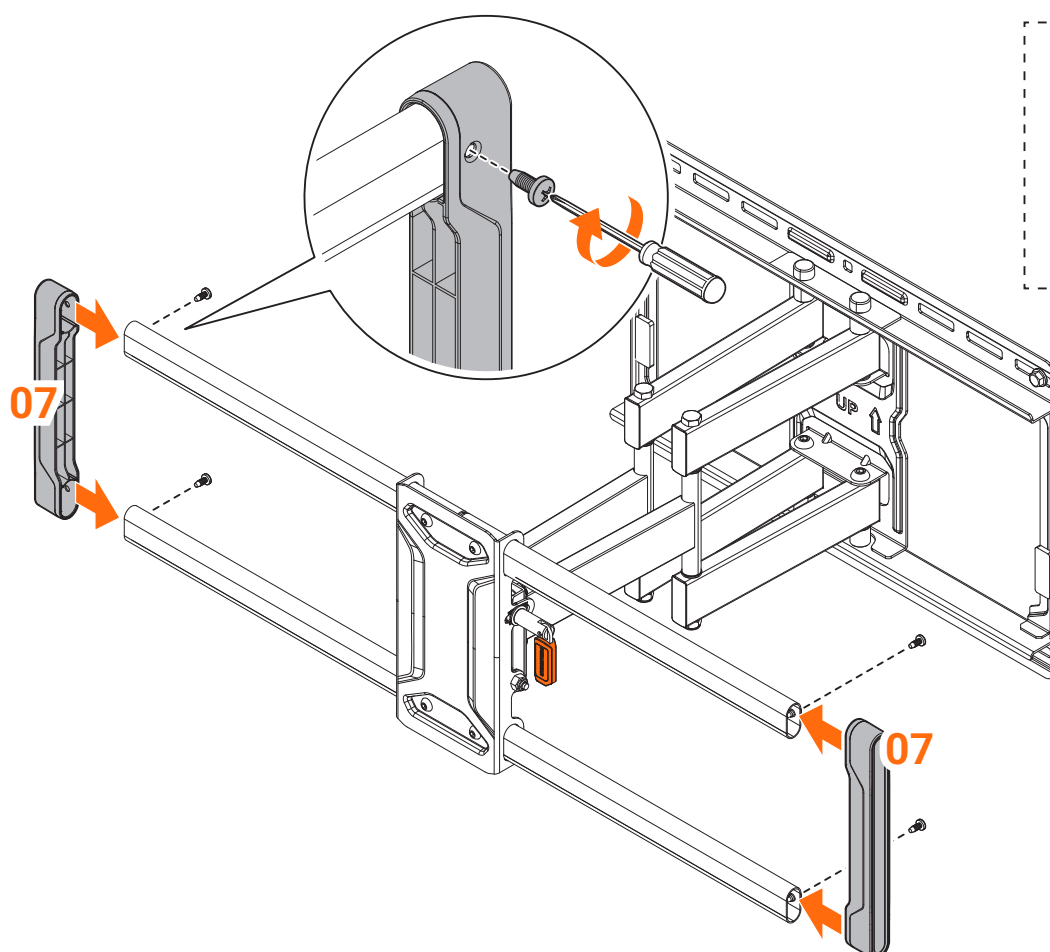

M4 x 10mm
G2 x 4


3-2

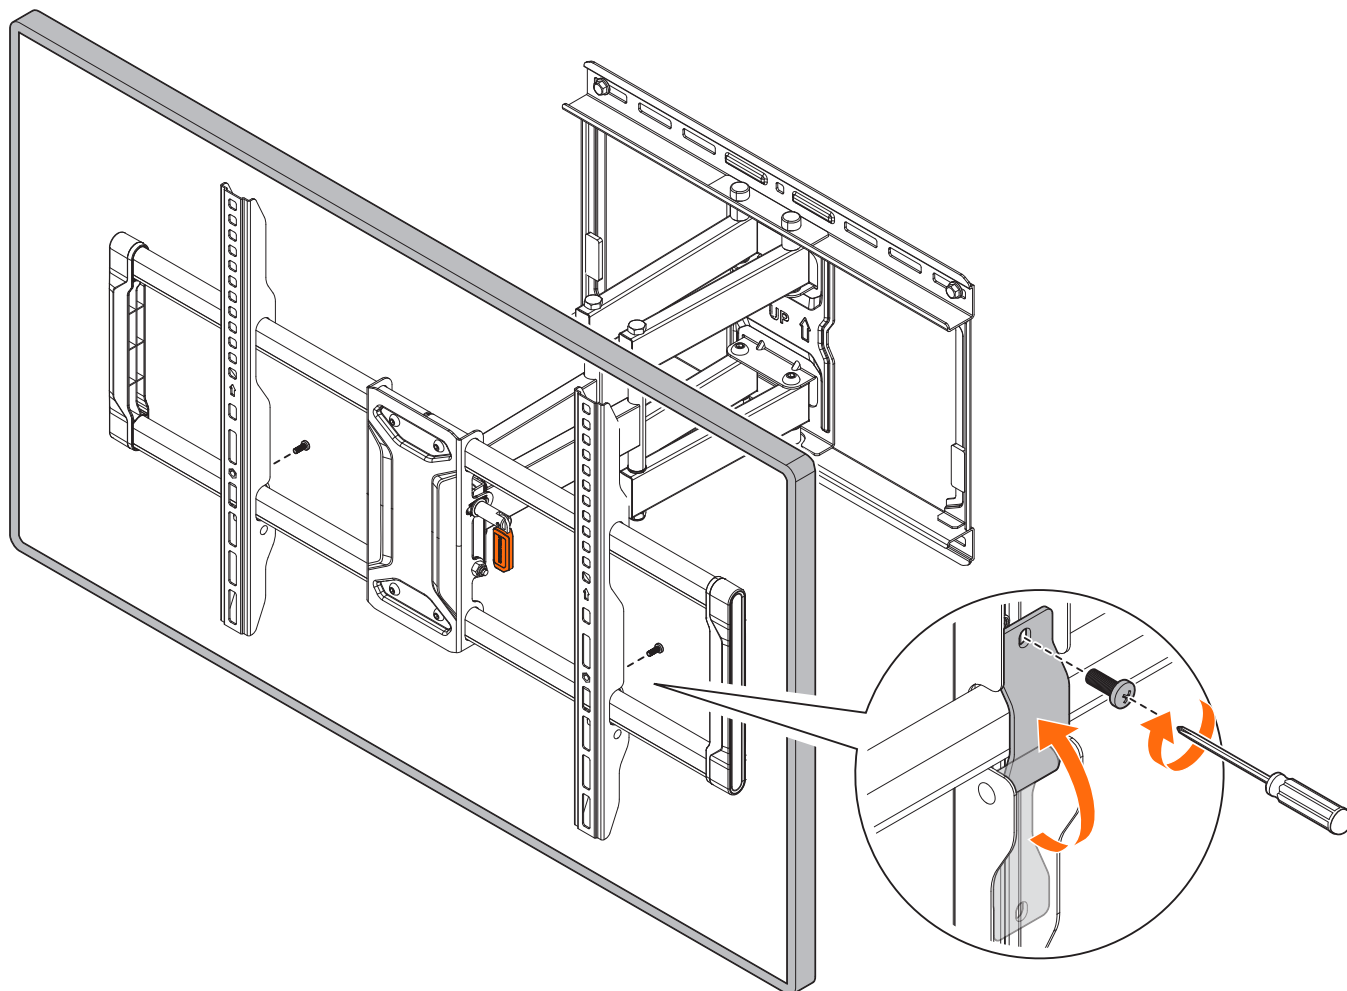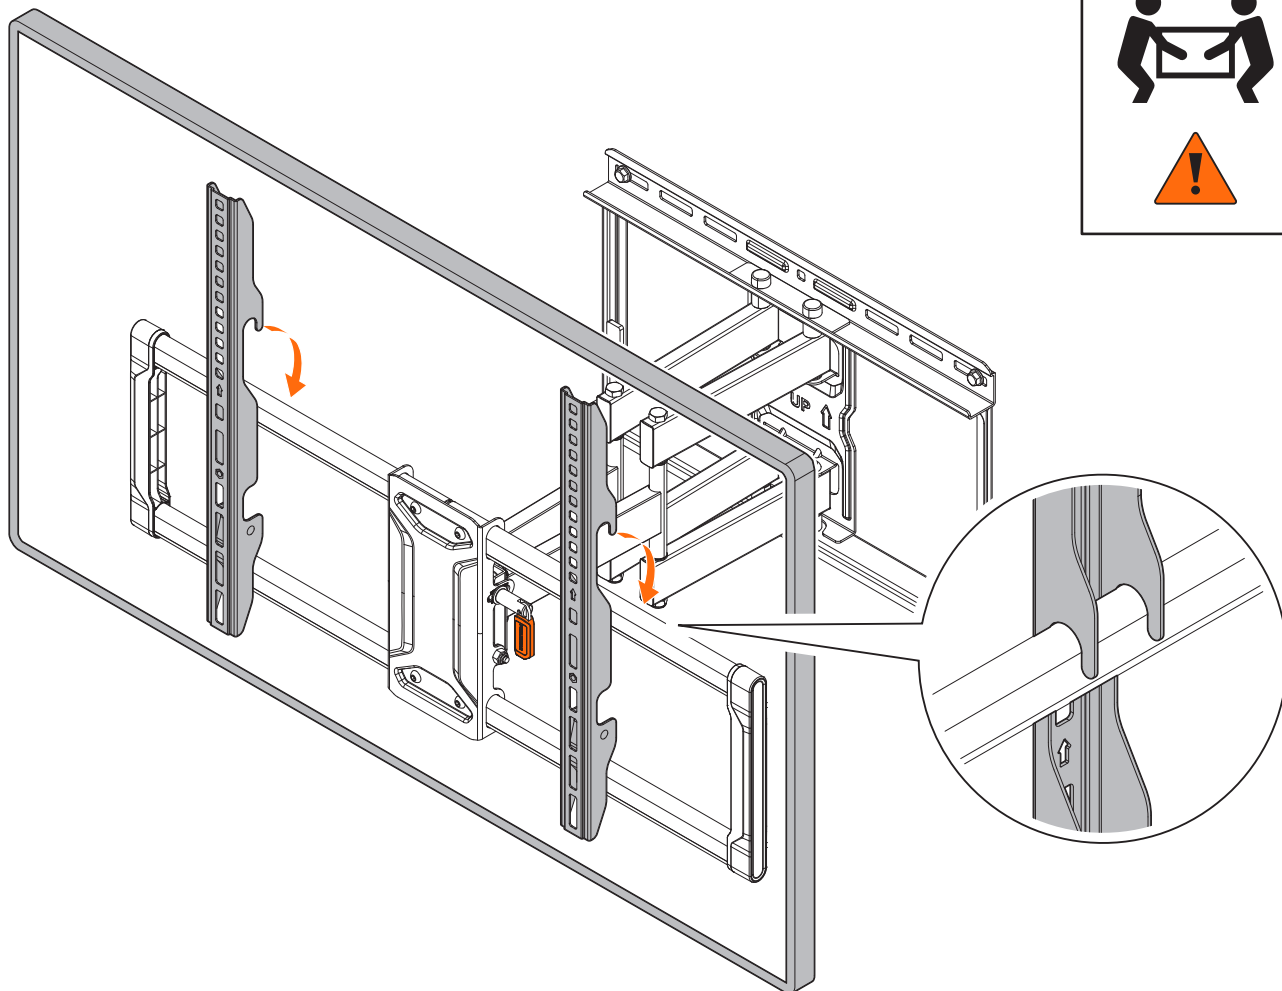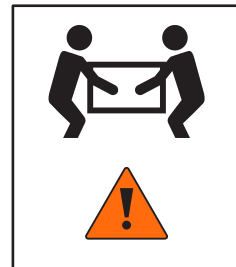

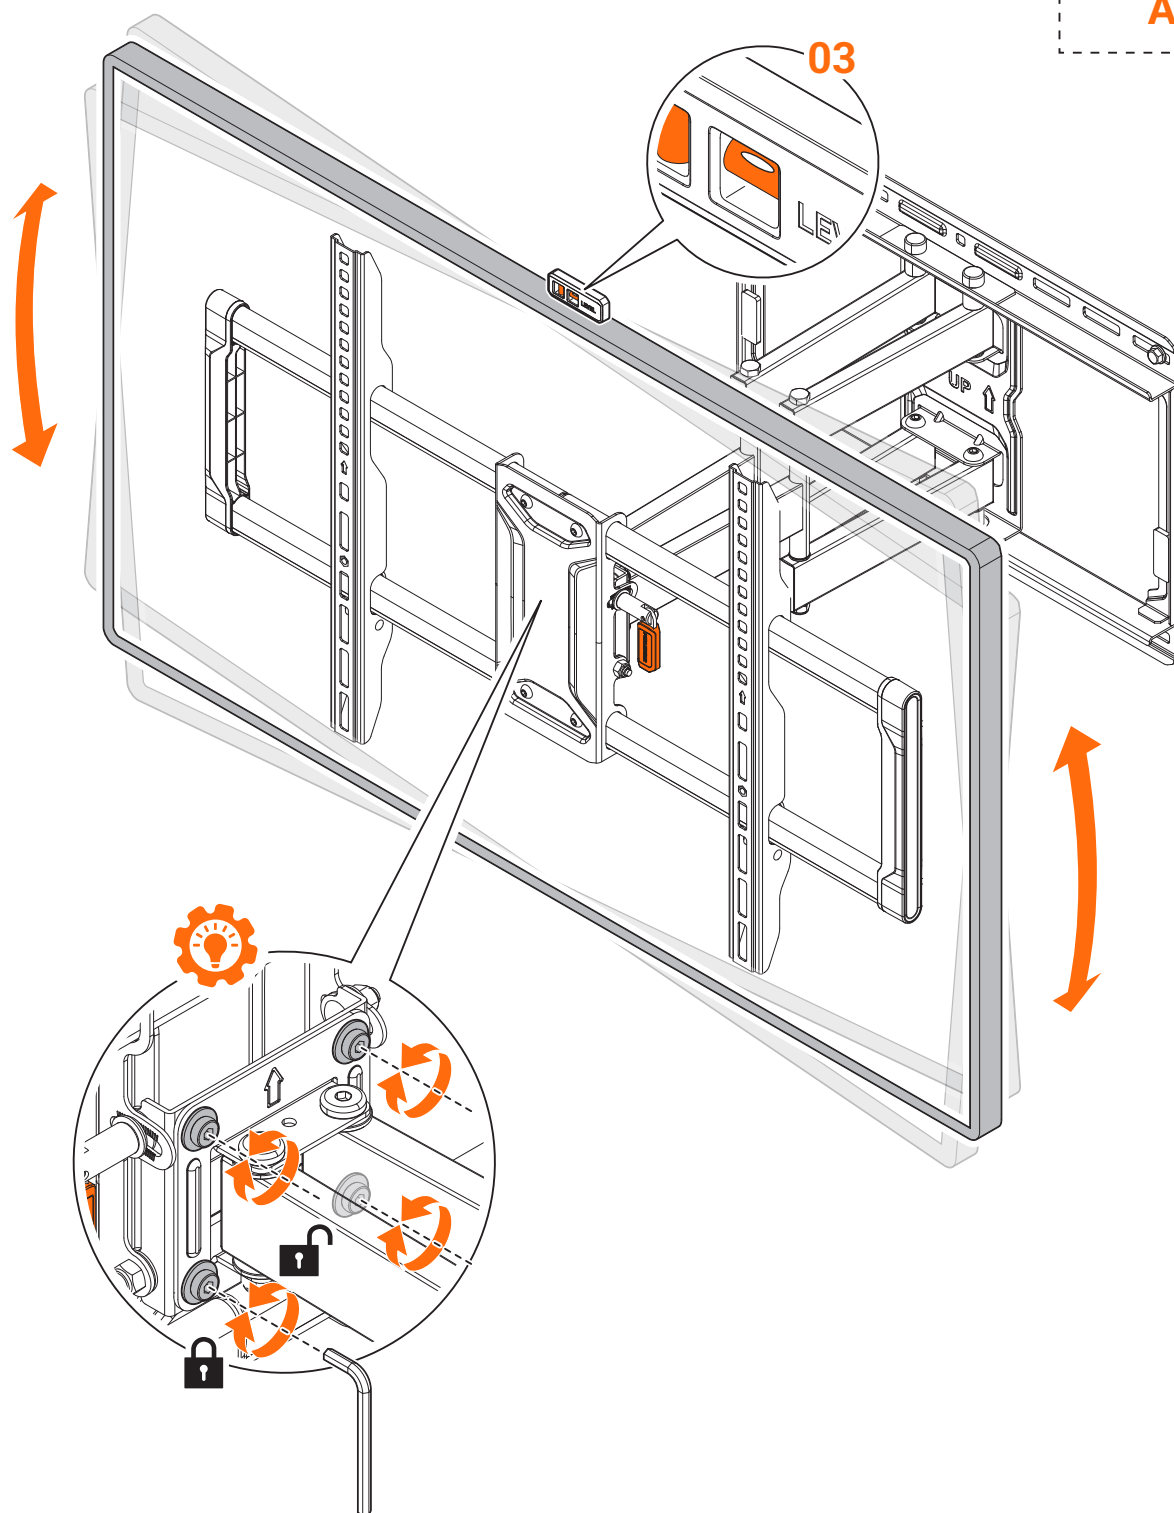

⚠ Note:
Do not overtighten or overloosen.

Hard to level? Slightly loosen the bolts, adjust, and then retighten.

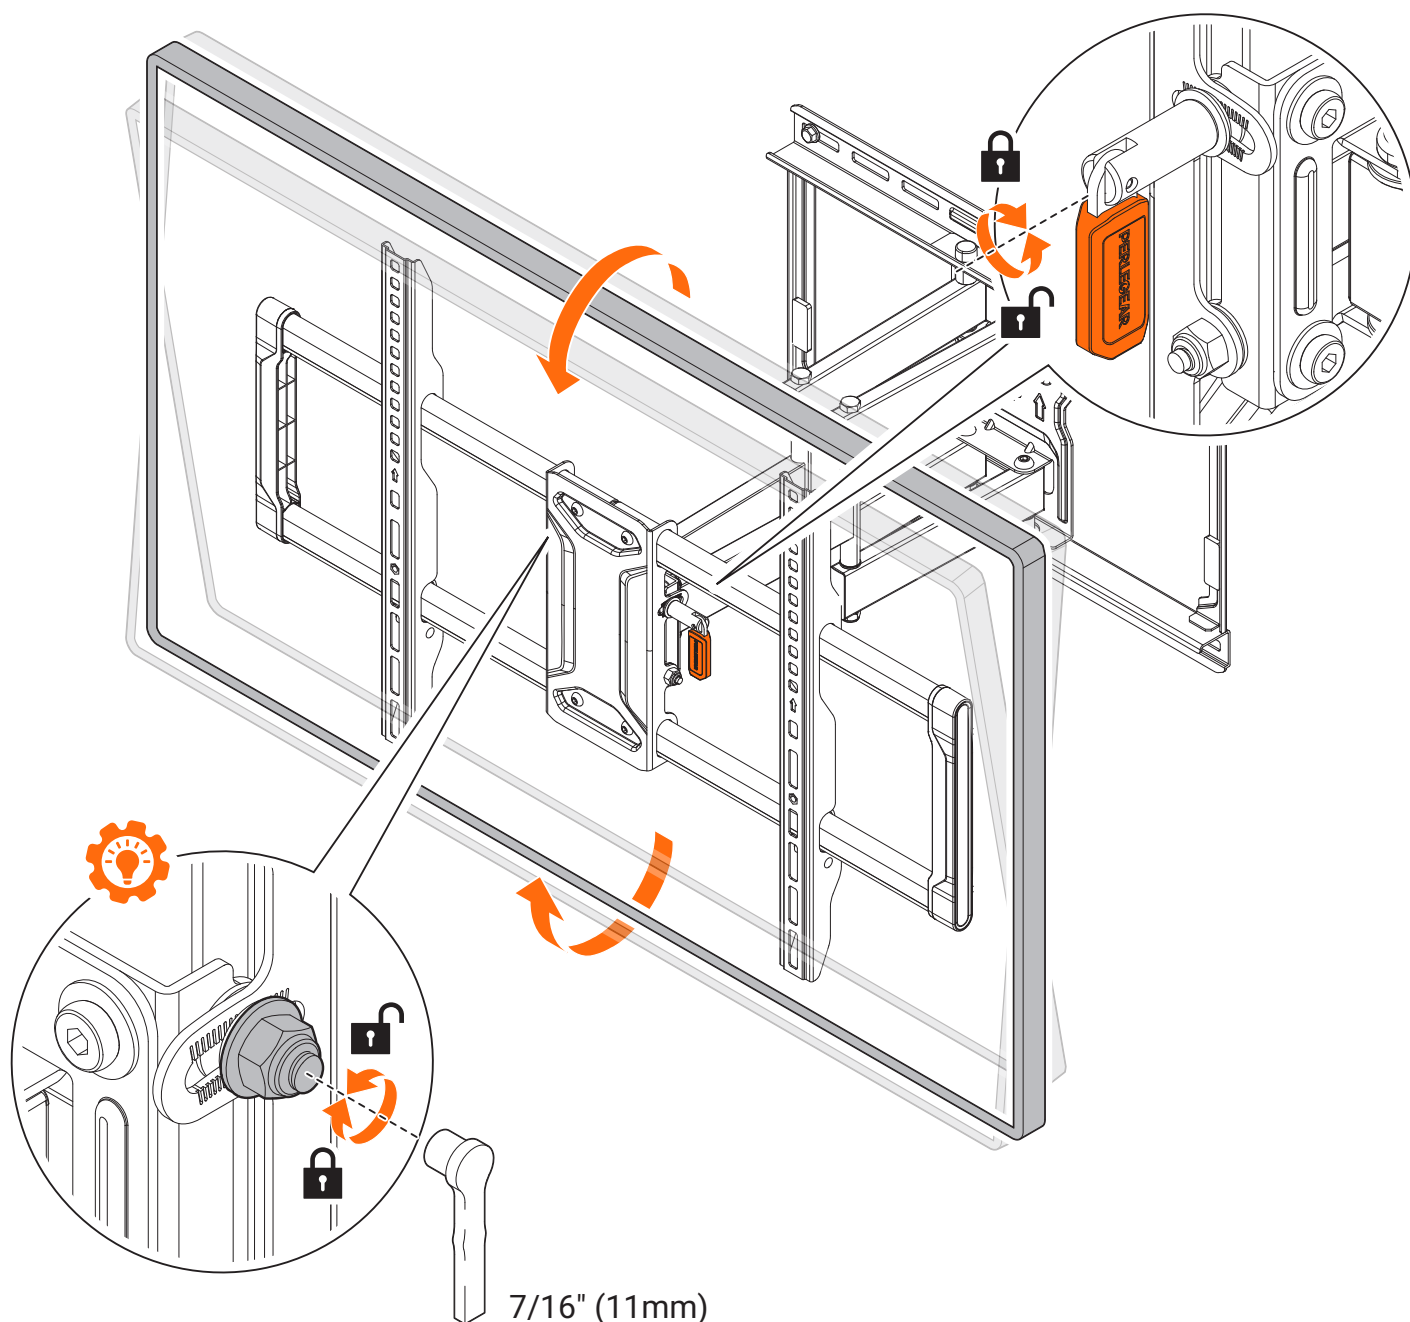

! Note:


Do not overtighten or overloosen.

Slightly loosen the lever, adjust, and then retighten.

- **Still hard to tilt?** Slightly loosen the nut on the other side, adjust, and then retighten on both sides.
- **Tilt won't hold?** Fully tighten the nut on the other side.



Management

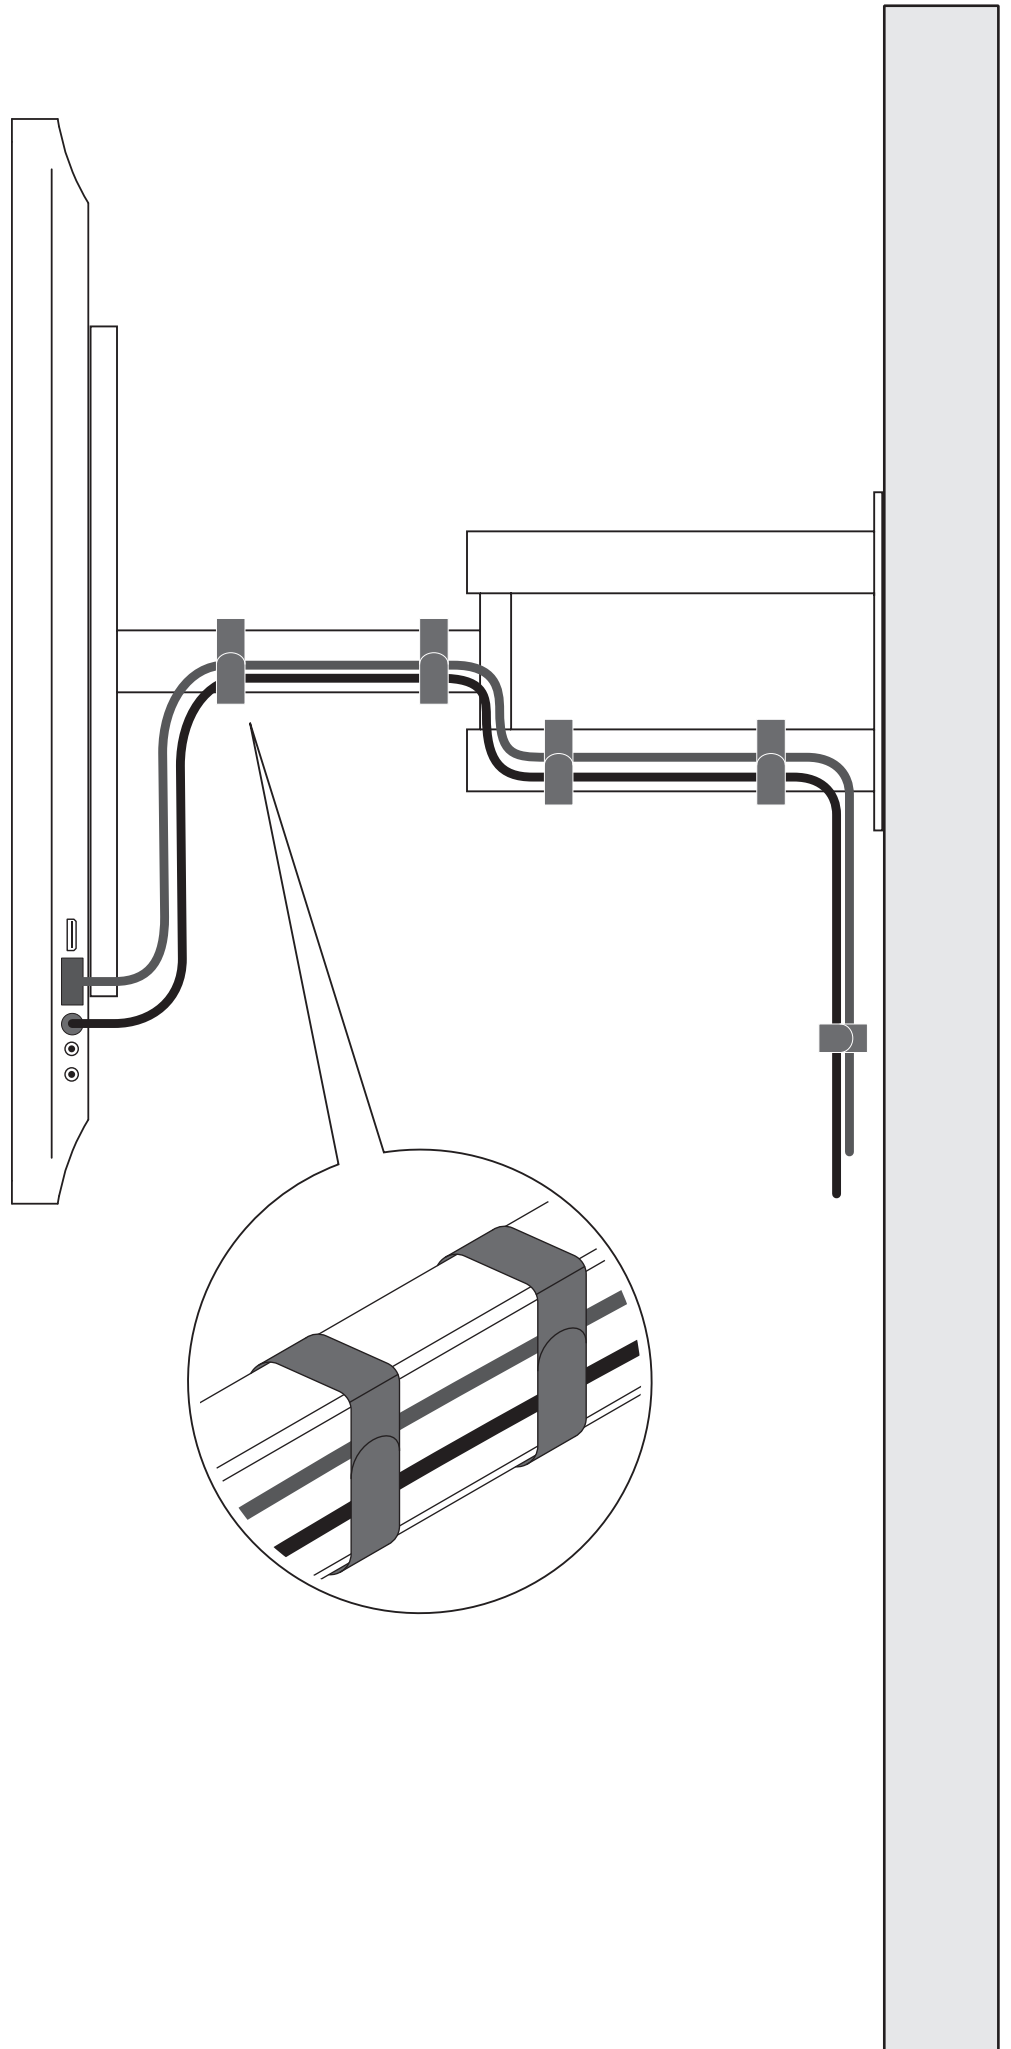

PERLEGear

860-04534-00 V0



1-800-456-5231 (US/CA) Mon-Fri 8am - 8pm (CST)

44-808-196-4165 (UK) Mon-Fri 2pm - 10pm (UTC)



www.perlegear.com



support@perlegear.com