
PawGiant

Meticulous Love


Kennel


SKU: SKUK97192-M

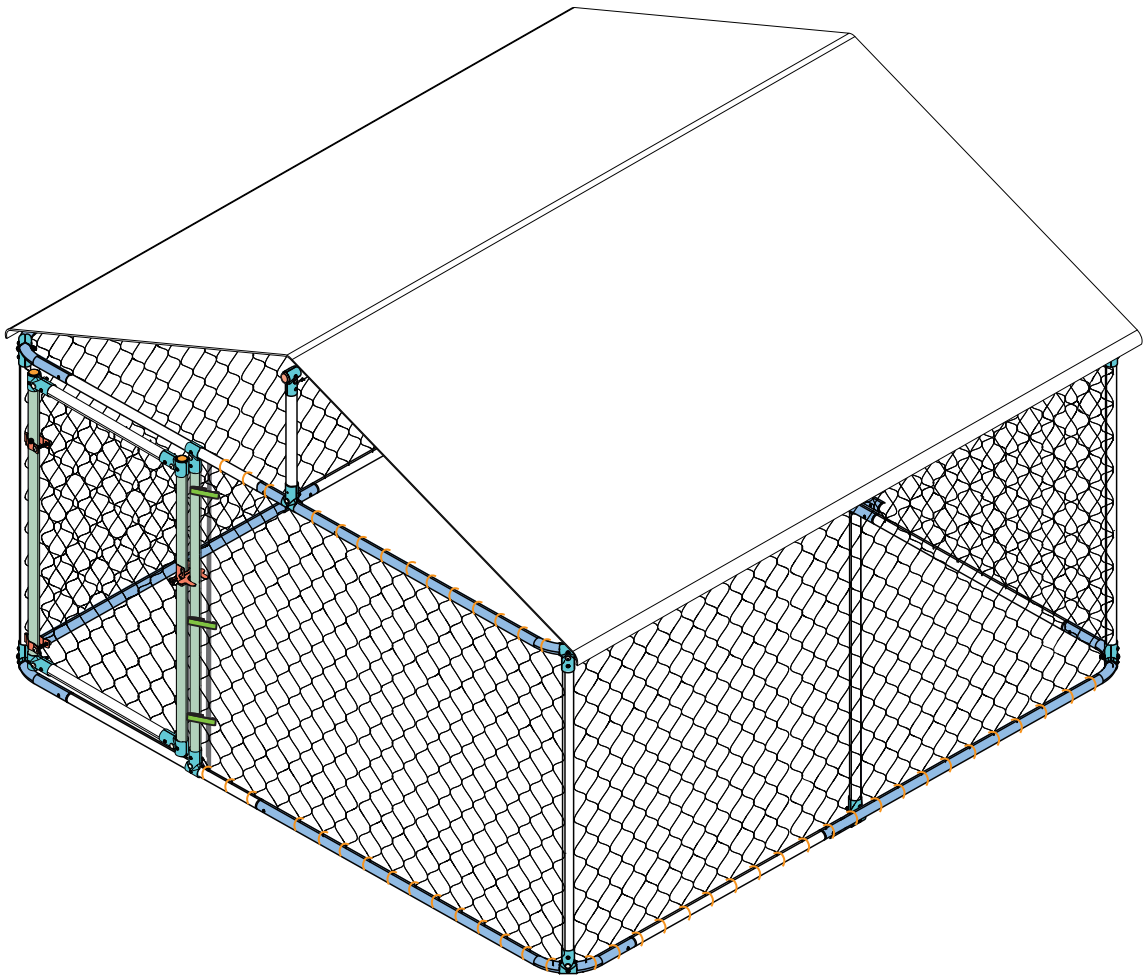

Assembly Guide


PART LIST

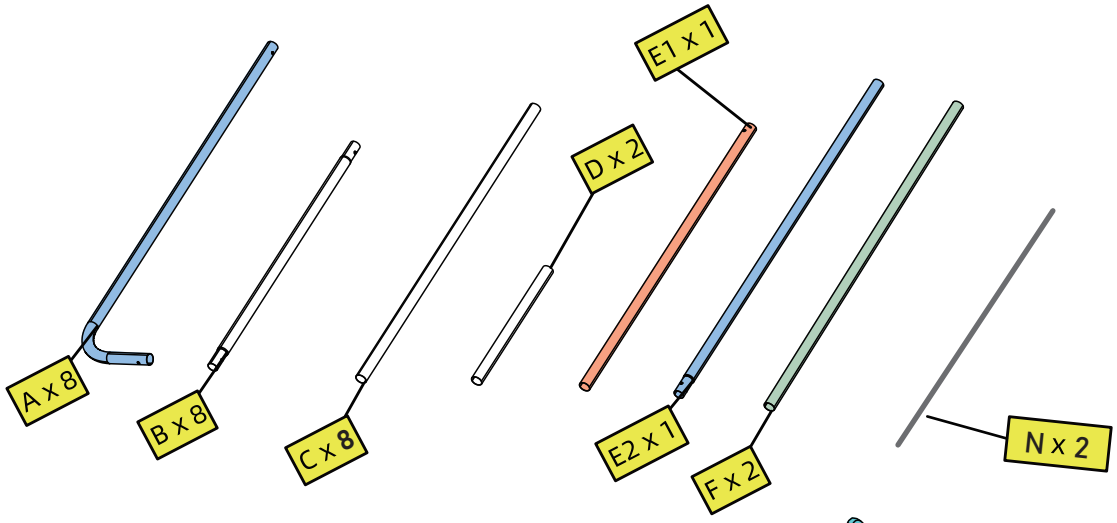


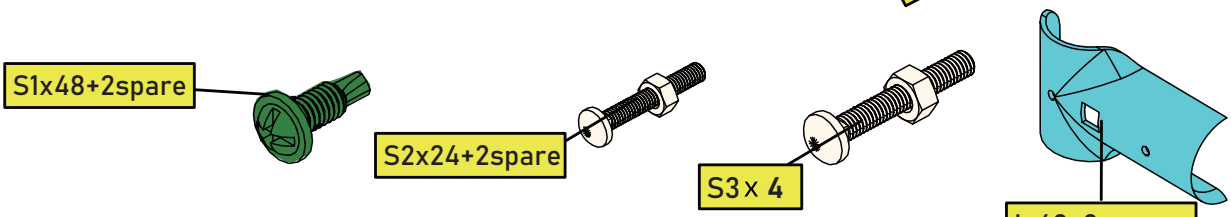


*S2 refers to the bolt and nut.

*S3 refers to the bolt and nut.

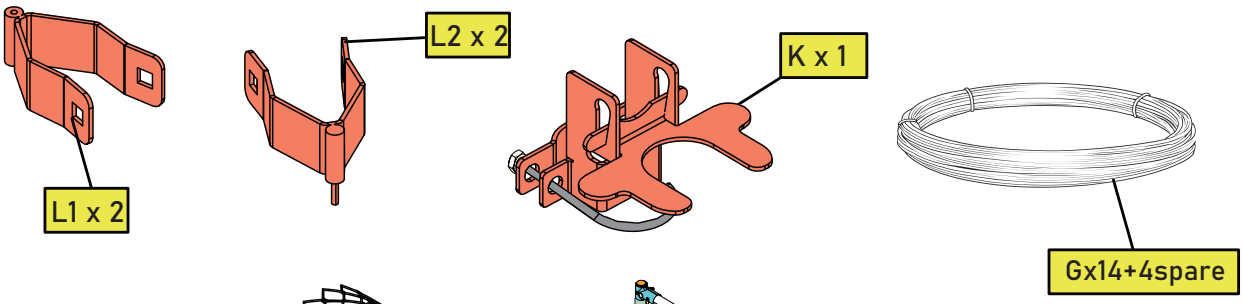

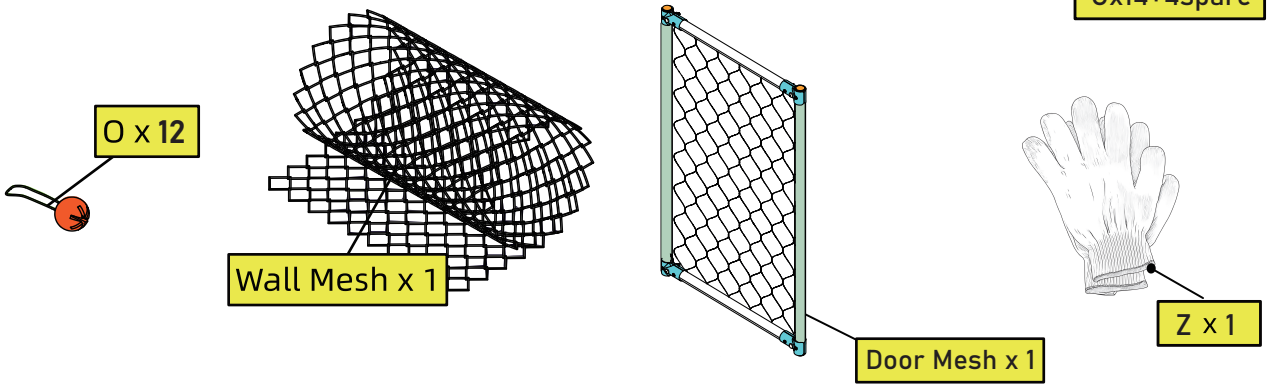


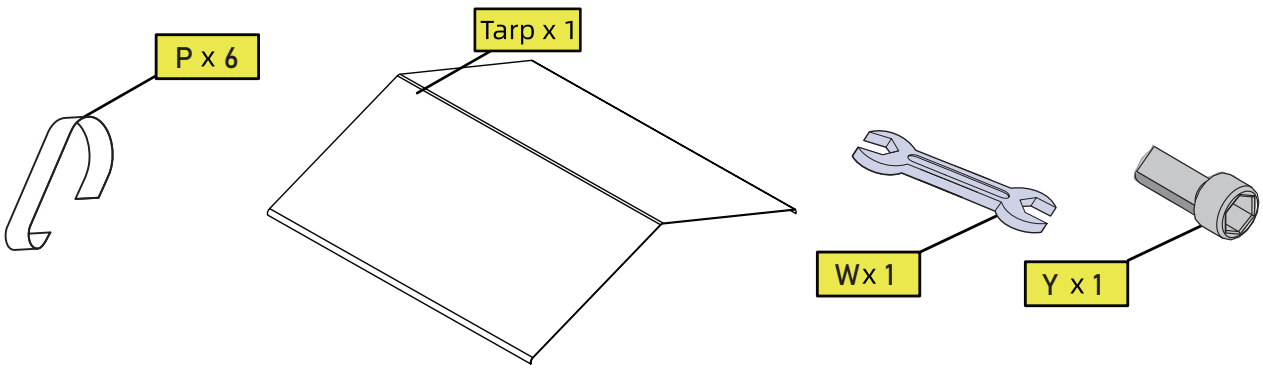

Assembly Guide


STEP 1

Part	Qty
A	8
B	8

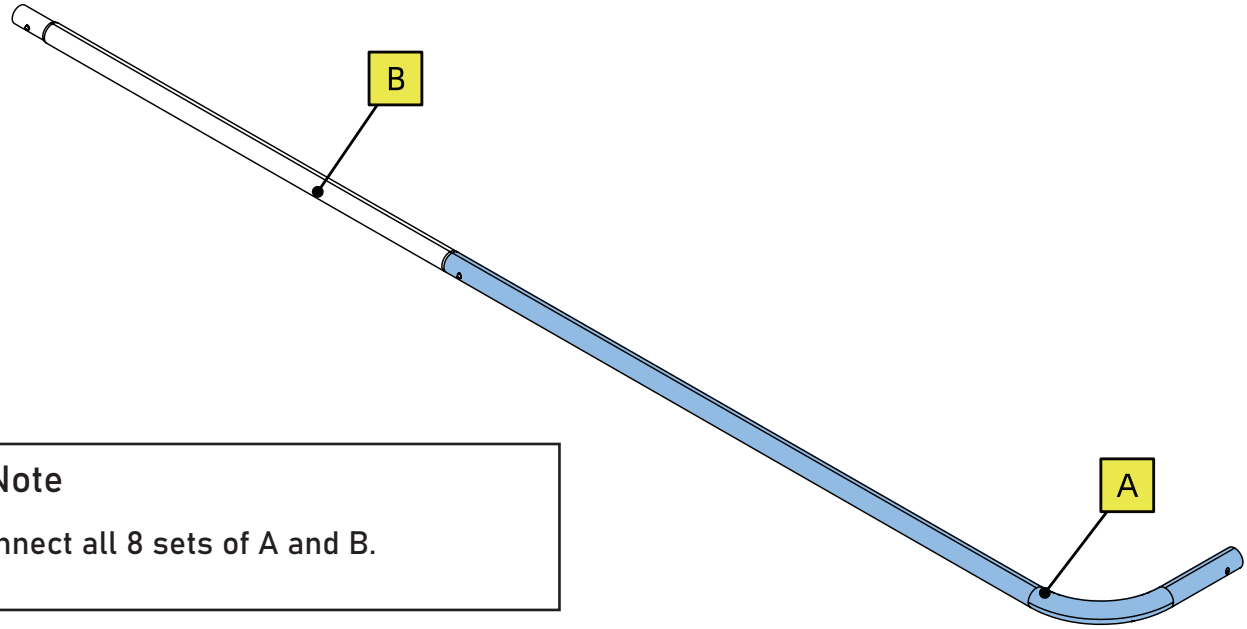


Note

Connect all 8 sets of A and B.

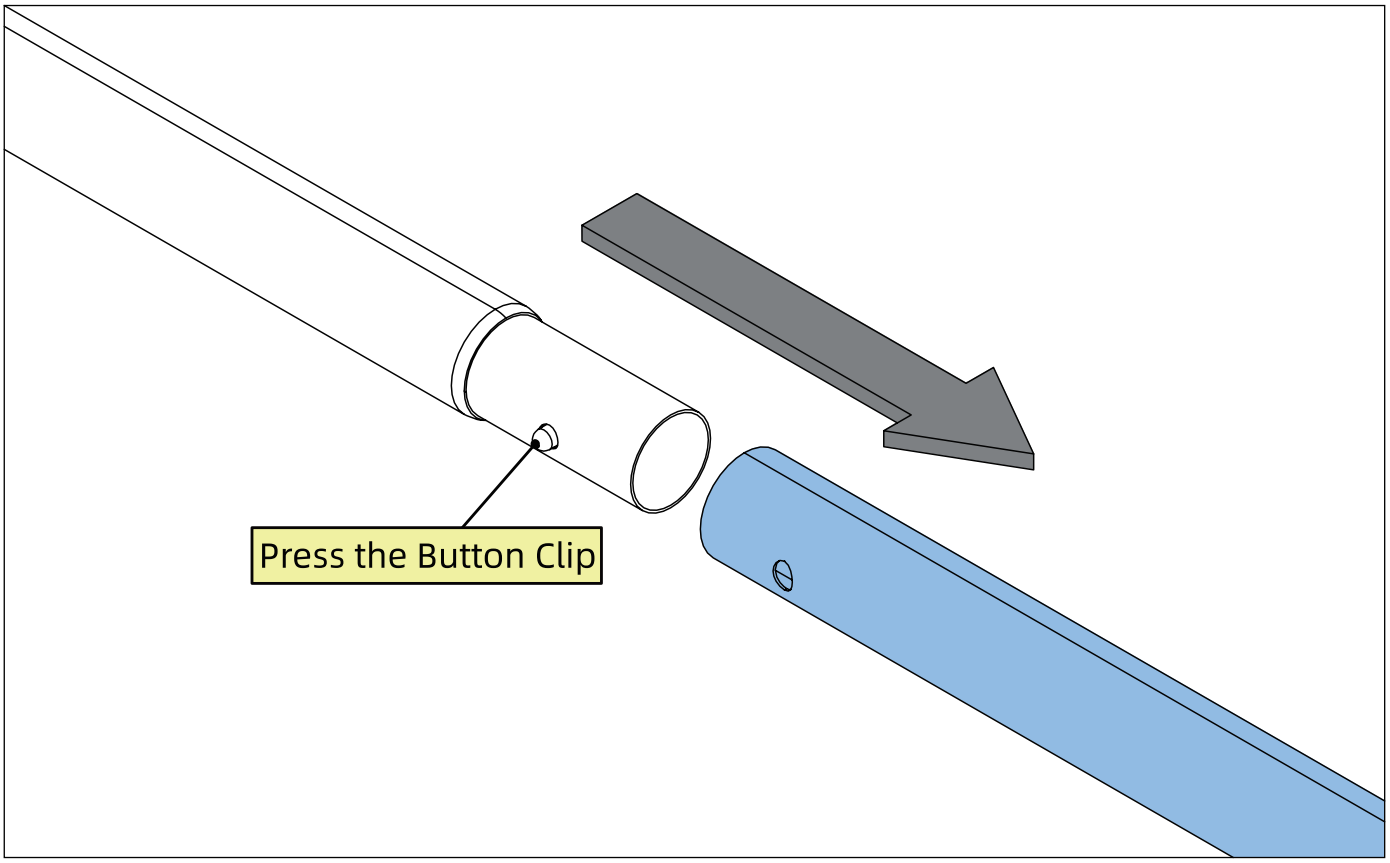

STEP 2


Part	Qty
A+B	8

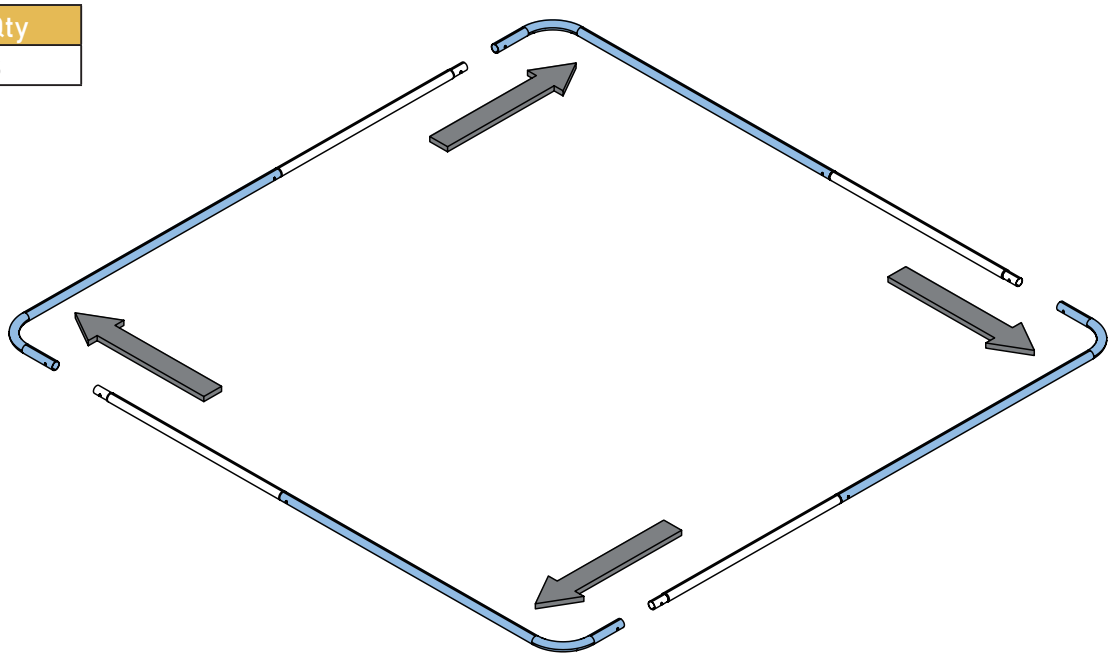

Note


BACK This is an orientation marker.


Repeat this step till you get two sets of rectangular frames.

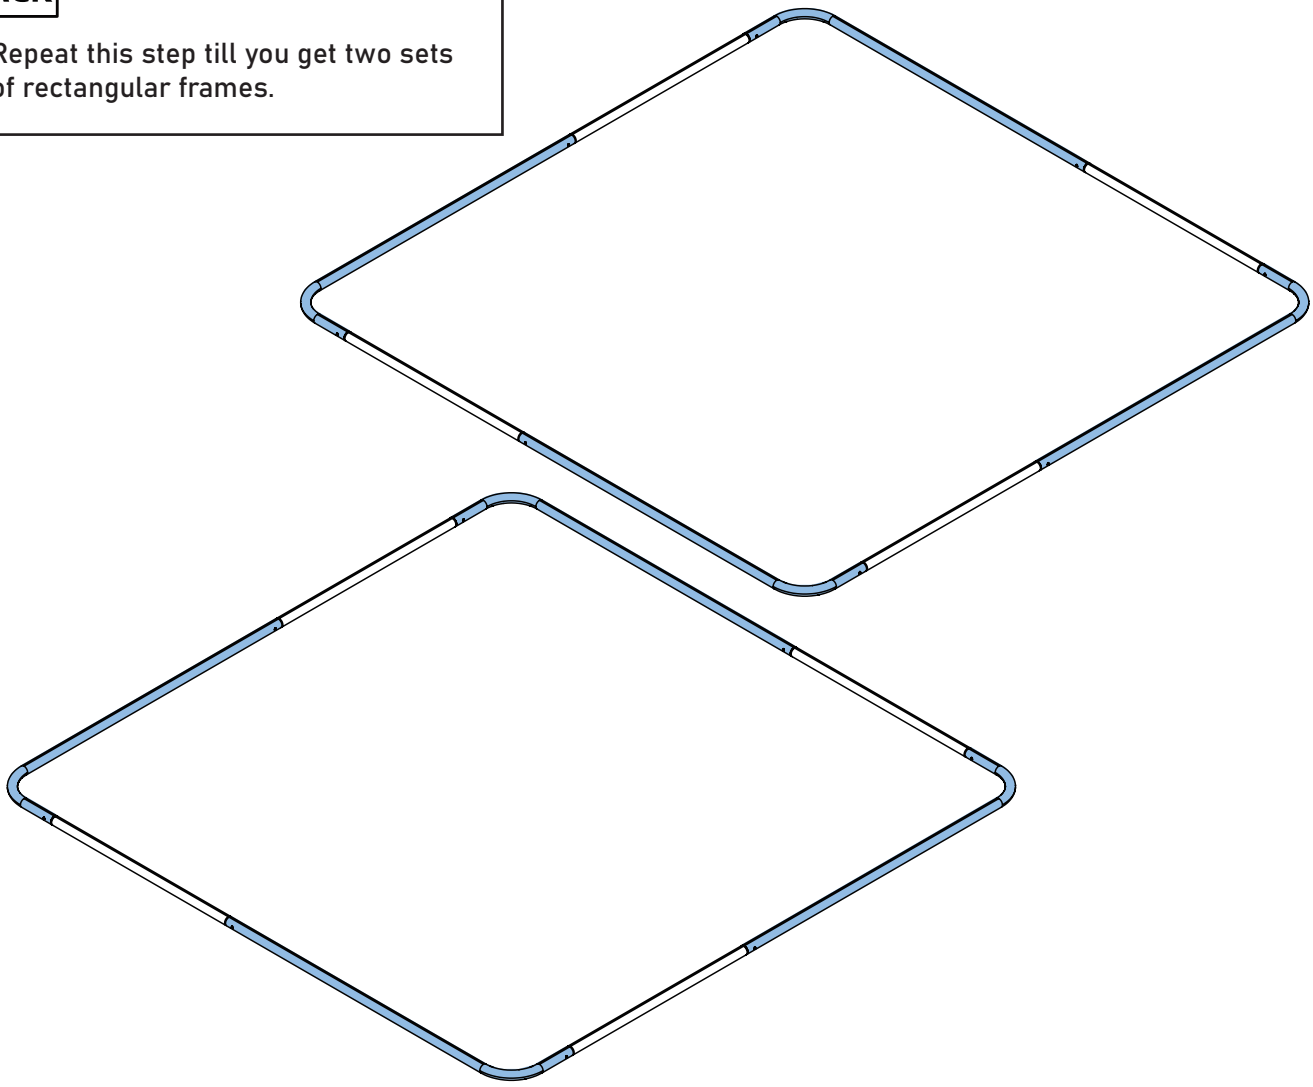

STEP 3


Part	Qty
I	16
S2	8

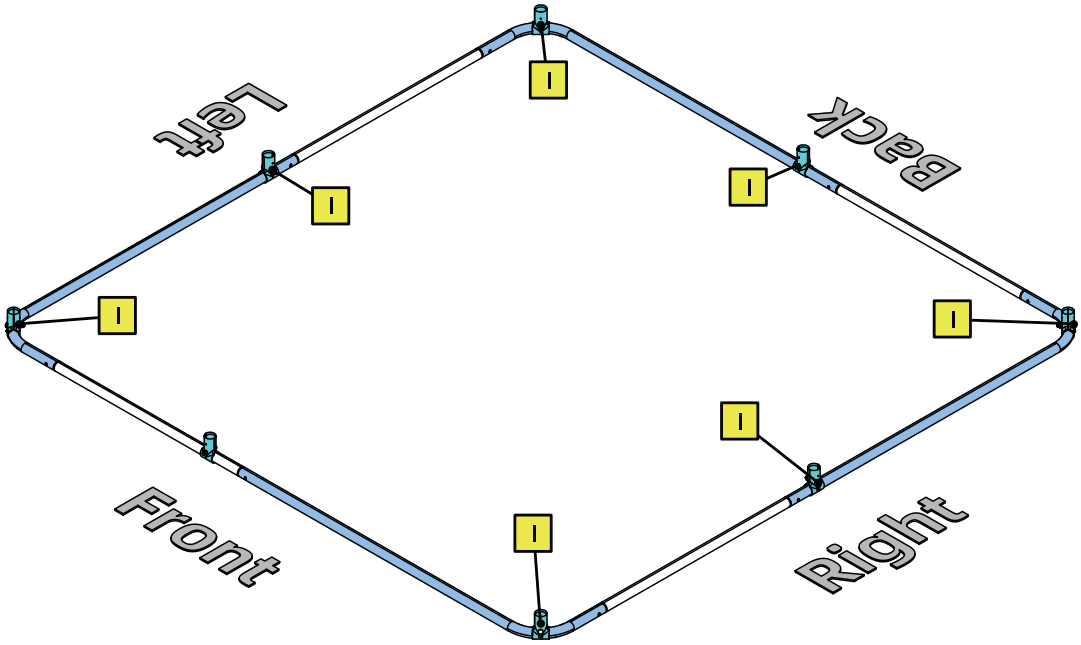

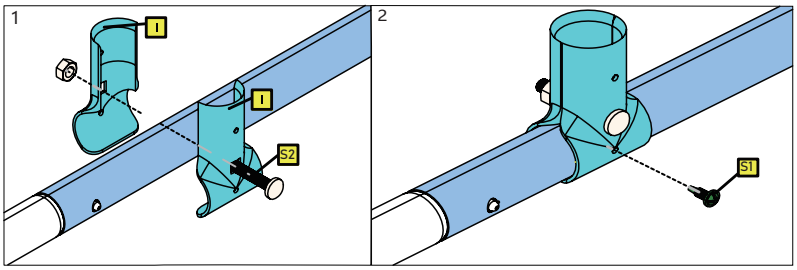


STEP 4


Part	Qty
C	8

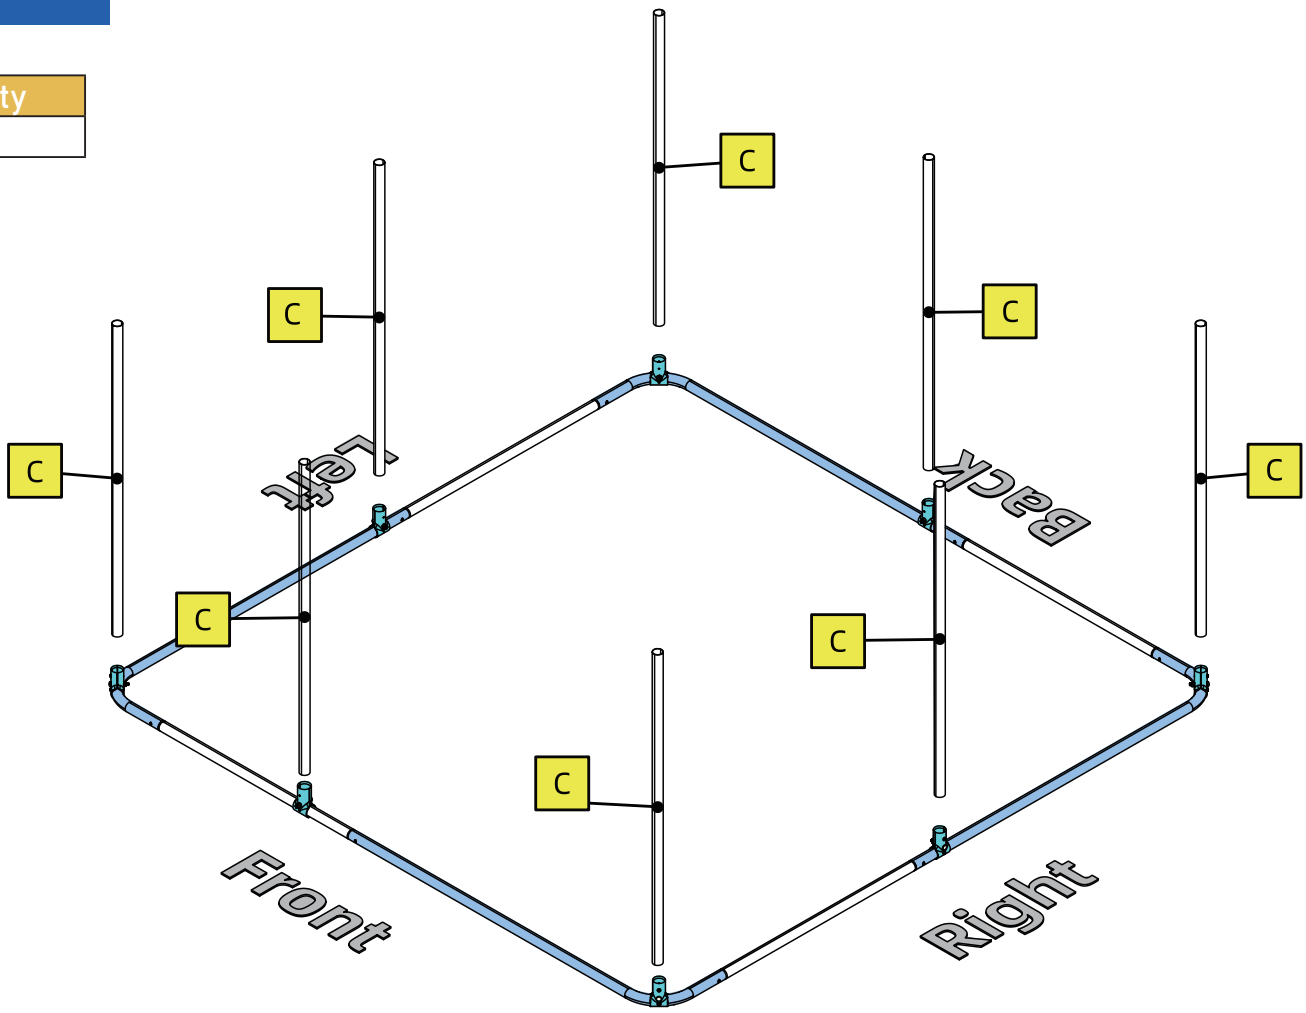

STEP 5

Part	Qty
A+B	8
I	16
S2	8

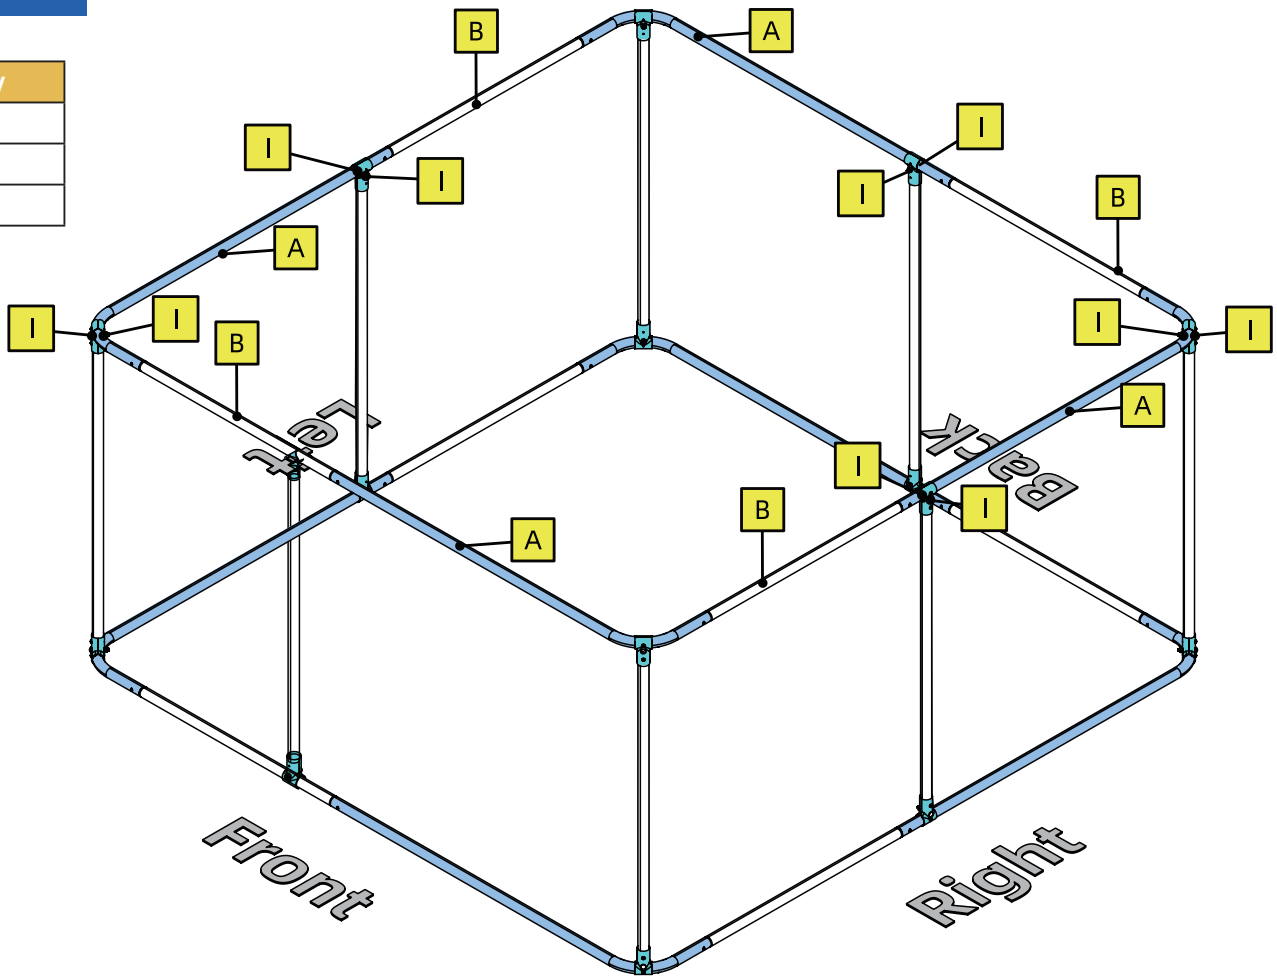

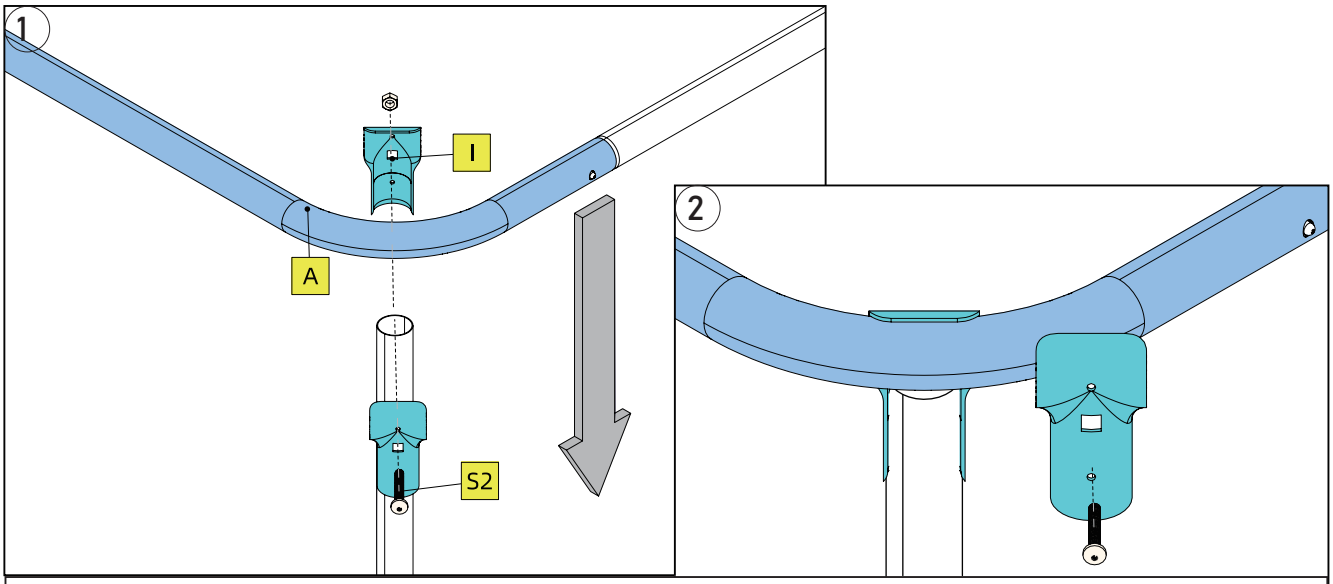


Note

A+B refers to the rectangular frame assembled in Step 2. You will need at least two people for this step, with each person standing at the diagonal corner, lifting the A+B frame to the top. Ideally, have a third person help you lift up the A+B frame while the two assemble the two pairs of I with S2. That said, two people can definitely finish this step.
The drawing on the bottom right shows you how the A+B frame rests on the S2.
Fix only two pairs of I and DO not drive any S1 screw to any of the tubes yet.


STEP 6

Part	Qty
I	4
S2	2

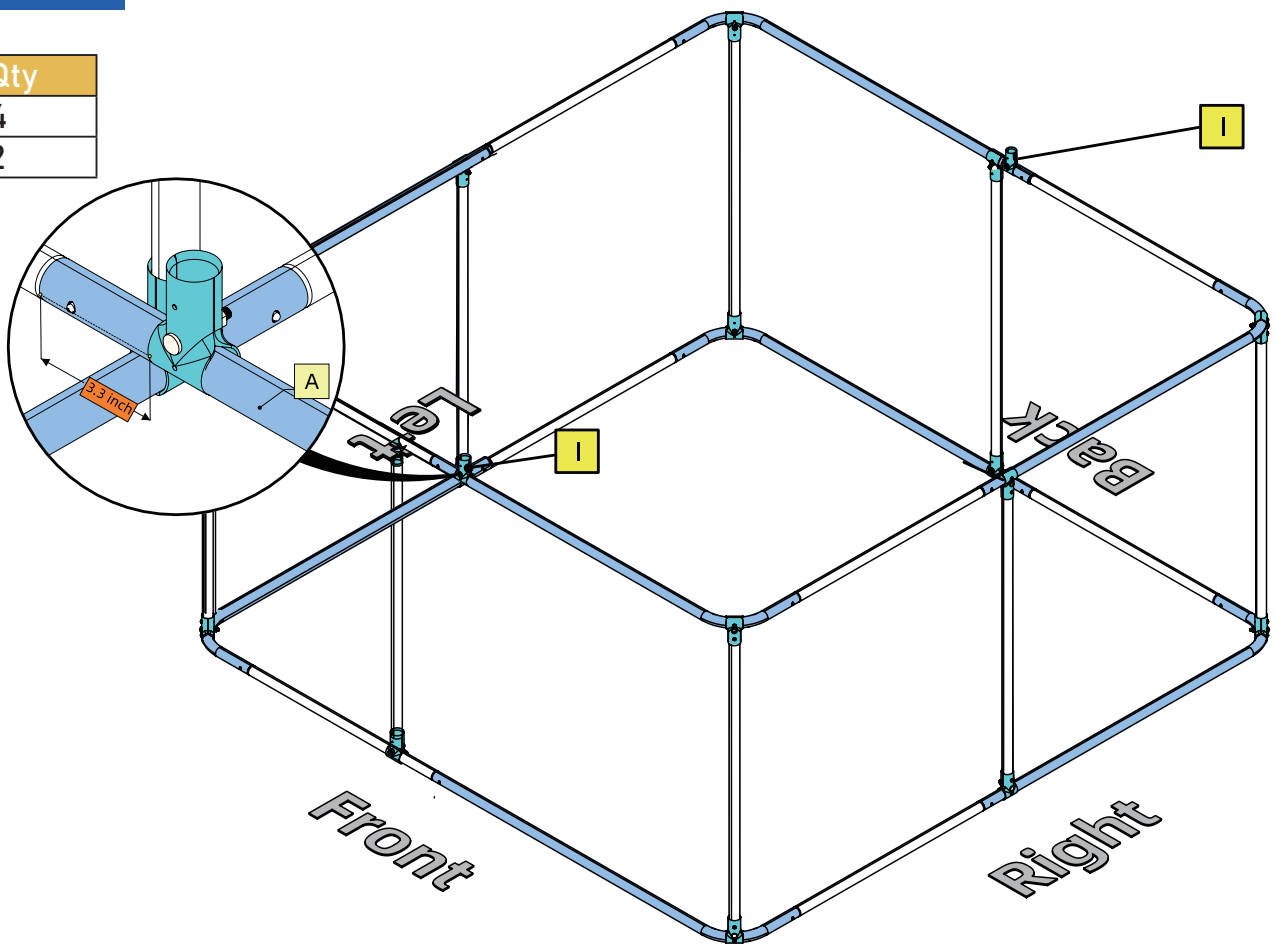


STEP 7


Part	Qty
D	2
I	4
S2	2

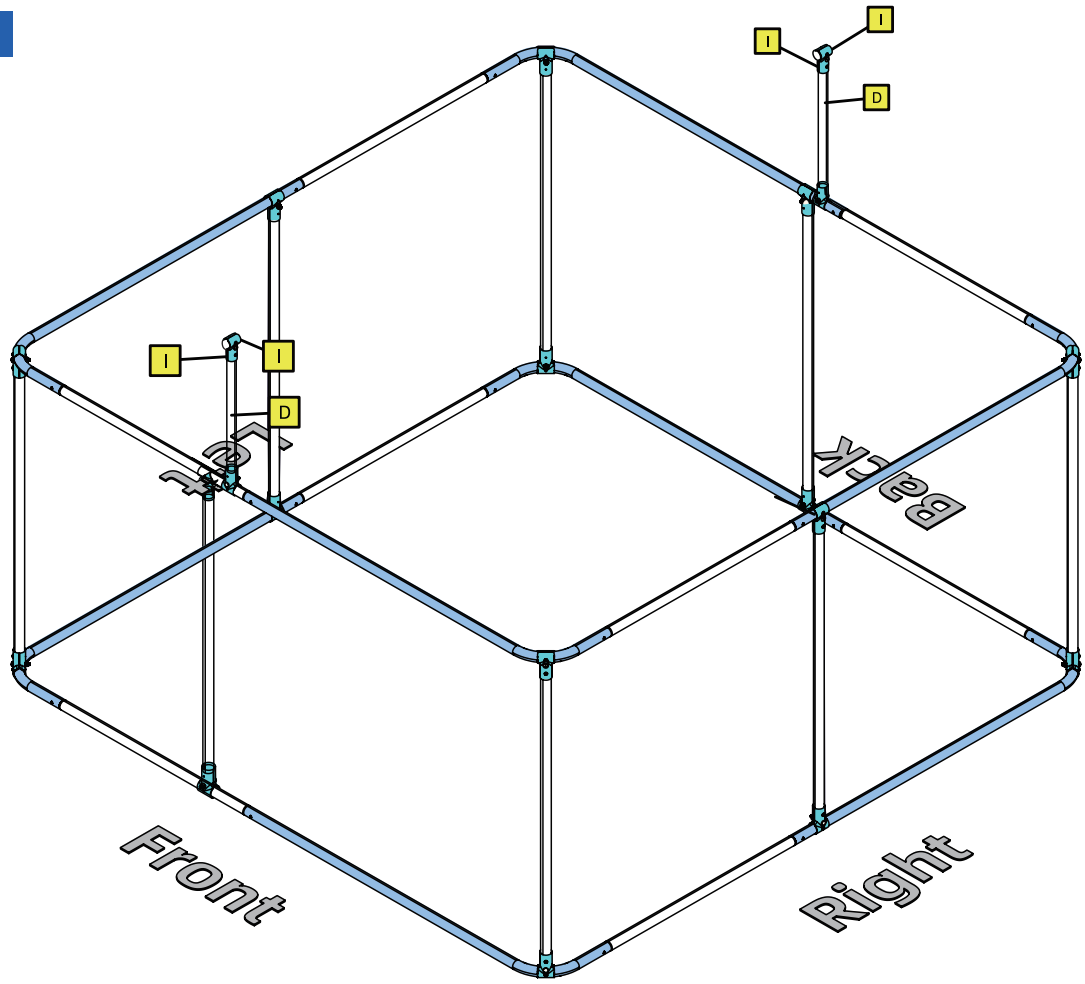



STEP 8

Part	Qty
E1+E2	1

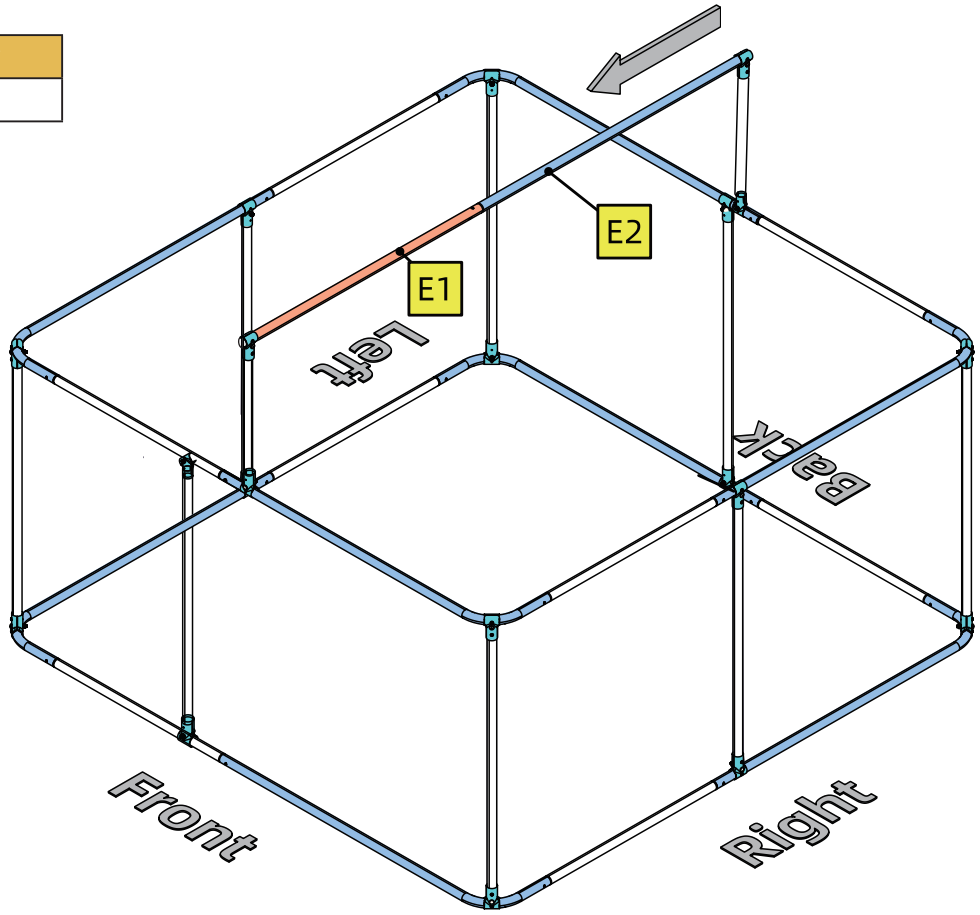

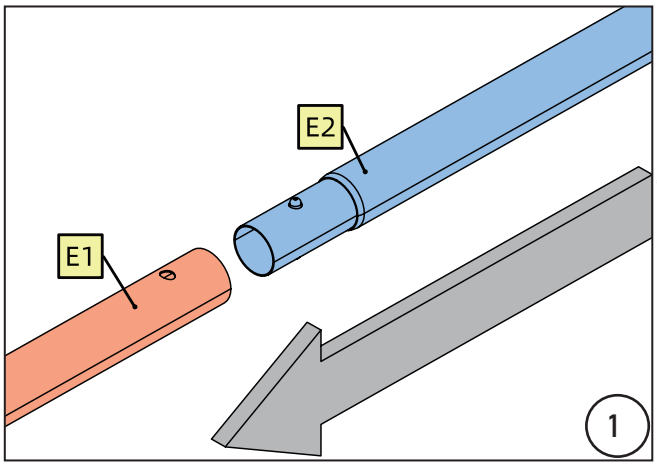

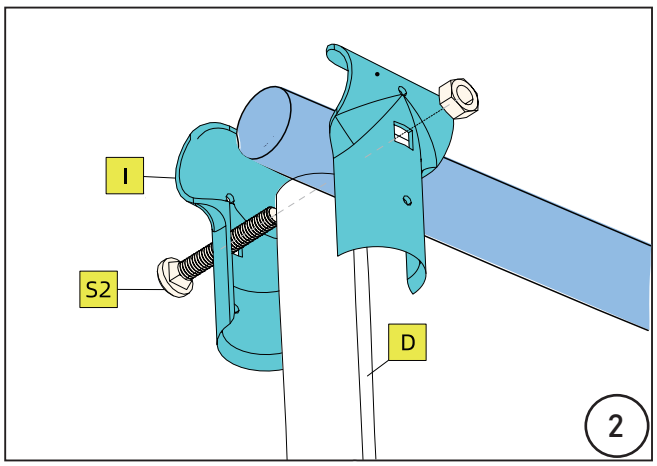

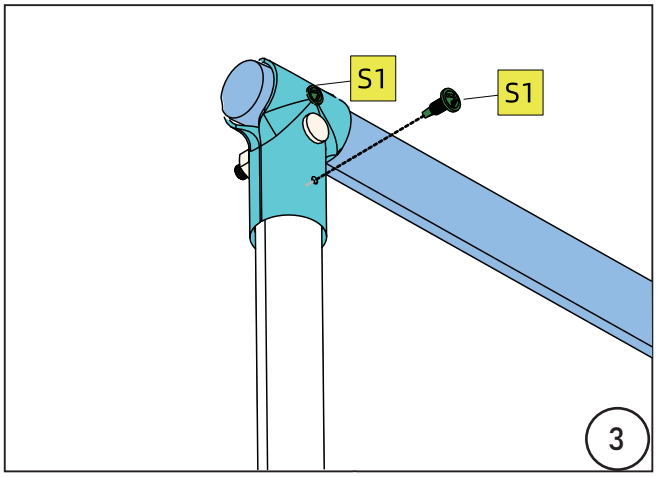


Note


When attaching I to tube D, make sure the top edge of I is at the same level of the edge of D.

Continued on next page for this step.

STEP 9

Part	Qty
I	8
S2	4

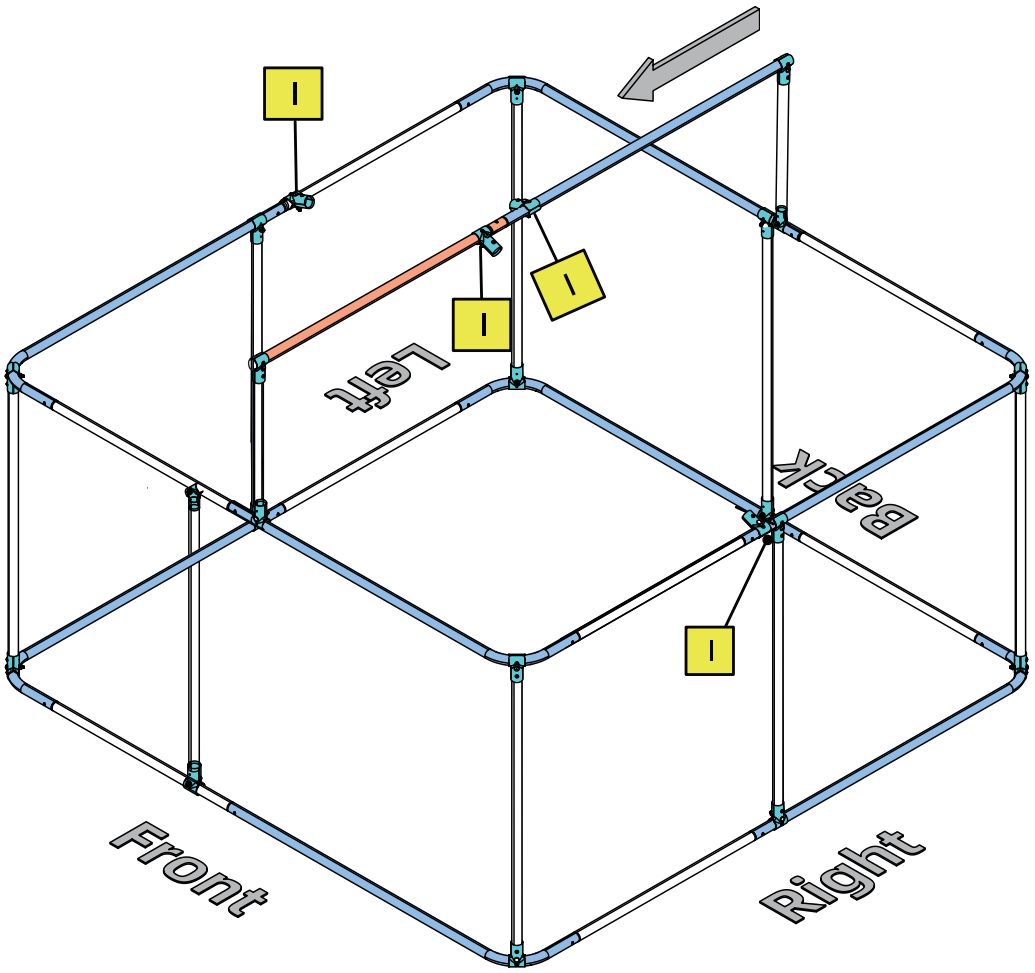

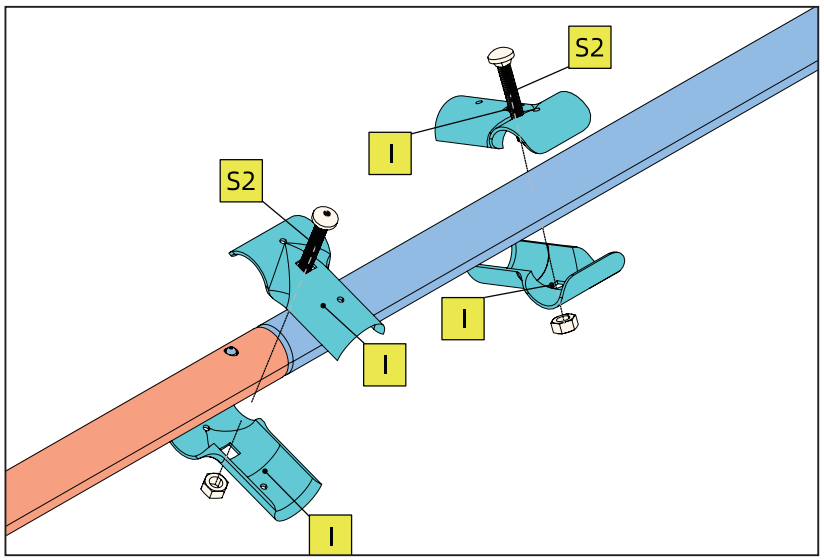



Note


E1+E2 refers to the frame assembled in Step 7 and 8.
DO Not use S1 in this step.


STEP 10

Part	Qty
F	2

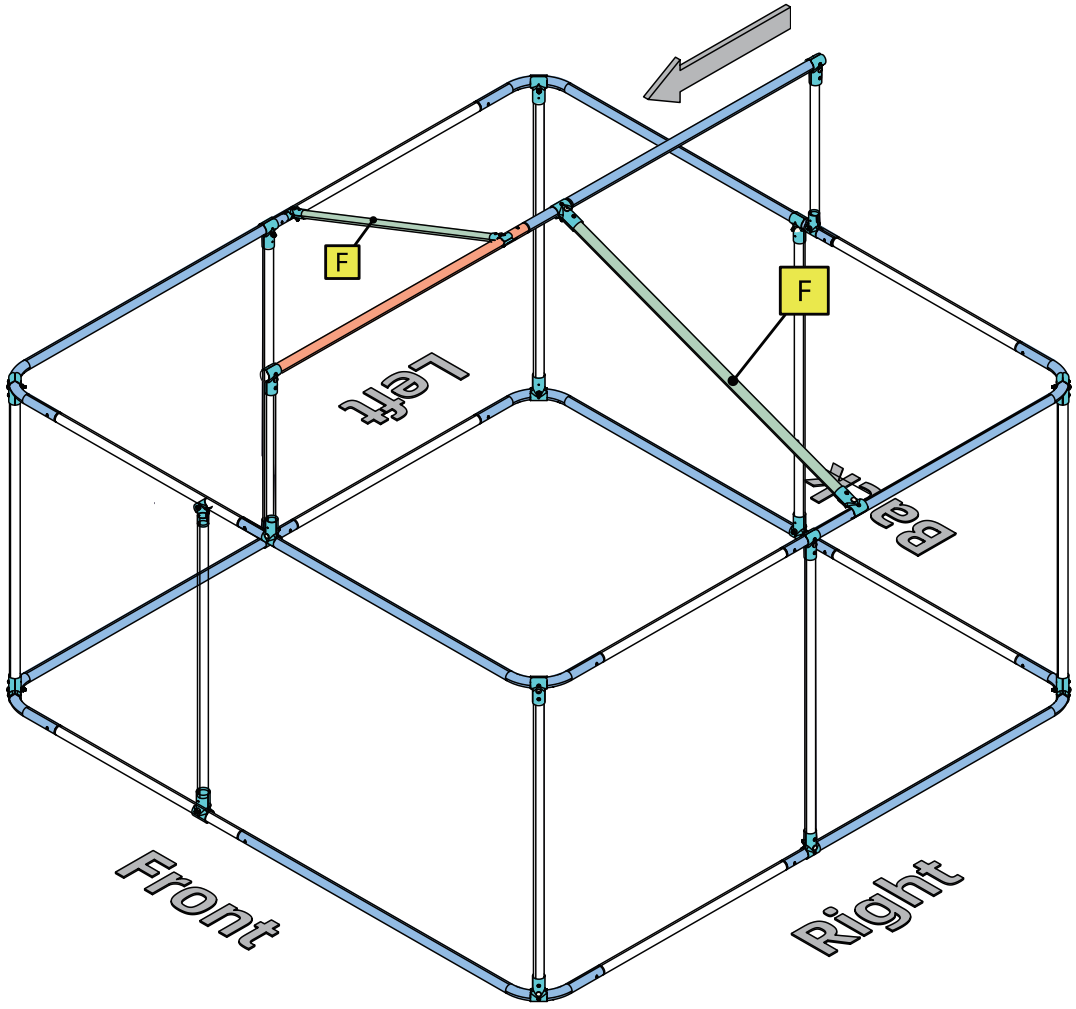

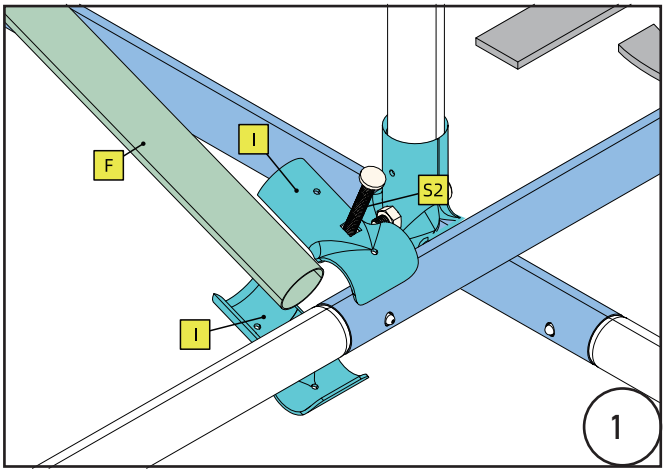

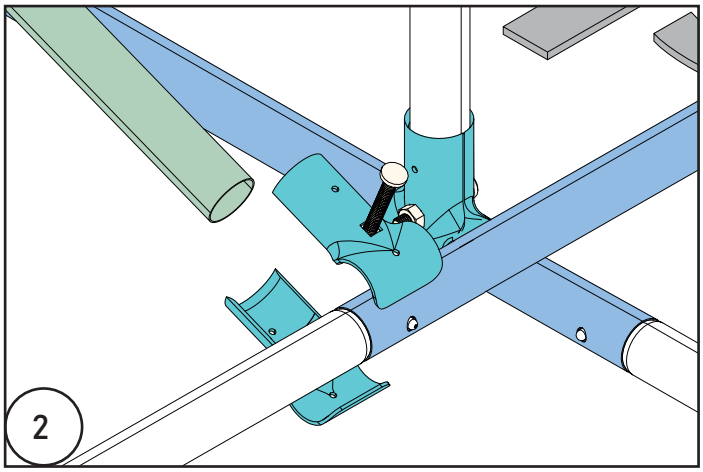

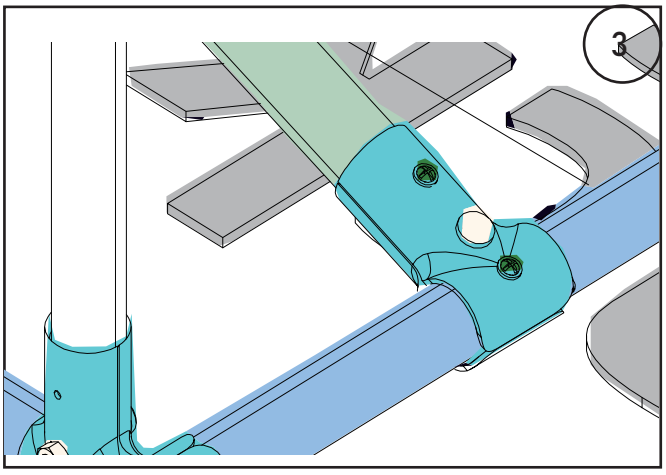



Note

Align the two pairs of I to be assembled in this step with the two pairs of I on E1+E2, then slide the tube F inside.
Drawing 2 and 3 depict two situations where the F tube might be too long or too short. These situations are caused by the incorrect location of I installed in Step 9. These situations are rare to happen but if they do happen, try slide the two pairs of I installed in step 9 together with the E1+E2 frame to left or right to adjust their location.


STEP 11

Part	Qty
L1	2
L2	2
S3	2
K	1
Door Mesh	1

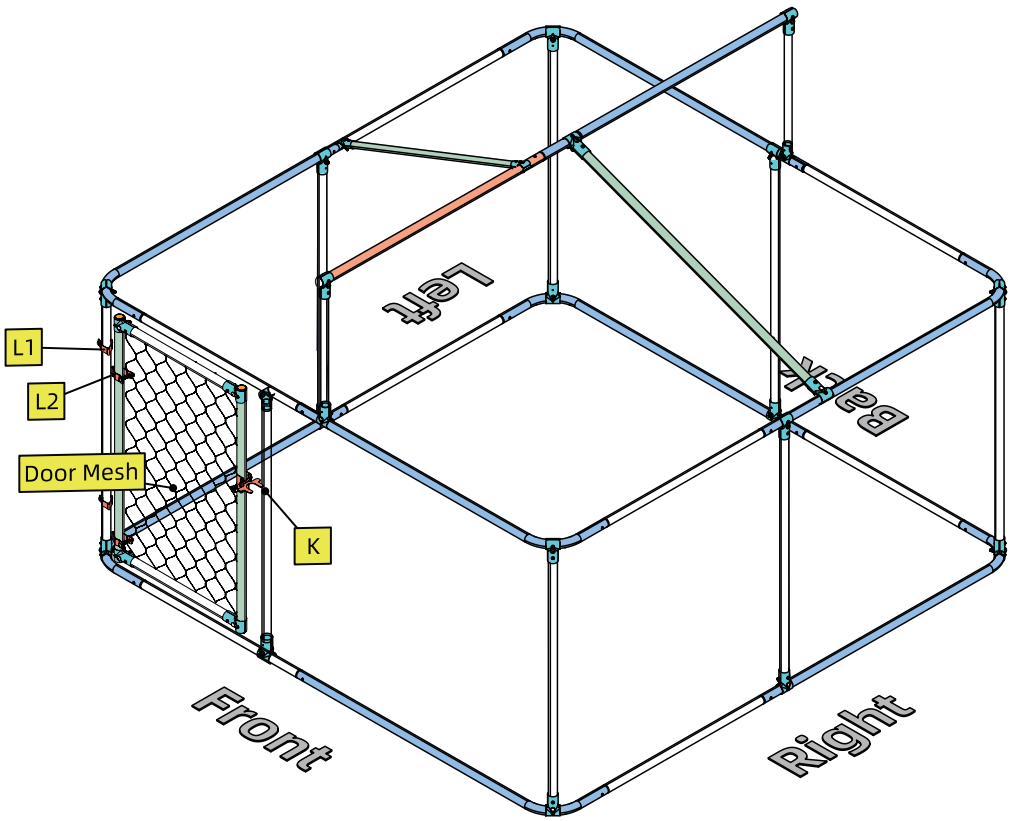

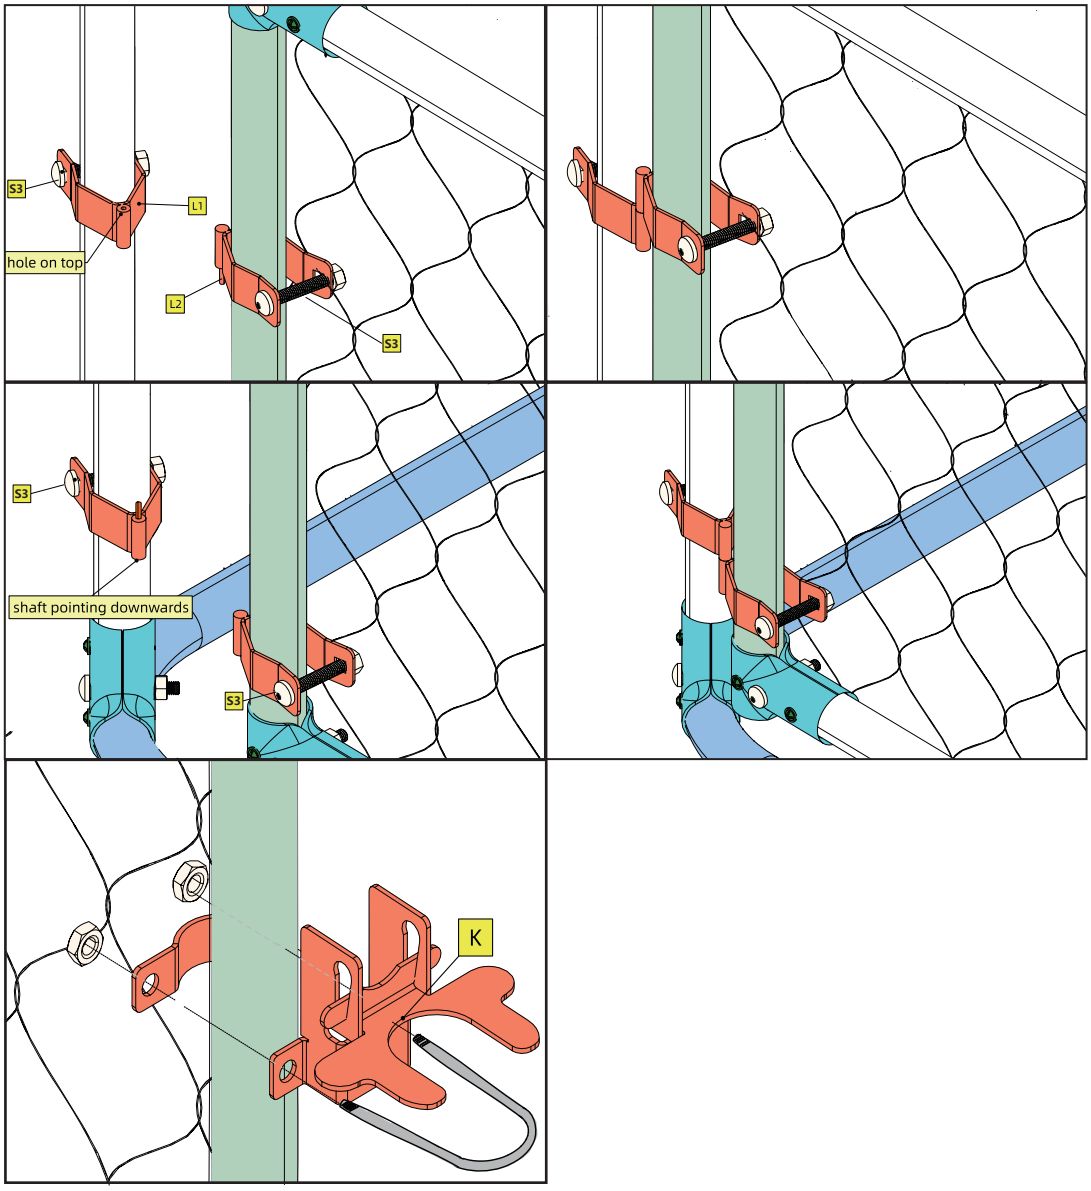


STEP 12

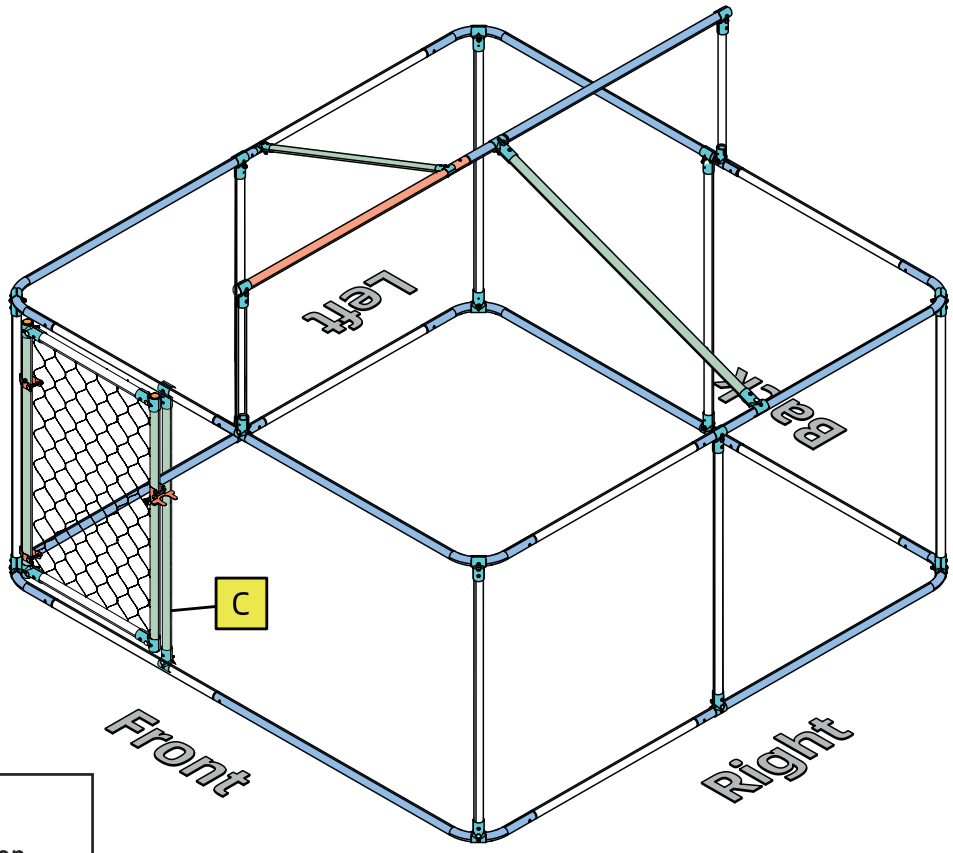

Note
To find a good position for tube C, make sure it sits inside the gap of K and K can lift up easily.


Note
The door lock K can be installed on he door frame or on the right C-pillar.

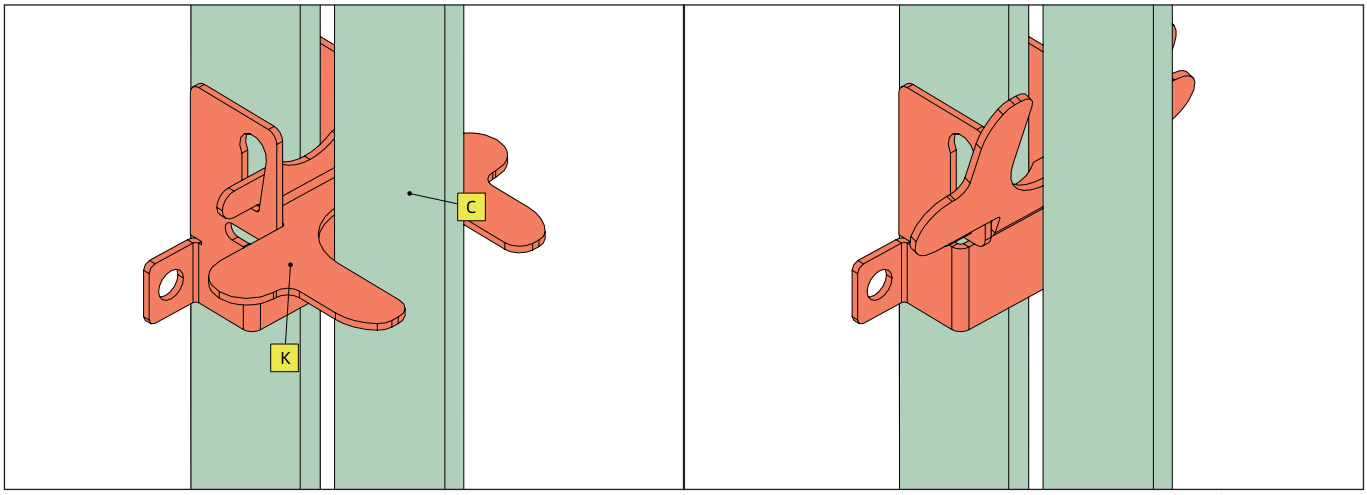



STEP 13

Part	Qty
N	2
P	6
Wall Mesh	1

It ends here.
just like the begging,
hold it with 3 hooks.

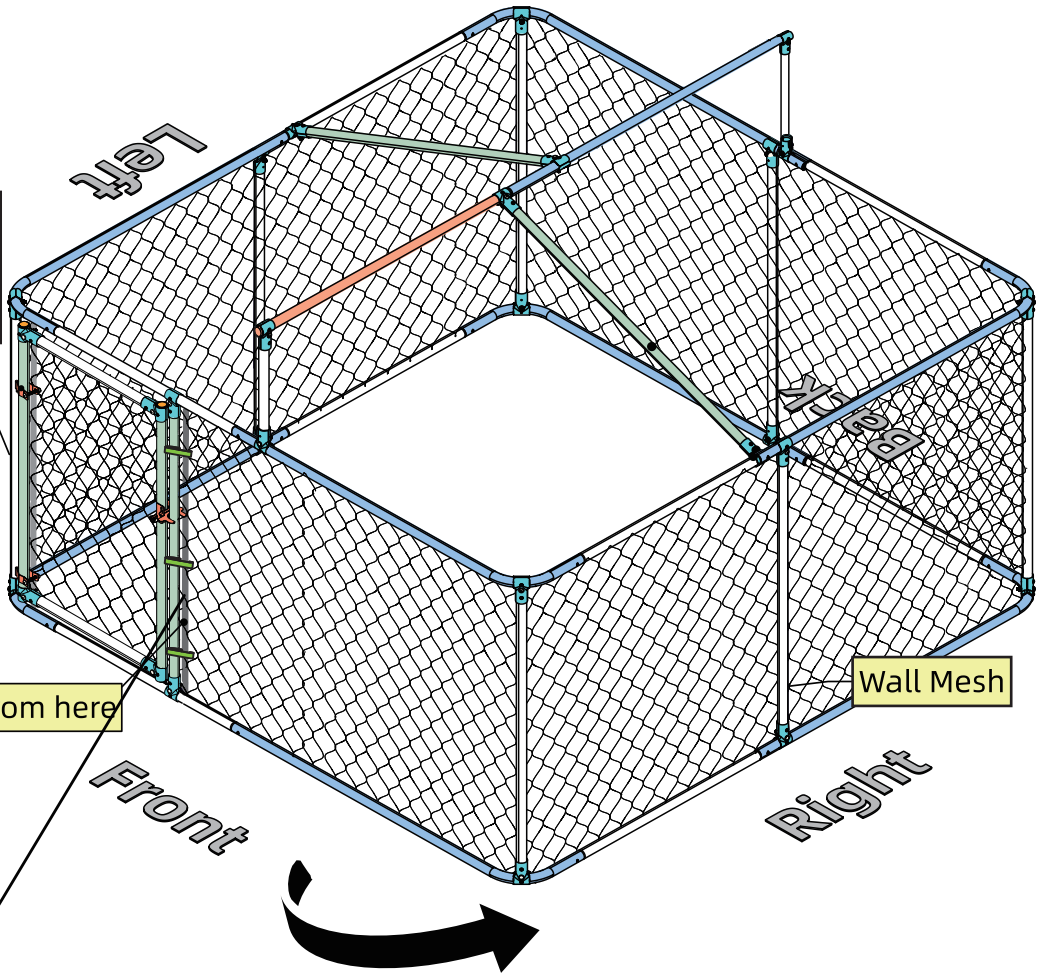


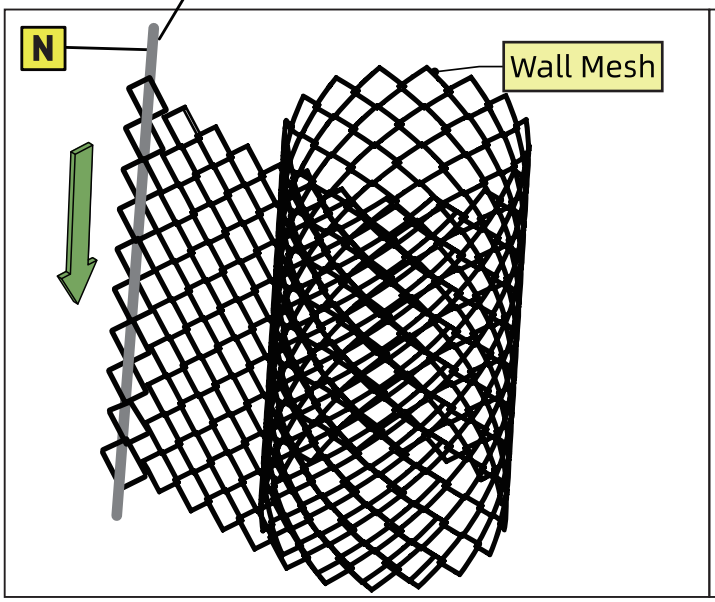


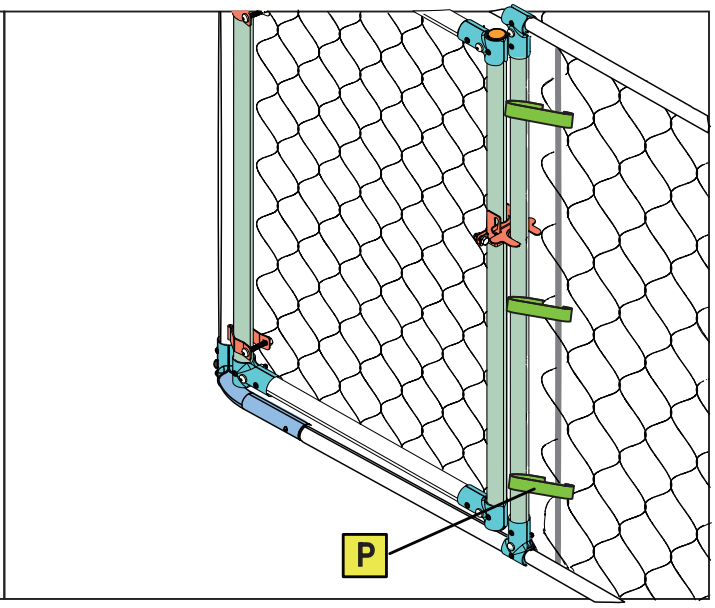

STEP 14

Part	Qty
G	14

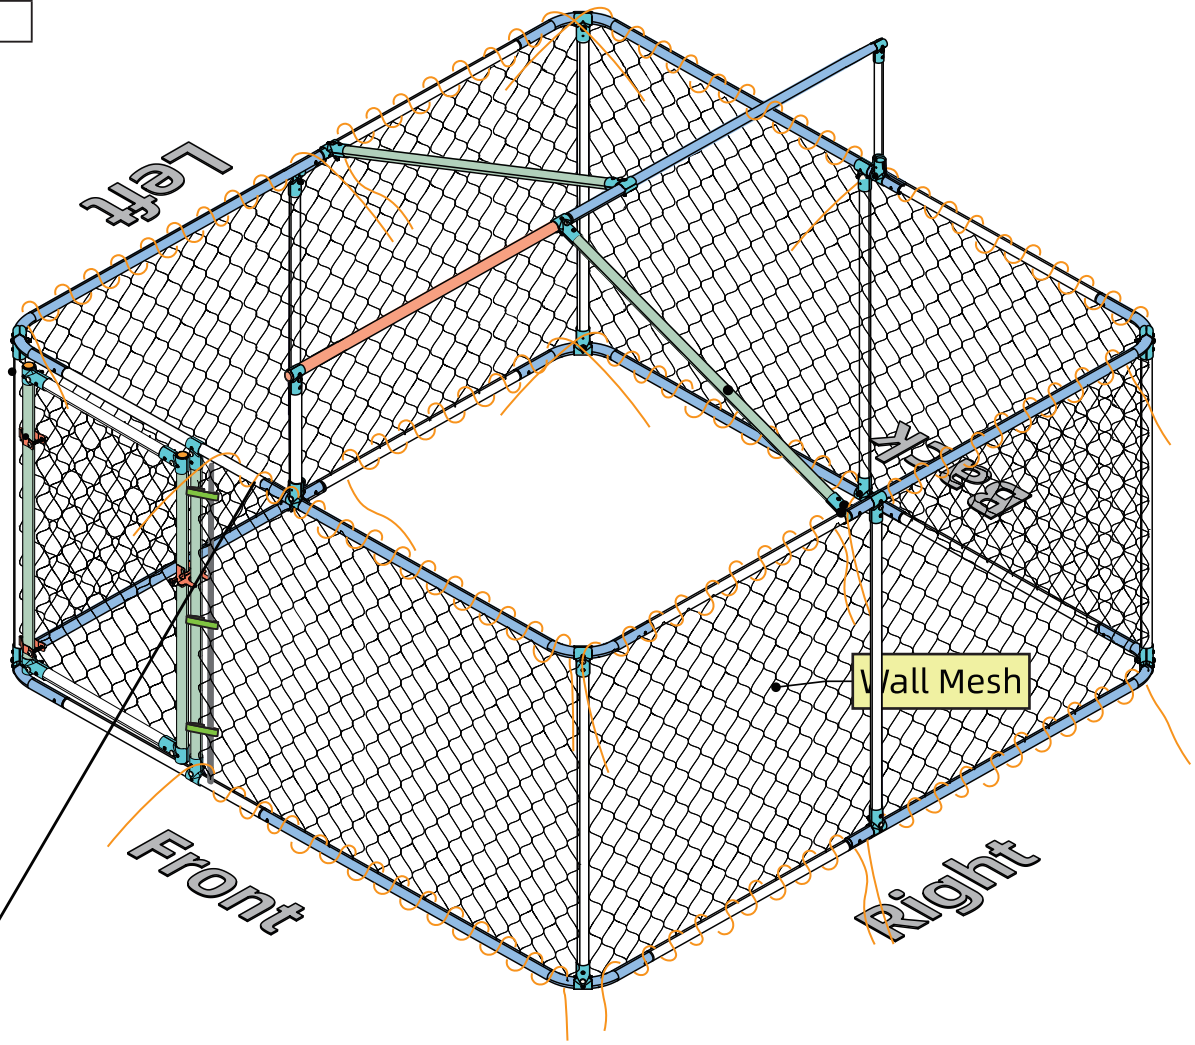

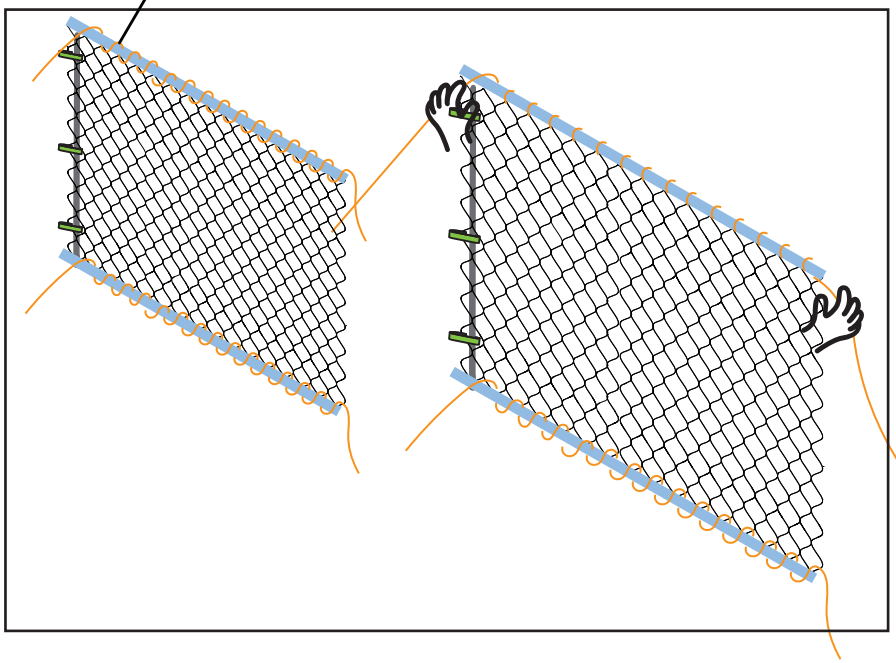


Note


When threading the iron wire,
do not pull it too tight to allow for
subsequent adjustments.


1. Wrap the iron wire to fix the wall net on the AB pipe.
2. Use two iron wires on each side respectively.
3. When all the grids on this side are threaded with iron wire, you need to pull tight the beginning and the end of the iron wire at this time.
4. Fix the beginning and the end of each iron wire. You can wrap it multiple times or tie a knot to tighten and fix the iron wire.

STEP 15

Part	Qty
Tarp	1
O	12

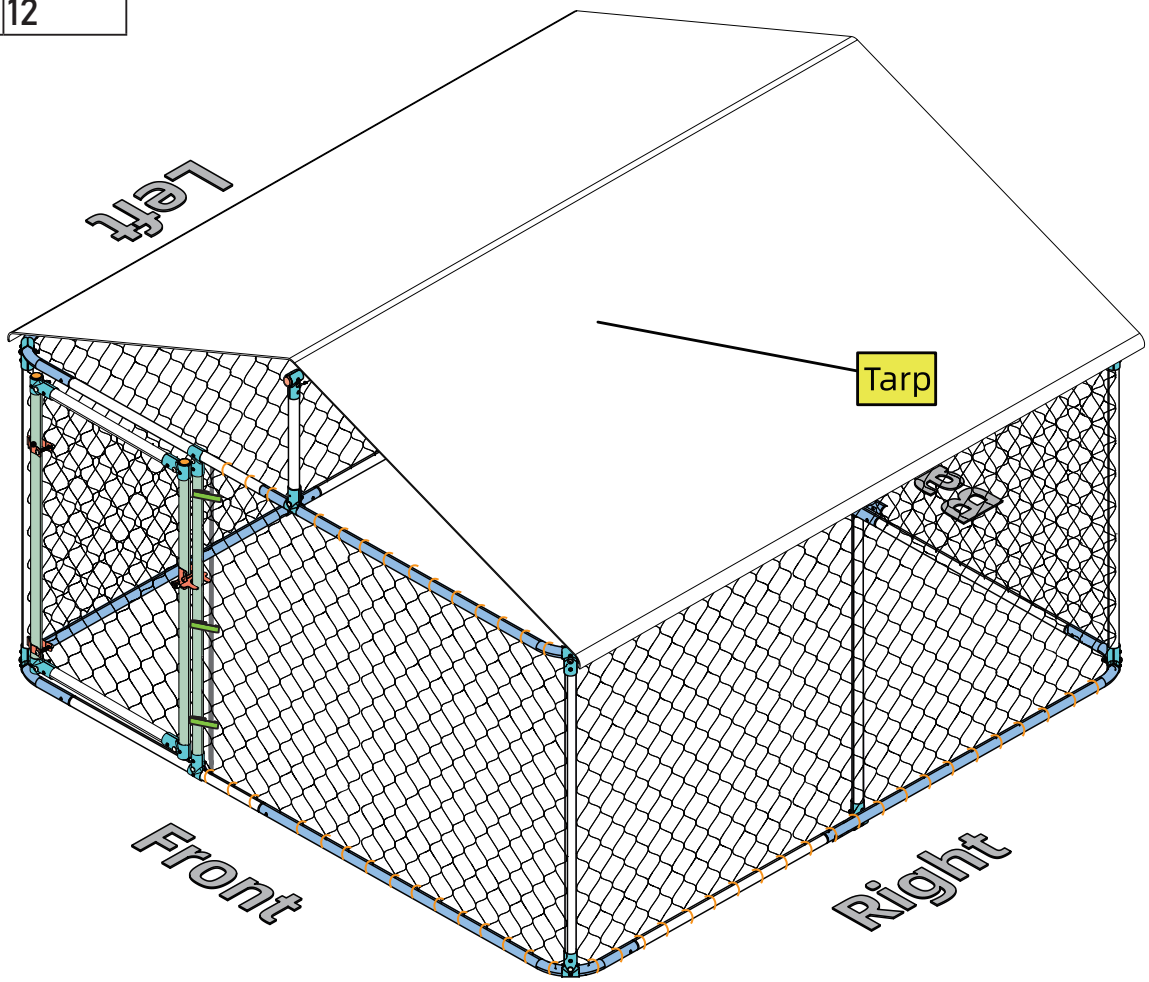


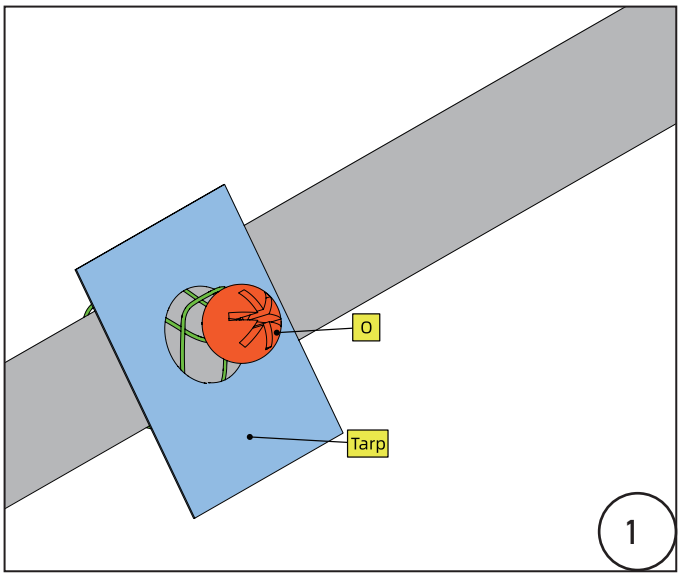

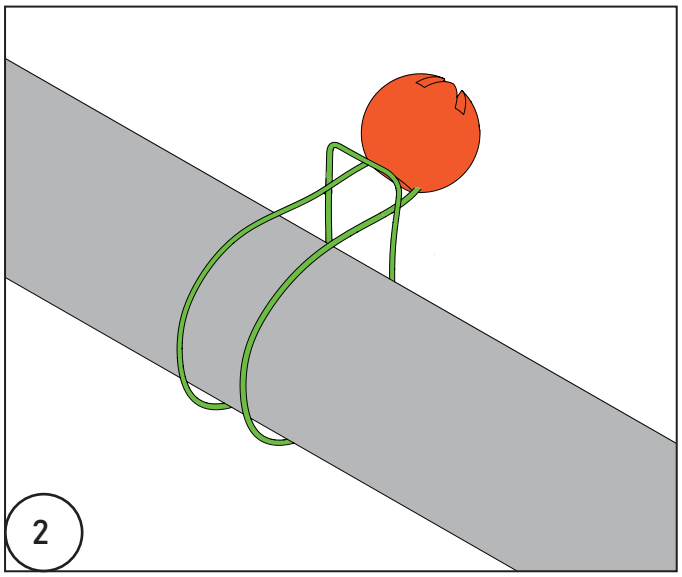

Note

After the rain cloth is placed, according to the straightening state of the rain cloth, choose the appropriate position to fix the band (O) on the iron pipe or iron net.

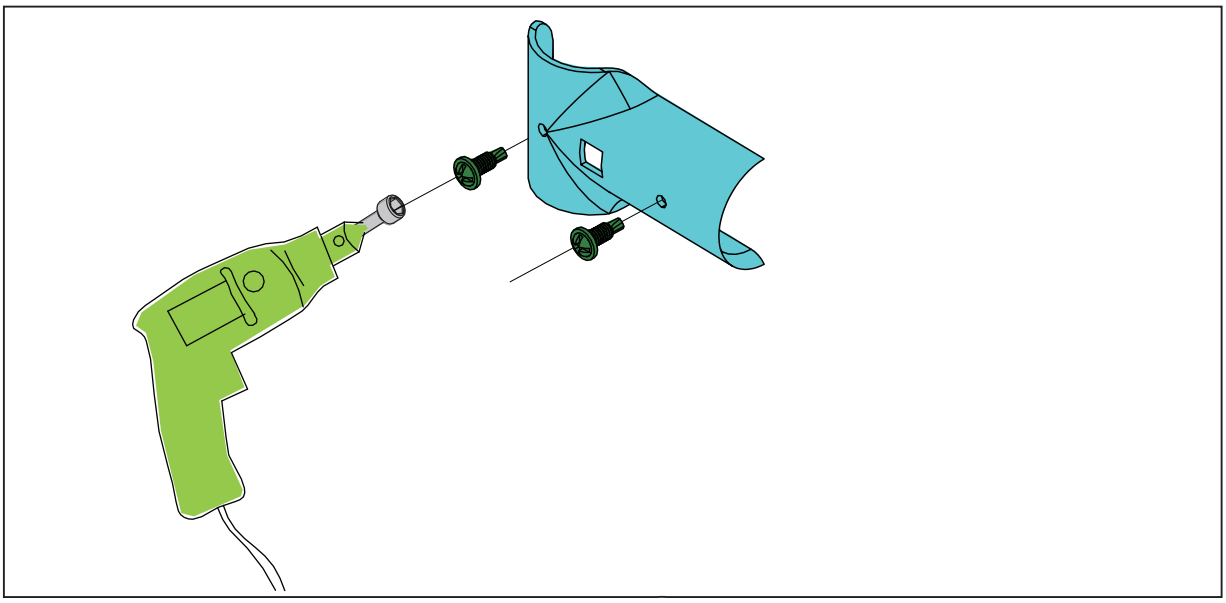

Note

Installing S1 on accessory I can provide a stabilizing and reinforcing effect.
After all the installation steps are completed, you can choose whether to install S1 as needed.

PawGiant

Meticulous Love

MADE IN CHINA