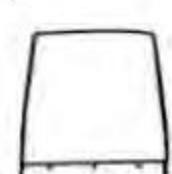
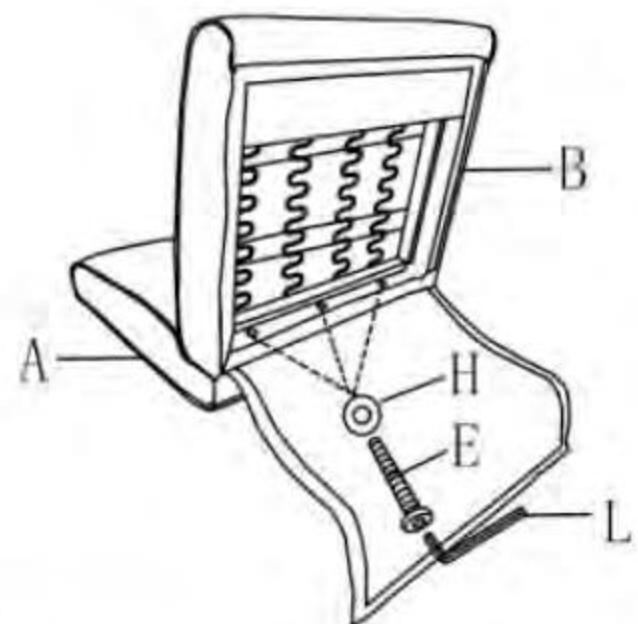
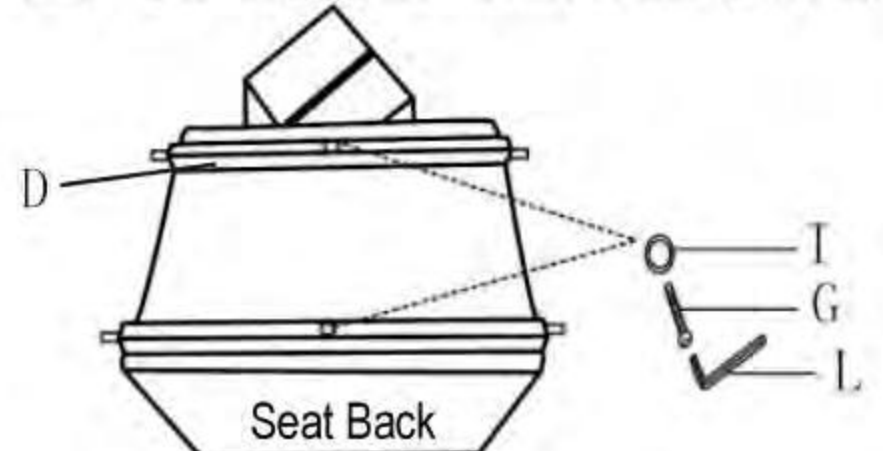
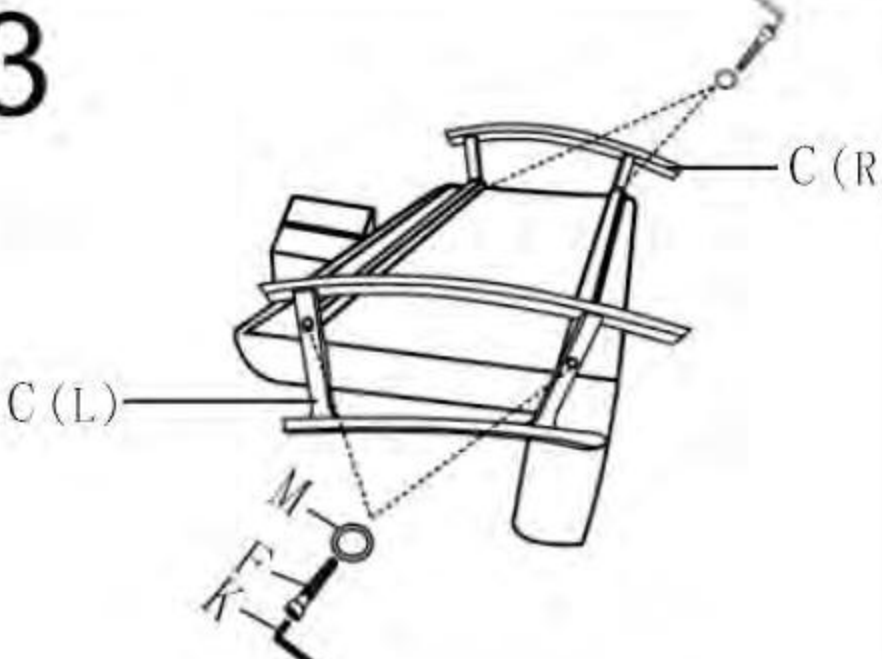
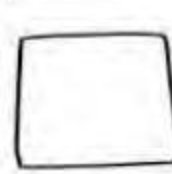
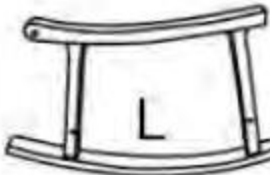
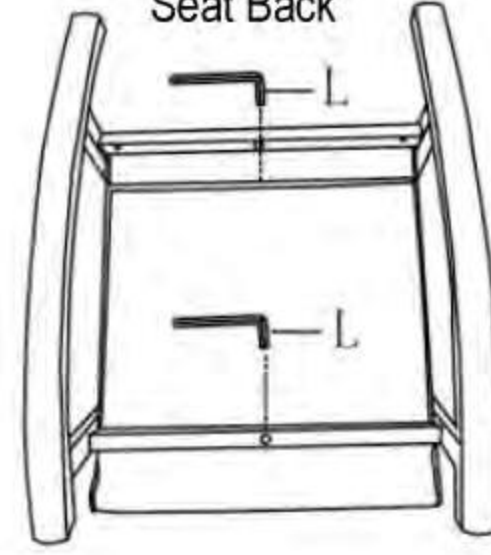
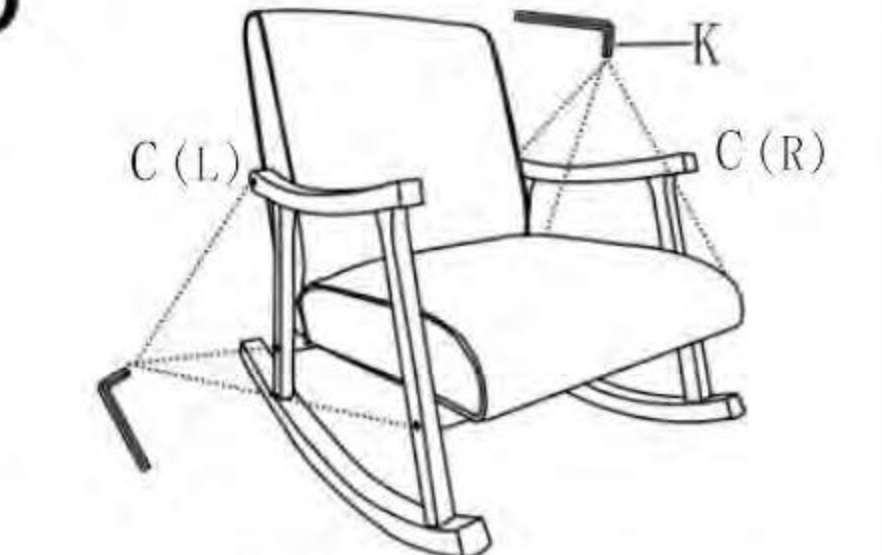
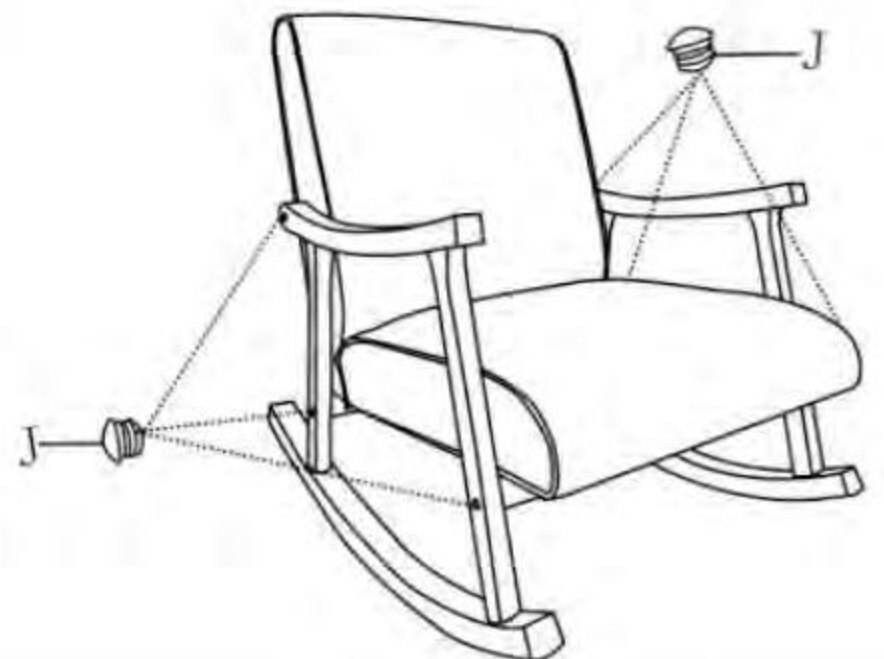


Installation & Assembly

**Reminder: If you notice that the screws are difficult to insert, it may be due to some screws being too tight.
Please try loosening or tightening the screws as needed to achieve the proper fit.**

A*1 	I*2  φ6*φ13mm	1  Fully tighten the screws to 100%.	2 Insert the screws into the holes, but only tighten them halfway (50%).  Turn the item upside down and place it on a flat surface for assembling the bottom part.	3  Tighten the screws to 50% only.	
B*1 	J*6 				
C*1  L	K*1  M8				
D*2  R	L*1  M6	4  Tighten the screws to 50% only.	5  Fully tighten the screws (100%) after all screws have been inserted.	6  Fully tighten the screws (100%) after all screws have been inserted.	
E*2 	M*6  φ8*φ13mm				
F*3  M8*60MM					
G*6  M8*65MM		7 	8 		
H*2  M6*65MM					
I*3  φ8*φ22mm					