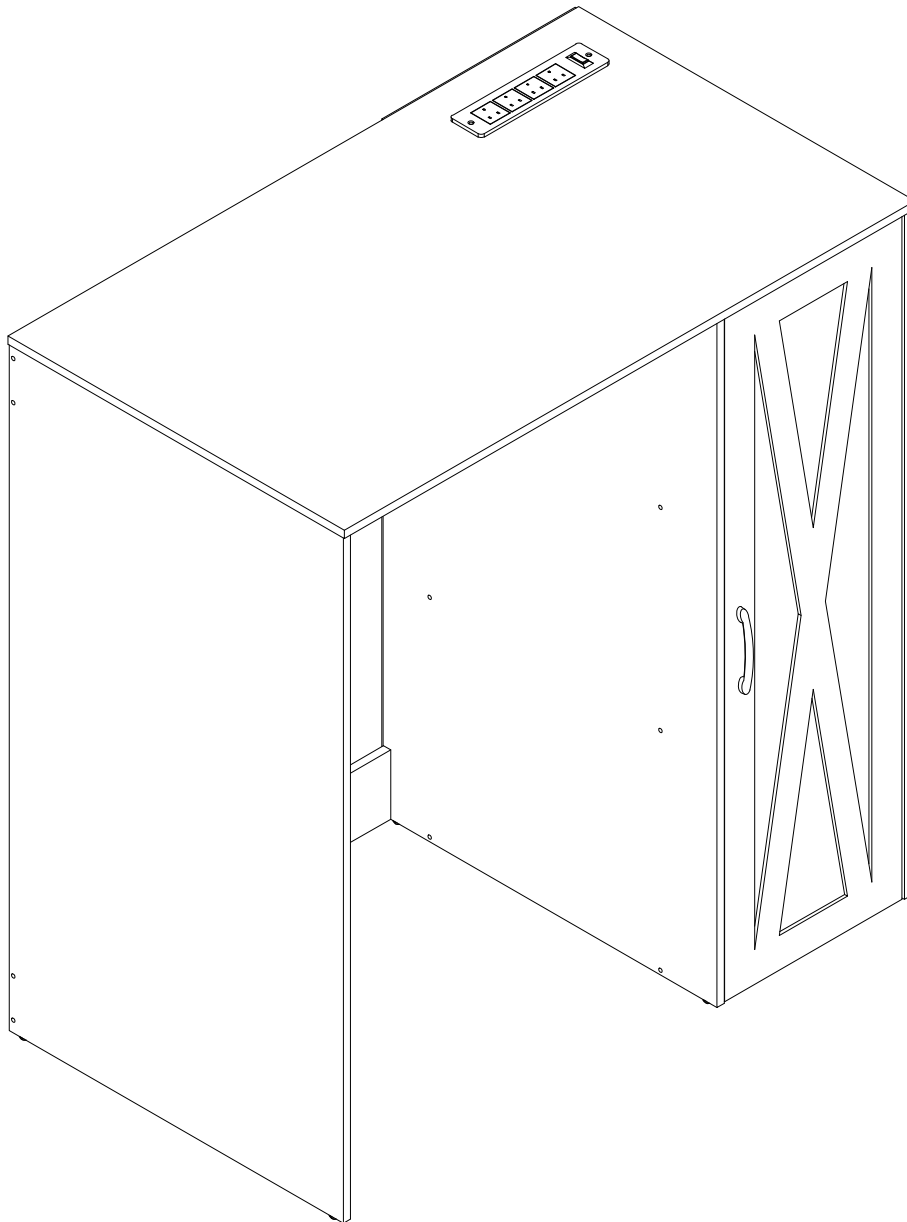
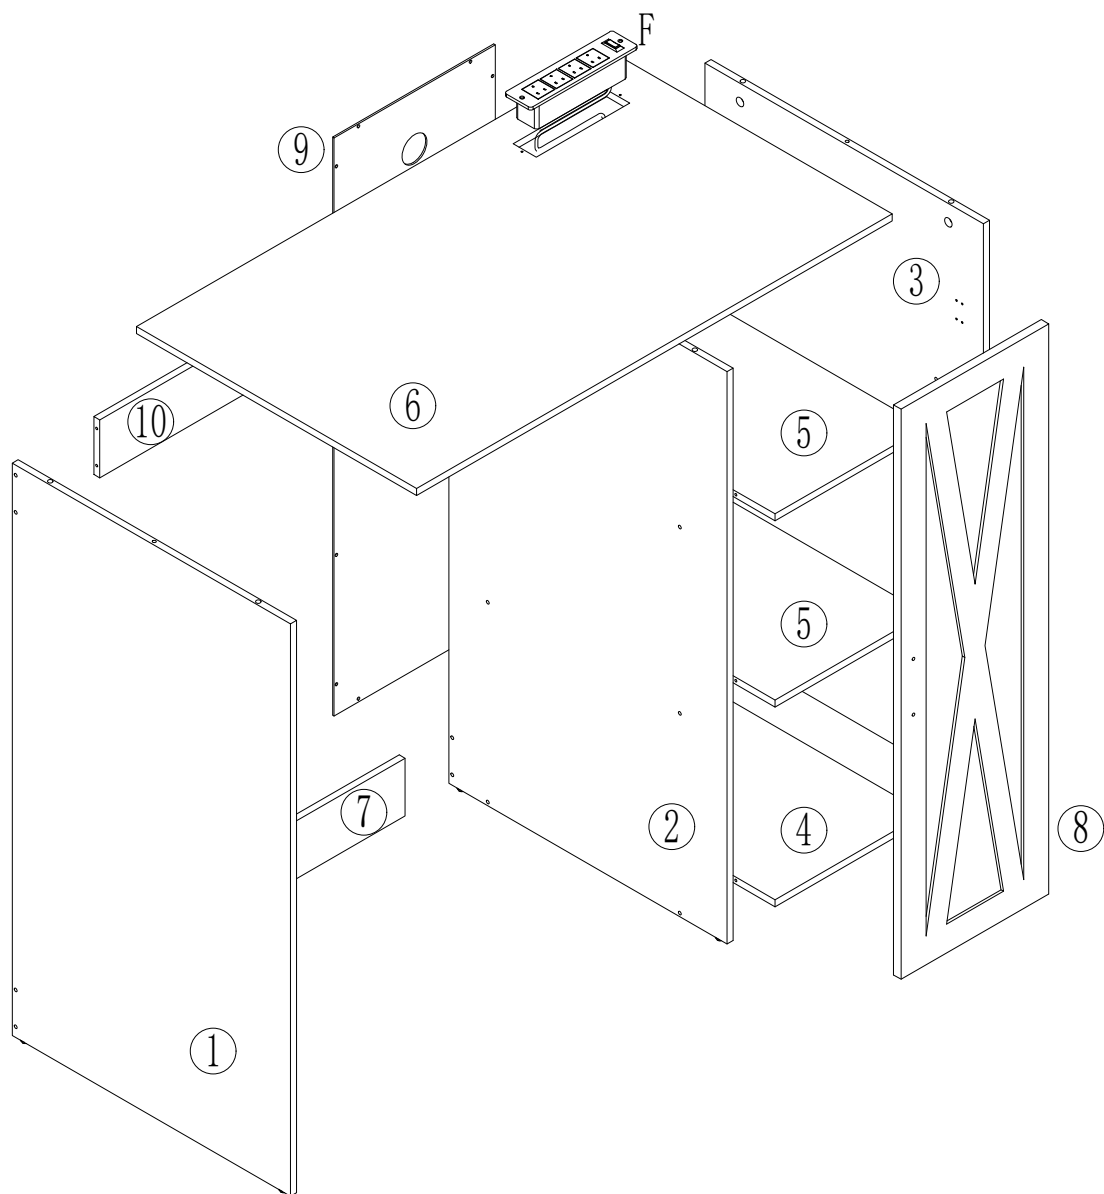
























KH01 ASSEMBLY INSTRUCTION



ASSEMBLY INSTRUCTION



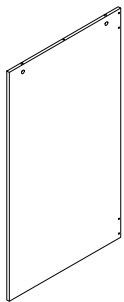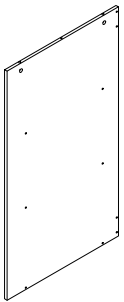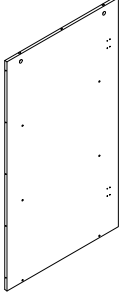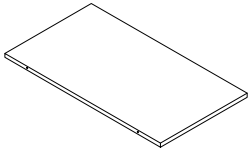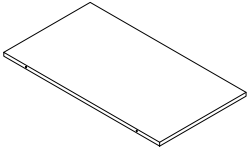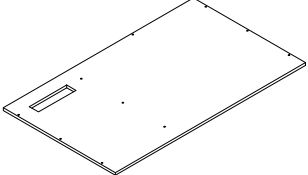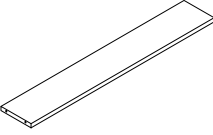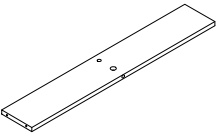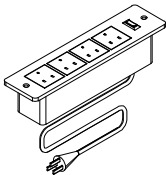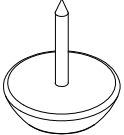


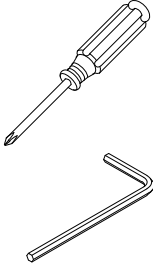
ASSEMBLY INSTRUCTION

1  1PCS	2  1PCS	3  1PCS	4  1PCS
5  2PCS	6  1PCS	7  1PCS	8  1PCS
9  1PCS	10  1PCS	A  M6*40 7PCS	B  Ø15*9.3mm 7PCS
C  Ø6*30mm 3PCS	D  M5*38 20PCS	E  M3*12 28PCS	F  1PCS
G G1  G2  M4*18 1PCS	H  2PCS	I  6PCS	J     M6*10 1PCS
 3MM			

ASSEMBLY INSTRUCTION


STEP1

1		1PCS
2		1PCS
3		1PCS
I		6PCS

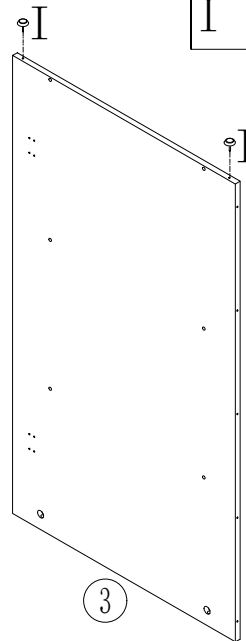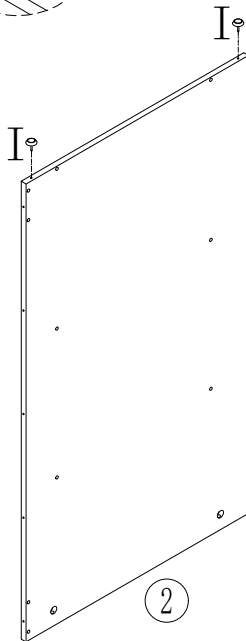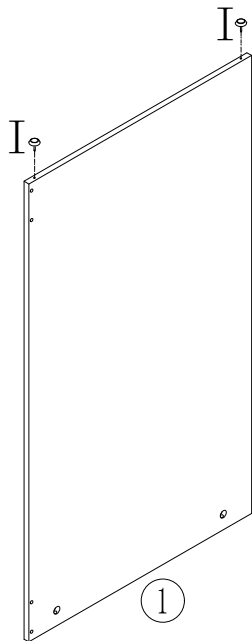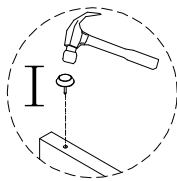


STEP2

7		1PCS
10		1PCS
D		8PCS

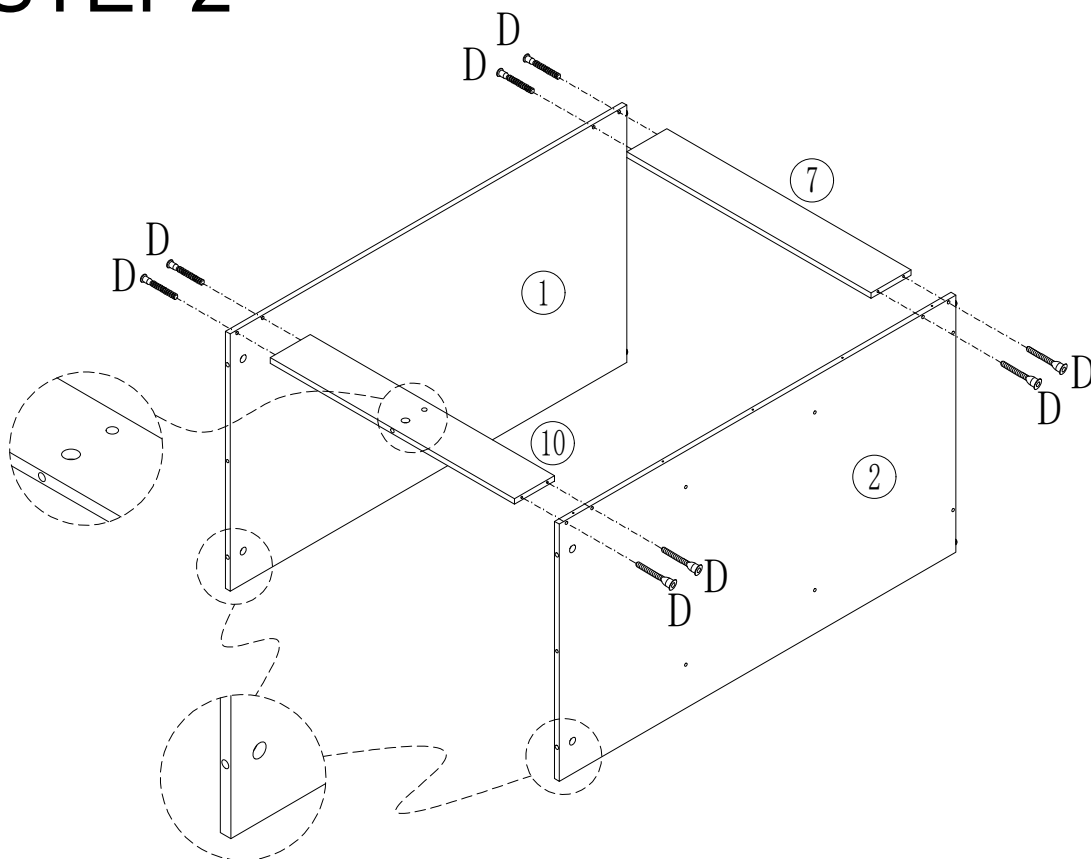


ASSEMBLY INSTRUCTION

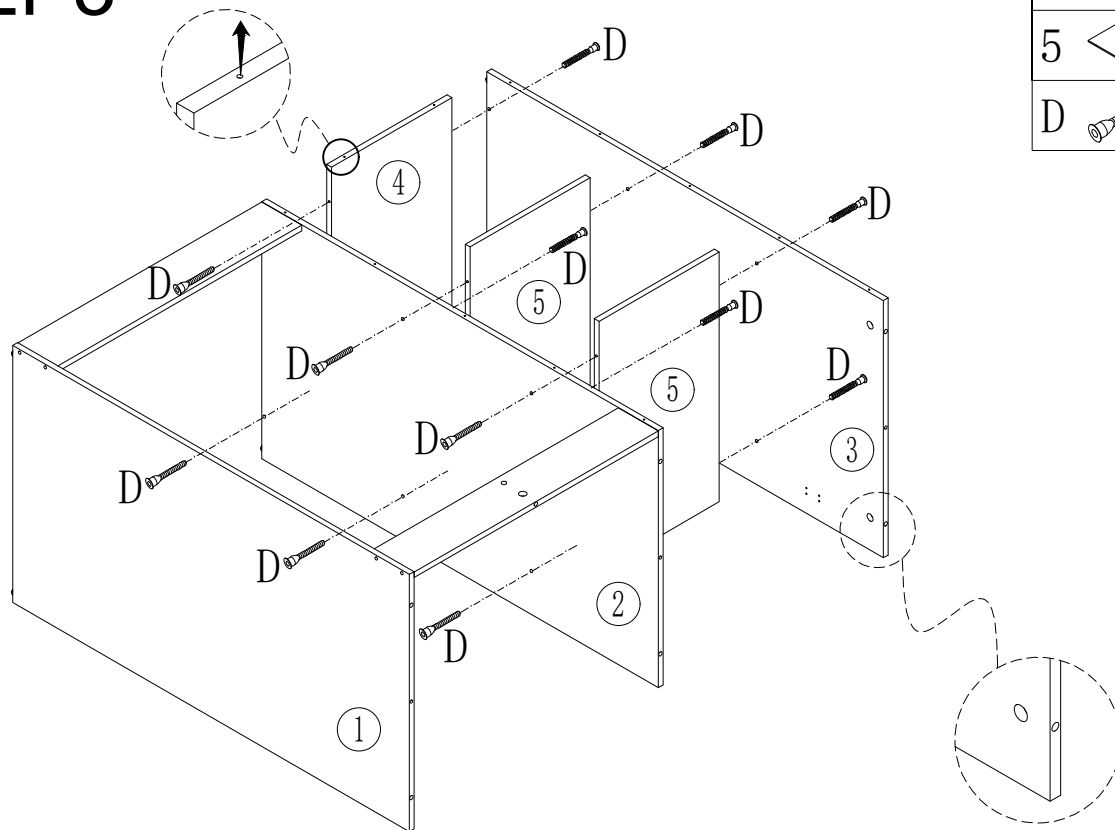STEP3



4		1PCS
5		2PCS
D		12PCS

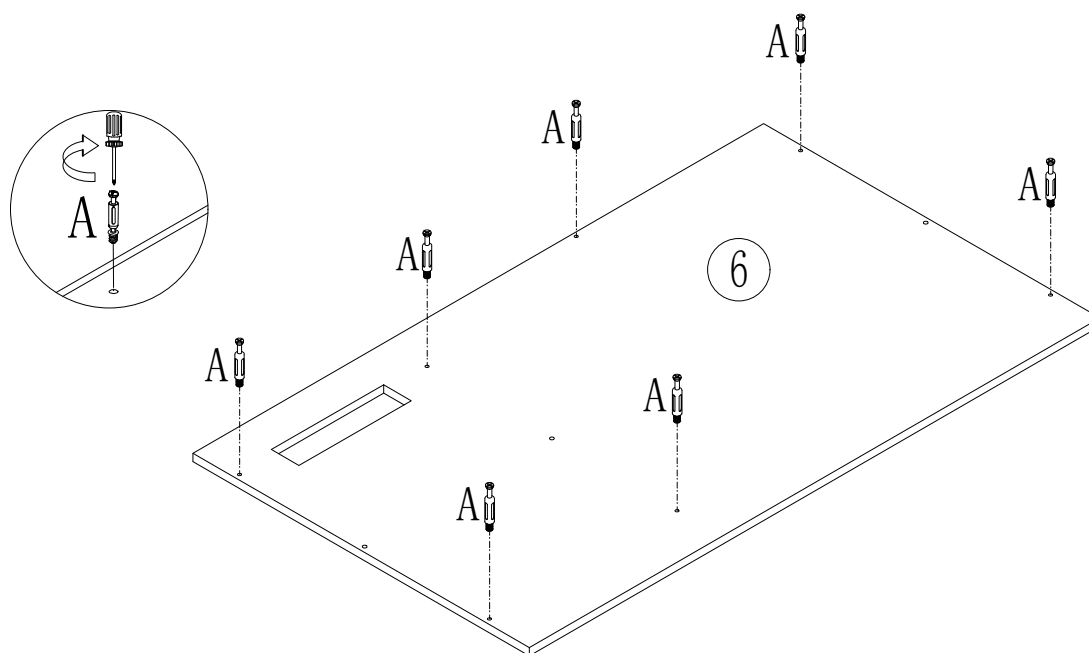
STEP4






6		1PCS
A		7PCS

ASSEMBLY INSTRUCTION

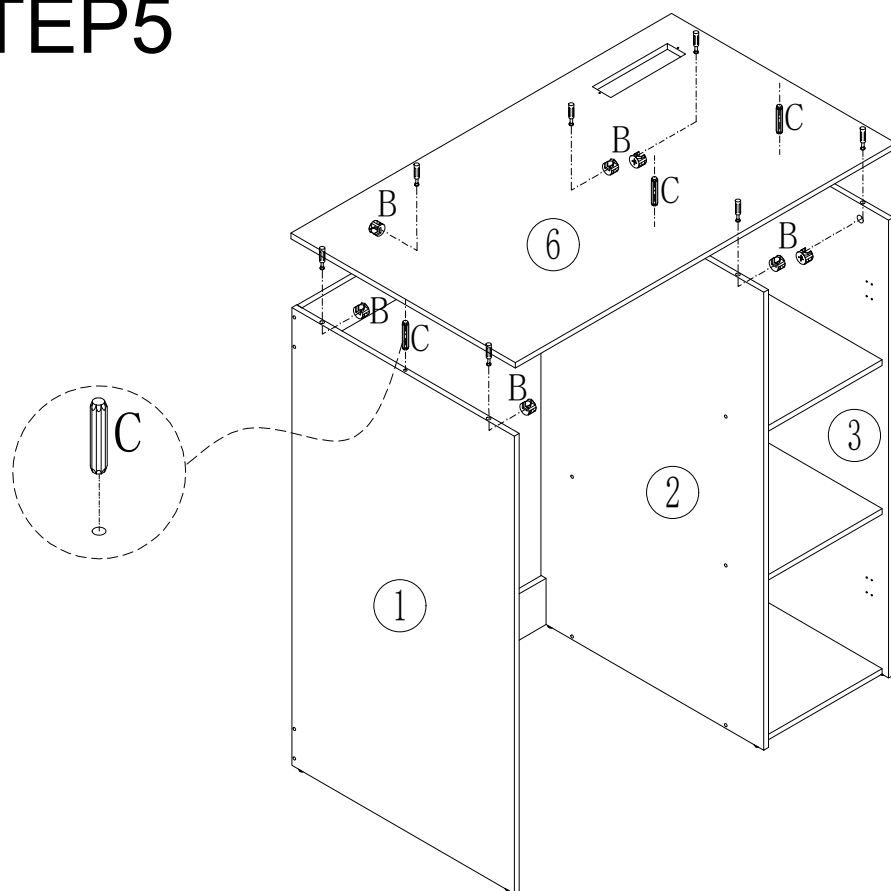
STEP5



B		7PCS
C		3PCS

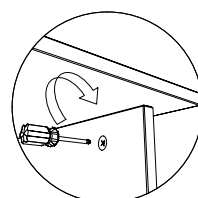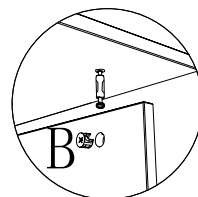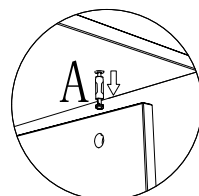

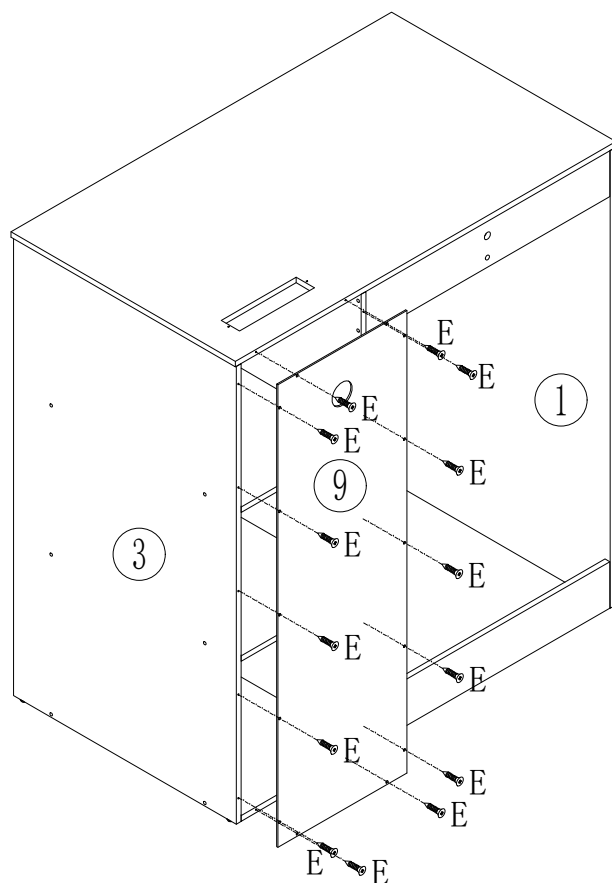
STEP6




9		1PCS
E		14PCS


ASSEMBLY INSTRUCTION

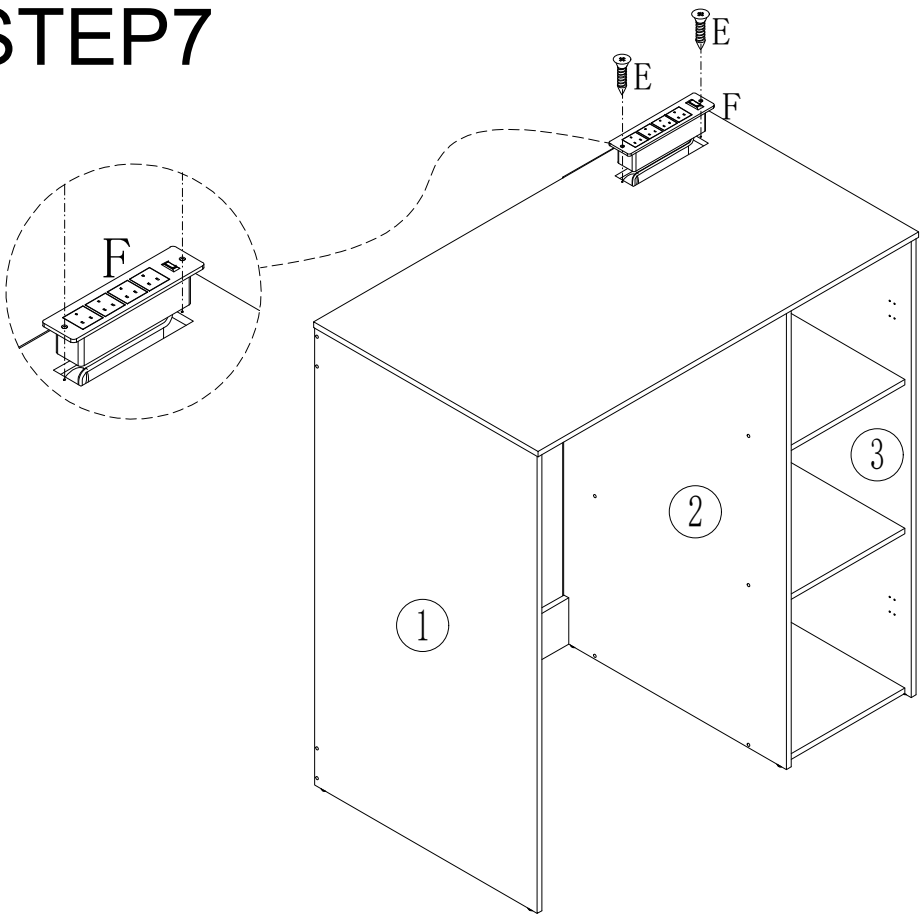STEP7



E		2PCS
F		1PCS

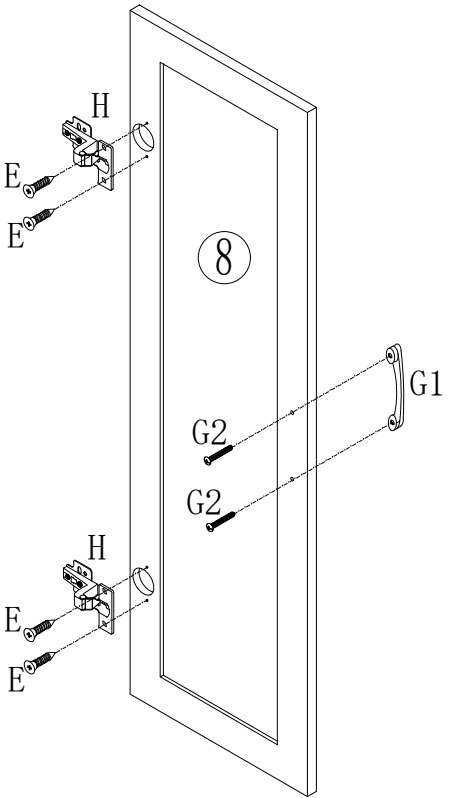STEP8





8		1PCS
E		4PCS
G		1PCS
H		2PCS

ASSEMBLY INSTRUCTION

STEP9

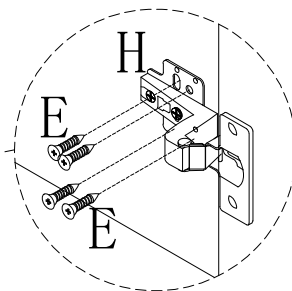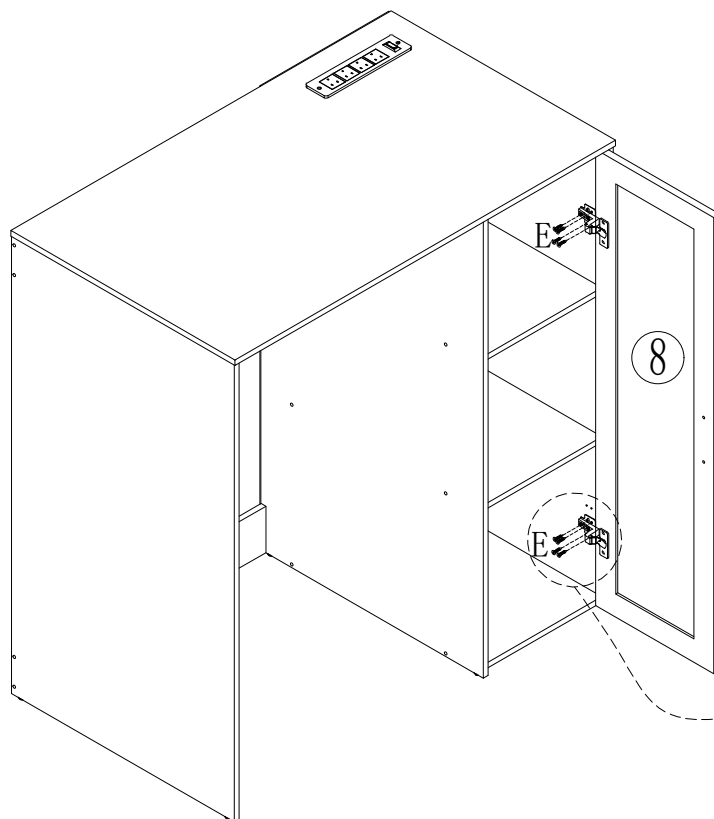E  8PCS



STEP10

J   
M6*10 1PCS

