
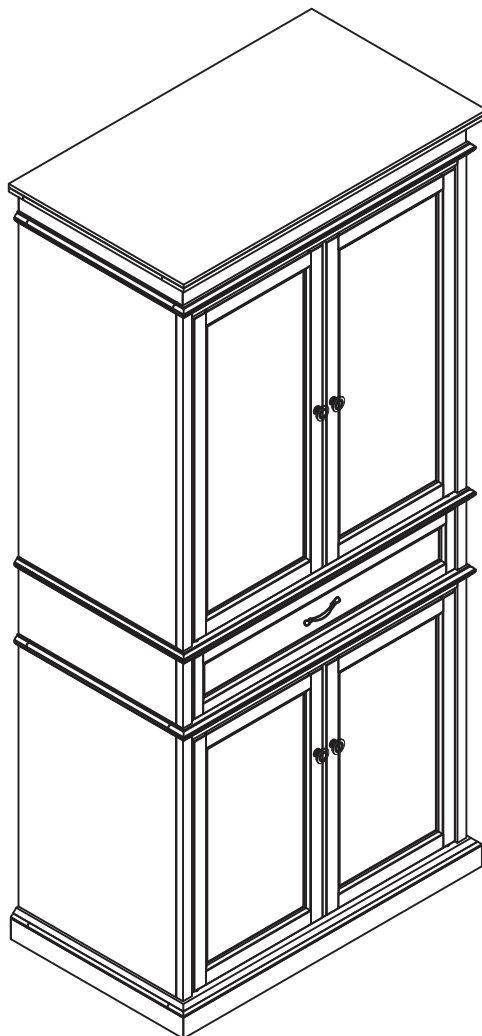
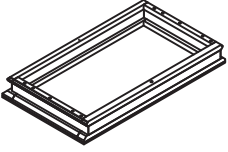
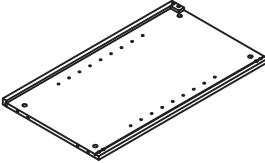
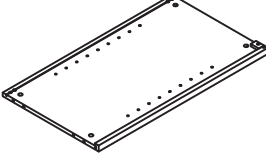
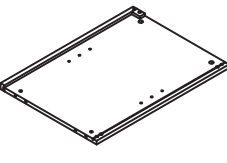
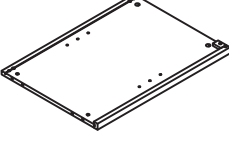
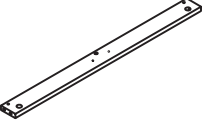
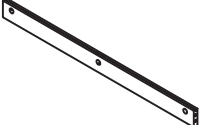
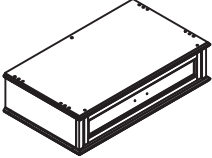
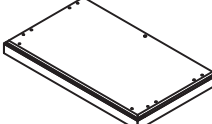


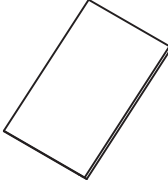














Pantry

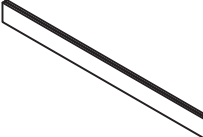

PART LIST

A 	B 	C 	D 	E 
Top Panel 1 PC	Upper Left Side Panel 1 PC	Upper Right Side Panel 1 PC	Lower Left Side Panel 1PC	Lower Right Side Panel 1 PC
F 	G 	H 	I 	J 
Front Rail 2 PCS	Upper & Lower Back Rail 4 PCS	Middle Lower Rail 1PC	Middle Shelf Frame & Drawer 1 PC	Bottom Frame 1 PC
K 	L 	M 	N 	O 
Upper Left Door 1 PC	Upper Right Door 1 PC	Lower Left Door 1 PC	Lower Right Door 1 PC	Upper Back Panel 2 PCS
P 	Q 	R 		
Lower Back Panel 2 PCS	Adjustable Shelf 3 PCS	Middle Upper Rail 1PC		

HARDWARE LIST

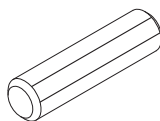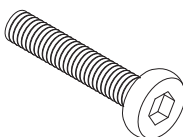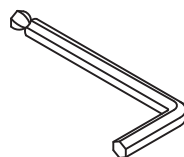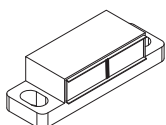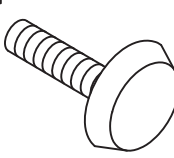1	 ø8*30 Wood Dowel 36 PCS	2	 Cam Bolt 28 PCS	3	 Cam Lock 28 PCS	4	 Barrel Nut 4 PCS	5	 2"*ø1/4"*D11 Allen Bolt 4 PCS
6	 Allen Key 1 PC	7	 Shelf Holder 12 PCS	8	 Magnet 2 PCS	9	 14mm*ø3*D6 Round Head Screw 4 PCS	10	 1"*ø4*D8 Flat Head Screw 2 PCS
11	 Knob 4 PCS	12	 Handle 1 PC	13	 3/8"*ø5/32"*D9 Short Round Head Bolt 2 PCS	14	 7/8"*ø5/32"*D9 Long Round Head Bolt 4 PCS	15	 Adjustable Foot 4 PCS
16	 Safety Strap Kit 1 PC	17	 Rear Panel Bracket 8 PCS	18	 12mm*ø3*D6 Round Head Screw 8 PCS	 Replacement Door Pivot 4 PCS			


ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly. However a screw gun can assist with mounting.




Phillips Head Screw Driver


Step 1.Insert Cam Bolts (Part#2) into Parts (B, C, D, E, I, J & A).

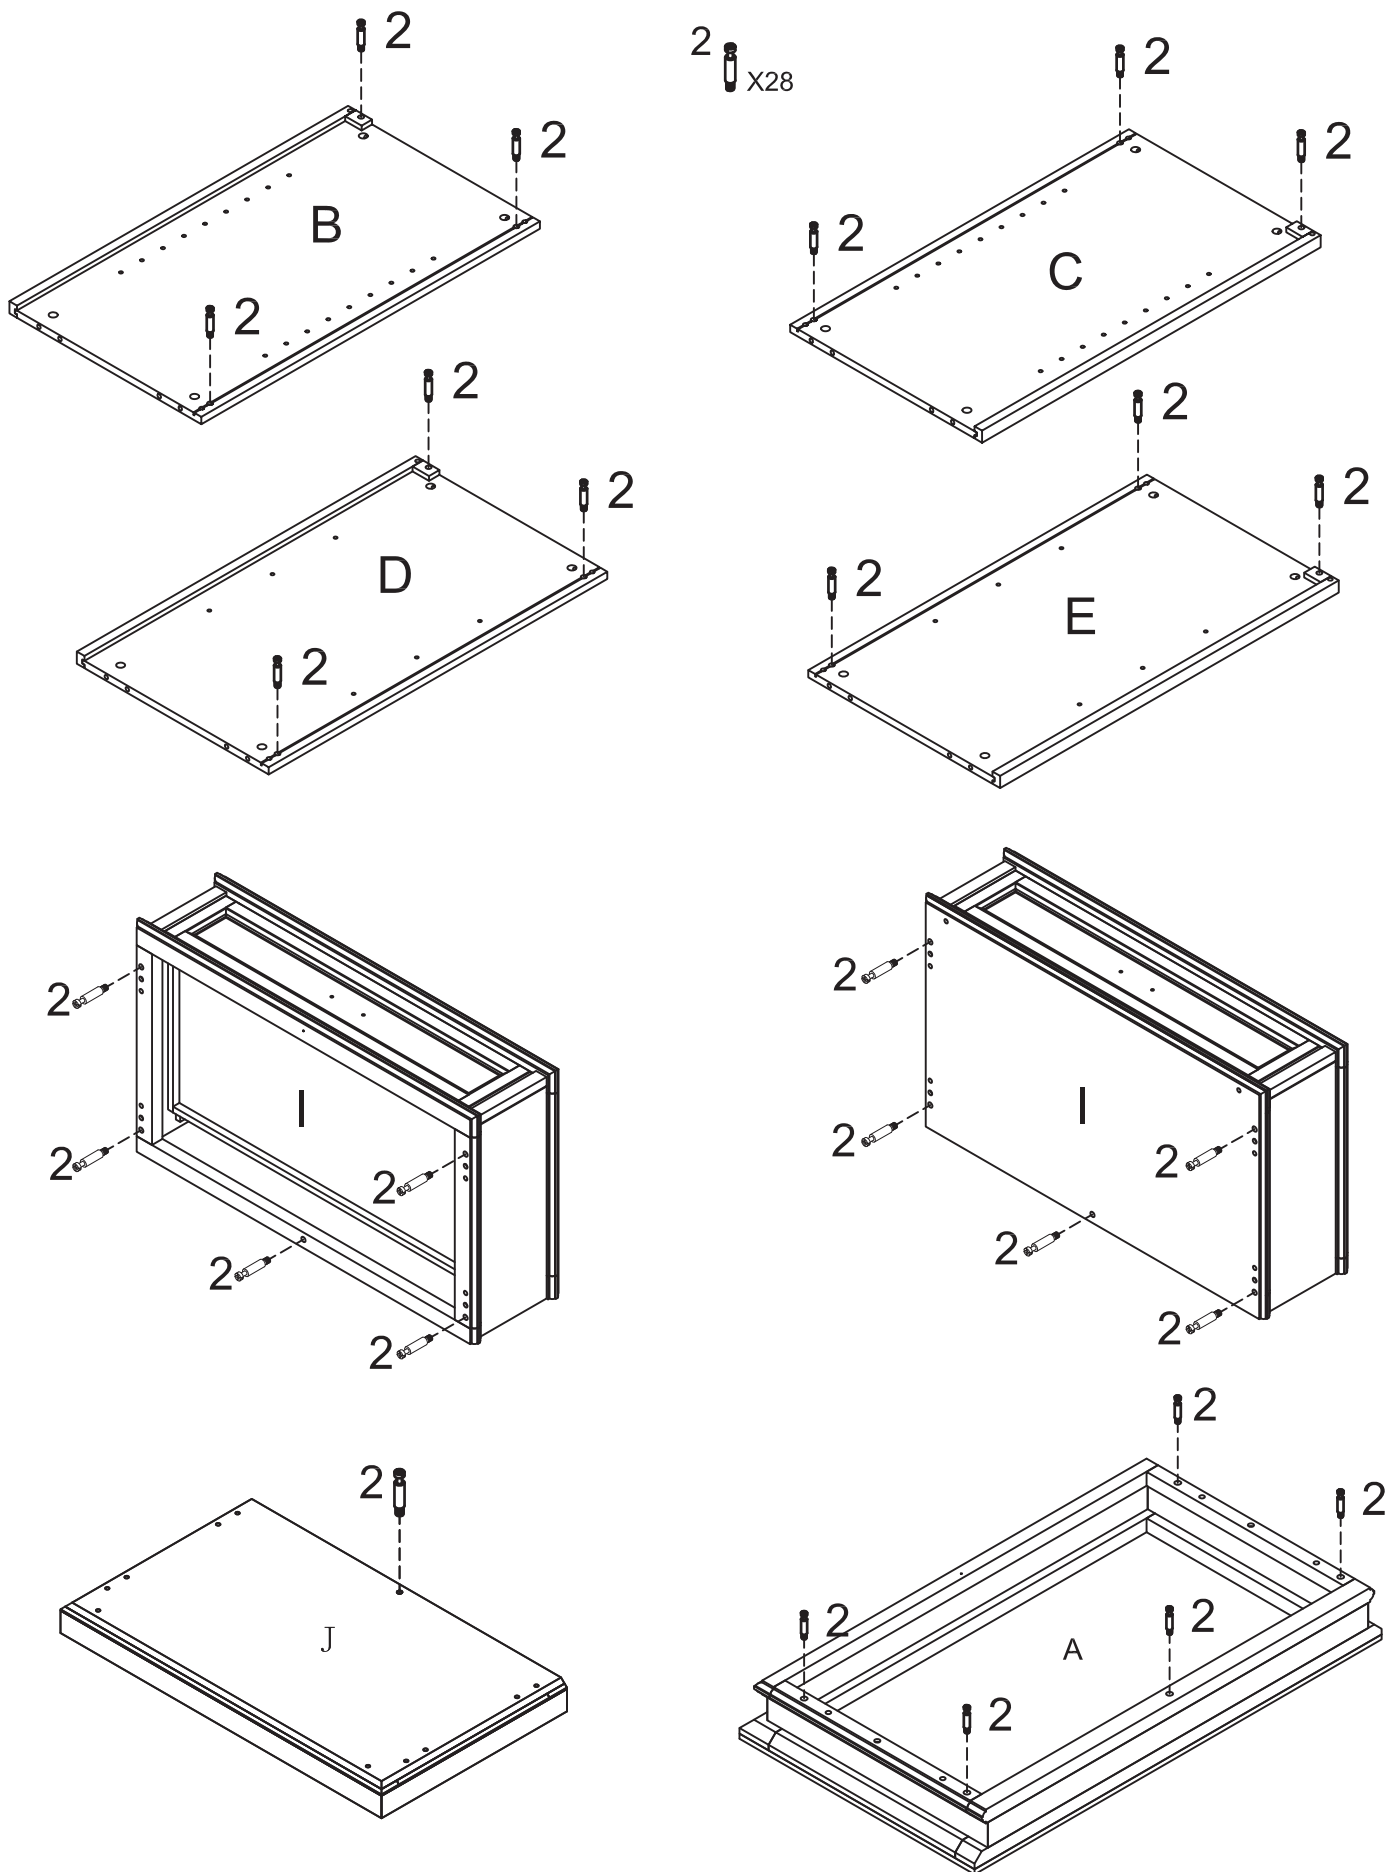

Step 2. With Back Rail (G) on a flat surface, attach Middle Upper Rail (R) to Rail (G) with Wood Dowels (Part#1).
 Insert Upper Back Panels (O) into the grooves of Rails (G&R). Attach Upper Back Rail (G) to Rail (R) using Wood Dowels (Part#1).
 Note: Be sure that Back Panels (O) are completely inserted into groove of Rail (G).

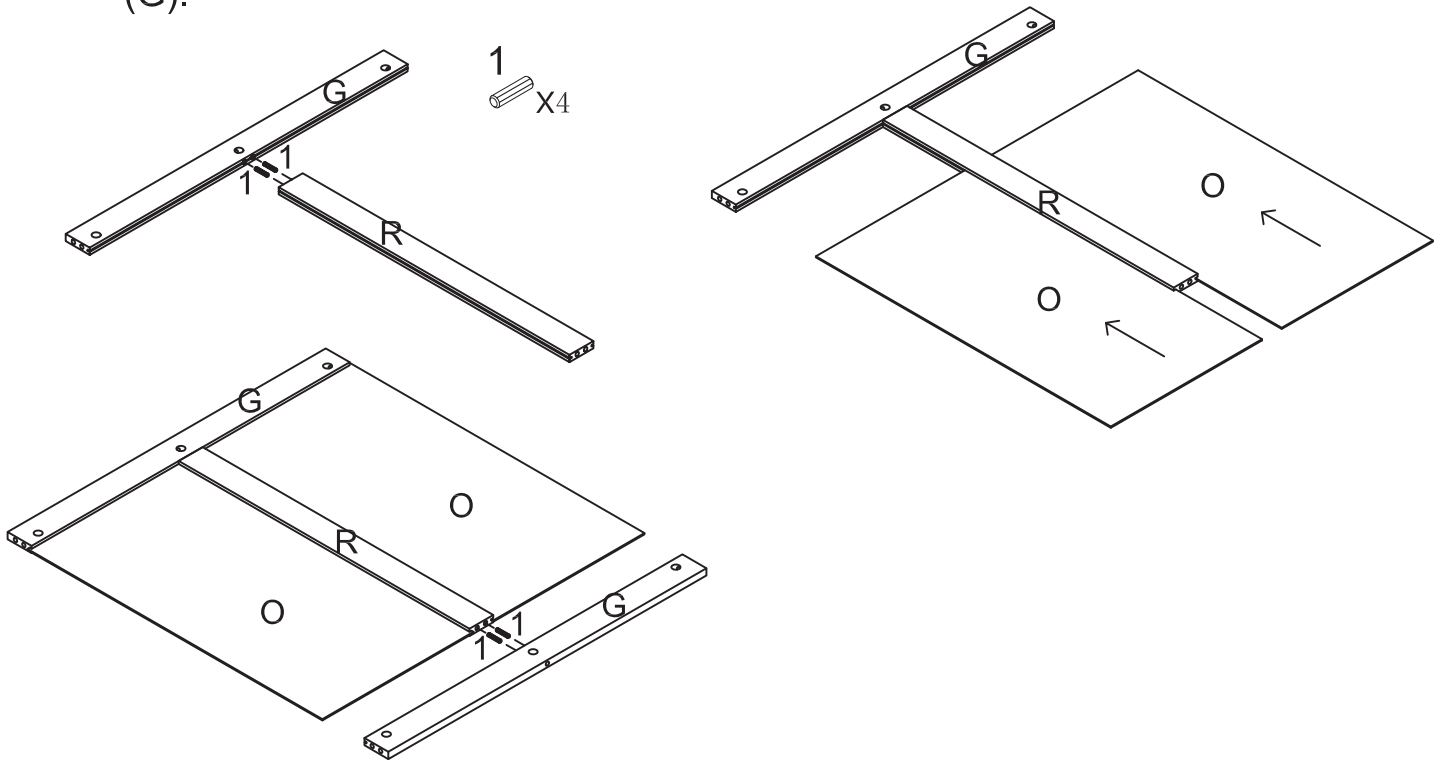


Step 3. Attach Upper Left Side Panel (B) and Upper Right Side Panel (C) to Rails (G&F) using Wood Dowels (Part#1) and Cam Lock (Part#3).

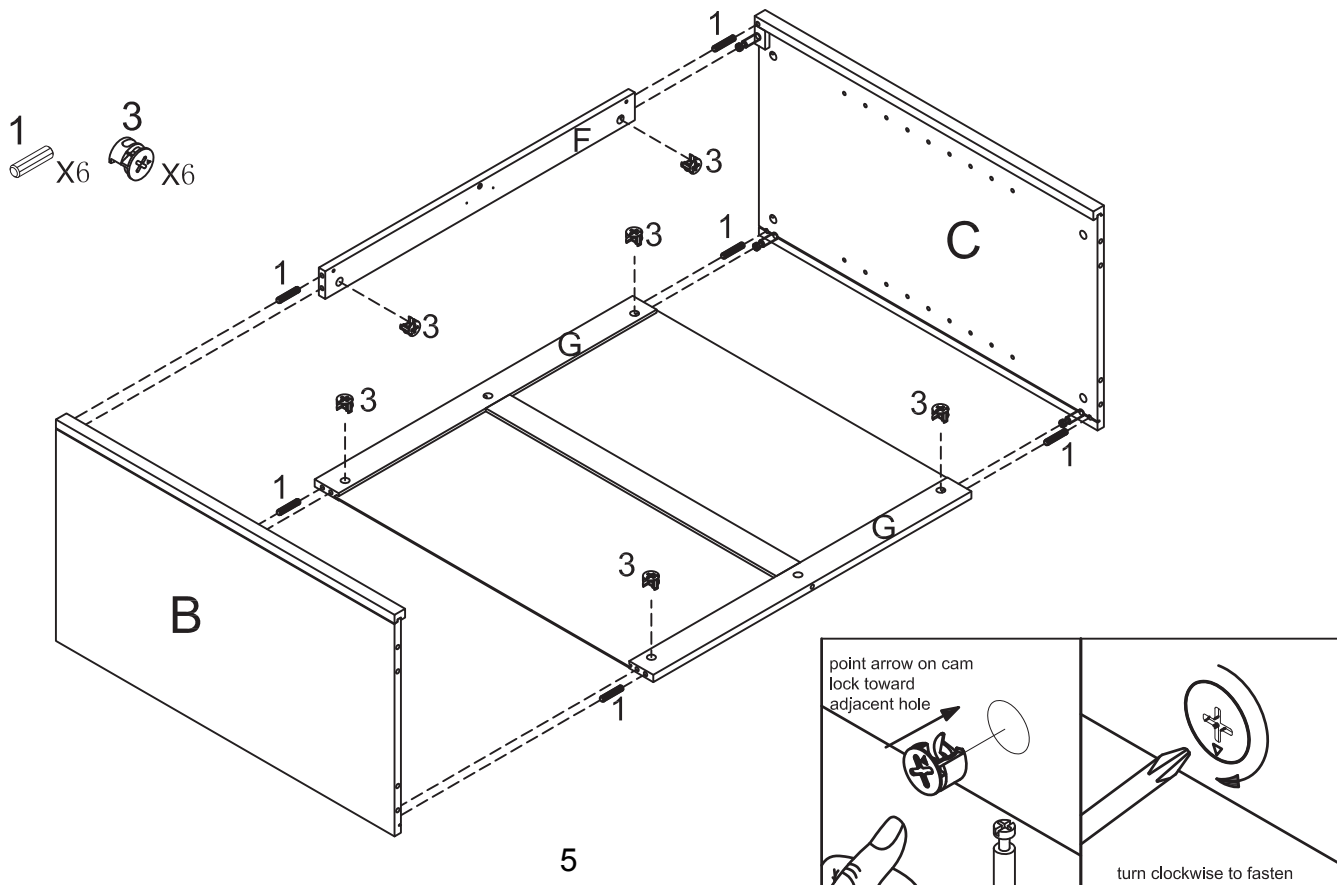


Step 4. With Back Rail (G) on a flat surface, attach Middle Lower Rail (H) to Rail (G) with Wood Dowels (Part#1).

Insert Lower Back Panels (P) into the grooves of Rails (G&H). Attach Back Rail (G) to Rail (H) using Wood Dowels (Part#1).

Note: Be sure that Back Panels (P) are completely inserted into groove of Rail (G).

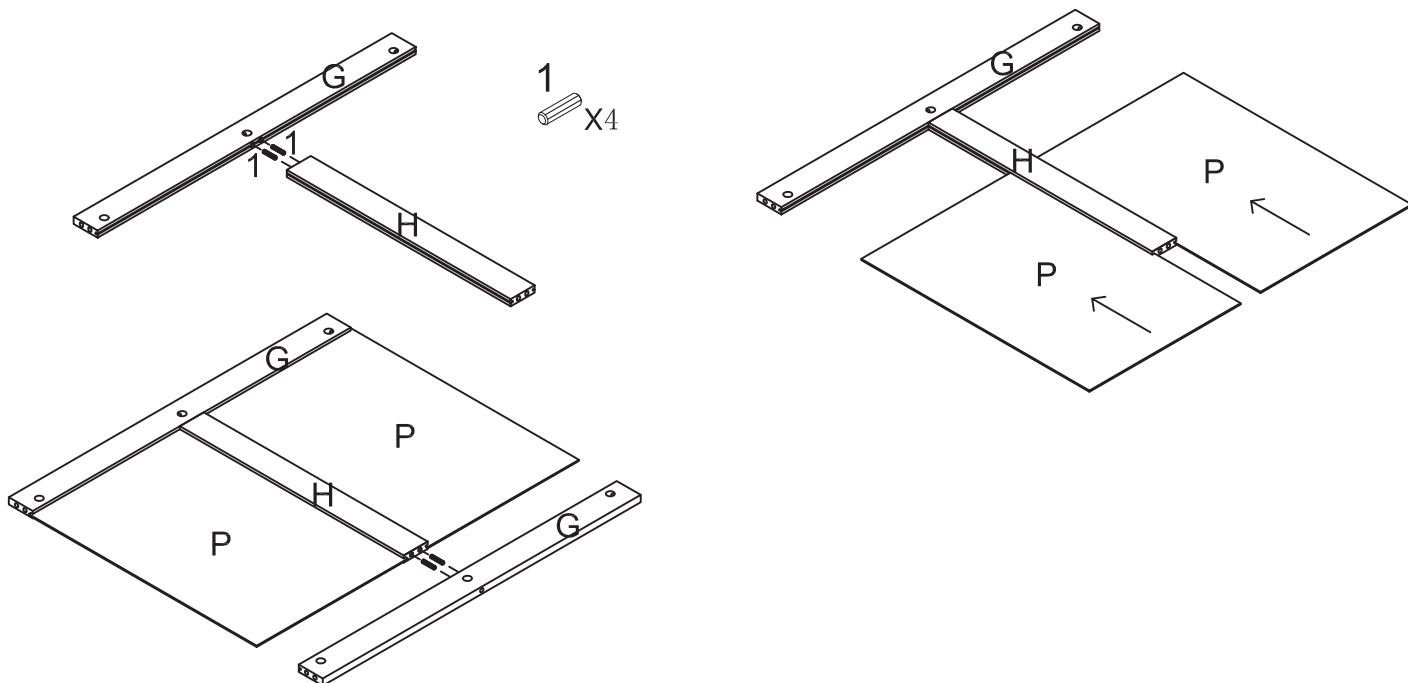


Step 5. Attach Lower Left Side Panel (D) and Lower Right Side Panel (E) to Rails (G&F) using Wood Dowels (Part#1) and Cam Lock (Part#3).

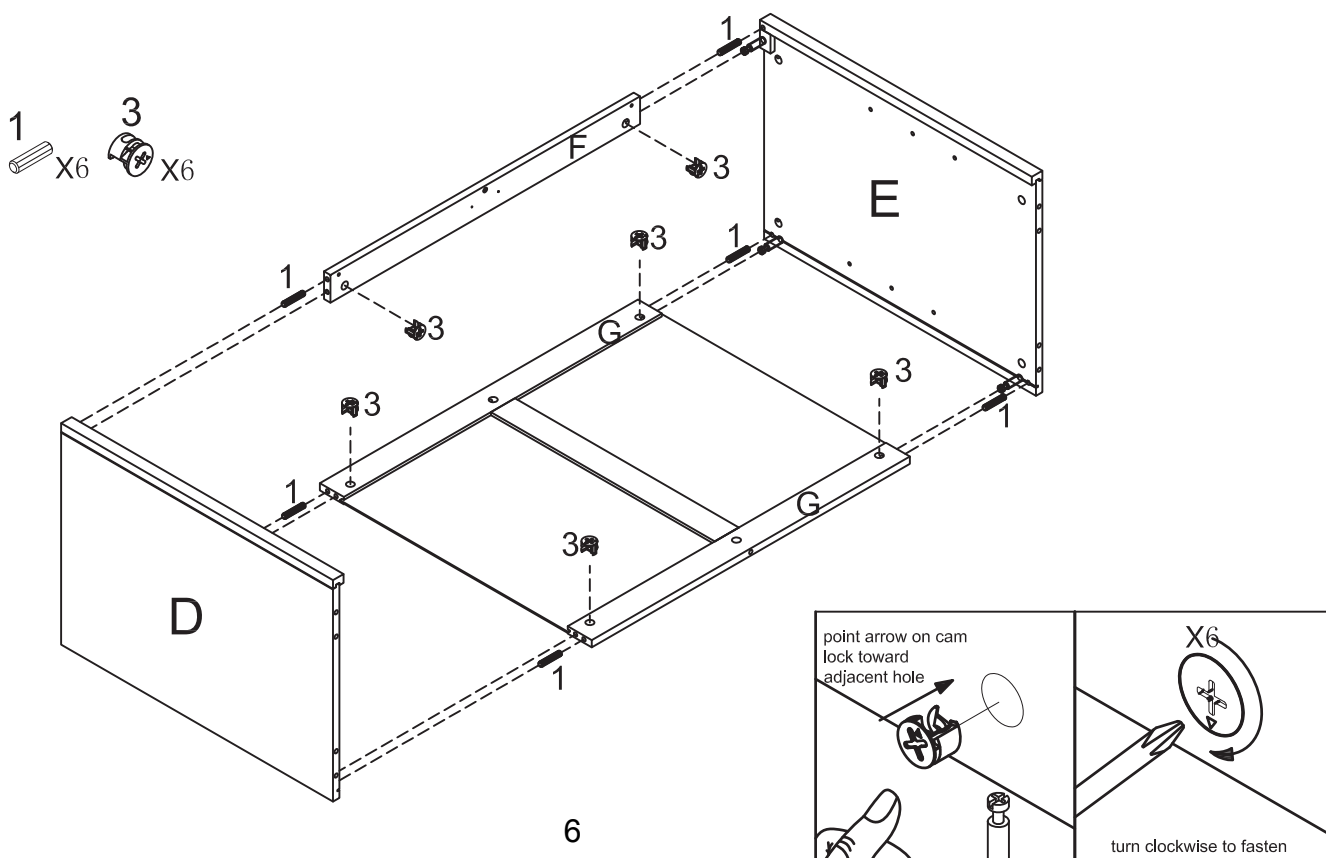


Step 6. Attach Handle (Part#12) to drawer front panel using Short Round Head Bolts (Part#13).



Attach Knobs (Part#11) to Doors (K, L, M & N) using Long Round Head Bolts (Part#14).

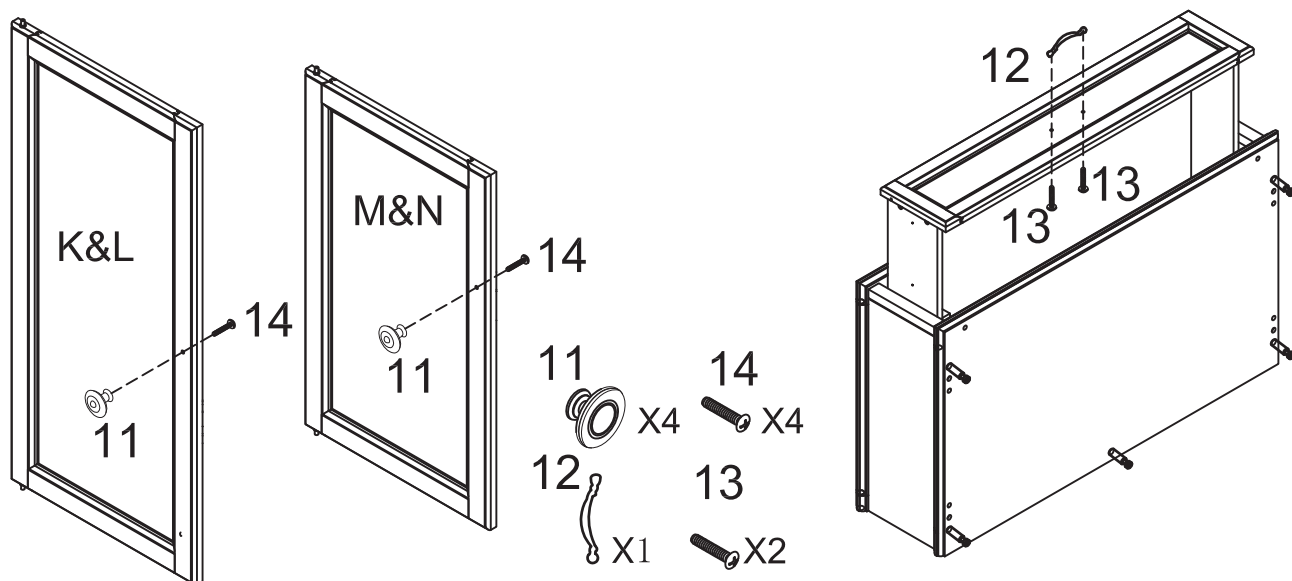


Step 7. Attach Middle Shelf Frame (I) to assembled upper cabinet and lower cabinet using Cam Lock (Part#3)

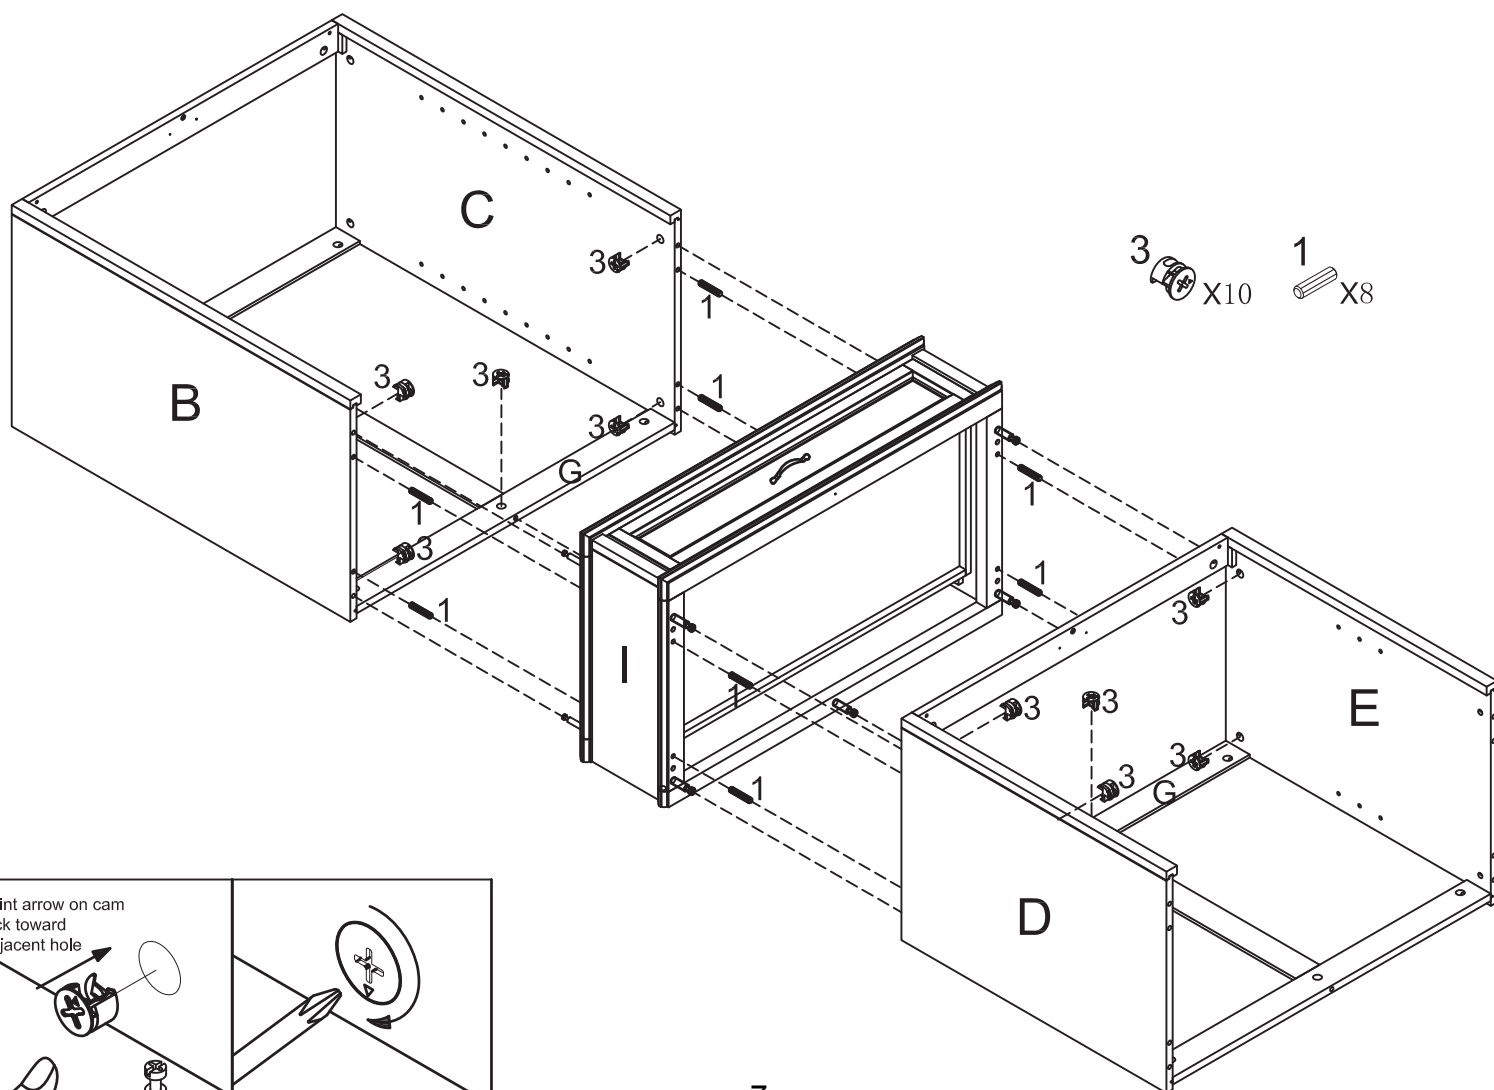


Step 8. Attach Top Frame (A) to assembled middle cabinet using Wood Dowel (Part#1) and Cam Lock (Part#3).
 Attach Bottom Frame (J) using Wood Dowels (Part#1), Bolts (Part#5) and Barrel Nuts (Part #4).Screw adjustable Feet (Part#15) into Bottom Frame (J).Note:Please use feet to level the pantry when complete and standing up right. Fix Front Rail (F) to Middle Shelf Frame (I) using Screw (Part#10). Fix Magnet (Part#8) onto Front Rail (F) using Screw (Part#9) .

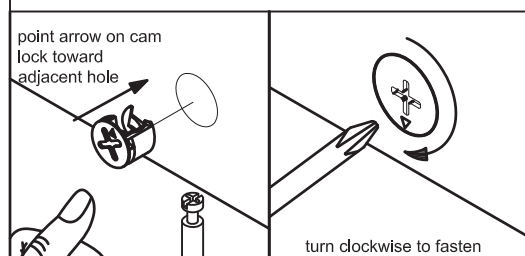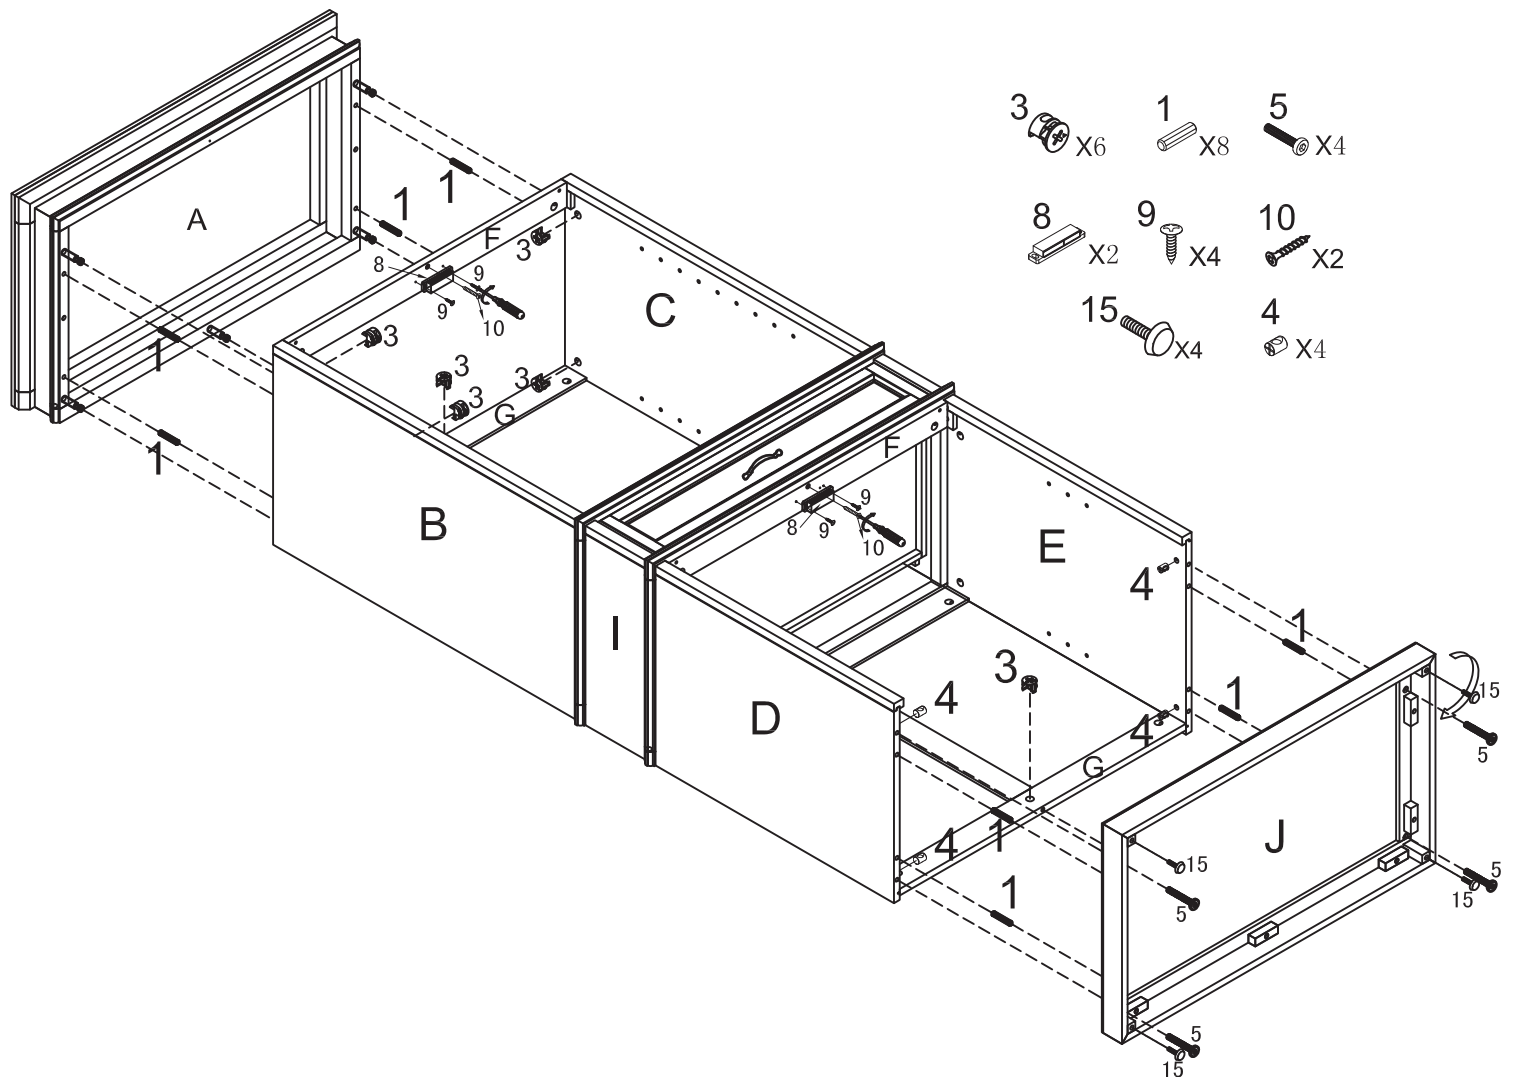

Step 9. Insert Shelf Holders (Part#7) into desired position on Side Panels (B,C, D & E). Put Adjustable Shelves (Q) into cabinet. Attach Doors (K, L, M & N)

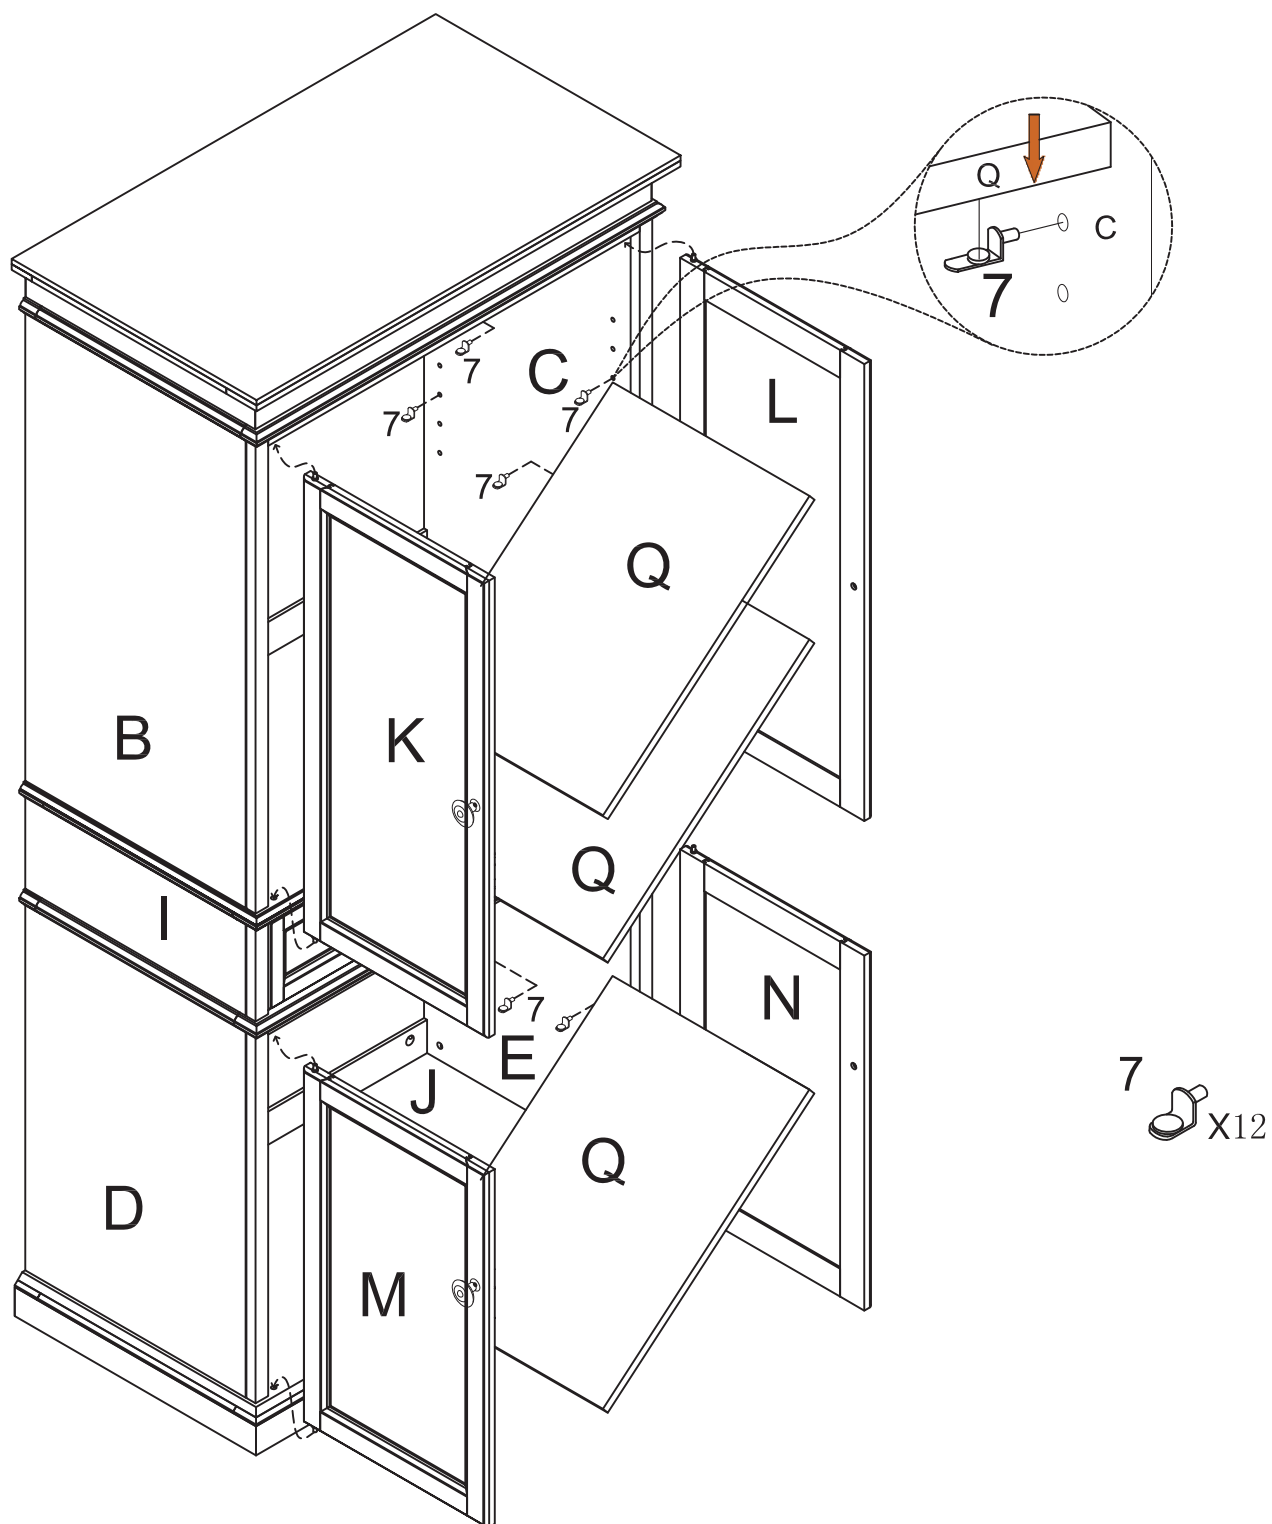


Step 10. Attach 8 Brackets(Part#17) to the back panel with Screws (Part#18) .

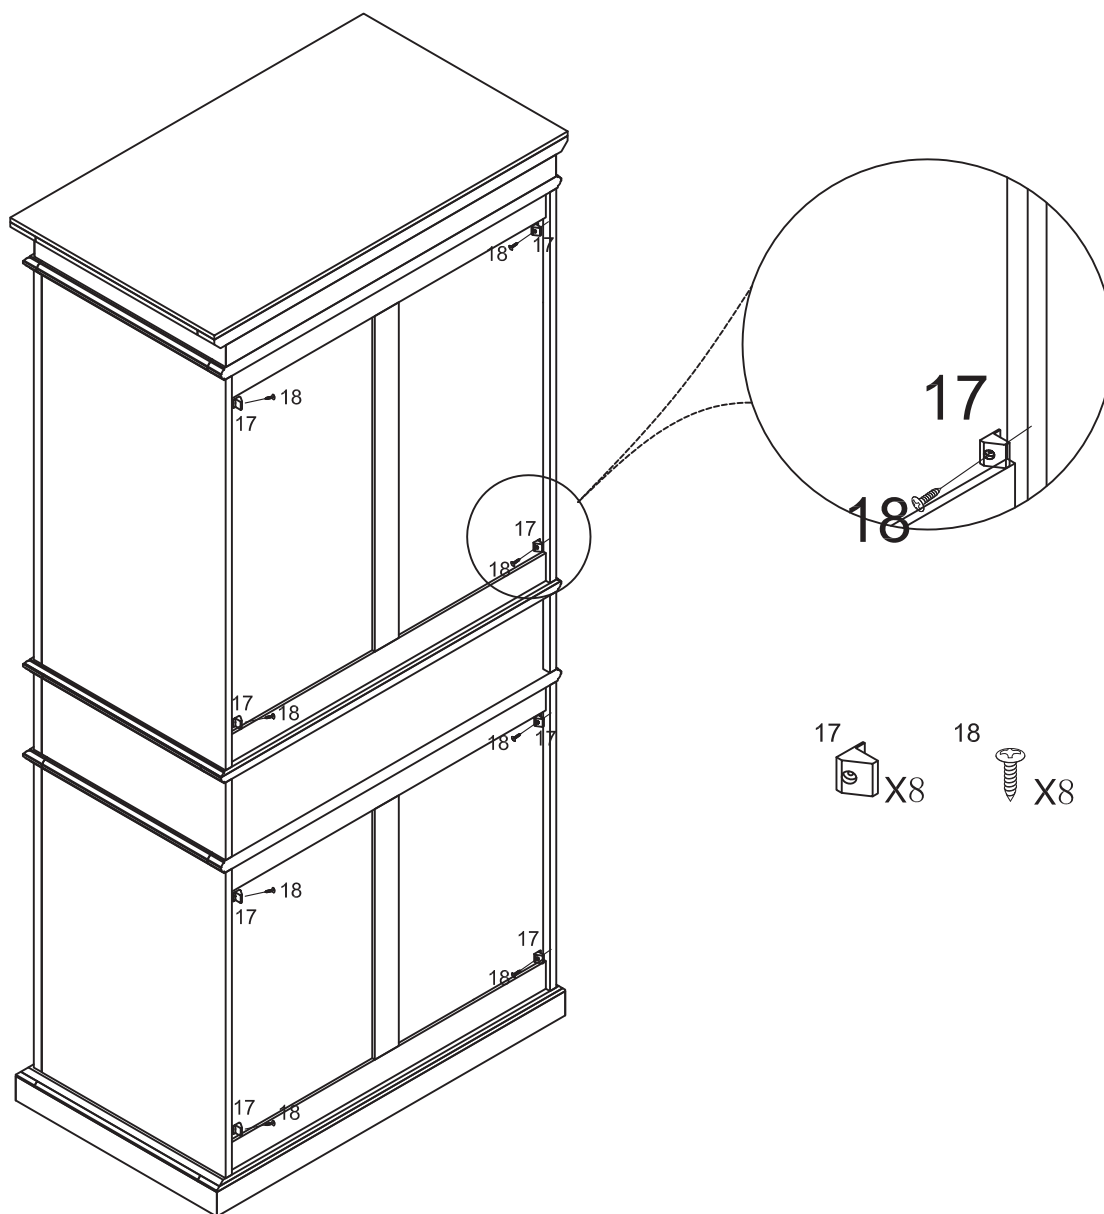



SAFETY STRAP KIT
1 PC

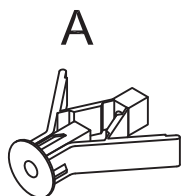

WALL ANCHOR
Ax1 PC



WASHER
Bx2PCS




D8*3/4"

SHORT SCREW
Cx1PC



D8*1-1/2"


LONG SCREW
Dx1PC

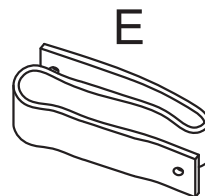

SAFETY WALL STRAP
Ex1PC

SAFETY WALL STRAP ASSEMBLY INSTRUCTION

- 1) Insert Short Screw Part (C) through Washer Part (B) and Safty Wall Starp Part (E) and screw it into Parts (A).
- 2) Drill a 11/32" hole where you want to secure your pantry. The hole should be at the same height as the hole in Part (A). Tap Wall Anchor Part (A) into the hole.
- 3) Insert Long Screw Part (D) through a Washer Part (B) and Wall Safty Strap Part (E) into Wall Enchor Part (A).

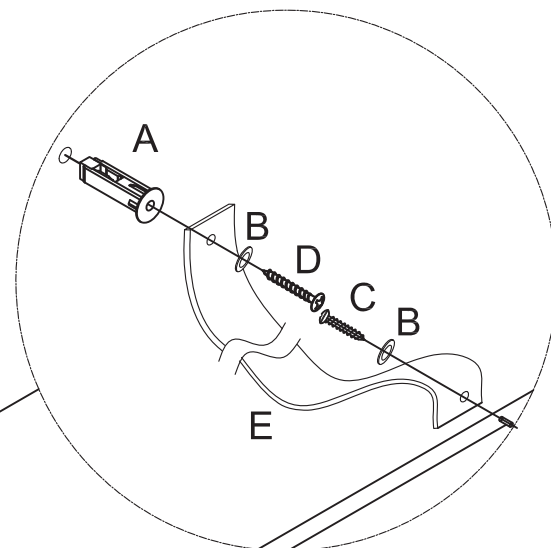

Wall

