

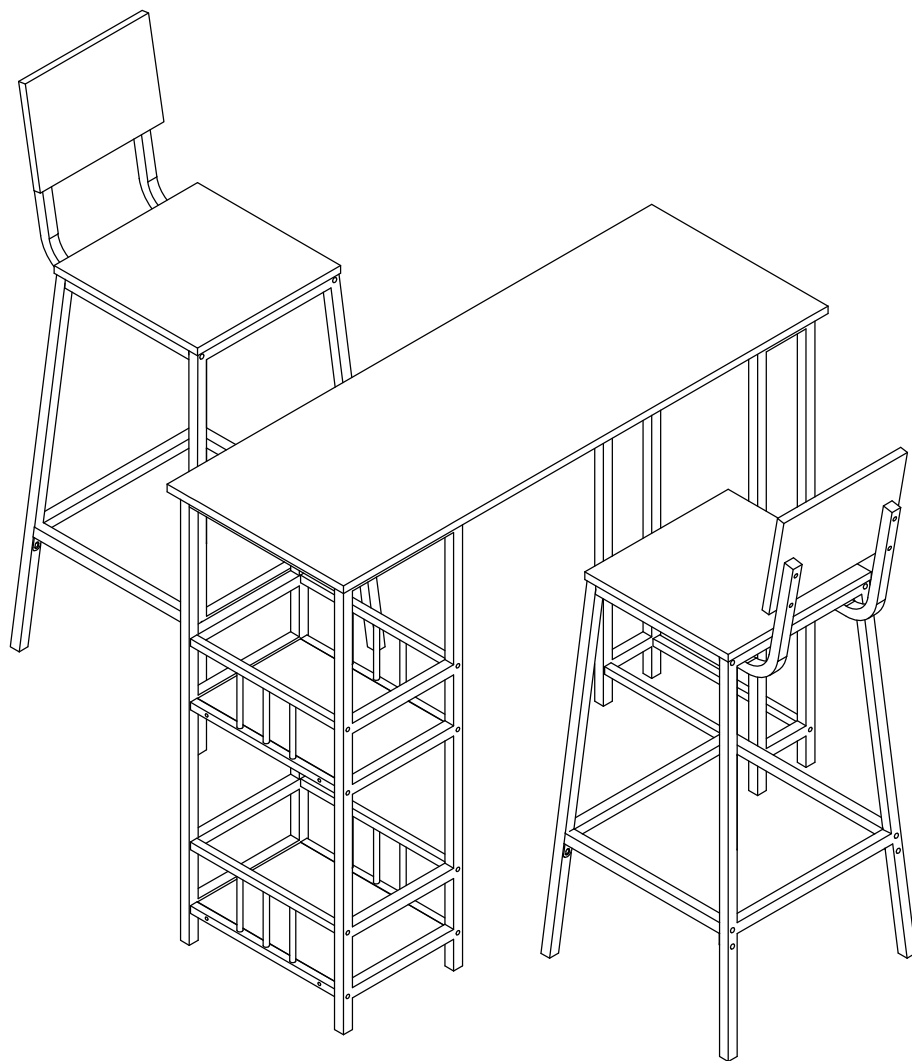



ASSEMBLY INSTRUCTION

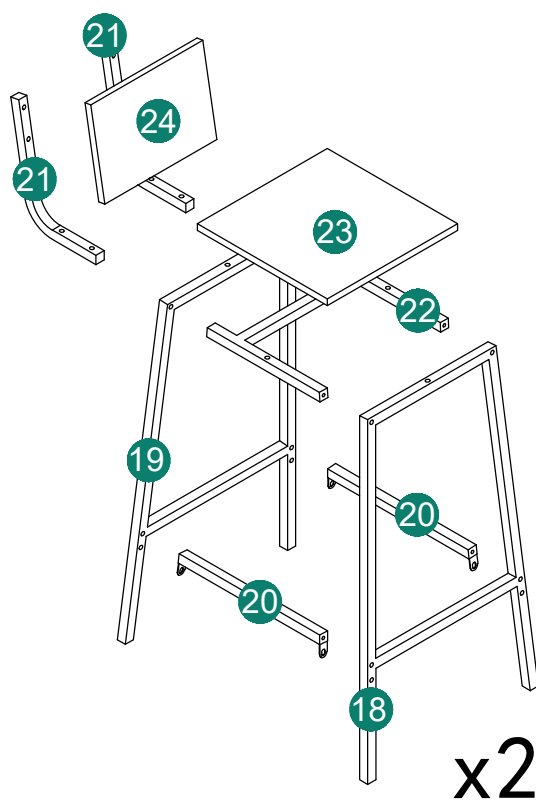

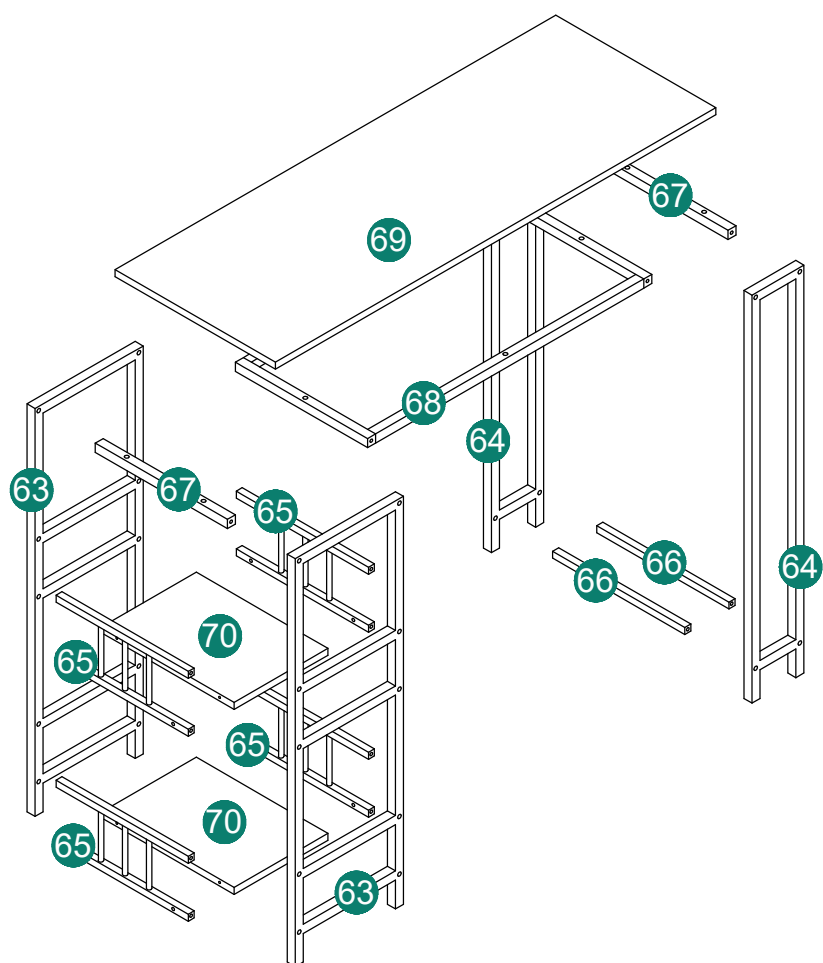


x2

18

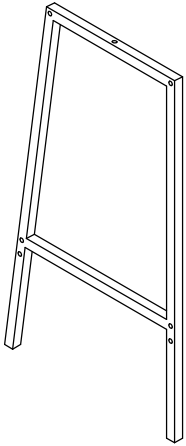


2PCS

19

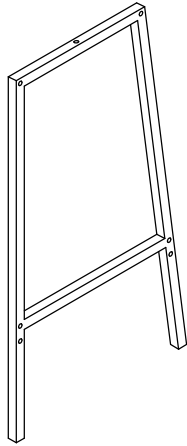


2PCS

20

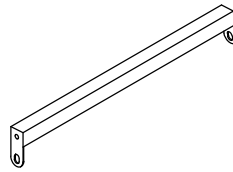


4PCS

21

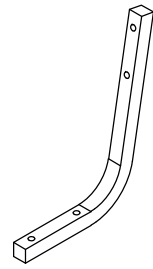


4PCS

22

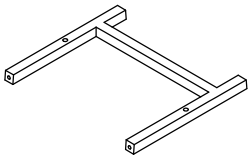


2PCS

23

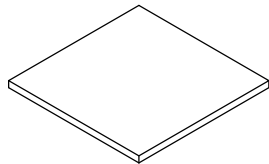


2PCS

24

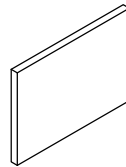


2PCS

63




2PCS

64




2PCS

65

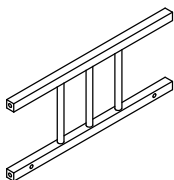


4PCS

66

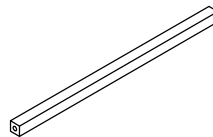


2PCS

67

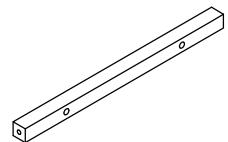


2PCS

68

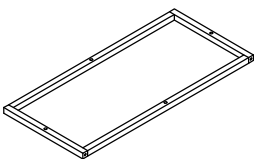


1PCS

69

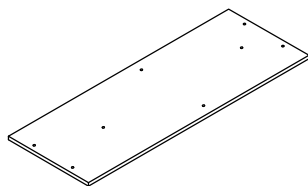


1PCS

70

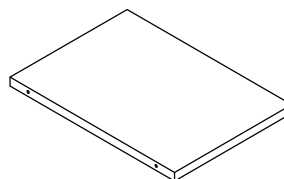

2PCS


A

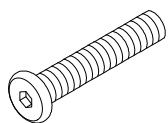

M6*40mm

44+3PCS


B



M6*30mm

40+3PCS


C



M5*48mm



8+1PCS

D




M6

8+1PCS

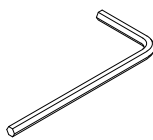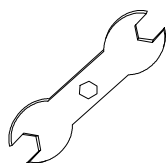


3mm

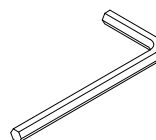


4mm

1




⑱ 2pcs



⑲ 2pcs








⑳ 4pcs



㉒ 2pcs



Ⓐ 16pcs

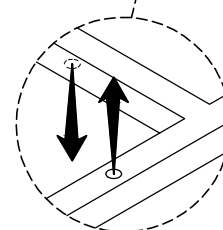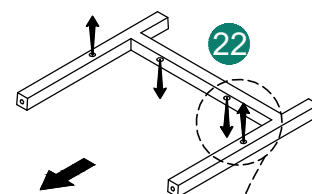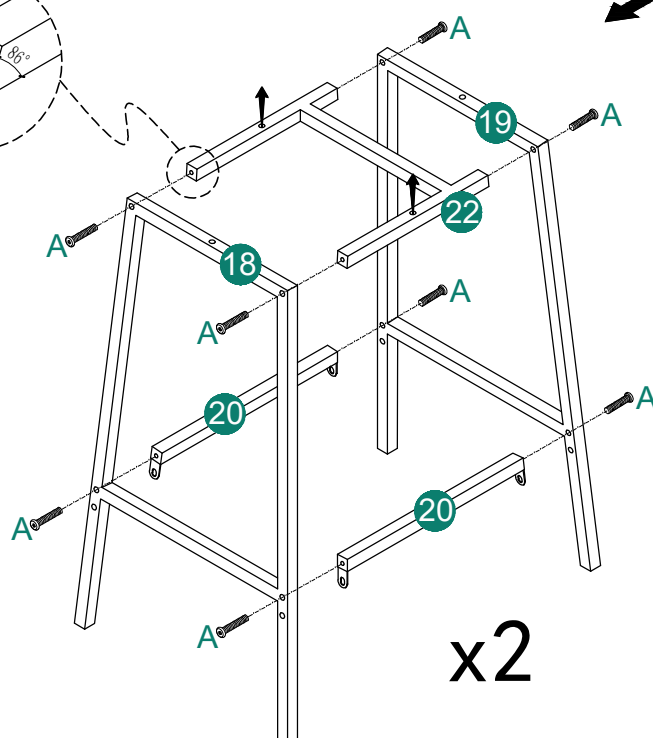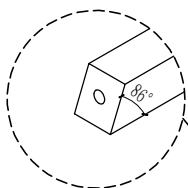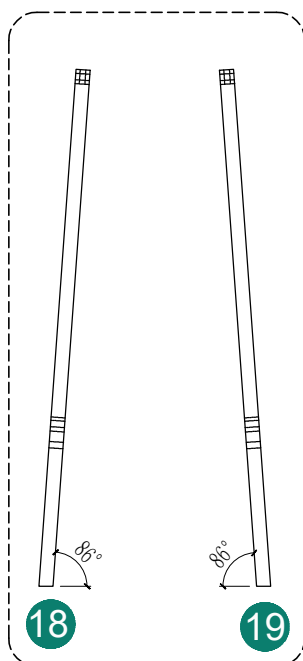



Please pay attention to the orientation of these holes.

2

21 2pcs

B 16pcs

D 8pcs

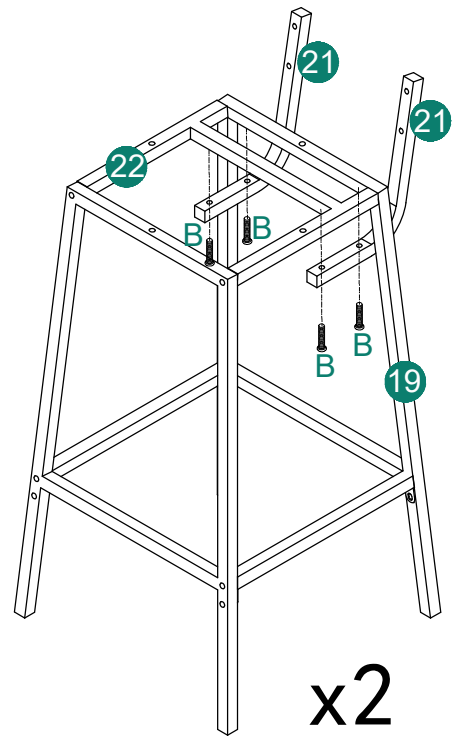
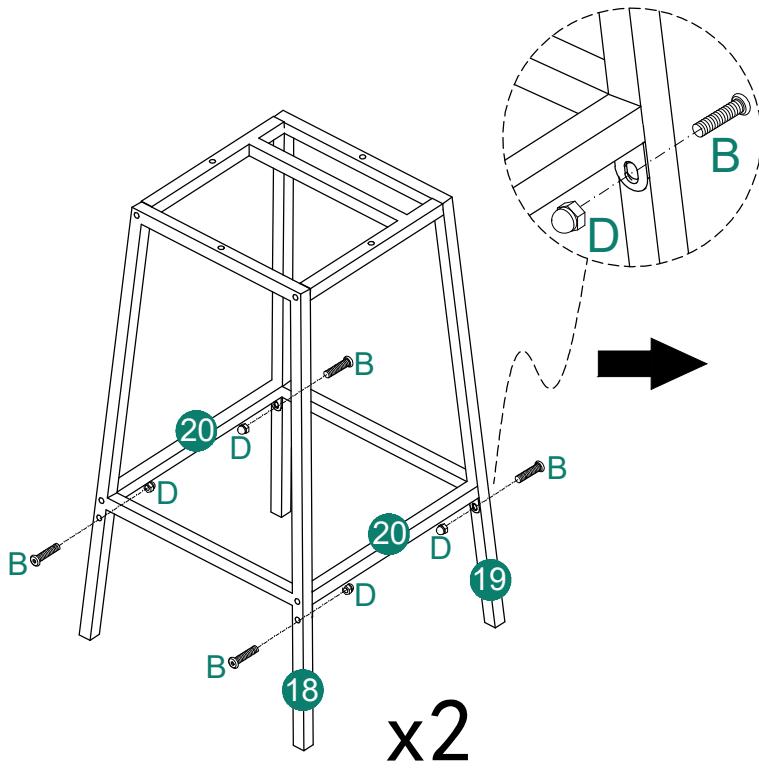


3

23 2pcs

24 2pcs


B 16pcs

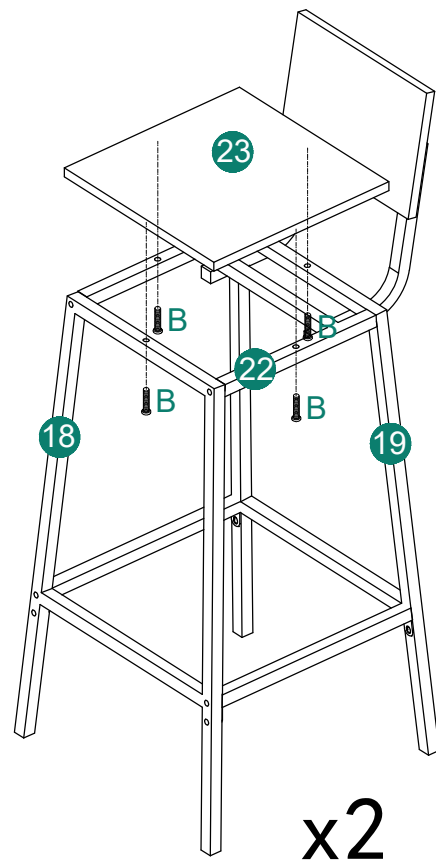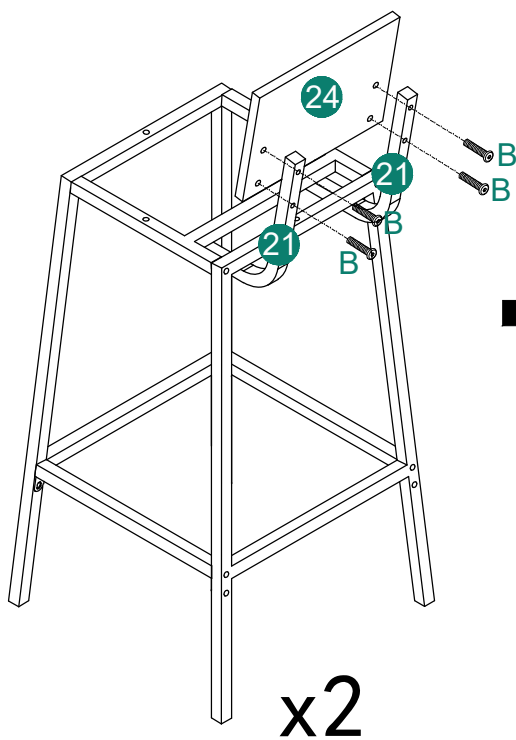


4




65 4pcs




70 2pcs



C 8pcs

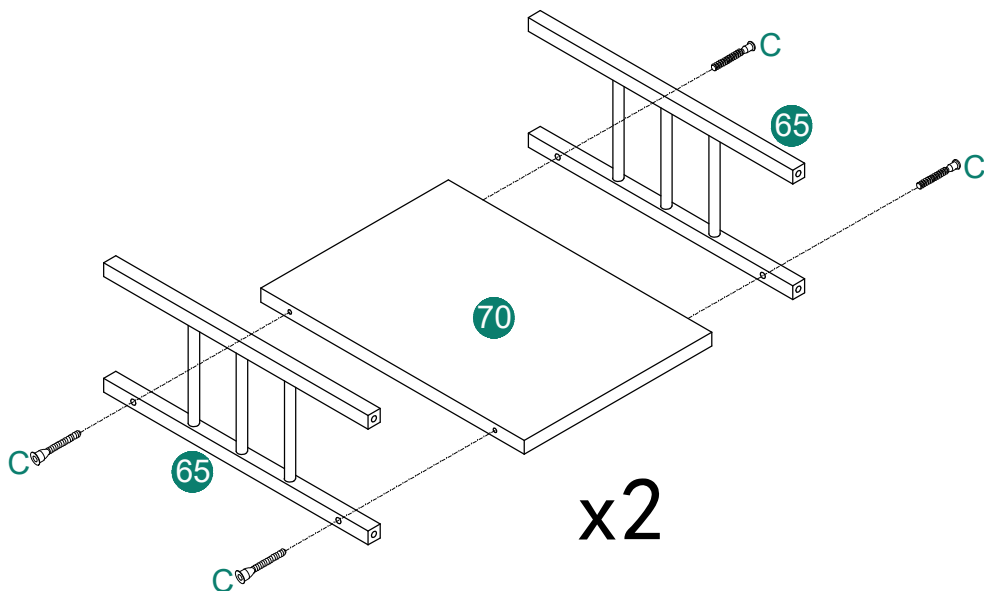

5




63 4pcs





67 1pcs





A 18pcs

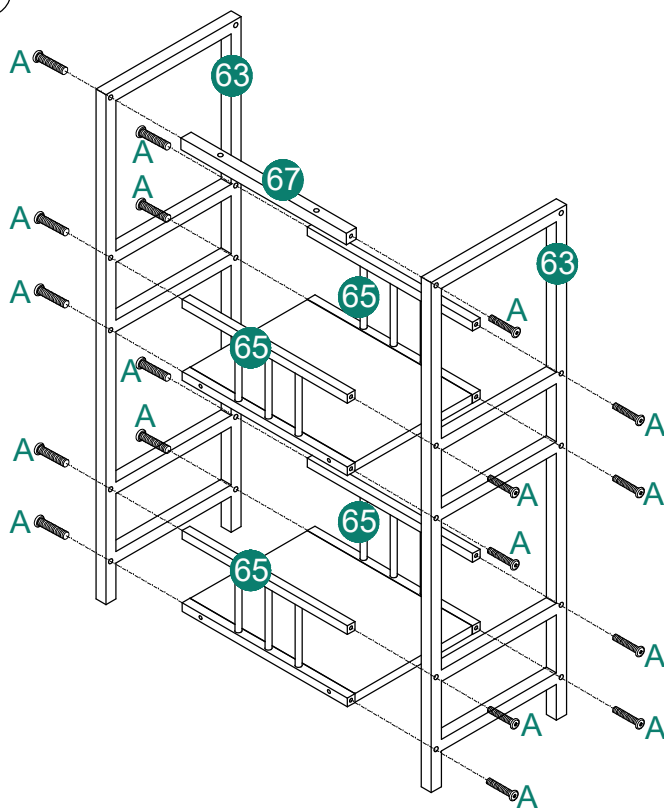


6

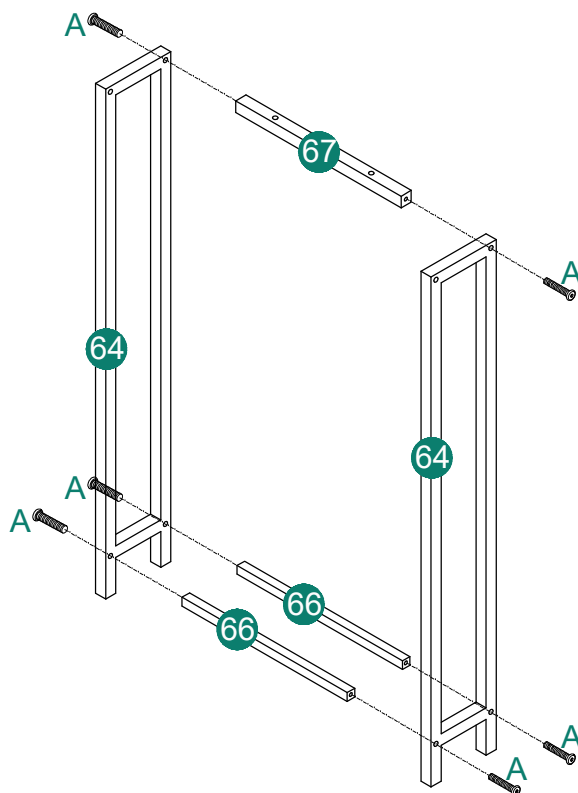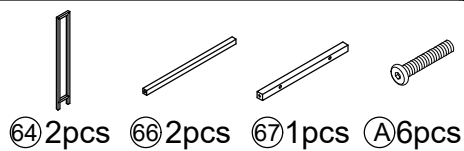




7

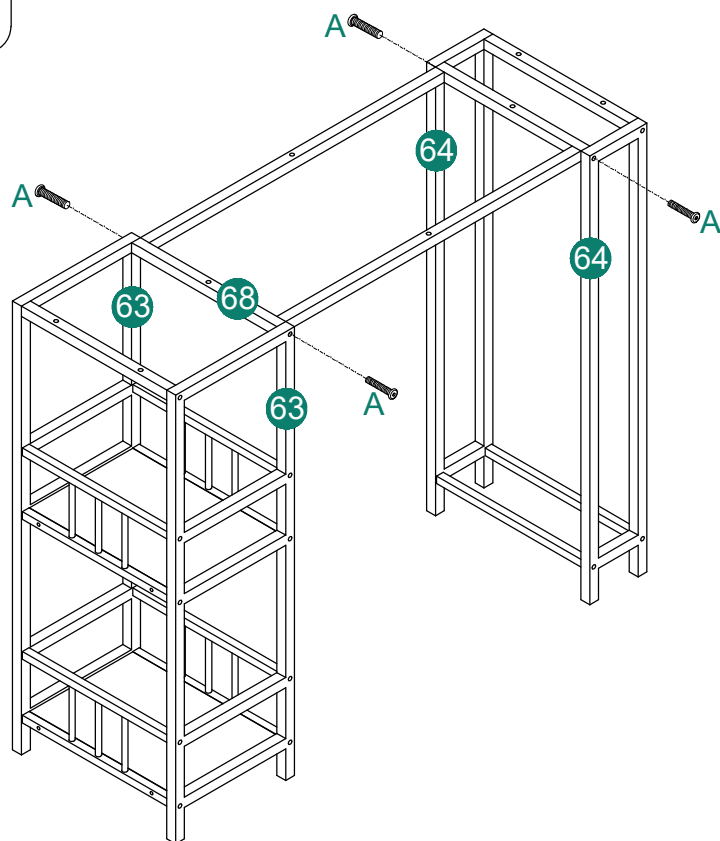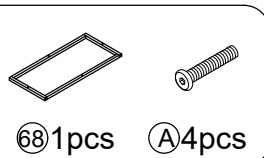

8



69 1pcs B 8pcs

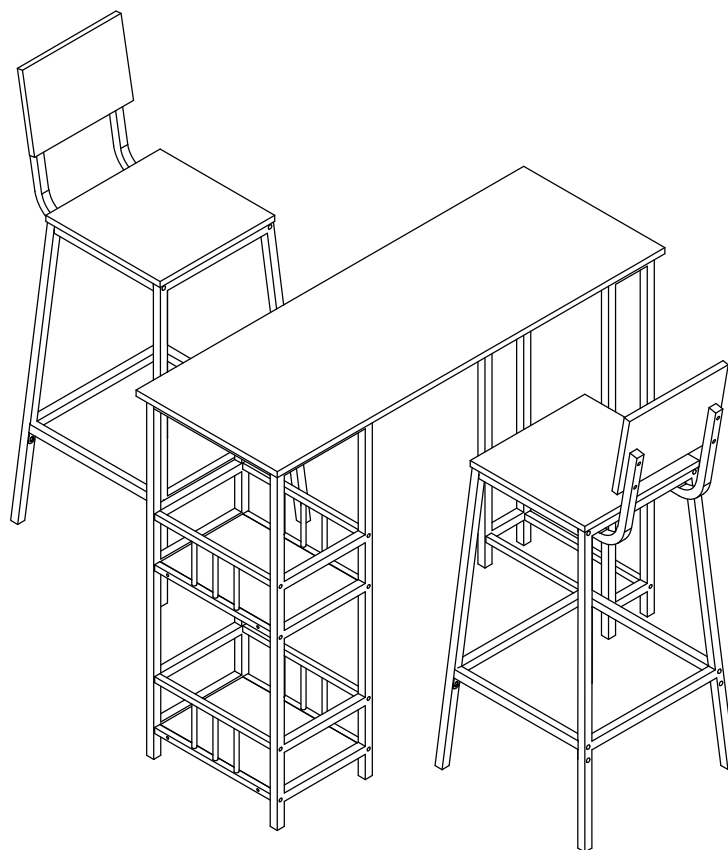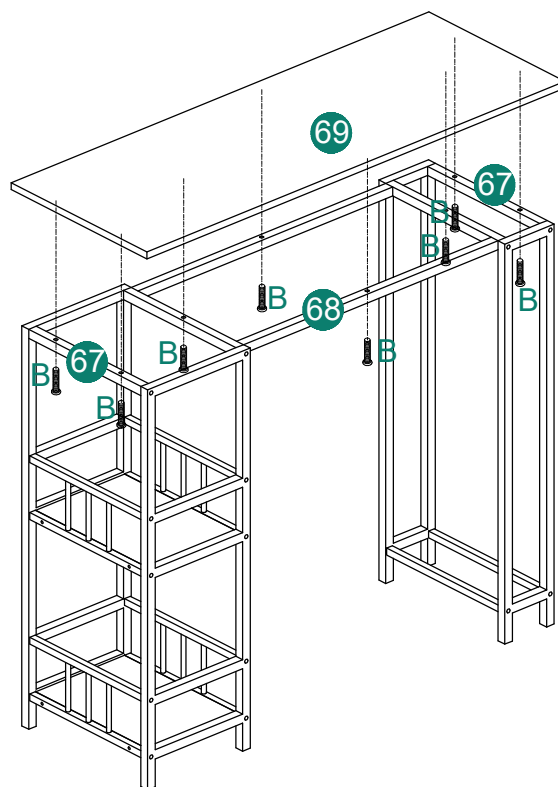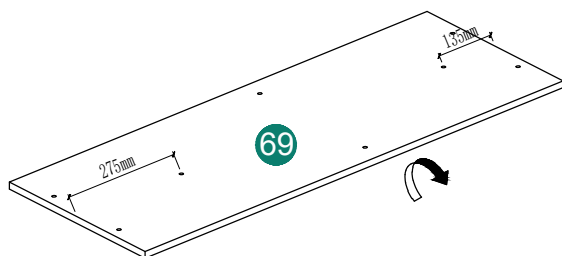

Installation Completed