Assembly Instruction

CAUTION: Read instruction carefully and turn electicity off at main circuit breaker panel before beginning installation.



Care and Cleaning

To clean the outside fo the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.

To clear the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box.Next, use a dry or slightly damperned clean cloth (use clean water, never a solvent) to wipe the interior surface of the fixture

Do not use any cleaners with chemical, solvents or harsh abrasives. Use Only a dry soft cloth to dust or wipe carefully.

Estimated Assembly Time: 30 minutes

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Mounting bar		1X	F	Lampbody		1X
A1	Mounting screw		2X	G	Bead string		1X
В	Canopy		1X	Н	Socket cover		6X
С	Lock	Ð	1X	I	Bulb	\bigcirc	6X
D	Out ring		1X	J	Wire Nut	Ø	3X
E	Chain	8 0 9 3	1X				

Part List and Hardware List

Installation


Step 1


Unpack all parts from cartons carefully Screw the chain(E) to the lock(C) of the center tube & canopy(B) Hang the chain(E)to the lampbody(F) Set the nipple(H)to the lamp holder,then place the bulb(I)to the socket cover Hang the bead string(G)to the crystal group of the lampbody(F)

*Note:Please use type"B"bulb max 40-watt or CFL bulb max 9-watt

There are 3pcs 25W type"B" bulbs in the box

Step 2 Wire Connetion

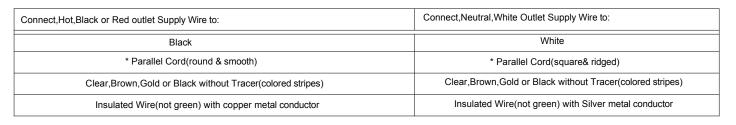



*Note: When parallel wire(SPTI & SPT II) is used. The neutral wire is square shaped and ridged and the hot wire will be round in shape and smooth. (See illustration on left.)



Step 3

Grounding Instructions:

a) For installation in the United States: Wrap ground wire from outlet box around green ground screw on mounting bracket, no less than 2" from wire end. Tighten ground screw. If fixture is supplied with a ground wire, connect to outlet ground wire with a wire connector.
b) For installation in Canada: If fixture is supplied with ground wire, wrap ground wire around green grounding screw on mounting bracket. Tighten ground screw.

Step 4

Installing the mounting bar(A) with mounting screw(A1) , and secure canopy(B) with the lock(C) and tighten with out ring(D)


Step 5

Installing whole body to the lock(C)

Step 6

Consult a qualified electrician to ensure correct branch circuit conductor



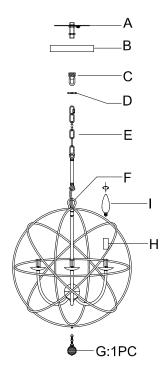

ENJOY YOUR LAMP