

ASSEMBLY INSTRUCTIONS
20INCH BATH VANITY(COMBO)

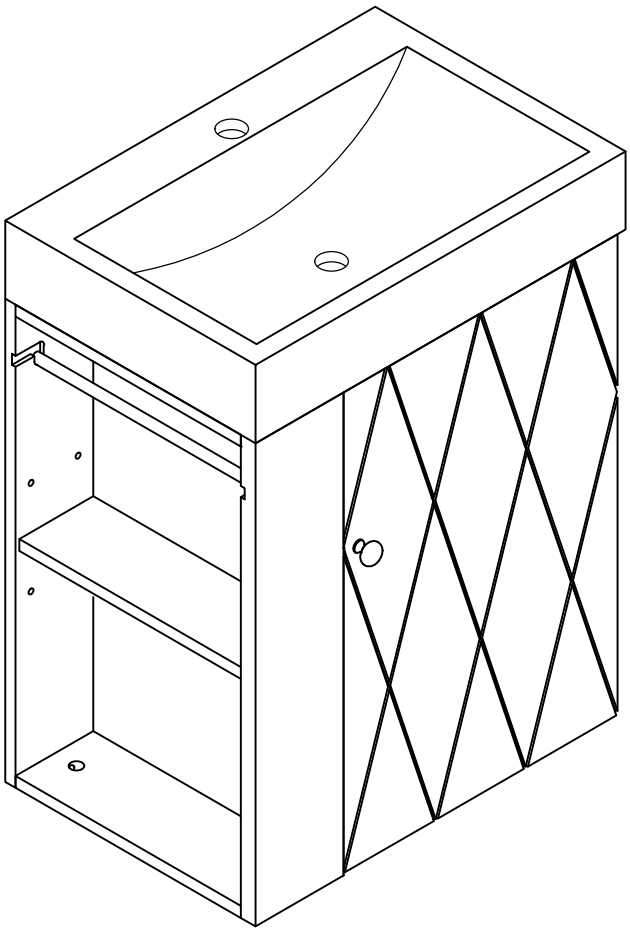

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.
"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

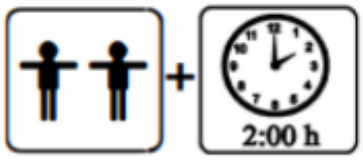



Tools Required


(Not included)


(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Thank you for buying our products.

Please read the installation manual carefully before installation,

we need you to follow the instructions on the accessories and hardware

step by step assembly complete, our instructions are very detailed.

Products are environmentally friendly products,

Please rest assured that you do not soak in water, do not place very heavy items,

do not malicious push and pull,

if you have any problems in the process of assembly and use, please contact us.

Thank you again for your purchase of our products,

I wish you a happy life.

Before Installation

Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly,and follow the assembly steps to assemble your newly purchased product correctly and efficently.

Cam Lock Assembly Instructions





Diagram A

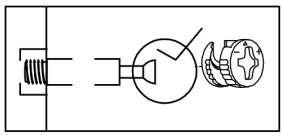

Insert Cam Bolt into hole as shown in diagram A.





Diagram B

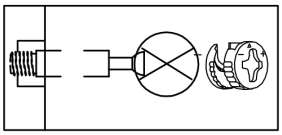

Make sure not to insert the Cam Bolt:
Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.







Diagram C

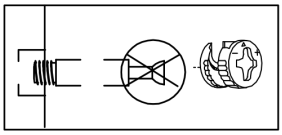


Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.

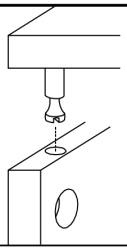

Connect the panels together.

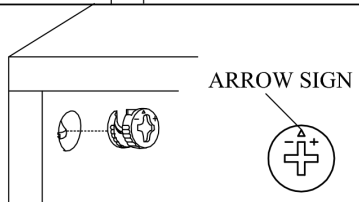


Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.

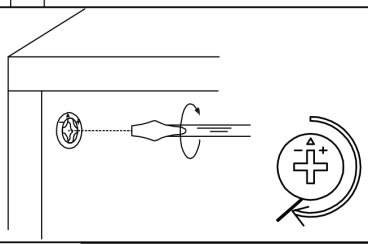














To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver.
**Do not use an automatic screwdriver as it may bend or break if too much power is imposed.*

Detail View - CABINET






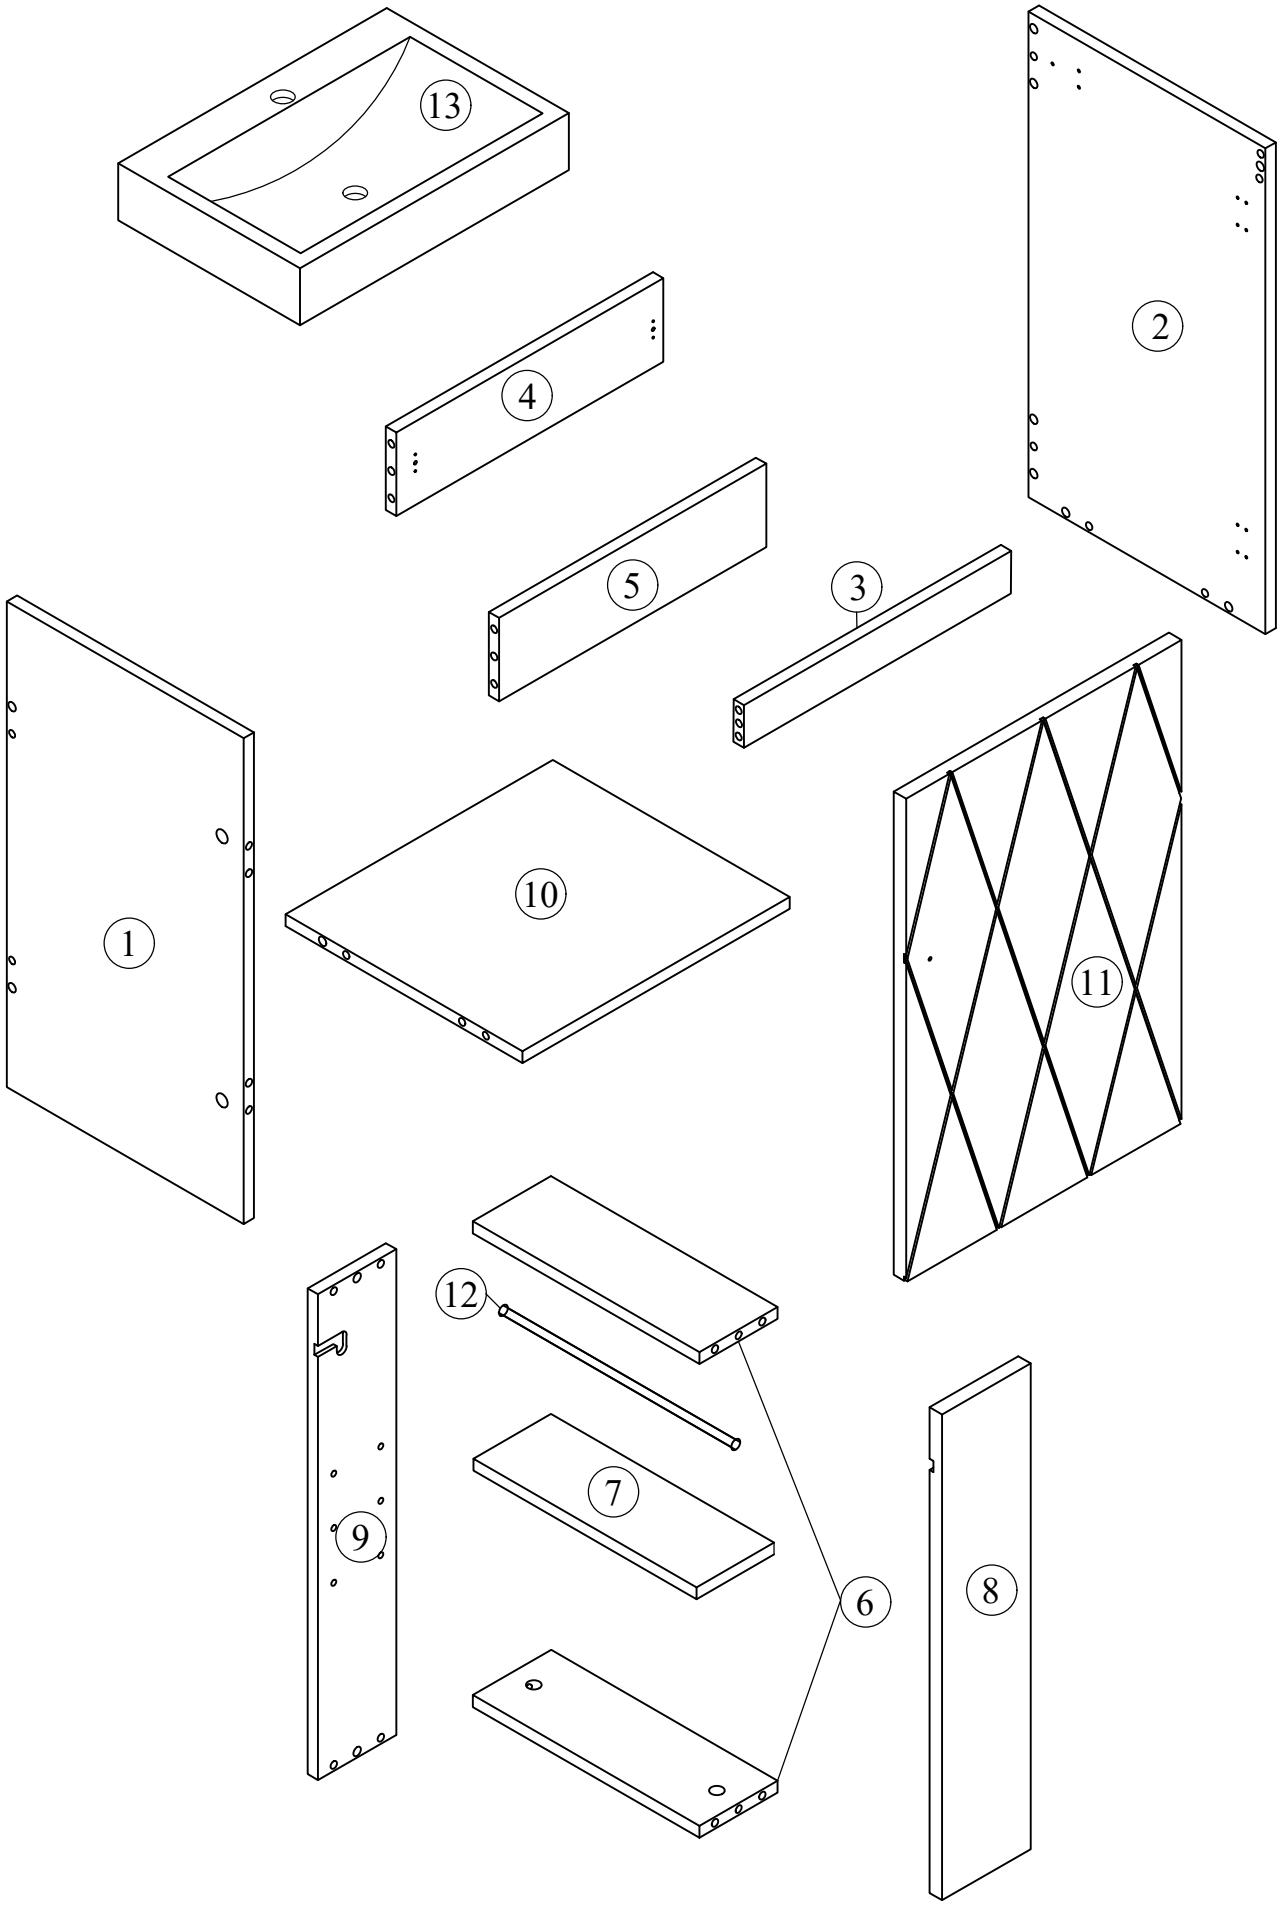


Identifying the Hardware -Indentify the hardware using the illustrations below.



Part List

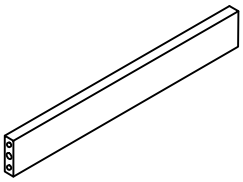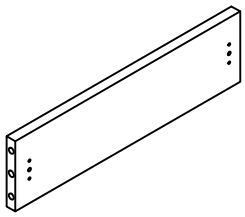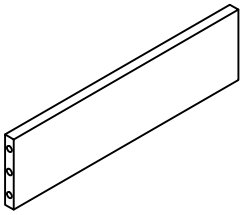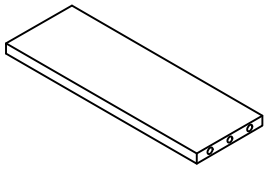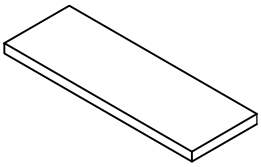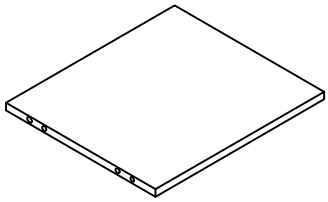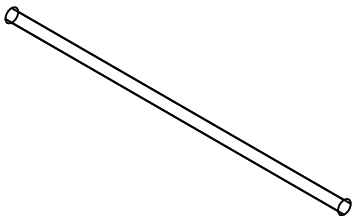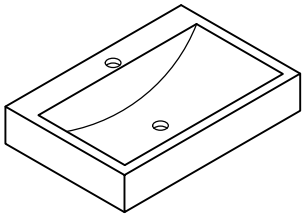
1  Side Panel (L) - 1pc	2  Side Panel (R) - 1pc
3  Top Panel Front - 1pc	4  Top Panel Rear - 1pc
5  Bottom Panel Rear - 1pc	6  Top & Bottom Panel Shelf - 2pcs
7  Adjustable Shelf - 1pc	8  Side Panel Shelf (R) - 1pc
9  Side Panel Shelf (L) - 1pc	10  Bottom Panel - 1pc
11  Door Face - 1pc	12  Round Bar - 1pc
13  Sink - 1pc	

Hardware List



A  ø6x35mm	B  ø14.5x12mm	C 
Three in one bolts (22pcs)	Three in one lock (22pcs)	Damping hinge (2pcs)
D  ø7xø3.5x12mm	E  ø6.2x31x19x16mm	F  ø8x30mm
Flat head screw (12pcs)	Laminate pad (4pcs)	Wood dowel(24pcs)
G  ø10xø5x60mm	H  ø12x55mm	I  ø1/4"x19x1mm
Flat head screw (2pcs)	Plastic stopper - 2pcs	Washer (2pcs)
J  82x60x45x3mm	K  ø7xø3.5x12mm	L  ø23x20mm
L wall hanging iron(2pcs)	Flat head screw (10pcs)	Handle (1pc)
M  ø5/32"x22mm		
Handle screw (1pcs)		


STEP: 1


A	B	F
		
7PCS	7PCS	6PCS

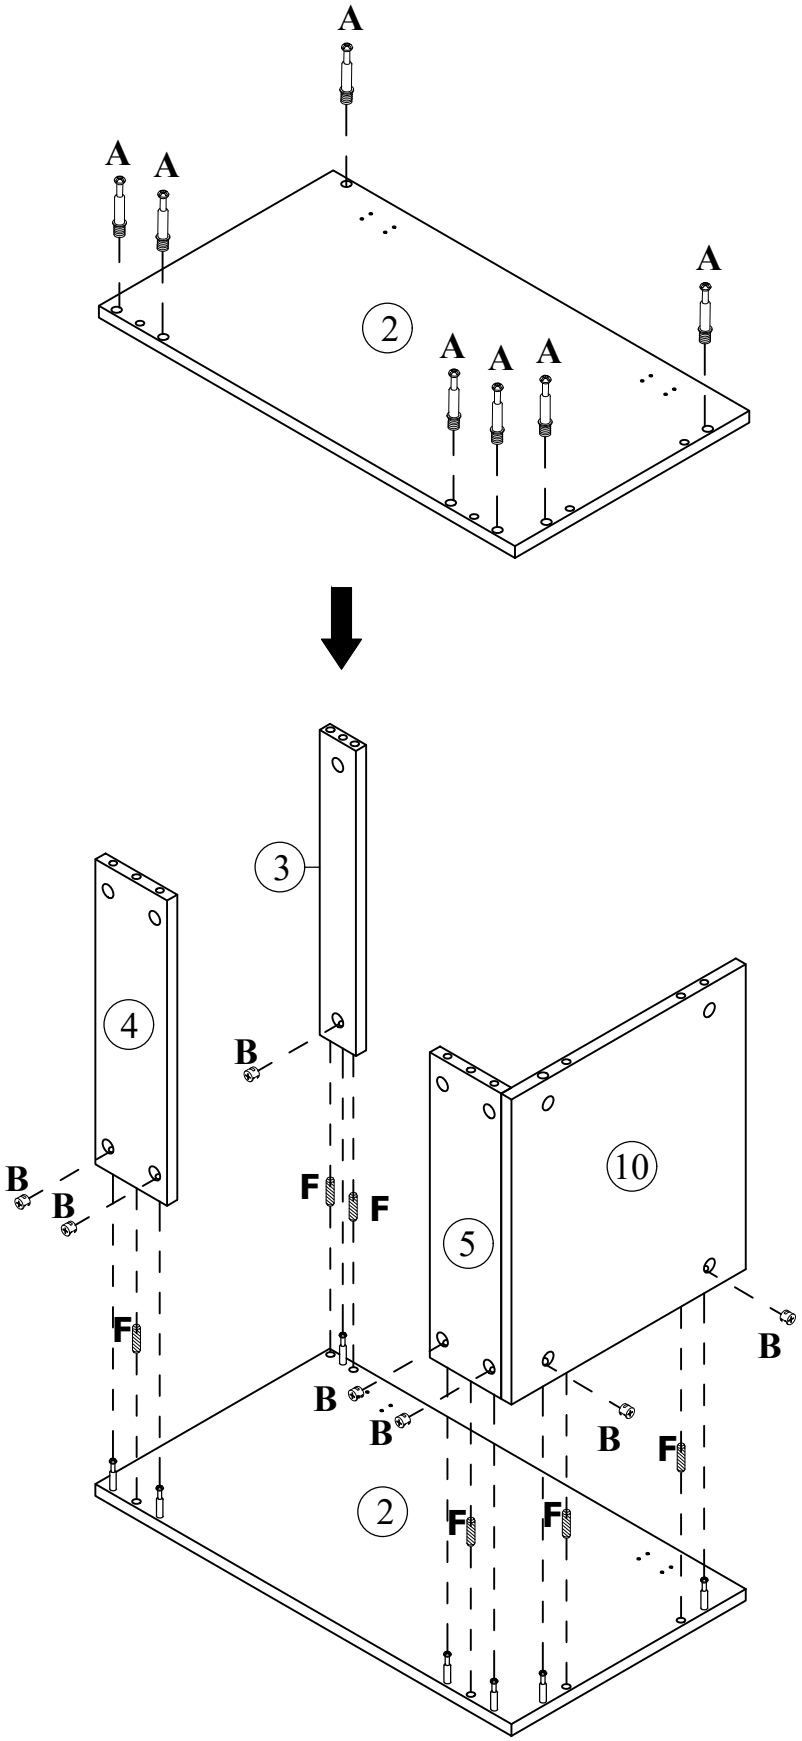


STEP: 2

A	B	F
		
9PCS	7PCS	6PCS

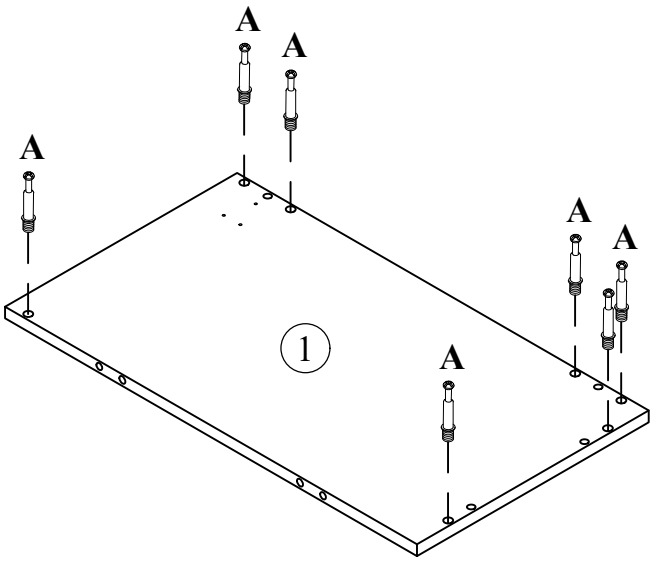


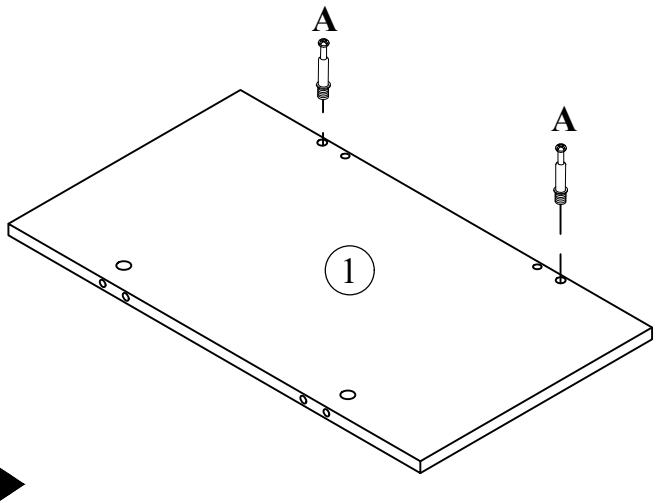


Turn over and install screw(C)

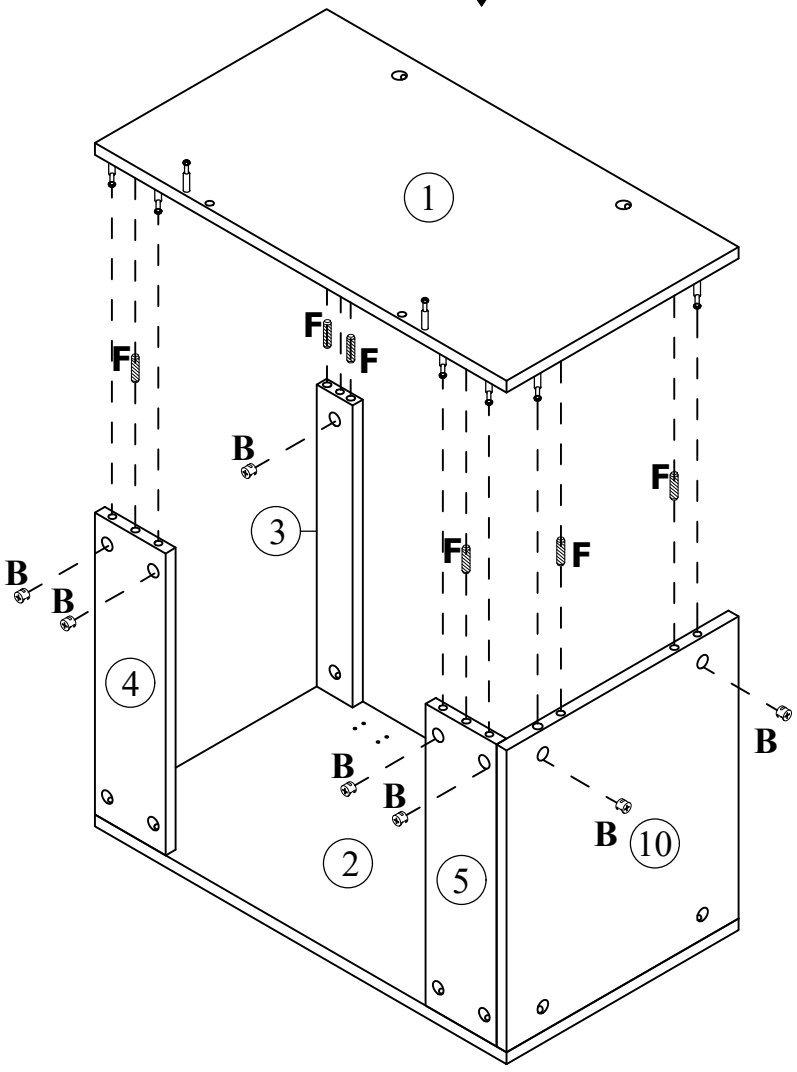



STEP:3

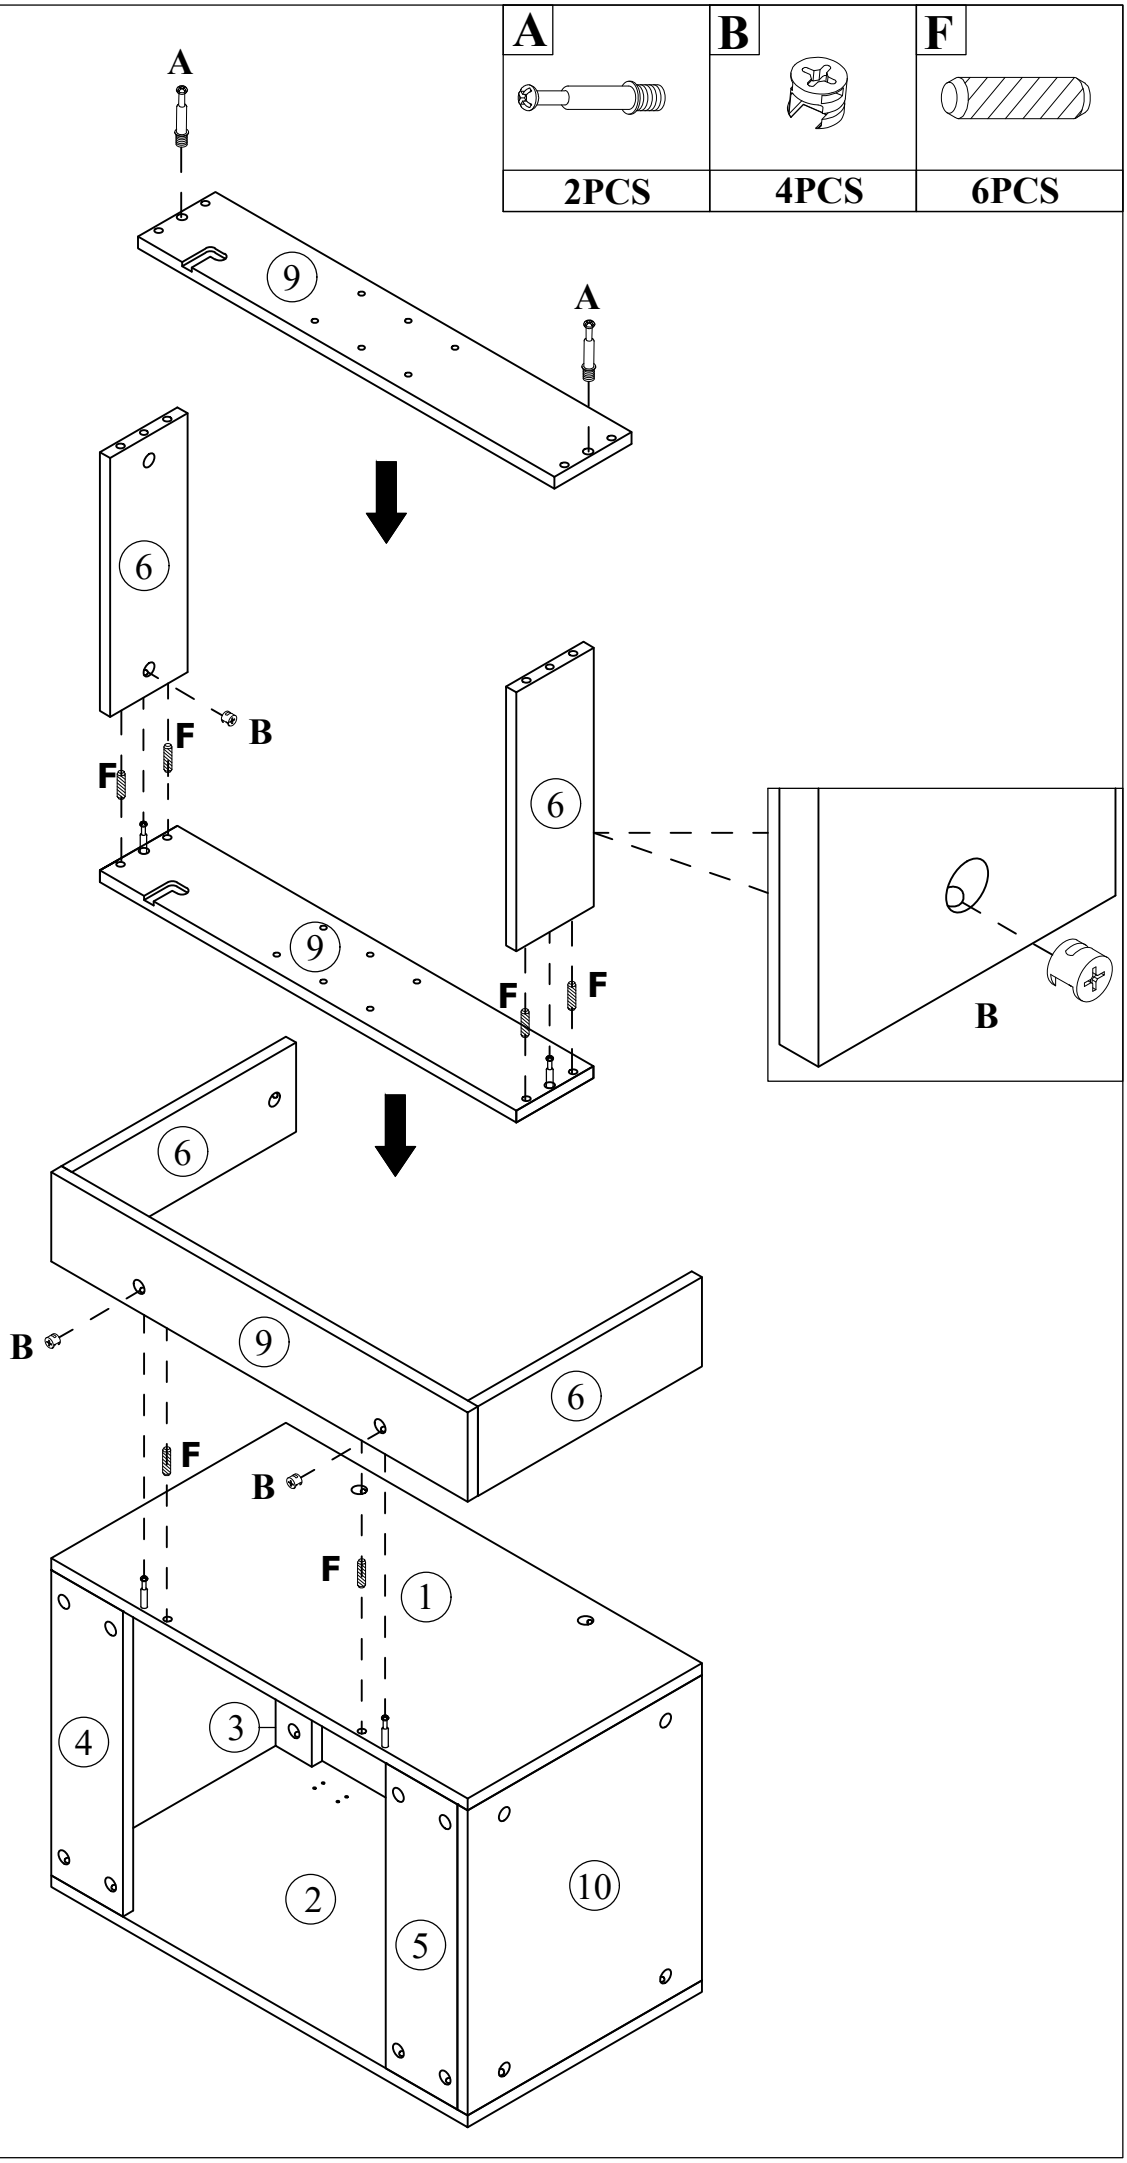


STEP:4


A	B	F
		
4PCS	4PCS	6PCS

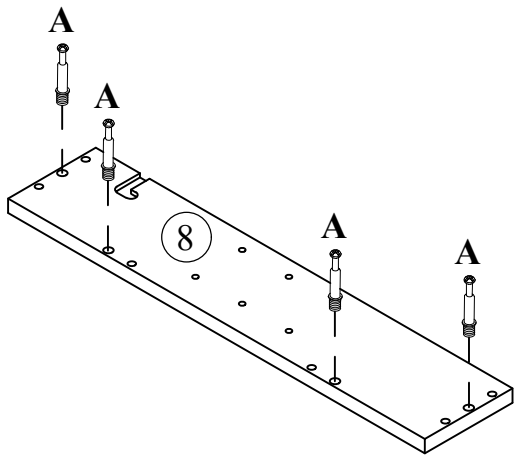

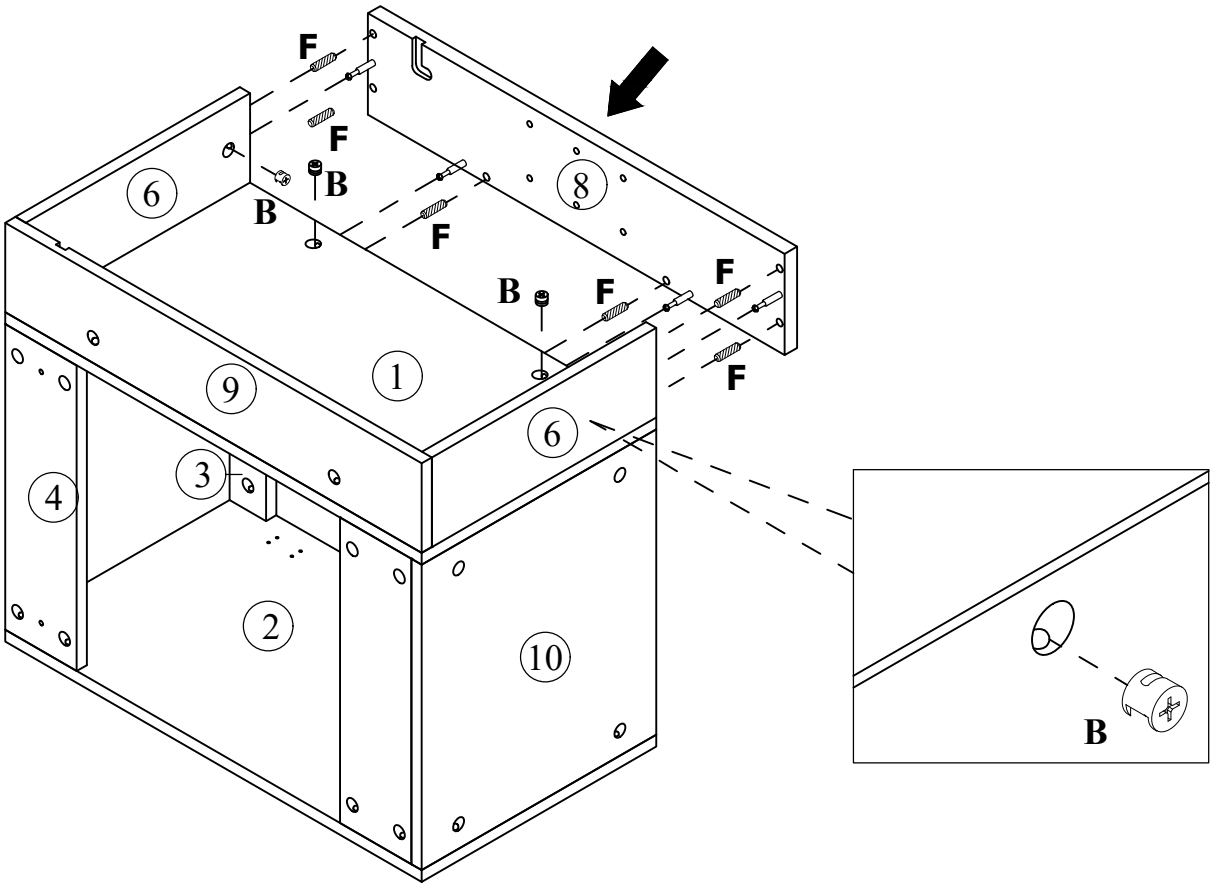



STEP:5

J	K
	
2PCS	10PCS



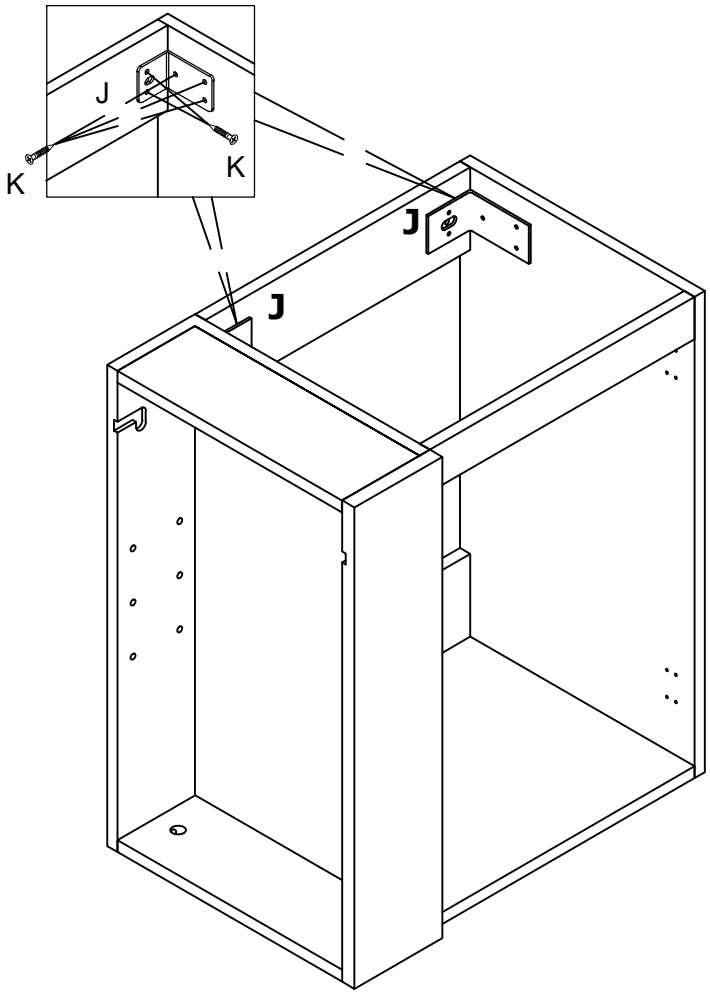



STEP:6


C	D
	
2PCS	4PCS

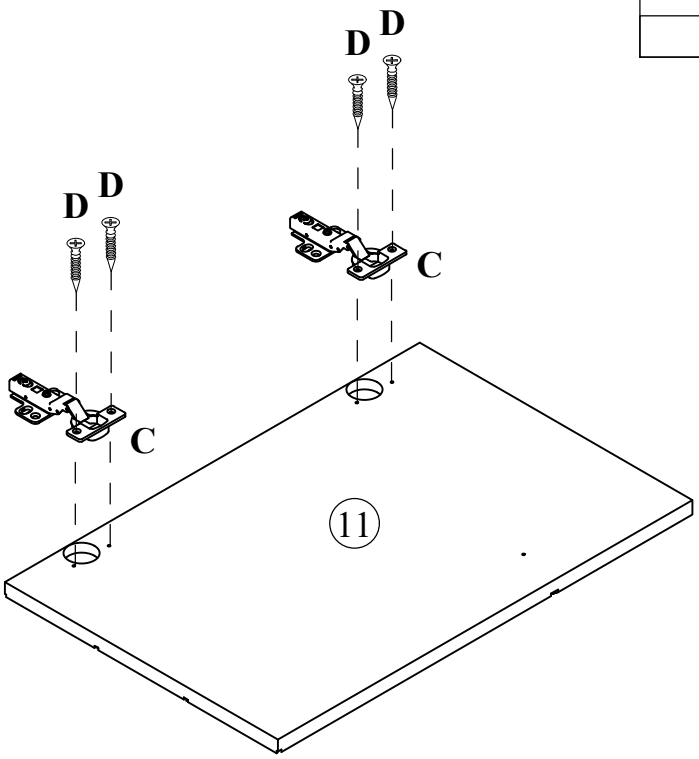


STEP:7


D	L	M
		
8PCS	1PC	1PC

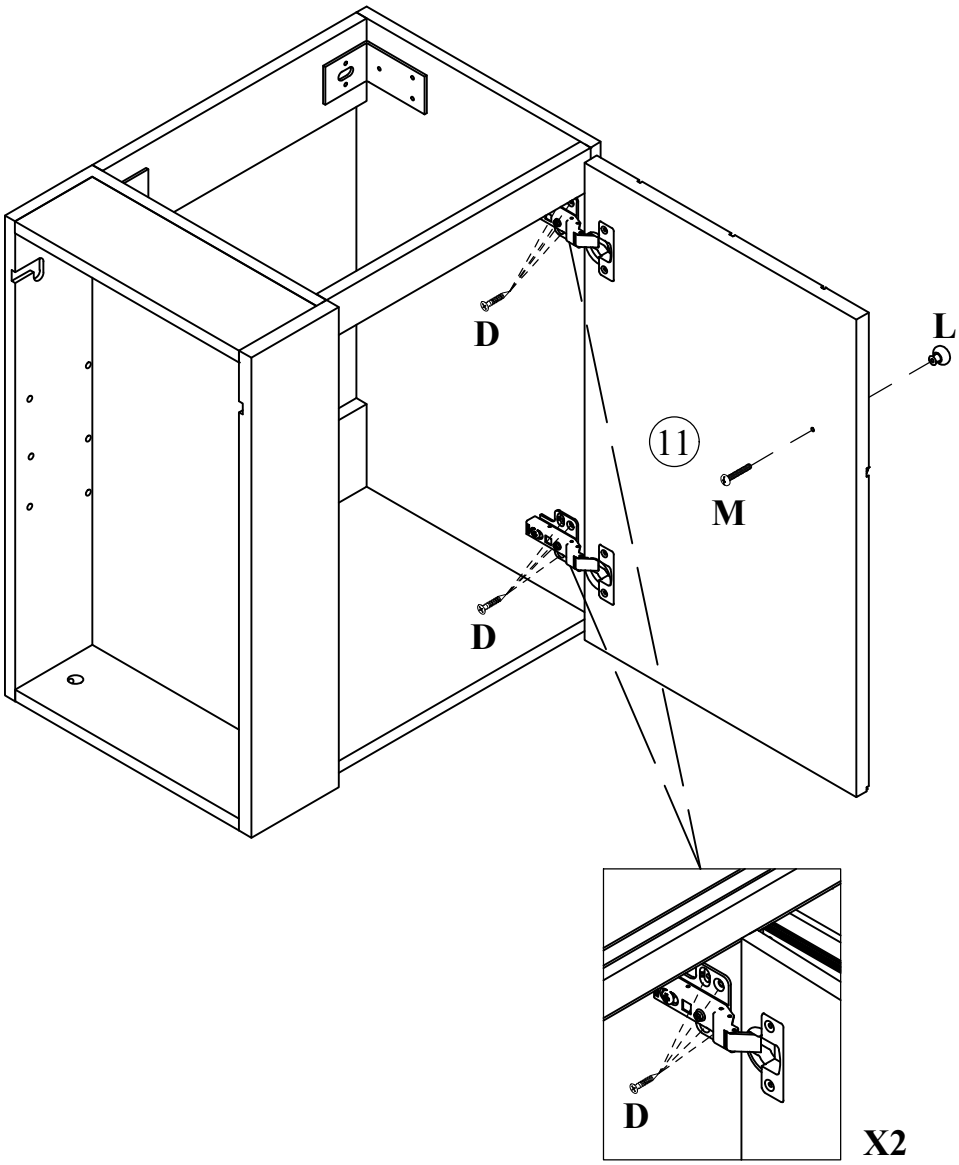

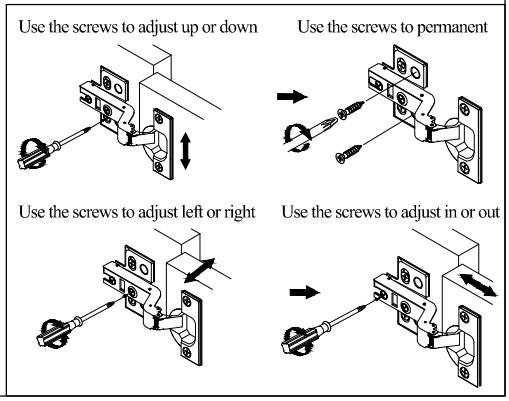


STEP:8


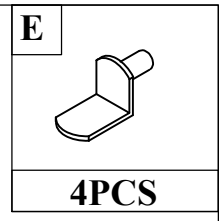


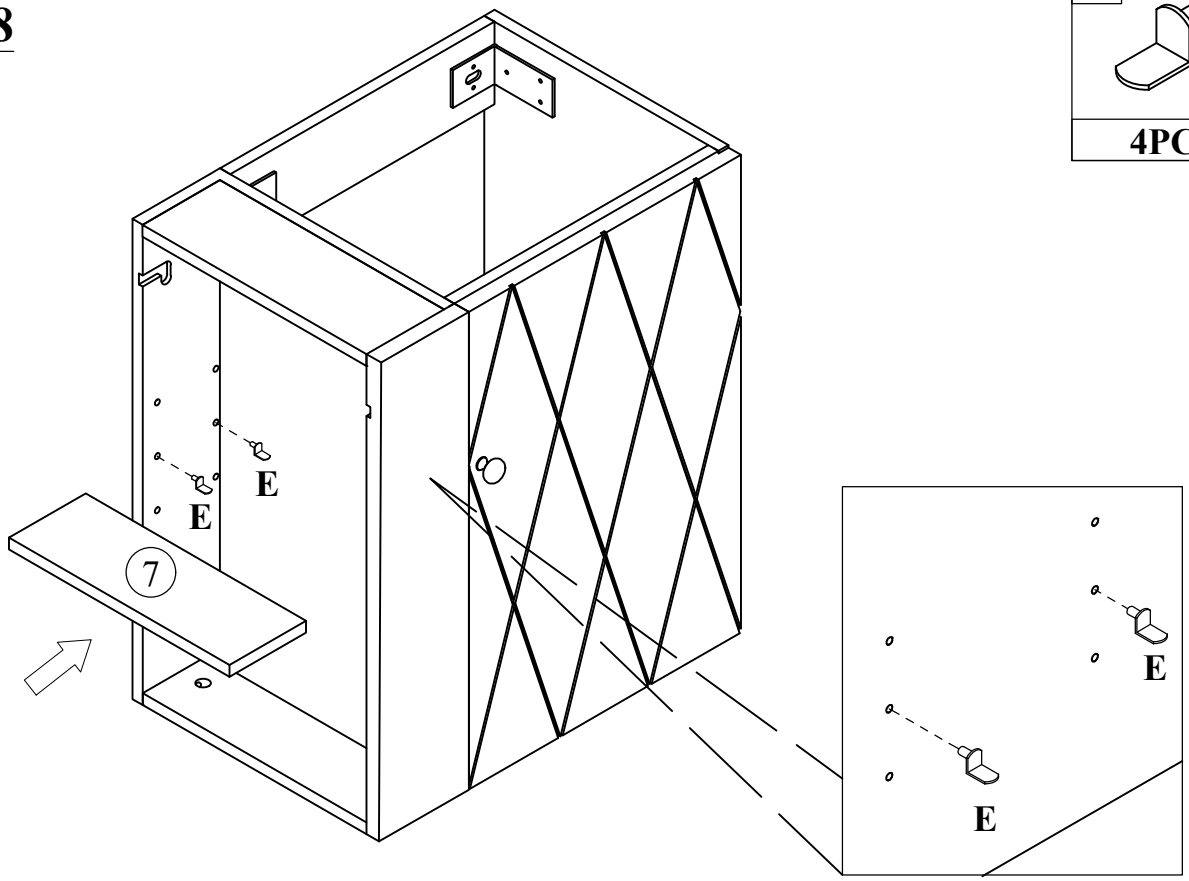


STEP:9

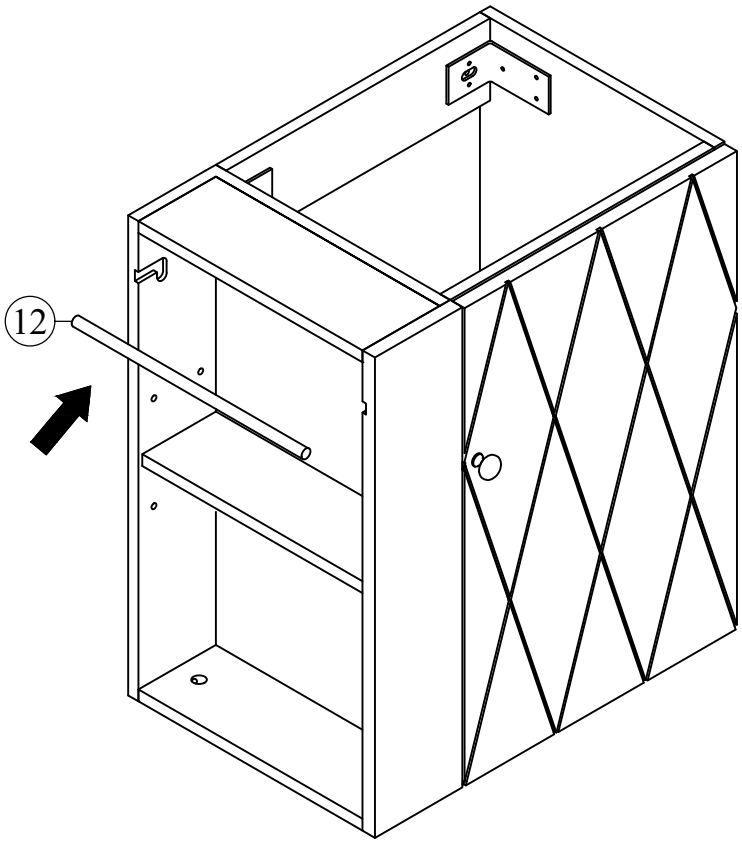


STEP:10

G	H	I
		
2PCS	2PCS	2PCS



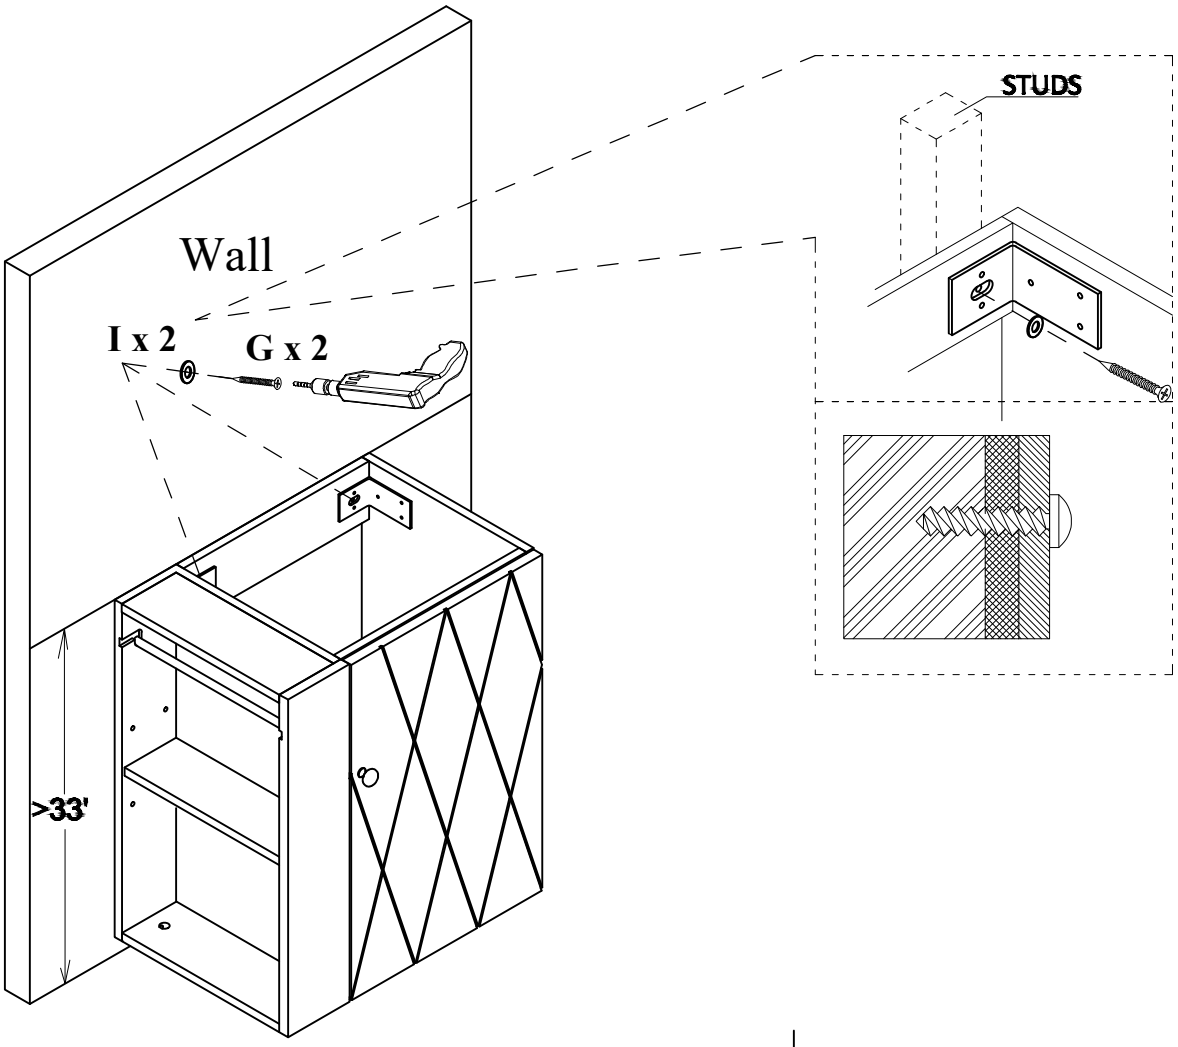

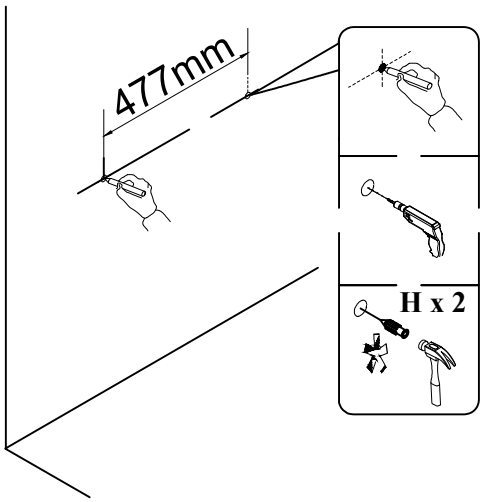


WARNING:
INSTALLATION METHOD OF FLOATING VANITY HAS BIG RELATION WITH THE WALL STRUCTURE.

To get the best installing effect, please follow as below:
Please screw through the "L" shape hanger if there is exactly wall stud behind the hanger.


STEP: 11


Install the sink on the cabinet with glue.
Let stand for 24 hours

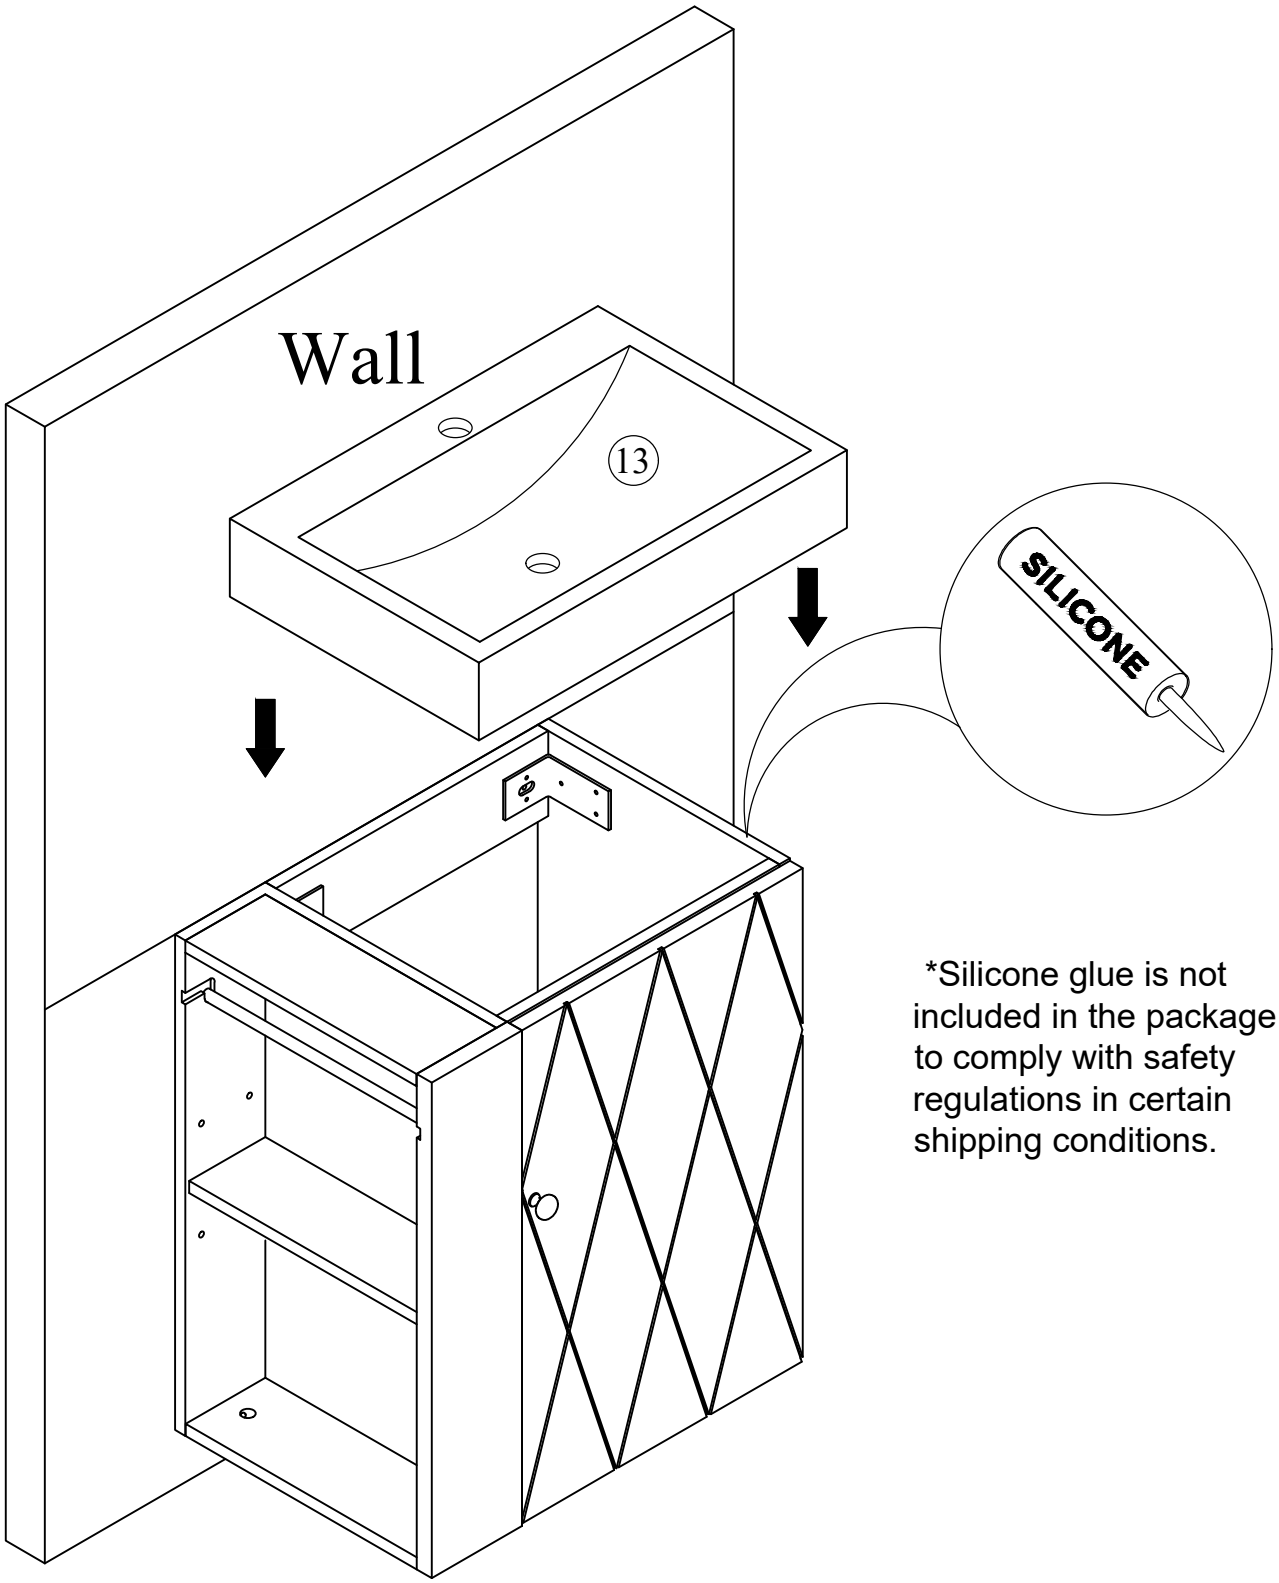


*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

STEP: 12

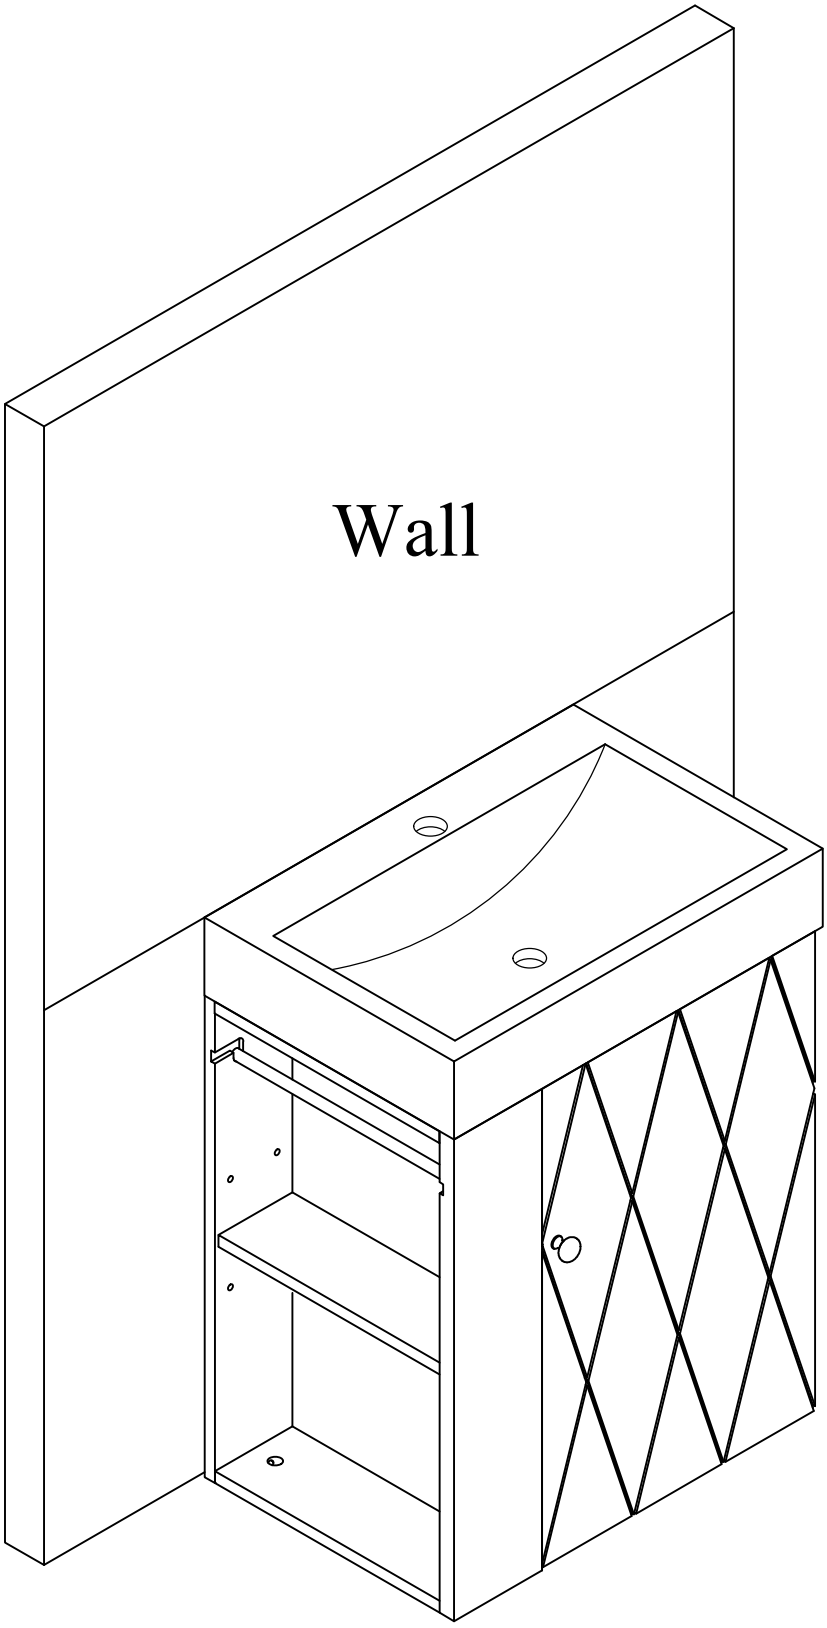

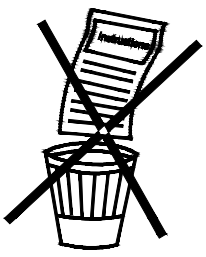


HINGE ADJUSTMENTS

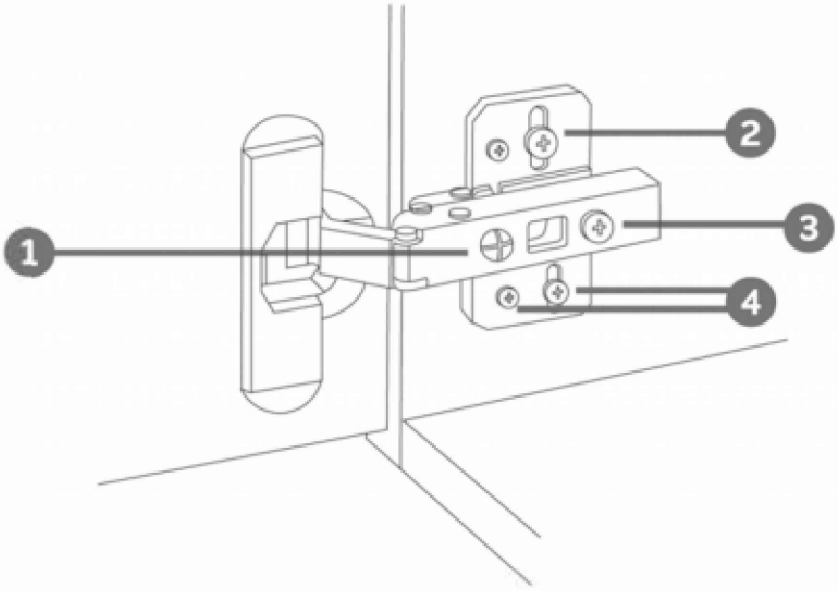


1 Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from the side of the cabinet
anticlockwise to move the door closer to the side of the cabinet

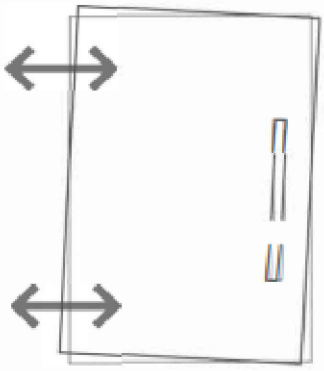

2 4 Height adjustment

While supporting the weight of the door, turn the screws
clockwise to move the door up
anticlockwise to move the door down

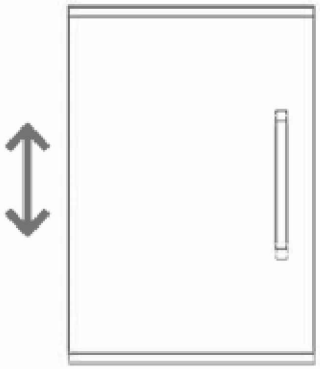

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw
clockwise to decrease the gap between the door and the cabinet
anticlockwise to increase the gap between the door and the cabinet

